

## BEISHI B0FHGSX9LB

# BEISHI Motorized TV Stand with Wheels Instruction Manual

Model: B0FHGSX9LB

## 1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your BEISHI Motorized TV Stand with Wheels. Please read this manual thoroughly before installation and use to ensure proper function and safety. Keep this manual for future reference.

## 2. IMPORTANT SAFETY INFORMATION

**Failure to follow these safety instructions may result in property damage or personal injury.**

- Always secure the stand when in use to prevent tip-over.
- Do not place heavy objects on the lower shelf exceeding its weight capacity.
- Keep the remote control out of reach of young children to prevent choking hazards.
- Always lock the wheels when the stand is stationary to ensure stability.
- Ensure the area beneath the TV is clear before lowering the height to prevent obstructions.
- Do not exceed the maximum weight capacity of 154 lbs (70 kg) for the TV.
- Ensure your TV's VESA pattern is compatible with the stand (100x100mm to 600x400mm).

## 3. PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Main Stand Components (Base, Columns, TV Mount)
- Wooden Shelf & Panel
- Motorized Height Adjustment System
- Remote Control
- Caster Wheels (with locking mechanism)

- Hardware Kit (screws, washers, spacers, tools)
- Instruction Manual

## 4. ASSEMBLY INSTRUCTIONS

---

Follow these steps carefully for proper assembly. It is recommended to have two people for certain steps, especially when mounting the TV.

1. **Unpack and Identify Parts:** Lay out all components on a soft, clean surface. Refer to the parts list in your hardware kit to identify each piece.
2. **Assemble the Base:** Attach the vertical columns to the base feet, ensuring all screws are securely tightened.
3. **Install Caster Wheels:** Securely attach the locking caster wheels to the base feet. Ensure the locking mechanism functions correctly.
4. **Attach the Wooden Shelf:** Mount the wooden shelf and panel to the designated positions on the vertical columns.
5. **Install the Motorized System:** Integrate the motorized height adjustment mechanism into the stand structure as per the detailed diagrams in your included guide. Connect all necessary cables.
6. **Prepare TV for Mounting:** Attach the TV mounting brackets to the back of your television, ensuring the correct VESA pattern screws and spacers are used. Refer to your TV's manual for specific VESA hole locations.
7. **Mount the TV:** Carefully lift the TV and hook the brackets onto the TV mount on the stand. Secure the TV with the safety screws or locking mechanisms provided.
8. **Connect Power:** Plug the power cord for the motorized system into a suitable electrical outlet.



Image: Overview of stand dimensions, VESA compatibility, and weight capacity.



Image: Detailed view of the motorized mechanism and TV mounting brackets.

## 5. OPERATING INSTRUCTIONS

### 5.1 Electric Height Adjustment

The BEISHI Motorized TV Stand features an electric height adjustment system controlled by a remote.

- **Adjusting Height:** Use the UP and DOWN buttons on the remote control to smoothly adjust the TV height between 46.5 inches and 62.2 inches.
- **Memory Presets:** The stand allows you to store two preferred height settings. To set a memory

position:

- a. Adjust the stand to your desired height.
  - b. Press the 'SET' button once.
  - c. Press either 'M1' or 'M2' button within 3 seconds to save the current height to that memory slot.
- **Recalling Memory Presets:** Press 'M1' or 'M2' to automatically move the TV to the saved height.
  - **Home Position:** Press the 'HOME' button to return the TV to a default or pre-set home position.



*Image: Electric height adjustment range.*

# Custom View with a Tap

Note: Please ensure the area beneath the TV is clear before



Image: Control panel for height adjustment and memory presets.

## 5.2 Mobility and Locking Wheels

The stand is equipped with caster wheels for easy movement and locking mechanisms for stability.

- **Moving the Stand:** Unlock all caster wheels before moving the stand. Gently push the stand to your desired location.
- **Securing the Stand:** Once the stand is in position, engage the locking mechanism on all wheels to prevent unintended movement.



# TV Moves Smoothly



*Image: Caster wheels with 360-degree rotation and locking function.*

## 6. PRODUCT FEATURES

- **Motorized Height Adjustment:** Electric system with remote control for smooth height adjustments from 46.5" to 62.2". Includes 2 memory presets.
- **Wide Compatibility:** Supports LCD, LED, and OLED 4K TVs from 37 to 86 inches, with VESA standards from 100x100mm to 600x400mm. Maximum TV weight capacity is 154 lbs (70 kg).
- **Mobile Design:** Equipped with lockable caster wheels for easy relocation and secure positioning.
- **Integrated Storage:** Features a wooden shelf (25.59" x 7.87") capable of holding up to 22 lbs, suitable for media devices, gaming consoles, or other accessories. Includes a detachable top shelf for projectors.
- **Durable Construction:** Sturdy carbon steel frame ensures stable support.

## Sturdy And Stable One-Piece Wooden Base



Image: Wooden storage shelf details.

## 7. MAINTENANCE

To ensure the longevity and proper functioning of your TV stand, follow these maintenance guidelines:

- **Cleaning:** Wipe the stand with a soft, dry cloth. For stubborn marks, use a slightly damp cloth with mild soap, then dry immediately. Avoid abrasive cleaners or solvents.
- **Hardware Check:** Periodically check all screws and bolts to ensure they are tight. Re-tighten if necessary.
- **Motor Inspection:** Ensure the motorized components are free from dust and obstructions. Do not attempt to lubricate or disassemble the motor.
- **Cable Management:** Keep all power and TV cables neatly organized to prevent snagging or damage during movement or height adjustment.

## 8. TROUBLESHOOTING

If you encounter any issues with your BEISHI Motorized TV Stand, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Stand does not move up or down.	Power cord disconnected; Remote control battery low; Motor obstruction.	Check power connection; Replace remote batteries; Remove any obstructions around the motor or columns.
Remote control not responding.	Remote batteries depleted; Remote out of range; Signal interference.	Replace remote batteries; Ensure remote is pointed at the receiver; Reduce interference from other electronic devices.
TV wobbles or feels unstable.	Wheels unlocked; Loose assembly screws; TV weight exceeds capacity.	Lock all caster wheels; Re-tighten all assembly screws; Ensure TV weight is within 154 lbs limit.
Memory presets not saving/recalling.	Incorrect saving procedure.	Follow the memory preset instructions carefully: adjust height, press 'SET', then press 'M1' or 'M2' within 3 seconds.

If the problem persists after attempting these solutions, please contact BEISHI customer support for further assistance.

## 9. SPECIFICATIONS

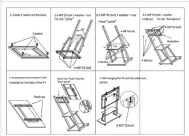
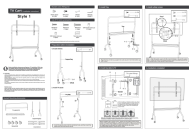
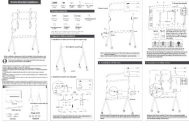
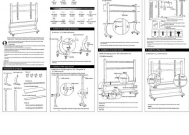
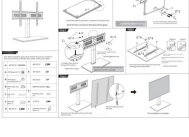
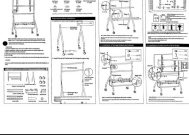
Feature	Specification
Brand	BEISHI
Model	B0FHGSX9LB
TV Size Compatibility	37 - 86 inches
Max TV Weight Capacity	154 lbs (70 kg)
VESA Compatibility	100x100mm to 600x400mm
Height Adjustment Range	46.5 inches - 62.2 inches
Material	Carbon Steel
Item Weight	45.7 pounds
Package Dimensions	51.5 x 11.5 x 6 inches
Storage Shelf Capacity	22 lbs
Color	Black

## 10. WARRANTY AND SUPPORT

BEISHI products are manufactured with quality and durability in mind. This product comes with a standard manufacturer's warranty against defects in materials and workmanship. For specific warranty details, claims, or technical support, please refer to the warranty card included with your product or contact BEISHI customer service directly through their official website or the retailer where the product was purchased.



Related Documents - B0FHGSX9LB

	<p><a href="#">BEISHI Mobile TV Cart Installation Guide and Parts List</a></p> <p>Official installation guide and comprehensive parts list for the BEISHI Mobile TV Cart, a rolling TV stand designed for 32-75 inch televisions with adjustable height and VESA 600x400mm compatibility.</p>
	<p><a href="#">BEISHI Rolling Floor Mobile TV Stand Installation Guide</a></p> <p>Step-by-step installation instructions for BEISHI Rolling Floor Mobile TV Stands, covering four distinct styles. Includes detailed parts lists, safety precautions, and assembly guidance for LCD/LED TVs.</p>
	<p><a href="#">BEISHI Mobile TV Stand Installation Guide</a></p> <p>Comprehensive installation guide for the BEISHI mobile TV stand, featuring step-by-step instructions, accessory lists, and safety tips for assembling and mounting your TV.</p>
	<p><a href="#">BEISHI Mobile TV Stand Installation Guide</a></p> <p>Comprehensive installation instructions for the BEISHI mobile TV stand, detailing parts, assembly steps, and safety guidelines for safe and secure setup. Includes a parts list and tool requirements for each step.</p>
	<p><a href="#">BEISHI Free-Standing Monitor Stand Installation Guide</a></p> <p>Comprehensive installation guide for the BEISHI free-standing monitor stand. Features a detailed parts list and step-by-step assembly instructions with textual descriptions of diagrams, ensuring a smooth setup process.</p>
	<p><a href="#">Mobile TV Stand Installation Guide - BEISHI YSTC-07B</a></p> <p>Detailed installation instructions for the BEISHI YSTC-07B mobile TV stand, including parts list, assembly steps, and safety precautions. Suitable for 32-70 inch TVs.</p>