ChooChoo SR2503-WN

ChooChoo SR2503-WN 4-Drawer Deodorizing Shoe Storage Cabinet User Manual

Brand: ChooChoo | Model: SR2503-WN

1. Introduction

Thank you for choosing the ChooChoo SR2503-WN 4-Drawer Deodorizing Shoe Storage Cabinet. This manual provides essential information for the safe assembly, proper operation, and effective maintenance of your new shoe cabinet. Designed for entryways, foyers, living rooms, or hallways, this cabinet offers a space-saving solution with a built-in deodorizing function and adjustable storage to keep your footwear organized and fresh.



Image: The ChooChoo 4-Drawer Deodorizing Shoe Storage Cabinet, showcasing its deodorizing air circulation.

2. Safety Information

- **Anti-Tipping Device:** For safety, especially in households with children or pets, it is crucial to install the included anti-tipping device. Securely fasten the cabinet to the wall as instructed in the assembly section.
- **Weight Distribution:** Distribute items evenly within the drawers to prevent imbalance.
- **Deodorizer Usage:** Ensure the deodorizer is used in a well-ventilated area. Avoid operating the deodorizer near pets or sensitive individuals if they show signs of discomfort.
- **Cleaning:** Use a soft, dry cloth for cleaning. Avoid harsh chemicals that may damage the finish.

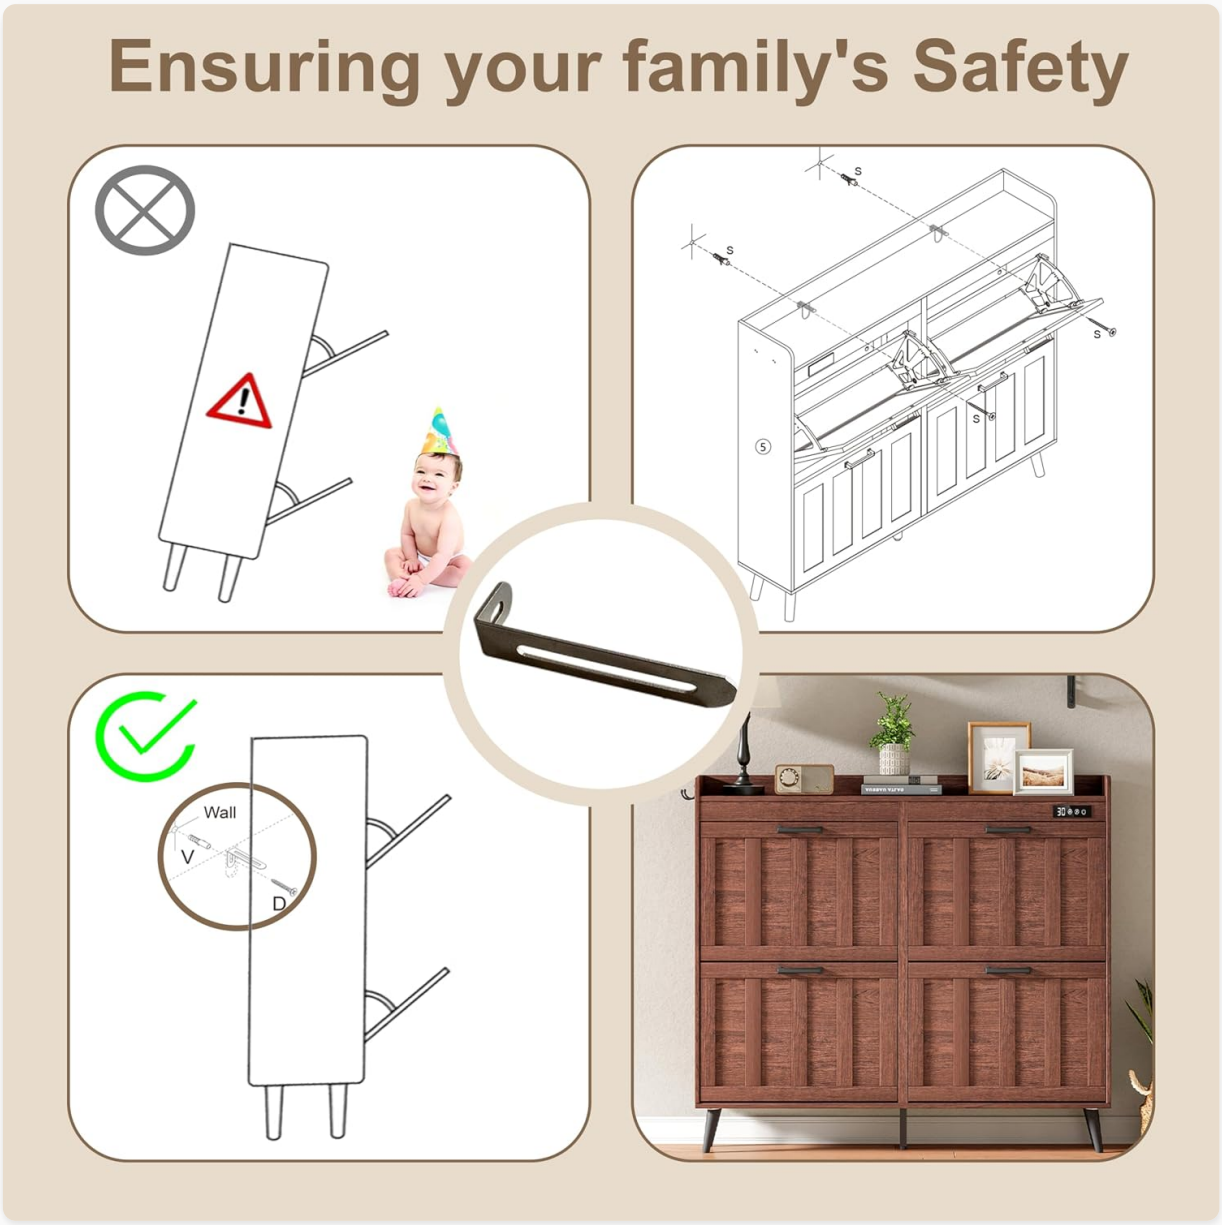


Image: Instructions for installing the anti-tipping device to ensure cabinet stability.

3. Package Contents

Please verify that all components are present before beginning assembly:

- Wooden Panels (various sizes for frame, drawers, and shelves)

- Hardware (screws, dowels, cam locks, cam bolts, plastic connectors)
- Deodorizer Unit with Power Adapter
- Metal Handles
- Solid Wood Legs
- Side Hooks (2)
- Anti-Tip Kit
- Instruction Manual (this document)

4. Assembly Instructions

Assembly is required for this product. Please follow the steps carefully. It is recommended to have two people for certain steps to ensure stability and ease of assembly. All necessary hardware is included. A screwdriver is required.

Assembly Video Guide:

Your browser does not support the video tag.

Video: Detailed assembly guide for the ChooChoo Shoe Cabinet.

Step-by-Step Assembly:

1. **Prepare Base Panel:** Attach the cam bolts (A) to the base panel (1).
2. **Attach Back Support:** Secure the back support panel (3) to the base panel (1) using cam locks (B) and dowels (C). Ensure the deodorizer slot is correctly oriented.
3. **Attach Side Panels:** Connect the side panels (4 and 5) to the base panel (1) and back support (3) using cam bolts (A) and screws (D).
4. **Install Middle Supports:** Insert dowels (C) into the middle support panels (6) and attach them to the base panel (1) using cam locks (B).
5. **Attach Top Panel:** Secure the top panel (7) to the side panels (4 and 5) and middle supports (6) using cam bolts (A) and screws (D).
6. **Install Deodorizer:** Place the deodorizer unit (P) into its designated slot. Secure it with screws (R). Connect the power cable (Q) and route it through the cable clip (S).
7. **Attach Legs:** Screw the four solid wood legs (K) into the base of the cabinet using screws (L). Attach felt pads to the bottom of the legs.
8. **Assemble Flip Drawers:** Attach the plastic drawer mechanisms (M and N) to the drawer front panels (11) using screws (E). Attach the handles (F) to the drawer front panels (11) using screws (E).
9. **Install Drawer Shelves:** Insert the adjustable shelves (12) into the flip drawers (11). These can be adjusted to two levels to accommodate different shoe heights.
10. **Mount Flip Drawers:** Carefully align and insert the assembled flip drawers into the cabinet frame. This step may require two people. Secure them using screws (J) and caps (H).
11. **Install Side Hooks:** Attach the two side hooks (T) to the side panel of the cabinet using screws (R).
12. **Install Anti-Tipping Device:** Secure the anti-tipping brackets (U) to the top back of the cabinet using screws (L). Then, secure the cabinet to the wall using appropriate wall anchors (not included, depending on wall type) and screws.

5. Operating Instructions

Deodorizing Function:

The ChooChoo Shoe Storage Cabinet features a built-in deodorizer to maintain freshness. The control panel is located on the top surface of the cabinet.

- **Power On/Off:** Press the power button to turn the deodorizer on or off.
- **Timing Modes:** Press the speed button (circular arrow icon) to cycle through different timing modes: 5, 15, 30, or 60 minutes. The display will show the selected duration.
- **Cycle Modes (Anion Mode):** In the On Mode, press the anion mode button (lightning bolt icon) to select one of four operation modes (P1, P2, P3, P4):
  - **P1:** Ozone works for 4 minutes, stops for 26 minutes, and the cycle repeats.
  - **P2:** Ozone works for 7 minutes, stops for 53 minutes, and the cycle repeats.
  - **P3:** Ozone works for 30 minutes, stops for 23.30 minutes, and the cycle repeats.
  - **P4:** Ozone works for 58 minutes, stops for 23.02 minutes, and the cycle repeats.

Your browser does not support the video tag.

Video: Demonstration of the shoe cabinet's deodorizer operation modes.

Adjustable & Removable Shelves:

Each flip drawer contains a 2-tier storage space. The internal panels can be adjusted or removed to accommodate various footwear types, including sneakers, flats, heels, or ankle boots. Simply reposition the panels to suit your storage needs.



Image: Key features of the shoe cabinet, highlighting the adjustable shelves.



Image: Illustration of the adjustable shelf positions for different shoe types.

6. Maintenance

- **Cleaning:** Wipe the cabinet surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals.
- **Dusting:** Regularly dust the cabinet to prevent buildup.
- **Deodorizer Care:** Keep the deodorizer unit clean and free from obstructions.
- **Hardware Check:** Periodically check all screws and connections to ensure they remain tight.

7. Troubleshooting

- **Cabinet Instability:** Ensure all cam locks and screws are fully tightened. Verify the anti-tipping device is correctly installed and secured to a wall stud or appropriate anchor.
- **Deodorizer Not Working:** Check if the power adapter is securely plugged into both the deodorizer unit and a working electrical outlet. Ensure the power button on the unit is pressed.
- **Drawers Not Closing Smoothly:** Check for any obstructions inside the drawers or along the mechanism. Ensure the drawer mechanisms are correctly installed and lubricated if necessary.

8. Specifications

Feature	Detail
Brand	ChooChoo
Model Name	Shoe Cabinet (SR2503-WN)
Color	Walnut
Product Dimensions	9.45"D x 47.24"W x 43.31"H
Item Weight	65.04 Pounds
Material	Engineered Wood
Special Features	Adjustable Shelf, Anti-Tipping, Removable Shelf, Built-in Deodorizer
Mounting Type	Floor Mount (with wall anchor option)
Installation Type	Freestanding
Assembly Required	Yes

9. Warranty and Support

For warranty information or technical support, please refer to the product packaging or contact ChooChoo customer service directly. Keep your purchase receipt for any warranty claims.

© 2025 ChooChoo. All rights reserved.