

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Maxi-Cosi](#) /

> [Maxi-Cosi Andi 360 Rotating All-in-One Convertible Car Seat Instruction Manual](#)

Maxi-Cosi Andi 360

Maxi-Cosi Andi 360 Rotating All-in-One Convertible Car Seat Instruction Manual

Model: Andi 360

1. PRODUCT OVERVIEW

The Maxi-Cosi Andi 360 Rotating All-in-One Convertible Car Seat is designed to adapt to your child's growth from birth up to 10 years. It offers three modes of use: rear-facing, forward-facing, and belt-positioning booster. Key features include 360° FlexiSpin rotation for easy access, TensionFix for secure installation, and premium EcoCare fabrics.

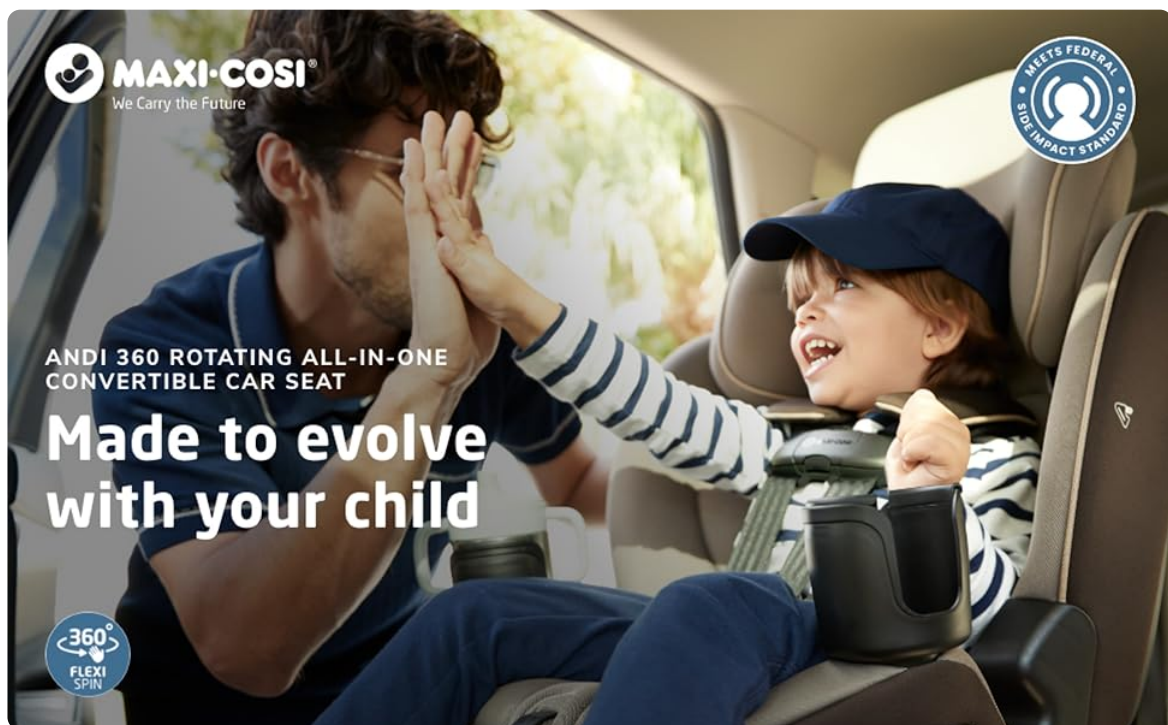


Image: The Maxi-Cosi Andi 360 car seat in a vehicle, showing a child seated comfortably and a parent interacting. This car seat is designed to evolve with your child.

Modes of Use:

- **Rear-Facing:** For children weighing 5–40 lbs. and 19"–40" in height.

- **Forward-Facing:** For children weighing 30–65 lbs. and 34.4”–49” in height.
- **Belt-Positioning High Back Booster:** For children weighing 40–100 lbs. and 43.4”–52” in height.

Evolves with your child

- ✓ Rear-facing
(5–40 lbs., 19”–40”)
- ✓ Forward-facing
(30–65 lbs., 34.4”–49”)
- ✓ Belt-positioning Booster
(40–100 lbs., 43.4”–52”)



Image: A graphic illustrating the three modes of use for the Maxi-Cosi Andi 360 car seat: rear-facing, forward-facing, and belt-positioning booster, with corresponding weight and height ranges.

2. SAFETY INFORMATION

The Maxi-Cosi Andi 360 meets or exceeds all federal safety standards and is National Highway Traffic Safety Administration (NHTSA) compliant. Always ensure the car seat is correctly installed and your child is properly secured for maximum safety.

Key Safety Features:

- **TensionFix:** A red-to-green tension-sensitive indicator that confirms when your vehicle belt has proper tension during installation.
- **Attached Connection Cord:** Ensures the base and seat are always used together when installed, preventing separation.
- **PureCosi Fabrics:** Premium fabrics made without added fire retardant treatment.



Image: A close-up of the Maxi-Cosi Andi 360 car seat base, highlighting the TensionFix indicator which changes from red to green to confirm proper seat belt tension.

3. SETUP AND INSTALLATION

Proper installation is crucial for your child's safety. The Andi 360 can be installed using either the vehicle's seat belt or the LATCH system. Always refer to your vehicle's owner's manual for specific car seat installation instructions and locations.

Installation with Vehicle Belt:

1. Place the car seat in your vehicle. The taller side of the base should always be against the back of the vehicle seat.
2. Loosely attach the tether hook to your vehicle's tether anchor. Refer to your vehicle's manual for location.
3. Squeeze the rotation handle on the front of the car seat base and swivel the seat to face you (side view).
4. Squeeze the release handle on the front of the car seat while lifting the car seat off the base and flipping it over to the opposite side.

5. Open the vehicle belt lock-off by squeezing the lever and pulling it forward.
6. Weave the vehicle seat belt in and out of the blue belt path and buckle the belt. Ensure the belt is flat and not twisted.
7. Place your hand in the base and firmly push down and on the base. Pull the seat belt parallel with the belt path to tighten and remove slack. The Tension Indicators will begin to turn green as the vehicle belt is tightened.
8. Close the vehicle belt lock-off. Both indicators will turn completely green when the vehicle belt is properly installed.
9. Check to confirm the base is tightly installed by pushing and pulling from side to side. If it moves more than 1 inch, reinstall.
10. Lastly, tighten the top tether strap.

Installation with LATCH:

1. Place the car seat in your vehicle. The taller side of the base should always be against the back of the vehicle seat.
2. Loosely attach the tether hook to your vehicle's tether anchor. Refer to your vehicle's manual for location.
3. Squeeze the rotation handle on the front of the car seat base and swivel the seat to face you (side view).
4. Squeeze the release handle on the front of the car seat while lifting the car seat off the base and flipping it over to the opposite side.
5. The vehicle belt lock-off must be closed before routing the lower anchor belt.
6. Remove the lower anchor belt from the storage pocket.
7. Locate the belt path. Weave the LATCH connector with the adjuster in and out of the blue belt path and attach both connectors to the lower anchor system.
8. Check that the belt is flat and not twisted.
9. Place your hand in the base and firmly push down on the base. Pull the belt parallel with the belt path to tighten. Tension Indicators will begin to turn green. Both indicators will turn completely green when the LATCH is properly installed.
10. Check to confirm the base is tightly installed by pushing and pulling from side to side. If it moves more than 1 inch, reinstall.
11. Lastly, tighten the top tether strap.

Video: Official Maxi-Cosi guide demonstrating how to install the Andi 360 Rotating Car Seat using both vehicle belt and LATCH systems. This video provides a step-by-step visual walkthrough of the installation process.

Re-attaching Car Seat to Base:

1. Flip the car seat back over and onto the base.
2. Push down on the front of the car seat until you hear a click, indicating it is locked into place.

4. OPERATING INSTRUCTIONS

Rotating the Car Seat (360° FlexiSpin):

The 360° FlexiSpin technology allows you to swivel the car seat in all modes of use (rear- and forward-

facing) for easy child placement and removal.

1. To rotate the car seat from side-facing for all modes, firmly rotate the seat towards the back or front of the base.
2. The Rotation Lock Indicator will show a locked symbol when the car seat is locked into place in rear-facing or forward-facing positions.

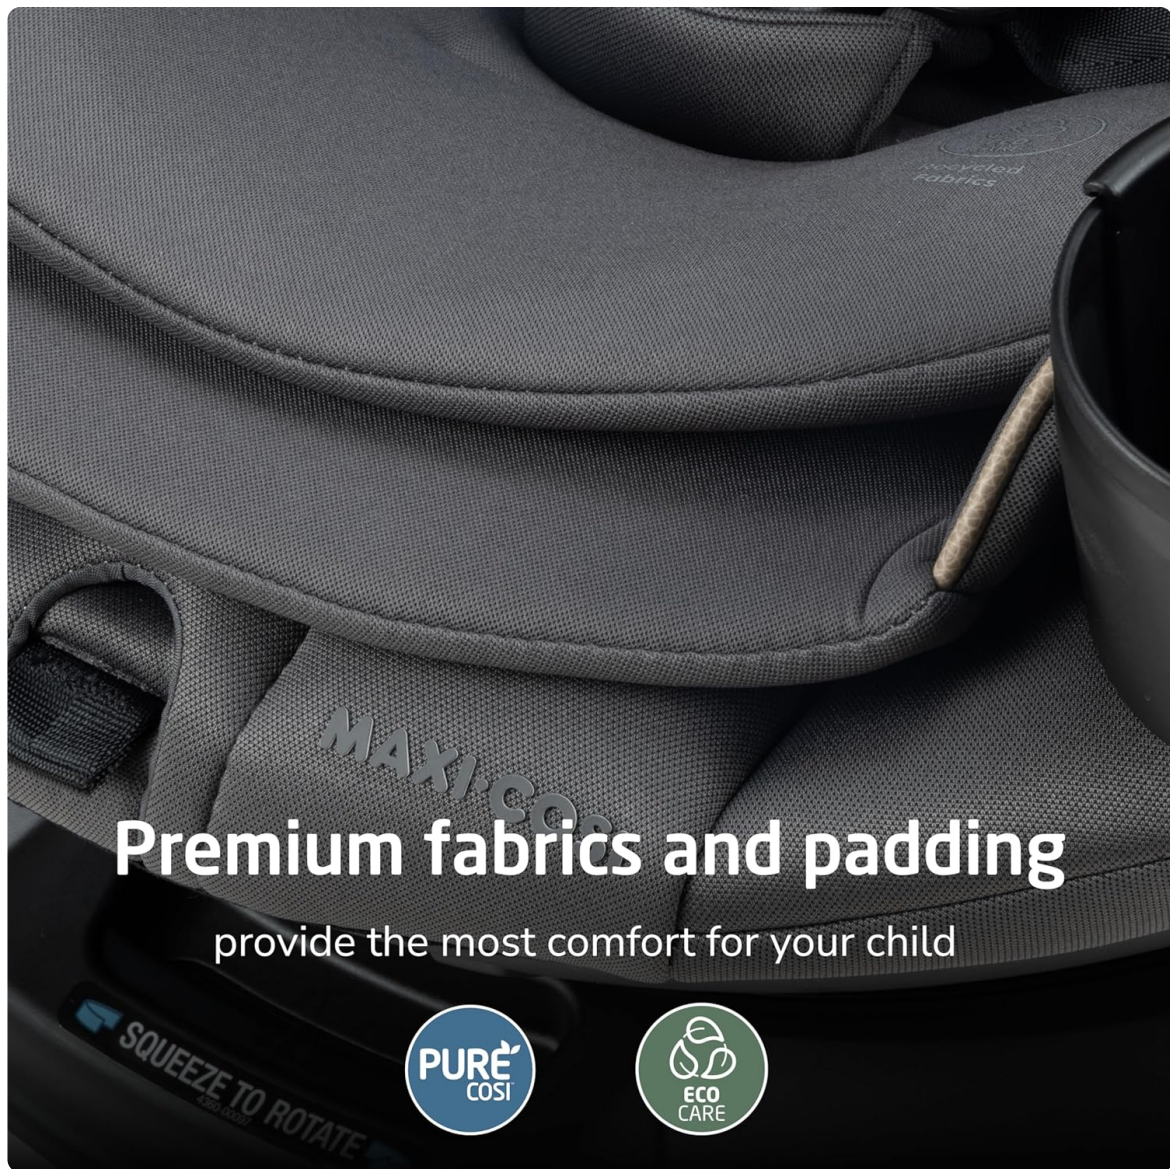


Image: A parent demonstrating the 360° FlexiSpin rotation feature of the Maxi-Cosi Andi 360 car seat, making it easier to place and remove a child.

Adjusting Headrest and Harness (QuikFit):

The QuikFit system allows for easy 10-position adjustment of the headrest and harness simultaneously.

- To adjust, locate the adjustment lever at the top of the headrest. Squeeze the lever and slide the headrest up or down to the desired position.



Premium fabrics and padding


provide the most comfort for your child

Image: A visual representation of the QuikFit 10-position headrest and harness adjustment feature on the Maxi-Cosi Andi 360 car seat, showing how it moves up and down.

Reclining Positions (ReclineFit):

The ReclineFit feature provides 5 reclining positions for optimal comfort and fit.

- To recline, squeeze the recline handle and push the top of the car seat back or forward to select one of the five positions.

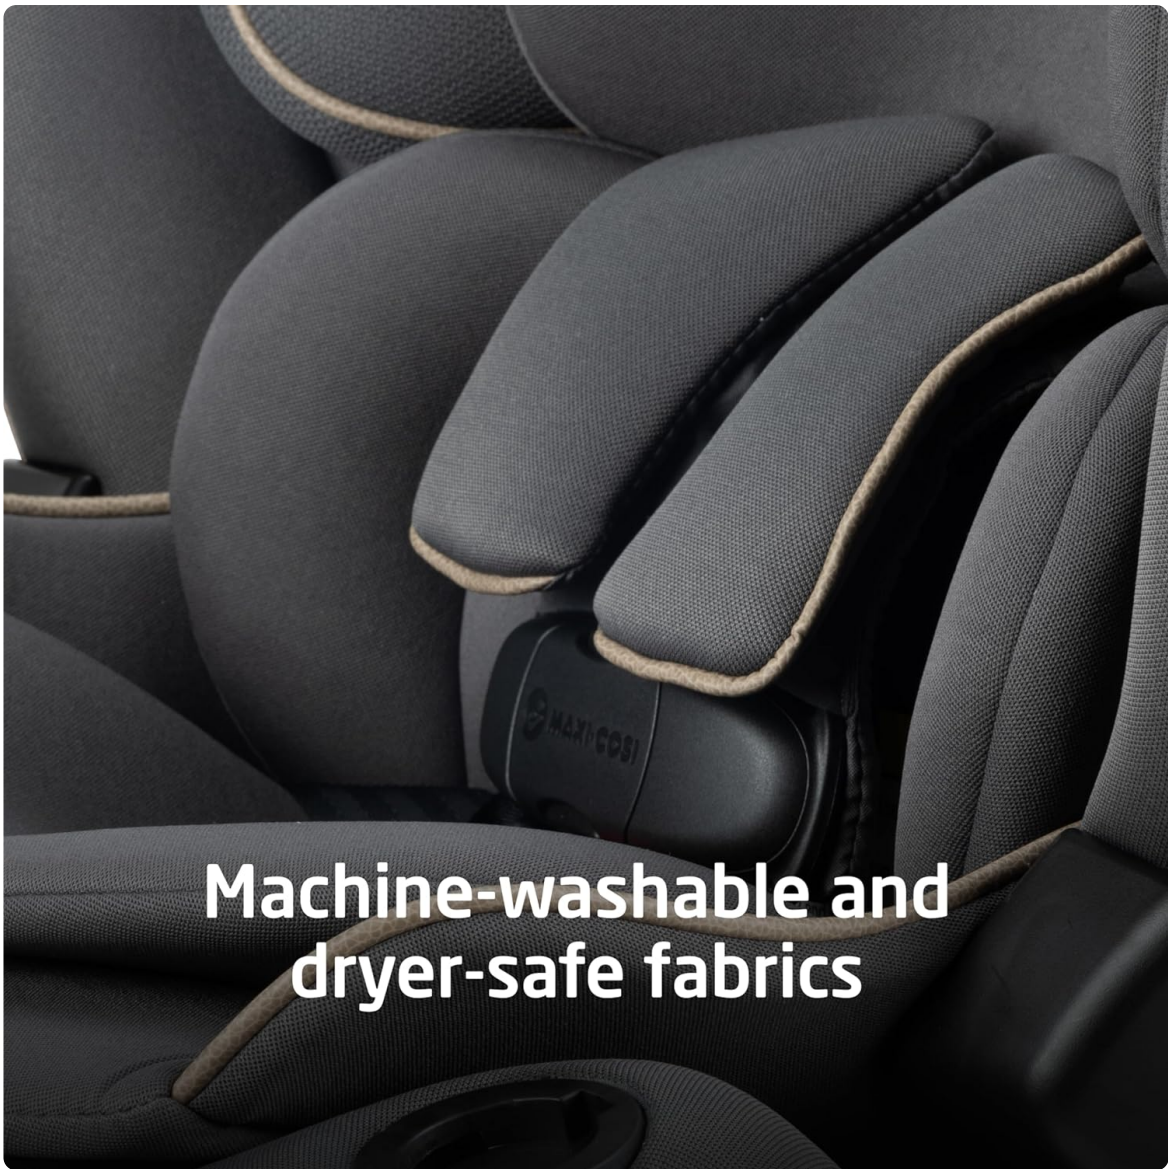

Machine-washable and dryer-safe fabrics

Image: The Maxi-Cosi Andi 360 car seat demonstrating its ReclineFit feature, showing the seat in various reclining positions for enhanced comfort.

Using Cup Holders:

The innovative cup holders rotate to accommodate various cup shapes and sizes.

- Simply rotate the cup holder to adjust its opening to fit different containers, including those with handles.

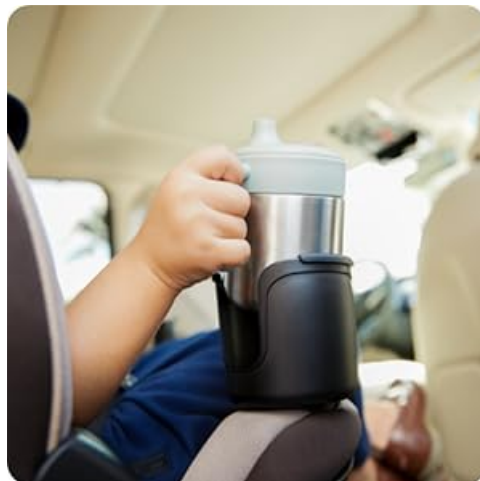


Image: A child's hand placing a cup into the innovative rotating cup holder of the Maxi-Cosi Andi 360 car seat,

illustrating its adaptability for different cup sizes.

Buckling Your Child (ClipQuik):

The ClipQuik magnetic chest clip is designed for fast, struggle-free buckling.

- Bring the two halves of the chest clip together, and the magnets will automatically connect, securing your child.



Image: A close-up of the ClipQuik magnetic chest clip on the Maxi-Cosi Andi 360 car seat, showing how the two parts easily connect for secure buckling.

5. MAINTENANCE

Cleaning Instructions:

All car seat fabrics, including the removable QuikClean seat pad insert, are machine-washable and dryer-safe. This makes cleaning simple and convenient.

- Remove all fabric and cushions from the car seat.
- Machine wash on a gentle cycle with cold water.
- Tumble dry on low heat or air dry.
- Do not use bleach or harsh detergents.



Image: A close-up of the Maxi-Cosi Andi 360 car seat's premium fabrics, highlighting their machine-washable and dryer-safe properties for easy cleaning.

6. TROUBLESHOOTING

If you encounter any issues with your Maxi-Cosi Andi 360 car seat, please refer to the following common troubleshooting tips:

- **Installation Issues:** If the car seat moves more than 1 inch at the belt path, re-check the installation steps, ensuring the TensionFix indicators are fully green. Ensure the vehicle belt is not twisted.
- **Rotation Difficulty:** Ensure the car seat is not under excessive tension from the vehicle seat belt or LATCH system. The rotation handle should be squeezed firmly.
- **Harness Adjustment:** If the harness is difficult to adjust, ensure the child is not leaning against the harness straps. Check for any obstructions in the adjustment mechanism.

For further assistance, consult the detailed instruction manual provided with your product or contact Maxi-Cosi customer support.

7. SPECIFICATIONS

Feature	Detail
Maximum Weight Recommendation	100 Pounds
Installation Type	LATCH, Seatbelt
Orientation	Forward Facing, Rear Facing
Harness Type	5-Point
Number of Height Positions	10
Brand	Maxi-Cosi
Age Range Description	Infant to 10 years
Item Dimensions D x W x H	21.85"D x 19.49"W x 21.85"H
Item Weight	38.71 Pounds
Material Type	Polyester

8. WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the warranty card included with your Maxi-Cosi Andi 360 Convertible Car Seat or visit the official Maxi-Cosi website. Keep your proof of purchase for any warranty claims.