

[Manuals.plus](#) /

› [Mobility Lab](#) /

› Mobility Lab CP430W Wireless Keyboard and Mouse Combo User Manual

Mobility Lab CP430W

Mobility Lab CP430W Wireless Keyboard and Mouse Combo User Manual

Model: CP430W | Brand: Mobility Lab

INTRODUCTION

Thank you for choosing the Mobility Lab CP430W Wireless Keyboard and Mouse Combo. This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your new device. Please read this manual carefully before use to ensure optimal performance and longevity of your product.



Image: The Mobility Lab CP430W wireless keyboard and mouse combo displayed on a desk, ready for use with a computer monitor.

SETUP INSTRUCTIONS

1. Unpacking and Initial Charge

Carefully remove the keyboard and mouse from their packaging. Before first use, it is recommended to fully charge both devices. Connect the provided USB-C cable to the charging port on the keyboard and mouse, then connect the other end to a USB power source (e.g., computer USB port, USB wall adapter).



Image: The keyboard and mouse with a visible USB-C charging port, illustrating the charging process.

2. Connecting Your Devices

The CP430W combo offers versatile connectivity options: 2.4 GHz USB receiver and up to three Bluetooth connections.

2.1. 2.4 GHz USB Receiver Connection

1. Locate the 2.4 GHz USB receiver. It is typically stored within the mouse for safekeeping. Gently lift the top cover of the mouse to reveal the receiver compartment.
2. Insert the USB receiver into an available USB port on your computer.
3. Turn on the keyboard and mouse using their respective power switches. The devices should automatically connect to your computer.

2.2. Bluetooth Connection (Up to 3 Devices)

1. Turn on the keyboard and mouse.
2. On the keyboard, press and hold one of the Bluetooth channel keys (BT1, BT2, or BT3) for 3-5 seconds until the

indicator light flashes, indicating pairing mode.

3. On your computer or device, go to Bluetooth settings and search for new devices.
4. Select "Mobility Lab Keyboard" from the list and follow any on-screen prompts to complete pairing.
5. Repeat the process for the mouse: press and hold the Bluetooth pairing button on the mouse until its indicator light flashes, then select "Mobility Lab Mouse" from your device's Bluetooth settings.
6. To switch between paired Bluetooth devices, simply press the corresponding BT1, BT2, or BT3 key on the keyboard, or the Bluetooth channel switch button on the mouse.

CLAVIER ET SOURIS SANS FIL

Multiconnexion



Image: The keyboard and mouse highlighting their multi-connection feature, allowing seamless switching between devices.

OPERATING INSTRUCTIONS

1. Keyboard Functions

The CP430W keyboard features an AZERTY layout, a full numeric keypad, and 15 multimedia shortcuts for enhanced productivity.

- **AZERTY Layout:** Standard French keyboard layout for comfortable typing.
- **Numeric Keypad:** Integrated full numeric keypad for data entry and calculations.
- **Multimedia Shortcuts:** Access common functions like volume control, media playback, and window management directly from the keyboard. These are typically activated by pressing the Fn key in combination with the corresponding F-keys (F1-F12) or dedicated multimedia keys. Refer to the key labels for specific functions.
- **Scissor Mechanism Keys:** Designed for quiet, precise, and comfortable typing, even during extended use.

16 RACCOURCIS

Multimédia



Image: A close-up of the keyboard highlighting the multimedia shortcut keys for quick access to various functions.

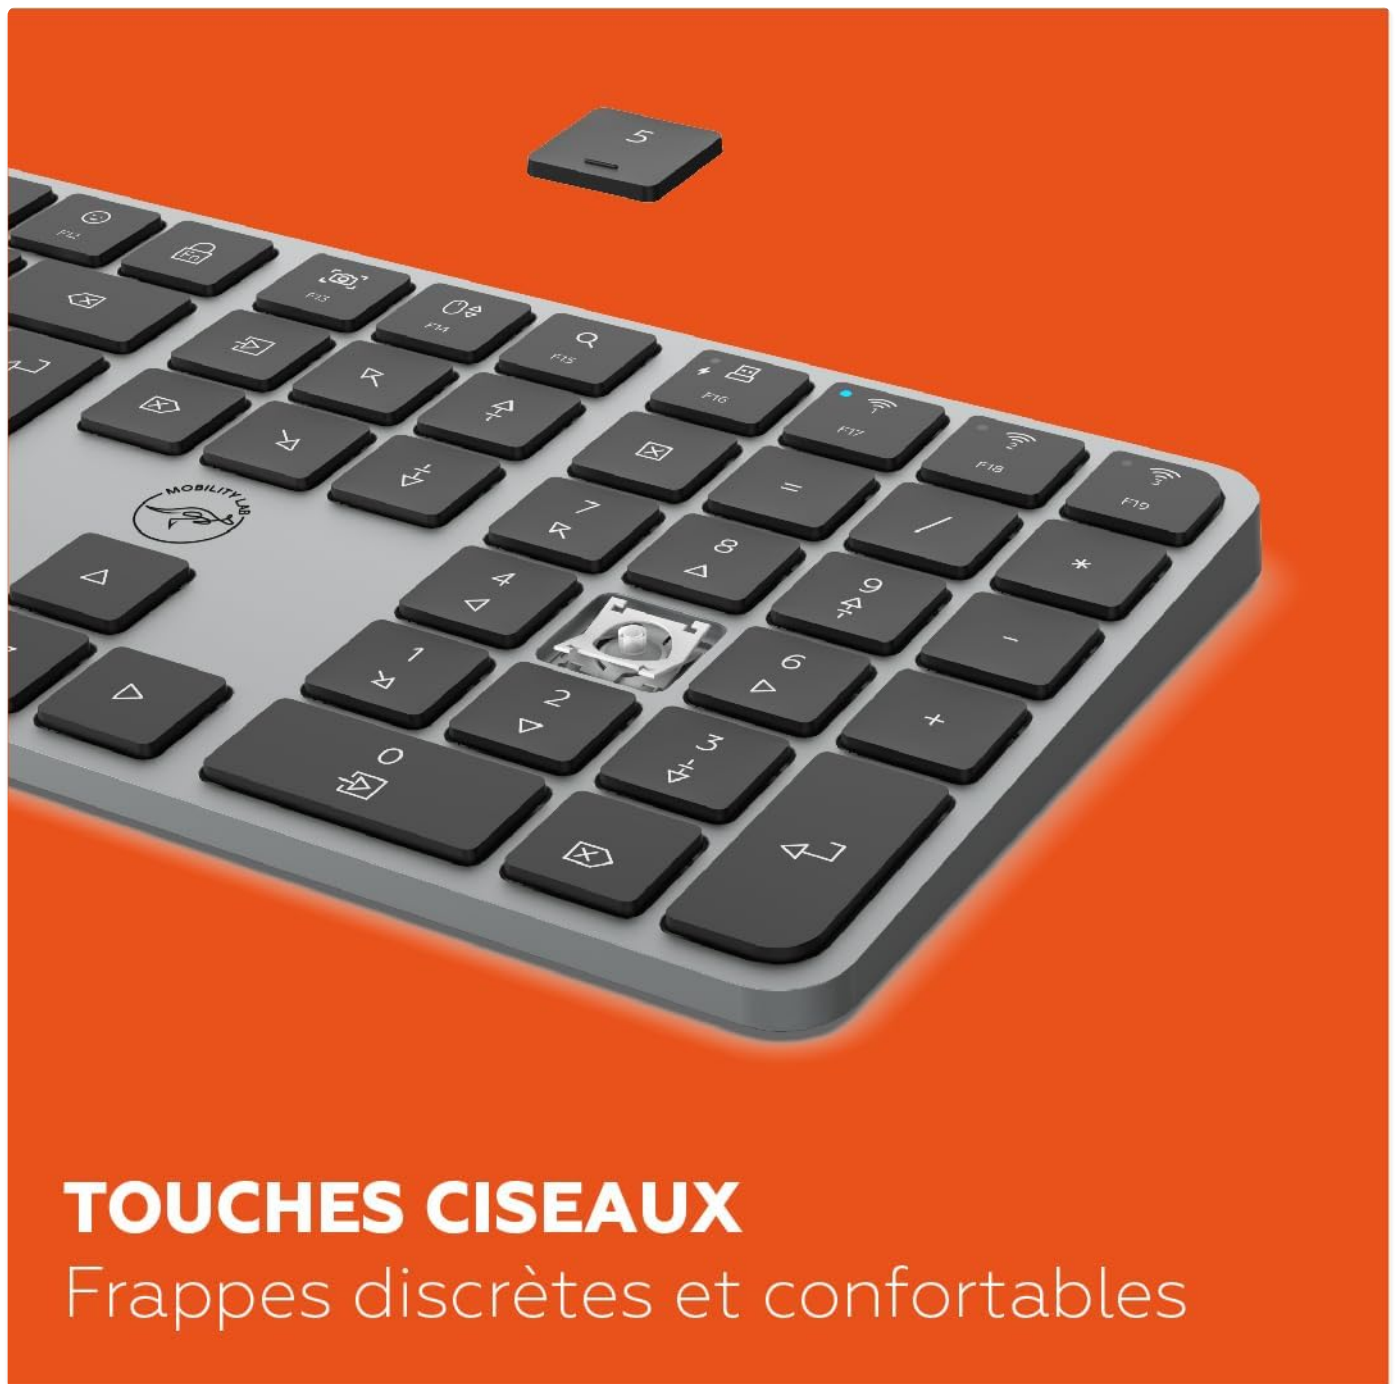


Image: A detailed view of the keyboard keys, emphasizing the scissor mechanism for discrete and comfortable typing.

2. Mouse Functions

The included mouse offers adjustable precision and silent operation.

- **DPI Adjustment:** Cycle through 4 DPI levels (800, 1200, 1800, 2400) by pressing the DPI button located on top of the mouse. This allows you to adjust cursor sensitivity to your preference.
- **Silent Clicks:** The mouse features silent click buttons for a quiet working environment.
- **Metal Scroll Wheel:** Provides smooth and precise scrolling.



SENSIBILITÉ RÉGLABLE

800, 1200, 1800 & 2400 DPI

Image: A close-up of the mouse, indicating its adjustable sensitivity with DPI settings of 800, 1200, 1800, and 2400.

MAINTENANCE

1. Cleaning

To maintain the appearance and functionality of your combo, clean it regularly:

- Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution.
- Avoid using harsh chemicals, abrasive cleaners, or solvents.
- Do not immerse the devices in water.

2. Battery Care

The CP430W combo features a long-lasting rechargeable battery and smart energy-saving features:

- **Charging:** Recharge the devices via USB-C. A full charge takes approximately 2.5 hours and provides up to 35

days of continuous use.

- **Energy-Saving Mode:** The combo automatically enters sleep mode after 5 minutes of inactivity to conserve battery life. To wake the devices, simply move the mouse or press any key on the keyboard.
- **Storage:** If storing the devices for an extended period, ensure they are fully charged and then turn them off to prevent battery drain.

TROUBLESHOOTING

1. Connection Issues

- **Device not connecting via 2.4 GHz USB:**
 - Ensure the USB receiver is securely plugged into a working USB port.
 - Verify that the keyboard and mouse are turned on.
 - Try plugging the receiver into a different USB port.
 - The USB receiver is located inside the mouse. Gently open the top cover of the mouse to access it.
- **Device not connecting via Bluetooth:**
 - Ensure Bluetooth is enabled on your computer/device.
 - Make sure the keyboard/mouse is in pairing mode (indicator light flashing).
 - Remove previous pairings from your device's Bluetooth list and try pairing again.
 - Ensure you are selecting the correct Bluetooth channel (BT1, BT2, or BT3) on the keyboard.

2. Input Not Responding

- **No response from keyboard/mouse:**
 - Check battery level and recharge if necessary.
 - Ensure the devices are turned on.
 - Re-establish the connection (unplug/replug USB receiver, re-pair Bluetooth).
 - If the device is in energy-saving mode, move the mouse or press a key to wake it up.

3. Battery Not Charging

- Ensure the USB-C cable is properly connected to both the device and the power source.
- Try a different USB-C cable or power adapter.
- Verify the power source is active.

PRODUCT SPECIFICATIONS

Feature	Specification
Model	CP430W
Brand	Mobility Lab
Connectivity	2.4 GHz USB, Bluetooth (3 channels)
Keyboard Layout	AZERTY
Keyboard Type	Ultra-thin with numeric keypad, Scissor mechanism keys
Mouse DPI Settings	800, 1200, 1800, 2400

Feature	Specification
Multimedia Shortcuts	15 dedicated shortcuts
Charging Port	USB-C
Battery Life	Up to 35 days (keyboard and mouse combined)
Charging Time	Approx. 2.5 hours
Energy Saving	Automatic sleep mode after 5 minutes of inactivity
Compatibility	Windows
Weight	630 Grams
Color	Matte Grey

Dimensions

DESIGN ULTRA FIN & ÉLÉGANT



Image: A technical diagram illustrating the precise dimensions of both the keyboard and the mouse.

- **Keyboard:** 422mm (Length) x 117mm (Width) x 11.5mm (Thickness)
- **Mouse:** 110mm (Length) x 60mm (Width) x 30mm (Height)

WARRANTY INFORMATION

The Mobility Lab CP430W Wireless Keyboard and Mouse Combo comes with a **2-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For further assistance, technical support, or warranty inquiries, please visit the official Mobility Lab website or contact their customer service department. Contact information can typically be found on the product packaging or the brand's official website.

You can also refer to the [Mobility Lab Brand Store on Amazon](#) for additional product information and support resources.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question