



Manuals.plus /

› Wooask /

› Wooask W09 AI Language Translator Device User Manual

Wooask Wooask-1

Wooask W09 AI Language Translator Device User Manual

Model: Wooask-1

1. INTRODUCTION

The Wooask W09 AI Language Translator Device is designed to facilitate seamless communication across various languages. This device supports both online and offline translation modes, including voice, photo, and recording translation functionalities. It is engineered for portability and ease of use, making it suitable for travel, business, and learning environments.

Key Features

- **144 Online Languages:** Extensive support for real-time voice translation.
- **16 Offline Languages:** Enables translation without an internet connection.
- **Photo Translation:** Utilizes a 500MP camera for instant text translation from images.
- **Real-Time Voice Translation:** Achieves ultra-fast 0.5-second response with high accuracy.
- **2.4" HD Touchscreen:** Features an intuitive display with adjustable text size and dual control interface (touch and physical buttons).
- **Extended Battery Life:** Provides up to 35 hours of continuous use, with USB-C fast charging.
- **Portable Design:** Lightweight (260g) and pocket-sized for convenience.

Package Contents

Upon unboxing, please verify that all items listed below are present:

- Wooask W09 Translator Device
- Product Instruction Manual (this document)
- USB-A to Type-C Charging Cable
- Lanyard
- Protective Shell
- Packing Box



Voice and Text Translation

144
Online
Languages



16
Online
Languages

Image: Contents of the Wooask W09 package. This image displays the Wooask W09 translator device, a user manual, a USB-C charging cable, a lanyard, a clear protective case, and the product's retail box.

2. SETUP

2.1 Charging the Device

Before initial use, fully charge your Wooask W09 device. Connect the provided USB-A to Type-C charging cable to the device's Type-C port and a compatible USB power adapter. A full charge typically takes approximately 1.5 hours. The battery indicator on the screen will show charging status.

Long-Lasting Battery



Image: The Wooask W09 device screen showing battery level and charging information, highlighting its long-lasting battery and quick charging capability.

2.2 Powering On/Off

- **To Power On:** Press and hold the power button located on the side of the device until the screen illuminates.
- **To Power Off:** Press and hold the power button until a power-off option appears on the screen, then select 'Power Off'.

2.3 Initial Setup and Wi-Fi Connection

Upon first power-on, follow the on-screen prompts to select your preferred system language. For online translation features, connect the device to a Wi-Fi network via the 'Settings' menu. Navigate to 'Wi-Fi' and select your network, then enter the password.

2.4 Downloading Offline Languages

To use offline translation, you must download language packs. Navigate to the 'Offline Translation' section on the main menu. Select the languages you wish to download. Ensure you have a stable Wi-Fi connection during the download process.

3. OPERATING INSTRUCTIONS

3.1 Interface Overview

The Wooask W09 features a 2.4-inch HD touchscreen for navigation and interaction. It also includes physical buttons for quick access to translation functions. The main screen displays options for Voice Translation, Offline Translation, Photo Translation, Recording, and Settings.



Image: The Wooask W09 translator device showing its front screen with the main menu icons for Voice Translation, Photo Translation, Offline Translation, and Settings. The back of the device with its camera is also visible.

3.2 Voice Translation (Online)

This mode supports 144 online languages for real-time conversation. Ensure the device is connected to Wi-Fi.

1. From the main menu, select 'Voice Translation'.
2. Choose the source and target languages on the screen.
3. Press and hold the corresponding physical button (A or B) for the language you are speaking. Speak clearly into the microphone.
4. Release the button. The device will translate and speak the output in the target language, also displaying the text on screen.

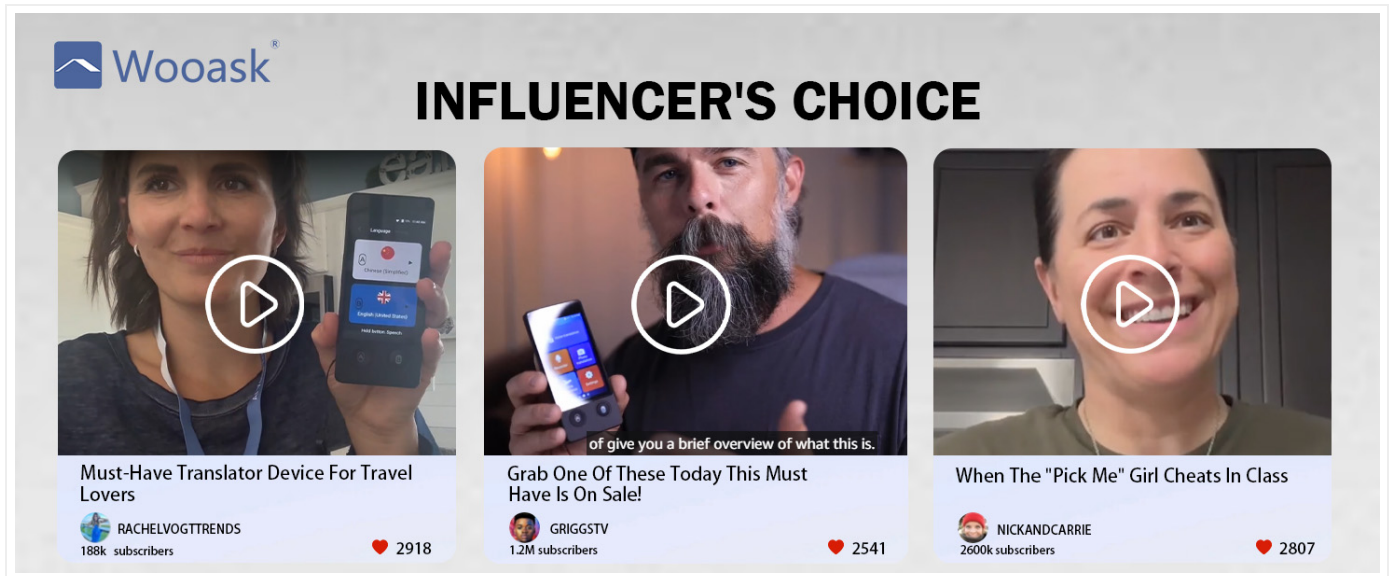


Image: A visual representation of the Wooask W09's instant translation feature, showing spoken phrases in English and Spanish being translated and displayed on the device screen with a translation speed of less than 0.5 seconds and 98% accuracy.

3.3 Offline Translation

This mode allows translation for 16 pre-downloaded languages without an internet connection.

1. Select 'Offline Translation' from the main menu.
2. Choose the desired source and target languages from your downloaded packs.
3. Proceed with speaking as in online voice translation, using the A/B buttons.

16 Languages Offline Translation



English



Spanish



Simplified
Chinese



Traditional
Chinese



Japanese



Korean



German



French



Russian



Arabic



Vietnamese



Thai



Italian



Portuguese



Hindi



Indonesian



No Internet Required



Image: A graphic illustrating the 16 languages supported for offline translation, including English, Spanish, Chinese, Japanese, Korean, German, French, Russian, Arabic, Vietnamese, Thai, Italian, Portuguese, Hindi, and Indonesian. It emphasizes that no internet is required for these translations.

3.4 Photo Translation

The 500MP camera can translate text from images in 43 languages.

1. Select 'Photo Translation' from the main menu.
2. Point the device's camera at the text you wish to translate (e.g., menus, signs, documents).

3. Tap the screen to capture the image. The device will automatically focus and process the text.
4. The translated text will appear on the screen.



Image: The Wooask W09 device being used to translate a street sign in a city environment, showcasing its HD photo translation capability with a 5-megapixel camera and 2.4-inch HD screen.

3.5 Recording Function

The device includes a basic recording function to capture audio. This feature is primarily for personal reference and does not

include advanced noise filtering.

1. Select 'Recording' from the main menu.
2. Tap the record button to start and stop recording.
3. Recordings are saved internally and can be accessed through the recording menu.

4. MAINTENANCE

4.1 Cleaning the Device

To clean the device, use a soft, dry, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or aerosol sprays, as these can damage the screen and device components.

4.2 Software Updates

Periodically check for software updates in the 'Settings' menu. Updates can improve performance, add new features, and enhance language support. Ensure the device is sufficiently charged and connected to Wi-Fi before initiating an update.

4.3 Battery Care

The Wooask W09 is equipped with a long-lasting battery. To maximize battery lifespan:

- Avoid extreme temperatures.
- Do not leave the device fully discharged for extended periods.
- Use the provided USB-C charging cable for optimal charging.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your Wooask W09 device.

Problem	Possible Cause	Solution
Device does not power on.	Low battery; device frozen.	Charge the device for at least 30 minutes. If still unresponsive, perform a hard reset (refer to manual for specific button combination, usually holding power button for 10-15 seconds).
Inaccurate or slow translation.	Poor Wi-Fi connection (online mode); outdated language packs (offline mode); unclear speech; background noise.	Ensure a strong Wi-Fi signal. Update offline language packs. Speak clearly and directly into the microphone. Reduce background noise.
Photo translation not working or blurry.	Insufficient lighting; camera not focused; text too small or complex.	Ensure adequate lighting. Hold the device steady and allow the camera to auto-focus. Position the device closer or further away to get a clear shot.
No sound from speaker.	Volume too low; speaker obstructed; device in silent mode.	Adjust volume using the on-screen controls or physical buttons. Ensure the speaker grille is not covered. Check sound settings.
Cannot connect to Wi-Fi.	Incorrect password; out of range; network issue.	Double-check the Wi-Fi password. Move closer to the Wi-Fi router. Restart the Wi-Fi router.
Bluetooth pairing issues.	Device not in pairing mode; incompatible accessory.	Ensure the accessory is in pairing mode. The Bluetooth function on this device is primarily for potential future firmware updates or specific accessories, and may not support all Bluetooth devices.

6. SPECIFICATIONS

Feature	Detail
Model Number	Wooask-1
Online Translation Languages	144
Offline Translation Languages	16
Photo Translation Languages	43
Translation Accuracy	Up to 98%
Response Time	0.5 seconds
Display	2.4-inch HD Touchscreen
Camera	500MP (5 Million Pixels)
Battery Type	Lithium Ion (3 included)
Continuous Use Time	Up to 35 hours
Charging Time	Approx. 1.5 hours (USB-C)
Item Weight	8.8 ounces (approx. 260g)
Package Dimensions	6.34 x 3.46 x 1.65 inches
Manufacturer	Wooask

7. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please contact Wooask customer support directly. Refer to the contact details provided in your product packaging or visit the official Wooask website.

