

akacozie AKA-MH-2407

akacozie Warm & Cool Mist Humidifier User Manual

Model: AKA-MH-2407

1. INTRODUCTION

Thank you for choosing the akacozie Warm & Cool Mist Humidifier. This manual provides important information regarding the safe operation, maintenance, and troubleshooting of your new humidifier. Please read it thoroughly before use and retain it for future reference.

Safety Information

- Always unplug the humidifier before cleaning or refilling.
- Do not immerse the main unit in water.
- Keep out of reach of children and pets.
- Place the humidifier on a firm, flat, water-resistant surface at least 12 inches (30 cm) away from walls and appliances.
- Do not block air vents.
- Use purified or distilled water to minimize white dust accumulation.

2. PRODUCT OVERVIEW

The akacozie Warm & Cool Mist Humidifier is designed to provide optimal humidity levels for various environments, offering both cool mist for general use and warm mist for colder seasons. It features a large capacity tank, smart controls, and an essential oil diffuser for enhanced comfort.

Key Features

- **Dual Mist Modes:** Provides both cool and warm mist for year-round comfort.
- **Large Capacity:** 2.1 Gallon (8L) water tank for up to 48 hours of continuous operation.

- **Wide Coverage:** Effectively humidifies areas up to 500 sq ft.
- **Top-Fill Design:** Simplifies water refilling and cleaning.
- **Adjustable Mist Levels:** Three mist output settings (Low, Medium, High).
- **Smart Humidity Control:** Automatically maintains desired humidity levels between 45% and 95%.
- **Quiet Operation:** Operates at a whisper-quiet 35dB, ideal for bedrooms and nurseries.
- **Timer Function:** Set operation for 1 to 12 hours.
- **Auto Shut-Off:** Automatically turns off when water level is low for safety.
- **Aroma Diffuser:** Integrated tray for essential oils to create a pleasant atmosphere.
- **User-Friendly Controls:** Features an LED touch panel and a remote control for convenient operation.
- **360° Adjustable Nozzle:** Directs mist precisely where needed.

Components



Figure 2.1: Humidifier demonstrating cool and warm mist output. The image shows the humidifier in a living room setting, illustrating its dual mist capabilities for different seasons.



Figure 2.2: Humidifier in a family setting, emphasizing its 8L/2.1 Gallon large tank, 48 hours max runtime, and 500 sq ft max coverage.



Figure 2.3: Humidifier in a yoga room, showing the aroma tray feature for adding essential oils to enhance the atmosphere.

3. SETUP

1. **Unpack:** Carefully remove all components from the packaging. Ensure all accessories (remote control, cleaning brush, user manual) are present.
2. **Placement:** Place the humidifier on a flat, stable surface. Ensure it is at least 12 inches (30 cm) away from walls, furniture, and electronic devices to prevent moisture damage.
3. **Remote Control Batteries:** Install two AAA 1.5V batteries into the remote control. (Note: Batteries are not included for safety during transportation).
4. **Fill Water Tank:**
 - Remove the top cover.
 - Pour purified or distilled water directly into the water tank. Do not exceed the MAX water level mark.
 - Replace the top cover securely.
5. **Connect Power:** Plug the power cord into a standard 120V AC electrical outlet.

Visual Guide: How to Use Your Humidifier

Your browser does not support the video tag.

Video 3.1: This video demonstrates the initial setup and basic operation of the akacozie Warm & Cool Mist Humidifier, including how to fill the water tank and use the control panel.

4. OPERATING INSTRUCTIONS


Your humidifier can be operated using the LED touch panel or the included remote control.

Power On/Off

- Press the **Power** button  on the control panel or remote to turn the humidifier on or off.

- *Note:* It may take about 40 seconds for mist to appear during the first use. The device defaults to cool mist when powered on.

Adjusting Mist Levels

- Press the **Mist** button  repeatedly to cycle through Low, Medium, and High mist output settings.



Top-Fill Design

Easy and fast refill, worry-free


Easy to Clean

Wide opening, full convenience




Figure 4.1: Visual representation of the three adjustable mist levels: Low for gentle humidification, Medium for daily comfort, and High for quickly tackling dry air.


Humidity Control

- Press the **Humidity** button  to set your desired humidity level between 45% and 95%. The humidifier will automatically maintain this level.


Warm Mist Function

- Press the **Warm** button  to enable or disable the warm mist function.
- *Note:* It may take approximately 15 minutes for warm mist to be produced. When warm mist is turned off, the unit operates in cool mist mode.

Timer Setting

- Press the **Timer** button  to set the operating time from 1 to 12 hours. The humidifier will automatically turn off once the set time expires.

Night Light & Sleep Mode

- Press the **Sleep/Light** button  to toggle the night light on or off. The night light also helps to clearly see the water level.
- Press and hold the **Sleep/Light** button for 3 seconds to activate Sleep Mode. In Sleep Mode, the display screen will turn off, and the "moon" icon will remain dimly lit. Press any button to reactivate the screen.

Relax & Rejuvenate with Aroma

Add your favorite essential oils for soothing aromatherapy and fresh indoor air



Figure 4.2: The humidifier operating quietly in a bedroom, highlighting features like Sleep Mode, Night Light, Timer, and Waterless Auto-off for undisturbed rest.

Aroma Function

- Pull out the aroma pad tray located on the side of the humidifier.
- Add 2-5 drops of your preferred essential oil onto the aroma pad.
- Slide the tray back into place.
- *Note:* Only add essential oils to the aroma pad. Never add oils directly into the water tank or other components.

5. MAINTENANCE

Regular cleaning is essential to ensure optimal performance and longevity of your humidifier. It is recommended to clean the humidifier weekly.

General Cleaning Steps

1. **Unplug:** Always unplug the humidifier from the power outlet before cleaning.
2. **Empty Water:** Remove the main unit from the water tank and empty any remaining water from both the water tank and the water chamber.
3. **Disassemble:**
 - Remove the aroma pad tray and aroma pad.
 - Carefully disconnect the water pump and silicone tube from the main body.
4. **Soak Components:** Place the aroma pad, aroma pad tray, water pump, and silicone tube in a bowl filled with distilled white vinegar for 15-20 minutes to loosen mineral buildup.
5. **Clean Water Tank & Chamber:**
 - Fill the water tank with distilled white vinegar.
 - Fill the water chamber (main unit base) with distilled white vinegar. Let it soak for 15-20 minutes.
 - Use the provided cleaning brush and a soft cloth to gently scrub away any mineral buildup from the water tank and water chamber.
6. **Rinse Thoroughly:** Rinse all soaked and scrubbed parts (aroma pad, aroma pad tray, water pump, silicone tube, water tank, and water chamber) under running water until the vinegar smell is completely gone. Ensure no water enters the air outlet of the main unit.
7. **Dry:** Allow all parts to air dry completely before reassembly.
8. **Reassemble:**
 - Place the aroma pad back into its tray and reinsert the tray.
 - Reconnect the water pump and silicone tube to the main body.
 - Place the main unit back onto the water tank.
9. **Wipe Exterior:** Wipe the outer surface of the humidifier with a soft, dry cloth.

Visual Guide: How to Clean Your Humidifier

Your browser does not support the video tag.

Video 5.1: This video provides a step-by-step guide on how to effectively clean your akacozie Warm & Cool Mist Humidifier, focusing on removing mineral buildup and ensuring all parts are properly rinsed and reassembled.

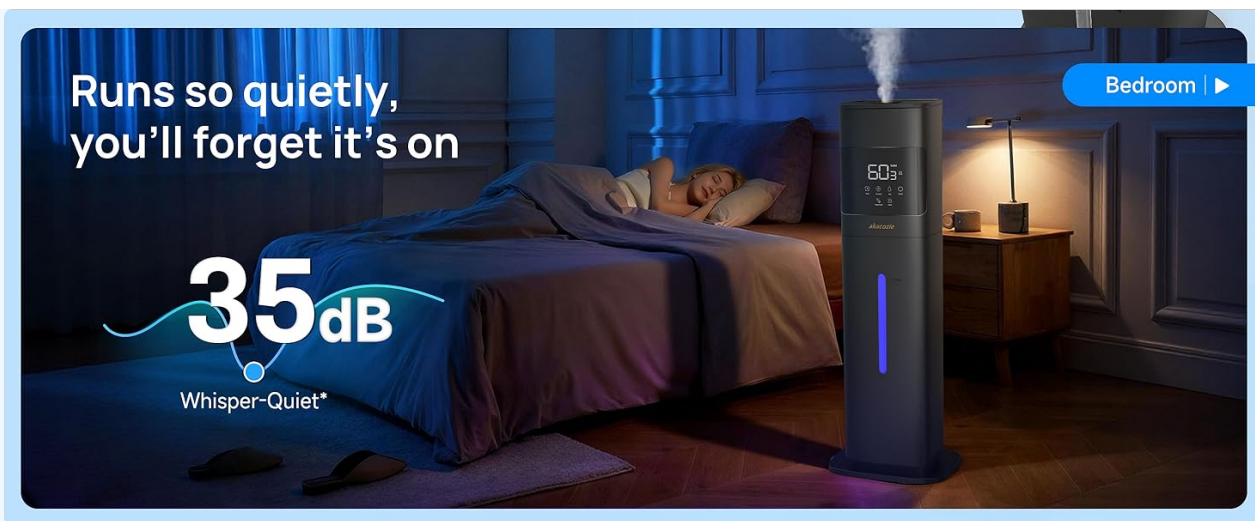


Figure 5.1: The humidifier's wide top opening facilitates easy refilling and thorough cleaning of the water tank.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No mist or low mist output	<ul style="list-style-type: none"> • Low water level. • Mineral buildup on the transducer. • Air outlet blocked. 	<ul style="list-style-type: none"> • Refill the water tank. • Clean the transducer and water chamber as per maintenance instructions. • Ensure the mist outlet is clear.
Unusual odor	<ul style="list-style-type: none"> • New unit odor. • Stagnant water or dirty tank. 	<ul style="list-style-type: none"> • Run the unit for a few hours in a well-ventilated area. • Clean the water tank and change water regularly.
White dust around humidifier	<ul style="list-style-type: none"> • Using hard water. 	<ul style="list-style-type: none"> • Use purified or distilled water. • Clean the humidifier regularly to remove mineral deposits.
Humidifier leaks water	<ul style="list-style-type: none"> • Water tank not properly seated. • Overfilled water tank. 	<ul style="list-style-type: none"> • Ensure the water tank is correctly placed on the base. • Do not fill water above the MAX line.

7. SPECIFICATIONS

Model Name	Cool & Warm Mist Humidifier
Model Number	AKA-MH-2407
Brand	akacozie
Dimensions	10"D x 7"W x 15"H
Weight	5.77 pounds
Water Tank Capacity	2.1 Gallons (8 Liters)
Max Coverage Area	500 Square Feet
Max Runtime	Up to 48 hours
Voltage	120 Volts
Wattage	130 watts
Special Features	Adjustable Humidity Control, Aroma Diffuser, Auto Shut Off, Digital Display, Leakproof, Low Water Indicator, Quiet, Removable Tank, Timer, Water Level Window, Night Light, Remote Control

8. WARRANTY AND SUPPORT

akacozie products are manufactured with the highest quality standards. For warranty information, product support, or any questions regarding your humidifier, please contact our customer service team.

Customer Service: For assistance, please refer to the contact information provided on the product packaging or visit the official akacozie website.

Online Resources: Additional support and FAQs may be available on the akacozie brand store on Amazon: [akacozie Store](#)