

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [COWSAR](#) /

› [COWSAR Commercial Single Serve Coffee Maker Instruction Manual \(Model CM3729E\)](#)

COWSAR CM3729E

COWSAR Commercial Single Serve Coffee Maker Instruction Manual

Model: CM3729E

INTRODUCTION

Thank you for choosing the COWSAR Commercial Single Serve Coffee Maker. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new coffee machine. Please read it thoroughly before first use and keep it for future reference.

PRODUCT OVERVIEW

The COWSAR Commercial Single Serve Coffee Maker is designed for convenience and versatility, allowing you to brew coffee using both K-Cup capsules and ground coffee. It features instant-heat technology, multiple brew sizes, and an intuitive touchscreen interface.

190°F GOLDEN EXTRACTION TEMPERATURE

Heats water to the ideal coffee-brewing temperature in moments

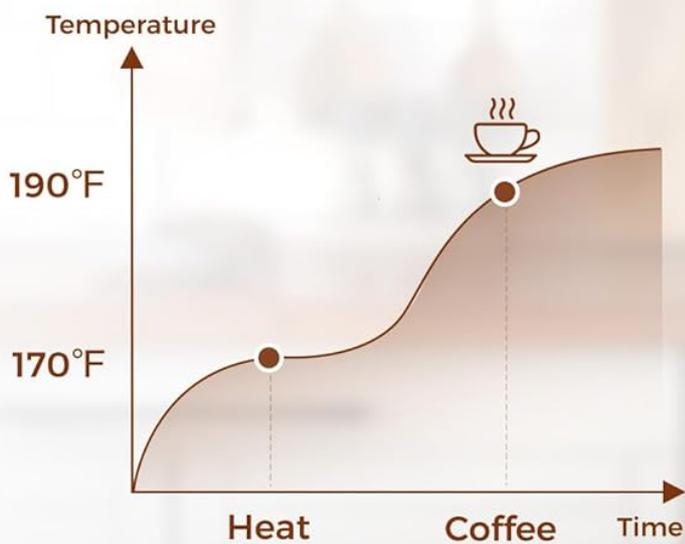


Figure 1: Front view of the COWSAR Commercial Single Serve Coffee Maker.

SETUP

1. Unpacking

- Carefully remove all components from the packaging.
- Remove any protective films or stickers from the appliance.

2. Initial Cleaning

- Wash the removable water tank, drip tray, and coffee holders with warm, soapy water. Rinse thoroughly and dry.
- Wipe the exterior of the coffee maker with a damp cloth.

3. Filling the Water Tank

- Remove the 40 oz detachable water tank from the back of the unit.
- Fill the tank with fresh, cold water up to the MAX fill line.
- Place the water tank back onto the coffee maker, ensuring it is securely seated.

40 OZ Detachable Water Tank



Removable Drip Tray



Figure 2: Detachable 40 oz water tank and removable drip tray for easy cleaning.

OPERATING INSTRUCTIONS

Control Panel Overview

EASY TO USE



Figure 3: Intuitive touchscreen interface with brew size options (6oz, 8oz, 10oz, 12oz, 14oz), ON/OFF, SIZE, and BREW buttons. Also includes 'ADD WATER' and 'CLEAN' indicators.

Brewing with K-Cup Capsules

1. Ensure the water tank is filled.

2. Lift the lid of the coffee maker.
3. Insert a K-Cup capsule into the capsule holder. Note that the needle in the holder will puncture the capsule.
4. Close the lid firmly.
5. Place your coffee mug on the drip tray.
6. Press the **ON/OFF** button to power on the machine.
7. Press the **SIZE** button repeatedly to select your desired brew size (6oz, 8oz, 10oz, 12oz, or 14oz).
8. Press the **BREW** button to start brewing. The machine will heat water instantly and dispense coffee.
9. To stop brewing at any time, press the **BREW** button again.
10. After brewing, turn off and unplug the machine. Wait for the machine to cool down before carefully removing and discarding the used capsule. Clean the capsule holder to prevent scalding.

Your browser does not support the video tag.

Video 1: Demonstrates the process of brewing coffee using a K-Cup capsule, including insertion, size selection, and brewing initiation.

Brewing with Ground Coffee

1. Ensure the water tank is filled.
2. Lift the lid of the coffee maker.
3. Remove the K-Cup capsule holder and insert the reusable ground coffee basket.
4. Add your desired amount of ground coffee to the basket. Do not exceed the MAX fill line. Refer to the table below for recommended coffee powder weights based on brew size.
5. Close the lid firmly.
6. Place your coffee mug on the drip tray.
7. Press the **ON/OFF** button to power on the machine.
8. Press the **SIZE** button repeatedly to select your desired brew size (6oz, 8oz, 10oz, 12oz, or 14oz).
9. Press the **BREW** button to start brewing. The machine will heat water instantly and dispense coffee.
10. To stop brewing at any time, press the **BREW** button again.
11. After brewing, turn off and unplug the machine. Wait for the machine to cool down before carefully removing and cleaning the ground coffee basket.

2 IN 1 COFFEE MAKER



Figure 4: The 2-in-1 design allows for both K-Cup capsules and a reusable ground coffee basket.

Your browser does not support the video tag.

Video 2: Illustrates the steps for brewing coffee using ground coffee, including filling the reusable filter and initiating the brew cycle.

Brew Size Options

5 CUP SIZES

Choose the right brewing size



Figure 5: The coffee maker offers five brew sizes: 6oz, 8oz, 10oz, 12oz, and 14oz.

Optimal Brewing Temperature

COWSAR

2 IN 1 Coffee Maker

Instant hot coffee at the perfect temperature



2 Brew Ways



5 Cup Sizes



190°F Extraction Temperature



Instant Hot Coffee



40 oz Water Reservoir



Cleaning & Watering Reminders



Figure 6: The coffee maker heats water to an ideal 190°F for optimal coffee extraction.

MAINTENANCE

Daily Cleaning

- Always unplug the coffee maker before cleaning.
- Remove and empty the drip tray. Wash it with warm, soapy water and rinse thoroughly.
- Remove the water tank, empty any remaining water, and wash it with warm, soapy water. Rinse thoroughly.
- Clean the K-Cup capsule holder or ground coffee basket after each use to prevent residue buildup.
- Wipe the exterior of the machine with a damp cloth. Do not immerse the main unit in water.

Descaling

The descaling indicator light will notify you when it's time for a deep clean (typically after 150 cycles). Regular descaling helps maintain optimal performance and extends the lifespan of your coffee maker.



Figure 7: The descaling indicator light will flash when descaling is required.

1. Prepare a descaling solution using descaling powder, tablets, or liquid descaler. Follow the descaler product's instructions for mixing. For example, empty one sachet of descaling agent into 1.2 liters of water and stir to dissolve.
2. Pour the descaler solution into the water tank.

3. Place a large container (at least 14 oz capacity) on the drip tray to collect the solution.
4. Power on the machine. Long press the **BREW** button until the descaling mode is activated (the blue light of the descaling indicator will be steady on).
5. The machine will pump approximately 14 ounces of water per round. This process takes about 4 minutes per round.
6. Repeat the descaling process until the water tank is empty.
7. After descaling, clean the water tank and fill it with clean water.
8. Repeat the pumping process with clean water (long press **BREW** button) to rinse any residual descaling solution from the machine. Perform several rinse cycles until the water tank is empty.
9. Turn off and unplug the machine. Dry all parts and reassemble.

Your browser does not support the video tag.

Video 3: Detailed guide on how to perform the descaling process for the coffee maker.

Self-Cleaning Function

For a quick clean, add the minimum amount of white vinegar to the water reservoir and long press the **BREW** button for 5 seconds to activate the self-cleaning function.



Figure 8: Illustration of the self-cleaning function using white vinegar.

TROUBLESHOOTING

- **Machine not turning on:** Ensure the power cord is securely plugged into a working electrical outlet.
- **No water dispensing:** Check if the water tank is properly filled and seated. The 'ADD WATER' indicator will flash if the tank is low.
- **Coffee not brewing properly:** Ensure the K-Cup capsule or ground coffee basket is correctly inserted and the lid is fully closed. Check for any blockages in the needle or filter.
- **Slow brewing or unusual noise:** This may indicate a need for descaling. Follow the descaling instructions in the Maintenance section.
- **Water leakage:** Ensure the water tank and drip tray are correctly positioned and not overfilled. Check for any cracks or damage to components.

SPECIFICATIONS

Feature	Detail
Brand	COWSAR
Model Name	CM3729E-BLACK-2
Color	BLACK
Product Dimensions	11.14"D x 5.51"W x 12.09"H
Item Weight	3.97 pounds
Coffee Maker Type	Drip Coffee Machine
Special Feature	Compatible with Ground Coffee and Capsules, Instant-Heat, Programmable, Removable Tank
Coffee Input Type	Capsule, Ground Coffee
Compatible Coffee Pods	K-Cup
Water Tank Capacity	40 Ounces
Brew Sizes	6oz, 8oz, 10oz, 12oz, 14oz
Human Interface Input	Touchscreen
Voltage	120 Volts
Is Dishwasher Safe	No

COMPACT DESIGN



Figure 9: Detailed dimensions of the coffee maker for counter space planning.



INSTANT HOT COFFEE

Equipped with a high-efficiency heating system, this Instant Hot Coffee Machine quickly heats water to the perfect brewing temperature, providing you with an on-the-go hot beverage experience

Figure 10: The integrated cord storage feature helps keep your countertop tidy when the machine is not in use.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact COWSAR customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.
