

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [PetJoy](#) /

› [PetJoy Automatic Barking Collars Instruction Manual \(Model 258S-3-02-C13\)](#)

PetJoy 258S-3-02-C13

PetJoy Automatic Barking Collars

Model: 258S-3-02-C13

INTRODUCTION

Thank you for choosing PetJoy Automatic Barking Collars. This manual provides essential information for the safe and effective use of your new bark control system. Please read these instructions thoroughly before operating the device to ensure optimal performance and the well-being of your pet.

PACKAGE CONTENTS

Upon opening your PetJoy Automatic Barking Collars package, you should find the following items:

- 3 x Automatic Barking Collar Receivers
- 6 x Adjustable Collar Straps (various colors)
- 1 x Remote Control (for initial setup and testing, if applicable)
- 1 x USB Charging Cable (for receivers)
- 1 x User Manual



Image: The three PetJoy automatic barking collar receivers, each attached to a different colored strap (yellow, red, green).



Image: Three additional colorful dog collar straps in yellow, blue, and pink, featuring reflective stitching and D-rings.

SAFETY INFORMATION

Your pet's safety and comfort are paramount. Please adhere to the following guidelines:

- **Not for Aggressive Dogs:** Do not use this product on aggressive dogs. If your dog exhibits aggressive behavior, consult a professional dog trainer or veterinarian.
- **Proper Fit:** Ensure the collar fits snugly but not too tightly. You should be able to fit two fingers comfortably between the collar and your dog's neck. A loose collar may not function correctly, and a too-tight collar can cause skin irritation or breathing issues.
- **Limited Wear Time:** Do not leave the collar on your dog for more than 12 hours per day. Prolonged wear can lead to skin irritation or pressure sores.
- **Regular Inspection:** Check your dog's neck daily for any signs of irritation, redness, or sores. If irritation occurs, discontinue use and consult a veterinarian.
- **Supervision:** Always supervise your dog, especially during the initial training period.
- **Age and Health:** This collar is intended for healthy dogs over 6 months of age. Consult your

veterinarian if your dog has any health concerns.

SETUP

1. Charging the Receiver

Before first use, fully charge the barking collar receiver. Connect the USB charging cable to the charging port on the receiver and plug the other end into a suitable USB power adapter (not included). The indicator light will show charging status and turn solid when fully charged.

2. Attaching the Collar Strap

Thread one of the provided collar straps through the slots on the receiver unit. Ensure the strap is securely fastened.

3. Fitting the Collar on Your Dog

Place the collar around your dog's neck, ensuring the contact points on the receiver touch your dog's skin. Adjust the strap for a snug fit, allowing two fingers to slide comfortably between the collar and the neck. Trim any excess strap if necessary.

4. Important Usage Guideline: Separate Leash Collar

It is crucial to use a separate collar for attaching a leash. **Never attach a leash directly to the barking collar.** Attaching a leash to the barking collar can cause the contact points to press too tightly against your dog's neck, leading to discomfort or injury, and may interfere with the collar's proper function.

Use a Separate Collar Strap

Never Attach Leash Directly to Training Collar!



Image: A woman walks three dogs, each wearing a PetJoy barking collar and a separate, standard collar for the leash. Text overlay emphasizes: "Use a Separate Collar Strap. Never Attach Leash Directly to Training Collar!"

OPERATING INSTRUCTIONS

1. Powering On/Off

Refer to the specific buttons on your receiver for powering on and off. Typically, a long press of the power button will turn the device on or off. An indicator light will confirm the status.

2. Adjusting Sensitivity Levels

The PetJoy Automatic Barking Collar features 5 sensitivity levels, allowing you to adjust how easily the collar detects your dog's bark. A higher sensitivity level means the collar will activate with softer barks, while a lower level requires a louder bark. Adjust the sensitivity according to your dog's barking habits and environment.

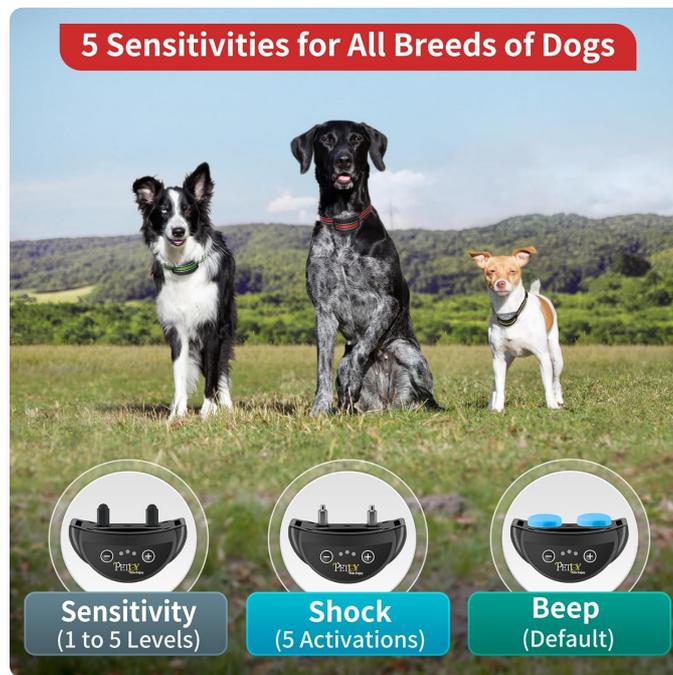


Image: A graphic illustrating the collar's features: 5 Sensitivity Levels (1 to 5), 5 Shock Activations, and Beep (Default) mode. Three dogs of different breeds are shown in a field, wearing the collars.

3. Understanding Progressive Procedures

The collar employs a user-friendly 7-stage progressive correction system. This system is designed to gently deter barking by increasing the intensity of the correction if barking continues. The collar starts with a warning beep and progresses to stronger corrections if the barking persists.

- 1) **Beep:** 2 Seconds
- 2) **Beep:** 3 Seconds
- 3) **Beep:** 5 Seconds + **Shock:** Level 10
- 4) **Beep:** 5 Seconds + **Shock:** Level 20
- 5) **Beep:** 5 Seconds + **Shock:** Level 30
- 6) **Beep:** 5 Seconds + **Shock:** Level 50
- 7) **Beep:** 5 Seconds + **Shock:** Level 80

The collar will automatically reset to the first stage after a period of no barking.



Image: A graphic detailing the 7 progressive procedures for bark correction, starting with beep and escalating to beep plus shock at increasing levels. Three dogs and two children are shown in a backyard setting.

MAINTENANCE

- **Cleaning:** Wipe the collar receiver and strap with a damp cloth. Do not submerge the receiver in water.
- **Storage:** Store the collar in a dry, cool place when not in use.
- **Battery Life:** Charge the collar regularly to maintain optimal battery performance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Collar not activating when dog barks.	Collar is too loose; sensitivity setting is too low; battery is low.	Adjust collar for a snug fit; increase sensitivity level; charge the battery.
Collar activating without dog barking.	Sensitivity setting is too high; external noise interference.	Decrease sensitivity level; ensure collar is not rubbing against other objects.
Collar not holding a charge.	Faulty charging cable or adapter; battery degradation.	Try a different USB cable and adapter; contact customer support if issue persists.
Skin irritation on dog's neck.	Collar too tight; prolonged wear; allergic reaction.	Loosen collar; limit wear time to 12 hours; clean contact points; consult veterinarian.

SPECIFICATIONS

- **Model:** 258S-3-02-C13

- **Brand:** PetJoy
- **Target Audience:** Dogs
- **Sensitivity Levels:** 5
- **Correction Modes:** Beep, Vibration (implied by progressive shock levels), Static Shock
- **Progressive Correction Stages:** 7
- **Power Source:** Rechargeable Battery (USB charging)
- **Date First Available:** January 18, 2026

WARRANTY AND SUPPORT

PetJoy is committed to providing excellent service. If you have any questions related to your PetJoy Automatic Barking Collars, please do not hesitate to contact us. We aim to reply to all inquiries within 24 hours.

For support, please visit the [PetJoy Store on Amazon](#) or refer to the contact information provided with your purchase.