

AVMATRIX VC42 4 Channel HDMI PCIE Capture Card User Manual

Home » AVMATRIX » AVMATRIX VC42 4 Channel HDMI PCIE Capture Card User Manual

AVMATRIX VC42 4 Channel HDMI PCIE Capture Card



Contents

- 1 Brief Introduction
 - 1.1 Overview
 - 1.2 Main Features
- 2 Interfaces
- 3 Specification
- 4 Installation
 - 4.1 Hardware Installation
- 5 Driver Installation
- **6 DIP Functions**
- **7 Operating Instructions**
- 8 Documents / Resources
 - 8.1 References
- 9 Related Posts

Brief Introduction

Overview


VC42 is a 4-Channel HDMI PCIE video capture card, it supports four HDMI inputs and capture, and compatible with console or PC games and digital cameras. HD video capture up to 1080p60 with bit rate sup to 200Mbps, transfer bandwidth up to 2.5GB/S, VC42 can meet the needs of high-band width, high-performance image acquisition and processing applications, ideal for use in live streaming platforms



Main Features

- 4-channel HDMI 1.4 simultaneous input and capture
- Single-channel input and capture up to 1080p60 with bit rates up to 200Mbps
- Support YUV2 uncompressed video
- PCIE GEN2 x4, 2.5GB/S transfer bandwidth
- · Support horizontal and vertical screen live capture
- Compatible with Windows 7 and above, Linux 18.04 and above
- Compatible with OBS/PotPlayer/XSplit and other live recording software
- Stable operation, 24 hours non-stop work
- · Support one machine with multiple cards for multi-channel live streaming and recording

Interfaces

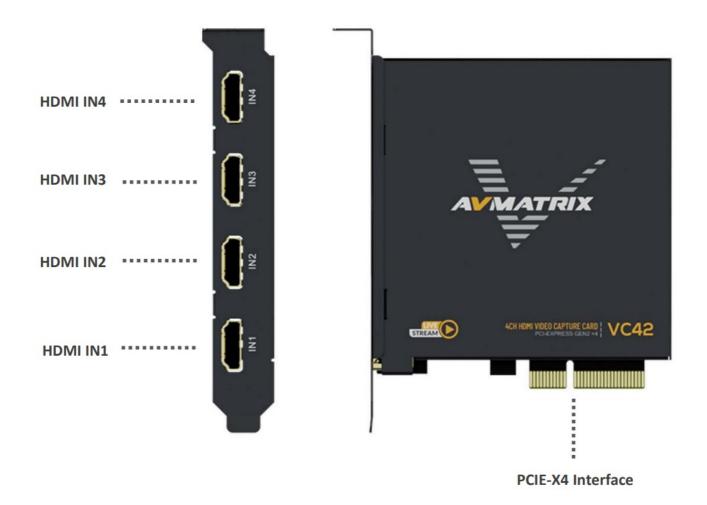

Specification

CONNECTION S	Host Interface	PCIE2.0x4 2.5GB/s transfer bandwidth
	Video Interfaces	4×HDMI1.4 inputs
STANDARDS	HDMI Input Format	Up to 1080p60 each channel
	Capture Format	1920×1200, 1920×1080, 1600×1200, 1600×9 00, 1440 ×900, 1280×1024, 1280×800, 1280 ×720, 1080×1920, 1024×768, 800×600, 720× 576, 720×480 <i>60fps</i> 1920×1080, 1280×720, 1080×1920 <i>59.94fps</i> 1920×1080, 1280×720 <i>50fps</i> 1920×1080, 1280×720, 1080×1920, 800×600, 720× 576, 720×480 <i>30fps</i>
		1920×1080, 1280×720, 1080×1920 25fps
	Capture Color Space	YUY2, uncompressed
	Audio Capture	4×HDMI embedded audio capture
	Audio Codec	16 bit PCM, 48kHz, 1536kbps
	Other Features	Support 1080i hardware de-interlacing, 3D no ise reduction algorithm
	Support XBOX, PS4, SWITCH, Video player, TV box and media box, etc.	
	OS Support	Windows 7 and above, Linux 18.04 and abov e
	Software Compatible	OBS, XSplit, VLC, Virtual Dub, VMix, VidBlast er, Wirecast, Microsoft Media Encoder, Adobe Flash Media Encoder, Any other Direc tShow/V4L2/AVCapture Session encoding/str eaming software
	APIs Support	Windows(DirectShow, DirectSound/WASAPI) Linux(V4L2, ALSA)
	≤2.0W	
		Operating temperature: 0°C~60°C
	Temperature	Storage Temperature: -20°C~70°C
	Relative Humidity	5%~90% non-condensing
	Dimension	120.1×88.4×21.6mm
	Weight	Net weight: 150g, Gross Weight: 195g


Installation

Note: Only hold the edge of the card or the metal bracket when taking the card, do not touch the electronic components to prevent the chip from being harmed by static electricity. The PCIE Card must not be plugged or unplugged while the system is powered. When the PCIE card are added to or removed from the system, should be ensured that the computer


- **Step1.Power** off the computer device before the PCIE capture card installation.
- Step2.Install the PCIE capture card into the PCIE-X4 Gen2 slot in your computer chassis and lock.
- **Step3.Connect** the HDMI interface device signal source to the PCIE card interface and make sure the cable is connected properly
- Step4.Turn on the computer, beginning to install the PCIE capture card drivers

Driver Installation

Step1.Download the driver from the AVMATRIX website at www.avmatrix.com and opening thedriver.

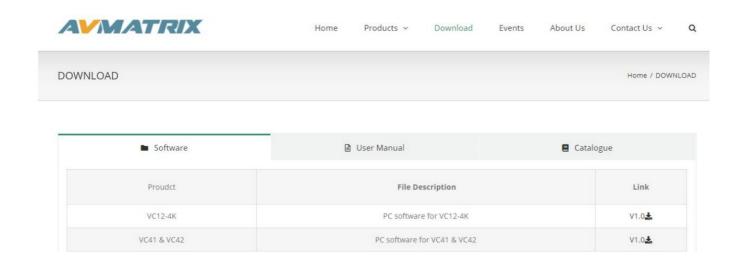


Step 2. When the driver is opened a notification of "Find Video Capture Card Driver: 1" will popup, which indicates that the PCIE capture card has been recognized, then click "Install". Finally, Click "OK" to complete the installation.

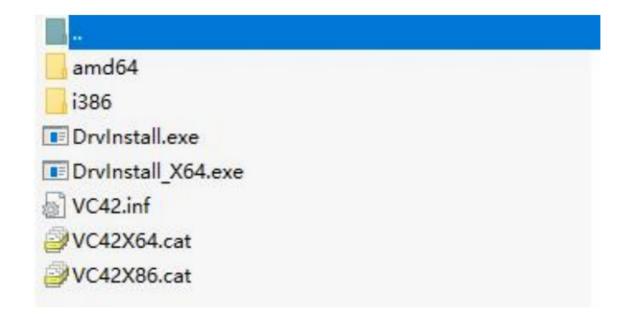

Note: Supported Windows 7 and above, Linux 18.04 and above Operating Systems.


DIP Functions

Multiple PCIE capture cards can be installed on one computer to work simultaneously to realize multiple live streaming and capture. When working with multiple PCIE capture cards at the same time, you need to adjust the dip switches on the PCIE card. The dipswitch on the PCIE card provides the following settings. Make sure the setup dip code different for each PCIE card.

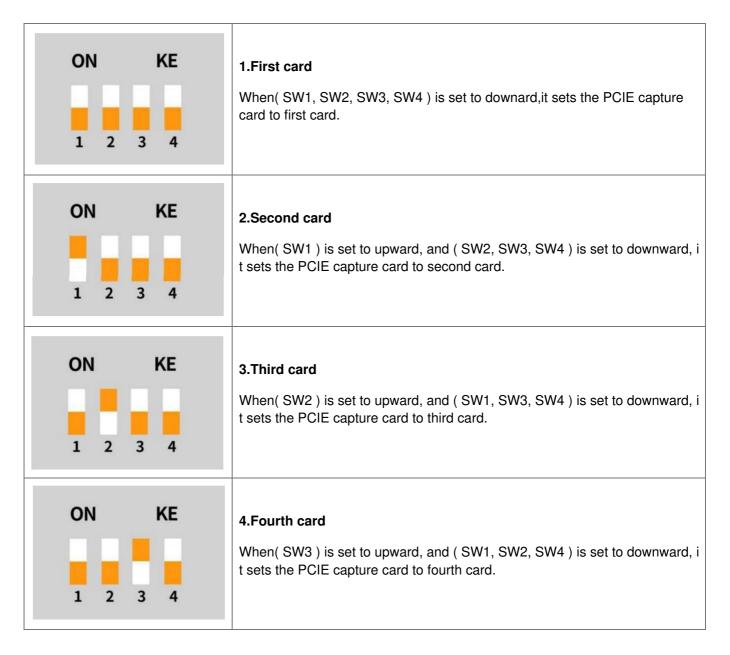


Operating Instructions


Step1. Open OBS Studio, click "+" and select "Video Capture Device".

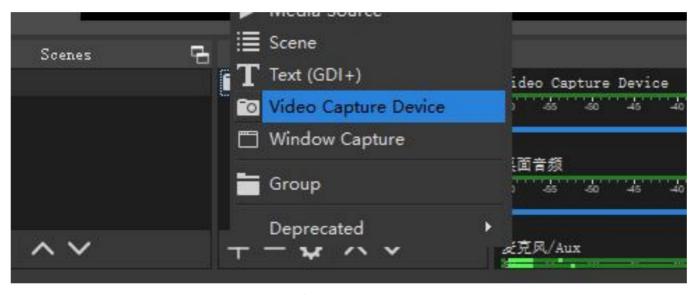


Rename the name of the signal source and click OK.

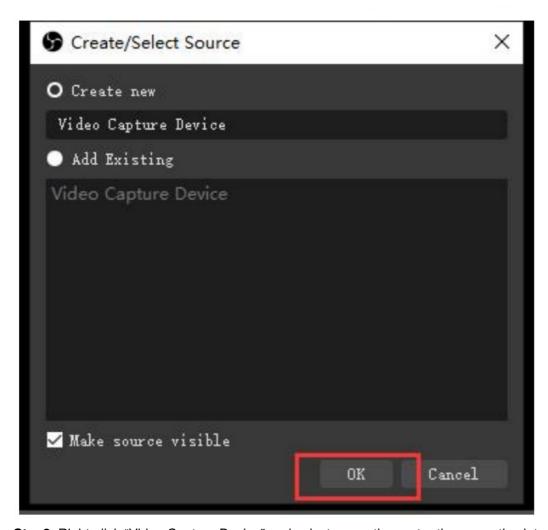



Step2. Right-click "Video Capture Device" and select properties, enter the properties interface, and select the signal source as your device. Users can set other parameter setting in the properties pages and then click OK. **Step3.** Click on the audio setting icon to setting audio, as shown in the picture. Then enter the properties, and select the device

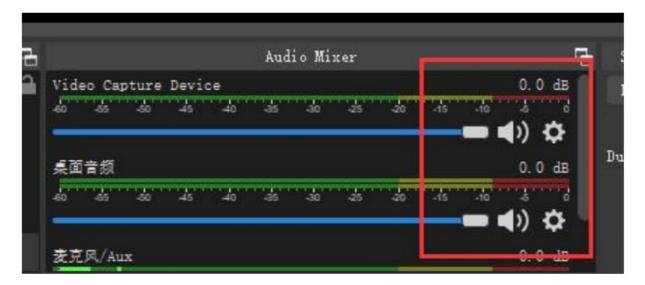

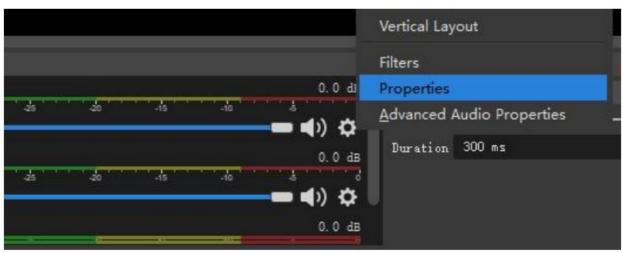

Step4. Enter "Advanced Audio properties" can change the setting about the volume, balance, audio monito ring, and Tracks etc.

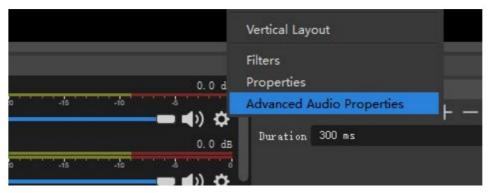

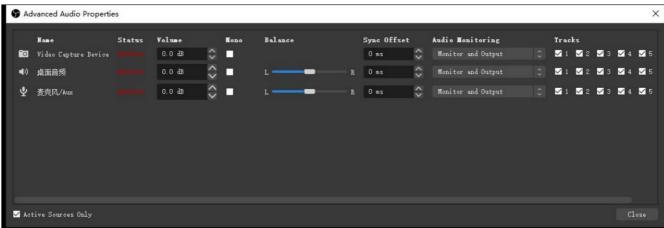



Documents / Resources



AVMATRIX VC42 4 Channel HDMI PCIE Capture Card [pdf] User Manual VC42, 4 Channel HDMI PCIE Capture Card, VC42 4 Channel HDMI PCIE Capture Card, HDMI PCIE Capture Card, Capture Card, Capture Card, Card

References

- ► HOME AVMATRIX
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.