



bebeblue HGL-ZNMSP Automatic Cat Litter Box Instruction Manual

[Home](#) » [bebeblue](#) » bebeblue HGL-ZNMSP Automatic Cat Litter Box Instruction Manual 

Contents

- [1 bebeblue HGL-ZNMSP Automatic Cat Litter Box](#)
- [2 Important safety instructions](#)
- [3 The Control Panel](#)
- [4 Icon Description](#)
- [5 Installation and operation](#)
- [6 Functional parameter](#)
- [7 Troubleshooting](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)

bebeblue




bebeblue HGL-ZNMSP Automatic Cat Litter Box



Please read the instructions carefully before use. If you need any help, please feel free to contact us, we will give you a satisfying solution within 24 hours. After-Sale Service: angolshold@l63.com

Important safety instructions

Please read the instructions carefully before use.

	Cat or kitten must weigh at least 2.2 lbs and age 6 months or more to safely use the litter box.
	DO NOT place on carpet. Place on a firm, level surface with a little space around.
	Keep clear of fire.

Intended use

- Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with, in or around the appliance.
- Use the appliance only for intended household purposes as described in this User Manual.

Electrical safety











- DO NOT operate the appliance if it has a damaged power cord or plug, or if it is malfunctioning or has been damaged in any manner.
- DO NOT use an external power supply other than the one provided with the appliance.

- DO NOT wet or submerge the bonnet or base, or allow moisture to come into contact with these parts.
- Always unplug when not in use, before putting on or taking off parts, and before cleaning.

Related to use
















- Always place the litter box on a firm, level surface. Avoid soft, uneven, or unstable flooring, which may affect the ability of the unit to detect your cat. If using litter mats or rugs, place in front of, or completely under, the unit.
- Do not place mats partially under the unit. Keep indoors in a cool, dry location. Reduce exposure to high temperature and humidity. Clean up the waste bin before replacing the litter.
- DO NOT put anything in the unit other than clumping litter or litter beads and crystals that are small enough to pass through the filter. DO NOT force your cat into the litter box.
- DO NOT pull out the poop bin while the litter box is rotating.
- DO NOT attempt to disassemble, repair, modify, or replace any part of your product. All servicing should be performed by qualified personnel only. No user-serviceable parts inside.
- Dispose of all packaging materials properly. Keep away from children and pets.
- Always wash your hands thoroughly after removing the waste. Pregnant women and those with suppressed immune systems should note that a parasite sometimes found in cat feces could cause toxoplasmosis.
- How often you will need to replace the litter box liner depends on the number and size of your cats. We recommend replacing it every 3 to 5 days to avoid bacteria growth.

The Control Panel

Pattern	Mode of entrance
Keys unlock	Press "  " for 3 seconds and release the buzzer to unlock.
One key to clean up	Short press the "  " button to separate the excrement in the roller and the cat litter
One key sand clearing	Short press the "  " button to remove all the excrement and cat litter in the drum to the warehouse.
Equipment network configuration preparation	Press the "  " button for 3 seconds, release the buzzer, and the device enters the configuration mode.
Empty position calibration	Long press "  " key for 6 seconds to release, then the device enters the calibration mode, long press "  " key for 3 seconds to release, then display "Empty Test", calibration success, short press "  " key to exit the calibration mode.
Full position calibration	Long press "  " key for 6 seconds to release, then the device enters the calibration mode, short press "  " key, then display "Full Test", the calibration is successful, short press "  " key to exit the calibration mode.
Keys lock	After unlocking the button, it is automatically locked after 5 minutes
Note: 2-6 items should be operated in the key unlock state!	

Icon Description

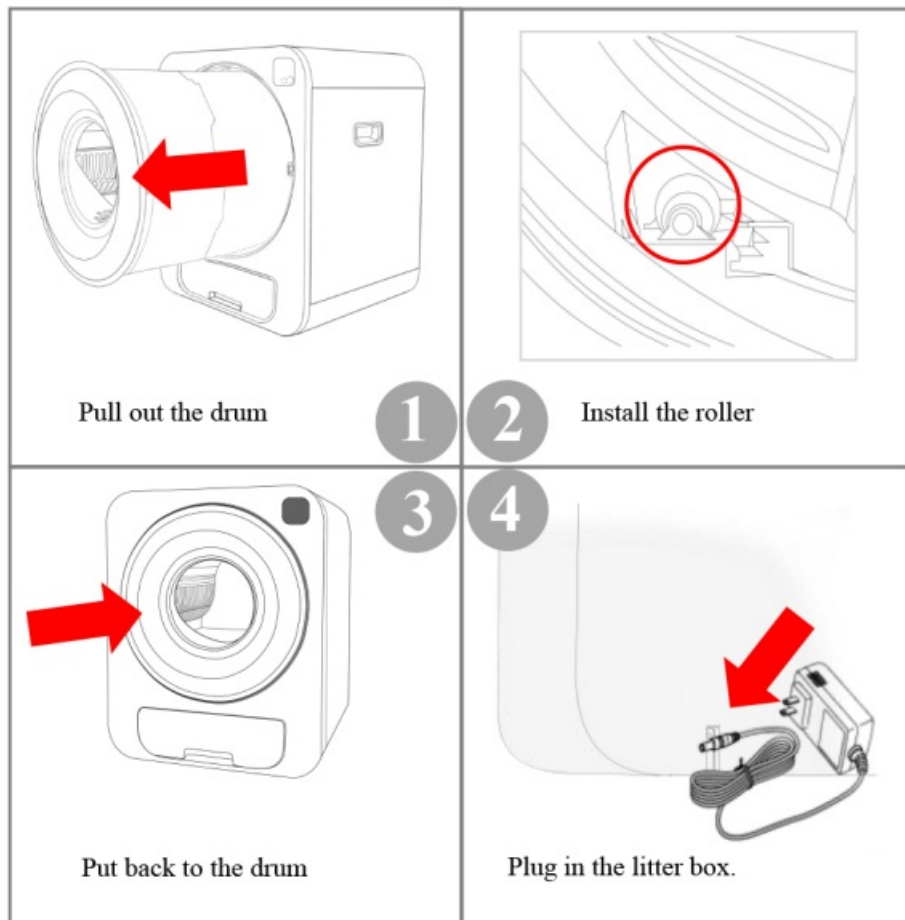
Please refer to this table for an explanation of the icons on the monitor.

Icon	Explain	Icon	Explain
	waiting		occupied storage
	sleeping		sensing
	cleaning		lack of litter
	litter empty cleaning		manual
	resetting		strange things
	suspending		child lock
	litter balance		on-line
			off-line

Installation and operation





Installation

Place the litter box indoors on a firm, level surface and in a cool, dry location. Do not touch any walls. Leave a little space around.




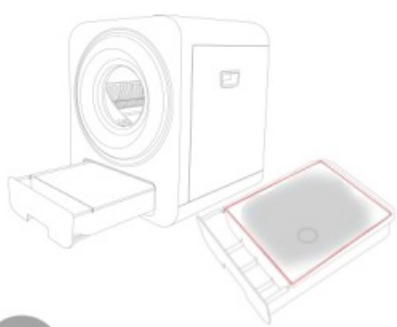


Network configuration

Make sure your smart device is connected to a secure 2.4 G Hz network and Bluetooth is enabled.

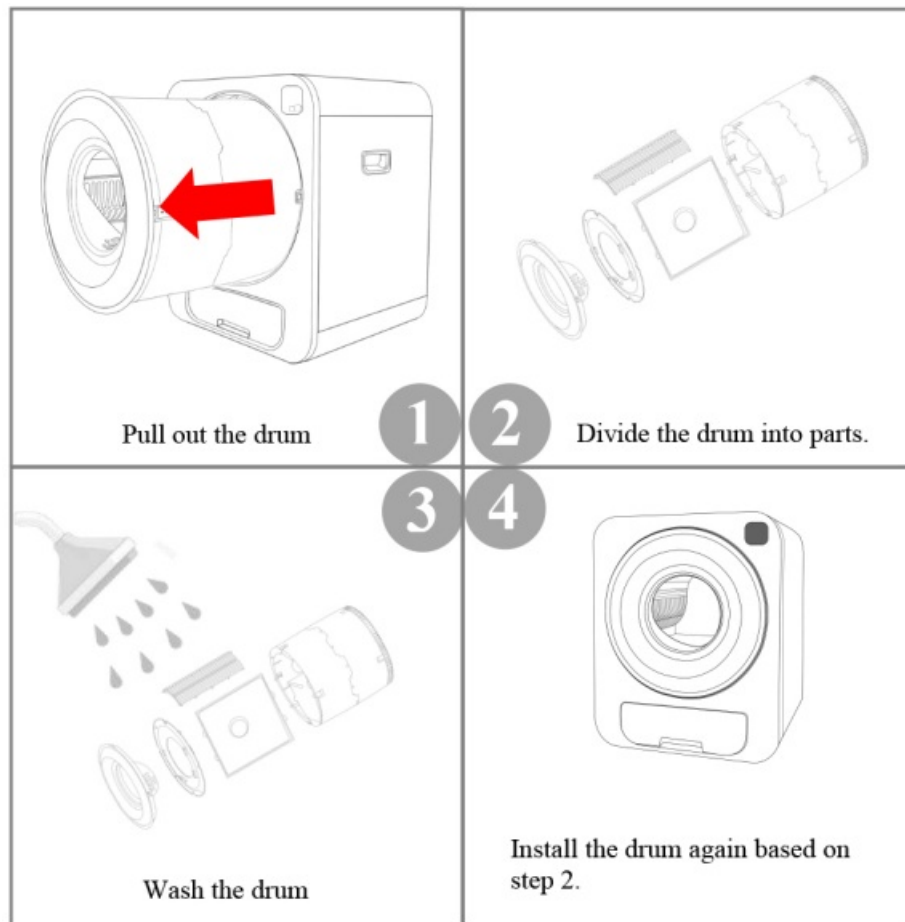
 <p>Scan the QR code to download and install the app</p> <p>1</p>	 <p>2 Press " " for 3 seconds until the beep rings to unlock the litter box.</p>
 <p>3</p> <p>Long press " " for 3 seconds until the buzzer rings, and enter the network configuration mode.</p>	 <p>4</p> <p>Follow the guiding steps to complete the app .</p>

Replace the garbage bags

How often you will need to replace the litter box liner depends on the number and size of your cats. We recommend replacing it every 3 to 5 days to avoid bacteria growth.

 <p>1</p> <p>Take out the poop bin Clean up garbage bags</p>	 <p>2</p> <p>Put in a new garbage bag</p>
 <p>3</p> <p>Put back the poop bin Press " " to clear the sand.</p>	 <p>4</p> <p>After repeating steps 1 and 2 Put back the poop bin and add new sand.</p>

Before cleaning, Plug off the power adapter of the equipment.



Functional parameter



Function

Mode	Description
Automatic mode	When the cat leaves the drum, the machine will clean Litter automatically according to the selected period.
Manual mode	Starting, suspending, and automatic cleaning can be controlled by the machine and the application.
Timing mode	Set the time of automatic cleaning via the app.
DNDmode	Set no interference period via app to avoid automatic cleaning.

Multiple protective mechanisms

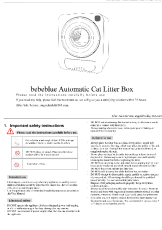
Protection function	Description
Radar protection	The radar protection is initially triggered When something approaches, the drum stops rotating. The drum will continue to rotate if the object gets away or stay static.
Weighting protection	The weighting protection will be triggered when an object more than 500g enters the drum or press the drum, the drum will stop rotating. The drum will continue to rotate if the gravity is disappearing.
Locked-motor protection	The drum will stop rotating when the motor resistance suddenly increases during rotation, the lock-motor protection can be canceled under human intervention.
Anti-pinch protection	The structural design is innovative. When all sensors are abnormal and fail to work, it can still ensure that there is no risk of getting stuck.

Troubleshooting

Phenomenon	Possible reasons
The device is unresponsive and the screen is not displayed	Check whether the power adapter is plugged in.
The network configuration is unsuccessful	Check whether the network is normal and whether it is too far from the WiFi signal source; Whether the WiFi password is entered correctly when configuring the network;
Fail to clean up automatically after the excrement of the cat	Check whether the automatic cleaning switch of the APP function setting is turned on; If the cleaning is not performed after adding sand or changing sand, please confirm the cleaning conduct and whether the device is sleeping.
Fail to update the balance of cat litter	If the cleaning is not performed after adding or changing litter, please press the  buttons on the device panel to perform the cleaning action.
The device informs a lack of the balance of cat litter	After adding cat litter, press the  button in the device panel to perform the cleaning.
The device indicates the insufficient excrement collection bin capacity	Please clean the excrement collection bin.
The device indicates that the excrement collection bin has been withdrawn	Please return the excrement collection bin.
The excrement collection bin was not withdrawn and the device shows a lack of cat litter	The device should conduct empty calibration under standby conditions.
The cat litter balance data is seriously inconsistent with the reality	Full calibrations are not performed after replacing different types of cat litter.

After-Sale Service: angolshield@163.com

Documents / Resources

	<p>bebeblue HGL-ZNMSP Automatic Cat Litter Box [pdf] Instruction Manual HGL-ZNMSP Automatic Cat Litter Box, HGL-ZNMSP, Automatic Cat Litter Box, Cat Litter Box, Litter Box, Box</p>
---	--

References

- [User Manual](#)