



BenQ EX240N LCD Monitor User Manual

[Home](#) » [BenQ](#) » BenQ EX240N LCD Monitor User Manual 

Contents

- [1 EX240N LCD Monitor](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Recycle Disassemble Instruction \(Dismantled Information\)](#)
- [5 Disassembly Tools](#)
- [6 Disassembly process](#)
- [7 Disassembly Time](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)



EX240N LCD Monitor



Product Information

The LCD Monitor Model No. EX240N contains hazardous substances such as Pb and BFRs. These substances are exempted under the RoHS directive, but the majority of them are present in the printed circuit boards assembly. Therefore, complete disposal of the old appliance is required to reduce emissions as much as possible. This treatment can only be performed in authorized handling plants.

Product Usage Instructions

1. Gather the necessary disassembly tools: Philips screwdriver for M3 screw, nosed pliers, diagonal cutting pliers, slotted screwdriver, six-point sockets, Philips screwdriver for M2.5 screw, and a knife.
2. Ensure that you are in an authorized handling plant to perform the disassembly process.
3. Disassemble the LCD Monitor using the gathered tools according to the disassembly process provided in the user manual.
4. The total time for disassembly is 30 minutes.
5. Dispose of the disassembled materials and components properly in accordance with the requirements of ANNEX VII of DIRECTIVE 2012/19/EU on waste electrical and electronic equipment (WEEE).

Recycle Disassemble Instruction (Dismantled Information)








Requirements according to ANNEX VII of DIRECTIVE 2012/19/EU on waste electrical and electronic equipment (WEEE)

Materials and components with hazardous content

LCDs may contain hazardous substances like Pb and BFRs which are covered by exemptions under the RoHS directive. However, the majority is present in the printed circuit boards assembly. In order to reduce emissions as much as possible, complete disposal of the old appliance is required. This treatment may only be performed in authorized handling plants.


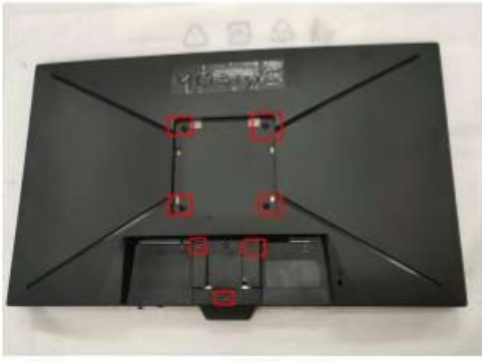


- **Product Name:** LCD Monitor
- **Model No.:** EX240N






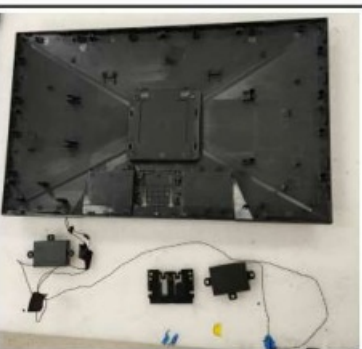
Disassembly Tools

Tool	picture
Philips Screwdriver for M3 Screw	
Nosed Pliers	
Diagonal Cutting Pliers	
Slotted screwdriver	
Six Point Sockets	
Philips Screwdriver for M2.5 Screw	
Knife	

Disassembly process



	Disassemble Vesa CVR
	Unscrew
	Disassemble RC
	Disassemble SPK Wire connector


	Disassemble Internal Remove All Tapes
	Disassemble HD/PCB.
	Remove Panel
	Disassemble ASSY Deco
	Disassemble ASSY MF
	Disassemble ASSY RC

 <p>WEEE annex II item</p>	Disassemble all PCB.
	Disassemble Column
	Disassemble BASE

Disassembly Time

Total time: 30 minutes

Documents / Resources

	<p>BenQ EX240N LCD Monitor [pdf] User Manual EX240N LCD Monitor, EX240N, LCD Monitor, Monitor</p>
---	---