




## **BRITA TOTAL 360 BRWEFS Water Softener and Filtration System User Manual**

[Home](#) » [BRITA TOTAL 360](#) » BRITA TOTAL 360 BRWEFS Water Softener and Filtration System User Manual 



**BRIEFS Water Softener and Filtration System  
User Manual**

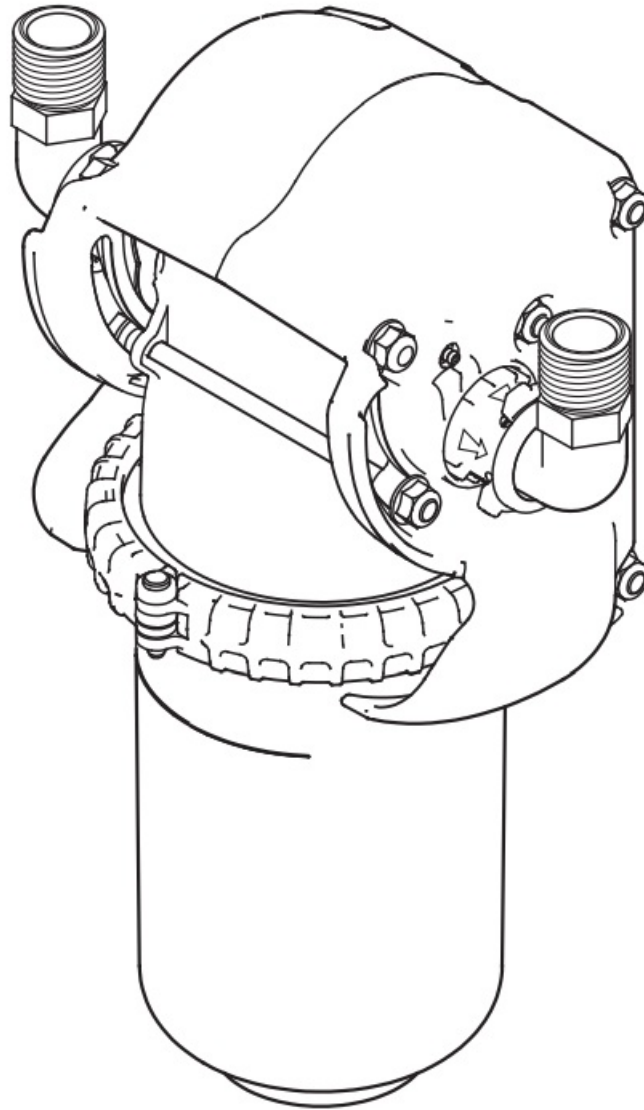

**Model BRWEFS**  
**How to install, operate and maintain your**  
**Multipurpose Whole Home Water Filtration System**

**Contents**

- 1 PRODUCT AND WARRANTY REGISTRATION**
- 2 Dimensions**
- 3 Specifications & Performance Claims**
- 4 Inspect Shipment**
- 5 Before You Start**
- 6 Planning the Installation**
- 7 Typical Installation Illustrations**
- 8 Installation Instructions**
- 9 FILTER CARTRIDGE LIFE**
- 10 Troubleshooting the System**
- 11 Parts List**
- 12 EXTEND YOUR WARRANTY:**
  - 13 Documents / Resources**
    - 13.1 References**
- 14 Related Posts**

**PRODUCT AND WARRANTY REGISTRATION**



Register your product online to validate and extend your warranty. See warranty page for details.

[warranty.ecopurehome.com/brita](http://warranty.ecopurehome.com/brita)

If you have any questions or concerns when installing, operating, or maintaining your water filtration system, call our toll-free number:

1-800-218-6172 or visit [www.ecopurehome.com/brita](http://www.ecopurehome.com/brita)


When you call, please be prepared to provide the model number and date code of your system, found on the rating decal.

System tested and certified by NSF International against NSF/ANSI Standard 42 for particulate class III reduction, chlorine taste and odor reduction, and NSF/ANSI/CAN Standard 372.



Manufactured by Water Channel Partners  
1890 Woodlane Drive Woodbury, MN 55125  
7379638 (Rev. C 9/2/21)

## Dimensions

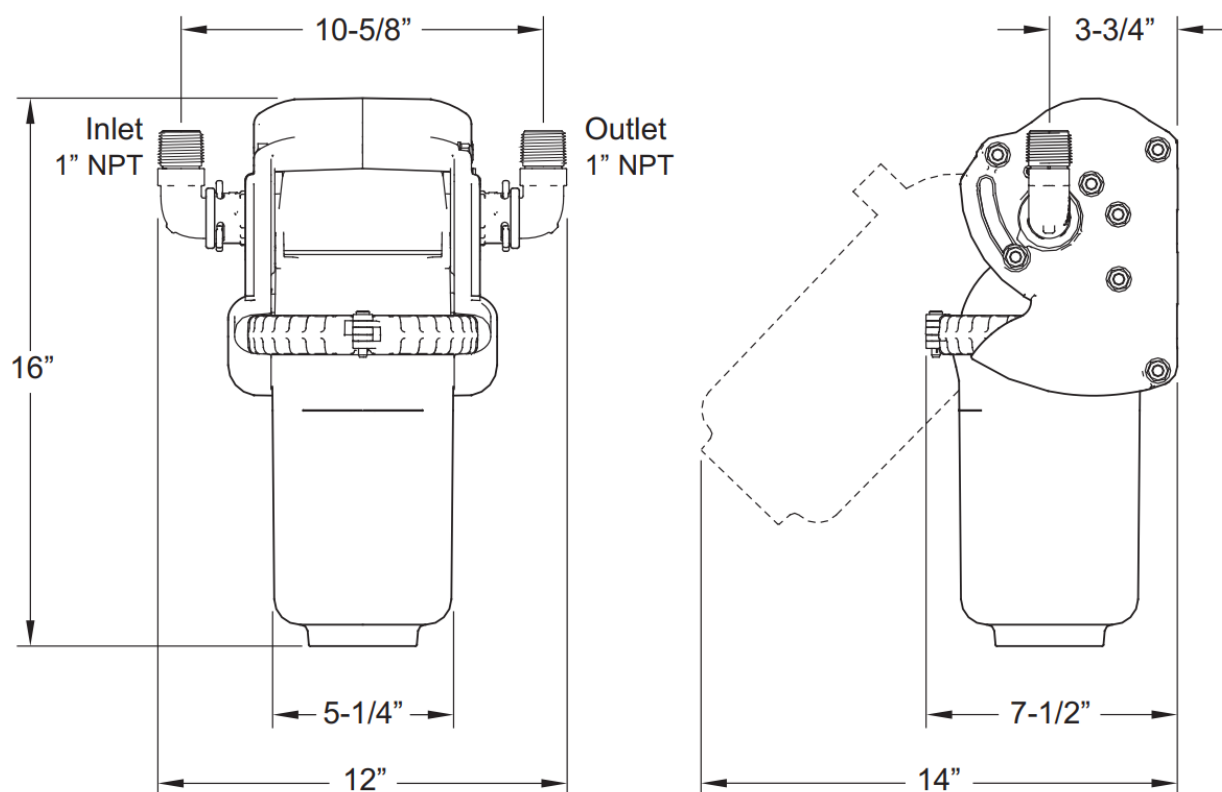

**FIG. 1**

## Specifications & Performance Claims

This system has been tested according to NSF/ANSI Standard 42 for the substances listed below. The concentration of the indicated substance in water entering the system was reduced to a concentration less than or equal to the permissible limit for water leaving the system, as specified in NSF/ANSI 42. The testing was performed using spiked tap water at a flow rate of 4 GPM (15.2 L/min.), pH of  $7.5 \pm 0.5$ , the pressure of 60 PSIG, and temperature of  $68 \pm 5^\circ\text{F}$ .

SPECIFICATIONS	Model BRWEFS
Rated Service Flow Rate @ 60 psi (414 kPa)	4.0 GPM (15.2 L/min.)
Pressure Drop @ 30 psi (207 kPa)	2 PSIG (13.8 kPa)
Water Pressure Limits (minimum/maximum)	30 – 100 psi (207 – 689 kPa)
Water Temperature Limits (minimum/maximum)	40 – 100 °F (5 – 38 °C)
Capacity	10,000 gallons (37,850 liters)

**IMPORTANT NOTICE:** Read this performance data and compare the capabilities of this unit with your actual water treatment needs. It is recommended that, before purchasing a water treatment unit, you have your water supply tested to determine your actual water treatment needs. This filtration system is designed to be used for the reduction of the performance claims listed below. Do not use where water is microbiologically unsafe or of unknown quality, without adequate disinfection before or after the system. While testing was performed under standard laboratory conditions, the actual performance of the system may vary based on local water conditions. Some or all of the contaminants reduced by this unit may not be in your water supply. See elsewhere in this manual for further instructions on system installation, operating procedures, filter cartridge replacement, and warranty. The maintenance instructions must be followed for the product to perform as indicated below.

Filter cartridges should be replaced every six months. Purchase replacement cartridges from the e-commerce retailer where you bought your water filtration system or [www.ecopurehome.com/brita](http://www.ecopurehome.com/brita). The estimated cost of replacement filter cartridge BRWEFF ranges from \$30.00 to \$60.00.

PERFORMANCE CLAIMS						
Substance	Required Influent Level	NSF Min. % Reduction Requirement <sup>®</sup>	Average Influent Level	Avg. I Max. Effluent Level	Avg. / Min Percent Removal	EPA Max. Contaminant Level
(5 to <15 micron) 0	Particulates, Class III 10,000 mg/L0	85%	particles/mL <sup>®</sup>	26 / 45 particles/mL0	99.9% / 99.9%	None
Chlorine Taste and Odor	2.0 mg/L0	50%	1.9 mg/L	0.10 / 0.19 mg/L	94.9% / 90%	None


1. Micron is equivalent to micrometer (m).
2. Milligrams per liter, which is equivalent to parts per million (PPM).
3. The acceptance level for this substance is based on percent reduction, rather than maximum effluent concentration. m Particles per milliliter.
4. Environmental Protection Agency maximum contaminant level as required under the Safe Drinking Water Act.

## Inspect Shipment

The parts required to assemble and install the water filtration system are included with the unit. Thoroughly check the water filtration system for possible shipping damage and parts loss. Also, inspect and note any damage to the shipping carton.

Remove and discard (or recycle) all packing materials. To avoid the loss of small parts, we suggest you keep the small parts in the parts bag until you are ready to use them.

### Packing List

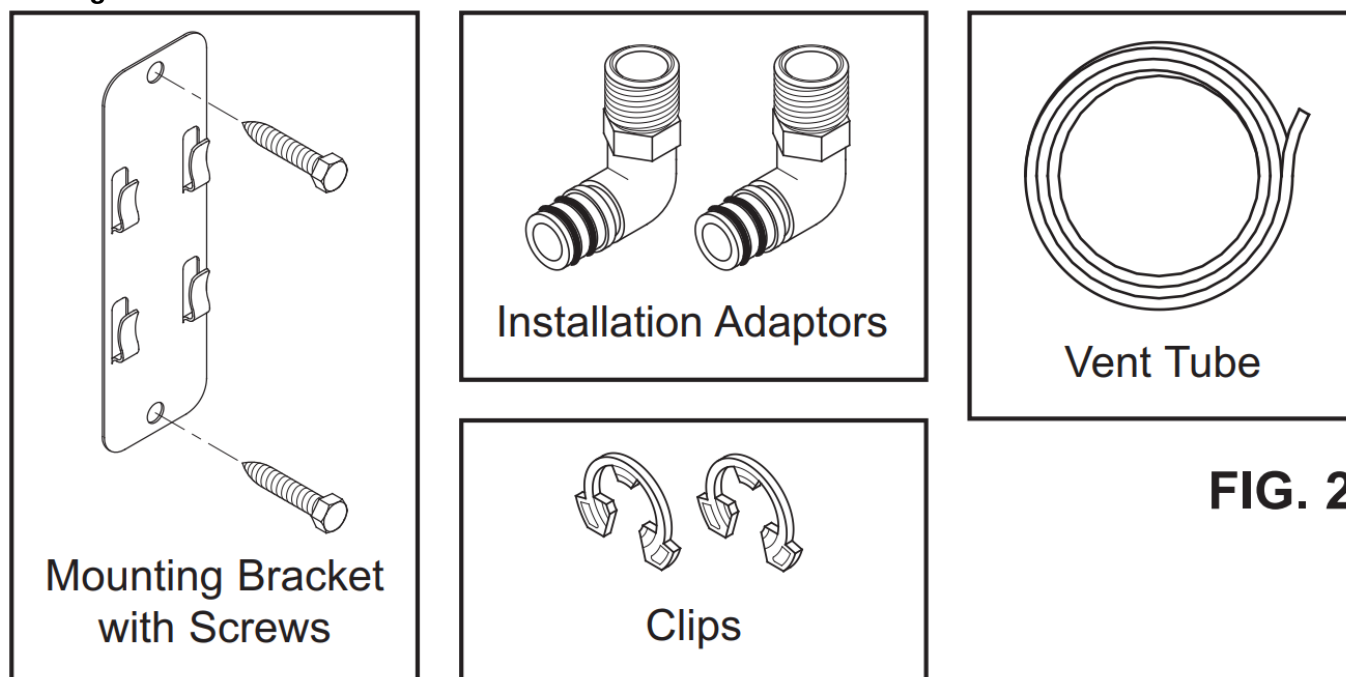

**FIG. 2**

## Before You Start

## **Your safety and the safety of others are very important.**

We have provided many safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol. This symbol alerts you to potential hazards that can kill or hurt you and others. All safety messages will follow the safety alert symbol and either the word “DANGER” or “WARNING” These words mean:



**DANGER** You can be killed or seriously injured if you don’t immediately follow instructions.



**WARNING** You can be killed or seriously injured if you don’t follow instructions.


All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

- Read all instructions before installing and using your Multipurpose Whole Home Water Filtration System. Follow all steps exactly to correctly install. Reading this manual will also help you to get all the benefits of the filtration system.
- All plumbing must be completed in accordance with national, state, and local plumbing codes. Local code information can be obtained at your local public works department. In Massachusetts, plumbing codes 248 CMR 3.00 and 10.00 shall be adhered to. Consult with your licensed plumber.
- Do not use water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system.
- The Multipurpose Whole Home Water Filtration System works on water pressures of 30 psi (minimum) to 100 psi (maximum). If your house water pressure is over the maximum, install a pressure-reducing valve in the water supply pipe to the filtration system.
- To condition, all water in the home, install the filtration system close to the water supply inlet, and before all other plumbing connections, except outside water pipes. Do not install the filtration system outside, or in extreme hot or cold temperatures. The temperature of the water supply to the filtration system must be between 40°F and 100°F. Do not install on hot water.
- Avoid installing in direct sunlight. Excessive sun heat may cause distortion or other damage to nonmetallic parts.

## **Planning the Installation**


### **INSTALLATION LOCATION**

To filter all household water, install the Multipurpose Whole Home Water Filtration System on the household’s main incoming water pipe. For a home with a municipal water supply, install the system between the home’s incoming water supply and the water softener, if a water softener is being used (See Figure 3A). If the home has well water, reverse the order of the filtration system and the water softener (See Figure 3B).

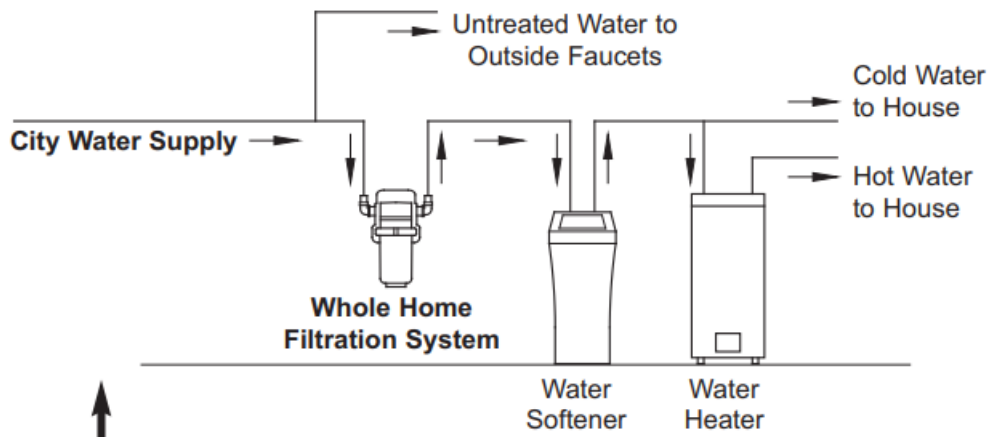


**FIG. 3A**

**OR**

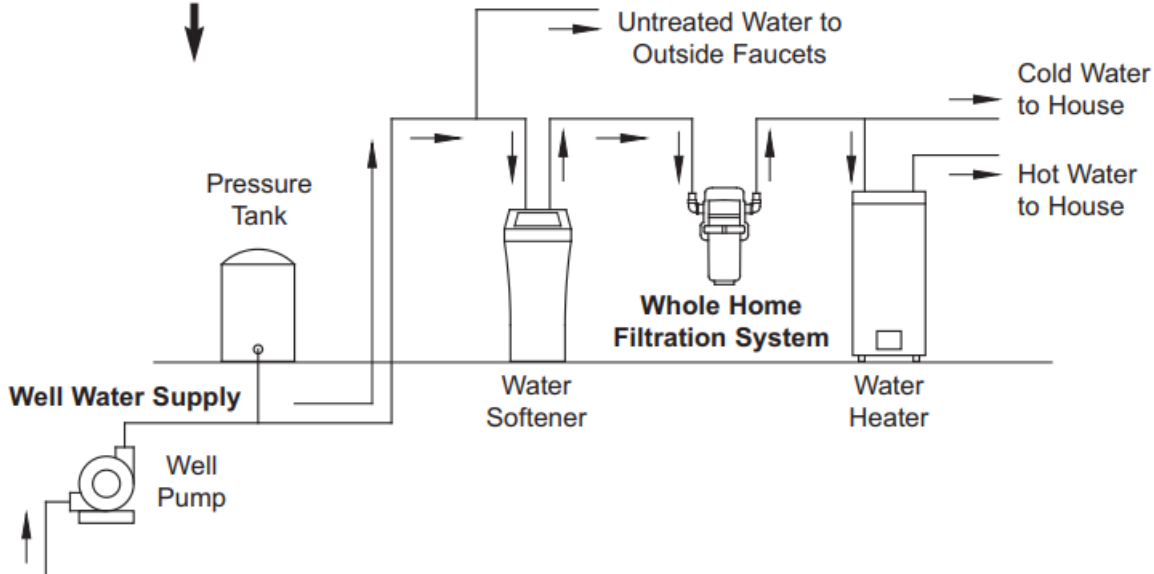

**FIG. 3B**

In some cases, it may be necessary for plumbing to cross over to ensure the correct flow direction through the filtration (See Figure 4).

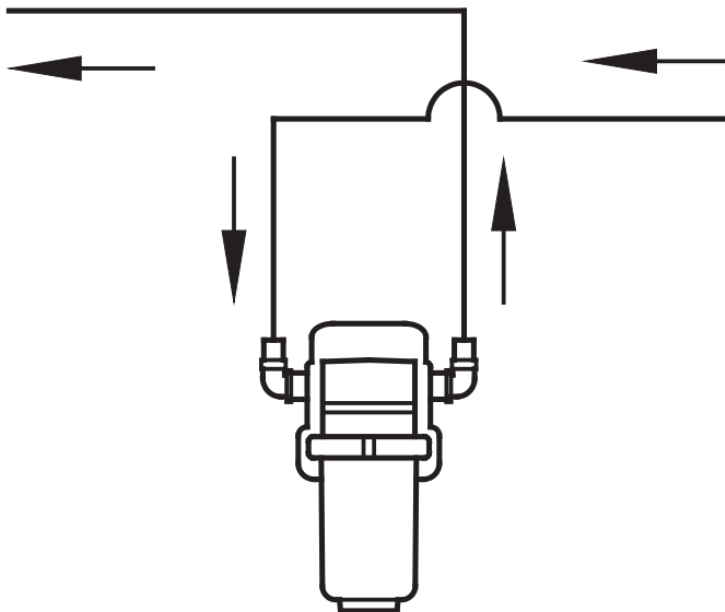

**FIG. 4**



**WARNING**



Electrical Shock Hazard Prior to installation on metallic plumbing securely installs two grounding clamps

and a #4 copper wire per installation instructions. Failure to follow these instructions can result in death or electrical shock.

## Typical Installation Illustrations

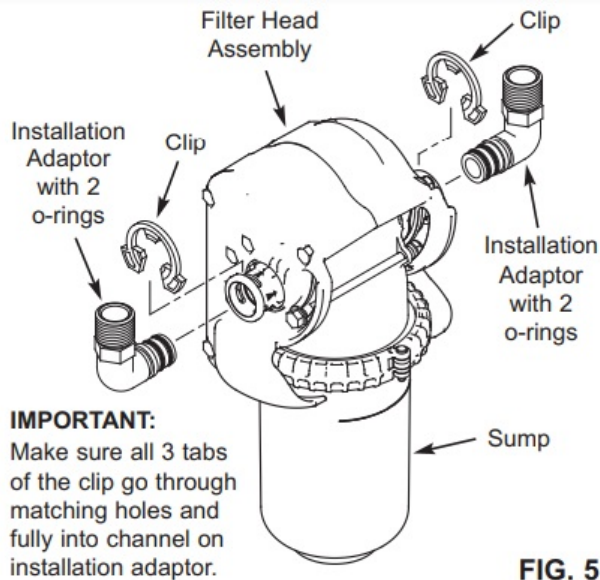


FIG. 5

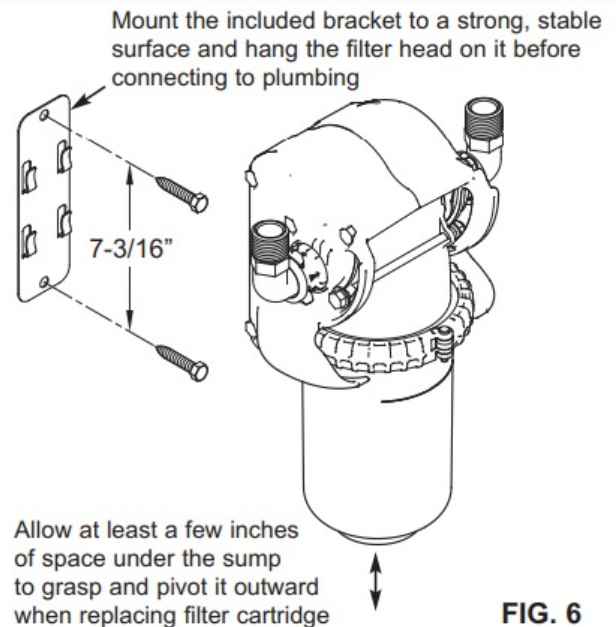


FIG. 6

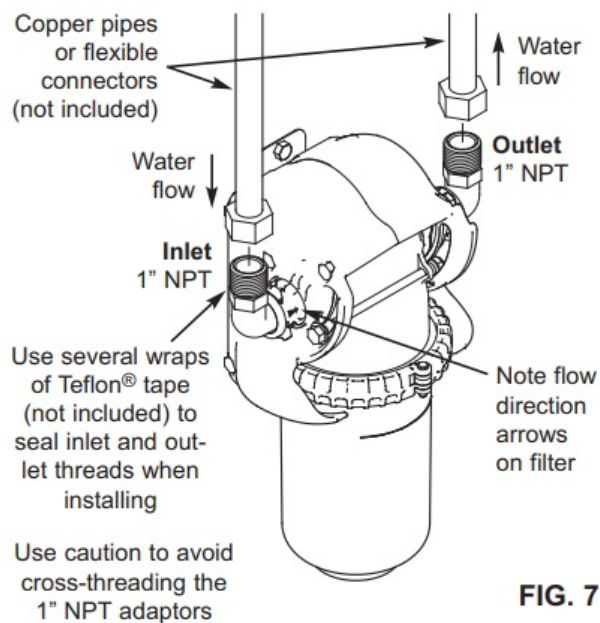


FIG. 7

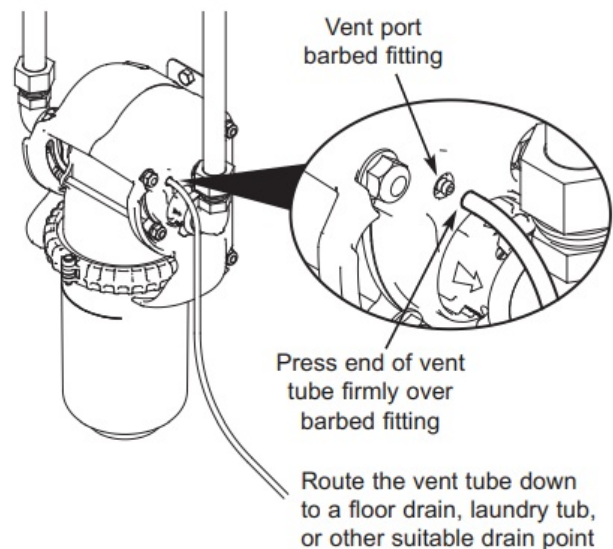


FIG. 8

**IMPORTANT:** Do not solder metal plumbing while attached to plastic installation adaptors. Soldering heat will damage the adaptors.

® Teflon is a registered trademark of E.I. Du Pont de Nemours and Company.

Questions? Call Toll Free 1-800-218-6172 or visit [www.ecopurehome.com/brita](http://www.ecopurehome.com/brita)

When you call, please be prepared to provide the model number and date code, found on the rating decal.

## Installation Instructions

### PLUMBING CODES

All plumbing must be completed in accordance with national, state and local plumbing codes. Local code information can be obtained at your local public works department.

In the state of Massachusetts: The Commonwealth of Massachusetts plumbing code 248-CMR shall be adhered to. A licensed plumber shall be used for this installation.



## ALWAYS INSTALL THE FILTER UPRIGHT

To operate properly, the Multipurpose Whole Home Water Filtration System must be installed in a vertical orientation. The filtration system must also be installed with the water flow following the arrows on the filter's inlet and outlet. This corresponds to a left-to-right flow when looking at the front of the filter head assembly (See Fig. 7). Leave a few inches of space under the filter sump to allow it to be grasped, pivoted up, and removed when changing filter cartridges, as shown in the "Filter Cartridge Replacement" section.

## MOUNTING BRACKET

A metal bracket is included with the Multipurpose Whole Home Water Filtration System to support the assembled filtration system and plumbing when necessary. The bracket should be installed before the filtration system is connected to the plumbing.

The bracket may be mounted to a wall or wall framing member with two screws (included), as shown in Figure 6. These screws, or other (not included) fasteners, if used, must be mounted into a stable surface, strong enough to support the weight of the filtration system, plumbed, and full of water – about 15 pounds.

The back of the filter head housing clips onto the bracket. When mounted, the filtration system should be aligned with the inlet and outlet plumbing, and not cause rigid pipes to distort.

## CONNECT THE VENT TUBE

Each time you replace a filter cartridge, the filtration system will be placed into the bypass position by pivoting it outward (shown in the "Filter Cartridge Replacement" section). Whenever this is done, water pressure inside the sump is relieved, and about 4 ounces of water will be expelled through the vent port. Always install the included vent tube on this barbed fitting to carry the water to a floor drain, laundry tub or another suitable drain point. See Figure 8.

**NOTE:** This vent tube works by gravity. Do not elevate it above the vent port. Route it downward to the drain point with no humps, dips or loops.



## WARNING




## Electrical Shock Hazard

Prior to installation on metallic plumbing securely installs two grounding clamps and a #4 copper wire per installation instructions. Failure to follow these instructions can result in death or electrical shock.

## GROUNDING INFORMATION (for Installations on Metal Pipe)

The house's main incoming water pipe is often used to ground electrical outlets in the home. Grounding protects you from electrical shock. Installing the water filtration system may break this ground. Before beginning installation, purchase and securely install two grounding clamps and a #4 copper wire across the location where the filtration system will be, tightly clamping it at both ends, as shown below.

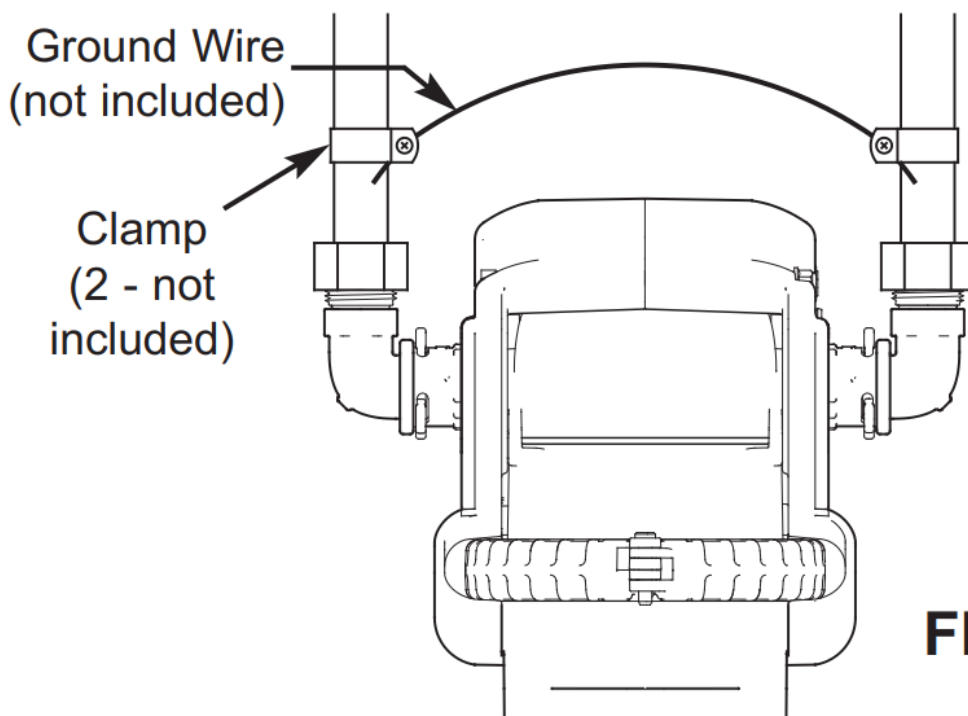

**FIG. 9**

## FILTER CARTRIDGE LIFE

It is recommended to replace the filter cartridge every six months of use. There are several variables that determine how long a cartridge will last.

These include:

1. How much water do you use, and
2. How much sediment, taste, and/or odor, or other unwanted substance, is in the water?

You will know it is time to replace the cartridge when you first notice the return of the unwanted sediment, taste and/or odor in your water, or when the flow diminishes or stops.


Register for reminders to change filters at [www.ecopurehome.com/brita](http://www.ecopurehome.com/brita)

Brita Multipurpose Whole Home Water Filtration System model BRWEFS with replacement element BRWEFF conforms to NSF/ANSI 42 for the specific performance claims as verified and substantiated by test data.

#### **FILTER CARTRIDGE REPLACEMENT**

**NOTE:** It is not necessary to shut off the water supply when replacing the filter cartridge.

1. Grasp the lower part of the sump and pull it firmly and slowly toward you, pivoting upward until it stops in the bypass/filter change position (See Fig. 10). You may notice a hissing sound, as a small amount of water (approximately 4 ounces) is expelled into the vent tube to relieve pressure in the sump.

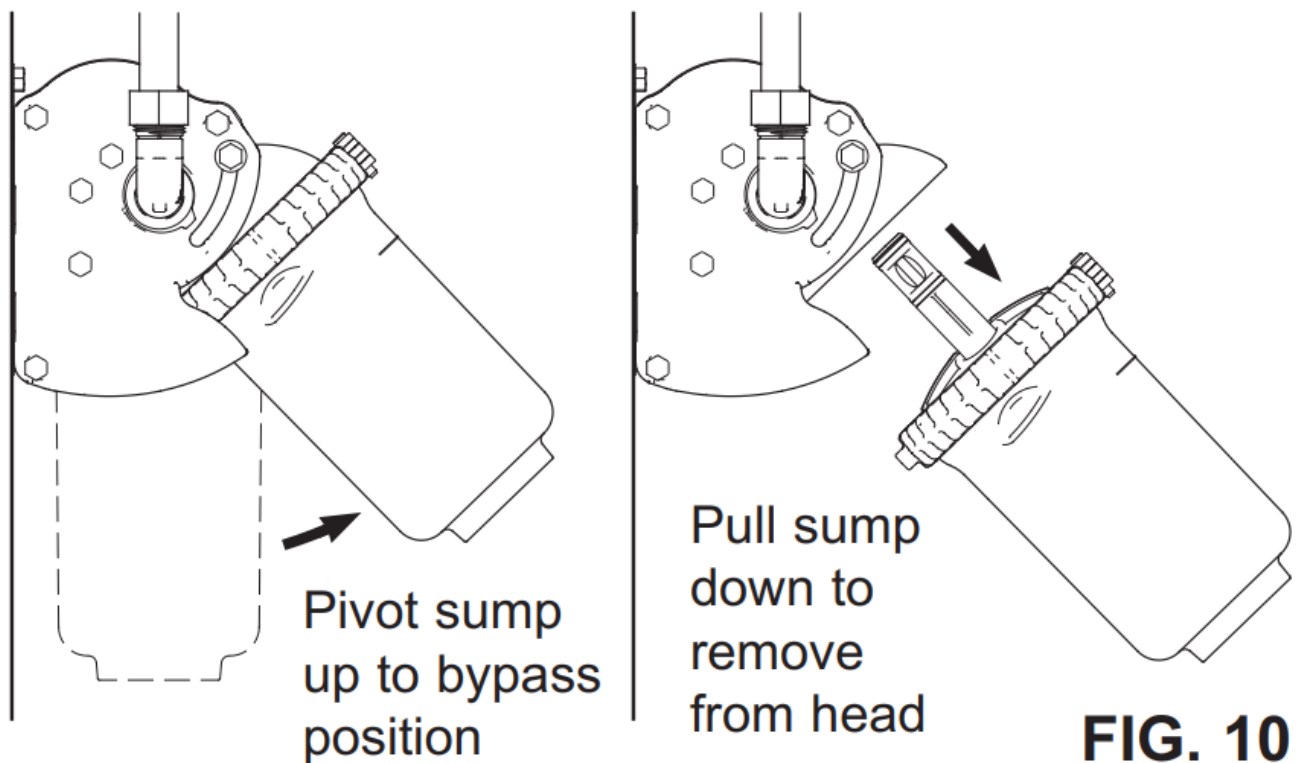


2. Pull the sump downward out of the head.


**NOTE:** To avoid unintended water flow from the filter head, do not pivot filter head down to the service position without the sump and replacement filter cartridge in place, as shown in Figure 16.

3. It is recommended to take the sump assembly to a sink or level waterproof surface before opening it.
4. Unsnap the lid clamp by pulling its latches in opposite directions, as shown in Fig. 11. Do not pry or use tools, as this may damage the assembly.

Pull latches in opposite  
directions to unsnap

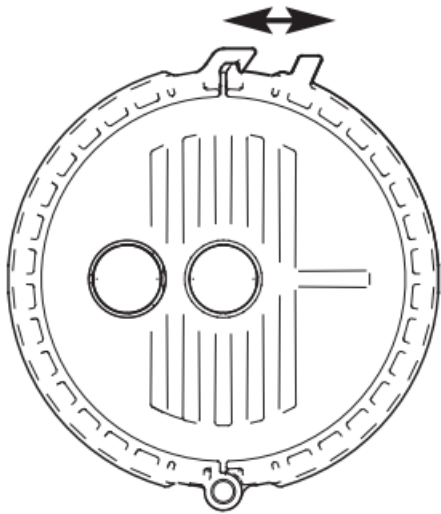

Top view of lid

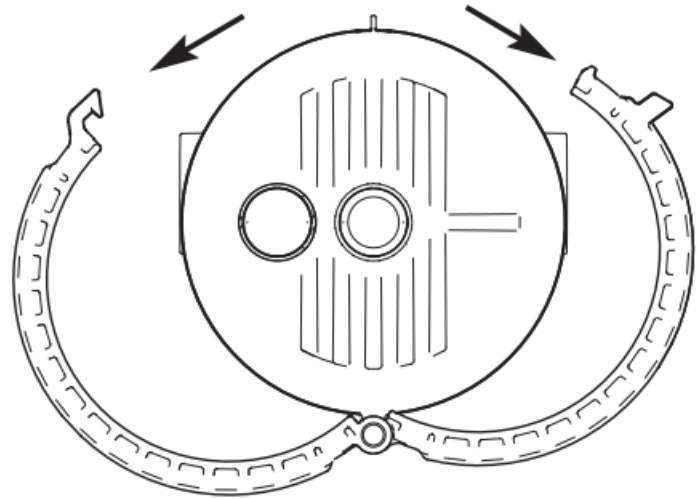


**FIG. 11**

5. Swing the clamp halves open and lift the lid assembly up off the filter cartridge and sump.

**NOTE:** Do not remove the pin holding the clamp halves to the lid.


6. Remove the used filter cartridge from the sump. If you have difficulty removing the cartridge from the sump, insert a screwdriver into the slot shown in Figure 12 and pry up. Dispose of the used cartridge properly.

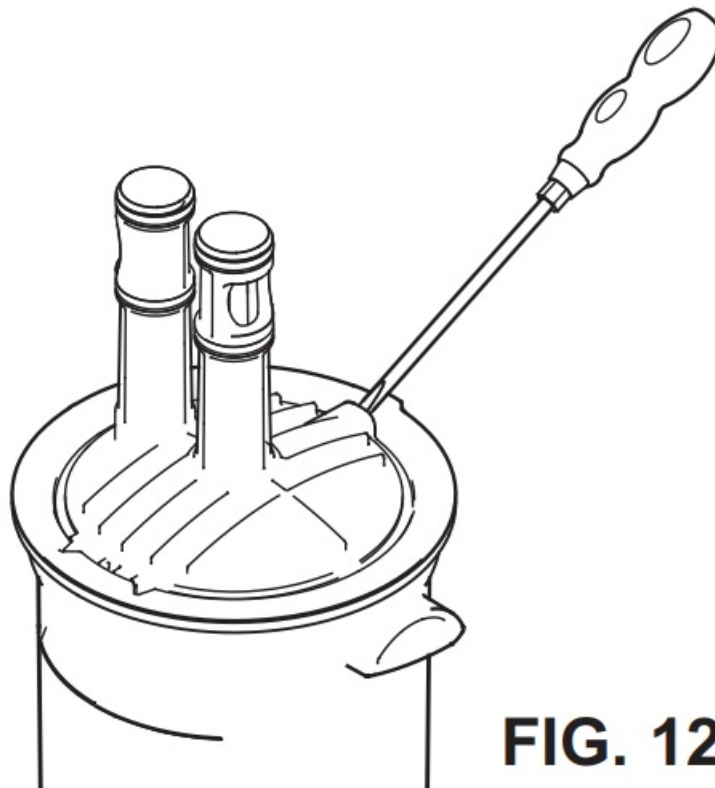

**FIG. 12**


**NOTE:** Check the sump to be sure it is dry and free of debris.

7. Take the new filter cartridge out of its packaging and remove the protective caps from the ports (See Fig. 13).
- 8.

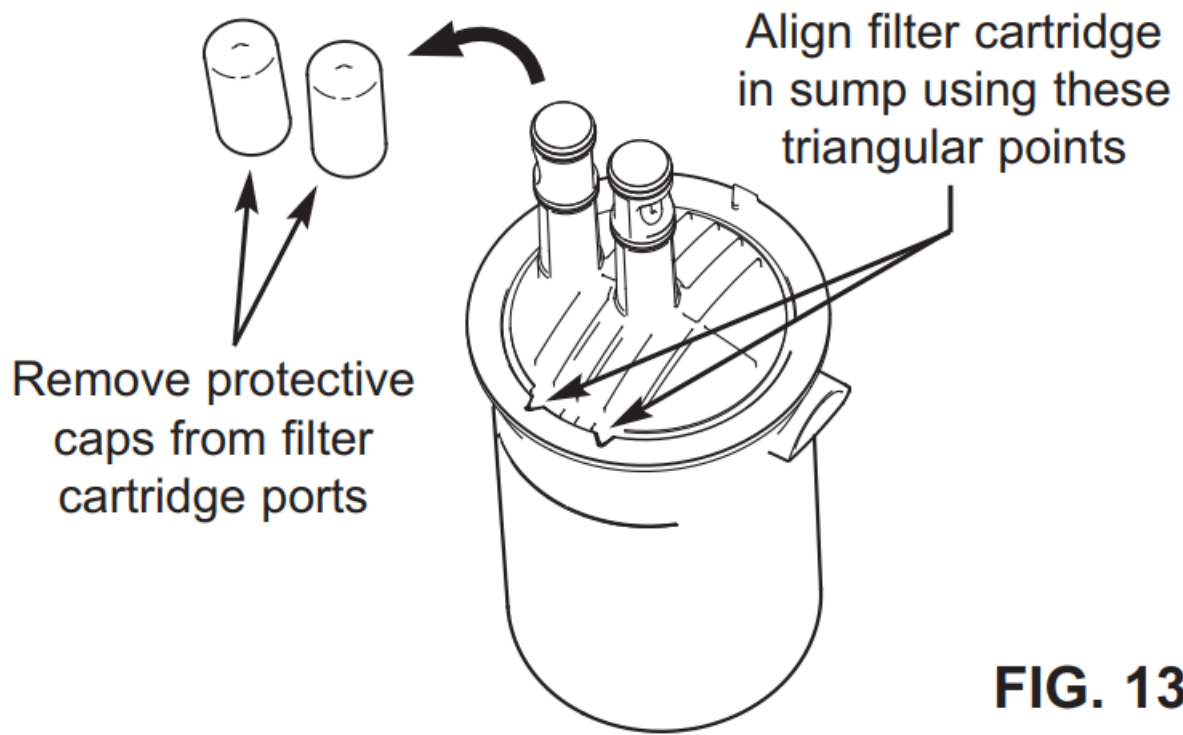


Filter cartridges can only be installed in one orientation, and are “keyed” to assure proper fit. Insert the new filter cartridge into the sump, and turn it until the triangular points on its top edge align with it, and drop it into the corresponding detents in the sump (see Fig. 13).

9. Slide the lid assembly down over the replacement cartridge’s ports until it sits flat on top of the sump, then lock the clamp onto the sump by pinching together the latches, as shown in Fig. 15, until they snap. The clamp will not snap unless the cartridge and sump are properly seated and aligned.

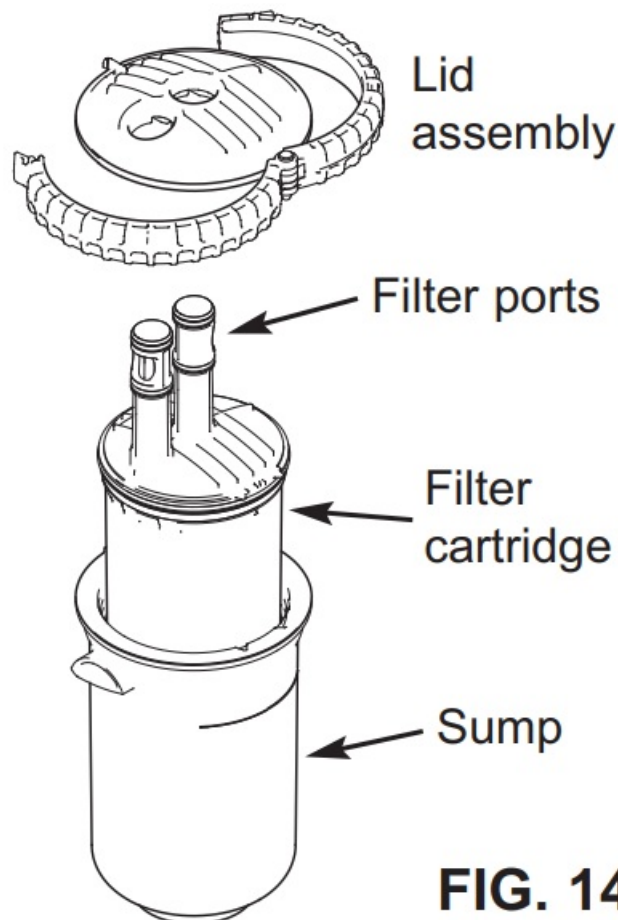


10. Insert the sump assembly into the head by guiding the filter ports into the corresponding receptacles in the head and pushing the sump upward until it stops (See Fig. 16).

Pinch latches  
together to snap

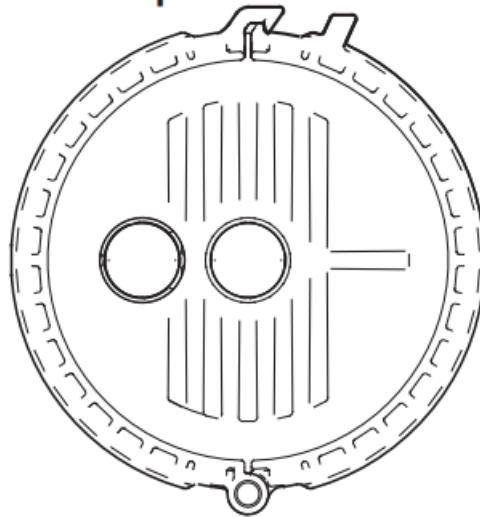

**FIG. 15**

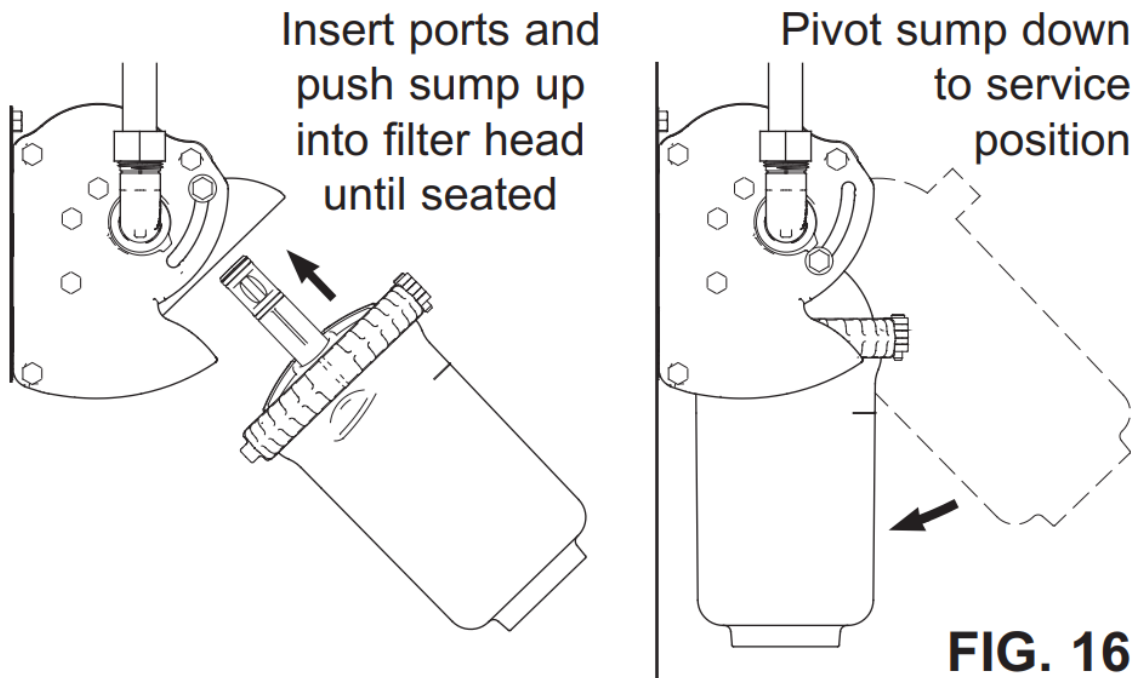

**FIG. 16**

11. Pivot the sump all the way down to the service position.
12. Some types of filter cartridges contain activated carbon, a black powder. Open a faucet downstream from the filter to purge air and fine carbon particles from the cartridge. Flush for at least 5 minutes.

## Troubleshooting the System

**Problem: The replacement Filter cartridge does not fit in the filter sump.**

Cause: Filter cartridge not properly oriented.

Correction: Reorient filter cartridge per Figure 13.

**Problem: The lid does not fit on the filter.**

Cause: Filter cartridge not properly oriented.

Correction: Reorient filter cartridge per Figure 13.

**Problem: The lid clamp cannot be latched.**

Cause: Filter cartridge not properly oriented.

Correction: Reorient filter cartridge per Figure 13.

**Problem: Water leaks from the adaptor at threads.**

Cause: Inadequate seal on threads.

Correction: Reinstall adaptor with adequate Teflon® tape or plastic compatible pipe sealant on threads.

**Problem: Water leaks from the adaptor at the o-rings.**

Cause: O-ring damaged.


Correction: Inspect and replace the o-ring if damaged.

**Problem: Water drips from the outlet side of the filter head, near the vent tube .**

Cause: Water flowing back through a vent hose. Correction: Make sure the vent hose is not elevated above the filter head.

Need help troubleshooting? Call Toll Free 1-800-218-6172 or visit [www.ecopurehome.com/brita](http://www.ecopurehome.com/brita)

## **Parts List**

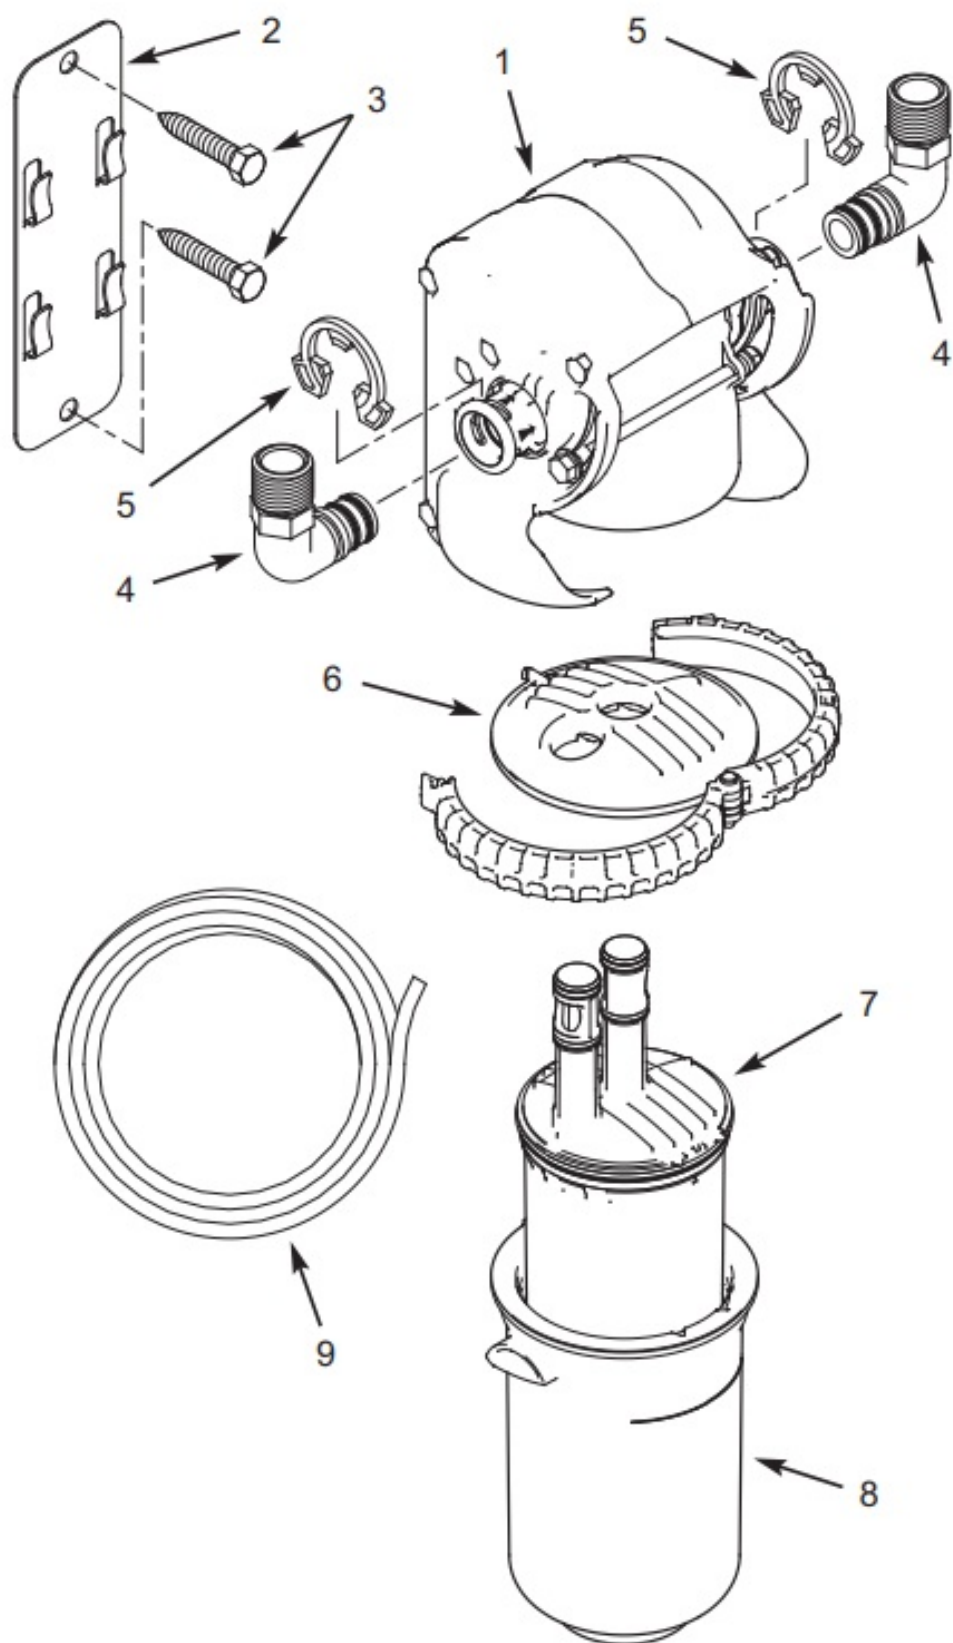

Key No.	Part No.	Description
1	1042-32-HF	Head Assembly
—	1042-32-HE	Mounting Kit (includes Key Nos. 2 & 3)
2	↑	Mounting Bracket
3	↑	Mounting Screw (2)
—	1042-32-HB	Adaptor Kit (includes Key Nos. 4 & 5)
4	↑	Installation Adaptor Elbow, 1" NPT, including o-rings (2)
5	↑	Clip (2)
6	1042-32-HD	Lid & Clamp Assembly
7	BRIEF	Reply. Filter Cartridge *
8	7383205	Sump
9	1042-32-47	Vent Tube, 6 ft. long
■	7379638	Owner's Manual

## EXTEND YOUR WARRANTY:

You can turn your water filtration system's two-year factory warranty into a lifetime warranty by registering the system at [warranty.ecopurehome.com/brita](http://warranty.ecopurehome.com/brita) and saving your receipts for purchases of Brita replacement filter cartridges. See "Lifetime Warranty" below for details.

### WARRANTY

#### MULTIPURPOSE WHOLE HOME WATER FILTRATION SYSTEM – MODEL BRWEFS (not including filter cartridges)

**Warrantor: Water Channel Partners, 1890 Woodlane Drive, Woodbury, MN 55125**

#### Two-Year Warranty:

Warrantor guarantees, to the original owner that the Multipurpose Whole Home Water Filtration System (BRIEFS), when installed and maintained in accordance with the instructions, will be free from defects in materials and workmanship for a period of two (2) years from the date of purchase.

#### Lifetime Warranty:

Warrantor guarantees, to the original owner only, that the Multipurpose Whole Home Water Filtration System (BRIEFS) will be free from defects in materials and workmanship for the lifetime of the owner, provided that:

- The system is installed and maintained in accordance with the instructions in the same home where it was originally installed.
- The owner replaces the filter every six (6) months and saves their receipts, for proof of purchase of the Brita BRWEFF filter cartridge, in case a warranty claim is made.

Purchase of no more than two (2) BRWEFF filter cartridges in a 12-month period may be applied toward compliance with this warranty.

Failure to adhere to the above requirements from the date of purchase voids the lifetime warranty.

If during such respective periods, a part proves, after inspection, to be defective, Warrantor will, at its sole option, either replace or repair the part without charge except for any installation fees. Labor to maintain the equipment is not part of the warranty. Filters and membranes are not covered by the warranty.

TO OBTAIN WARRANTY PARTS, SIMPLY CALL 1-800-218-6172 for assistance. This warranty applies only while



this product is in use in the United States.

### General Provisions

The above warranties are effectively provided the Multipurpose Whole Home Water Filtration System is operated at water pressures not exceeding 100 psi, and at water temperatures not exceeding 100°F; provided further that the Multipurpose Whole Home Water Filtration System is not subject to abuse, misuse, alteration, neglect, freezing, accident or negligence; and provided further that the Multipurpose Whole Home Water Filtration System is not damaged as the result of any unusual force of nature such as, but not limited to, flood, hurricane, tornado or earthquake. Warrantor is excused if failure to perform its warranty obligations is the result of strikes, government regulation, materials shortages, or other circumstances beyond its control.


THERE ARE NO WARRANTIES ON THE MULTIPURPOSE WHOLE HOME WATER FILTRATION SYSTEM BEYOND THOSE SPECIFICALLY DESCRIBED ABOVE. ALL IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR OF FITNESS FOR A PARTICULAR PURPOSE, ARE DISCLAIMED TO THE EXTENT THEY MIGHT EXTEND BEYOND THE ABOVE PERIODS. THE SOLE OBLIGATION OF THE WARRANTOR UNDER THESE WARRANTIES IS TO REPLACE OR REPAIR THE COMPONENT OR PART WHICH PROVES TO BE DEFECTIVE WITHIN THE SPECIFIED TIME PERIOD, AND THE WARRANTOR IS NOT LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES. NO WARRANTOR DEALER, AGENT, REPRESENTATIVE, OR OTHER PERSON IS AUTHORIZED TO EXTEND OR EXPAND THE WARRANTIES EXPRESSLY DESCRIBED ABOVE. Some states do not allow limitations on how long an implied warranty lasts or exclusions or limitations of incidental or consequential damage, so the limitations and exclusions in this warranty may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state. This warranty applies to consumer-owned installations only.



To order repair parts visit  
[www.ecopurehome.com/brita](http://www.ecopurehome.com/brita)

Manufactured by  
Water Channel Partners  
1890 Woodlane Drive  
Woodbury, MN 55125  
1-800-218-6172

## Documents / Resources

 The image shows the cover of the user manual for the Brita Total 360 BRWEFS Water Softener and Filtration System. It features the Brita logo, the product name, and a diagram of the unit.	<p><a href="#">BRITA TOTAL 360 BRWEFS Water Softener and Filtration System</a> [pdf] User Manual BRWEFS, Water Softener and Filtration System, Water Softener, Filtration System</p>
--	--

## References

-  [Brita Total 360 Registration & Warranty | EcoPureHome](#)
-  [Brita Total360 Resources | Product Registration & Manuals](#)