



# BroadLink BL5027-P, EL5027-P Combo Module User Manual


Home » BroadLink » BroadLink BL5027-P, EL5027-P Combo Module User Manual

#### **Contents**

- 1 BroadLink BL5027-P, EL5027-P Combo Module
- 2 Product Hooga Instructions
- 2 Product Usage Instructions
- 3 Features
- 4 Overview
- **5 Basic Specifications**
- **6 Radio Specifications**
- 7 Hardware Information
- 8 Reference Design
- 9 FCC Warning
- 10 Documents / Resources
- 10.1 References
- 11 Related Posts



BroadLink BL5027-P, EL5027-P Combo Module

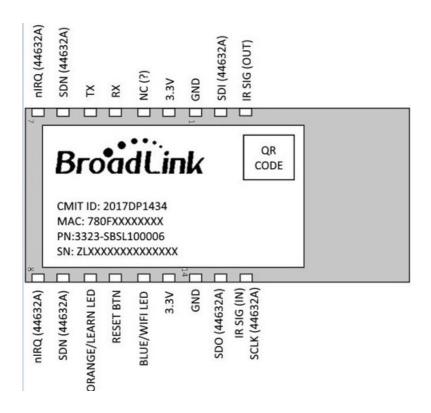

## **Specifications**

• Model: BL5027-P/EL5027-P

Antenna: PCB antennaWorking Voltage: DC 5.0V

Memory: 512KB SRAM/4MB pSRAM External 4MB FLASH

• Wireless Standards: IEEE 802.11 b/g/n

• Working Temperature: 0~85°C

# **Product Usage Instructions**

### Overview

The BL5027-P/EL5027-P is an embedded Wi-Fi module designed by BroadLink. It features a Cortex-M33+Cortex-M23 dual-core MCU with 512KB SRAM + 4MB pSRAM and 4MB external flash, operating at a power supply of 5V. This module is suitable for applications in smart home devices, remote monitoring devices, and medical care instruments.

### **Basic Specifications**

### **Power Consumption**

Please refer to the table below for power consumption data:

Specifications	Min.	Тур.	Max.	Units
----------------	------	------	------	-------

### **Working Environment**

Please refer to the table below for working environment data:

Symbol Description Min. Max.	Symbol
------------------------------	--------

### **Radio Specifications**

### **Basic Radio Specification**

Please refer to the table below for radio specifications:

Radio range	2.402 GHz – 2.480 GHz
-------------	-----------------------

#### **Radio Performance**

### IEEE802.11b

Please refer to the tables below for IEEE802.11b specifications.

Modulation Type Frequency range C	Channel Data rate
-----------------------------------	-------------------

## Frequently Asked Questions (FAQ)

• Q: What are some common applications of the BL5027-P/EL5027-P module?

A: Common applications include smart transportation, smart home/appliances, instruments, health care, industrial automation, intelligent security, and smart energy.

Q: What wireless standards does the module support?

A: The module supports IEEE 802.11 b/g/n standards.

## World's leading smart home solution provider

BL5027-P/EL5027-P Combo Module **Version:** 1.3 Release date: 27/9/2023

#### **Features**

- Cortex-M33+Cortex-M23 dual core
- 512KBSRAM/4MBpSRAM
- External 4MB FLASH
- Support XIP
- · Support AES, MD5 and SHA1
- Working voltage: DC 5.0V
- Support BLE5.0
- · Wi-Fi related features
- Support 802.11 b/g/n standard
- · Support station and soft AP
- Support SmartConfig and AP configuration
- Support WEP/WPA2
- · Support multiple cloud services.
- · Integrated balun/PA/LNA
- TCP/IP stack optimized for IoT application.
- · PCB antenna

- Peripherals:
- 1x UART
- Working temperature: 0~ 85 °C

# **Applications**

- · Smart transportation
- Smart home / appliances
- Instruments
- · Health care
- · Industrial automation
- · Intelligent security
- · Smart energy

#### Model

Model	Antenna	Note
BL5027-P	PCB antenna	Default
EL5027-P	PCB antenna	Default

### **Overview**

BL5027-P/EL5027-P is an embedded Wi-Fi module designed by BroadLink, highly integrated with Cortex-M33+Cortex-M23 dual core MCU with 512KB SRAM + 4MB pSRAM and 4MB external flash, with 5V power supply.

The module integrates radio transceiver, MAC, baseband, all Wi-Fi protocols, configurations, and network stack. It can be widely used in applications like smart home devices, remote monitoring devices and medical care instruments.

# **Basic Specifications**

## **Power Consumption**

Please refer to Table 1 for power consumption data.

### **Table 1 Power Consumption Data**

Specifications	Min.	Тур.	Max.	Units
VDD	4.5	5	5.5	V
VIL (input low voltage)	0		0.4	V
VIH (input high voltage)	4		VDD	V
VOL (output low voltage)	0		0.4	V
VOH (output high voltage)	VDD-0.4		VDD	V
Standby (RX)		45		mA
pulse current @TX 11b @17dBm 11Mbps		260		mA
pulse current @TX 11g @15dBm 54Mbps		250		mA
pulse current @TX		245		mA
11n @14.5dBm 65Mbps				

11n @14.5dBm 65Mbps		
pulse current @BLE		
@5.5dBm	125	

# **Working Environment**

Please refer to Table 2 for working environment data.

# **Table2 WorkingEnvironment Data**

Symbol	Description	Min.	Max.	Units
Ts	Storage temperature	-40	125	°C
TA	Ambient operating temperature	0	85	°C
Vdd	Supply voltage	4.5	5.5	V
Vio	Voltage on IO pin	0	5.5	V

# **Radio Specifications**

# **Basic Radio Specification**

Please refer to Table 3 for radio specification.

# **Table 3 Radio Specification**

Radio range	2.402 GHz – 2.480 GHz	
Vireless standards IEEE 802.11 b/g/n		
Dedie sykovk (soudyskius)	802.11b:15.5±1.5dBm@11Mbps	
	802.11g:14.5±1.5dBm@54Mbps	
Radio output (conductive)	802.11n:14.5±1.5dBm@MCS7/HT20	
	BLE: 2.5±2.5dBm	
Antonna typo	Internal: PCB antenna	
Antenna type	External: Not supported	
Receiving sensitivity	802.11b≦-90dBm@11Mbps	

	802.11g≦-76dBm@54Mbps
	802.11n/HT20≦-73dBm@MCS7
	BLE ≦- 97dBm
Stack	IPv4, TCP/UDP/FTP/HTTP/HTTPS/TLS/mDNS
Data rate (max)	11M@802.11b, 54M@802.11g, MCS7@802.11n
	Encryption standard: Open/WEP-Open/WPA/WPA2
Security	Encryption algorithm: WEP64/WEP128/TKIP/AES
Network types	STA/AP

# **Radio Performance**

# IEEE802.11b

# Table 4 Basic specifications under IEEE802.11b

ITEM	Specification
Modulation Type	DSSS / CCK
Frequency range	2412MHz~2462MHz
Channel	CH1 to CH11
Data rate	1, 2, 5.5, 11Mbps

# Table 5 Transmitting performance under IEEE802.11b

TX Characteristics	Min.	Typical	Max.	Unit	
Power@11Mbps		17		dBm	
Frequency Error	-15		+15	ppm	
EVM@11Mbps			-14	dB	
Transmit spectrum mask					
Pass					

# Table 6 Receiving performance under IEEE802.11b

RX Characteristics	Min.	Typical	Max.	Unit
11Mbps Input Level Sensitivity				
Minimum Input Level (FER≦ 8%)			-90	dBm

# IEEE 802.11g

# Table 7 Basic specifications under IEEE802.11g

ITEM	Specification
Modulation Type	OFDM
Frequency range	2412MHz~2462MHz
Channel	CH1 to CH11
Data rate	6, 9, 12, 18, 24, 36, 48, 54Mbps

# Table 8 Transmitting performance under IEEE802.11g

TX Characteristics	Min.	Typical	Max.	Unit
Power@54Mbps		16		dBm
Frequency Error	-15		+15	ppm
EVM@54Mbps			-30	dB
Transmit spectrum mask				
Pass				

# Table 9 Receiving performance under IEEE802.11g

RX Characteristics Min.		Typical	Max.	Unit
54Mbps Input Level Sensitivity				
Minimum Input Level (FER≦10%)			-76	dBm

### IEEE802.11n

IEEE802.11n 20MHz bandwidth mode

# Table 10 Basic specifications under IEEE802.11n with 20MHz

ITEM	Specification
Modulation Type	OFDM
Frequency range	2412MHz~2462MHz
Channel	CH1 to CH11
Data rate	MCS0/1/2/3/4/5/6/7

# Table 11 Transmitting performance under IEEE802.11n with 20MHz

TX Characteristics	Min.	Typical	Max.	Unit
Power@HT20, MCS7		16		dBm
Frequency Error	-15		+15	ppm
EVM@HT20, MCS7			-30	dB
Transmit spectrum mask				
Pass				

# Table 12 Receiving performance under IEEE802.11n with 20MHz

RX Characteristics Min.		Typical	Max.	Unit
MCS7 Input Level Sensitivity				
Minimum Input Level (FER≦10%)			-73	dBm

# **Hardware Information**

# **PIN Sequence**

Please refer to Fig 1 for the pin sequence.

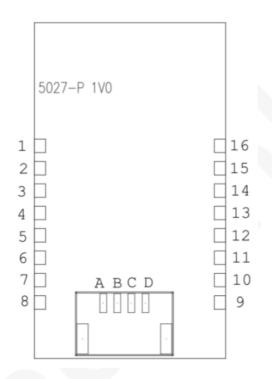


Fig 1 Pin Sequence (TOP VIEW)

# **PIN Definitions**

Please refertoTable 13 forpin definitions.

Pin	Definitions	Note
A	UART_TX_5V	Module UART TX; 5V level
В	UART_RX_5V	Module UART RX; 5V level
С	VDD5	5V VCC
D	GND	
1	PA13	LP_UART_RX

2	PA19	HS_UART_RX
3	PA18	HS_UART_TX
4	NC	
5	VDD33	3.3V VCC
6	GND	
		HW reset,
7	RST	
		LV effective
8	NC	
9	PB31	GPIO
10	PA0	GPIO
11	PA4	GPIO
12	PA2	GPIO
13	NC	
14	PA8	UART_RX_LOG
15	PA7	UART_TX_LOG
16	PA12	LP_UART_TX

Table 13 BL5027-P pin definitions

## Note

- 1. Pin1~Pin16 can be used if the module is modified on hardware for 3.3V input.
- 2. LP\_UART; HS\_UART and UART\_LOG only support 3.3V level.
- 3. UART\_TX\_5V, UART\_TX\_5V is used for communication with external MCU powered by 5V.Please refer to the description 1.1.3.DC Characteristics for UART output current level.
- 4. DO NOT add current-limiting resistor in the circuit of UART\_TX\_5V and UART\_RX\_5V to avoid abnormal communication due to abnormal level conversion on chipset.
- 5. Pulling down PA7 will switch the module to firmware programming mode.

## Recommendations

The following precautions should be considered during PCB designing:

It is recommended to not place any electrical components within 10mm range of module antenna and not design any circuit or bond copper on main board under this area.

Do not use the module inside any metal caseo rcontainers with metal painting.

#### **Mechanical Dimensions**

Please refer to Fig 3 for the dimensions of module.


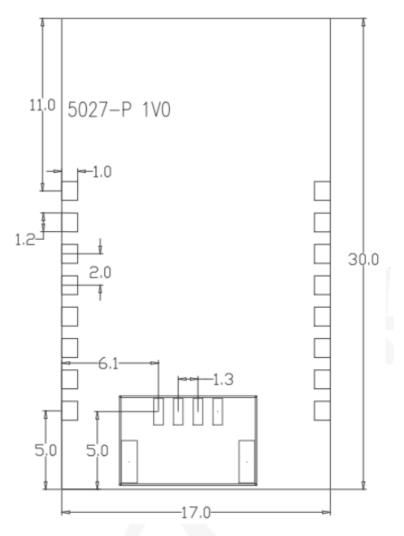


Fig 3 Module Dimensions

Note: Dimensions (17±0.2) mm \* (30±0.2) mm \* () mm (with shielding case)

# 4.5. Connector Dimensions

Please refer to Fig 4 for the dimensions of connector

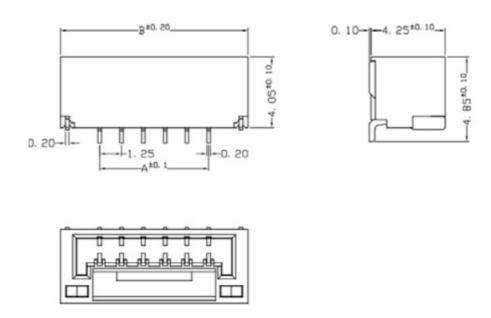

- 1. Certified for SRRC standard
- 2. Compliant with requirement of RoHS 2.0.
- 3. Compliant with requirement of REACH.

#### Label

## To be updated

Fig 5 label content Please refer to Fig 8 for the content description on label. Model: \*\*\*\*\*\*\*: Module model SN: Serial Number, module unique MAC address NOTE: Label for reference and may vary from actual spec.

### **Mechanical Dimensions**

Please refer to Fig 6 for the dimensions of shielding case.

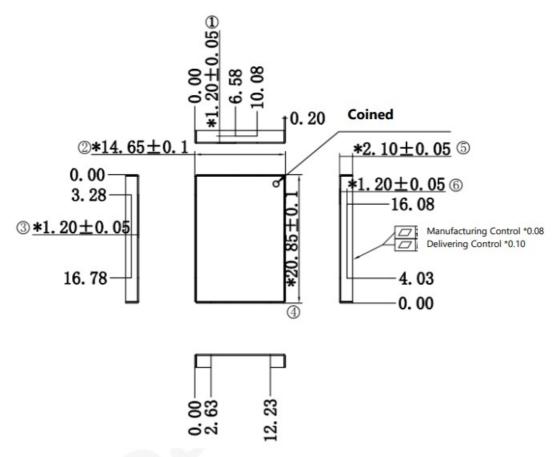


Fig 6 BL5027-P Dimensions of shielding case


(Unit: mm)

## **Packaging**

Electrostatic bag + honeycomb pallet box

# **Reference Design**

## **UART Interface Design**

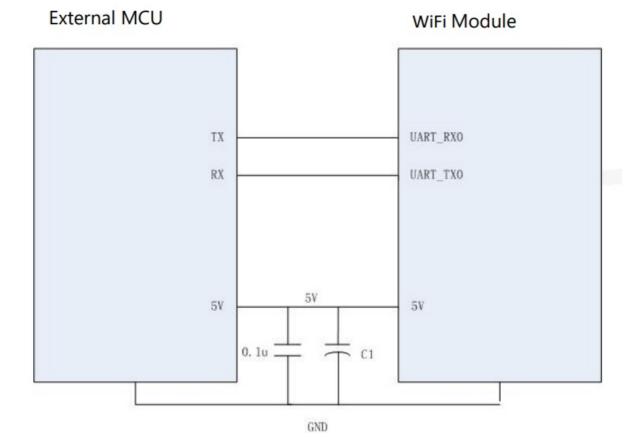

For devices with 5V power supply, you can directly connect the device UART port with module UART port according to the illustration.

DO NOT add current-limiting resistor in the circuit of UART\_TX\_5V and UART\_RX\_5V to avoid abnormal communication due to abnormal level conversion on chipset.

#### **Power Supply Requirement**

Please ensure that the power supply can provide a sufficiently large current. During the DPD phase, the module will experience consecutive pulses with a duration of approximately 50us. It is recommended that the power supply be capable of providing a pulse current of at least 600mA. During the normal operation of the module inthedata transmission phase, the power supply should be able to sustain a current of at least 400mA. You can change the spec of capacitor at C1 according to actual hardware design to fit the needs for ripple control (recommended to apply capacitance higher than 22uF)

## List of applicable FCC rules

### FCC Part 15.247

Label and compliance information

FCC ID label on the final system must be labeled with "Contains FCC ID:

2ATEV-BL5027-P" or "Contains transmitter module FCC ID: 2ATEV-BL5027-P".

## Information on test modes and additional testing requirements

Contact Hangzhou BroadLink Technology Co., Ltd will provide stand-alone modular transmitter test mode. Additional testing and certification may be necessary when multiple modules are used in a host.

## Additional testing, Part 15 Subpart B disclaimer

To ensure compliance with all non-transmitter functions the host manufacturer is responsible for ensuring compliance with the module(s) installed and fully operational. For example, if a host was previously authorized as an unintentional radiator under the Supplier's Declaration of Conformity procedure without a transmitter certified module and a module is added, the host manufacturer is responsible for ensuring that the after the module is installed and operational the host continues to be compliant with the Part 15B unintentional radiator requirements. Since this may depend on the details of how the module is integrated with the host, Hangzhou BroadLink

Technology Co., Ltd. shall provide guidance to the host manufacturer for compliance with the Part 15B requirements.

## **FCC Warning**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

**NOTE** 1: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### **FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance.

**Note** 1: This module certified that complies with RF exposure requirement under mobile or fixed condition, this module is to be installed only in mobile or fixed applications.

A mobile device is defined as a transmitting device designed to be used in other than fixed locations and to generally be used in such a way that a separation distance of at least 20 centimeters is normally maintained between the transmitter's radiating structure(s) and the body of the user or nearby persons. Transmitting devices designed to be used by consumers or workers that can be easily re-located, such as wireless devices associated with a personal computer, are considered to be mobile devices if they meet the 20 centimeter separation requirement.

A fixed device is defined as a device is physically secured at one location and is not able to be easily moved to another location.

**Note** 2: Any modifications made to the module will void the Grant of Certification, this module is limited to OEM installation only and must not be sold to end-users, end-user has no manual instructions to remove or install the device, only software or operating procedure shall be placed in the end-user operating manual of final products.

**Note** 3: The module may be operated only with the antenna with which it is authorized. Any antenna that is of the same type and of equal or less directional gain as an antenna that is authorized with the intentional radiator may be marketed with, and used with, that intentional radiator.

**Note** 4: For all products market in US, OEM has to limit the operation channels in CH1 to CH11 for 2.4G band by supplied firmware programming tool. OEM shall not supply any tool or info to the end-user regarding to Regulatory Domain change.

## **IC WARNING**

This device contains licence-exempt transmitter(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- 1. This device may not cause interference.
- 2. This device must accept any interference, including interference that may cause undesired operation of the device.

### **IC Radiation Exposure Statement:**

This device and its antenna(s) must not be co-located with any other transmitters except in accordance with IC multi-transmitter product procedures. Referring to the multi-transmitter policy, multiple-transmitter(s) and module(s) can be operated simultaneously without reassessment permissive change.

This module is limited to OEM installation only and must not be sold to end-users, end-user has no manual instructions to remove or install the device, only software or operating procedure shall be placed in the end-user operating manual of final products. Additional testing and certification may be necessary when multiple modules are used.

Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this equipment.

The final end product must be labeled in a visible area with the following "Contains IC: 25062-BL5027P ".

## **Revision History**

Date	Version	Updated Content
6/26/2023	1.0	Preliminary version
6/30/2023	1.1	Updated the value of VIH and added important notice for using 5V UART
7/4/2023	1.2	Updated the value of VIH, changed the power supply requirement, added the current consumption when sending BLE packets, added size of shielding case and added support of XIP
27/9/2023	1.3	Add instructions for entering download mode

### Copyrights

It is prohibited to use or copy all or any part of contents in this manual without prior permission, especially applicable for trademarks, models, part numbers and figures.



### **Contact Us**

Hangzhou BroadLink Technology Co., Ltd.

Add: Building C, 57 Jiang'er Road, Binjiang District, Hangzhou, P.R.China

Postcode: 310052

Tel: +86-571-85071744-8010

Email: bingqi.zhou@broadlink.com.cn

For more information of BroadLink Wi-Fi modules, please visit our website: www.broadlink.com.cn

### **Documents / Resources**



BroadLink BL5027-P, EL5027-P Combo Module [pdf] User Manual BL5027-P, EL5027-P, BL5027-P EL5027-P Combo Module, BL5027-P EL5027-P, Combo Module, Module

### References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.