



CARSON AM-20 Attach-A-Mag Flexible Clamp-On LED Lighted Magnifier Instructions

[Home](#) » [Carson](#) » CARSON AM-20 Attach-A-Mag Flexible Clamp-On LED Lighted Magnifier Instructions 

Contents

- [1 CARSON AM-20 Attach-A-Mag Flexible Clamp-On LED Lighted Magnifier](#)
- [2 PRODUCT SPECIFICATION](#)
- [3 PRODUCT USING THE MAGNIFIER](#)
- [4 PRODUCT REPLACING BATTERIES](#)
- [5 PRODUCT CARE](#)
- [6 PRODUCT Customer Service](#)
- [7 Product Warranty Information](#)
- [8 PRODUCT SPECIFICATION](#)
- [9 USING THE MAGNIFIER](#)
- [10 REPLACING BATTERIES](#)
- [11 CARE](#)
- [12 Customer Service](#)
- [13 warranty](#)
- [14 Documents / Resources](#)
 - [14.1 References](#)
- [15 Related Posts](#)

CARSON[®]

CARSON AM-20 Attach-A-Mag Flexible Clamp-On LED Lighted Magnifier



Congratulations on selecting your new Carson LED Lighted Magnifier! In order to achieve optimum performance, please follow instructions for proper use and care.

PRODUCT SPECIFICATION

- **Magnification:** 2x
- **Lens Diameter:** 90mm (3.5 inches)
- **Weight:** 0.36 lbs
- **Dimensions:** 4.3 in x 3.0 in x 12.0 in
- **Batteries:** 3 G12 Batteries (included)
- **Model Number:** AM-20

PRODUCT USING THE MAGNIFIER

1. Remove battery tab to activate batteries.
2. Slide switch to turn light ON/OFF.
3. Bend and twist flexible arm as needed.
4. Depending on your vision, you may need to move the magnifier closer or further away until focused.

PRODUCT REPLACING BATTERIES

1. Hold the outer rim of the magnifying lens with one hand. With the other hand, pull battery compartment to remove from magnifier.
2. Use a Phillips #0 screwdriver to remove safety screw from battery door.
3. Insert three new G12 button cell batteries according to polarity indicators marked on battery door.
4. Reattach battery door and safety screw. Return battery compartment to magnifier.

Battery Warning: Mixing old and new, different brands or types within brands may cause batteries to leak, overheat or explode. Keep away from fire or excessive heat. Inspect batteries for corrosion or leakage. Insert in direction indicated. Discard button cell batteries carefully. Keep button cell batteries away from children.

PRODUCT CARE

- Clean using a microfiber lens cloth. Do not use any abrasives, chemical cleaners, or solvents.

PRODUCT Customer Service

If you experience any difficulties, please contact us and we will be happy to help you.

- info@carson.com
- uksupport@carson.com
- eusupport@carson.com

Product Warranty Information

- Visit www.carson.com/warranty for more information.

Contact Information:


- Carson Optical
- 2070 5th Avenue,
- Ronkonkoma, NY 11779
- **Tel:** 631-963-5000

Congratulations on selecting your new Carson LED Lighted Magnifier! In order to achieve optimum performance, please follow instructions for proper use and care.

PRODUCT SPECIFICATION


Magnification:	2x	Dimensions:	4.3 in x 3.0 in x 12.0 in
Lens Diameter:	90mm (3.5")	Batteries:	3 G12 Batteries (included)
Weight:	0.36 lbs		

USING THE MAGNIFIER

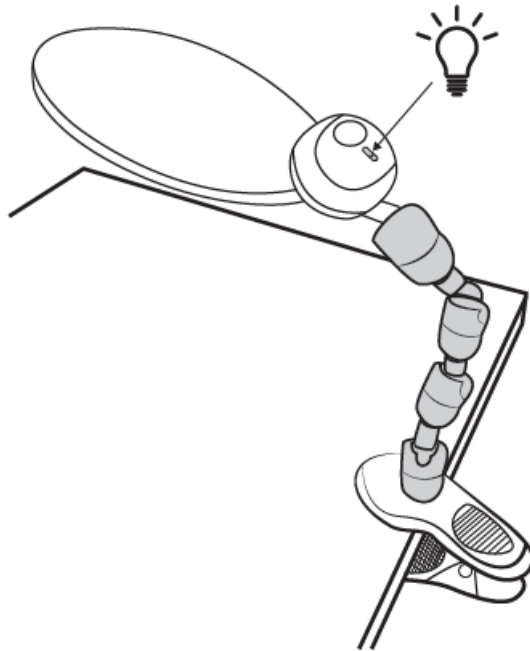


1. Remove battery tab to activate batteries. Then slide switch to turn light ON/OFF.
2. Squeeze to open base clamp. Clamp onto table edge. Maximum width of base clamp is 1¼”.
3. Bend and twist flexible arm as needed. Depending on your vision, you may need to move the magnifier closer or further away until focused.

REPLACING BATTERIES

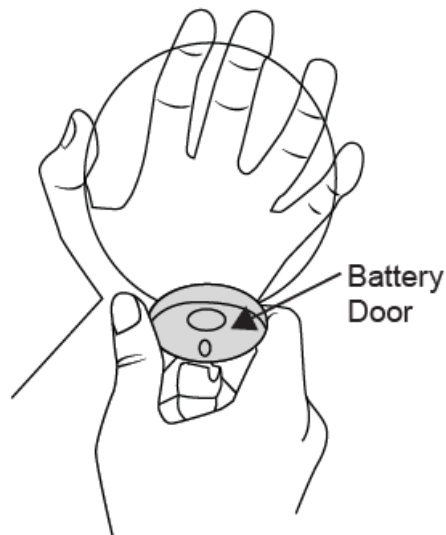

1. Hold the outer rim of the magnifying lens with one hand. With the other hand, pull battery compartment to remove from magnifier.

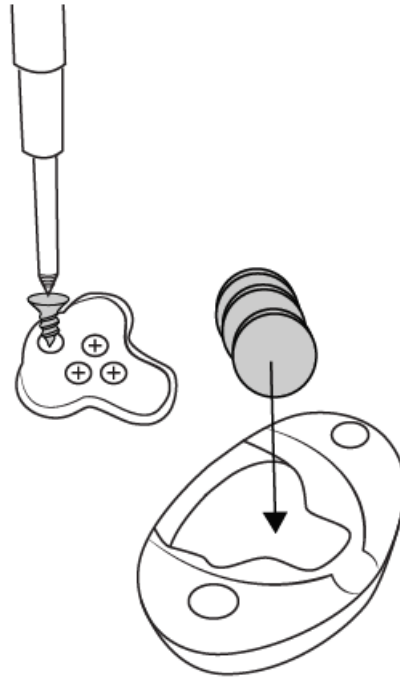

2. Use a Phillips #0 screwdriver to remove safety screw from battery door. Insert three new G12 button cell batteries according to polarity indicators marked on battery door. Reattach battery door and safety screw. Return battery compartment to magnifier.

BATTERY WARNING

Mixing old and new, different brands or types within brands may cause batteries to leak, overheat or explode. Keep away from fire or excessive heat. Inspect batteries for corrosion or leakage. Insert in direction indicated. Discard button cell batteries carefully. Keep button cell batteries away from children.

CARE

- Clean using a microfiber lens cloth. Do not use any abrasives, chemical cleaners, or solvents.

Customer Service

If you experience any difficulties, please contact us and we will be happy to help you.


- info@carson.com
- uksupport@carson.com
- eusupport@carson.com

warranty

1. For warranty information, visit: www.carson.com/warranty

- www.carson.com
- **Address:** Carson Optical 2070 5th Avenue, Ronkonkoma, NY 11779
- **Tel:** 631-963-5000

Documents / Resources

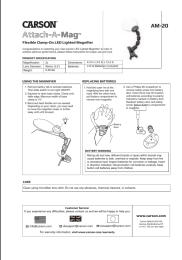	<p>CARSON AM-20 Attach-A-Mag Flexible Clamp-On LED Lighted Magnifier [pdf] Instructions AM-20 Attach-A-Mag Flexible Clamp-On LED Lighted Magnifier, AM-20, Attach-A-Mag Flexible Clamp-On LED Lighted Magnifier, Flexible Clamp-On LED Lighted Magnifier, Clamp-On LED Li ghted Magnifier, LED Lighted Magnifier, Lighted Magnifier, Magnifier</p>
---	--

References

-  [Carson Optical](#)

Manuals+.