



CARSON HM-30 Hands-Free LED Magnifier Set Instruction Manual

[Home](#) » [Carson](#) » CARSON HM-30 Hands-Free LED Magnifier Set Instruction Manual 

Contents

- [1 CARSON HM-30 Hands-Free LED Magnifier Set](#)
- [2 Instructions for Use](#)
- [3 Using with stand](#)
- [4 Inserting Lenses](#)
- [5 Adjusting Lens Angle](#)
- [6 For Use as Book Light](#)
- [7 For Use with Neck Strap](#)
- [8 Cleaning Your Magnifier](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)

CARSON®

CARSON HM-30 Hands-Free LED Magnifier Set



Instructions for Use

Installing the Batteries

Pull open battery door and remove. Insert 3 AAA batteries according to the polarity indicators marked on the inside of battery compartment. Replace battery cover when complete.

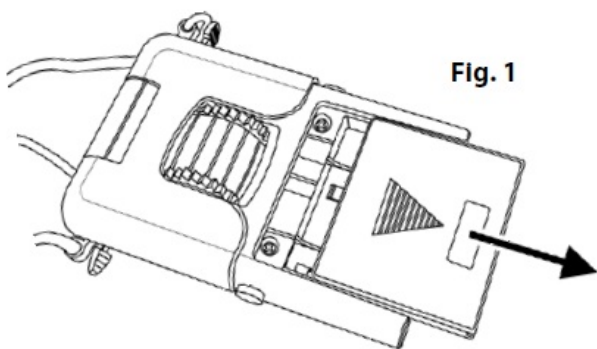


Fig. 1

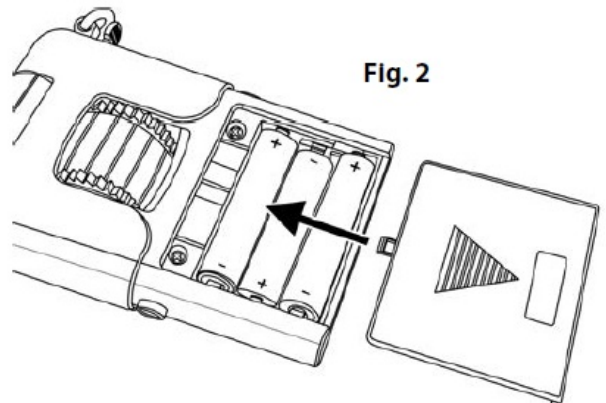



Fig. 2

WARNING: INSPECT ALL BATTERIES FOR SIGNS OF CORROSION OR LEAKAGE. DO NOT EXPOSE TO FIRE OR EXCESSIVE HEAT. USE ALKALINE BATTERIES ONLY, RECHARGEABLE BATTERIES NOT RECOMMENDED. INSERT ALL BATTERIES IN THE DIRECTION INDICATED.

Using with stand

Insert body into base stand as shown in Figure 3. Body will click into base when inserted correctly (see Fig. 4).

Fig.

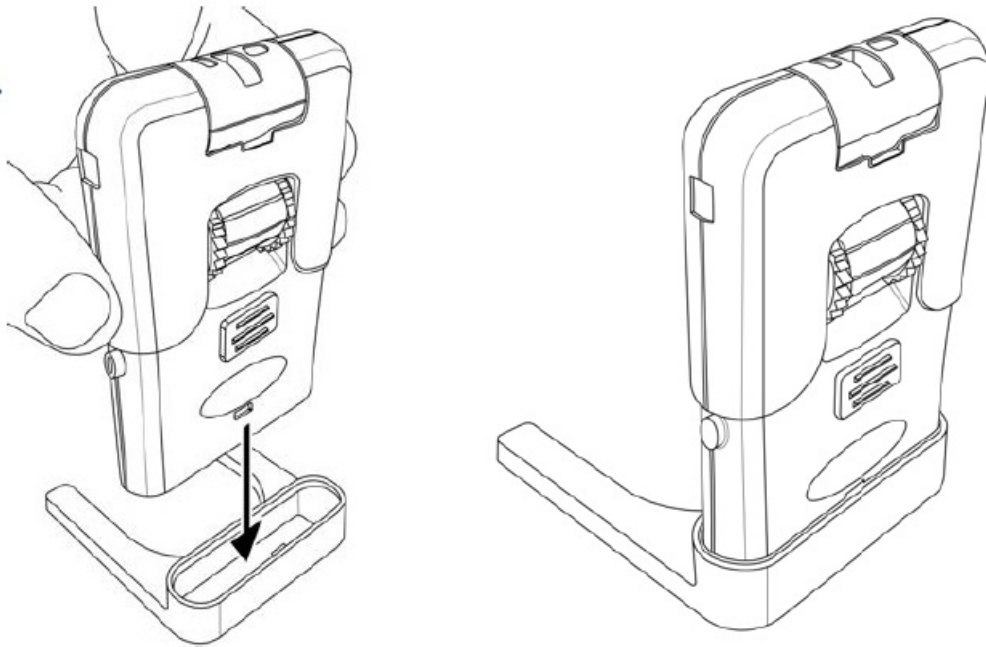

Inserting Lenses

Choose desired lens and insert into body as shown in Figure 5. Adapter will click when lens is inserted securely (Fig 6).

Fig. 5


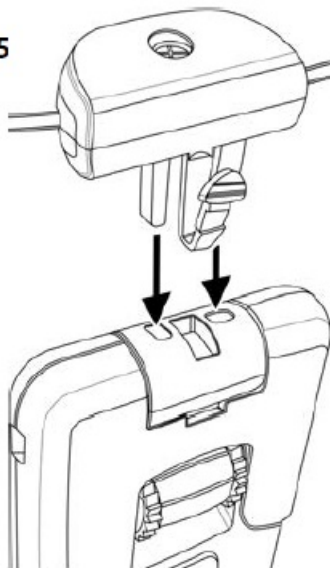


Fig. 6

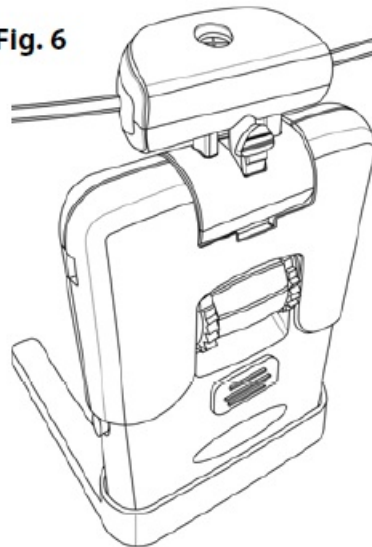

Adjusting Lens Angle

Pull lens up or down to position at desired angle. Lens will click into place in various positions (Fig. 7-9).

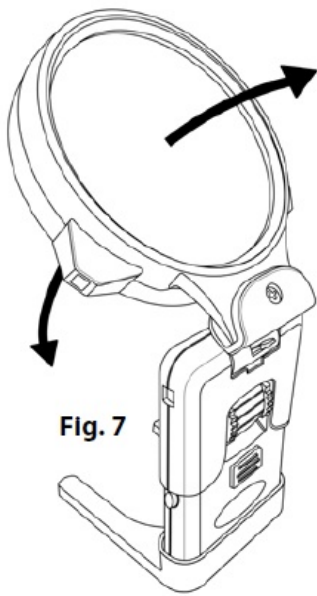


Fig. 7

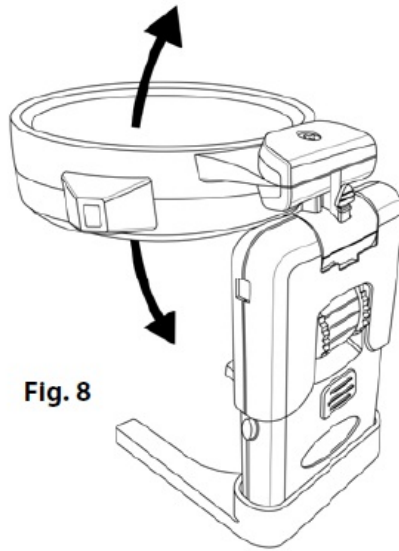


Fig. 8

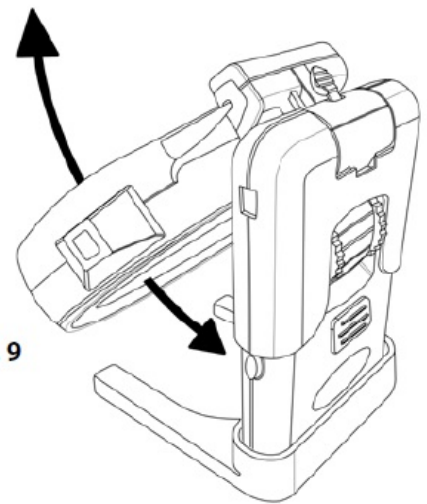


Fig. 9

Activating LED Light

Slide switch upward to turn on light (Fig. 10). Rotate light compartment to direct light toward desired viewing subject (Fig. 11). Turn light off when not in use.

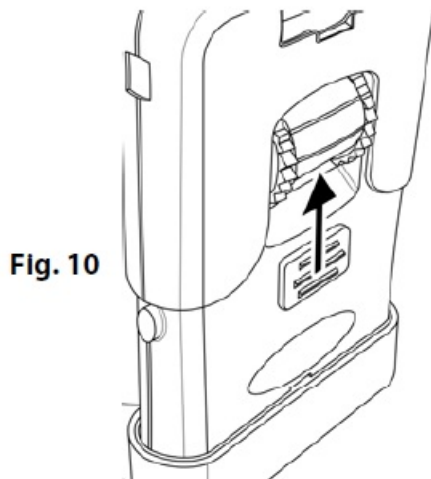


Fig. 10

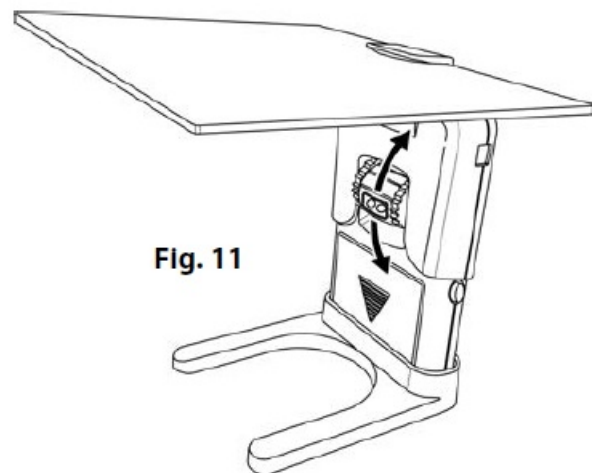


Fig. 11

For Use as Book Light

Press buttons on side of base and pull off lens adapter (Fig. 12-13). Rotate light compartment to direct light toward desired viewing subject (Fig. 14). Turn light off when not in use.

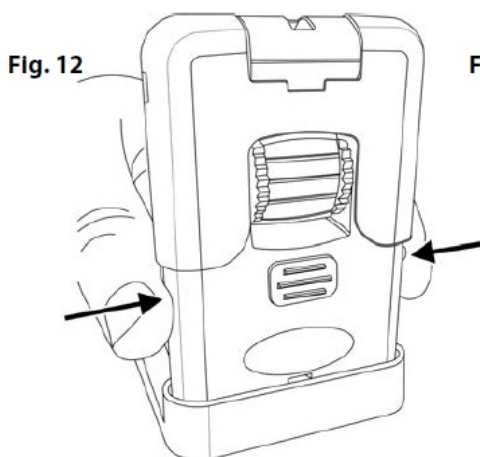


Fig. 12

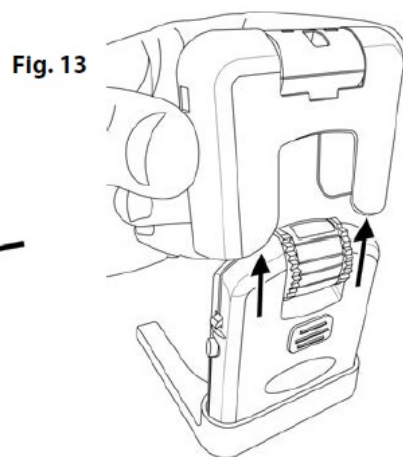


Fig. 13



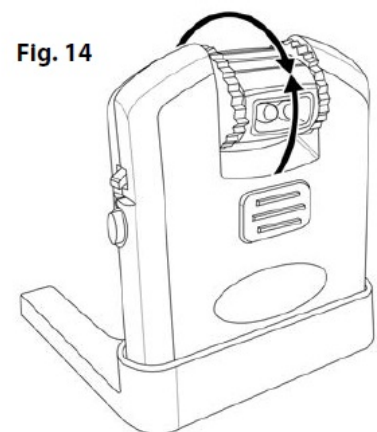




Fig. 14

For Use with Neck Strap



Remove base stand from body (Fig. 15). Insert desired lens (Fig. 16).

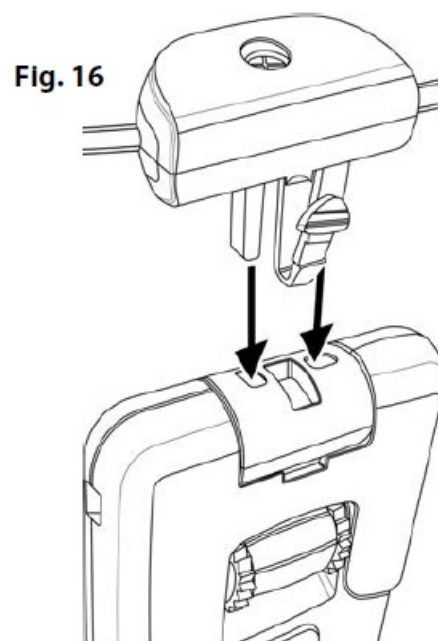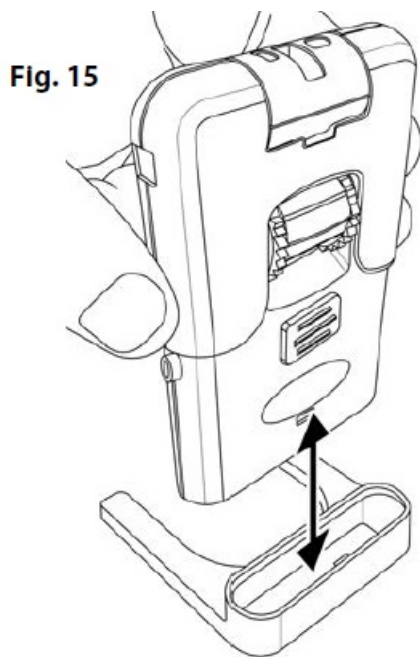

If using rimless or rectangular lens, squeeze and insert neck strap clips into holes on sides of body (Fig. 17-18).

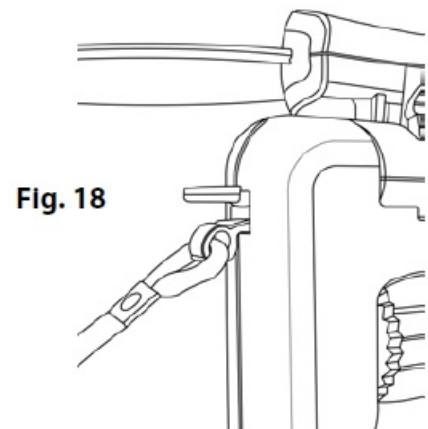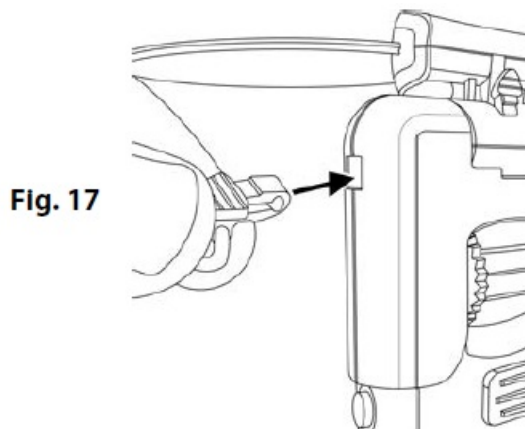

If using dual 3.5x lens, insert neck strap clips into holes on side of lens housing (Fig. 19-20).

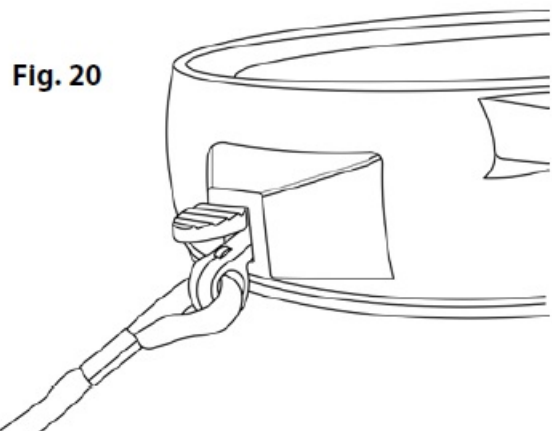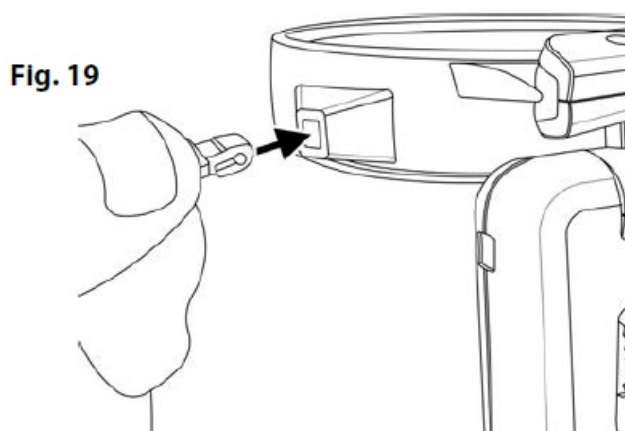

Adjust strap length as desired and place around neck resting body of magnifier on chest as shown in Figure 21-22. Adjust angle of light as needed.

Fig. 21


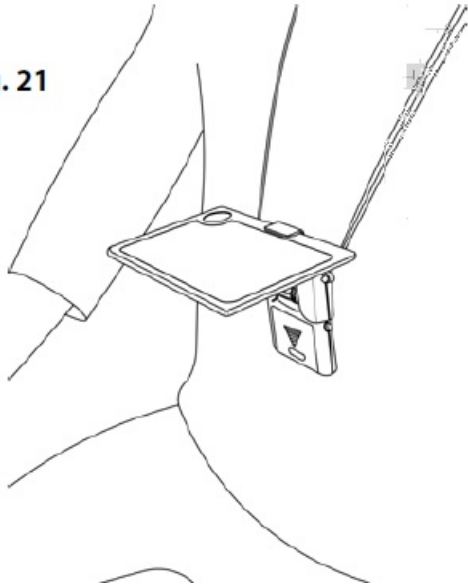


Fig. 22

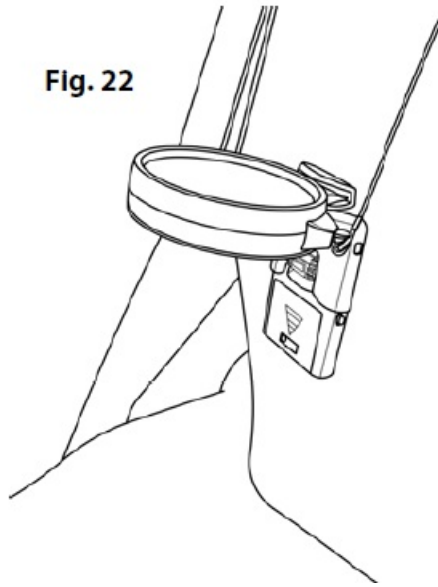

Cleaning Your Magnifier

Clean lens with a soft, clean microfiber cloth by rubbing gently in a circular motion. Moisten the lens cloth with water if necessary. Do not use harsh chemicals, solvents or abrasives as they may damage the lens.

FIRE HAZARD: KEEP MAGNIFIER AWAY FROM DIRECT SUNLIGHT TO PREVENT ACCIDENTAL FIRE.

Customer Service

If you experience any difficulties, please contact us and we will be happy to help you.

- **In the U.S.A.**

Phone: 1-631-963-5000

Email: info@carson.com

- **In the U.K.**

Phone: +44 (0) 1938 557440

Email: uksupport@carson.com


- **In the E.U.**

Phone: +44 (0) 1938 557440

Email: eusupport@carson.com

For warranty information, visit www.carson.com/warranty

Documents / Resources

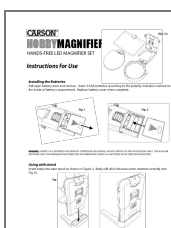

[CARSON HM-30 Hands-Free LED Magnifier Set](#) [pdf] Instruction Manual
HM-30 Hands-Free LED Magnifier Set, HM-30, Hands-Free LED Magnifier Set

