



DIGILENT PmodCMPS Input Pmods Sensors Owner's Manual

[Home](#) » [DIGILENT](#) » DIGILENT PmodCMPS Input Pmods Sensors Owner's Manual 

DIGILENT PmodCMPS Input Pmods Sensors Owner's Manual




Contents

- [1 Overview](#)
- [2 Functional Description](#)
- [3 Interfacing with the Pmod](#)
 - [3.1 Pinout Description Table](#)
- [4 Physical Dimensions](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

Overview

The Digilent PmodCMPS features the popular **Honeywell HMC5883L** 3-axis digital compass and can add compass heading readings to any Digilent host board with an I²C interface.

The PmodCMPS.

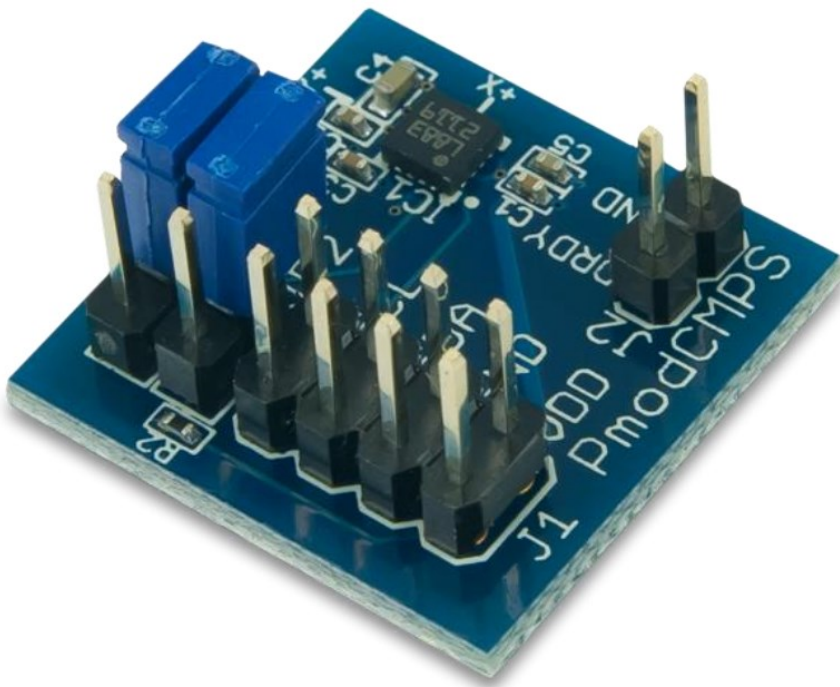

Features include:

- 3-axis digital compass
- 2 milli-gauss Field Resolution in ± 8 gauss fields
- 160 Hz maximum data output rate
- Optional pull-up resistors for SCL and SDA pins
- Small PCB size for flexible designs 0.8" \times 0.8" (2.0 cm \times 2.0 cm)
- 2 \times 4-pin connector with I²C interface
- Follows **Digilent Pmod Interface Specification**
- Library and example code available in **resource center**

Functional Description

The PmodCMPS utilizes Honeywell's HMC5883L with Anisotropic Magnetoresistive (AMR) technology. In plain English, this means that the three sensors (one for each coordinate direction) have very little interference with each other so that accurate data can be retrieved from the Pmod.

Interfacing with the Pmod

The Pmod CMPS communicates with the host board via the I²C protocol. Jumpers JP1 and JP2 provide optional 2.2k Ω pull-up resistors to use for the Serial Data and Serial Clock lines. The 7-bit address for this on-board chip is 0x1E, making the 8-bit address for a read command 0x3D and 0x3C for a write command.

By default, the PmodCMPS starts out in Single Measurement mode so that the compass takes a single measurement, sets the Data Ready pin high, and then places itself into Idle Mode. While in Idle Mode, major sources of power consumption are (not surprisingly) disabled, such as the internal ADC which collects the voltage measurements. However, you can still access all of the registers with their most recent data value through the I²C bus. To change the PmodCMPS from idle mode back into Single Measurement or Continuous Measurement

mode, the user must write to the Mode Register (0x02).

When reading data from the Pmod CMPS, all six data registers, corresponding to the upper and lower bytes of each Cartesian coordinate direction, must be read. Since the internal register address pointer automatically increments after a register has been successfully read, it is possible to read from all six registers with a single command. An example how this might look is given below:

Table 1. Command and address bytes.

Command byte									Address byte								
0	0	1	1	1	1	0	1	(ACK)	0	0	0	0	0	0	1	1	(ACK)
MSB X									LSB X								
SX	SX	SX	SX	sb	MSB	b9	b8	(ACK)	b7	b6	b5	b4	b3	b2	b1	b0	(ACK)
MSB Z									LSB Z								
SX	SX	SX	SX	sb	MSB	b9	b8	(ACK)	b7	b6	b5	b4	b3	b2	b1	b0	(ACK)
MSB Y									LSB Y								
SX	SX	SX	SX	sb	MSB	b9	b8	(ACK)	b7	b6	b5	b4	b3	b2	b1	b0	(STOP)

Note: SX stands for a sign extension of the sign bit (sb).

Pinout Description Table

Table 1. Connector J1: Pin descriptions as labeled on the Pmod.

Header J1		
Pins	Signal	Description
1 & 5	SCL	Serial Clock
2 & 6	SDA	Serial Data
3 & 7	GND	Power Supply Ground
4 & 8	VCC	Power Supply (3.3V)

Header J2		
Pin	Signal	Description
1	DRDY	Data Ready
2	GND	Power Supply Ground
Jumper JP1		
Loaded State		SDA line uses a 2.2kΩ pull-up resistor
Jumper JP2		
Loaded State		SCL line uses a 2.2kΩ pull-up resistor

The Pmod **CMPS** also offers a self test mode to help calibrate any data that is being received from the module.

Any external power applied to the PmodCMPS must be within 2.16V and 3.6V; therefore, when using Pmod headers on Digilent system boards, the supply voltage must be at 3.3V.

Physical Dimensions

The pins on the pin header are spaced 100 mil apart. The PCB is 0.8 inches long on the sides parallel to the pins on the pin header and 0.8 inches long on the sides perpendicular to the pin header.

Copyright Digilent, Inc.


Other product and company names mentioned may be trademarks of their respective owners.

Downloaded from [Arrow.com](https://www.arrow.com).

1300 Henley Court
Pullman, WA 99163
509.334.6306
www.digilentinc.com



Documents / Resources

	<p>DIGILENT PmodCMPS Input Pmods Sensors [pdf] Owner's Manual PmodCMPS Input Pmods Sensors, PmodCMPS, Input Pmods Sensors, Pmods Sensors, Sensors</p>
---	---

References

-  [Digilent â€œ Start Smart, Build Brilliant.](#)

