


**Ecowitt**

**Ecowitt WS View Plus Local Network**

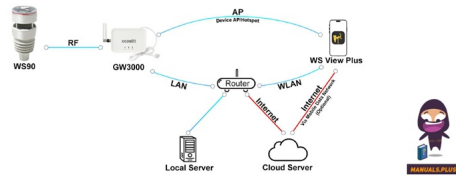

## Ecowitt WS View Plus Local Network User Manual


[Home](#) » [ECOWITT](#) » Ecowitt WS View Plus Local Network User Manual 

### Contents

- [1 Ecowitt WS View Plus Local Network](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Setup](#)
- [5 Devices Management](#)
- [6 Cloud and Local Weather Server Setup](#)
- [7 Device Settings](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)
- [9 Related Posts](#)

# Ecowitt

**Ecowitt WS View Plus Local Network**

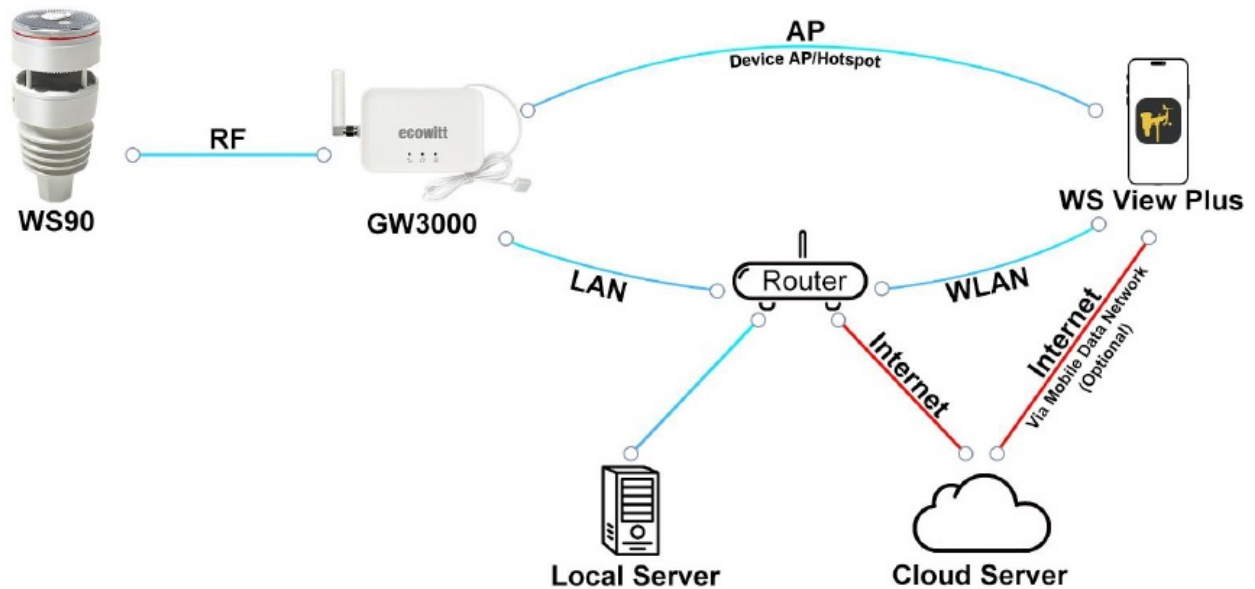

## Product Information

### Specifications

- Product Name: WS View Plus (WSV+)
- Compatibility: Local network configuration (LAN/WLAN)
- Features: Devices management, cloud and local weather server setup
- Connectivity: WLAN, API interface

### Product Usage Instructions

#### Difference between WSV+ and Ecowitt app:

WSV+ is designed for local network configuration and devices management, while the Ecowitt app focuses on posting data to cloud services.

#### Difference between WSV+ and Web UI:

WSV+ provides a user-friendly interface for configuring and managing devices locally, whereas the Web UI allows for more advanced configurations like network settings and SD card management.

#### Setup of a New Device in the Local Network Configuration:

To add a new device to your local network, follow these steps:

1. Press the + button on the bottom task bar.
2. Choose the console and press Next at the top right corner.
3. Follow the guided instructions to activate the console's WLAN.
4. Switch your phone's WiFi to the WLAN of the console (e.g., EasyWeatherPro-xxxxx for HP2560).

#### Devices Management:

To manage devices connected to your network:

- View My Devices and Device List to see all connected devices.
- To delete an entry, you may need to reset the device in its hardware.
- My Devices and Favorites allow for customized device organization.

### **Cloud and Local Weather Server Setup:**

Setup weather server configurations based on your device type:

- For devices with EasyWeather (Pro) entries, configure posting data to cloud services.
- Devices with their own device name (e.g., GW3000A-WIFIxxxx) offer more advanced server setup options.

## **FAQ**

### **Q: How do I troubleshoot if a device is not showing up in the device list?**

A: Manually enter the IP address of the device found in your router settings to continue with setup and view live data.

### **The Difference between WSV+ and the Ecowitt app**

The main difference between WS View Plus and Ecowitt app lies in their management focus. WSV+ acts locally and has some optional internet features. The Ecowitt app acts via the internet and has also local options (but always needs to be logged in to your ecowitt.net account). One can also say that WS View Plus manages devices connected to the local router by connecting to the local router. In contrast, the Ecowitt app manages devices linked to the Ecowitt cloud account (so you must log in to an account to use it). These two different starting points led to the development of two separate apps.

### **The Difference between WSV+ and the Web UI**

WS View Plus is a mobile app with a similar view and organization as the Web UI. Historically the predecessor app WS View (without Plus) existed already early before the consoles starting with the GW1100 were able to house an integrated web page. While the WebUI only exists for one device, WSV+ can manage all devices inside the same local network and will show them in a list (device list). Both WSV+ and the WebUI of each console work on the same device and will therefore synchronize settings the other one has changed. Users can access the WebUI via the device's IP address through a browser to view the user interface. At present, the GW3000 and WS6210 SD card settings are in the Web UI only. Also network configuration is in the WebUI only.

## **Setup**

### **Setup of a New Device in the Local Network Configuration (LAN/WLAN)**

**Adding a Device (console, gateway, camera) to your local network.**

**Example: HP2560**


1. Press the "+" button on the bottom task bar, on the next page choose the console and press the "next" at the top right corner.
2. Follow the guided instructions to activate the console's own WLAN, tick the "Completed operation" and press "Next" at the top right corner.
3. Switch your phone's WiFi to the the WLAN of the console.

In case of the HP2560 console, a console without an API (application programming interface), the name of this WLAN will be: EasyWeatherPro-xxxxx.

**Note:**


Other consoles like the WS2320, WS2910, HP3500 and HP2550 may show two different SSID names: EasyWeather-WFlxxxx or EasyWeatherPro-xxxxx. The devices without the Pro name extension still have an early version of the Wi-Fi firmware and cannot be upgraded to the Pro version (the-device firmware can) and therefore do not have a WebUI.

The Weather Service only firmware (“WiFi firmware”) does not support adding sensors or devices via the WSV+ app or, if they have one, via the WebUI. They do not show live data either. The older HP2550 consoles also offer the use the device itself for network configuration.

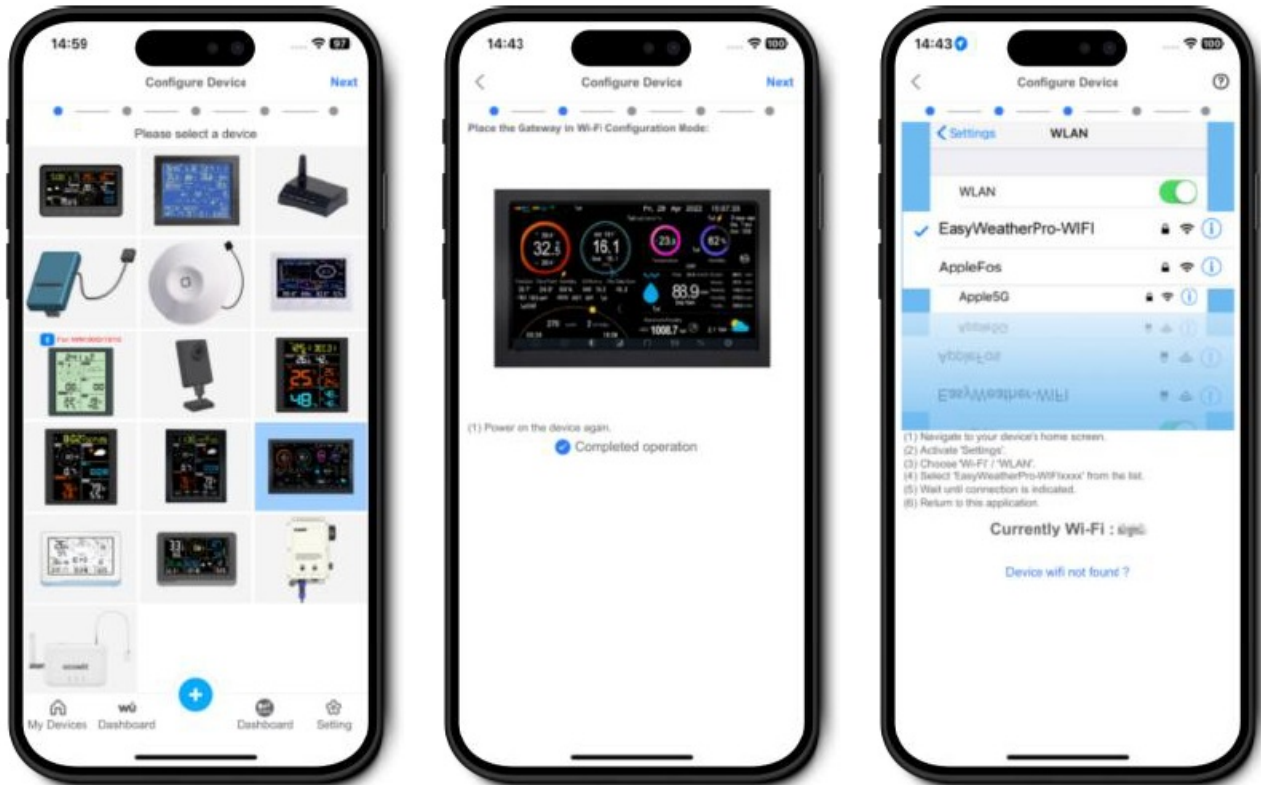

4. Press the “Scan” to choose the SSID(Service Set Identifier, wireless network name) of your (WLAN/WiFi) router
5. Enter the router password and press “Next”. (You can skip the upload weather server option and setting it later.)
6. Once your device has connected with the router of your local network, you will be asked to connect your smartphone/tablet again to the same local network.
7. When you do this, you will see your device as an entry in the WSV+ device list showing the following information:

- EasyWeatherPro-xxxxx
- **MAC** xx:xx:xx:xx:xx
- **IP:** xxx.xxx.xxx.xxx
- **VER:** 5.x.x

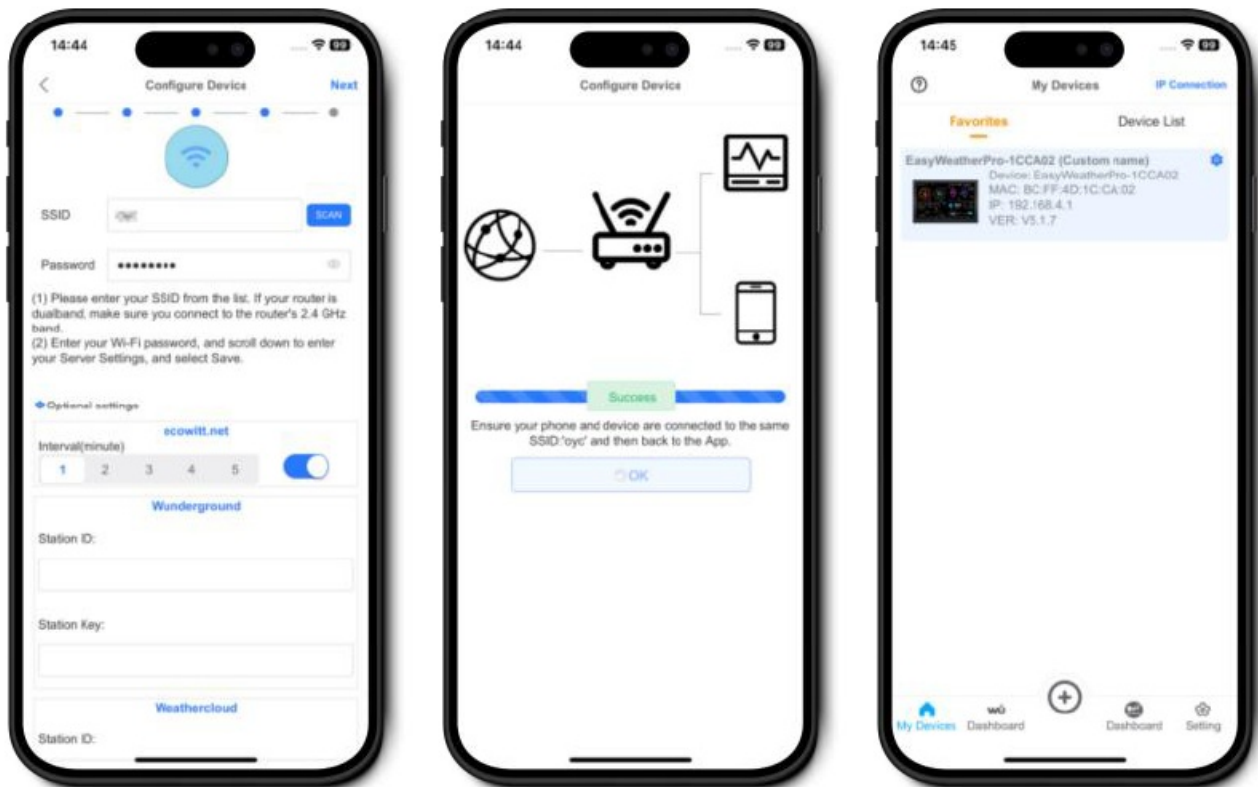

#### Note:

With devices with EasyWeather or EasyWeatherPro entries (WIFI firmware name) only the Weather Services (posting data to the Ecowitt Cloud, Weather Underground, WeatherCloud and WOW) be configured. Also the posting to a customer defined address can be configured (Customized Server).

When you do the network provisioning with devices which have the local Ecowitt API, the SSID of the access point (hotspot, device WLAN) will be:

- DEVICE-name-WIFIxxxx
- e.g. GW3000B-WIFIxxxx, WH1820A-WIFIxxxx


This will also be the device name entry in the WSV+ device list when this (or more) device(s) are registered to the same local network. Devices who are connected to your network through their LAN interface (GW2000, GW3000) do not need the above provisioning procedure. Your router will directly recognize it and provide it with a network address (IP address). them at WSV+ will recognize them at startup directly and add them to its device list.

Devices with their full name in the device list like GW3000A-WIFIxxxx have the local Ecowitt API and can be fully configured, calibrated and upgraded and their live data (realtime sensor data) can be displayed in WSV+. Only the network settings and the SD card management for devices who have a SD card cannot be done via WSV+. This is only possible via the WebUI of these devices in the respective sections (menu): <http://IP-address-of-your-device>

## Devices Management

### My Devices and Device List

This page shows all of the router- connected devices in a sample network. This list cannot be edited. If you want to delete an entry, you have to reset the device in its hardware. Powering it off will still show the device but the entry will be grayed-out and inactive.


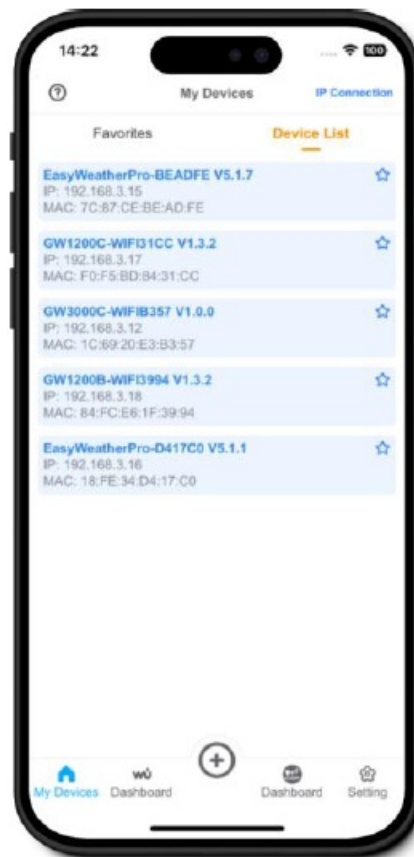


### My Devices and Favorites

If you want this entry to look more pleasant, you can create an entry in the Favorites view of the device list by tapping on the star icon at the very right of the device list entry, Then you can choose the icon of your device and acknowledge. As a result you will see the icon in front of the device list data. The Favorites list will become the default view when you start WSV+ in future.


The Device name in the Favorites list can be edited during creation and later. If you want to change it later, press the settings icon (gear wheel) at the right end of the list entry.

**Example:** see below

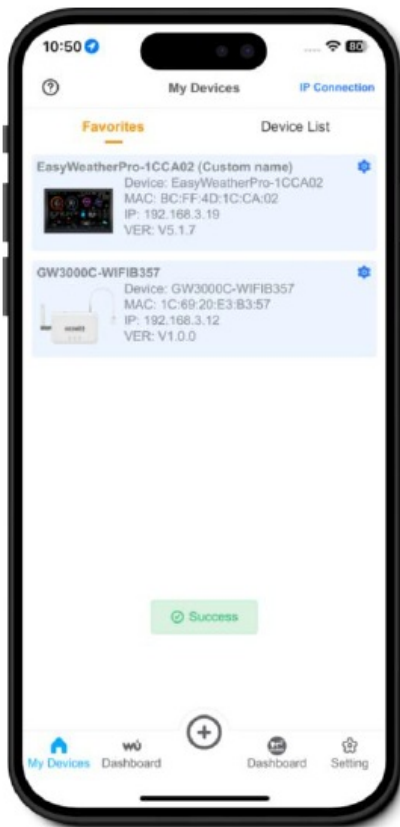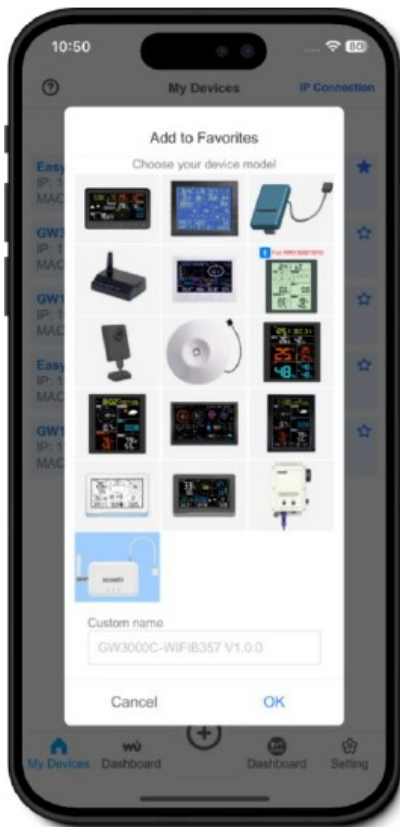

### IP Connection for add device you know the IP address

In case the device is not showing up in device list page after the router registration is done, you may enter the IP address ( to be found in your router under the MAC address of the device – ) manually and continue for weather service setup, view live data etc.

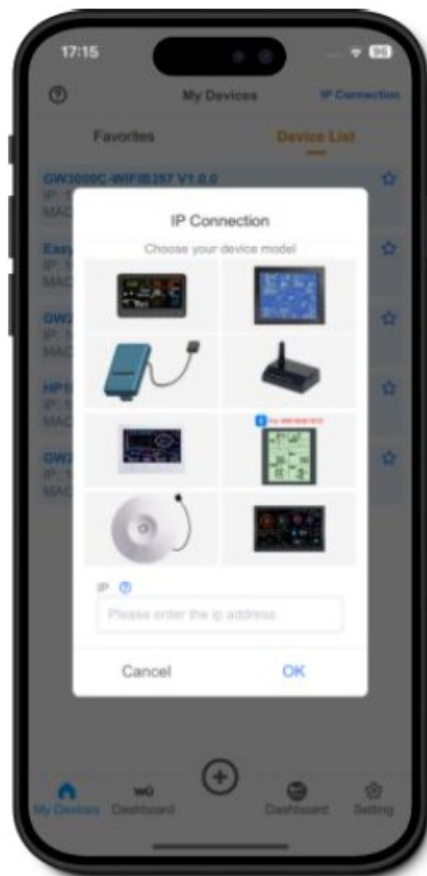

### Cloud and Local Weather Server Setup

- Devices with a device list entry EasyWeather(Pro) are described below.
- For devices with their own device name (e.g. GW3000A-WIFIxxxx), the Weather Server setup and customized server configuration as shown below will be only one of many options.
- Posting to a customer chosen server/IP address is another option here.
- You decide where this post will go. The receiving server can be in the internet or inside your local network at your choice.




Press the desired device list entry of your console to go on


### **Cloud Weather Server (Optional)**

Configuring the weather servers means that you are sending your weather data to these public weather services. If you don't want to do that, skip this section.




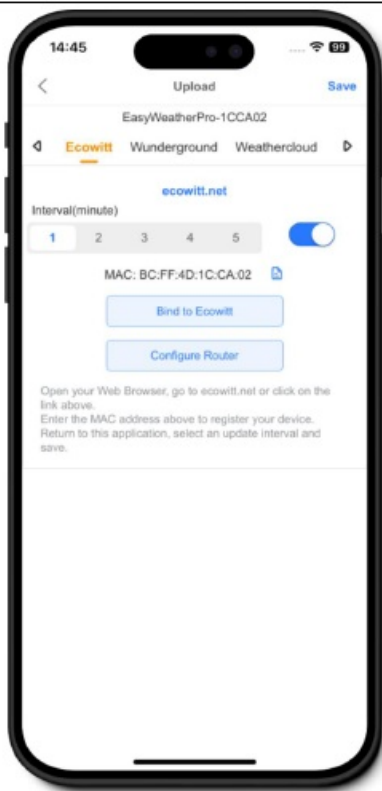


**Ecowitt Weather**

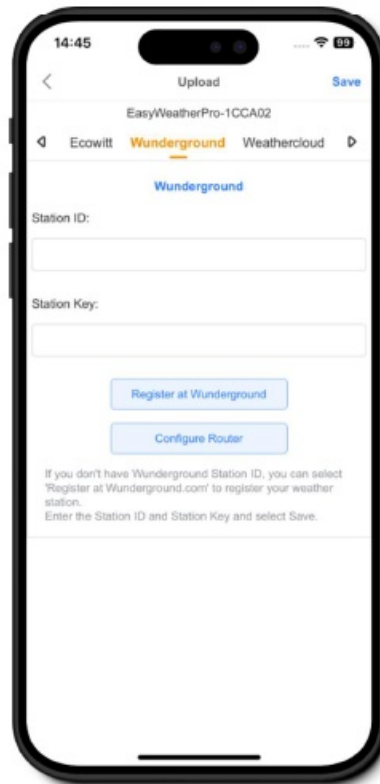

**Wunderground**

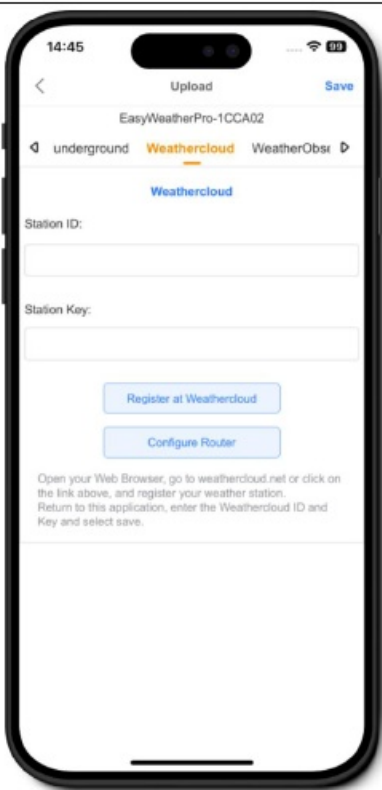


**Weather Cloud**

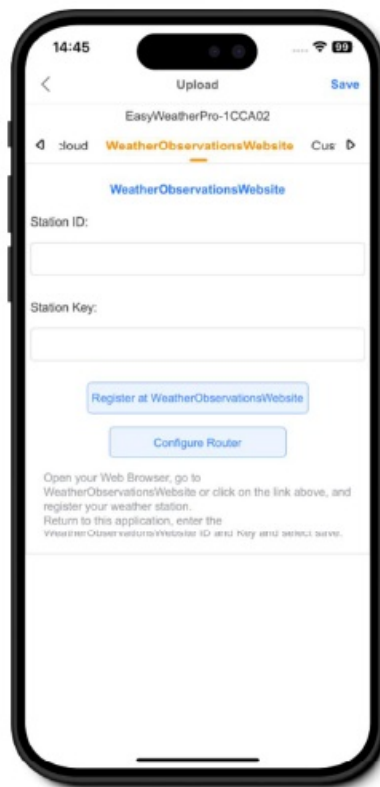

**WOW**

**Customer chosen upload/posting target (Customized Server option)**

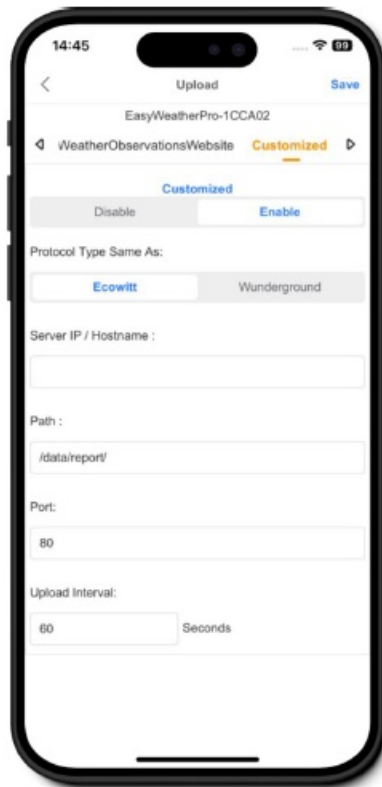

## Examples:

1. you are running the Home Automation software HomeAssistant on a server in your local network and want to send your weather station data there.

Then the HomeAssistant software will ask you to make entries in this customized server dialogue:

Protocol: Ecowitt

ServerIP/Hostname: the IP address of your server where HA runs

path: /api/webhook/xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx

Port:8123

upload interval: 8 seconds

2. you have your own internet website and want to process your weather data there  
your software on your webhost expects the data in Wunderground protocol format to be sent to a directory with the name ../report/data

then the entries on this page would be:

Protocol: Wunderground


ServerIP/Hostname: my-weather-website-domain.com path: /report/data

Port: 8080

upload interval: 8 seconds

## WSV+ Dashboard Units Setting

Your WSV+ Dashboard unit settings can be made on this page via the Setting button in the bottom task bar. These settings will apply for your view inside WSV+ only. Other view with other tools (e.g. Ecowitt.net dashboard, WebUI) can and have to be done in the respective tool.

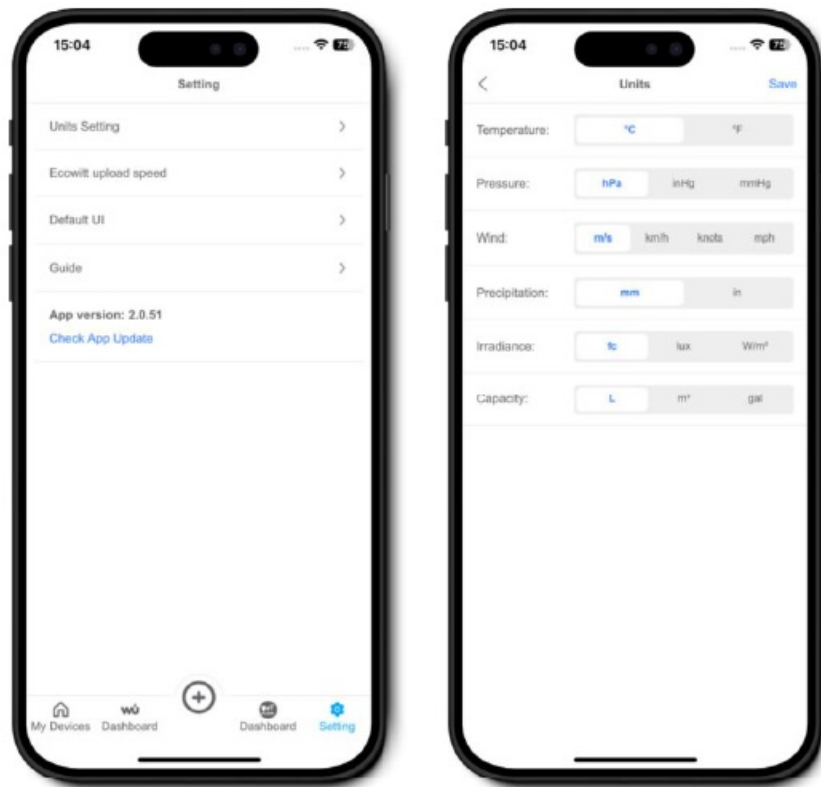

### Connecting to your console without having a local network available

If you run your weather station in an environment without a local network, you can still connect to your console with WSV+ to configure the Weather Network options as described before, or, if the console is equipped with the local Ecowitt API, do the whole configuration (except SD card and network) and view live data of your weather station and the connected sensors via the console's own access point or hotspot (which needs to be activated).

This is possible because each WLAN enabled Ecowitt console has its own WLAN access point or hotspot. Then connect with your mobile device to the WLAN with the SSID EasyWeather-WIFIxxxx, EasyWeatherPro-xxxxx or Device-WIFIxxxx, open WSV+ and select "IP connection". Here you enter the hotspot IP address 192.168.4.1 and you will be taken to either the Weather Network page (EasyWeather(Pro)) or to the Live Data page.

### Configuring the Weather services and your local network access with the WebUI

Access to your console via the WebUI is needed for network and SD card configuration. No other tool can do this. (Exception: the HP25x0 consoles where you can do this inside the console)

There can be two situations:

#### 1. Your console is not yet connected to your local network router

If you still have to register the console to the local network, you can also do this via the WebUI. Then you will have to connect your mobile device to the WLAN each WLAN enabled Ecowitt console comes with.

SSID EasyWeather(Pro).... Or DeviceX-WIFIxxxx (e.g. GW3000A-WIFI4711)

#### 2. Your console is already connected to your local network router

Access to the Web is possible (a) via the console's hotspot IP in your Browser or (b) via the local network once the console has been added to your local network.

- Switch on the local WLAN of your console (see manual)  
Open your browser and enter the default IP address 192.168.4.1 of the console hotspot.
- Open your browser in the same LAN your console is connected to and enter its IP address (you can find

the IP in your router via its MAC address, or on the Factory About [Display] page in the HP25x0 consoles or in the device list of WSV+).

Ecowitt.net

Interval (minutes) 1 [Ecowitt.net](#)

MAC BCF74D1C1CA02 [Save](#)

WiFi Network

Router SSID [Scan Router](#)

WiFi Password [Show password](#)  
If your router is dualband/make sure you connect to the router's 2.4GHz band.

IP Address Mode Receive Automatically/DHCP

Static IP Address 192.168.3.19

Static Subnet Mask 255.255.255.0

Static Gateway 192.168.3.1

Static DNS Server 205.171.3.45 [Apply](#)

Upgrade ☒ Automatically upgrade firmware

Version Current version: V5.1.7 [Check firmware](#)

Device AP Auto OFF [Apply](#)  
When the device is successfully connected to the router, the AP (EasyWeatherPro-1CCA02) will be automatically shut down 5 minutes later.

Login & AP Password [Show password](#)  
It can be set to NULL or 8-63 characters, and the device will restart when password is changed. [Apply](#)

Wunderground

Station ID

Station Key

Weathercloud

Weathercloud ID

Weathercloud Key

WeatherObservationsWebsite

Station ID

Station Key

Customized

☐ Disable ☒ Enable

Protocol Type Same As ☒ Ecowitt ☐ Wunderground

Server IP / Hostname

Path /data/report/

Port 80

Upload Interval 60 Seconds

[Save](#)


Version: EasyWeatherPro V5.1.7

## Device Settings

### Device Settings in the WS View Plus and Web UI

#### Open Live Data

Select/tap on a device entry in the WSV+ device list

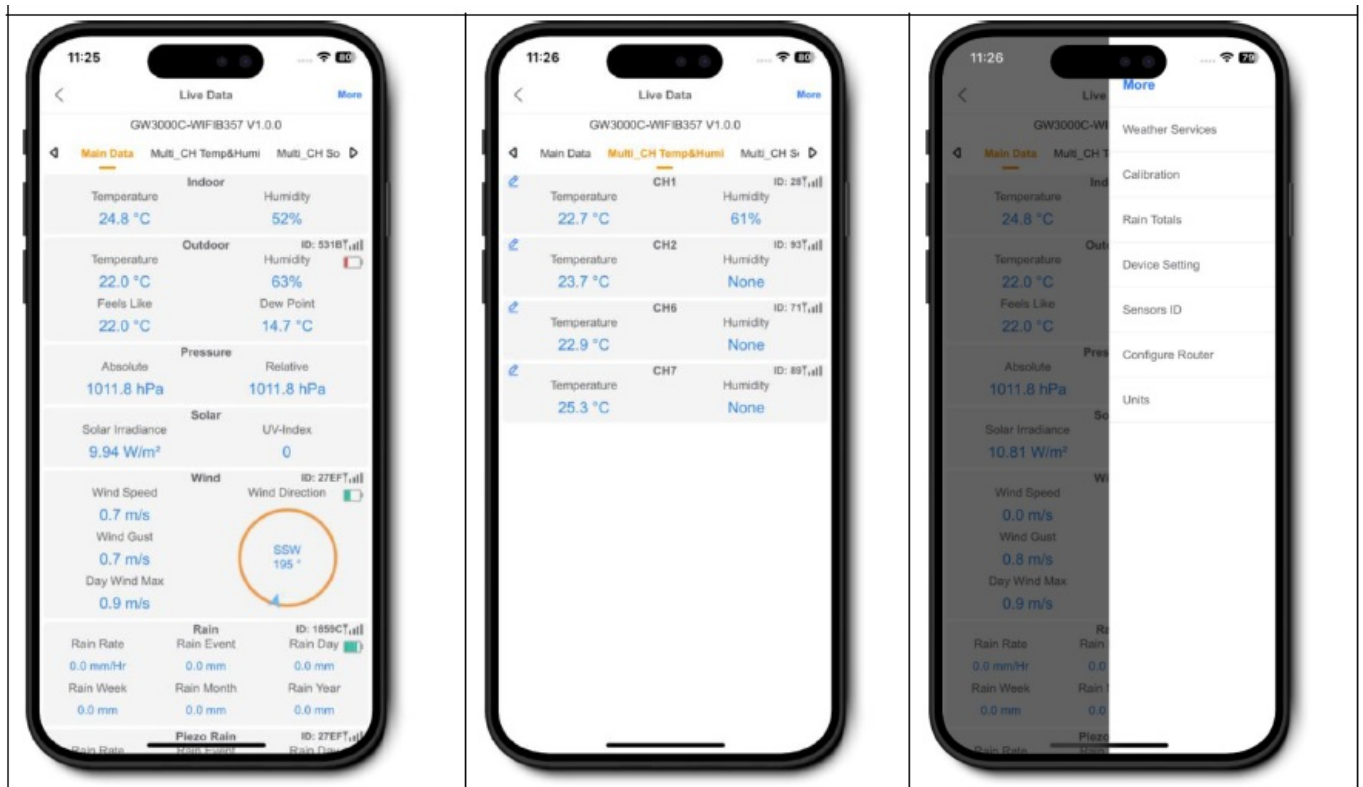

The main page shows the real-time data of the basic sensors: indoor/outdoor temperature and humidity, air pressure, solar, wind, rain and air quality for each sensor you will find signal quality bars, the sensor ID and the

battery status there are more tabs for displaying the extra sensors grouped in T&H (WH31), Temp (WN34), Leaf Wetness (WN35) and Water Leak (WH55) – a pencil icon allow to change the display name of the extra sensors

To access the menu, click/tap on the “More” button in the top right corner

### Access the Web UI via device's hotspot

1. Re-power up your device. Or activate the device's hotspot via its button.
2. Switch your phone or laptop's wifi connector to your device
3. Access the device's default IP address, 192.168.4.1, on the browser
4. Click Login to open the user interface

The image shows two side-by-side screenshots of the GW3000C\_V1.0.0 Web UI. The left screenshot is the Login page, featuring a dark blue background with a 'Login' title, an 'admin' input field, a 'Leave blank if not set.' dropdown, a 'Login' button, and the version 'Version: GW3000C\_V1.0.0'. The right screenshot is the 'Live Data' dashboard, which has a sidebar menu on the left with options: Local Network, Weather Services, Device Setting, Unit Settings, Calibration, Rain Totals, Sensors ID, Live Data (highlighted), and SD-Card. The main area displays various sensor data in a grid. At the top, 'Outdoor Temperature' is 23.4 °C, 'Outdoor Humidity' is 59%, and 'Feels Like' is 23.4 °C. Below this, 'Dew Point' is 15.0 °C, 'Wind Speed' is 0.6 m/s, and 'Gust Speed' is 0.7 m/s. Further down, 'Day Wind Max' is 1.0 m/s, 'Solar Irradiance' is 10.81 W/m², and 'UV-Index' is 0. 'Wind Direction' is 199°. A section for 'Indoor' sensors shows 'Indoor Temperature' at 26.5 °C, 'Indoor Humidity' at 47%, 'Absolute Pressure' at 1008.7 hPa, and 'Relative Pressure' at 1008.7 hPa. There are two 'Rain' sections, each with 'Rain Event', 'Rain Rate', 'Rain Day', 'Rain Week', 'Rain Month', and 'Rain Year' all showing 0.0 mm. A 'CO2' section shows 'Temperature', 'Humidity', 'CO2', and '24H CO2' all as 'None'. Below this, there are four 'CH' (Channel) sections: CH1, CH2, CH6, and CH7. Each CH section displays 'Temperature' and 'Humidity'. CH1 shows 23.1 °C and 61% humidity. CH2 shows 24.6 °C and 'None' humidity. CH6 shows 23.7 °C and 'None' humidity. CH7 shows 25.2 °C and 'None' humidity. At the bottom, there are four 'Soil' sections: CH1 Soil (0%), CH2 Soil (0%), CH1 Temperature (23.1 °C), and CH2 Temperature (23.2 °C). All soil sections show 0% moisture.

In the WebUI there are no tabs – the live data are displayed grouped on one page


### Weather Services

You can also change weather services after adding a device. Refers to Section 5.1

After the Network configuration is successful, data can be uploaded to the following weather station servers:

- [ecowitt.net](http://ecowitt.net) (Default upload to this server)
- [wunderground.com](http://wunderground.com)
- [weathercloud.net](http://weathercloud.net)

- [wow.metoffice.gov.uk](http://wow.metoffice.gov.uk)
- Customized server

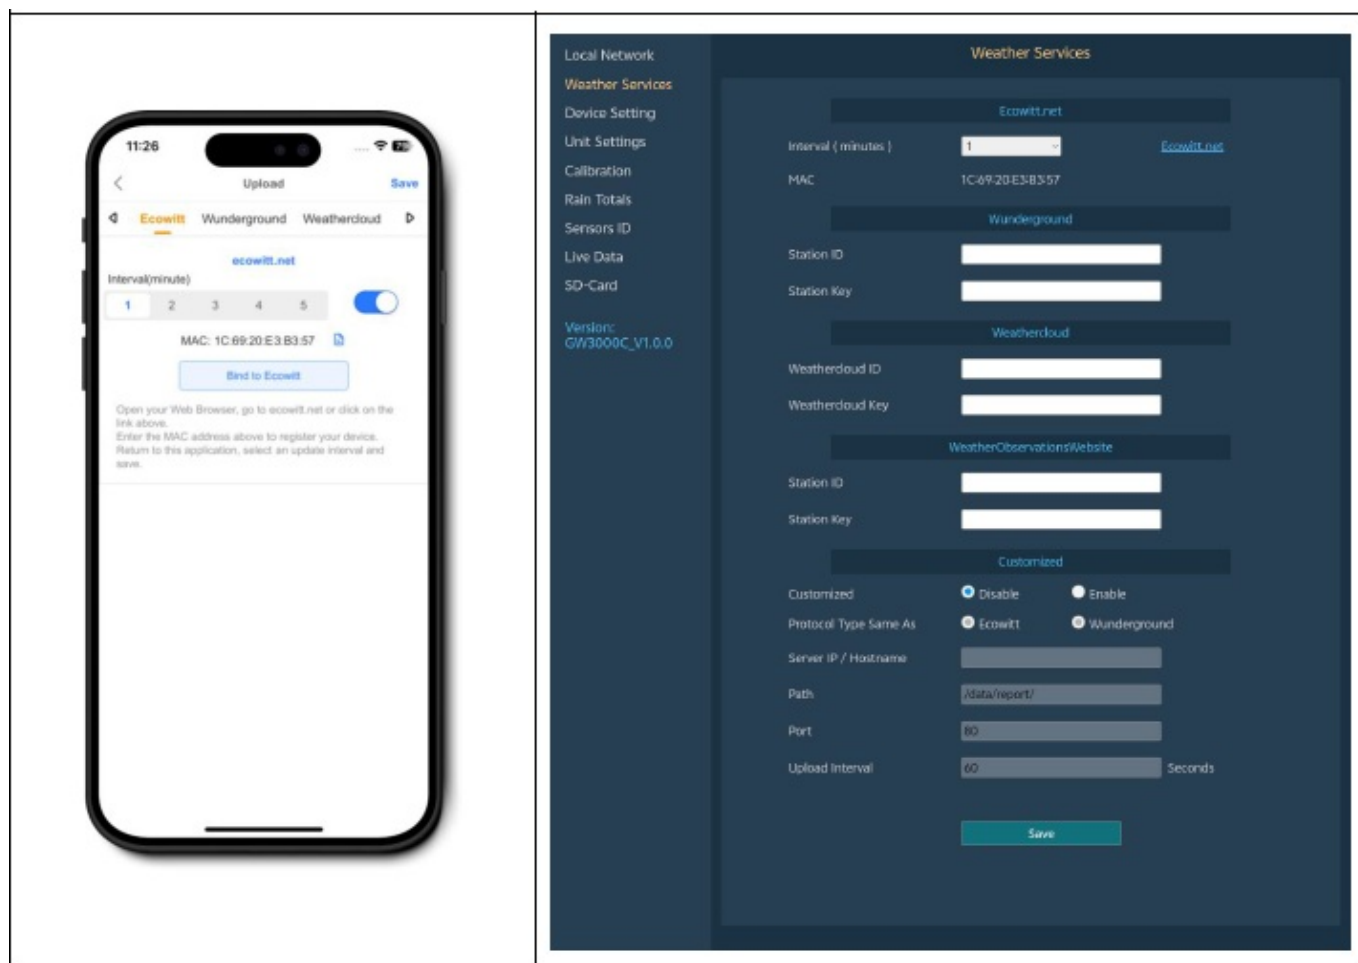

## Calibration

This page supports the data calibration:



Local Network  
Weather Services  
Device Setting  
Unit Settings  
**Calibration**  
Rain Totals  
Sensors ID  
Live Data  
SD-Card  
  
Version:  
GW3000C\_V1.0.0


### Calibration

Irradiance Gain	<input type="text" value="1.00"/>	Range: 0.10 - 5.00
UV Gain	<input type="text" value="1.00"/>	Range: 0.10 - 5.00
Wind Gain	<input type="text" value="1.00"/>	Range: 0.10 - 5.00
InTemp Offset	<input type="text" value="0.0"/>	°C
InHumi Offset	<input type="text" value="0"/>	%
Abs Offset	<input type="text" value="0.0"/>	hPa
Rel Offset	<input type="text" value="0.0"/>	hPa
OutTemp Offset	<input type="text" value="0.0"/>	°C
OutHumi Offset	<input type="text" value="0"/>	%
WindDir Offset	<input type="text" value="0"/>	°

Save  
Soil Calibration  
Multi CH T&H Calibration  
Multi CH Temp Calibration  
AQIN Calibration  
Reset to Defaults

## Rain totals

This page supports settings such as:

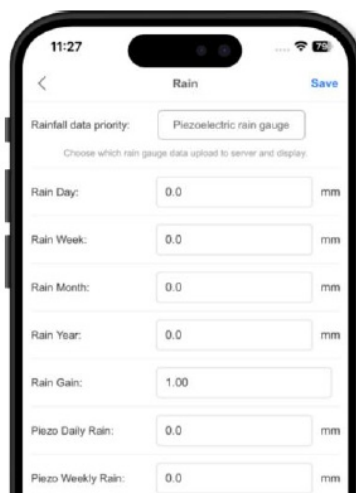

Local Network  
Weather Services  
Device Setting  
Unit Settings  
Calibration  
**Rain Totals**  
Sensors ID  
Live Data  
SD-Card  
  
Version:  
GW3000C\_V1.0.0

### Rain Totals

Rainfall data priority: Piezoelectric rain gauge  
Choose which rain gauge data upload to server and display.

Rain Day	<input type="text" value="0.3"/>	mm
Rain Week	<input type="text" value="0.3"/>	mm
Rain Month	<input type="text" value="0.3"/>	mm
Rain Year	<input type="text" value="0.3"/>	mm
Rain Gain	<input type="text" value="1.00"/>	Range: 0.10 - 5.00

---

Piezo Daily Rain	<input type="text" value="0.0"/>	mm
Piezo Weekly Rain	<input type="text" value="0.0"/>	mm
Piezo Monthly Rain	<input type="text" value="0.0"/>	mm
Piezo Yearly Rain	<input type="text" value="0.0"/>	mm
Piezo Rain1 Gain	<input type="text" value="1.00"/>	When rain rate less than 4 mm/h, Range: 0.10 - 5.00
Piezo Rain2 Gain	<input type="text" value="1.00"/>	When rain rate less than 10 mm/h, Range: 0.10 - 5.00
Piezo Rain3 Gain	<input type="text" value="1.00"/>	When rain rate less than 30 mm/h, Range: 0.10 - 5.00






Piezo Monthly Rain:  mm

Piezo Yearly Rain:  mm

Piezo Rain1 Gain:  When rain rate less than 4 mm/h

Piezo Rain2 Gain:

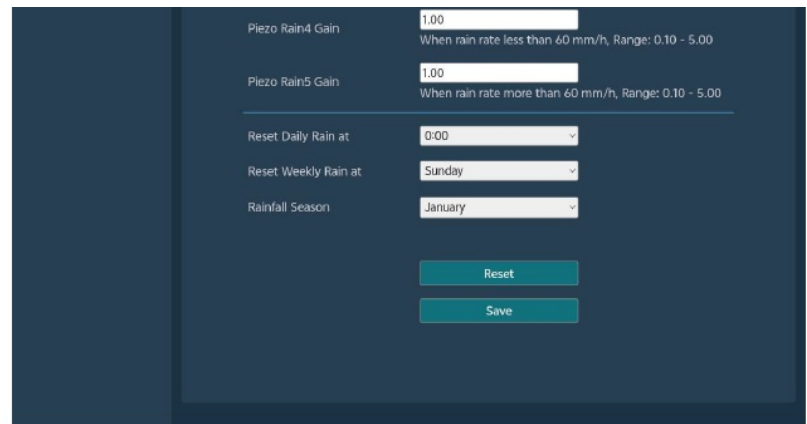

Piezo Rain4 Gain:  When rain rate less than 60 mm/h, Range: 0.10 - 5.00

Piezo Rain5 Gain:  When rain rate more than 60 mm/h, Range: 0.10 - 5.00

Reset Daily Rain at:

Reset Weekly Rain at:

Rainfall Season:


1. Choose traditional or piezoelectric rain gauge data to be uploaded to the WU server, as only one rain gauge data can be accepted when you have both our haptic rain gauge and tipping bucket type rain gauge.
2. Rainfall calibration
3. Rain reset time for Daily Rain/Weekly Rain/Rainfall Season
4. For Piezo Rain1~5 Gain calibration

The Piezoelectric rain gauge working principle: raindrops fall on the sensor's surface so that the monitoring panel produces small mechanical vibration, the vibration of the mechanical stress, and the sensor produces a voltage difference corresponding to the amount of rainfall. In practice, the measurement of precipitation by piezoelectric rain gauges is influenced by environmental factors such as wind, terrain, and debris. In the case of large rainfall intensity, rainfall intensity can be measured by the piezoelectric rain gauge, but the raindrops landing may have two impacts on the monitoring panel so that the measured rainfall value is larger; for minimal rainfall intensity, due to the vertical momentum is too small, so that the measured rainfall value is small. Therefore, it is necessary to calibrate the piezoelectric sensors for different rainfall intensities depending on the environment in which they are located.

As a sanity check the sensor also verifies if there is water present along with the vibration to exclude effects produced by other vibrations.





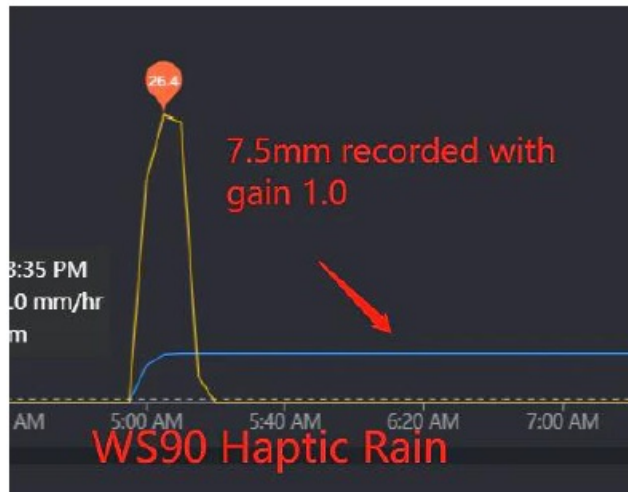

WS90 and WS85 are weather sensor arrays equipped with piezoelectric rain gauges. To make your rain data more accurate, you can calibrate the rain sensor accuracy by yourself:

1. A reference is needed to record the rainfall value, and it is also important to be able to record the rain rate. Our WH40 rain sensor can be used for this purpose.
2. You can set five rain gain parameters: Piezo Rain1: Rain5. We usually leave Rain1 as it is unless you can confirm it consistently produces the same result, and then you can adjust this.
3. Please ensure that you record rain data as follows: set rain4 gain to 6/7.5, which equals 0.8. For easier management, set rain2, rain3, and rain5 all to 0.8 for now.

Only when different rain rates are recorded, divide the ws90 rain by 0.8 to get 1.0 rain, and then recalculate (reference/ws90/0.8) to precisely adjust the corresponding rain gain setting.

## Device Setting

This page supports settings for device itself:

### Device Setting

**Sensor Type**

☐ If your weather transmitter model is WH24, please turn this option on.

**Frequency**

RFM433MHz

**Automatic Frequency Control(AFC)**

☐

**Temperature Compensation**

☐ WH65/WH69/WS80/WS90

**Auto Timezone**

☒ Auto Timezone

**Timezone**

Asia/Shanghai

**Date**

2024/12/06 14:59

**Upgrade**

☐ Automatically upgrade firmware

**Version**

Current version:V1.0.0 [Check firmware](#)

**Device AP Auto OFF**



☒ Disable the gateway's self broadcasting SSID after successfully connecting to your own wireless network. This will disable the (GW3000C-WIFI357) , used only for device setup.

[Save](#)

**Login & AP Password**

☐ Show password


It can be set to NULL or 8-63 characters, and the device will restart when password is changed.

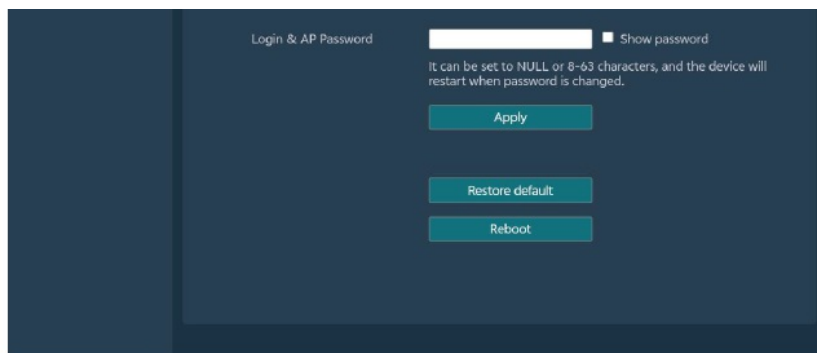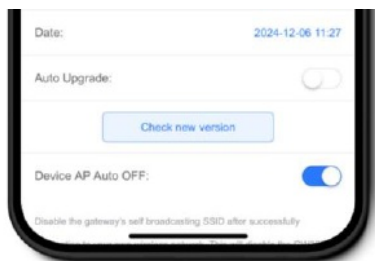

Network management and SD card configuration can only be handled in the WebUI

## Sensor ID

This page is for sensor management – view, re-registering and active sensorID assignment

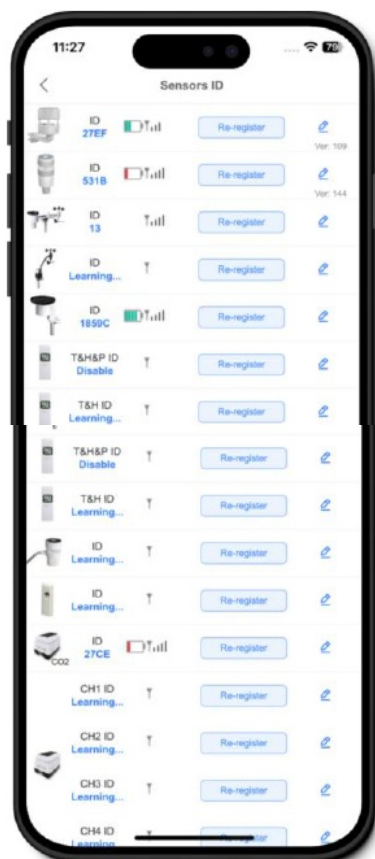


Local Network		Sensors ID				
Weather Services		Name	ID	Battery	Signal	Re-register
Device Setting		Wind & Rain	0x27EF			<a href="#">Re-register</a>
Unit Settings		Temp & Humidity & Solar & Wind & Rain	0x531B			<a href="#">Re-register</a>
Calibration		Temp & Humidity & Solar & Wind & Rain	0x13	Normal		<a href="#">Re-register</a>
Rain Totals		Solar & Wind	Learning	----		<a href="#">Re-register</a>
Sensors ID		Rain	0x1859C			<a href="#">Re-register</a>
Live Data		Temp & Humidity & Pressure	Disable	----		<a href="#">Re-register</a>
SD-Card		Temp & Humidity	Learning	----		<a href="#">Re-register</a>
Version: GW3000C_V1.0.0		Temp & Humidity & Solar & Wind	Learning	----		<a href="#">Re-register</a>
		Lightning	Learning	----		<a href="#">Re-register</a>
		PM2.5 & PM10 & CO2	0x27CE			<a href="#">Re-register</a>
		PM2.5 CH1	Learning	----		<a href="#">Re-register</a>
		PM2.5 CH2	Learning	----		<a href="#">Re-register</a>
		PM2.5 CH1	Learning	----		<a href="#">Re-register</a>
		PM2.5 CH2	Learning	----		<a href="#">Re-register</a>
		PM2.5 CH3	Learning	----		<a href="#">Re-register</a>
		PM2.5 CH4	Learning	----		<a href="#">Re-register</a>
		Leak CH1	0xCED7			<a href="#">Re-register</a>
		Leak CH2	Learning	----		<a href="#">Re-register</a>
		Leak CH3	Learning	----		<a href="#">Re-register</a>
		Leak CH4	Learning	----		<a href="#">Re-register</a>
		Temp & Humidity CH1	0x28	Normal		<a href="#">Re-register</a>
		Temp & Humidity CH2	0x93	Normal		<a href="#">Re-register</a>
		Temp & Humidity CH3	Learning	----		<a href="#">Re-register</a>
		Temp & Humidity CH4	Learning	----		<a href="#">Re-register</a>
		Temp & Humidity CH5	Learning	----		<a href="#">Re-register</a>
		Temp & Humidity CH6	0x71	Normal		<a href="#">Re-register</a>
		Temp & Humidity CH7	0x89	Normal		<a href="#">Re-register</a>
		Temp & Humidity CH8	Learning	----		<a href="#">Re-register</a>

In the newer firmware editions there will be two sensor ID pages with 31 entries each for a better overview on the WebUI – in WSV+ everything is displayed on one large page

## Configure Router in Local network

This page supports setup for local network:

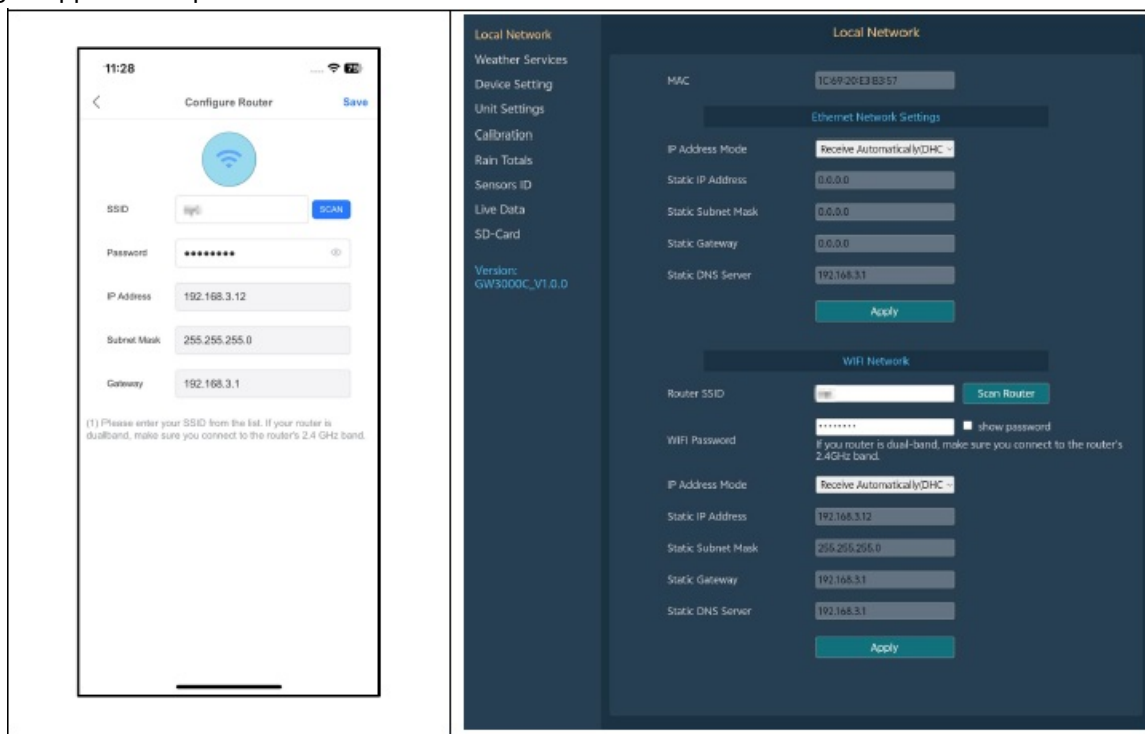


The image displays two side-by-side screenshots. The left screenshot is from a mobile application titled 'Configure Router'. It features a 'SCAN' button for the SSID, a password field, and input fields for IP Address (192.168.3.12), Subnet Mask (255.255.255.0), and Gateway (192.168.3.1). A note at the bottom states: '(1) Please enter your SSID from the list. If your router is dualband, make sure you connect to the router's 2.4 GHz band.' The right screenshot is a web interface for 'Local Network' settings. It shows the MAC address (TC:69:20:E3:B3:57) and 'Ethernet Network Settings' with fields for IP Address Mode (Receive Automatically/DHCP), Static IP Address, Static Subnet Mask, Static Gateway, and Static DNS Server. Below this is the 'WiFi Network' section with fields for Router SSID, WiFi Password, IP Address Mode, Static IP Address, Static Subnet Mask, Static Gateway, and Static DNS Server. Both interfaces include an 'Apply' button.

In WSV+ you can only manage the WLAN portion. If your gateway has an Ethernet (LAN cable) connection, this can only be managed via the WebUI. Enabling or disabling WLAN for dual network devices can also only be managed from the WebUI

## Live data units

This page supports settings for live data:

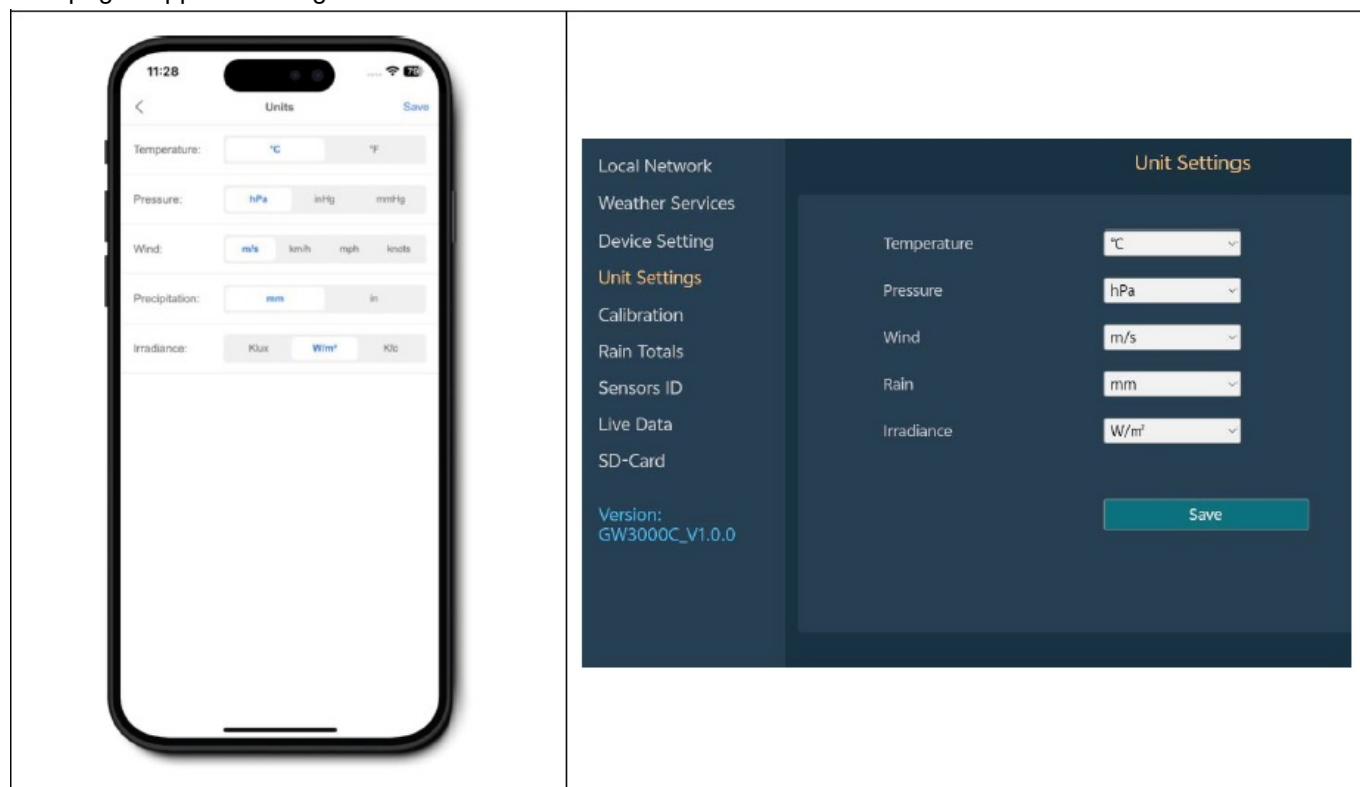

The image displays two side-by-side screenshots. The left screenshot is from a mobile application titled 'Units'. It shows dropdown menus for Temperature (°C), Pressure (hPa), Wind (m/s), Precipitation (mm), and Irradiance (W/m²). The right screenshot is a web interface titled 'Unit Settings'. It shows dropdown menus for Temperature (°C), Pressure (hPa), Wind (m/s), Rain (mm), and Irradiance (W/m²). A 'Save' button is located at the bottom right. Both interfaces show a version number: GW3000C\_V1.0.0.

## SD Card

SD card management can only be done in the WebUI at present (for GW3000 and WS6210), not on the other apps.

1. **SD card file system format:** Only FAT32 is supported. For cards larger than 32GB, use the Rufus tool to format the SD card to FAT32. Download the tool from <https://rufus.ie/en/>. Tip: When replacing it with a higher-capacity card, please be mindful of the memory card's maximum read/write cycles and lifespan.
2. **Real-time status display and hot-swap support:** The system monitors the SD card's status in real time and allows for its insertion or removal without restarting the device.
3. **SD card information display:** The interface shows detailed SD card information, including storage capacity and read/write frequency.
4. **Multi-level directory management:** The system adopts a multi-level directory structure for easy file categorization and management by users.
5. **Sensor data storage:** Data collected by sensors is saved in .csv format in the root directory of the SD card, facilitating direct access and analysis of data.
6. The capital letter (A, B, C ...) in the file name will be increased and a new file created when you change one or more of your unit settings.

Local Network  
Weather Services  
Device Setting  
Unit Settings  
Calibration  
Rain Totals  
Sensors ID  
Live Data  
**SD-Card**  
Version:  
GW3000C\_V1.0.0

### SD Card


Name : SD16G  
Speed : 20 MHz  
Interval : 5 minutes [Edit](#)

Type : SDHC/SDXC  
Size : 15238 MB

Path: /

File Name	Size (Bytes)	Operation	
202411A.CSV	998	<a href="#">Download</a>	<a href="#">Delete</a>
202411Allsensors_A.CSV	2984	<a href="#">Download</a>	<a href="#">Delete</a>
202411B.CSV	714	<a href="#">Download</a>	<a href="#">Delete</a>
202411Allsensors_B.CSV	2104	<a href="#">Download</a>	<a href="#">Delete</a>
✚✚✚✚.TXT	217	<a href="#">Download</a>	<a href="#">Delete</a>
✚✚✚✚.TXT	192	<a href="#">Download</a>	<a href="#">Delete</a>
✚✚✚✚.txt	191	<a href="#">Download</a>	<a href="#">Delete</a>

## Documents / Resources

	<a href="#">Ecowitt WS View Plus Local Network</a> [pdf] User Manual WS View Plus Local Network, WS View Plus, Local Network, Network
---	--

## References

-  [Ecowitt Weather](#)
-  [Weathercloud | Global network of weather stations](#)
-  [Met Office WOW - Home Page](#)
-  [Local Weather Forecast, News and Conditions | Weather Underground](#)

-  [Rufus - Create bootable USB drives the easy way](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.