



edelkrone 81228 Slide Module V3 User Manual


[Home](#) » [Edelkrone](#) » edelkrone 81228 Slide Module V3 User Manual 

Contents


- 1 edelkrone 81228 Slide Module V3
- 2 WHAT'S IN THE BOX & THE BASICS
- 3 ATTACHING BATTERY BRACKET
- 4 ADJUSTING TENSION
- 5 START USING
- 6 DISPOSAL OF THE PRODUCT & WARNINGS
- 7 Documents / Resources
 - 7.1 References
- 8 Related Posts

SLIDE MODULE

edelkrone 81228 Slide Module V3

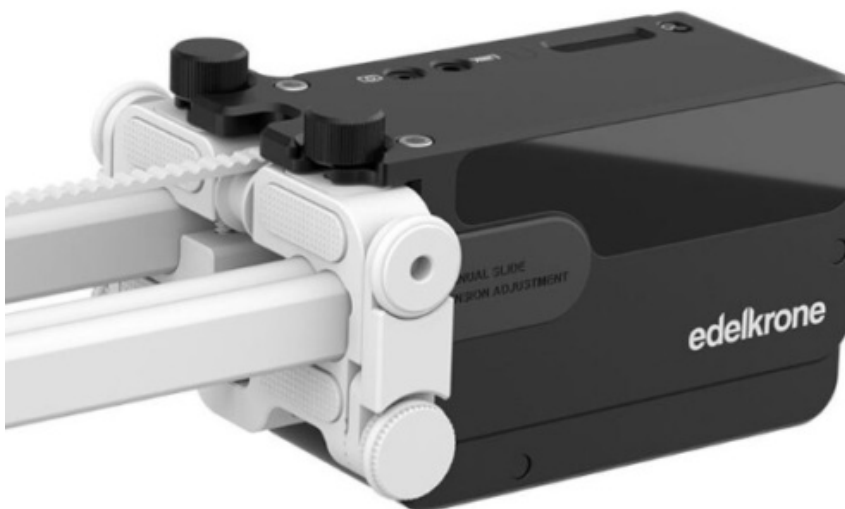


WHAT'S IN THE BOX & THE BASICS

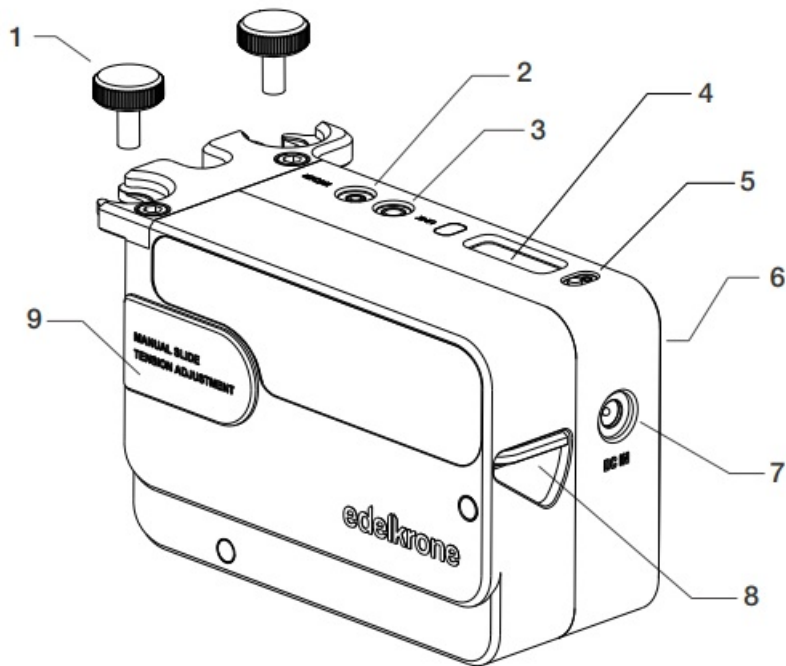


- Connection screws for Slide Module
- Shutter trigger cable port
- Link port
- Information screen
- On/Off Button
- Battery bracket ports
- DC IN socket & Cable
- Holder Port 2.5 mm Allen key
- Manual slide tension adjustment port

ATTACHING BATTERY BRACKET

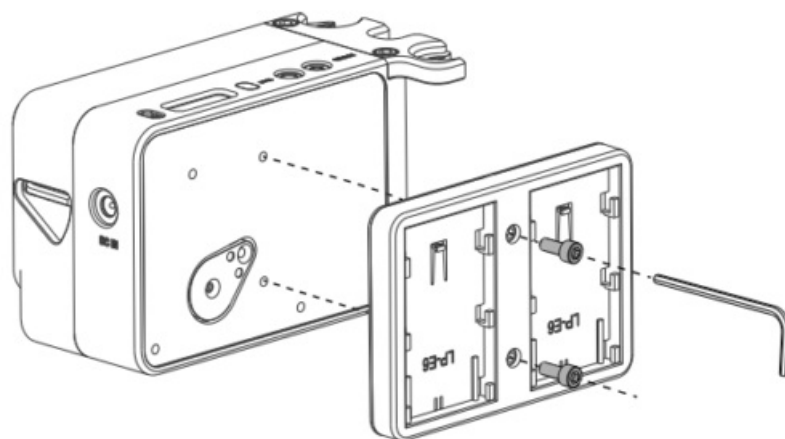


MOUNTING YOUR SLIDE MODULE TO YOUR SLIDERPLUS

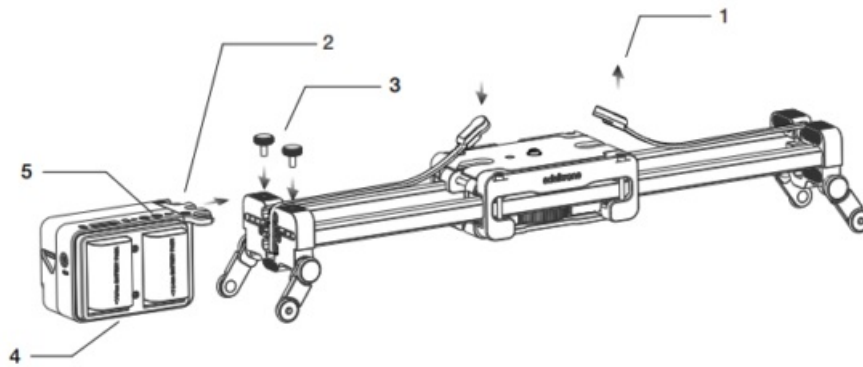


1. Detach manual slide control belt and attach the motion control belt.
2. Attach Slide Module to SliderPLUS. Place the connection screws and tighten them
3. Connect the batteries or power adapter to the DC IN socket.
4. Connect shutter trigger cable to the shutter trigger cable port when you intend to shoot time-lapse and stop motion.

ADJUSTING TENSION

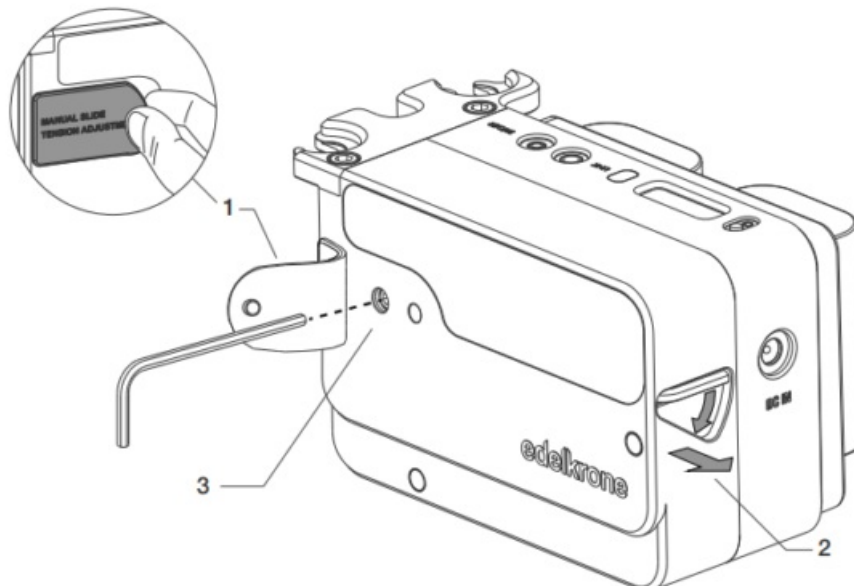

1. Open Manual slide tension adjustment cover to reach the screw.
2. Turn the allen key down and pull it out.
3. Use the allen key to adjust the tension.


INCLINED MOTION

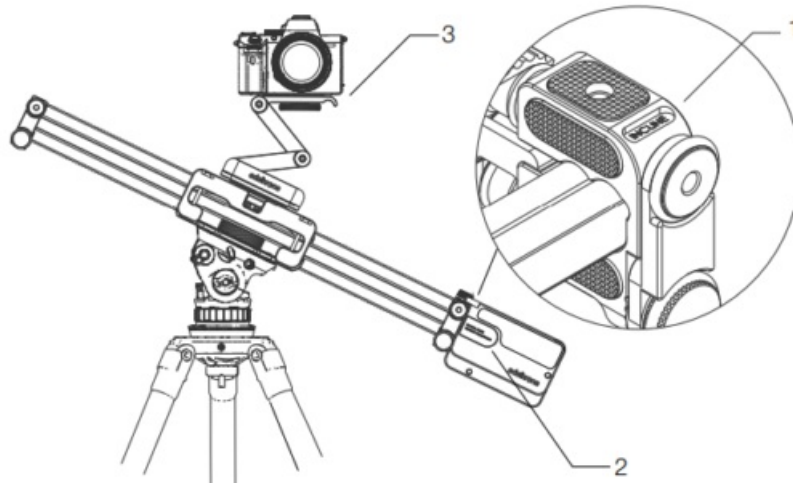

- To get inclined shots,
- You should attach your Slide Module to incline side of the SliderPLUS.
- You should tighten slide tension of the Slide Module to get inclined motion.
- Place your camera to FlexTILT Head or any camera head.

HOT SWAPPING

While your Slide Module V3 is in use, you may switch batteries without losing connection or experiencing an interruption

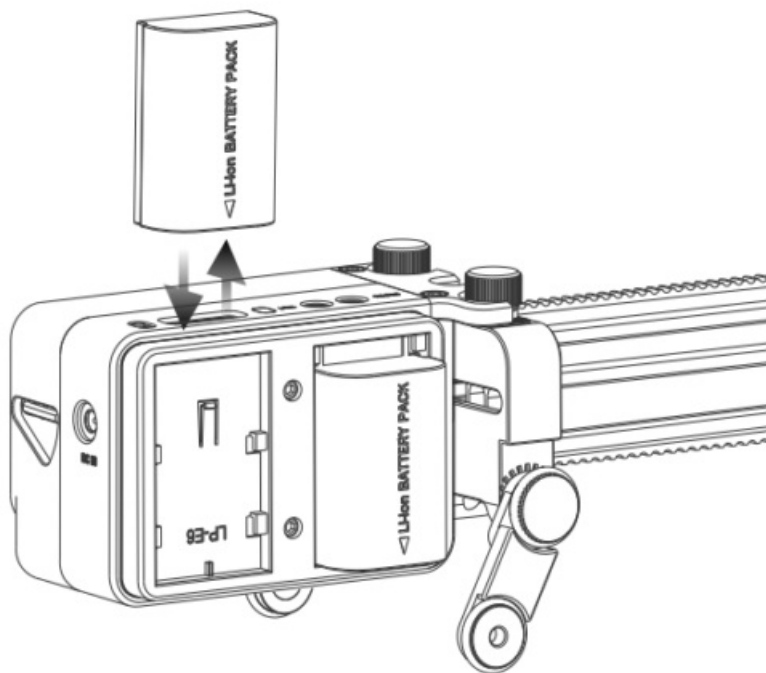

START USING



1. Download the edelkrone App to your mobile device from the App Store or
2. Google Play. Links can be found at www.edelkrone.com/products/slide-module-v3 edelkrone App will automatically pair with your Slide Module V3 through Bluetooth/Wifi. Slide Module V3 will turn on with a beep sound.

3. You are now ready to use your Slide Module V3 for SliderPLUS. Just keep following the instructions on your mobile device or visit manuals.edelkrone.com for a detailed video instruction.


DISPOSAL OF THE PRODUCT & WARNINGS

Should the product become damaged beyond repair, or if you wish to dispose of it, it must be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. Observe the regulations of your area and country that relate to the disposal of electronic products. Keep your electronic Motion Control Unit away from all sorts of liquids. In order to preserve your Motion Control Unit and battery performance at their best, use the exact same type of batteries with an equivalent level of charge during dual-battery operation.


Do not attempt to disassemble or modify any internal parts of your Motion Control Unit. If the device appears to be malfunctioning, discontinue use immediately and contact support for qualified service. Never force a different type of connector into a port. Never use or store your Motion Control Unit in areas subject to extreme temperatures, or high levels of vibration. If your motion control unit becomes unresponsive, disconnect and re-connect the power source. Make sure your DC adapter is plugged in or your batteries are properly charged. If the problem persists, contact our support team. Environmental factors may affect your Motion Control Unit's performance. Keep your product away from environmental hazards such as dust or heavy resonance. Do not use chemical materials to clean your product.

- Only use included battery plate, DC adapter or equivalent power sources.
- Use of an inappropriate power source may permanently damage your Motion Control Unit.
- If there is an impairment on the power or connector cable, stop using the Motion Control Unit immediately.
- Avoid dropping or causing physical damage to your Motion Control Unit.
- Do not place heavy objects on top of your Motion Control Unit.

Documents / Resources

	edelkrone 81228 Slide Module V3 [pdf] User Manual 81228, Slide Module V3, 81228 Slide Module V3
---	---

References

-  [YouTube](#)
-  [User Manuals - edelkrone](#)
-  [Slide Module v3 for SliderPLUS v5 / Sli... - edelkrone](#)