



EXIT Deluxe spa 156 x 70cm Inflatable Hot Tub User Manual

[Home](#) » [EXIT](#) » EXIT Deluxe spa 156 x 70cm Inflatable Hot Tub User Manual 



User manual
Deluxe
Spa
156 x 70cm
184 x 70cm



Important safety rules: Before installing and using this product read, understand, and follow all instructions carefully and keep it for future reference!

1.0 Part reference



1.



2.



3.



4.



5.



6.



7.



8.



9.



10.



11.

NOTE: Drawing for illustration purposes only. The actual product may vary. Not to scale. Before assembling your SPA pool, layout and review the contents to become familiar with all the parts you will be using during the assembly:

Contents

- [1 Introduction](#)
- [2 Guidelines for safe use](#)
- [3 Installation](#)
- [4 Assembling](#)
- [5 Usage](#)
- [6 Maintenance](#)
- [7 Trouble shooting](#)
- [8 Warranty](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

Introduction

Congratulations on choosing an EXIT Toys spa!

Have fun, be active and play outdoors.....

That's what keeps driving us to develop innovative, quality toys for cool kids and parents.

We do everything possible to develop safe products for children. As our products are classed as toys, we comply with the toughest consumer safety regulations. Before launching our products onto the market, we have independent tests carried out for certification. We also continuously test our production runs and periodically have independent tests performed again as a further check. Only products which live up to the highest EXIT Toys standard are marked with and recognized by the EXIT brand.

"We want to thank you for your custom and your confidence in this product. We're sure your kids will have as much fun as we did during development. Being open-minded, we really appreciate all comments and ideas which will help us improve our products or develop new ones.

You are invited to send your ideas to us at info@exittoys.com" Please visit www.exittoys.com and discover more cool new products. The EXIT Toys team


Guidelines for safe use



Carefully read, understand, and follow all information in this user manual before installing and using the spa. These warnings, instructions, and safety guidelines address some common risks of water recreation, but they cannot cover all risks and dangers in all cases. Always use caution, common sense, and good judgment when enjoying any water activity. Please read it carefully and keep it for future reference.

Non Swimmers safety



1. Continuous, active, and vigilant supervision of weak swimmers and non-swimmers by a competent adult is required at all times (remember that children under five are at the highest risk of drowning)
2. Designate a competent adult to supervise the spa each time it is being used;
-  3. Weak swimmers or non-swimmers should wear personal protection equipment when using the spa;
4. When the spa is not in use or unsupervised, remove all toys from the SPA pool and its surroundings to avoid attracting children to the spa.



Safety devices

1. It is recommended to install a barrier (and secure all doors and windows, where applicable) to prevent unauthorized access to the spa;
2. Barriers, spa covers, pool alarms, or similar safety devices are helpful aids, but they are not substitutes for continuous and competent adult supervision.

Safety equipment

1. It is recommended to keep rescue equipment (e.g. a ring buoy) by the spa;
2. Keep a working phone and a list of emergency phone numbers near the spa.

Safe use of the spa

1. Encourage all users especially children to learn how to swim;
2. Learn Basic Life Support (Cardiopulmonary Resuscitation – CPR) and refresh this knowledge regularly. This can make a life-saving difference in the event of an emergency;

3. Instruct all spa users, including children, what to do in case of an emergency;
4. Never dive into any shallow body of water. This can lead to serious injury or death;
5. Do not use the swimming spa when using alcohol or medication that may impair your ability to safely use the spa;
6. When spa covers are used, remove them completely from the water surface before entering the spa;
7. Protect spa occupants from water-related illnesses by keeping the spa water-treated and practicing good hygiene. Consult the water treatment guidelines in the user's manual;
8. Store chemicals (e.g. water treatment, cleaning or disinfection products) out of the reach of children.
9. Use the signage as outlined below;

Removable ladders shall be placed on horizontal surfaces.

WARNING: a drained spa outdoors may cause unknown hazards.

WARNING: Installation and assembly shall be done by adults.

WARNING: Read and follow the instruction for use and maintenance to ensure safe use of the swimming spa kit. Not following the instructions for use and maintenance can cause serious health hazards, in particular for children.

WARNING: Only for domestic outdoor use.

WARNING: Drowning hazard. Children can drown in very small amounts of water.

WARNING: Empty the spa when not in use. Do not leave a small spa empty outdoor.

WARNING: Keep children under supervision in the aquatic environment.

WARNING: No diving.

READ ALL INSTRUCTIONS AND SAFETY WARNINGS IN THIS MANUAL Failure to follow the warnings and instructions in this manual may result in serious injury, drowning, or electric shock. The safety of your children is left in your hand! The risk is the highest for children aged below 5. Be high alert all the time.

Always comply with the following instructions:


- The children should be under close and constant supervision;
- Designate one security responsible;
- Always designate a responsible person to manage spa and spa area;
- Adult supervision should always be relevant to the number of people using the spa;
- Wet the nape, chest, and legs before entering the water;
- Learn the safety gestures and especially the specifics to children;
- Prohibit diving and jumping;
- Prohibit running, and splashing games around the spa;
- Do not let an unattended child who does not swim use the spa with no life jackets on;
- Do not leave any players around and in the basin unattended;
- Always keep the water treatment products out of reach of all children.

If an incident occurs remove the injured person or child from the spa and spa area Contact emergency services for advice and guidance on how to treat an injured person or child hot tub's electrical connections must be installed in the electrical safety zones labeled 1, 2 or outside all safety zones. The measured zones are limited by walls and fixed partitions.

DANGER

Risk of accidental drowning:

- Extreme caution must be exercised to prevent unauthorized access by children.

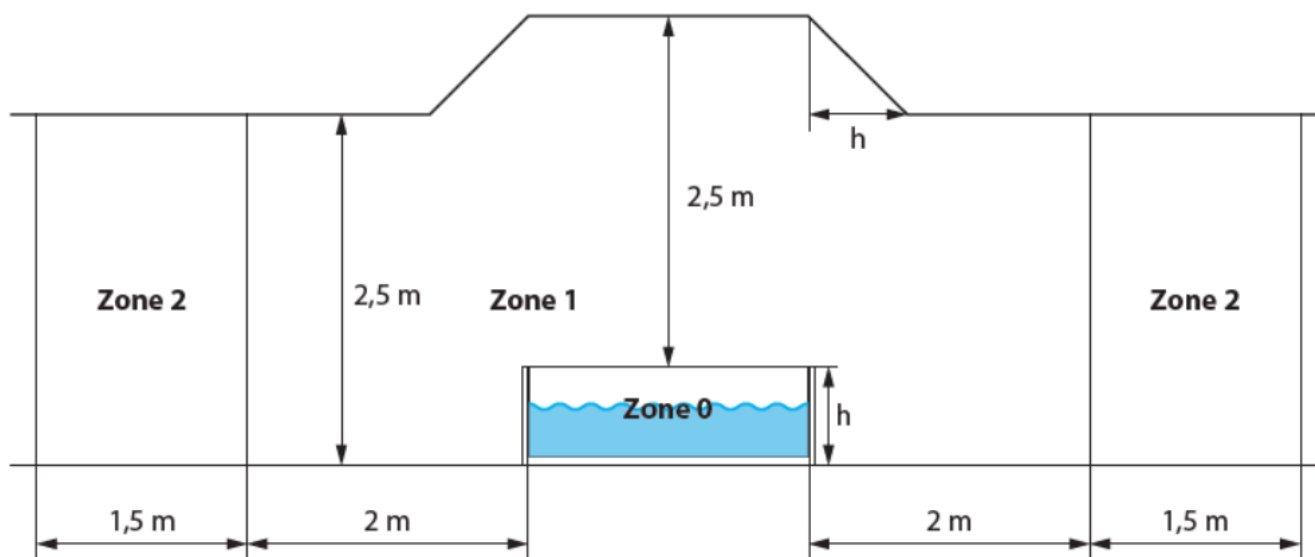

- Inspect the spa cover regularly for the leak, premature wear and tear, damage or signs of deterioration. Never use a worn or damaged cover: it will not provide the level of protection required to prevent unsupervised access to the spa by a child.
- Always lock the spa cover after each use.

Risk of injury:

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. Risk of Electric Shock:

- Do not permit any electrical appliances, such as a light, telephone, radio or television within 1.5m (5 feet) of a spa tub.
- Do not use the spa when it is raining, thundering or lightning..

WARNING

- To reduce the risk of electric shock, do not use an extension cord, timers, plug adapters or converter plugs to connect the unit to electric supply; provide a properly located outlet.
- The spa electrical appliance should be supplied through a residual current device (RCD) having a rated residual operating current not exceeding 10mA.
- Parts containing live parts, except parts supplied with safety extra-low voltage not exceeding 12V, must be inaccessible to occupants in the spa.
- Parts incorporating electrical components, except remote control devices, must be located or fixed so that they cannot fall into the spa.
- The residential electrical connection box must be located safely at a distance of at least 2m away from the spa.
- Electric installation should fulfill the local requirement or standards.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- To reduce the risk or injury, do not permit children use this product unless they are closely supervised all times.
- To reduce the risk of child drowning, supervise children all times. Attach and lock spa cover after each use.

- Make sure the floor is capable of supporting the expected load ($\geq 500\text{kg/m}^2$).
- Adequate draining system must be provided around the spa to deal with overflow water.
- To avoid damage do not leave the appliance empty for an extended period.
- To avoid damage to the pump, the spa must never be operated unless the spa is filled with water.
- Immediately leave spa if uncomfortable or sleepy. To reduce the risk of injury :
- Lower water temperatures are recommended for young children and when spa use exceeds 10 minutes.
- In order to avoid the possibility of hyperthermia (heat stress) occurring it is recommended that the average temperature of spa-pool water should not exceed 40°C (104°F).
- Since excessive water temperatures have a high potential for causing fetal damage during the early months of pregnancy, pregnant or possibly pregnant women should limit spa water temperatures to 38°C (100°F).
- Before entering a spa or hot tub the user should measure the water temperature with an accurate thermometer since the tolerance of water temperature regulating devices varies.
- The use of alcohol, drugs or medication before or during spa use may lead to unconsciousness with the possibility of drowning.
- The use of alcohol, drugs, or medication can greatly increase the risk of fatal hyperthermia in spas
- The causes and symptoms of hyperthermia may be described as follows:
- Hyperthermia occurs when the internal temperature of the body reaches a level several degrees above the normal body temperature of 37°C (98.6°F). The symptoms of hyperthermia include an increase in the internal temperature of the body, dizziness, lethargy, drowsiness, and fainting. The effect of hyperemia includes failure to perceive heat; failure to recognize the need to exit the spa; unawareness of impending hazard; fatal damage in pregnant women; physical inability to exit the spa; and unconsciousness resulting in the danger of drowning.
- Obese persons or persons with a history of heart disease, low or high blood pressure, circulatory system problems, or diabetes should consult a physician before using a spa.
- Persons using medication should consult a physician before using a spa since some medications may induce drowsiness while other medications may affect heart rate, blood pressure, and circulation.
- Check with a doctor before use if pregnant, diabetic, in poor health, or under medical care.
- People with an infectious disease should not use a spa or hot tub.
- To avoid injury exercise care when entering or exiting the spa or hot tub.
- Water temperature in excess of 40°C (104°F) may be injurious to your health.
- Never use a spa or hot tub alone or allow others to use the spa alone.
- Do not use a spa or hot tub immediately following strenuous exercise.
- Do not put the spa under 0°C (32°F) environment in order to avoid freezing if there is still water in the spa.
- Do not turn on the spa when the water is frozen.
- Never pour water with a temperature higher than 40°C (104°F) into the spa directly.
- Always unplug this product from the electrical outlet before removing, cleaning, servicing, or making any adjustment to the product.
- Never jump or dive into a spa or any shallow body of water.
- Do not bury the electrical cord. Locate the cord where it will not be damaged by lawn mowers, hedge trimmers, and other equipment.
- Do not attempt to plug in or unplug this product while standing in water or when your hands are wet.
- Do not use the spa if damaged in delivery and/or malfunctioning in any way.
- Do not add bath oil or bath salt to the spa water.
- Do not leave an empty spa outside.

- To prevent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

Installation

4.1. Site selection

WARNING: Before proceeding to install your spa, please make sure that the



WARNING: Spa installed on inadequately level surfaces are subject to leaking, forming irregularities or collapses, which can result in property damage or serious injury for those in or around the spa area! **CAUTION:** Please choose your set-up area carefully as lawn and other desirable vegetation underneath the ground cloth (if applicable) will die. Furthermore, try to avoid setting the ground cloth.

future location meets the following conditions:

- A level place in order to avoid any defect, hernia or leakage.
- Wide enough to support the spa and its pump unit.
- Able to support more than 500 kg/m².
- Sheltered from the sun and bad weather.
- Clean and free from sharp objects.
- Devoid of aggressive vegetation on the ground.

Failure to comply with these rules may result in property damage or personal injury, regularly switched on

4.2 RCD test

WARNING: The RCD plug must be tested before each use. Do not use if RCD test fails

Grounding



A place with an awning






Clean the place




A level place

You are recommended to use the services of a qualified electrician to ensure that the spa is electrically grounded by using a copper conductor of at least 2.5 mm²

			
1 Insert the plug into the power outlet	2. Press the «RESET» button the indicator light turns red	3. Press the «TEST» button on, and the indicator light turns off	4 Press the «RESET» button, the indicator light turns red. The RCD works properly

crosssection

Assembling

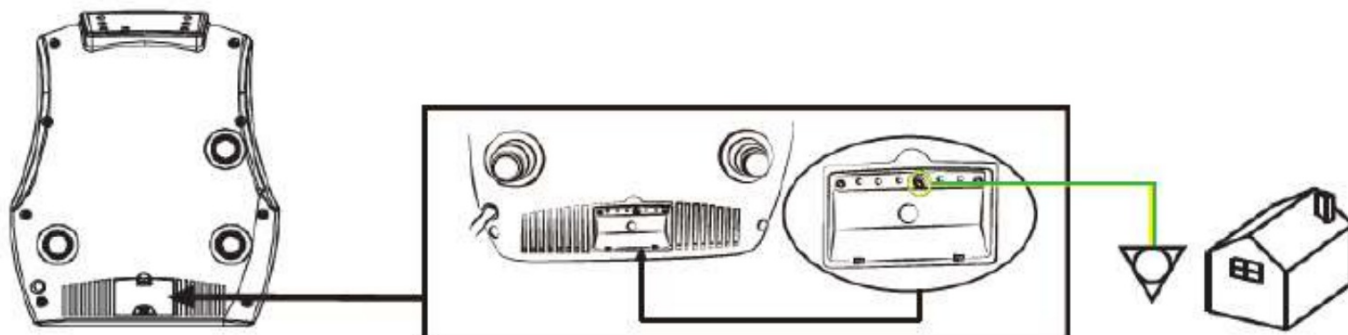

5.1 Spa cover and security

After each use, the control panel must be locked and the spa must be coated with its



Warning : Do not leave the spa unattended while filling with water. Make sure the drain fitting is plugged securely and the cap is in place. Start filling the spa with water. After about 1-inch of water is on the bottom, stop filling and smooth wrinkles out of the bottom of the spa. Pull the outer wall out from the top edge, all around the bottom of the spa, so that it fills evenly. Continue filling the spa until water level.

		
1) Choose a flat and level location.	2) Extend the liner to the chosen area.	3) Add the foam wall segment with the three holes in it for connection to the base liner.



4) Adjust the 8 segments until they form a perfect round shape. Then, ensure liner that the holes for the outer finer connection and the holes in the foam wall are still aligned.

5) Install the connecting hose on the line

6) insert the inner liner of your spa.



7) Locate the place where the two Zipping them up

8) When installed at the corner, push PE foam inward that the coat can be liner and outer liners are aligned before installed in place...

9) Make sure that the zippers of the Zippers are aligned, connect them first.



10) Smooth the liner all around the SPA ensure a good fit.

11) Connect the unit pump to the pool to using the 3 connectors to screw. Ensure the icons on the pump and the pool match up

12) insert the cartridge into its filter holder and then screw on the suction fitting inside the basin. Cartridge location as shown.



13) Check that the drain plug is dosed properly

14) Fill the spa pool until the indicated fill level is reached. Your spa is ready to be used.


top cover and it must be attached to the base protector with the safety buckles. Each safety buckle has a lock system; closed buckle, the latch in up position locks the buckle, the latch in the down position unlocks the buckle. The top cover keeps the heat from the water and secures the spa.

Usage

6.1 Control panel



Once powered up, the LED displays the current water temperature automatically.
The temperature unit selector changes the temperature units from Celsius degrees to Fahrenheit degrees.

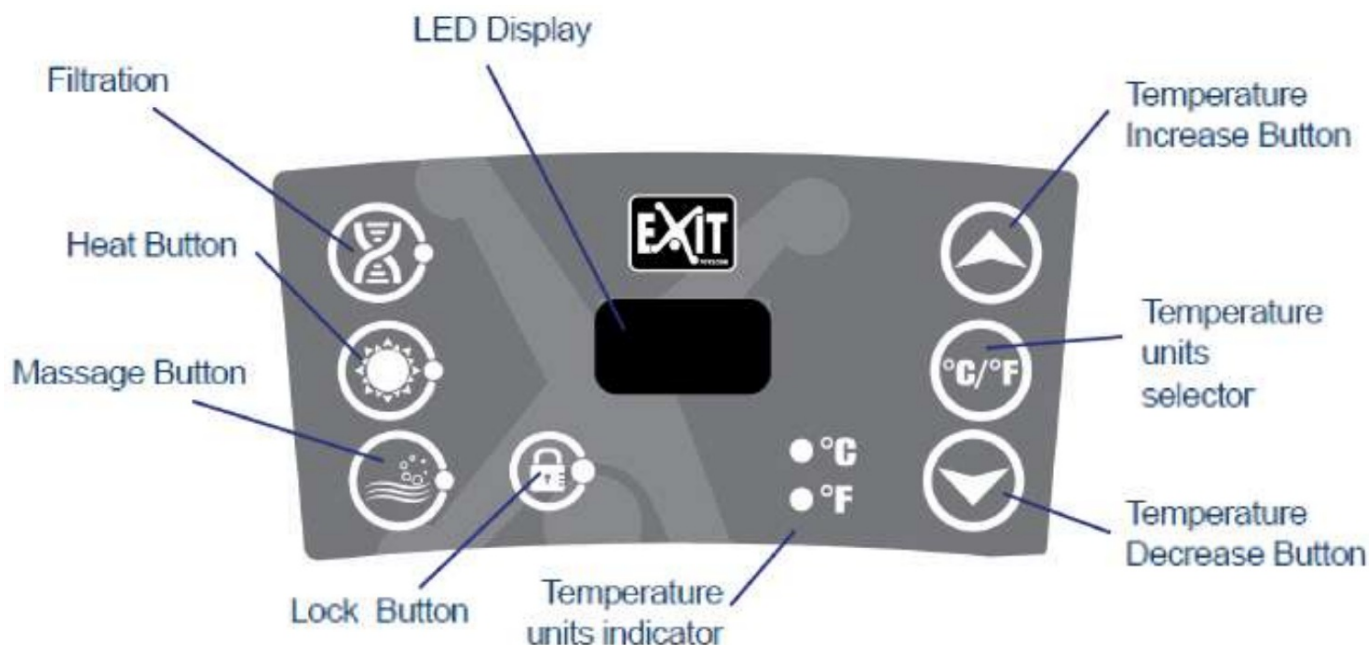

Press the temperature adjustment buttons, then the screen will flash. When it is flashing, you can set the desired temperature. The value will increase or decrease 1 degree at once. The temperature could be set between 30°C to 40°C (86°F to 104°F).

To lock or unlock the control panel, press the Lock button and hold 3 seconds. Lock the control panel when you are away to prevent other people come to changing your settings.

Press the massage button to activate the bubble massage system, the green indicator light turns on. It can be turned off by pressing it again.

Note:

- The message system will stop automatically after 30 minutes of operation. Reactivate the massage function by pressing the message button again.
- When the filter button is on, pressing the bubble button will exchange filter mode into massage mode: the filter indicator light will turn off, and the message indicator light turn on. If press the bubble button again, the massage mode will be changed back to filter mode.

Press the filter button to activate the water filtration. The green indicator light will turn on when the filtration system is activated.

Note: – If the massage function is on, the filtration can't be activated.

Press the heating button to activate the water heating and a filtering system at the same time. The green indicator light of the filter and red indicator light of heating will turn on at the same time. The pump does not stop heating until the current water temperature reaches the set temperature, and the heating system will restart after the current water temperature drops 2°C below the set temperature automatically. Maximum heating temperature: 40°C (104°F)

Important:

After 150 cumulative hours of filtration operations, an audible alarm will sound and the LCD display will show the characters CHG, followed by FIL, to remind you to change or clean the filter. You can hold the filtering button 5 seconds to turn off the buzzing. The filtering system will turn off, you can press the button to activate the filtering system again.

Note :

- With the heating system starting, the filtration system will start working together.
- After turning off the heating system, the filtration system will still work.
- If the massage function is active, the filtration and heating functions can not be activated.

6.2 Spa cover and security (optional)

After each use, the control panel must be locked and the spa must be coated with its top cover and it must be attached to the base protector with the safety buckles. Each safety buckle has a lock system; closed buckle, the latch in up position locks the buckle, the latch in the down position unlocks the buckle. The top cover keeps the heat from the water and secures the spa.

6.3. Water maintenance

WARNING: A bad spa water quality can harm your health.

Depending on the frequency and conditions of use:

- The filter cartridge should be regularly cleaned (150 hours max.).
- The filter cartridge should be replaced every 1 to 2 months.
- The spa water should be changed every 15 to 30 days.

Use a water test kit to control the parameters of the water before using the spa, or at least once a week. Use disinfection products for the spa. The treatment products should be used with caution and it is imperative to refer to their instructions.

Damage resulting from improper use of treatment products is not covered by warranty (overdose, shock treatment, ...).

1. Water balance

The water balance (pH) must be maintained between 7 and 7.4.

2. Water Sanitation

To sanitize the spa water, we suggest using an active oxygen-based treatment or bromine placed in a floating dispenser. (Dispenser sold separately).

Maintenance

7.1 Cleaning and replacing the filter cartridge

Dirty filter cartridge may contaminate the spa water and cause damage to the heating function.

1. Unscrew the filter case by turning it counter-clockwise. Take out the filter cartridge from the case
2. Rinse off the filter cartridge with a garden hose. If the filter cartridge remains dirty and discolored, the filter cartridge should be replaced.
3. Put back the cleaned filter cartridge into his case and screw it to the spa.

7.2 Disinfection

Water Sanitation: To sanitize the spa water, we suggest using an active oxygen-based treatment or bromine placed in a floating dispenser. (Dispenser sold separately) If water is heavily polluted you should not use spa. Clean spa with specialist UV lighting equipment. Seek professional advice and guidance before doing this.

Attention:

Detergent residues and dissolved solids from bathing suits and chemicals may build up on the spa walls, Use soap and water to clean the walls and rinse thoroughly with a garden hose using a direct powerful water spray

7.3 Drainage and storage

1. Check the stopper on the bottom of the spa and the drain cap.
2. Unscrew the drain cap.
3. Remove the stopper on the bottom of the spa. Completely drain all water from the spa.
4. Once empty, the spa can be cleaned with soap and water. Storage



5. Press the bubbling button to blow out the water inside the jet holes. Unplug the pump, and remove the filter cartridge from the inner wall of the spa.
6. Use a towel to wipe off the spa, and dry for 24 hours.
7. Unscrew the valves to deflate the spa.
8. Fold the spa. It is recommended that store the SPA in its original package in a warm dry place.

7.4. Repair kit

Little holes or punctures can be repaired with the repair kit included and glue reserved for spa liner.

1. Find the leak.
2. Thoroughly clean the area surrounding the leak.
3. Cut a piece of repair material in a round shape, which should be larger than the damaged area.



4. Apply adhesive to the underneath side of the patch and around the area to be repaired.
5. Put the patch on the damaged area and press down firmly. Allow 12 hours for the repair to dry. After patch has dried, apply glue around the edges for a complete seal (dry 4 hours).

Trouble shooting

8.1 Common problems

Here are some useful tips to help you to diagnose and rectify common sources of trouble.

8.2. Error code If the screen displays an error code "Ex", please refer to the table below.

E3, E4, E5, E6 error code

Cut of electricity for 5 minutes and reconnect.

Problem	Cause	Solution
Control panel the screen does not operate	Check power source	Power failure
		Reset the RCD plug / Check if the wiring system is adapted to the Power of the pump unit.
		Call for service if it does not reset
SPA pump does not heat properly	The temperature set is too low	Set to a higher temperature
	Filter Cartridge is dirty	Clean or Replace the cartridge (see chapter 5.2)
	Too low water level	Fill water to minimum water level
	Heating element defective	Call for service
The bubble massage system does not work	Pump is overheating	Cut off the power and wait until the pump has cooled.
	Auto shut-down feature (30min) is activated	Press the bubble button to reactivate
	Malfunction of the pump unit	Call for service if it does not reset
Water filtration does not work	Filter Cartridge is dirty	Clean or Replace the cartridge (see chapter 5.2)
	Inlet and outlet blocked	Clean the inlet and outlet
	The air inside the pump	Fill water to minimum water level
	Malfunction of the pump unit	Call for service if it does not reset
Pump leakage	Adaptor seal improperly	Replace the seal in the right position
	Water leakage from pump body	Check the pump body, call for service
Spa pool leakage	Spa pool is torn or punctured	Use provided repair kit (see chapter 5.4)
Water is not clean	Insufficient filtering time	Increase the filtering time
	Filter Cartridge is dirty	Clean or Replace the cartridge (see chapter 5.2)
	Pool-filled water quality	Change the pool water completely
	Improper water treatment	Refer to the chemical manufacturer's instructions
CHG FIL	After 150 cumulative hours of filtration operations, an audible alarm will sound and the LCD display will show the characters CHG, followed by FIL. to remind you to change or clean the filter. You can hold the filtering button for 5 seconds to turn off the buzzing. The filtering system will turn off, you can press the button to activate the filtering system again	

If the error code is still displayed on the control Box, please do the following instructions:

1. Check that the water line is between the high and low limits.
2. Clean or replace the filter cartridge.
3. Unscrew and clean the 2 nozzles (Entry and exit of water) inside the spa and

Cod e	Situation	Problem	Causes	Solutions
E 1	Not heating No t heating properly.	Wrong temperature control sensor.	Temperature control sensor short circuit or open circuit	Contact service center.
E 3	Not heating properly	High water temperature indicator.	1. The Filled water is over 45.0 (113°F) 2. The Filter cartridge was put on the wrong Suchen id (higher number (higher sure fraction)).	1. Cut off the power. make sure the pool water is between 2-6-44t(36-F-111 °F) If this does not solve the problem. refer to the box below. 2. Put the filter cartridge the blower suction fitting.
E4	All functions do my work. but buzzing warn.	Low water temperature indicator.	The pool water is lower than 2°C (36°F).	•Cut off the power, make sure the pool water is between 2°C-44°C (36°F-111°F) •If this does not solve the problem, refer to the box below
E 5	All functions do not work, buzzing warn.	High water temperature indicator	The filled water is over 50°C (122°F).	•Cut off the power, and turn to a qualified electrician to reset the thermostat! cutout described in the next paragraph. •If this does not solve the problem. refer to the box below
E6	Not heating and filtering properly. Buzzing warns.	Water pressure is not big enough to activate heating.	-Inlet or outlet on inner wall are blocked. Filter cartridge is too dirty. mini- •Pool water does not reach minimum water level. •Do not release air from pump Pump is wrong'	•Clean inlet and outlet 'Clean or replace filter cartridge 'Add water to reach water level . Do air release as outlined again •If this does not solve the problem, refer to the box below

remove wastes if necessary (Neaf, hairs, fur, skin...)

4). Check that the propeller of the filter pump does not contain foreign matter.

Cut the spa again electrically for 5 minutes and re-connect it, if the error code is still displayed on the control box please contact the Service Center.

Warranty

EXIT Toys products have been inspected and found free of defects prior to leaving the factory. EXIT Toys warrants this product against defects in material and workmanship for a period of time, 1 year for the pump and 6 months for the liner unless local law has special requirements. EXIT Toys warrants this product begins on the date of purchase and EXIT Toys requires the presentation of the original proof of purchase to ascertain the date. During the warranty period, EXIT Toys will either repair or replace, at its discretion, any defective products. Replacement products or repaired parts will be warranted for only the unexpired portion of the original warranty.

Shipping cost policy

The return of defective parts to the authorized service center is at the charge of the owner. During the warranty period, the return is at the charge of the service center.

Warranty Policy

This limited warranty does not apply to any defect resulting from negligence, accident, misuse, or other reason beyond EXIT Toys' reasonable control, including but not limited to: normal wear and tear, negligence or failure to follow the product instructions, improper or inadequate maintenance; connection to improper power supply; chemical water damage, loss of spa water, unauthorized product modification or repair; use for a commercial

purpose; fire, lightening, flood or other external causes. This warranty is valid only in the country of purchase in such countries where EXIT Toys sells and services the same model with identical technical specifications. Warranty service outside the country of purchase is limited to the terms and conditions of the corresponding warranty in the country of service. Where the cost of repairs or replacement is not covered by this warranty, EXIT Toys will advise the owners and the cost shall be charged to the owner. This warranty only applies to the original purchaser and terminates upon any transfer of ownership. All repairs of which warranty claims are made must be pre-authorized by an EXIT Toys service center. All the authorized selling dealer is responsible for all in-field service work carried out on your EXIT Toys product. EXIT Toys will not be liable for the results of the cost of workmanship from an unauthorized service person.

Warranty Registration

To validate your warranty, please register your product on our website EXIT Toys: www.EXITToys.com. It is essential that all information including customer name, date of purchase, serial number, spa model are indicated. Without this information, the warranty will be invalid.

Contact:

Dutch Toys Group

Edisonstraat 83, 7006RB, Doetinchem , the Netherlands

P.O. Box 369, 7000AJ, Doetinchem, the Netherlands

info@exittoys.com

www.exittoys.com

EXIT is a registered trademark of Dutch Toys Group

Documents / Resources



[EXIT Deluxe spa 156 x 70cm Inflatable Hot Tub](#) [pdf] User Manual

Deluxe spa, 156 x 70cm Inflatable Hot Tub, Deluxe spa 156 x 70cm Inflatable Hot Tub, Inflatable Hot Tub, Hot Tub, Tub

References

- Toysrus.com, [The Official Toys”R”Us Site - Toys, Games, & More](#)