





FEASYCOM FSCBT9104DI Bluetooth Module Owner's Manual

Home » FEASYCOM » FEASYCOM FSCBT9104DI Bluetooth Module Owner's Manual



Contents

- 1 FEASYCOM FSCBT9104DI Bluetooth
- Module
- **2 INTRODUCTION**
- 3 Features
- **4 General Specification**
- **5 HARDWARE SPECIFICATION**
- **6 PHYSICAL INTERFACE**
- **7 MECHANICAL DETAILS**
- **8 HARDWARE INTEGRATION SUGGESTIONS**
- 9 PRODUCT PACKAGING INFORMATION
- **10 APPLICATION SCHEMATIC**
- 11 FCC Statement BT
- **12 FAQ**
- 13 Documents / Resources
 - 13.1 References
- **14 Related Posts**



FEASYCOM FSCBT9104DI Bluetooth Module



Copyright © 2013-2024 Shenzhen Feasycom Co., Ltd. All Rights Reserved.

Shenzhen Feasycom Co., Ltd reserves the right to make corrections, modifications, and other changes to its products, documentation, and services at any time. Customers are advised to obtain the latest relevant information before placing orders. In order to minimize product risks, customers should implement sufficient design and operational safeguards. Reproduction, transfer, distribution, or storage of any part or all of the contents in this document, in any form, without written permission from Shenzhen Feasycom Co., Ltd, is strictly prohibited

Revision History

Versio n	Data	Notes	Author
V1.0	2024-10-25	Initial Version	Liu

INTRODUCTION

Overview

The FSC-BT9104DI module supports Bluetooth dual-mode V5.3 (BR/EDR/BLE) and comes equipped with Feasycom's powerful, easy-to-use firmware. It's easy to use and completely encapsulated, allowing access to Bluetooth functionality through simple ASCII commands over a serial interface, much like a Bluetooth modem.

The FSC-BT9104DI module is an ideal solution for developers who want to integrate Bluetooth wireless technology into their designs.

Features

Supporting feature

- Standard configurable RF transmission power -20dBm~10dBm, Class-2, Class-3 transmit output power
- Low Power

- Supports 1Mbps/2Mbps/3Mbps BR/EDR
- Supports 1Mbps/2Mbps LE
- Supports long-distance transmission of LE 125Kbps/500Kbps
- · RSSI is supported
- · Dynamic TX power control
- · Bluetooth host protocol stack implemented by another MCU or host AP

RF Specification

- RX Receiving sensitivity -88dBm (BR 1Mbps)
- RX Receiving sensitivity -90dBm (EDR 2Mbps)
- RX Receive sensitivity -82dBm (EDR 3Mbps)
- RX Receive sensitivity -93dBm (LE 1Mbps)
- RX Receiving sensitivity -90dBm (LE 2Mbps)
- RX Receiving sensitivity -95dBm (LE LR2 1Mbps)
- RX Receiving sensitivity -97dBm (LE LR8 1Mbps)
- TX Transmit power -20 dBm ~ 10dBm

Application

- Bluetooth KEY
- OBU
- · Smart home
- · data transmission module
- Dual-mode Bluetooth HCI controller
- High security and reliability of Bluetooth MCU applications

General Specification

Table 2-1 General Specifications

Categories	Features	Implementation		
Bluetooth				
	Bluetooth Standard	Bluetooth V5.3		
Frequency Band		2402MHz ~ 2480MHz		
Interface		UART/PIO		
	Transmit Power	+10 dBm (Max.)		
	Receiver	-90dBm EDR 2Mbps		
Size		10.8mm × 13.5mm × 2.3mm		
Operating temperature		-40°C ~+85°C		
Storage temperature		-40°C ~+85°C		
Supply Voltage		2.5V~3.6V		
Miscellaneous	Lead Free Warranty	Lead-free and RoHS compliant One Year		
Humidity		10% ~ 90% non-condensing		
MSL grade:		MSL 3		
ESD grade:		Human Body Model: Pass ±2000 V, Charge device model: Pass ±500 V,		

HARDWARE SPECIFICATION

Block Diagram and PIN Diagram

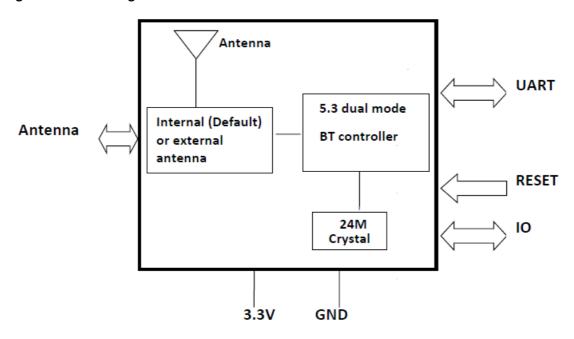


Figure 3-1-1: FSC-BT9104DI Block Diagram

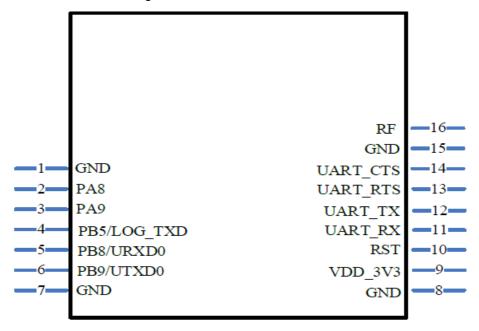


Figure 3-1-2: FSC-BT9104DI PIN Diagram (Top View)

PIN Definition Descriptions

Table 3-2 Pin definition

Pin	Pin Name	Туре	Pin Descriptions	Notes
1	GND	VSS	Power Ground	
2	PA8	I/O	Programmable I/O	
3	PA9	I/O	Programmable I/O	
4	PB5/LOG_TXD	I/O	LOG output	
5	PB8/URXD0	1	UART_RXD0(FW default)	
6	PB9/UTXD0	0	UART_TXD0(FW default)	
7	GND	VSS	Power Ground	
8	GND	VSS	Power Ground	
9	VDD_3V3	VDD	Power supply voltage 3.3V	
10	RST	1	External reset input: Active LOW	
11	UART_RX	CMOS input	UART data input	
12	UART_TX	CMOS output	UART data output	
13	UART_RTS	CMOS output	UART request to send active low	
14	UART_CTS	CMOS input	UART clear to send active low	
15	GND	VSS	Power Ground	
16	RF	RF_IN/ OUT	Bluetooth 50ohm transmitter output/receiver input NC if using internal antenna(default) Connect to external antenna(optional)	

PHYSICAL INTERFACE

UART Interface\

Table 4-1 Possible UART Settings

Parameter	Possible Values		
	Minimum –		
Baudrate	default 921600bps		
Flow control	_		
Parity	None, Odd or Even		
Number of stop bits	1		
·			
Bits per channel	8		

MSL & ESD

Table 5-1: MSL and ESD

Parameter	Value
MSL grade:	MSL 3
ESD grade	Electrostatic discharge
ESD – Human-body model (HBM) rating, JESD22- A114-F (Total samples from one wafer lot)	Pass ±2000 V, all pins
ESD – Charge-device model (CDM) rating, JESD22-C10 1-D (Total samples from one wafer lot)	Pass ±500 V, all pins

RECOMMENDED TEMPERATURE REFLOW PROFILE

Prior to any reflow, it is important to ensure the modules were packaged to prevent moisture absorption. New packages contain desiccate (to absorb moisture) and a humidity indicator card to display the level maintained during storage and shipment. If directed to bake units on the card, please check the below and follow instructions specified by IPC/JEDEC J-STD-033.

Note: The shipping tray cannot be heated above 65°C. If baking is required at the higher temperatures displayed in the below, the modules must be removed from the shipping tray.

Any modules not manufactured before exceeding their floor life should be re-packaged with fresh desiccate and a new humidity indicator card. Floor life for MSL (Moisture Sensitivity Level) 3 devices is 168 hours in ambient environment 30°C/60%RH.

Feasycom module must use Step-Stencil, suggestion using the stencil thickness about 0.16-0.2mm,it could be modify with the product.

Table 6-1: Recommended baking times and temperatures

	125°C Baking Temp.		90°C/≤ 5%RH Baking Temp.		40°C/ ≤ 5%RH Baking Temp.	
MSL	Saturated @ 30°C/85%	Floor Life Lim it +72 hours @ 3 0°C/60%	Saturated @ 30°C/85%	Floor Life Limit +72 hours @ 30°C/60%	Saturated @ 30°C/85%	Floor Life Limit +72 hours @ 30°C/60%
3	9 hours	7 hours	33 hours	23 hours	13 days	9 days

Feasycom surface mount modules are designed to be easily manufactured, including reflow soldering to a PCB. Ultimately it is the responsibility of the customer to choose the appropriate solder paste and to ensure oven temperatures during reflow meet the requirements of the solder paste. Feasycom surface mount modules conform to J-STD-020D1 standards for reflow temperatures.

The soldering profile depends on various parameters necessitating a set up for each application. The data here is given only for guidance on solder reflow.

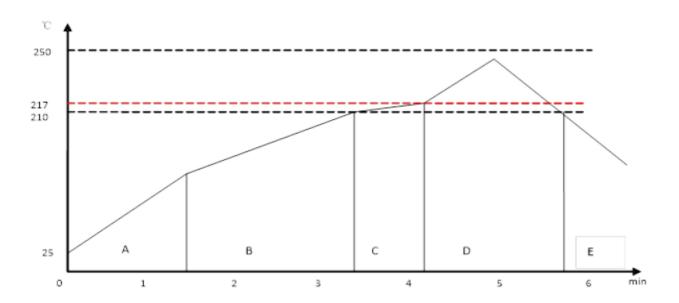


Figure 6-1 Typical Lead-free Re-flow

- **Pre-heat zone (A)** This zone raises the temperature at a controlled rate, typically 0.5 2 °C/s. The purpose of this zone is to preheat the PCB board and components to 120 ~ 150 °C. This stage is required to distribute the heat uniformly to the PCB board and completely remove solvent to reduce the heat shock to components.
- Equilibrium Zone 1 (B) In this stage the flux becomes soft and uniformly encapsulates solder particles and spread over PCB board, preventing them from being re-oxidized. Also with elevation of temperature and liquefaction of flux, each activator and rosin get activated and start eliminating oxide film formed on the surface of each solder particle and PCB board. The temperature is recommended to be 150° to 210° for 60 to 120 second for this zone.
- Equilibrium Zone 2 (C) (optional) In order to resolve the upright component issue, it is recommended to keep the temperature in 210 217 ° for about 20 to 30 second.
- Reflow Zone (D) The profile in the figure is designed for Sn/Ag3.0/Cu0.5. It can be a reference for other lead-free solder. The peak temperature should be high enough to achieve good wetting but not so high as to cause component discoloration or damage. Excessive soldering time can lead to intermetallic growth which can result in a brittle joint. The recommended peak temperature (Tp) is 230 ~ 250 °C. The soldering time should be

30 to 90 second when the temperature is above 217 °C.

• Cooling Zone (E) — The cooling ate should be fast, to keep the solder grains small which will give a longer-lasting joint. Typical cooling rate should be 4 °C.

MECHANICAL DETAILS

Mechanical Details

• **Dimension:** 10.8mm(W) x 13.5mm(L) x 2.3 mm(H) Tolerance: ±0.2mm

• Module size: 10.8mm X 13.5mm Tolerance: ±0.2mm

• Pad size: 1mmX0.6mm Tolerance: ±0.1mm

Pad pitch: 1.0mm Tolerance: ±0.1mm
(Residual plate edge error: < 0.5mm)

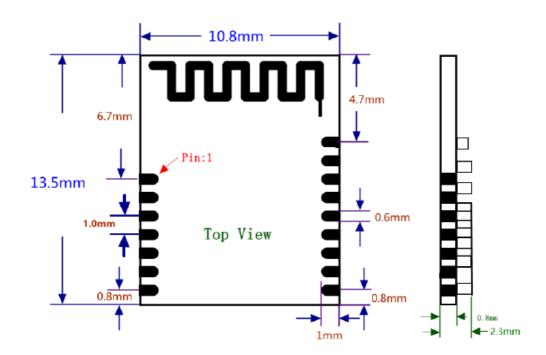


Figure 7-1 FSC-BT9104DI footprint Layout Guide (Top View)

HARDWARE INTEGRATION SUGGESTIONS

Soldering Recommendations

The FSC-BT9104DI is compatible with industrial standard reflow profile for Pb-free solders. The reflow profile used is dependent on the thermal mass of the entire populated PCB, heat transfer efficiency of the oven and particular type of solder paste used. Consult the datasheet of particular solder paste for profile configurations. Feasycom will give following recommendations for soldering the module to ensure reliable solder joint and operation of the module after soldering. Since the profile used is process and layout dependent, the optimum profile should be studied case by case. Thus following recommendation should be taken as a starting point guide.

Layout Guidelines (Internal Antenna)

It is strongly recommended to use good layout practices to ensure proper operation of the module. Placing copper or any metal near antenna deteriorates its operation by having effect on the matching properties. Metal shield around the antenna will prevent the radiation and thus metal case should not be used with the module. Use grounding vias separated max 3 mm apart at the edge of grounding areas to prevent RF penetrating inside the PCB and causing an unintentional resonator. Use GND vias all around the PCB edges.

The mother board should have no bare conductors or vias in this restricted area, because it is not covered by stop mask print. Also no copper (planes, traces or vias) are allowed in this area, because of mismatching the on-board antenna.

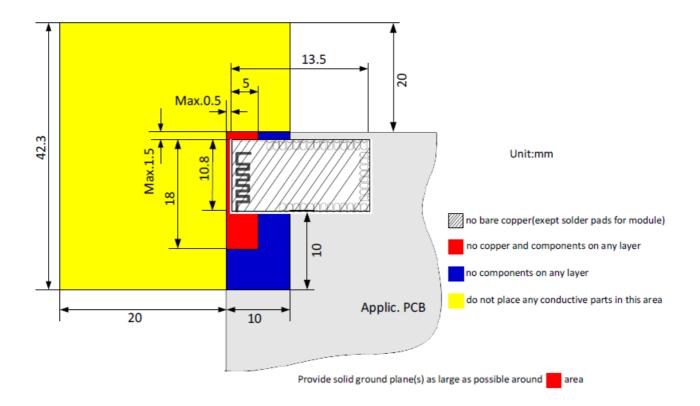


Figure 8-2 Restricted Area (Design schematic, for reference only. Unit: mm)

Following recommendations helps to avoid EMC problems arising in the design. Note that each design is unique and the following list do not consider all basic design rules such as avoiding capacitive coupling between signal lines.

Following list is aimed to avoid EMC problems caused by RF part of the module. Use good consideration to avoid problems arising from digital signals in the design.

Ensure that signal lines have return paths as short as possible. For example if a signal goes to an inner layer through a via, always use ground vias around it. Locate them tightly and symmetrically around the signal vias. Routing of any sensitive signals should be done in the inner layers of the PCB. Sensitive traces should have a ground area above and under the line. If this is not possible, make sure that the return path is short by other means (for example using a ground line next to the signal line).

Layout Guidelines (External Antenna)

Placement and PCB layout are critical to optimize the performances of a module without on-board antenna designs. The trace from the antenna port of the module to an external antenna should be 50Ω and must be as short as possible to avoid any interference into the transceiver of the module. The location of the external antenna and RF-IN port of the module should be kept away from any noise sources and digital traces. A matching network might be needed in between the external antenna and RF-IN port to better match the impedance to minimize the return loss.

As indicated in below, RF critical circuits of the module should be clearly separated from any digital circuits on the system board. All RF circuits in the module are close to the antenna port. The module, then, should be placed in this way that module digital part towards your digital section of the system PCB.

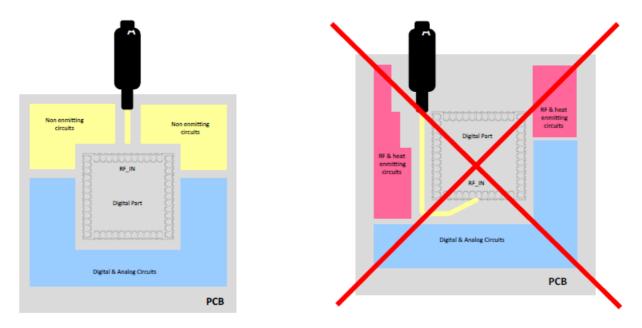


Figure 8-3: Placement the Module on a System Board

Antenna Connection and Grounding Plane Design

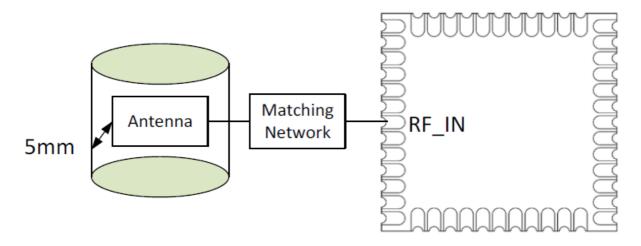


Figure 8-3-1: Leave 5mm Clearance Space from the Antenna

General design recommendations include

- The length of the trace or connection line should be kept as short as possible.
- Distance between connection and ground area on the top layer should at least be as large as the dielectric thickness.
- Routing the RF close to digital sections of the system board should be avoided.
- To reduce signal reflections, sharp angles in the routing of the micro strip line should be avoided .Chamfers or fillets are preferred for rectangular routing; 45-degree routing is preferred over Manhattanstyle 90-degree routing.

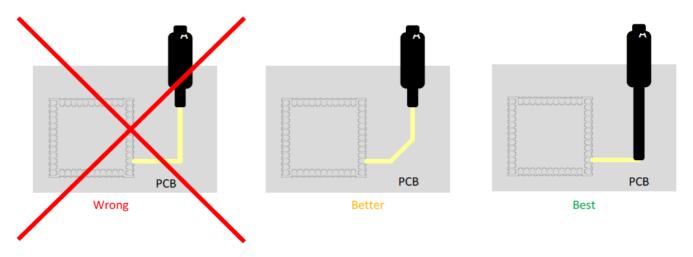


Figure 8-3-2: Recommended Trace Connects Antenna and the Module

- Routing of the RF-connection underneath the module should be avoided. The distance of the micro stripline to the ground plane on the bottom side of the receiver is very small and has huge tolerances. Therefore, the impedance of this part of the trace cannot be controlled.
- Use as many vias as possible to connect the ground planes.

PRODUCT PACKAGING INFORMATION

Default Packing



Figure 9-1: Tray Dimension: 140mm * 265mm Tray vacuum

Packing box (Optional)


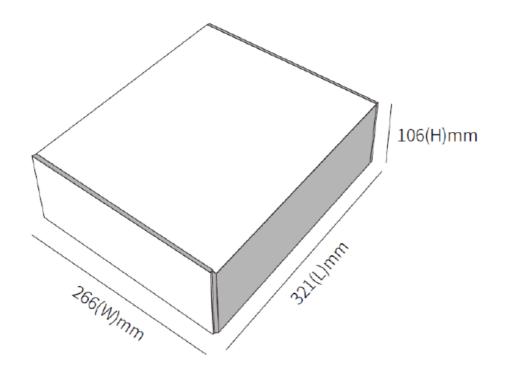


Figure 9-2: Packing box(Optional)

- If other packing is required, please confirm with the customer
- Packing: 1000pcs per carton (Minimum packing quantity)
- The outer packing size is for reference only, please refer to the actual size

APPLICATION SCHEMATIC

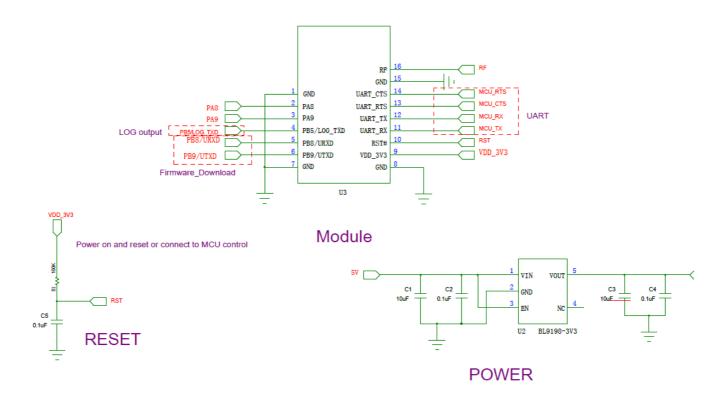

FCC Statement BT

FCC Statement

FCCID: 2AMWO-FSCBT9104DI

FCC standards: FCC CFR Title 47 Part 15 Subpart C Section 15.247

Integral antenna with antenna gain 2dBi

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This modular complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

If the FCC identification number is not visible when the module is installed inside another device, then the outside of the device into which the module is installed must also display a label referring to the enclosed module. This exterior label can use wording such as the following: "Contains Transmitter Module FCC ID: 2AMWO-FSCBT9104DI" When the module is installed inside another device, the user manual of the host must include warning statement as paragraphs A, B and C above.


The devices must be installed and used in strict accordance with the manufacturer's instructions as described in the user documentation that comes with the product.

Any company of the host device which install this modular with modular approval should perform the test of radiated & conducted emission and spurious emission, etc. according to FCC part 15C: 15.247 and 15.209 & 15.207,15B Class B requirement, Only if the test result comply with FCC part 15C: 15.247 and 15.209 & 15.207,15B Class B requirement then the host can be sold legally.

FAQ

- Q: What is the default baud rate for the UART interface?
 - A: The default baud rate for the UART interface is 921.6k baud.
- Q: Can the module be controlled using ASCII commands?
 - A: Yes, the module can be controlled using simple ASCII commands over a serial interface.

Documents / Resources

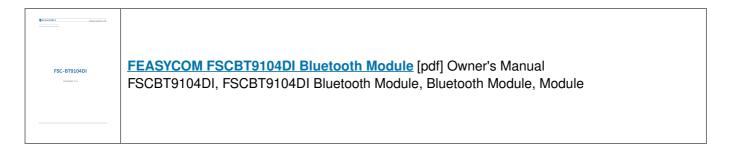

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.