



FORTIN 2024 Standard-Key Remote Starters and Alarm Systems Installation Guide

[Home](#) » [FORTIN](#) » FORTIN 2024 Standard-Key Remote Starters and Alarm Systems Installation Guide 

FORTIN 2024 Standard-Key Remote Starters and Alarm Systems Installation Guide



Vehicle functions supported in this diagram (functional if equipped)

YEARS


- Lock
- Unlock
- Arm
- Disarm
- Trunk (open)
- Parking Lights
- Tachometer
- Door Status

- Trunk Status
- Hand-Brake Status
- Foot-Brake Status
- OEM Remote monitoring
- R.S. OEM remote Stand Alone compatible



BYPASS FIRMWARE VERSION VERSION LOGICIELLE CONTOURNEMENT

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

Program bypass option:	UNIT OPTION OPTION UNITE		DESCRIPTION
	C1		OEM Remote status (Lock/Unlock) monitoring
IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF NON	Hood trigger (Output Status).
Program bypass option (If equipped with OEM alarm):	D2		Unlock before / Lock after (Disarm OEM alarm)

Program remote starter option for R.S. OEM REMOTE STAND ALONE:



FUNCTION	MODE	DESCRIPTION
38	2	Enable : Press 3x Lock to remote start with the OEM remote

Contents

- [1 MANDATORY INSTALL](#)
- [2 DESCRIPTION](#)
- [3 AUTOMATIC TRANSMISSION WIRING CONNECTION](#)
- [4 PROGRAMMING PROCEDURE](#)
- [5 REMOTE STARTER FUNCTIONALITY](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

MANDATORY INSTALL

*HOOD NON PIN




HOOD STATUS : THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.




THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION


① Under steering column
Sous la colonne de direction

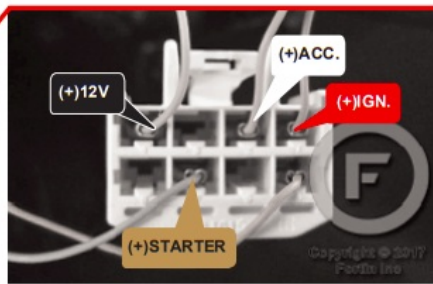

② Back of fuse box
Au dos de la boîte à fusibles

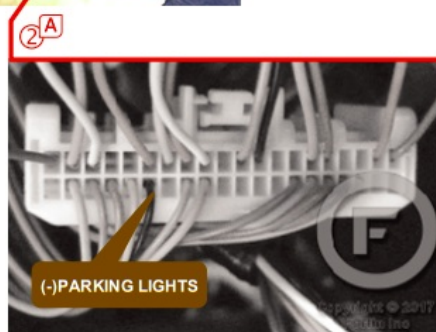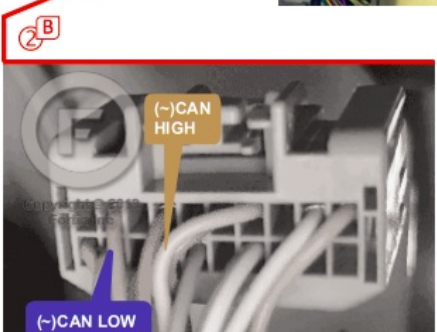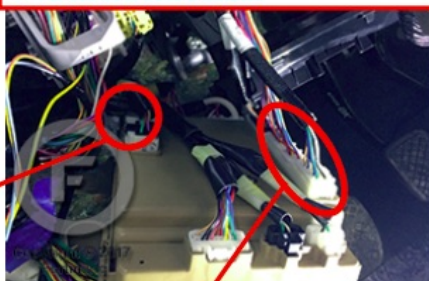


AUTOMATIC TRANSMISSION WIRING CONNECTION

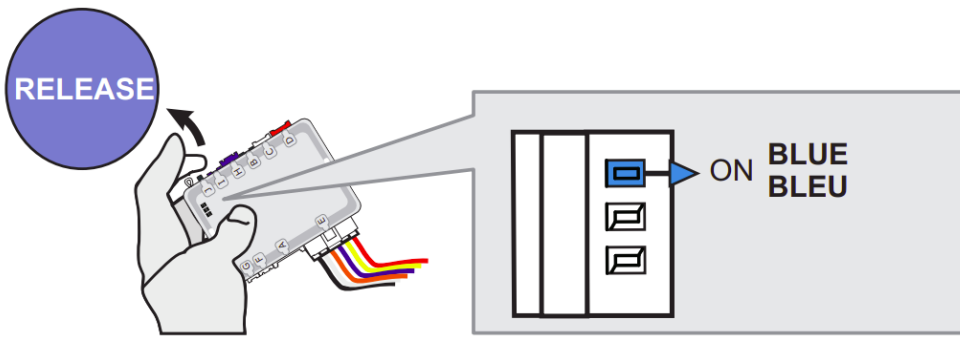


If the BLUE LED is not ON soli disconnect the 6-Pin Main connector and go back to step 1.

Insert the required remaining connectors.

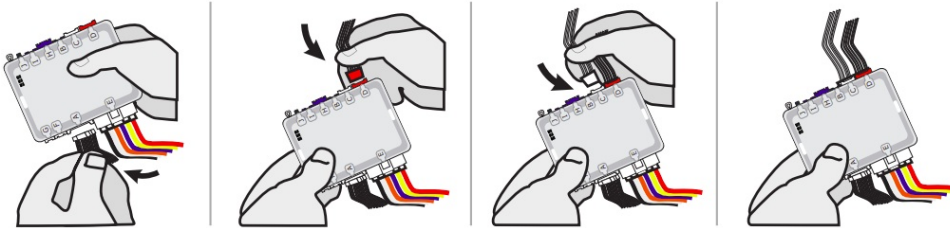


Turn the Ignition to the ON/RUN position.

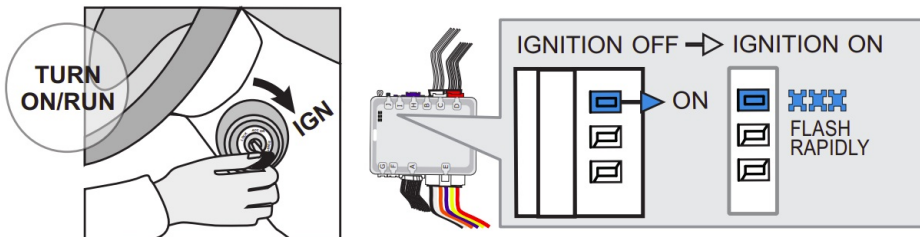

The BLUE LED will flash rapidly

Turn the Ignition to the OFF position.

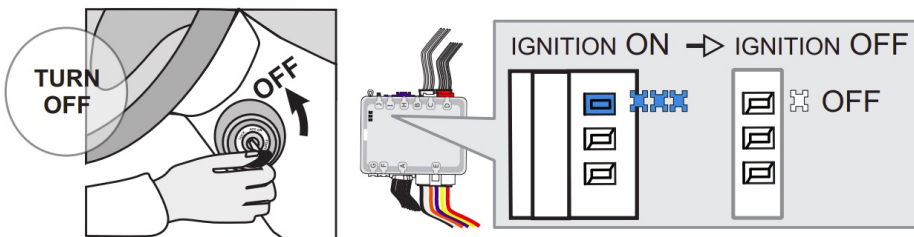


The BLUE LED will turn off.



The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE

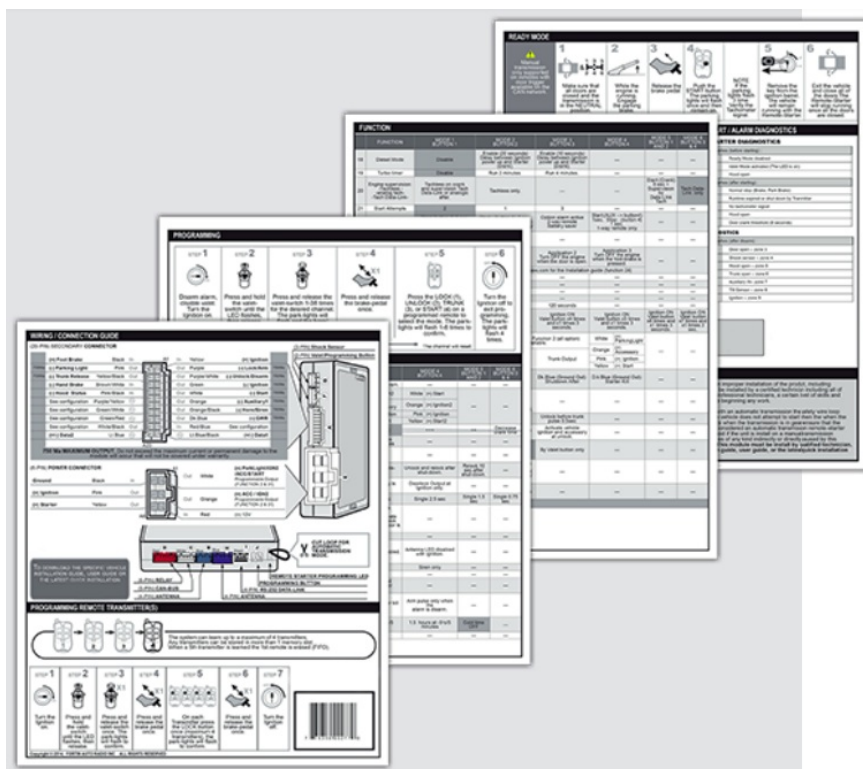

REMOTE STARTER FUNCTIONALITY




All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.

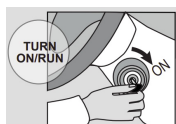

Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

Notice: Updated Firmware and Installation Guides

Updated firmware and installation guides are posted on our web site on a regular basis. We recommend that you update this module to the latest firmware and download the latest installation guide(s) prior to the installation of this product.

Module label

WARNING

The information on this sheet is provided on an (as is) basis with no representation or warranty of accuracy whatsoever.

It is the sole responsibility of the installer to check and verify any circuit before connecting to it. Only a computer safe logic probe or digital multimeter should be used. FORTIN ELECTRONIC SYSTEMS assumes absolutely no liability or responsibility whatsoever pertaining to the accuracy or currency of the information supplied. The installation in every case is the sole responsibility of the installer performing the work and FORTIN ELECTRONIC SYSTEMS assumes no liability or responsibility whatsoever resulting from any type of installation, whether performed properly, improperly or any other way. Neither the manufacturer or distributor of this module is responsible of damages of any kind indirectly or directly caused by this module, except for the replacement of this module in case of manufacturing defects. This module must be installed by qualified technician. The information supplied is a guide only. This instruction guide may change without notice. Visit www.fortinbypass.com to get the latest version.

TECH SUPPORT



Tél: 514-255-HELP (4357) 1-877-336-7797



www.fortinbypass.com



WEB UPDATE





[FORTIN 2024 Standard-Key Remote Starters and Alarm Systems](#) [pdf] Installation Guide
2024, 2024 Standard-Key Remote Starters and Alarm Systems, Standard-Key Remote Starters
and Alarm Systems, Remote Starters and Alarm Systems, Starters and Alarm Systems, Alarm
Systems, Systems

Manuals+.