

Foundations 5240259 Polyethylene Horizontal Recessed Changing Station



Foundations 5240259 Polyethylene Horizontal Recessed Changing Station Instruction Manual

[Home](#) » [Foundations](#) » Foundations 5240259 Polyethylene Horizontal Recessed Changing Station Instruction Manual 

Contents

- [1 Foundations 5240259 Polyethylene Horizontal Recessed Changing Station](#)
- [2 Product Information](#)
- [3 Installation Instructions](#)
- [4 INSTALLATION INSTRUCTIONS](#)
- [5 PARTS LIST](#)
- [6 INSTALLATION](#)
- [7 OPERATION](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)



Foundations 5240259 Polyethylene Horizontal Recessed Changing Station



Product Information

Specifications

- Material: Polyethylene
- Mounting: Recessed
- Compliance: A.D.A. standards
- Hardware: Wood screws, finishing washer, door/wall plate

Installation Instructions

Tools Required

- Level
- Measuring tape
- Power drill with 3/16 masonry bit
- Power screwdriver with bullnose Phillips bit
- Truss head spanner bit

Installation Steps

1. Ensure proper blocking is in place.
2. Mark mounting hole locations on blocking studs.
3. Drill pilot holes in the blocking studs.
4. Secure the changer using wood screws and finishing washers.
5. Tighten all screws.

Operation Instructions

1. Rotate base downward.
2. Place infant on the changing surface.
3. Use the restraint system as described.

4. After changing the child, remove the restraint system and rotate the base back up against the wall.

Maintenance and Cleaning

Check all hardware and components monthly to ensure everything is tight and undamaged. Contact customer service for replacement parts if needed. Do not substitute parts.

FAQ

Q: What should I do if any components are missing or damaged?

A: Take the unit out of service and contact customer service at 1- [330-722-5033](tel:330-722-5033) for replacement parts.

Polyethylene Horizontal Recessed
Changing Station
Installation Instructions
(Recessed Mount)

IMPORTANT: RETAIN FOR FUTURE REFERENCE. READ CAREFULLY

Thank you for purchasing a quality Foundations® product. Our goal is 100% consumer satisfaction! please contact our customer service team at 1-[330-722-5033](tel:330-722-5033) or www.foundations.com. Please DO NOT contact your distributor or reseller as we are better prepared to assist you.

WARNING


- Failure to follow these warnings and the installation instructions could result in serious injury or death.
- Read all instructions before installing diaper changing station. Keep these instructions. DO NOT discard.

INSTALLATION INSTRUCTIONS

ADULT INSTALLATION REQUIRED.

TOOLS REQUIRED:

- Level(A)
- Measuring tape (B)
- Power drill with 3/16" masonry bit (C)
- Power screwdriver with bull nose phillips bit (D) Truss head spanner bit (E)

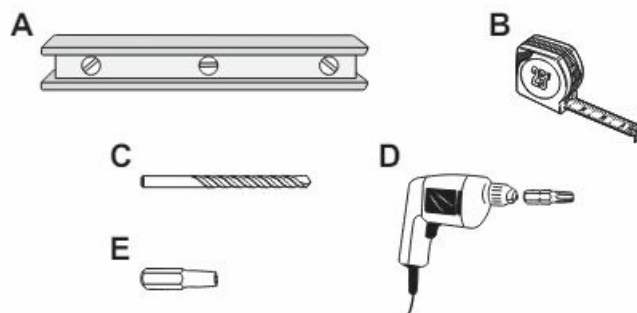

- READ ALL INSTRUCTIONS BEFORE ASSEMBLY OF DIAPER CHANGING STATION.


- Unpack carton and identify all parts.

WARNING

- This changer has six (6) recess mounting holes.
- The diaper changing station is no stronger than the anchors or walls to which they are attached and, therefore, **MUST** be firmly secured in order to support the weight they are intended to support. Contact an architect or building contractor if any questions.

PARTS LIST

Parts Description	Quantity
Hardware for recessed installation:	
3" x 1/4" Wood Screws	6
3/4" Finishing Washer	6
Door / Wall Plate	1

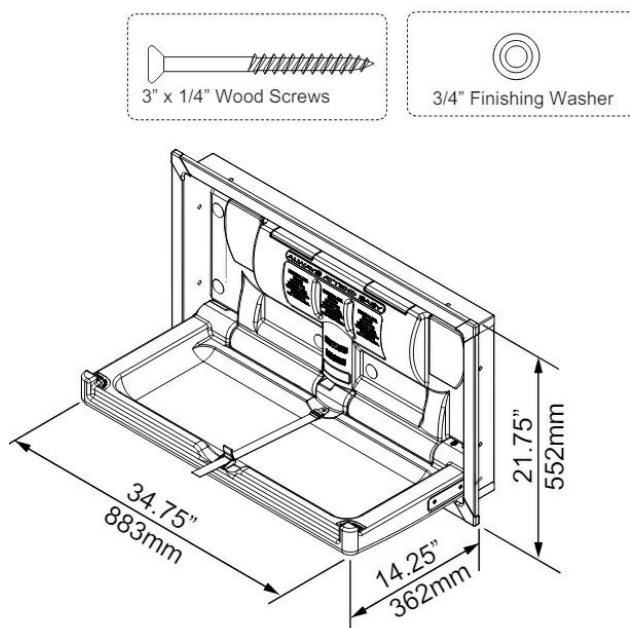

Door / wall plate to be mounted on outside of restroom door.

A.D.A. Compliance:


- 306.3 Knee Clearance
- 307.2 Maximum Protruding Objects
- 308.2 Forward Reach
- 308.3 Side Reach
- 309.4 Operation
- 902.3 Work Surface

Compliant when properly installed.


INSTALLATION

Recommended Blocking:

Wood double stud blocking is necessary. Contact an architect and with building codes (Fig. a.).

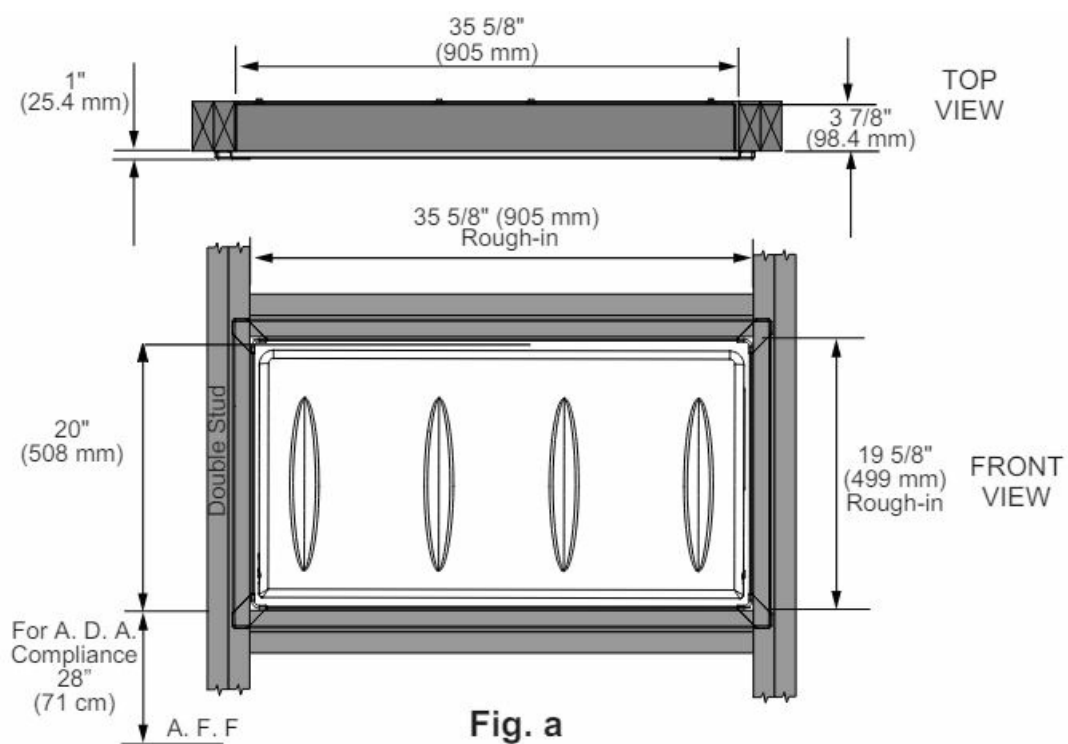

For A. D. A. compliance, top of lower double stud should be 28" (71 cm) from the floor.

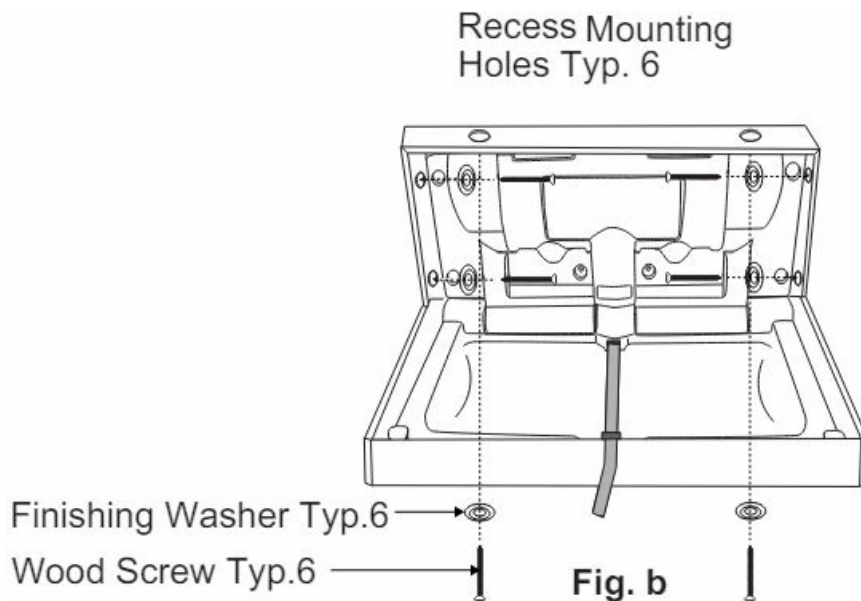

Truss Head Spanner Screws

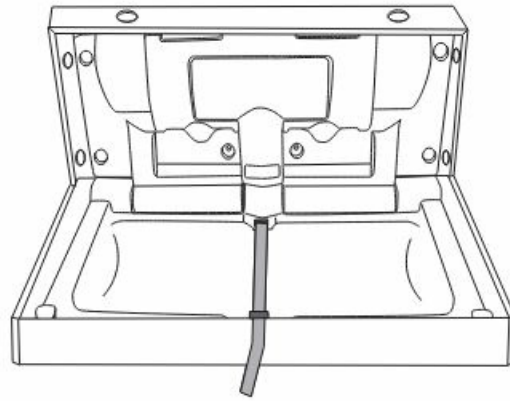


Fig. c

1. Slide changer into blocking area and mark mounting hole location on blocking studs.

HINT: This may require 2 additional people to help hold changer in position while you are marking the locations.

2. Use a power drill with a 3/16" bit and drill six (6) pilot holes in the blocking studs.
3. Shim changer for a snug fit.

NOTE: If lower holes are inaccessible, remove plastic unit from steel back by removing the 4 Truss Head Spanner Screws (fig. c). Once steel back is attached to blocking, reconnect plastic wall to steel back using the same spanner screws.

4. Align holes in changer with drilled holes and secure using the wood screws and finish washers. Wood screws have been provided and are for wood only (Fig. b).

NOTE: It is installers responsibility to provide correct fasteners for other substrates.

5. Ensure all six (6) screws are tight.

OPERATION

Rotate base downward. Place infant on top of the changing surface. Use restraint system as described below. After child has been changed, remove restraint system and rotate base back up against the wall.

USE OF RESTRAINT SYSTEM:

Place child so restraint strap is located at abdomen. Rotate top of buckle upward and insert strap in buckle. Pull strap through buckle until snug against infant. Rotate top of buckle downward to lock the strap into place. Reverse steps to loosen strap.

MAINTENANCE AND CLEANING:

Check all hardware and components monthly or as required to ensure hardware is tight and there are no missing or damaged components. Take unit out of service if any component is missing or damaged and contact customer service to order replacement parts. Do not substitute parts.


For replacement parts, contact customer service at 1-[330-722-5033](tel:330-722-5033).

Clean by using a damp cloth with mild soap or mild multi-purpose cleaner. Do not use any strong chemical cleaners or cleaning agents that may be hazardous to children.

WARNING

- DO NOT leave child unattended.
- Avoid serious injury from falling or sliding out. Always use restraint system.
- Adding excessive weight such as parcels, packages, or accessories to the unit or to the bag hooks that exceed the total weight limit of 50 pounds (22.7 kg) may cause the unit to be unstable or may cause a hazardous unstable condition to exist.
- DO NOT add a changing pad to this product.
- DO NOT use this product when any part is broken, torn or missing.
- Be aware of the risk of open fires and other sources of strong heat, such as electric bar fires, gas fires, etc. in the near the vicinity of changing unit.
- Intended for children up to 15 kg (EU) and up to 50 pounds (22.7kg) (US).

Documents / Resources

	<p>Foundations 5240259 Polyethylene Horizontal Recessed Changing Station [pdf]</p> <p>Instruction Manual</p> <p>5240259 Polyethylene Horizontal Recessed Changing Station, 5240259, Polyethylene Horizontal Recessed Changing Station, Horizontal Recessed Changing Station, Recessed Changing Station, Changing Station</p>
--	--

References

- [🔴 Cribs, Play Yards, Baby Changing Stations & More | Foundations](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.