

FREAKS AND GEEKS HS-SW139 Switch Joy Con charging Dock User Manual

Home » FREAKS AND GEEKS » FREAKS AND GEEKS HS-SW139 Switch Joy Con charging Dock User Manual

Contents


- 1 FREAKS AND GEEKS HS-SW139 Switch Joy Con charging Dock
- **2 Product Overview**
- **3 Product Parameters**
- 4 Features
- **5 Operating Instructions**
- **6 Electrical Parameters**
- 7 FAQs
- **8 CONTACT INFORMATION**
- 9 Documents / Resources
 - 9.1 References



FREAKS AND GEEKS HS-SW139 Switch Joy Con charging Dock



Product Overview

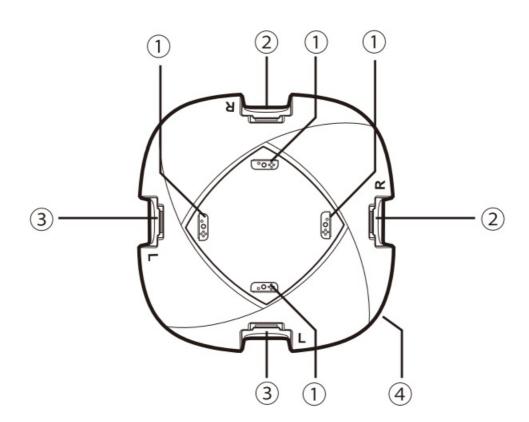

Product Parameters


- 1. Charging Indicator Light
- 2. Joy-Con Charging Port (Right)
- 3. Joy-Con Charging Port (Left)
- 4. Power Input

Features

- 1. Designed for charging Switch Joy-Cons.
- 2. Equipped with a charging indicator, it can charge 4 Joy-Cons (two sets) simultaneously.
- 3. Over-current Protection: The normal charging current for each port is approximately 300mA, with a maximum allowable current of 400mA. If the current exceeds 400mA, the port will activate over-current protection. The corresponding red LED will flash rapidly, and charging will be disabled. Normal charging resumes when the Joy-Con is removed.
- 4. Low Voltage/Over Voltage Protection:
 - If the power input voltage exceeds 5.6V, over-voltage protection will activate, the red LED will flash rapidly, and charging will be disabled. Normal charging resumes when the voltage drops below 5.3V.
 - If the power input voltage drops below 4.2V, low-voltage protection will activate, the red LED will flash rapidly, and charging will be disabled. Normal charging resumes when the voltage rises above 4.7V.
- 5. Full Charge Detection:
 - When the charging current of a Joy-Con drops below 40mA for 5 seconds, it is considered fully charged, and the green LED lights up. If a fully charged Joy-Con's current exceeds 70mA, charging will resume, the green LED will turn off, and the red LED will light up.

Operating Instructions

- 1. Power on the adapter (5V/2A) and connect it to the charger with the supplied Type-C cable.
- 2. Insert the Joy-Cons into the corresponding L (left) and R (right) ports.
- 3. The red light indicates charging, and the green light indicates a full charge. Supports the original console adapter).

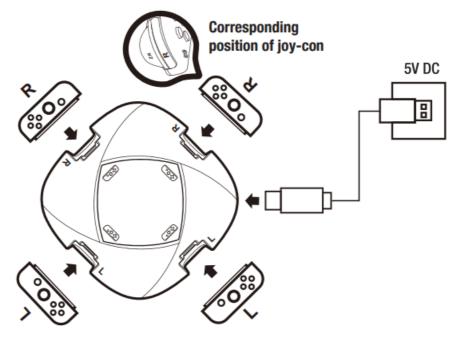

Electrical Parameters

Input Voltage: 5V DCInput Current: 2AOutput Voltage: 5V

• Charging Current: 300mA x 4

• Rated Power: 1.5W x 4

Warning

• Connect, install, and remove this product with proper force; do not twist or pull the connectors and cables.

- Avoid getting water or other liquids on the product or its connectors.
- Keep the product in a dry place and away from fire. Do not expose it to humidity, high temperatures, fumes, etc.
- Do not use the power cable if it or its connectors are damaged, cracked, or broken.
- Ensure the power cable is correctly plugged into the power outlet and properly connected to the port on the back of the docking station.
- Do not disassemble, modify, or repair the product yourself. Any repairs must be carried out by the manufacturer, authorized representatives, or qualified technicians.
- If any unusual sounds, heat, or odors occur with this product, stop using it immediately, disconnect the power cable from the outlet, and unplug all other cables.
- If the product is not used for an extended period, disconnect the power cable from the outlet. The power outlet should be near the product and easily accessible for plugging and unplugging the power cable.

Regulatory information

Disposal of waste electrical and electronic equipment.

This symbol on the product or its packaging indicates that the product must not be disposed of with household waste. It is your responsibility to dispose of them at an appropriate collection point for the recycling of electrical and electronic equipment. Separate collection and recycling help to preserve natural resources and avoid potential negative effects on human health and the environment due to the possible presence of hazardous substances in electrical or electronic equipment, which could be caused by incorrect disposal. For more information on the disposal of electrical and electronic waste, contact your local authority, your household waste collection service, or the shop where you purchased this product.

Simplified European Union Declaration of Conformity:

Trade Invaders hereby declares that this product complies with the essential requirements and other provisions of Directives EMC 2011/65/UE, 2014/53/UE, 2014/30/UE. The full text of the European Declaration of Conformity is available on our website www.freaksandgeeks.fr

FAQs

- Q: What do the indicator lights signify?
 - A: The red light indicates charging, and the green light indicates a full charge.
- Q: How many Joy-Cons can be charged simultaneously?
 - A: The dock can charge 4 Joy-Cons at once, equivalent to two sets.

CONTACT INFORMATION

• Company: Trade Invaders S.A.S.

• Address: 28, Avenue Ricardo Mazza

Saint-Thibéry, 34630

- Country: France
- sav@trade-invaders.com.

Documents / Resources



FREAKS AND GEEKS HS-SW139 Switch Joy Con charging Dock [pdf] User Manual HS-SW139, HS-SW139 Switch Joy Con charging Dock, HS-SW139, Switch Joy Con charging Dock, Joy Con charging Dock, Con charging Dock, Dock

References

- R Accueil Freaks and Geeks
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.