

# FTDI FT4232HP USB Devices with Type-C Power User Guide



[Home](#) » [FTDI](#) » FTDI FT4232HP USB Devices with Type-C Power User Guide 

## Contents

- [1 FTDI FT4232HP USB Devices with Type-C Power](#)
- [2 Introduction](#)
- [3 Overview](#)
- [4 Configuration Parameters](#)
- [5 Power Role Swap Options](#)
- [6 Contact Information](#)
- [7 Appendix A – References](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)
- [9 Related Posts](#)



**FTDI FT4232HP USB Devices with Type-C Power**

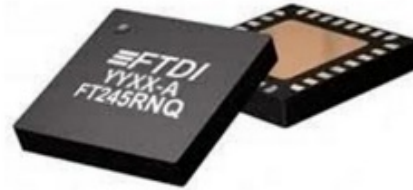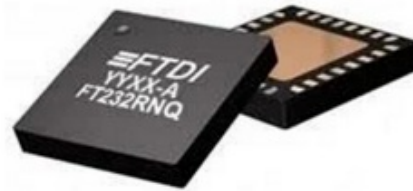

## Introduction

The FT4232HP/FT2232HP/FT232HP are high-speed USB devices with Type-C power delivery features. Within the power delivery functionality, there are multiple configurable options available, and this document describes all the configurable options. The configuration options covered in this document only cover the power delivery configuration. For USB configurations, please refer to AN 124 User Guide For FTDI FT\_Prog Utility.

## Overview

This document describes each configurable option and the configurable values of each parameter in the EEPROM of the FT4232HP/FT2232HP/FT232HP. The EEPROM is external, and it is needed only if the design needs a custom configuration. If the default configuration is sufficient then there is no need to have an external EEPROM. For default values, please refer to the sections below.

## Glossary of Terms

Sl. No.	Term	Description
1	Sink / Consumer	When the device is consuming power from the host port, the device is said to be in “Sink” mode, or the device is said to be a “consumer”.
2	Source / Provider	When the device is supplying power to the host, then the device is operating in “Source” mode.  The device can change the role from Sink to Source if the device is self-powered and power role swap is enabled in the configuration.
3	Power Role Swap	The process of changing the role is called role swap. The device can switch the role from Sink to Source if the device is self-powered.

## Configuration Parameters

256 bytes in the configuration EEPROM are reserved for configuration options. Table 1 gives the information for all the configurable options.

Parameter	Description	Default value	Configurable values
Sink Request Power Role Swap	Sink will initiate a PR SWAP request only if this option is set.  Default settings do not support PR SWAP. However, if the device is self-powered, then PR SWAP can be supported by modifying the configurations.	0 – Disabled.	0 – Disabled. 1 – Enabled.
Sink Accept PR Swap	Option to accept PR SWAP when FT4232HP /FT2232HP/FT232HP is a sink.  If this option is not set, the PR_SWAP request from a source will be rejected	0 – Reject.	0 – Reject. 1 – Accept.

Source Request PR SWAP	When the device is a Source, this option is used to decide whether to swap back to sink  when it sees a port2 disconnect event.	0 – Disabled.	0 – Disabled. 1 – Enabled.
Source Accept PR SWAP	When the device is a source, a PR_SWAP request from the sink can be accepted or rejected based on this option.	0 – Reject.	0 – Reject. 1 – Accept.
UConn Swap	Option to enable UConn swap support.	0 – Reject	0 – Reject 1 – Accept
External MCU	This is to switch over to external MCU mode.	0 – Internal MCU.	0 – Internal MCU. 1 – External MCU.
PD Auto Clock	Auto clock enable/disable. The auto clock feature is explained in section 2.4.	0 – Disabled.	0 – Disabled. 1 – Enabled.
Use EFUSE	This option indicates whether to use trim values from EFUSE or not. Keep this enabled always. The configurable option is provided for characterization purposes only.	1 – Use EFUSE.	0 – Do not use EFUSE TRIM. 1 – Use EFUSE TRIM
GPIO Count	PD Source uses GPIOs to control the power supplies. This option indicates how many GPIOs are used for power supply control.	0	0 – 3
GPIO Number1	GPIO number for power supply control. GPIO can also be used as an ISET in case of sink-only configuration.	'NA'	The following options are available as a drop down list in FT_PROG.  Values 0 – 3, A Text 'NA'.  Select the appropriate GPIO value for this

Parameter	Description	Default value	Configurable values
			option. And if this field is unused,  then select 'NA'.
GPIO Number2	GPIO number for power supply control. GPIO can also be used as an ISET in case of sink-only configuration.	'NA'	<p>The following options are available as a drop down list in FT_PROG .</p> <p>Values 0 – 3, A Text 'NA'.</p> <p>Select the appropriate GPIO value for this option. If this field is unused, then select 'NA'.</p>
GPIO Number3	GPIO number for power supply control. GPIO can also be used as an ISET in case of sink-only configuration.	'NA'	<p>The following options are available as a drop down list in FT_PROG .</p> <p>Values 0 – 3, A Text 'NA'.</p> <p>Select the appropriate GPIO value for this option. And if this field is unused, then select 'NA'.</p>

GPIO Number4	GPIO number for power supply control. GPIO can also be used as an ISET in case of sink-only configuration.	'NA'	<p>The following options are available as a drop down list in FT_PROG .</p> <p>Values 0 – 3, A Text 'NA'.</p> <p>Select the appropriate GPIO value for this option. And if this field is unused, then select 'NA'.</p>
PD Load Enable	GPIO number configured with load enable switch for PD	2	<p>The following options are available as a drop down list in FT_PROG .</p> <p>Values 0 – 3, A Text 'NA'.</p> <p>Select the appropriate GPIO value for this option. And if this field is unused, then select 'NA'.</p>

Parameter	Description	Default value	Configurable values
-----------	-------------	---------------	---------------------

Discharge Pin	GPIO to enable the discharge circuit	'NA'	<p>(Should not be same as any of the GPIO Number1 to Number4 value). The following options are available as a dropdown list in FT_PROG.</p> <p>Values 0 – 3, A Text 'NA'.</p> <p>Select the appropriate GPIO value for this option. And if this field is unused, then select 'NA'.</p>
Discharge Enable BM	GPIO bitmap to enable the discharge circuit	1 – drive high	<p>The following options are available in the dropdown list of FT_PROG.</p> <p>Drive Low Drive Hi Input Mode. Don't Care.</p>
Discharge Disable BM	GPIO bitmap to disable the discharge circuit	0 – drive low	<p>The following options are available in the dropdown list of FT_PROG.</p> <p>Drive Low Drive Hi Input Mode. Don't Care.</p>

CC Indication	Option to indicate CC Orientation through a GPIO	Not Selected in Default Configuration	<p>(Should not be same as any of the GPIO Number1 to Number7 value). The following options are available as a dropdown list in FT_PROG.</p> <p>Values 0 – 3, A Text 'NA'.</p> <p>Select the appropriate GPIO value for this option. And if this field is unused, then select 'NA'.</p>
ISSET1	<p>GPIO Number. The state of the GPIO is used to indicate which sink profile is used.</p> <p>ISSET1 is to indicate the case non-PD TYPEC_1.5A attachment.</p>	1	<p>Any GPIO number based on the board design can be used. Any GPIO value 0 – 3 can be used as long as these pins</p>

Parameter	Description	Default value	Configurable values
			<p>are not used for any other purpose. If the PCB design supports PD Source, then do not use the pins reserved for the source as ISET.</p>
ISSET2	<p>GPIO Number. The state of the GPIO is used to indicate which sink profile is used.</p> <p>ISSET2 is to indicate the case non-PD TYPEC_3A attachment.</p>	3	<p>Any GPIO number based on the board design can be used. Any GPIO value 0 – 3 can be used as long as these pins are not used for any other purpose.</p> <p>If the PCB design supports PD Source, then do not use the pins reserved for source as ISET.</p>



ISSET3	<p>GPIO Number. The state of the GPIO is used to indicate which sink profile is used.</p> <p>ISSET3 is to indicate PD profile 1 (5 V3A).</p>	3	<p>Any GPIO number based on the board design can be used. Any GPIO value 0 – 3 can be used as long as these pins are not used for any other purpose.</p> <p>If the PCB design supports PD Source, then do not use the pins reserved for the source as ISET.</p>
ISSET_ENABLED	<p>bit to enable/disable the ISET feature/</p>	1	<p>0 – Disable the ISET feature.</p> <p>All the above ISET fields will be ignored.</p> <p>1 – ISET Enabled.</p>
GPIO_BM_PDO1(vSafe5v)	<p>There are two cases for 5V. They are typically the same however, in case there is a difference, this option is for PDO_1.</p> <p>1. 5V after PD contract negotiation.</p> <p>2. vSafe5V during PR_SWAP before negotiating high power.</p> <p>In case the GPIO mapping for these two is not the same, then please use the mapping for case 2 using the vSafe5V</p>	'Don't Care'	<p>For each GPIO, the following options are available as a dropdown list in FT_PROG.</p> <p>Drive High Drive Low. Input Mode. Don't Care.</p>

Parameter	Description	Default value	Configurable values
	option (another option available).		

GPIO_BM_PDO2	GPIO Bitmap for PDO2	'Don't Care'	Drive High Drive Low Input Mode. Don't Care.
GPIO_BM_PDO3	GPIO Bitmap for PDO3	'Don't Care'	Drive High Drive Low. Input Mode. Don't Care.
GPIO_BM_PDO4	GPIO Bitmap for PDO4	'Don't Care'	Drive High Drive Low. Input Mode. Don't Care.
vSet0V	Settings to set 0V (Turn off all supplies)	'Don't Care'	Drive High Drive Low Don't Care.
vSafe5V	vSafe5V – used in case vSafe5V is not same as the 5V at PDO1. (can be different power – as vSafe5V is before negotiation)	'Don't Care'	Drive High Drive Low Don't Care.
Sink PDO1	Voltage and current profile for PDO1. Typically, PDO1 is vSafe5.	Voltage in 1mv Unit – 5000 (5v).  Current in 1ma Unit – 3000 (3A)	Voltage – 5000 (5V)  Current – (0-5000) (0-5A)
Sink PDO2	Voltage and current profile for PDO2.	0	0 Means this profile is not used.  The user is allowed to configure the profile to any valid voltage / current value without conflict.  A valid profile is a unique profile (The same voltage profile as another PDO is not allowed – Also the profiles should be in the descending order of voltage).
Sink PDO3	Voltage and current profile for PDO3.	0	Same as above.

Sink PDO4	Voltage and current profile for PD O4.	0	Same as above.
Sink PDO5	Voltage and current profile for PD O5.	0	Same as above.
Sink PDO6	Voltage and current profile for PD O6.	0	Same as above.
Sink PDO7	Voltage and current profile for PD O7.	0	Same as above.

Parameter	Description	Default value	Configurable values
Source PDO1	Voltage and current profile for PD O1. Typically, PDO1 is vSafe5.  Default Setting does not have source capability.	Voltage in 1mv Unit – 5000 (5v ).  And in 50mV Steps.  Current in 1ma Unit – 300 (3A) ,  10mA Steps.	Voltage – 5000 (5V)  Current – (0-5000) (0-5A)
Source PDO2	Default Setting does not have source capability.	Voltage in 50mv Unit – 0.  Current in 10ma Unit – 0	
Source PDO3	Default Setting does not have source capability.	Voltage in 50mv Unit – 0.  Current in 10ma Unit – 0	
Source PDO4	Default Setting does not have source capability.	Voltage in 50mv Unit – 0.  Current in 10ma Unit – 0	
Sender Response Timer	tSenderResponse timer in the PD Spec Rev3.0.	27ms (all the timer values are in milliseconds)	Any Value within Spec .

Hard Reset Timer	tPSHardReset timer in the PD Spec Rev3.0.	30ms	Any Value within Spec .
Source Capability Timer	tTypeCSendSourceCap timer in the PD Spec Rev3.0.	190ms	Any Value within Spec .
Discover Identity Timer	tDiscoverIdentity timer in the PD Spec Rev3.0.	45ms	Any Value within Spec .
Source Recover Timer	tSrcRecover timer in the PD Spec Rev3.0.	750ms	Any Value within Spec .
Transition Timer	tPSTransition timer in the PD Spec Rev3.0.	500ms	Any Value within Spec .
Source off timer	tPSSourceOff timer in the PD Spec Rev3.0.	890ms	Any Value within Spec .
No Response Timer	tNoResponse timer in the PD Spec Rev3.0.	4000ms	Any Value within Spec .
Sink Wait Capability Timer	tTypeCSinkWaitCap timer in the PD Spec Rev3.0.	465ms	Any Value within Spec .
Sink Activity Timer	tSinkActivity timer in the PD Spec. However, this timer is not used as it is not required in type-c 1.2+.	135ms	Any Value within Spec .
Sink Request Timer	tSinkRequest timer in the PD Spec .	110ms	Any Value within Spec .
Discharge Timer	An internal timer is used to keep the discharge circuit on. During PR_SWAP and also during the Source Voltage transition, the discharge circuit	100ms	Any value is based on the discharge circuit design.

Parameter	Description	Default value	Configurable values
	will be turned on for the duration mentioned in this timer.		
Chunk not supported timer	tChunkingNotSupported timer in the PD Spec Rev 3.0.	40ms	Any Value within Spec.
I2C Address	Used for external MCU.	32 (0x20)	Any Valid address.
TRIM1	Do not use this in production. Set to 0.	0	
TRIM2	Do not use this in Production. Set to 0.	0	
External DC	This option indicates the device is self-powered and has a fixed External power supply. FT4232HP/FT2232HP/FT232H  P does not support power role swap in its default settings as the role swap feature needs a power supply. So, if the device is externally powered, then power role swap can be supported. Use this option to indicate an externally powered device.	UNCHECK	CHECKBOX

## Power Role Swap Options

There are four different combinations for power role swap. These are the four configurable options available.

- **Sink Request Power Role (PR) Swap**

When this option is set, the sink initiates a power role swap request if the device is self-powered. The “External DC” option indicates if the device is self-powered.

- **Sink Accept PR Swap**

In case the device receives a PR\_SWAP request from the source, the sink can either reject it or accept it based on this option. This option should be set only if the device is externally powered through a DC power supply.

- **Source Request PR SWAP**

This option does not apply to single-port devices.

- **Source Accept PR SWAP**

Similar to the above case, the device (source) can go back to the sink if the present sink requests a PR\_SWAP. Whether to accept the request or not is based on this option.

## **vConn Swap**

When this option is set, the device will do a vConn Swap every time it changes the power role.

## **External MCU**

- By default, the Internal MCU will be active. If the design is using an external MCU instead of an FT4232HP internal MCU, the customer needs to indicate this through a bit in the configuration. Select the “External MCU” Option to enable external MCU. Once this bit is set, the internal MCU won’t be active.
- If the design does not have an EEPROM and still needs an External MCU, then both GPIO\_0 and GPIO\_1 of FT4232HP can be pulled high to achieve this. This has the same behavior as setting the External MCU bit.

## **PD Auto Clock**

To aid in power saving, the clock can be turned off to the PD device when there is no activity. With the auto clock option enabled, the clock will turn on whenever there is any activity to the PD device and will turn off after the activity.

## **Use EFUSE**

The PD device has an internal EFUSE block, and its size is 64 bits. This EFUSE is programmed during the IC characterization time, and it is one-time programmable. The value programmed in this block is used by the software to program bandgap voltage, pull-up current, pull-down resistance, etc. The “Use EFUSE” option is enabled by default. The software uses the EFUSE value only if this option is enabled. For debugging purposes this option can be disabled but not recommended to disable it for production.

## **GPIO Count**

- By default, FT4232HP/FT2232HP/FT232HP does not support power role swap and source operation. However, if the device is self-powered then it is possible to do a role swap. When the device is a source, it uses GPIOs to manage the power supplies. There can be multiple GPIOs to control multiple power sources (5V, 9V, 15V etc.). The total number of GPIOs used to control the power supplies should be defined in this field.
- FT4232HP/FT2232HP/FT232HP has a total of 4 GPIO Pins. So, the valid value for this field is 0 to 3. When the FT4232HP/FT2232HP/FT232HP is configured as a sink-only device, set this field to 0. Since the number of GPIOs available is only 4, the maximum profiles that can be supported are only 4.

## **GPIO Number1 – 4**

This field represents the GPIO pins used for controlling the power supply. In case there are three GPIO pins used, then GPIO Number 1 to GPIO Number 3 will indicate those three pins.

## **PD Load Enable**

- GPIO Pin is used to enable the PD load.

## **Discharge Pin**

- This indicates the GPIO Pin used for enabling and disabling the discharge circuit.

## **Discharge Enable BM**

A 2-bit bitmap indicates how to enable the discharge circuit.

This can be one of the following values. FT\_PROG gives these options as a dropdown list and hence the user does not need to know the bitmap.

- Drive High
- Drive Low
- Input Mode.
- Don't Care (This means, this pin is not used).

### **Discharge Disable BM**

A 2-bit bitmap indicates how to disable the discharge circuit.

This can be one of the following values. FT\_PROG gives these options as a dropdown list and hence the user does not need to know the bitmap.

- Drive High
- Drive Low
- Input Mode.
- Don't Care (This means, this pin is not used).

### **ISET**

- There are three ISET options by default. ISET1, ISET2 and ISET3.
- These pins are used to indicate the power profile being used when the device is a sink. Even though there are 3 ISET options by default, the ISET feature for legacy cable has been disabled. That is, TYPE-C 1.5A (ISET1) and TYPE-C 3A (ISET2) feature has been disabled and hence only ISET3 (PD MODE) can be used.
- These are the GPIO pins.
- ISET1 – Type-C 1.5A Attached. (No PD) The feature has been disabled currently.
- ISET2 – Type-C 3A Attached – 5V3A. (No PD) The feature has been disabled currently.
- ISET3 – PD. 5V, 3A profile.
- In case more than three ISETs are needed, it is possible to configure more than three if the device is used in a sink-only configuration. In sink-only configuration, GPIOs reserved for source power supply control are not needed hence those pins can be used as ISETs.
- To do this, set the option “EXTEND\_ISET” (described in the below sections).

### **ISET\_ENABLED**

All the ISET-related fields are valid only if this field is enabled. Instead of changing multiple ISET fields, this single enable/disable option helps to enable/disable the ISET feature.

### **GPIO\_BM\_PDO1 (vSafe5v)**

- GPIO Bitmap to select Source PDO1. The bitmap indicates the combination of the GPIO state used to get the selected profile.
- For example, for PD01, GPIO0 – Drive Hi, GPIO1 – Drive Hi, GPIO2 – Don't Care (NA).
- These options are available as a table in FT\_PROG and the states of the GPIO as a dropdown list.

### **GPIO\_BM\_PDO2**

- GPIO Bitmap to select Source PDO2. The bitmap indicates the combination of the GPIO state used to get the selected profile.
- For example, GPIO0 – Drive Hi, GPIO1 – Drive Hi, GPIO2 – Don't Care (NA).
- These options are available as a table in FT\_PROG and the states of the GPIO as a dropdown list.

### **GPIO\_BM\_PDO3**

- GPIO Bitmap to select Source PDO3. The bitmap indicates the combination of the GPIO state used to get the selected profile.
- For example, GPIO0 – Drive Hi, GPIO1 – Drive Hi, GPIO2 – Don't Care (NA).
- These options are available as a table in FT\_PROG and the states of the GPIO as a dropdown list.

### **GPIO\_BM\_PDO4**

- GPIO Bitmap to select Source PDO4. The bitmap indicates the combination of the GPIO state used to get the selected profile.
- For example, GPIO0 – Drive Hi, GPIO1 – Drive Hi, GPIO2 – Don't Care (NA).
- These options are available as a table in FT\_PROG and the states of the GPIO as a dropdown list.

### **vSet0V**

- GPIO Bitmap to set 0V. The bitmap indicates the combination of the GPIO state used to get the selected profile.
- For example, GPIO0 – Drive Low, GPIO1 – Drive Low, GPIO2 – Don't Care (NA).
- These options are available as a table in FT\_PROG and the states of the GPIO as a dropdown list.

### **vSafe5V**

- GPIO Bitmap to select vSafe5. This can be the same as PDO1 too. The bitmap indicates the combination of the GPIO state used to get the selected profile.
- For example, GPIO0 – Drive Hi, GPIO1 – Drive Hi, GPIO2 – Don't Care (NA).
- These options are available as a table in FT\_PROG and the states of the GPIO as a dropdown list.

### **Sink PDO [1:7]**

- Option to select Voltage and Current Profile for Sink PDO1.
- Corresponding to every PDO option, there is a voltage dropdown box and a current dropdown box in FT\_PROG. Please select the voltage and current from this list for the PDO.
- The lowest voltage profile should be PDO1 and the second lowest should be PDO2 and so on. The PDO profile should be in ascending order to the voltage.

### **Source PDO [1:4]**

- Option to select Voltage and Current Profile for Source PDO1.



- Corresponding to every PDO option, there is a voltage dropdown box and a current dropdown box in FT\_PROG. Please select the voltage and current from this list for the PDO.
- The lowest voltage profile should be PDO1 and the second lowest should be PDO2 and so on. Basically, the PDO profile should be in ascending order to the voltage.

### **Sender Response Timer**

This option is to configure the tSenderResponse timer. Please refer to the PD spec for tSenderResponse timer details. Timer units are in milliseconds.

### **Hard Reset Timer**

This option is to configure the tPSHardReset timer. Please refer to the PD spec for tPSHardReset timer details. Timer units are in milliseconds.

### **Source Capability Timer**

This option is to configure the tTypeCSendSourceCap timer. Please refer to PD Spec for more details on the tTypeCSendSourceCap timer. Timer units are in milliseconds.

### **Discover Identity Timer**

This option is to configure the tDiscoverIdentity timer. Please refer to the PD Spec for more details on the dDiscoverIdentity timer. Timer units are in milliseconds.

### **Source Recover Timer**

This option is to configure the tSrcRecover timer. Please refer to the PD Spec for more details on the tSrcRecover timer. Timer units are in milliseconds.

### **Transition Timer**

This option is to configure the transition timer. Please refer to the PD Spec for more details on the transition timer. Timer units are in milliseconds.

### **Source off timer**

This option is to configure the tPSSourceOff timer. Please refer to the PD Spec for more details on the tPSSourceOff timer. Timer units are in milliseconds.

### **No Response Timer**

This option is to configure the tNoResponse timer. Please refer to the PD Spec for more details on tNoResponse. Timer units are in milliseconds.

### **Sink Wait Capability Timer**

This option is to configure the tTypeCSinkWaitCap timer. Please refer to the PD Spec for more details on the tTypeCSinkWaitCap timer. Timer units are in milliseconds.

### **Sink Request Timer**

This option is to configure the tSinkRequest timer. Please refer to the PD Spec for more details on tSinkRequest timer. Timer units are in milliseconds.

### **Discharge Timer**

The internal timer is used to keep the discharge circuit enabled. The discharge circuit will be enabled and kept enabled for the timer duration. Timer units are in milliseconds.

### **Chunk Not Supported Timer**

This option is to configure the tChunkingNotSupported timer. Please refer to the PD Spec for more details on tChunkingNotSupported timer. Timer units are in milliseconds.

## **I2C Address**

This is used in the case of an external MCU. The I2C address will default to 0x20 if this is not specified.

## **TRIM1**

For Debug purposes only – Usually, the TRIM values are taken from EFUSE. However, EFUSE can be overridden using this field.

## **TRIM2**

For Debug purposes only – Usually, the TRIM values are taken from EFUSE. However, EFUSE can be overridden using this field.

## **External DC**

If the device is self-powered, then this option can be set to initiate a power role swap request to switch over the role to the source. The Sink Request power role swap option also should be set along with this to achieve this.

## **Contact Information**

Head Office – Glasgow, UK

- Future Technology Devices International Limited (UK)
- Unit 1, 2 Seaward Place, Centurion Business Park
- Glasgow G41 1HH
- United Kingdom
- Tel: +44 (0) 141 429 2777
- Fax: +44 (0) 141 429 2758
- E-mail (Sales)
- [sales1@ftdichip.com](mailto:sales1@ftdichip.com)
- E-mail (Support)
- [support1@ftdichip.com](mailto:support1@ftdichip.com)
- E-mail (General Enquiries)
- [admin1@ftdichip.com](mailto:admin1@ftdichip.com)

## **Branch Office – Tigard, Oregon, USA**

- Future Technology Devices International Limited (USA)
- 7130 SW Fir Loop
- Tigard, OR 97223-8160
- USA
- Tel: +1 (503) 547 0988
- Fax: +1 (503) 547 0987
- E-Mail (Sales)
- [us.sales@ftdichip.com](mailto:us.sales@ftdichip.com)
- E-Mail (Support)
- [us.support@ftdichip.com](mailto:us.support@ftdichip.com)
- E-Mail (General Enquiries)
- [us.admin@ftdichip.com](mailto:us.admin@ftdichip.com)

## Branch Office – Taipei, Taiwan

- Future Technology Devices International Limited (Taiwan)
- 2F, No. 516, Sec. 1, NeiHu Road
- Taipei 114
- Taiwan, R.O.C.
- Tel: +886 (0) 2 8797 1330
- Fax: +886 (0) 2 8751 9737
- E-mail (Sales)
- [tw.sales1@ftdichip.com](mailto:tw.sales1@ftdichip.com)
- E-mail (Support)
- [tw.support1@ftdichip.com](mailto:tw.support1@ftdichip.com)
- E-mail (General Enquiries)
- [tw.admin1@ftdichip.com](mailto:tw.admin1@ftdichip.com)

## Branch Office – Shanghai, China

- Future Technology Devices International Limited (China)
- Room 1103, No. 666 West Huaihai Road,
- Shanghai, 200052
- China
- Tel: +86 (21) 62351596
- Fax: +86 (21) 62351595
- E-mail (Sales)
- [cn.sales@ftdichip.com](mailto:cn.sales@ftdichip.com)
- E-mail (Support)
- [cn.support@ftdichip.com](mailto:cn.support@ftdichip.com)
- E-mail (General Enquiries)
- [cn.admin@ftdichip.com](mailto:cn.admin@ftdichip.com)

## Web Site

- <http://ftdichip.com>

## Distributor and Sales Representatives

Please visit the Sales Network page of the FTDI website for the contact details of our distributor(s) and sales representative(s) in your country.

System and equipment manufacturers and designers are responsible for ensuring that their systems, and any Future Technology Devices International Ltd (FTDI) devices incorporated in their systems, meet all applicable safety, regulatory, and system-level performance requirements. All application-related information in this document (including application descriptions, suggested FTDI devices, and other materials) is provided for reference only. While FTDI has taken care to ensure it is accurate, this information is subject to customer confirmation, and FTDI disclaims all liability for system designs and any application assistance provided by FTDI. Use of FTDI devices in life support and/or safety applications is entirely at the user's risk, and the user agrees to defend, indemnify, and hold harmless FTDI from all damages, claims, suits, or expense resulting from such use. This document is subject to change without notice. No freedom to use patents or other intellectual property rights

is implied by the publication of this document. Neither the whole nor any part of the information contained in, or the product described in this document, may be adapted, or reproduced in any material or electronic form without the prior written consent of the copyright holder. Future Technology Devices International Ltd, Unit 1, 2 Seaward Place, Centurion Business Park, Glasgow G41 1HH, United Kingdom. Scotland Registered Company Number: SC136640

Appendix A – References

Document References

- [https://usb.org/sites/default/files/USB%20Power%20Delivery\\_1.zip](https://usb.org/sites/default/files/USB%20Power%20Delivery_1.zip)FT\_PROG
- AN 124 User Guide For FTDI FT\_Prog Utility
- USB High-Speed Series ICs

Acronyms and Abbreviations

Terms	Description
BM	Bit Map
BOS	Binary Object Store
GPIO	General Purpose Input Output
PD	Power Delivery
PDO	Power Delivery Object
PR SWAP	Power Role Swap.
USB	Universal Serial Bus
USB-IF	USB Implementers Forum

Appendix B – List of Tables and Figures

List of Tables

Table 1 – Configuration Parameters ..... 11

List of Figures


NA

Appendix C – Revision History

- **Document Title:** AN\_551 FT4232HP/FT2232HP/FT232HP Configuration Guide
- **Document Reference No.:** FT\_001493
- **Clearance No.:** FTDI#562
- **Product Page:** USB High-Speed Series ICs
- **Document Feedback:** Send Feedback

Revision	Changes	Date
1.0	Initial Release	06-05-2021
1.1	Minor editorial changes for the new release version	28-11-2023

Documents / Resources

	<p><a href="#">FTDI FT4232HP USB Devices with Type-C Power</a> [pdf] User Guide</p> <p>FT4232HP USB Devices with Type-C Power, FT4232HP, USB Devices with Type-C Power, Devices with Type-C Power, Type-C Power</p>
---	---

References

- [Home - FTDI](#)
- [Home - FTDI](#)
- [Products - FTDI](#)
- [IC - FTDI](#)
- [IC - FTDI](#)
- [Utilities - FTDI](#)
- [User Manual](#)