



iLIGHT SI-2-D System Integrator Installation Guide

[Home](#) » [iLIGHT](#) » iLIGHT SI-2-D System Integrator Installation Guide 

Contents


- [1 iLIGHT SI-2-D System Integrator](#)
- [2 Mounting & Installation](#)
- [3 Technical Data](#)
 - [3.1 Device LEDs and Buttons](#)
- [4 Typical Connection Diagram](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



iLIGHT SI-2-D System Integrator



Mounting & Installation


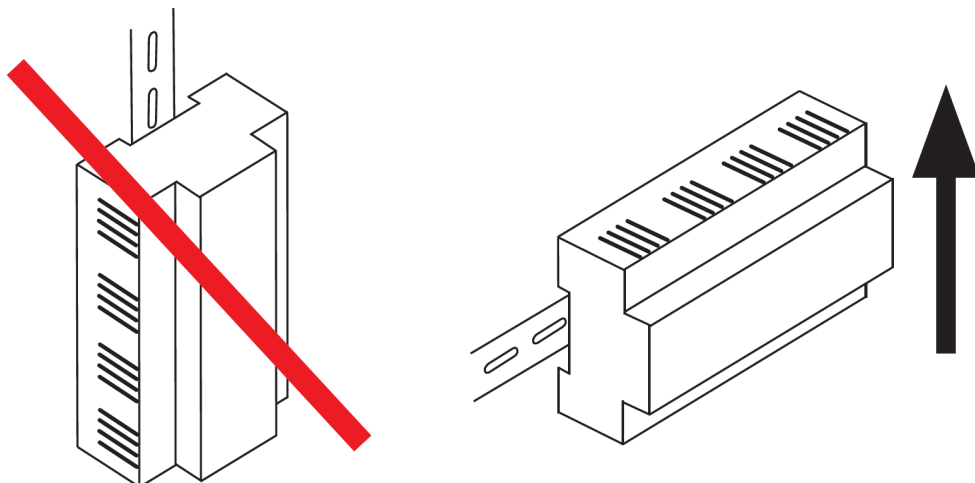


- SI-2-D must be mounted in a suitable enclosure to provide regulatory protection from electric shock hazard as well as protecting the iCANnet data network from tampering that could lead to reduced network security. Ensure selected enclosure provides adequate cooling ventilation.



Fixing to DIN rail

1. Fix top clips over DIN rail.
2. Pull down bottom clip using screwdriver.

3. Close module towards DIN rail.
4. Push up bottom clip to fix securely to DIN rail.

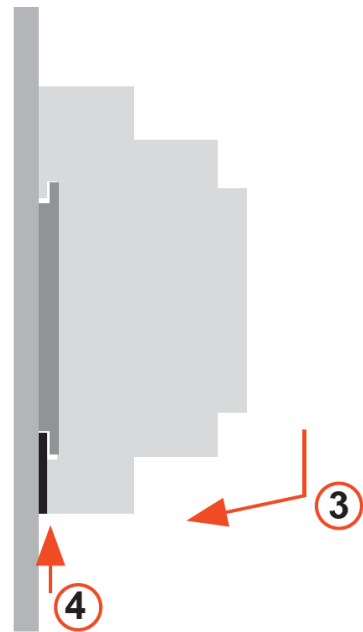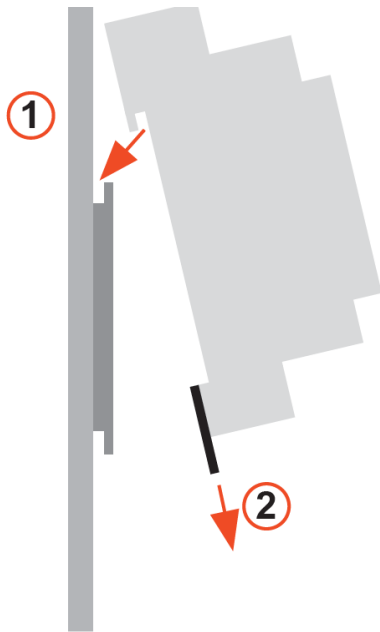


Removing from DIN rail

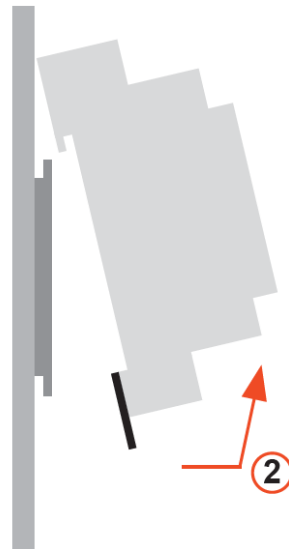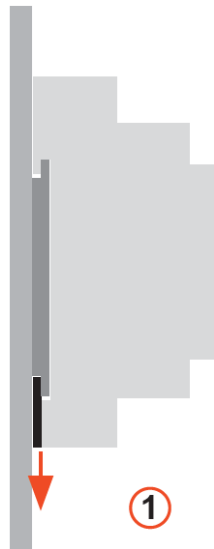


1. Pull down bottom clip with screwdriver.
2. Lift module away from DIN rail.

Dimensions

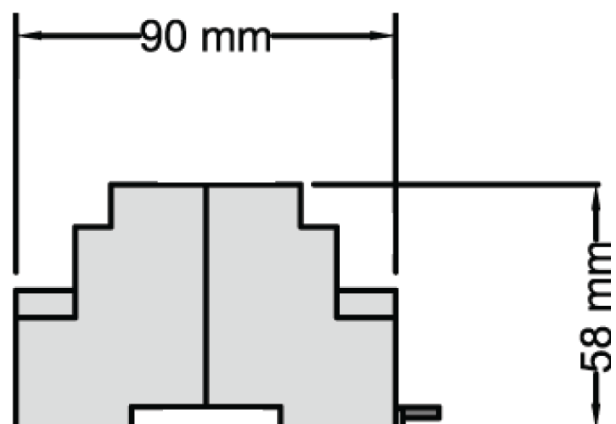

Typical Schematic

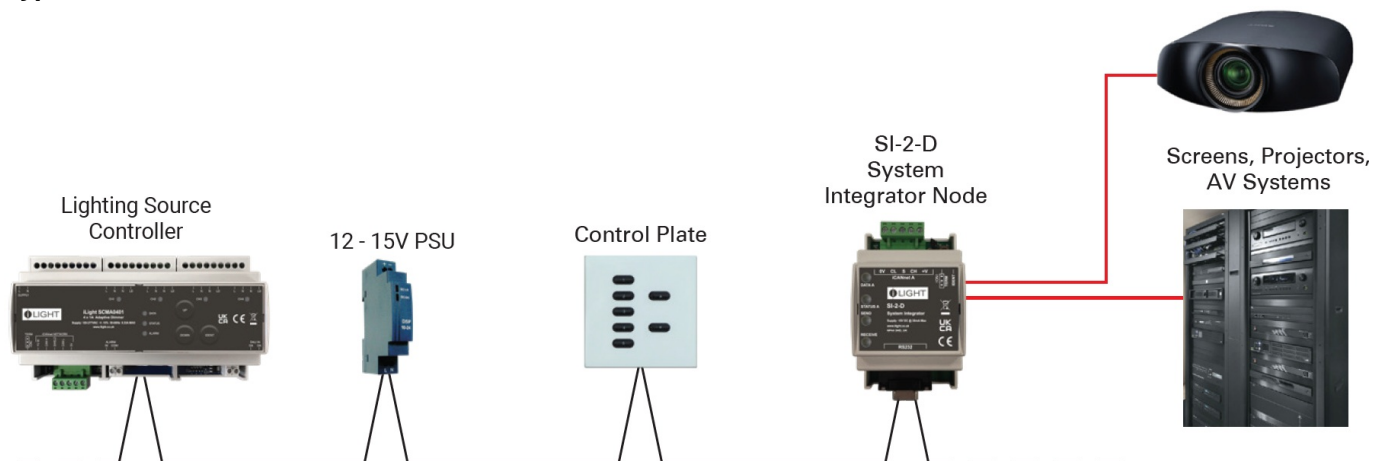

Technical Data

Electrical Data

- **Supply:** 15VDC (12-18V) via iCANnet™
iCANnet™ inputs/output: Screw terminals

Mechanical Data

- **Weight:** 0.1 kg (0.22lb)
- **Operating temperature:** 0°C to +50°C
- **Max storage temperature:** +60°C
- **Humidity:** +5 to 95% non-condensing
- **Environmental protection:** IP20
- **Installation:** Installation must be carried out by a suitably qualified electrician and installed in a suitable DINrail enclosure rated for the intended environment.

Device LEDs and Buttons

At iCANnet end

Data A LED

Red flashing: Traffic being sent and/or received Red on: iCAN network comms error

Status A LED

Green flashing: Normal operation

At the RS232 end


Send LED

Green flashing: RS232 data received

Receive LED

Red flashing: RS232 data sent

iCAN network wiring

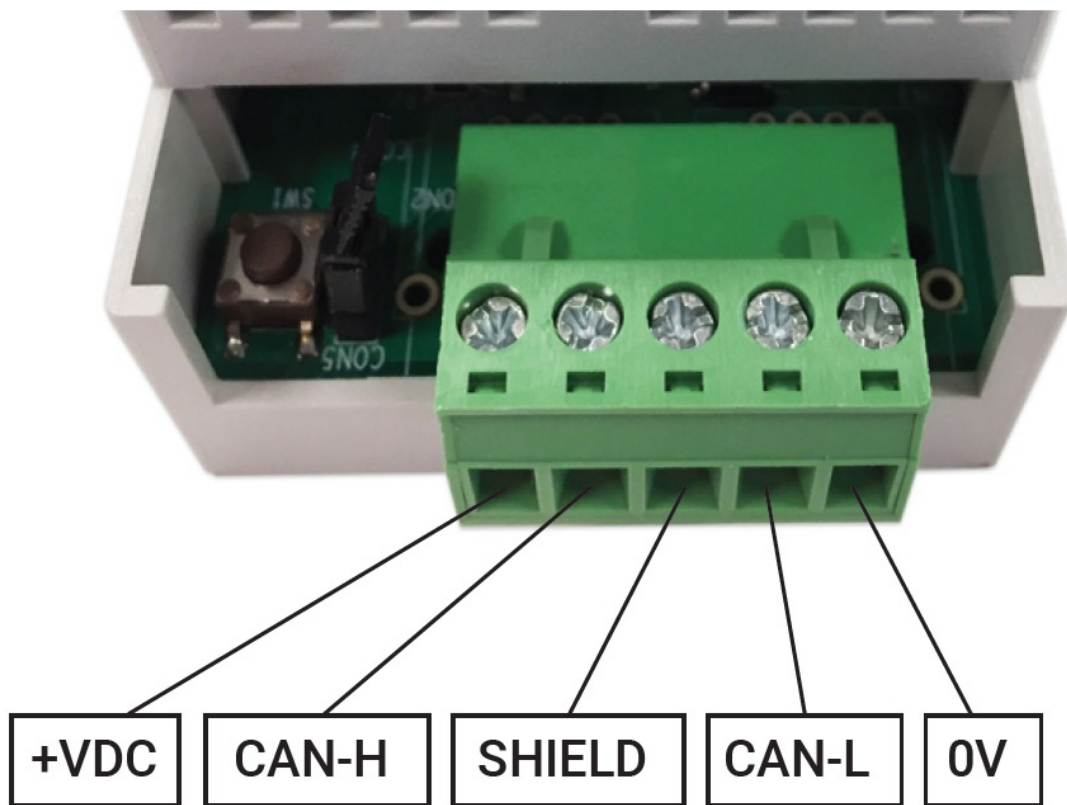

- Cable connections to the iCAN network are made to a removable 5-way connector block located at one end of the SI-2-D unit:

Function	iCANnet Cable Colours
0V	Black
CAN L	Blue
Shield	Silver
CAN H	White
+VDC	Red

- **Maximum segment distance:** 500m (1640 ft)
- **Devices per segment:** 100 (without bridge or repeater)

Additional power supplies may be required. Consult iLight for information on alternative cable types.

- **Network Power Requirements**
- **Nominal operating voltage:** 15V (12-18V)
- **Nominal operating current:** 30mA

Typical Connection Diagram




- Connection to the iLight Network
- Data A LED
- Status A LED
- Send LED
- Receive LED
- Serial device connection
- iLight Network Termination
- Device Identification

IMPORTANT NOTE:

Connecting a mains potential cable to the iCAN Network terminals is likely to damage the unit and other devices connected, and invalidate warranty.


Serial device connection

The SI-2-D provides an RS232 link via a standard 9-pin D-type female connector. The SI-2-D uses five pins of the D-type connector as shown below:

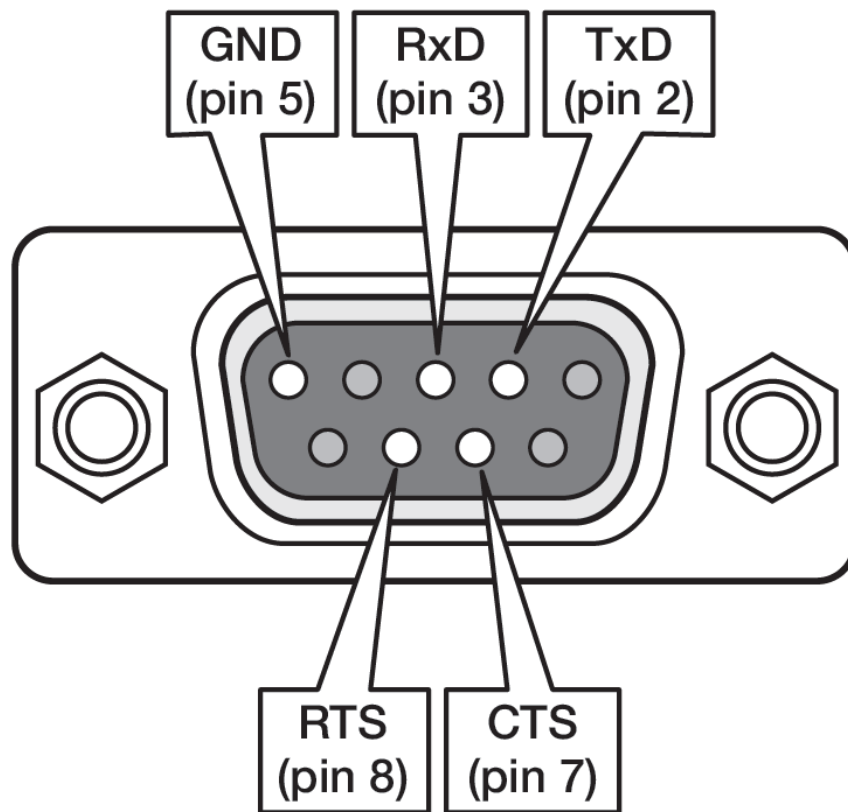

Network termination


The iCAN network follows a daisy chain topology that requires termination on the devices located at either end of the network.

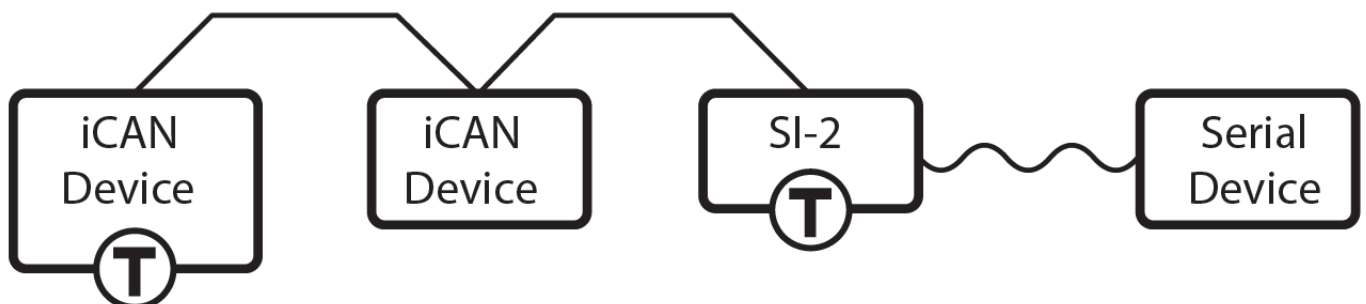

The SI-2-D unit is supplied with termination disabled as standard. If it is connected as an end device in the iCAN network, you need to move the jumper to enable termination.

The connection of the serial data cable to the device is treated separately and has no impact on whether or not the SI-2-D should be terminated on the iCAN network side.

To enable SI-2-D termination, move the jumper out-wards from the inner two pins to the outer two pins:

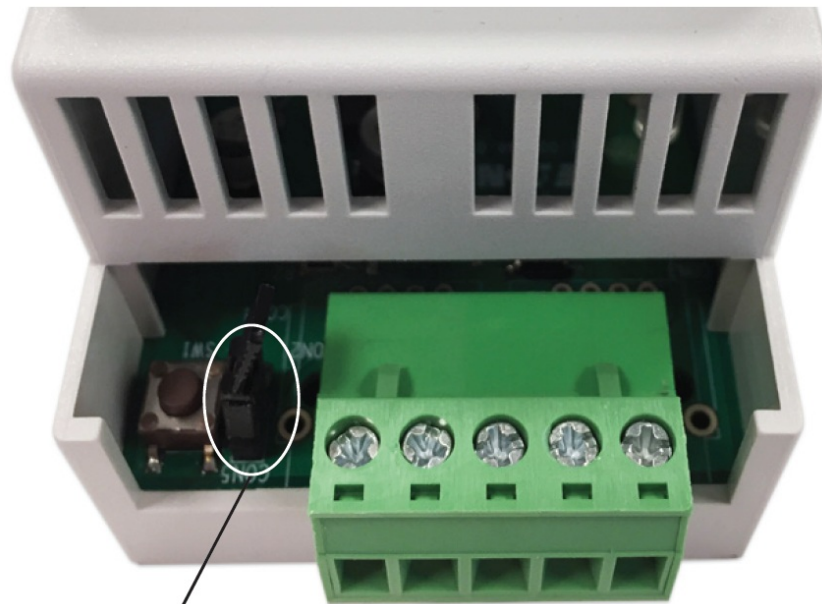

Termination ON



Termination OFF

Documents / Resources



[iLIGHT SI-2-D System Integrator](#) [pdf] Installation Guide
SI-2-D, System Integrator, SI-2-D System Integrator, Integrator

References

- [i Welcome to iLight | iLight](#)