



IONODES PERCEPT Body Camera IoT-Connected Open-Platform Wearable Device User Guide

[Home](#) » [IONODES](#) » IONODES PERCEPT Body Camera IoT-Connected Open-Platform Wearable Device User Guide 

IONODES PERCEPT Body Camera IoT-Connected Open-Platform Wearable Device User Guide



Contents

- [1 DESCRIPTION](#)
- [2 CHARGING YOUR CAMERA](#)
- [3 POWERING YOUR CAMERA ON/OFF](#)
- [4 INITIALIZING YOUR CAMERA](#)
- [5 RESETTING YOUR CAMERA'S WI-FI SETTINGS](#)
- [6 CALIBRATING THE CAMERA'S 9-AXIS MOTION SENSOR](#)
- [7 ACCESSING ADVANCED CONFIGURATION](#)
- [8 ENABLING PERCEPT CLOUD](#)
- [9 RECORDING CONTINUOUS VIDEO](#)
- [10 RECORDING VIDEO EVENTS](#)
- [11 RECORDING A STILL IMAGE](#)
- [12 TURNING THE FLASHLIGHT ON/OFF](#)
- [13 RESETTING YOUR CAMERA](#)
- [14 USING ACCESSORIES & OPTIONS](#)
- [15 Documents / Resources](#)
 - [15.1 References](#)
- [16 Related Posts](#)


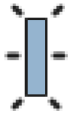
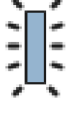
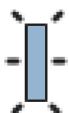




DESCRIPTION

The PERCEPT Body Camera is an IoT-connected open-platform wearable device designed for commercial and enterprise applications. It features 4G LTE and Wi-Fi connectivity, immersive 180° video at 4K resolution, bi-directional audio, motion-sensing and multiple innovative functionalities, making it ideal for customers that need a real-time body worn monitoring and recording solution.

Combined with the PERCEPT Cloud Solution, gain a secure and reliable on demand live video streaming and storage solution accessible from anywhere, anytime via web and mobile apps. Offering direct camera-to-cloud connectivity, the PERCEPT Cloud Solution is a complete camera management solution offering innovative features such as real-time location tracking, centralized camera software upgrades and remote access for camera control and configuration. With both Wi-Fi and LTE connectivity options, the PERCEPT Body Camera Solution can easily adapt to any deployment scenario.

The PERCEPT Body Camera Solution has been designed for commercial and enterprise use in various markets and applications including private security, transportation, warehousing, retail, industrial, manufacturing and more. Use cases include staff safety, incident reporting, resource and asset tracking, efficiency monitoring, live remote assistance, training, service optimization and theft deterrence.

Icons used in this document for user feedback are as follows:

Icon	Description	Repeat interval (examples)
	Steady single-color LED	N/A
	Flashing single color LED	1000 ms
	Rapid flashing single color LED	250 ms
	Flashing LED – Alternating colors	500 ms
	Heartbeat single color LED	250 ms ON/OFF/ON + 1250ms OFF
	Audio sound	Once
	Beeping sound	10 secs
	Vibration*	Varies

- When haptic feedback occurs, the OLED screen momentarily displays corresponding action or state change

CHARGING YOUR CAMERA

- Use the supplied USB-C cable and a compatible USB charger (minimum 1A) or
- Charge your camera to full battery capacity using a PERCEPT docking station.

Option 1



Connect your device to a USB charger



Option 2

Seat your device in a PERCEPT docking station





User Feedback	
	Charging Flashing yellow LED
	Fully charged Steady blue LED

POWERING YOUR CAMERA ON/OFF

- Turn on your camera by pressing and holding the power button for 3 seconds.
- Turn off your camera by pressing and holding the power button for 5 seconds.




User Feedback	
	Booting Flashing cyan LED
	Ready Steady blue LED

INITIALIZING YOUR CAMERA

1. Power on your camera, wait to see the “Scan Initial QR” message on the OLED screen



2. Visit <https://www.ionodes.com/percept-body-cam-QR/> from a computer or mobile device

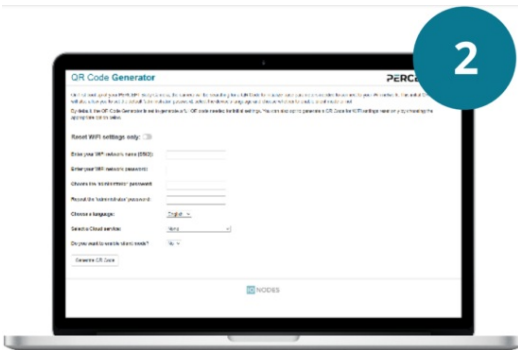

Scan to visit the PERCEPT Body Cam QR web page

3. Enter the required information to generate a QR code

Reset WiFi settings only: ☐

Enter your WiFi network name (SSID):

Enter your WiFi network password:

Choose the 'administrator' password:

Repeat the 'administrator' password:

Choose a language:

Select a Cloud service:



Do you want to enable silent mode?

Generate QR Code

3


4. Scan the QR code with your PERCEPT Body Camera.





User Feedback	
	Waiting for QR scan Heartbeat blue LED
	QR scan successful Steady blue LED

RESETTING YOUR CAMERA’S WI-FI SETTINGS

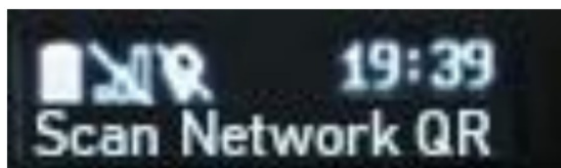
When using the device with more than one wireless network, perform the following steps to connect it to another network within range. Press **both F2 and F4** buttons **simultaneously** for more than 5 seconds until you see the message “Scan Network QR” on the OLED screen. Follow the instructions above for generating and scanning the initial QR code, selecting the option to add Wi-Fi connection.



User Feedback	
	Waiting for QR scan Heartbeat blue LED
	QR scan successful Steady blue LED



CALIBRATING THE CAMERA’S 9-AXIS MOTION SENSOR


Following certain operations, like a complete device reset for example, a message might appear on the OLED screen that the PERCEPT Body Camera 9-axis motion sensor must be recalibrated. To do so, simply hold the camera vertically and slowly rotate it 360° and then hold it on its side and repeat the 360° movement as indicated in the images below. One calibrated, the calibration message will disappear from the OLED screen.

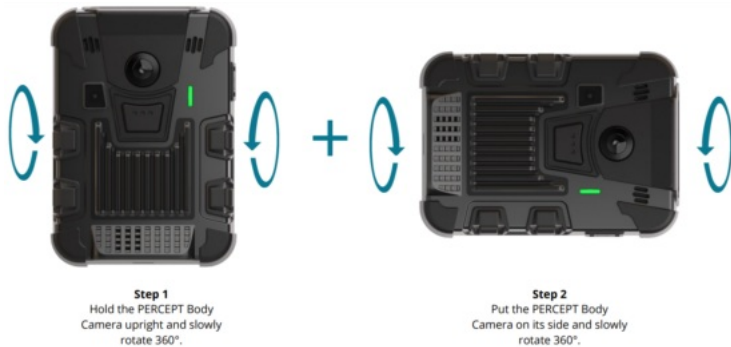

ACCESSING ADVANCED CONFIGURATION

Cycle through camera status messages on the OLED screen by pressing on the power button for less than 3

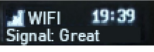
seconds. Note the camera's Wi-Fi connectivity  and IP address . From a computer or mobile device connected to the same network as the camera, open the device's web management interface by entering its IP address in a web browser. Enter Username 'administrator' and the Password set during device's initialization phase (QR code). Refer to the User Manual for details on the configuration options available through the web interface.

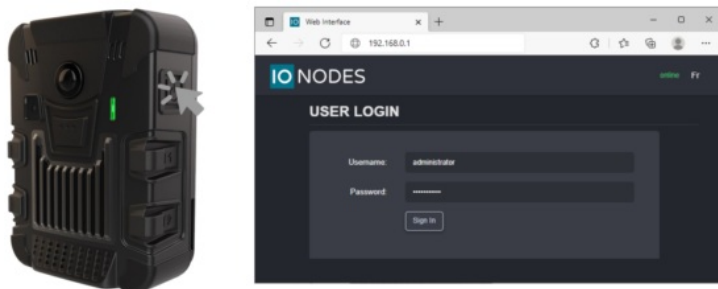

ENABLING PERCEPT CLOUD

To enable communication between the body camera and PERCEPT Cloud, log on to the web interface. Under the **Configuration** menu, Integration tab, expand **PERCEPT** Cloud, check the box to **Enable PERCEPT Cloud Integration** then Save the configuration.

Please refer to the PERCEPT Cloud User Manual for cloud configuration.

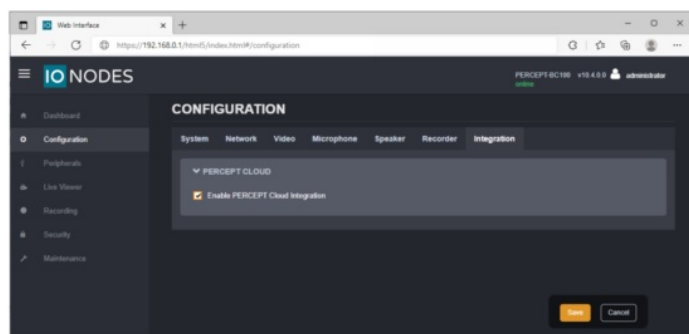




RECORDING CONTINUOUS VIDEO

When integrated with PERCEPT Cloud or an ONVIF Video Management System (VMS), continuous recording can be configured from the cloud or VMS application. The camera will stream to the cloud or VMS whenever network connectivity is established. Otherwise, use function buttons to start and stop continuous recording onto local storage. Refer to PERCEPT Cloud User Manual to configure local recordings cloud sync, or to the corresponding integration guide for edge transfer to VMS.

- Pressing the front facing F5 function button for less than 3 seconds will START continuous recording.
- Pressing and holding the F5 button for more than 4 seconds will STOP continuous recording.

Note: If the PERCEPT Body Camera is powered off, pressing and holding either the F1, F3 or front facing F5 buttons for more than 3 seconds will automatically turn on the device and enter continuous recording mode.



User Feedback	
	Streaming Alternate flash red/green LED
	Recording Heartbeat red LED
	Ready Steady blue LED

RECORDING VIDEO EVENTS

With PERCEPT Cloud integration:



- Use F5 function button to record an event tagged “Emergency” of variable duration (< 3 seconds to start, > 4 seconds to stop).
- Press either the F2 or F4 function buttons to record an event tagged “Moment of interest” with configurable pre- and post-event duration.

Without PERCEPT Cloud integration:

- Press either the F1 or F3 function buttons for less than 3 seconds to record an event with configurable pre- and post-event duration.

Note: If the F5 function button is pressed while an event recording is in progress, the device will switch to continuous recording.





User Feedback	
	Recording Heartbeat red LED
	Ready Steady blue LED

RECORDING A STILL IMAGE

- Press either the F2 or F4 function buttons for less than 3 seconds to capture a still image saved to local storage




User Feedback	
	Capture a still image 1 x 500 ms flash
	Ready Steady blue LED

TURNING THE FLASHLIGHT ON/OFF

- Turn the camera's white LED flashlight on or off by pressing both the F2 and F4 buttons simultaneously for less

than 3 seconds.




User Feedback	
	Ready Steady blue LED

RESETTING YOUR CAMERA

Press all F1, F2, F3 and F4 buttons simultaneously for more than 5 seconds until you see the message “Reset Config...” on the OLED screen. The camera will reset to factoring settings and reboot. Follow instructions in this guide for initializing the unit.



User Feedback	
	Reset Configurations Steady blue LED

USING ACCESSORIES & OPTIONS

Mounting hardware

- A standard Klick Fast stud and clip is included with your PERCEPT Body Camera.
- Multiple other Klick Fast mounting options are also available. Please contact with our sales team for more information.





Docking station

The PERCEPT docking station allows charging and connecting to a wired network for file transfers and configuration. In deployment scenarios where recordings are stored on the body camera and offloaded periodically to a Video Management System (VMS), the docking station is a key accessory for charging and high-bandwidth data transfers in a single operation.



Documents / Resources

	<p>IONODES PERCEPT Body Camera IoT-Connected Open-Platform Wearable Device [pdf] U ser Guide</p> <p>PERCEPT, Body Camera IoT-Connected Open-Platform Wearable Device, PERCEPT Body Ca mera IoT-Connected Open-Platform Wearable Device</p>
	<p>IONODES PERCEPT Body Camera [pdf] User Guide</p> <p>PERCEPT, PERCEPT Body Camera, Body Camera, Camera</p>

References

- [IONODES | Video innovations that work for you.](#)
- [IONODES PERCEPT QR Code](#)