



JET JRB-14 Riser Block Kit Instruction Manual

[Home](#) » [JET](#) » JET JRB-14 Riser Block Kit Instruction Manual 



JRB-14 Riser Block Kit Instruction Manual

Contents

- [1 JRB-14 Riser Block Kit](#)
- [2 Installation Instructions](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

JRB-14 Riser Block Kit

Shipping Container Contents

- 1 Riser Block
- 1 Blade Guard
- 1 Hex Cap Screw (5/8"-11 x 8-1/2")
- 2 Flat Washer (5/8")
- 1 Hex Nut (5/8"-11)
- 1 Guide Post
- 1 Blade Guard Assembly
- 1 Saw Blade
- 1 Installation Sheet

Tools Required for Assembly


26mm Combination Wrench
15/16" Socket w/Ratchet Handle
#1 Cross-point Screwdriver
6" Adjustable Wrench
Hex Wrench Set

Installation Instructions

(refer to exploded view on the reverse side for assembly help)

 **WARNING:** Disconnect the band saw from the power source.

1. Loosen the blade tension, open both blade wheel covers, remove the table pin and blade insert, and remove the blade. See the band saw operator's manual for further details, if necessary.
2. Remove the plastic blade guard next to the switch box.
3. Remove the switch box assembly and the wire clamp from the saw arm.

 **WARNING:** Support the saw arm before proceeding with the next step. The saw arm is heavy; use an assistant to install it. Failure to comply may cause bodily injury and/or damage to property.

4. Carefully loosen the bolt and nut assembly that holds the saw arm to the saw body and remove them. Remove the saw arm.
5. Place the riser block on the saw body, making sure the pins in the body line up with the holes in the riser block.
Note: The direction-indicating arrow on the riser block goes to the rear of the machine.
6. Place the saw arm on top of the riser block, making sure the pins and holes line up. Fasten the arm to the riser block assembly by inserting the 5/8"-11 x 8-1/2" hex cap screw and 5/8" washer through the arm, riser block, and saw body and fasten with a 5/8" washer and 5/8" hex nut. Tighten the nut securely.
7. Fasten the new blade guard assembly (Item #2, Fig. 1) to the saw arm and saw the body.
8. Fasten the switch box assembly to the tapped holes in the riser block using the same screws that attached the box to the saw arm. Do not try to attach the switch box back to the original position on the saw arm.
9. Loosen the two hex cap screws holding the metal blade guard assembly to the upper blade guide bracket (B, fig. 2) and remove the blade guard.
10. Remove the upper blade guide bracket (B, Fig. 2) from the guide post (D, Fig. 2).
11. Loosen the guide post lock knob (A, Fig. 2). Loosen, but do not remove the set screw (C, Fig. 2) to release the tension on the guide post.



Note: Behind the set, the screw is a spring and steel ball. Removal of the set screw may cause loss of the spring and steel ball. Place the new guide post on top of the one to be removed. Make sure the v-grooves of both guide posts are lined up. Remove the original by pushing down on top of it with the replacement. Make sure the replacement follows the original smoothly.

IMPORTANT: Removal of the original guide post without direct replacement of the new guide post will cause the spring and ball to fall out of the arm, making replacement more difficult.

12. Tighten the set screw (C, Fig. 2).
13. Attach the upper blade guide bracket to the bottom of the new, longer guide post.
14. Fasten the new blade guard assembly (Item #7-11, Fig. 1) to the upper blade guide bracket.

Note: Always adjust the blade guard assembly to cover the blade completely whenever the guide post height is changed.

15. Install the new blade; tension and track the blade; adjust both blade guides; close both blade wheel covers. Install the table pin and the table insert and connect the bandsaw to the power source. See the bandsaw operator's manual for full details regarding these adjustments.

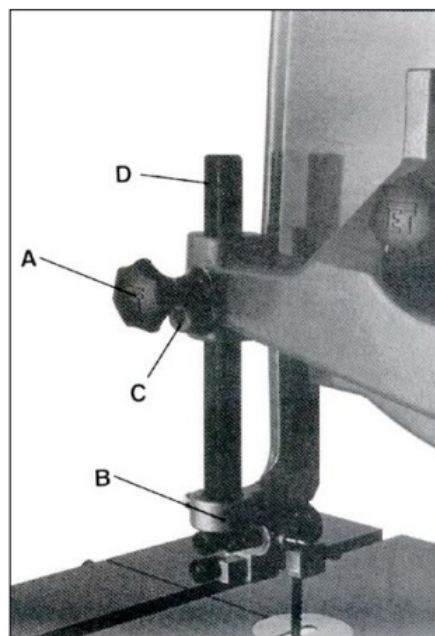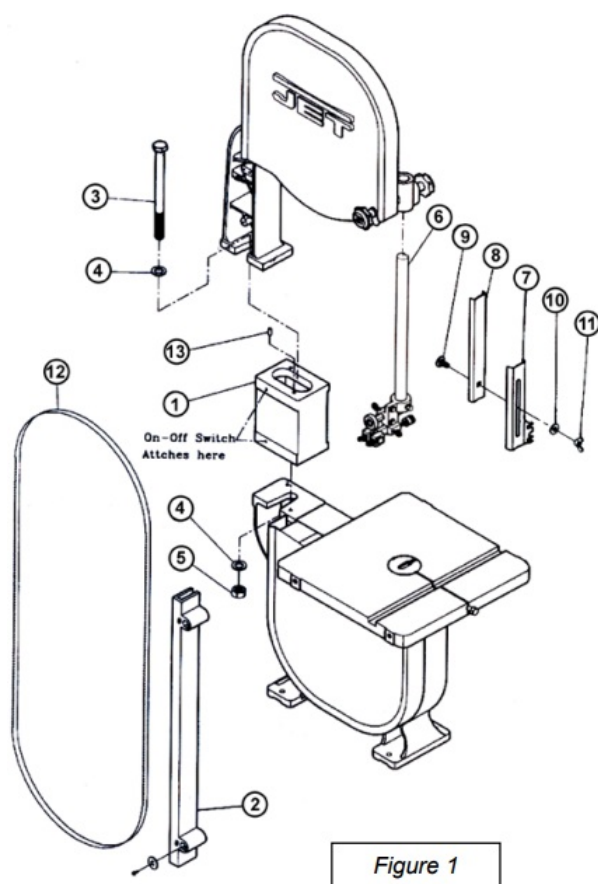

Index No.	Part No.	Description	Size	Qty
1	199188W	Riser Block	1	1
2	173106W	Blade Guard	1	1
3	SH608403	Hex Cap Screw	5/8-11 x 8-1/2	1
4	TS-0680081	Flat Washer	8-May	1
5	TS-0561071	Nut	5/8/2011	1
6	150907	Guide Post	3/4" Diameter	1
7	199102	Upper Wheel Blade Guard (right)	1	1
8	199199	Upper Wheel Blade Guard (left)	1	1
9	SC089400	Carriage Bolt	M8 x 16	1
10	TS-1550061	Washer	M8	1
11	TS-154306	Wing Nut	M8	1
12	199196	Saw Blade	/8" x 0.020" x 105-1/2" (6TPI)	1
13	150031	Pin	1	1

Note: If used with Carter Band Saw Guides (708121), you must order #199102C to replace index #7.



Ph: 800-274-6848
Part No.: M-708717
Revision B1, 05/2014

Documents / Resources

<p><small>Operation Instructions and Parts List for JRB-14 Riser Block Kit</small></p> <p>Operation Instructions: This document provides detailed instructions for the assembly and operation of the JRB-14 Riser Block Kit. It includes a list of parts and their quantities, as well as a step-by-step guide to ensure proper installation and use.</p> <p>Parts List:</p> <ul style="list-style-type: none"> 1. Riser Block (199188W) 1. Blade Guard (173106W) 1. Hex Cap Screw (SH608403) 1. Flat Washer (TS-0680081) 1. Nut (TS-0561071) 1. Guide Post (150907) 1. Upper Wheel Blade Guard (right) (199102) 1. Upper Wheel Blade Guard (left) (199199) 1. Carriage Bolt (SC089400) 1. Washer (TS-1550061) 1. Wing Nut (TS-154306) 1. Saw Blade (/8" x 0.020" x 105-1/2" (6TPI)) 1. Pin (150031) 	<p>JET JRB-14 Riser Block Kit [pdf] Instruction Manual</p> <p>JRB-14 Riser Block Kit, JRB-14, Riser Block Kit, Block Kit, Riser Block, Riser Kit</p>
---	---