





Lorelli GLORY Combi Stroller Instruction Manual

[Home](#) » [lorelli](#) » Lorelli GLORY Combi Stroller Instruction Manual 



GLORY Combi Stroller
Move and joy
Always next to you
stroller GLORY
age range: 0+ months up to 22 kg
Instruction Manual

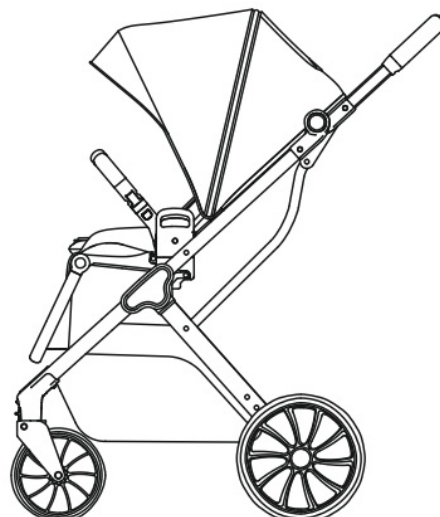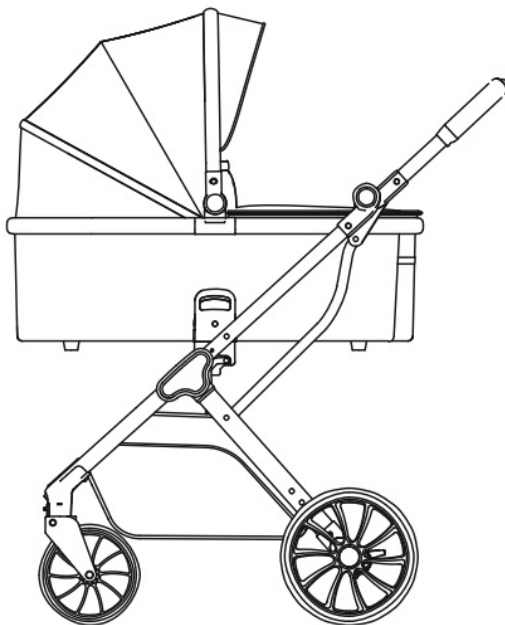

MANUAL INSTRUCTION

designed in EU

www.lorelli.eu



find us on V 2.3

Contents

- 1 GLORY Combi Stroller
- 2 SAFETY REQUIREMENT
- 3 WARNING
- 4 PARTS
- 5 UNFOLDING
- 6 ASSEMBLING
- 7 EXPLOITATION
- 8 FOLDING
- 9 CARRYCOT
- 10 MAINTENANCE AND CARE
- 11 Documents / Resources
 - 11.1 References

GLORY Combi Stroller



https://lorelli.eu/media/documents/products/Strollers/GLORY%20in1_Manual%20Instruction.pdf

Scan the QR code to get more product information and manual instruction in more languages. Download QR Scanner App onto your device.

FEATURES

1



Picture 1


2




3



4

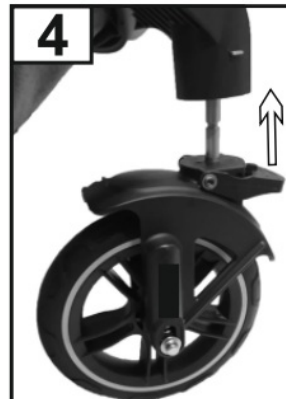


5

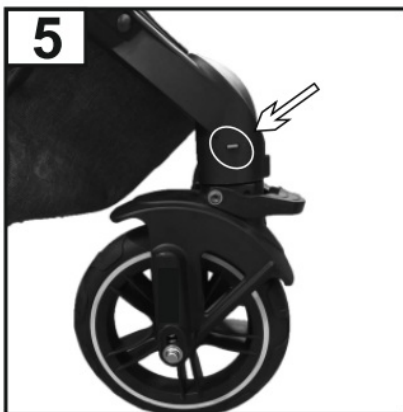









6





7

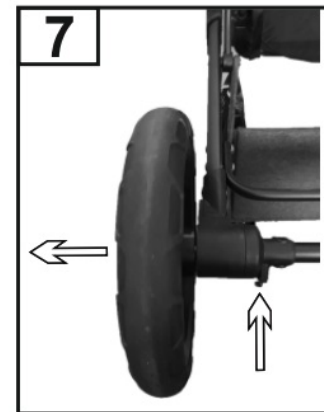

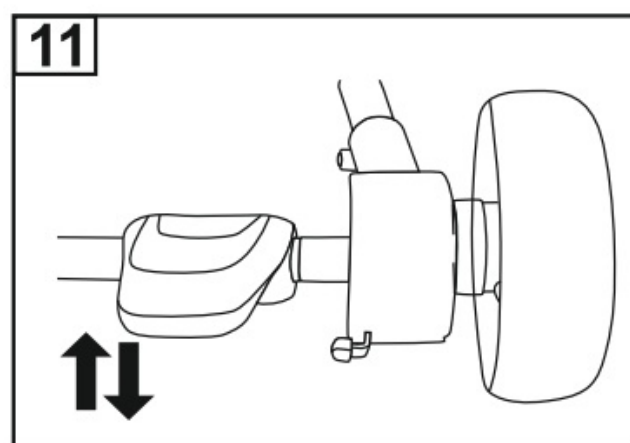

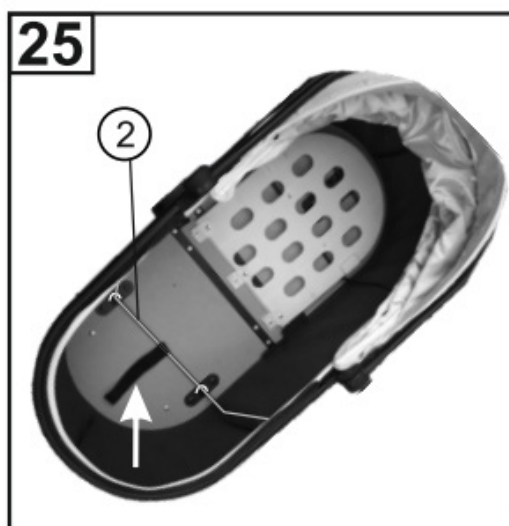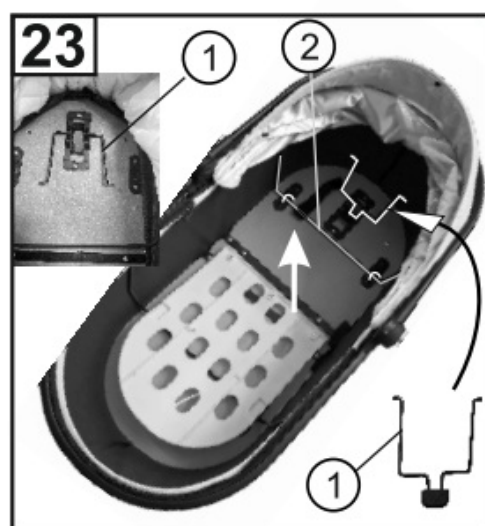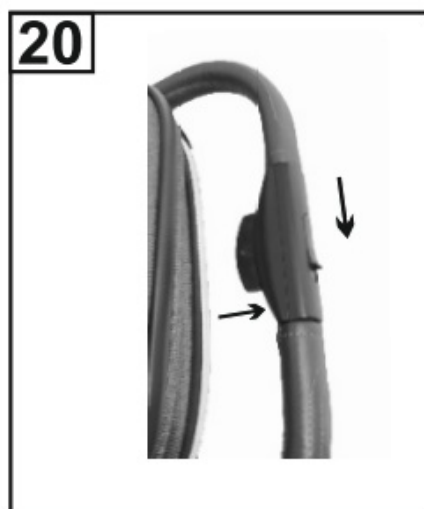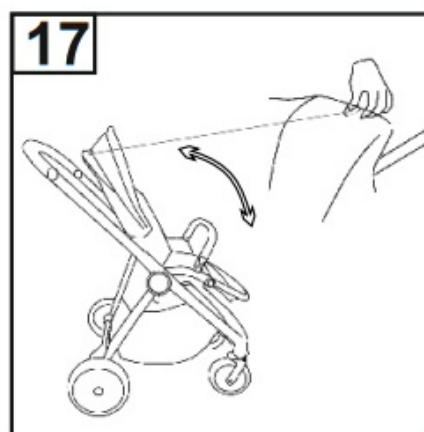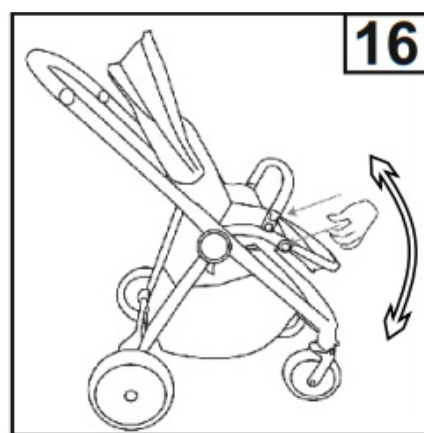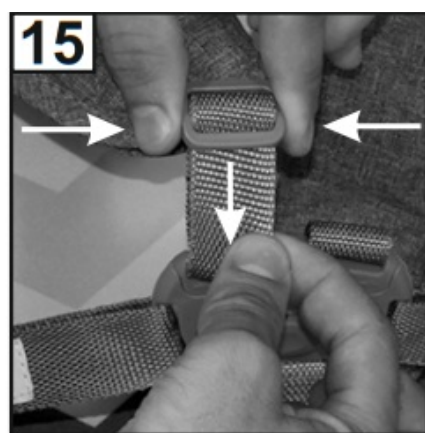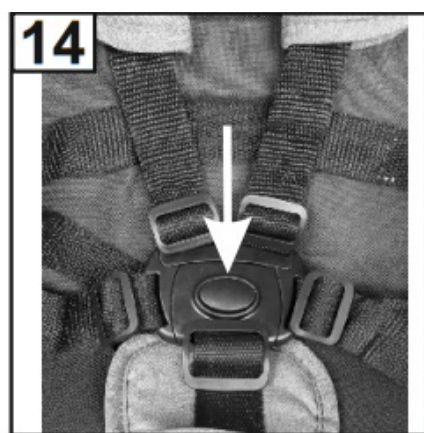

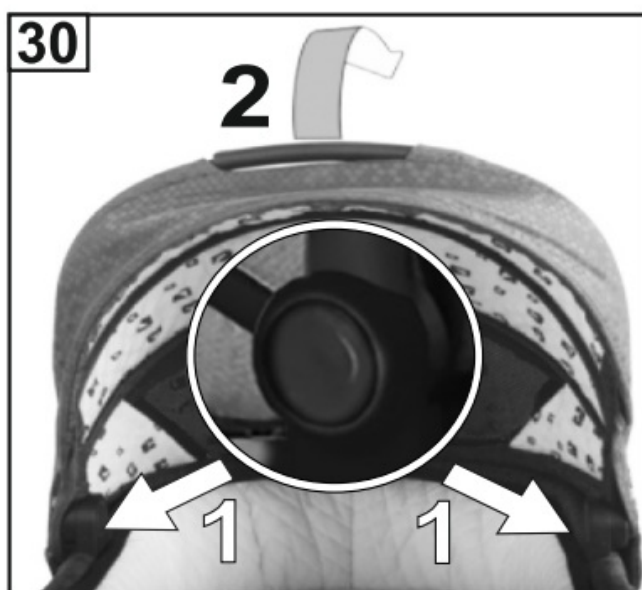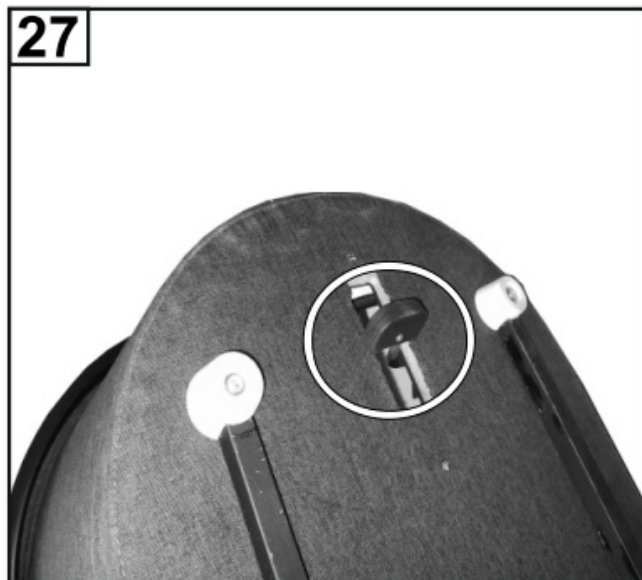


IMPORTANT READ CAREFULLY AND KEEP FOR FUTURE REFERENCE!

SAFETY REQUIREMENT

1. This vehicle is suitable for children with a weight up to 22 kg or 4 years whichever comes first!
2. The height of the carried child in the stroller should not exceed 104 cm!
3. Use parking device if you do not hold the stroller with hand!
4. Do not leave the stroller on hills or inclined surfaces even if you have activated the parking system!
5. Parking device shall be engaged when placing and removing the children!
6. The shopping basket can take a maximum load of 2 kg!
7. Any load attached to the handle and/or on the back of the backrest and/or on the sides of the vehicle will affect the stability of the vehicle! Maximum load of the accessory bag 1 kg. Do not hang any additional bags!
8. Regularly check for loose parts! Make routine inspection, regularly maintain, clean and/or wash the vehicle!
9. The vehicle shall be used only for 1 child!
10. Accessories which are not approved by the manufacturer shall not be used!
11. Only spare parts delivered or recommended by the manufacturer/ distributor can be used!
12. Make sure that the safety belts are placed properly!
13. The stroller should always be used under the supervision of an adult!
14. Do not allow children to suspend him/herself or play in the stroller!
15. Do not allow children to stand in the stroller!
16. Do not allow your child to stand on the seat and foot rest!
17. Do not use the stroller on uneven surfaces near fire or other dangerous places!
18. Do not use the stroller on stairs and escalators!
19. Fold the stroller before go upstairs and downstairs. Mounting the stroller on stairs, pavements and others with the child in it and by pushing the handle causes deformation of the stroller and is out of warranty repair!
20. Adjusting of the back rest must be made only by a person read carefully the instruction rules for adjusting!
21. Any additional baggage left in the stroller may cause it to become unstable!
22. The person who assembles the stroller must be familiarized with its functions!
23. The front bar can not be used as a carry handle!
24. The car seat COMET/ VEGA I-SIZE (additional accessory, not included in the set) is compatible with stroller "GLORY" by means of additional adaptors (additional accessory, not included in the set)!

WARNING

1. **WARNING!** Never leave the child unattended!
2. **WARNING!** Ensure that all the locking devices are engaged before use!
3. **WARNING!** To avoid injury ensure that the child is kept away when unfolding and folding this product!
4. **WARNING!** Do not let the child play with this product!

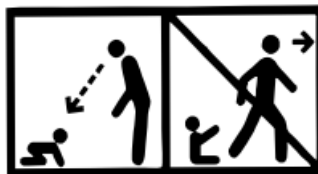

5. **WARNING!** This pushchair is designed to be used from baby's birth. You shall use the most reclined position for newborn babies. The newborn child is not able to sit and hold his/her head up unassisted. Therefore do not fix the backrest in sitting position for children under 6 months!
6. **WARNING!** Always use the restraint system!
7. **WARNING!** Check that the pram body or seat unit or car seat attachment devices are correctly engaged before use!

8. **WARNING!** This product is not suitable for running or skating!
9. **WARNING!No** additional mattress / cushion shall be added.
10. **WARNING!** Always use the crotch belt in combination with the waist belt! To prevent injury from a fall or a slip off always use the shoulder straps!
11. **WARNING!** Keep away from fire !
12. **WARNING!** The carrycot is intended for a child who cannot sit up unassisted, turn over or get up on their hands and knees. Child maximum weight: 9 kg.
13. **WARNING!** When using the car seat: This car seat is not mean to replace a cot or a bed for sleeping. If your child needs to sleep, you need to place them in a suitable carrycot, cot or bed.
14. **WARNING!** The images on the front page and inside the manual are for illustrative purposes and may differ from the actual product.
15. **WARNING!** Before using the product for the first time, remove all advertising material from it as well as the materials used to attach them to the product.
16. **WARNING!** Do not use the pram body as a carry cot! EN 1888 – 2:2018 + A1:2022

PARTS

Picture 1

1. Metal frame of the stroller – 1 pc.
2. Shopping basket – 1 pc.
3. Back wheels – 2 pcs.
4. Front wheels -2 pcs.
5. Summer seat -1 pc.
6. Bumper bar – 1 pc.
7. Canopy -1 pc.
8. Seat footmuff – 1 pc.
9. Accessory bag -1 pc.
10. Carrycot with mattress and carrying handle -1 pc.
11. Carrycot cover – 1 pc.

UNFOLDING

1. Folded stroller (Figure 2)
2. Lift the handle of the stroller up, the stroller will unfold and lock in place automatically. (Figure 3)

ASSEMBLING

1. Install the front wheels by pressing the console button and pushing them up until they lock in place (Figure 4). Ensure that they are securely locked in place. To remove, press the console button and pull the wheel downwards. (Figure 5)
2. Install the rear wheels as shown in Figure 6 To remove, pull the rear axle button and pull the wheel off. (Figure 7)
3. Install the stroller seat in the frame as shown in Figure 8. If you hear a click, it means that the seat is fixed in

place. To remove, press the buttons on both sides of the seat at the same time and pull upwards (Picture 9).

The seat can be installed to face the front or the rear.

4. Install the bumper bar. To remove the bumper bar, press the buttons on both sides and pull. (Figure 10)

EXPLOITATION

1. To lock the stroller in place, use the brakes on the rear wheels by pressing the brake pedal, located on the rear axle (Figure 11) To release the brake, raise the brake pedal with your foot.
2. While pushing the stroller on rough and uneven surfaces, you can use the straight-line option by pressing the button to lock the front wheels. To release the front wheels, lift the lock button. (Figure 12)
3. To adjust (lower) the canopy, grab its upper part and pull it down to the desired position. (Figure 13)
4. When using the seat, it is MANDATORY to put the child's safety harness on!
5. Attach the shoulder and abdominal straps and place them in the central locking buckle (Figure 14). Adjust the length of the harness straps by pulling the buckles (Figure 15). To release the harness, press on the central buckle button. (Figure 14)
6. Adjusting the footrest – To change the position of the footrest, press both buttons simultaneously and adjust (Figure 16).

ATTENTION! Failure to observe this instruction will damage the locking mechanisms and will not be subject to warranty!

7. You can adjust the position of the backrest by pulling up the handle to unlock the mechanism located on the back and placing it in the desired position. (Figure 17)

ATTENTION! If you try to adjust the backrest without unlocking the mechanism and apply excessive force, the unlocking mechanism may become deformed, which is not subject to warranty! Attention! The brake does not guarantee optimal power when on steep inclines! Therefore, never leave the stroller on an inclined surface with a child sitting or lying in the stroller!

WARNING! The brake on your stroller is a type of parking device. To activate the brake, the stroller must be stationary. Carefully press the brake pedal, while gently pushing the stroller front-and-back to synchronize the braking device and for more secure activation of the braking mechanism.

8. If you want, you can attach the footmuff to the seat by slipping it under the footrest and fastening to the upholstery and the canopy.

FOLDING

1. Activate the stroller brakes.
2. Fold the canopy to the maximum extent possible.
3. Straighten the footrest as far up as it will go.
4. Fold the backrest by releasing it from the mechanism above until it rests firmly against the seat. (Figure 18)
5. Straighten the folded seat in the upper position towards the handle (Picture 19)
6. Activate at the same time the mechanisms located on the upper side of the handle and push down (Figure 20 / 21)
7. A properly folded stroller should look like the image on figure 22.

CARRYCOT

ATTENTION, to prepare properly the carrycot for use, after you remove it from the transport box Perform the following actions:

1. Place the carrycot on a suitable table and remove the mattress and the liner.
2. Move the plastic headrest to the lower part of the carrycot and insert the Y-shaped mechanism for head adjustment (1) in the carrycot opening by pulling it up exactly as pictured on figure 23.
3. Take the tensioner strap (2) and pull towards the outer part of the carrycot until it snaps on both sides. A click must be heard.
4. With your right hand take the head adjustment mechanism (1), squeeze it lightly and insert the upper part in the openings of the plastic backrest while holding it with your left hand. (Figure 24)
5. In the manner described above pull the strap of the other tensioner (2) in the lower part of the carrycot until it snaps, and you hear a click on both sides. (Figure 25)
6. Snap on the liner and replace the mattress. (Figure 26)
7. Adjust the position of the baby's head in one of the three options by moving the mechanism below the carrycot. (Figure 27)
8. Lift up the carrying handle until you hear a click. (Figure 28 / 29)
9. To fold the carrying handle, press both buttons on the inside at the base of the handle at the same time. (Figure 30)
10. Install the carrycot on the stroller by inserting it in the designated locations on the frame (Figure 31). A click means that the carrycot is attached. To remove, squeeze the buttons on both sides of the carrycot at the same time and pull up. The carrycot must be installed facing the parents. (Figure 31).
11. Finally, place the footmuff and fasten it with a zipper and buttons onto the carrycot. (Figure 28)

MAINTENANCE AND CARE

1. To clean the metal parts, clean with a wet cloth and wipe dry.
2. To clean the plastic parts, use a towel, water and a soft detergent.
3. To clean the textile parts, use a solution for cleaning of upholsteries.
4. When not in use, never place other objects in or on the stroller!
5. Always dry and air the stroller if it gets wet.
6. Run regular clean-ups over the wheel axes and the plastic elements.
7. Always clean the wheel axes and the plastic elements after using the stroller on sandy or dusty surfaces!
8. **DO NOT LUBRICATE** the wheel axes or other movable parts of the stroller! Just clean them!
9. Run regular checks for loose or damaged parts and if there are such parts, immediately replace them with new ones!



Didis Ltd.


Bulgaria, Shumen, 6 Trakia-iztok Street

Phone: +359 54 850 830

e-mails: home.market@didis-ltd.com;

export@didis-ltd.com

Documents / Resources

	<p>Lorelli GLORY Combi Stroller [pdf] Instruction Manual V2.3, GLORY, GLORY Combi Stroller, Combi Stroller, Stroller</p>
---	--

References

- [SaaS | | ; ,APP ,SCRM , !](#)

Manuals+.