



## **Contents** [ [hide](#) ]

- [1 Lunix LX3 Cordless Hand Massager](#)
- [2 Introduction](#)
- [3 What's In The Box?](#)
- [4 Specifications](#)
- [5 Benefits](#)
- [6 Precautions](#)
- [7 BATTERY SAFETY GUIDELINES](#)
- [8 Operations](#)
- [9 Control Pad](#)
- [10 How to Use](#)
- [11 Care, Maintenance & Cleaning Instructions](#)
- [12 Troubleshooting](#)
- [13 Overview](#)
- [14 FCC Compliance](#)
- [15 WARRANTY](#)
- [16 FAQ](#)
- [17 Documents / Resources](#)
  - [17.1 References](#)



## **Lunix LX3 Cordless Hand Massager**



### **Cordless Hand Massager LX3**

Congratulations on your purchase of the Lunix LX3 Cordless Hand Massager!

- This advanced massager is designed to squeeze away the stress and tension of everyday life, offering you a powerful and unparalleled massage experience.
- Your satisfaction is our top priority, and we are here to assist you with any questions or concerns.
- We are a small American family business in California rooted in the core value of enhancing our customers' lives. Our dedicated team strives daily to create thoughtful, high-quality products, giving you confidence in your purchase. After all, our products are crafted with care for those who matter most:

**OUR FAMILY & FRIENDS!**



## Introduction

- Thank you for purchasing the LX3 Cordless Hand Massager
- This manual contains instructions on how to operate and maintain your model so that you can enjoy it for years. However, please be advised that mishaps could happen in time. Rest assured that LUNIX is a team of professionals committed to providing the highest factory support possible.
- We know you're excited about using your LX3 Hand Massager, but you must take some time to read through the User Manual. This manual contains all the necessary setup and operating procedures that will allow you to use your new device. Also, read and follow the precautions and warnings in this manual and any labels or tags attached to your model. They are there to educate you on how to operate your unit safely and also get maximum life and performance from it.
- Thank you again for choosing LUNIX. We work hard every day to ensure the highest level of customer satisfaction possible. We genuinely want you to enjoy your new LX3 Hand Massager!
- You can find more information on our website at [www.lunixinc.com](http://www.lunixinc.com)
- If you have any questions about your model or its operation, contact LUNIX Customer Support by email : [support@lunixinc.com](mailto:support@lunixinc.com)

## What's In The Box?



## Specifications

- **Product Name:** Hand Massager
- **Model:** LX3
- **Power:** 5W
- **Weight:** 2.5 lbs / 1.1kg
- **Voltage:** DC 3.7V
- **Battery:** Lithium
- **Dimension:** 11.8 x 6.3 x 4.7 in / 30 x 16 x 12 cm

## Terms of Use

- This product is surrendered by LUNIX to the purchaser with the understanding that the purchaser accepts the responsibility that using the LX3 Hand Massager with its accessories in a careless, improper, or unsafe manner can result in serious injury or death. Also, the purchaser assumes all liability resulting from misuse, unsafe handling, failure to follow instructions, or any action violating applicable laws or regulations. LUNIX shall not be liable for personal injury, property loss, or life resulting from using this product under any circumstances, including intentional, reckless, negligent, or accidental behavior. LUNIX shall also not be liable for any special, indirect, incidental,




or consequential damages arising from the assembly, installation, or use of this product or any accessory or chemical required to use this product. By the act of operating & using the product, the user accepts all resulting liability and releases LUNIX of any and all liability associated with its use.

- If you, as the user, do not accept liability for Usership, LUNIX requests that you do not use this product. Do not open any of the enclosed materials. Return the model to LUNIX, but please be advised that we absolutely cannot accept an item for return or exchange after it has been used or is otherwise no longer in as-new condition.
- All information in this User Manual is subject to change without notice. For the most updated version, please visit our website.
- LUNIX reserves the right to make changes and improvements to products without incurring any obligation to incorporate such improvements into products previously sold. If you have any questions about your model or its operation, contact Customer Support by E-mail: [support@lunixinc.com](mailto:support@lunixinc.com)

## **Benefits**

- The LUNIX LX3 Hand Compression Massager is designed to provide a comfortable massage based on human engineering and acupuncture point distribution. Unlike other massagers, it uses LUNIX's compression technology instead of the rolling function, resulting in a massage that feels like having a professional masseur-physiotherapist at home.
- Regular use of the LX3 Hand Massager can help relieve hand pain, improve blood circulation, reduce inflammation, and ease muscle tension. It is especially beneficial for those suffering from arthritis, carpal tunnel syndrome, or general hand fatigue. The massager can improve overall well-being by promoting relaxation and reducing stress.
- To experience the benefits of the massage, it is recommended to use the LX3 Hand Massager for 10 to 15 minutes, one or two sessions daily, for at least seven consecutive days. While some users may feel relief right away, results can vary from person to person, depending on individual needs and conditions. It's essential to start with a lower intensity and gradually increase it as the body becomes accustomed to the massage. Your safety is our priority, so please consult your doctor immediately if you feel unwell after use.
- Sit back, relax, and enjoy a good hand massage after a long day of work or before

going to bed.

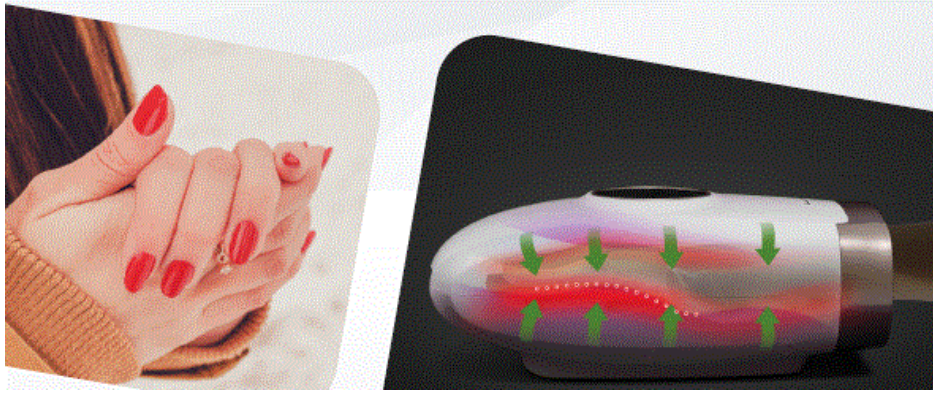

## Precautions

We want you to enjoy your new hand massager safely. Operate your model sensibly and carefully to ensure an exciting, safe, and relaxing experience. Failure to use the device safely and responsibly may result in property damage or serious injury. It is crucial that you strictly follow the precautions outlined in this manual to help ensure safe operation. Remember, you are solely responsible for adhering to these instructions and precautions.

- Upon receiving the hand massager, thoroughly inspect the device and its accessories for any signs of damage. If there are any defects or issues, do not use the device and contact customer support immediately.
- Before operating the hand massager, carefully read the user manual for detailed instructions and safety warnings.
- If you are pregnant, have diabetes, heart disease, osteoporosis, or any condition that affects skin sensitivity or pressure tolerance, consult a healthcare provider before using the hand massager.
- Discontinue use immediately if you experience any pain, discomfort, or unusual sensations, and seek advice from your healthcare provider.
- Individuals with pacemakers should only use this product if advised by a healthcare professional.
- Begin your massage session with the lowest setting and gradually increase the intensity as your hand adjusts to the pressure and heat.
- Never use the device for more than 30 minutes at a time.
- Always ensure that the massager is not covered during use to prevent overheating.
- Use only the provided USB cable and plug for charging, ensuring it fits securely into

the USB port.

- Never charge the device with a USB plug or cable exceeding 5V 2A, as this could damage the unit and cause fire.
- Avoid charging overnight or for extended periods during the day.
- Do not charge the device on wooden surfaces or near liquids to prevent heat damage and reduce the risk of spills that could cause electrical issues.
- Do not leave the massager unattended while plugged in.
- Never use the massager while charging, as this can affect the performance and damage the unit.
- Regularly inspect the massager for any wear or damage, particularly in the electrical cords. Please do not use it when you notice any wear or damage.
- Clean the device after each use, especially if it is shared among multiple users. Keeping the massager clean ensures both hygiene and longevity.
- To clean, wipe the device's surface with a dry or slightly damp cloth. Never submerge the device in water or use harsh cleaning agents.
- Avoid falling asleep while using the massager.
- Keep liquids away from the device to avoid spills that could cause electric shock or damage.
- Remove jewelry before using the hand massager to prevent damage to the device or injury to yourself.
- If you notice dimples on your hand after using the massager, do not worry—they are temporary and will naturally disappear within 30 minutes.
- Do not use the massager on wet skin, humid environments, or near heated surfaces, as this could cause electric shock or malfunction.
- Do not use the massager in environments with high temperatures, corrosive gases, or extreme humidity to avoid damage to the device.
- Avoid using the device if you've taken painkillers, sedatives, or alcohol, as these substances may impair your ability to judge pressure and duration, leading to injury.
- Never attempt to disassemble or repair the unit, charging cord, or screen, as this will void the warranty and could result in injury.
- This hand massager is designed for personal use only. Always use the device according to its intended purpose and apply common sense to ensure safe and effective operation.

- Remember, this device is not intended to treat, diagnose, or cure any medical condition. Always prioritize your safety by following these guidelines carefully.

## **SAFETY WARNING:**

### **Check Health Guidelines**

- Do not use this massager as a substitute for medical treatment. If you are experiencing unexplained pain, receiving treatment for circulation or vascular issues, or using at-home medical equipment, refer to your healthcare provider before use.
- Seek medical advice before using the massager if you have any physical health concerns or if you have any of the following conditions:
  - Pregnancy
  - Pacemakers or other medical implants
  - Heart or vascular disease
  - Irregular blood pressure or are receiving treatment to manage blood pressure.
  - Osteoporosis
  - Cancer
  - Recent surgery

### **Usage Restrictions**

- Do not use this product on swollen or inflamed skin, open wounds, or if you have a physical condition that limits mobility.
- Never use the massager on individuals with sensory deficiencies that affect their bodies.
- Do not leave the appliance unattended, especially around children.
- Limit usage to 15-minute sessions, with no more than 60 minutes of continuous use.
- For those with sensitive hands, start with the lowest intensity setting.

### **General Safety Guidelines**

- Carefully read and follow all the manufacturer's instructions, warnings, and precautions before using the massager.
- Children under 14 should not use the massager without the supervision of a



responsible adult. Remember, this product is not a toy.

## **BATTERY SAFETY GUIDELINES**

This hand massager is a powerful device that demands responsible and careful use to ensure your safety. Any form of improper handling or careless operation can lead to serious injury or even death, underlining the gravity of the situation.

- The hand massager contains a lithium battery, a potentially hazardous component if not handled correctly. It is of utmost importance to always adhere to the provided instructions and warnings regarding battery care and use.
- Prior to charging, it is crucial to ensure that the charger and plug settings are compatible with the battery type and specification (5V, 2A). Failure to do so can result in overcharging and potential fire hazards.
- Always charge the battery in a well-ventilated area, away from flammable materials, and never leave it unattended during charging. Keep the device out of reach of small children while charging.
- Do not disassemble, crush, short circuit, or expose the battery to fire or other ignition sources.
- If the device becomes hot to the touch during charging (above 110°F / 43°C), disconnect it immediately and stop charging.
- Keep a Class D fire extinguisher nearby in case of an emergency.
- Avoid exposing the device to water or moisture to prevent electrical hazards.

### **WARNING: RISK OF INJURY!**

We strongly recommend that people who have very sensitive hands use the lowest intensity.

### **WARNING! CAUTION! DANGER! FIRE HAZARD!**

- CHARGING OR DISCHARGING BATTERIES POSES A NUMBER OF SIGNIFICANT HAZARDS WHICH CAN INCREASE THE RISK OF FIRE, EXPLOSION, SERIOUS INJURY, AND PROPERTY DAMAGE IF NOT PERFORMED AS PER THE INSTRUCTIONS. BEFORE USE, READ AND FOLLOW ALL MANUFACTURER'S INSTRUCTIONS, WARNINGS AND PRECAUTIONS.

- NEVER ALLOW CHILDREN UNDER THE AGE OF 14 TO USE THE MASSAGER WITHOUT THE SUPERVISION OF A RESPONSIBLE, KNOWLEDGEABLE ADULT. THIS PRODUCT IS NOT A TOY.

## **Operations**

### **PLEASE WASH YOUR HANDS EACH TIME BEFORE USING THE HAND MASSAGER**


The LX3 Hand Massager is a personal care product. It is not intended to treat, diagnose, or cure any medical condition. Always consult with a healthcare professional if you have concerns regarding your health.

### **FIRST STEP: CHARGING**

- Charge the hand massager before first use. It's crucial to only use the USB cable and plug included in the package to charge the unit. This ensures the safety and optimal performance of your hand massager. Using a different plug or a charger with specifications higher than 5V/2A can affect performance and damage the unit.
- The battery level indicator should blink green while charging, indicating that the hand massager is receiving power. Once fully charged, it should display four solid green lights, signaling that the hand massager is ready for use.

### **IMPORTANT:**


For maximum battery capacity and optimal performance, charge the hand massager for 7 hours before first use. Please note that the device does not turn on while charging and cannot be used until fully unplugged for safety reasons. If the green light is not flashing while charging, refer to the troubleshooting section on page 16 of this manual.

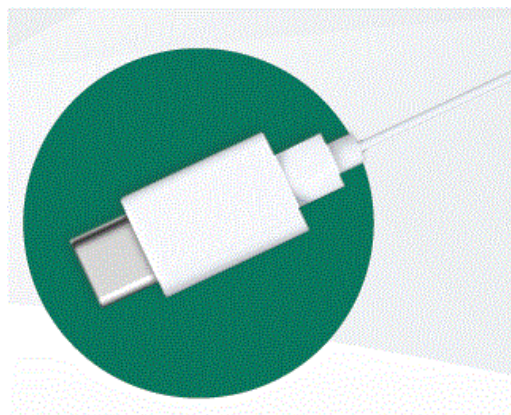

## How to Use the Hand Massager

1. Place your hand with your palm facing down into the hand massager. Your palm should fit comfortably inside. If needed, adjust your hand until you find the perfect spot. The front opening is designed to enhance comfort and provide maximum ventilation.
2. Press the power button for 2 seconds until the device turns on.
3. Press the program button to start the massage. You can choose from 6 different massage modes to find the one that suits you best.
4. Use the intensity control to adjust the massage strength, ranging from 1 (weakest) to 6 (strongest), according to your preference.
5. If desired, activate the vibration and heat features for an enhanced massage experience.
6. The massager will automatically turn off after a 15-minute session. If you want to end the session earlier, press the power button to turn it off manually. You can start another session if you wish to continue.

## Control Pad

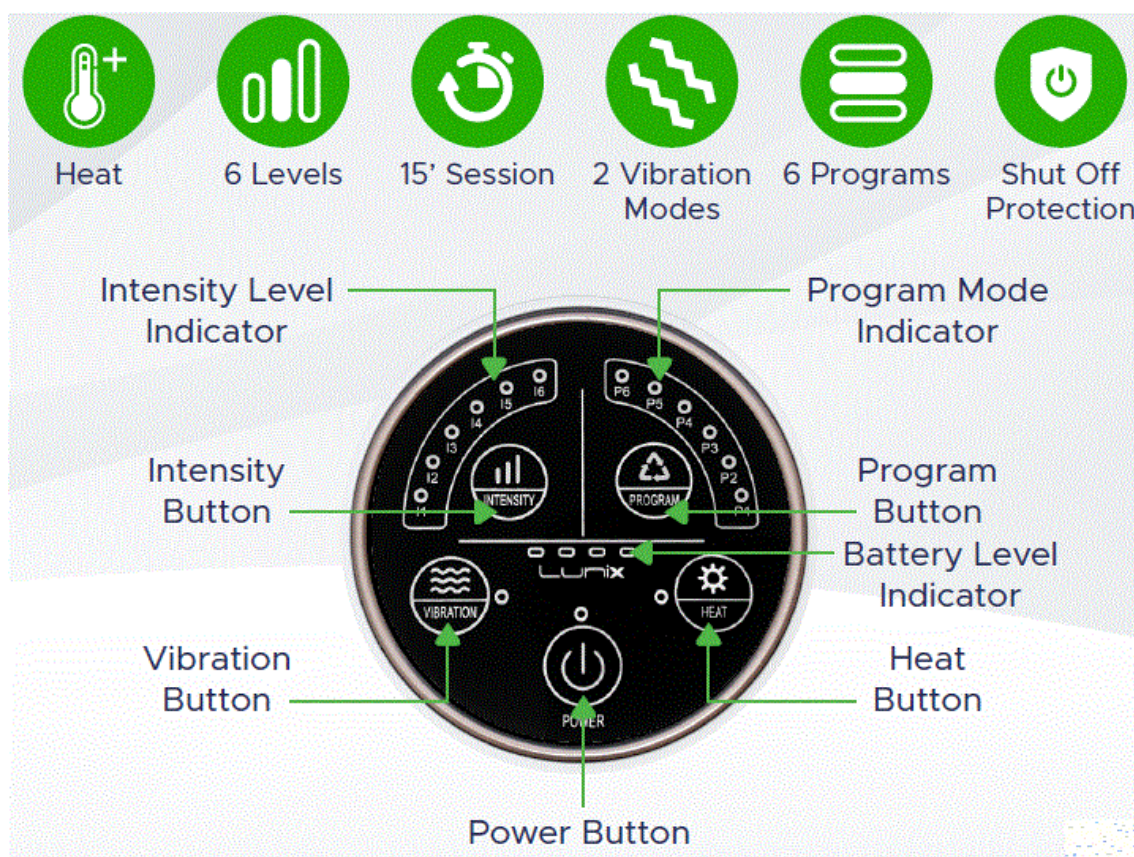



## POWER BUTTON

- **POWER ON:** Press the power button for 2 seconds to turn on the massager. Then, press the program button to start the massage.
- **POWER OFF:** The massager's default run time is 15 minutes, and it automatically shuts off after the massage session. To turn it off manually, press the power button for 2 seconds. The airbags will slowly deflate once the device is shut down. You can start again if you want to go for a second session.



## INTENSITY BUTTON

- The default intensity is level 3, with 6 levels ranging from 1 (weakest) to 6 (strongest). Adjust the intensity by pressing the button.
- If your hands are sensitive, start at level 1 and gradually increase as your hand gets accustomed to the massage. Use regularly for a few days to experience pain relief and full massage benefits.



## PROGRAM MODE

- The massager starts in program mode P1. It has 6 massage modes to choose from (P1 to P6).
- Each mode targets different areas of your hand. Choose your preferred mode by pressing the program button. Everyone may feel a unique massage due to different hand shapes.
  - Combination between Fingers, Palm and Wrist Massage P1
  - Combination between Fingers, Palm and Wrist Massage P2
  - 1st cycle Palm Massage 2nd cycle: Palm and Wrist Massage P3
  - Wrist massage P4
  - 1st cycle Palm Massage 2nd cycle Wrist Massage P5
  - Palm Massage P6





## VIBRATION BUTTON

- Press the button to activate the vibration mode. When the option is activated, the red light above the button will turn on.
- The LX3 hand massager provides 2 different vibration modes: pulse and continuous. Press the button several times to switch between the modes.



## HEAT BUTTON

- Press the button to turn the heat ON or OFF. When on, a red light appears above the button.
- Please note that the heat function increases gradually, and as your body gets accustomed to the heat, it may not feel very intense. However, the temperature does reach its optimal level of approximately 104°F (40°C) after 5 to 10 minutes of use. This gentle warmth is designed to relax and enhance the massage benefits.
- Wearing gloves can help intensify the sensation and aid blood circulation if you want to feel more heat.

## How to Use

### THE FINGER MASSAGER

This Finger Massager is an easy and relaxing way to soothe tired fingers after a long day. Just put your finger in the middle of the roller and scroll back and forth to enjoy a wonderfully comfortable massage.





## Care, Maintenance & Cleaning Instructions

- Store the Hand Compression Massager in a cool and dry place when not in use.
- Do not place the unit into any liquid.
- Keep away from all solvents and harsh detergents.
- After use, wipe with a soft, damp cloth using non abrasive cleaners.

## Troubleshooting

When operational problems occur, please refer to the chart below.

PROBLEM	POSSIBLE CAUSE	SOLUTION
I am unable to start the unit	The unit did not start properly OR battery is low	Press the Power Button for 2sec OR recharge the unit
The massage pressure is too low	Battery is low OR intensity level is too low	Recharge the unit OR increase intensity level
The massage pressure is too strong	You are using an Intensity level that is too high OR your hands are not correctly positioned inside the unit	Use I1 Intensity OR try to adjust your hand in the unit to feel comfortable
My unit suddenly stopped working	Power outage OR massage more than 15min OR long working time, the unit has been shut off due to overheating protection	The unit automatically shuts off after 15min of use. Use the unit after the motor has been naturally cooled
I hear a faint sound while using the massager	The air pump is working	Normal behavior
I have dimples on the hand after the massage	Comes from the airbags cover	Normal behaviour, it disappears after 30min
The airbags are not inflating	Battery is low	Recharge the unit. If the problem persists, please contact us at support@lunixinc.com
I can not see the green light flashing while charging OR the unit turns on for a few seconds, then all the lights flash and the unit powers down	The unit is not charging properly because the connection is not made properly between the usb port and usb cable OR the plug is higher than 5V 2A	The usb cable needs to fit entirely into the the USB port OR the plug must not exceed 5V 2A
How do I know when the unit is fully charged?		Once the unit is fully charged, the battery level indicator should have 4 solid green lights
Unit stopped charging	Unit not receiving the correct amount of voltage	Make sure the charger you used is 5V 2A and the charger (plug or laptop) must not exceed 5V
Air pump not working on the wrist area	Wrong program selected OR air pump is defective	Try the wrist program and if still does not work contact us at support@lunixinc.com



The display is constantly turning on and off making a beeping noise	PCB problem	Contact us at <a href="mailto:support@lunixinc.com">support@lunixinc.com</a> for further assistance
The vibration function is not working	Unit not fully charged	Make sure the massager is fully charged and if the problem persists contact us at <a href="mailto:support@lunixinc.com">support@lunixinc.com</a>
Heat function not working	Unit not fully charged and the heat option takes some time to achieve the highest temperature	Wait at least 10-12min before feeling the heat and you can also wear a regular pair of thin gloves; thus, you can increase the heat- feeling
Unit changing intensity programs	PCB defective	Contact us at <a href="mailto:support@lunixinc.com">support@lunixinc.com</a> for further assistance
Unit is hot	Excessive use	Power off the unit and let it cool before further use


If you have any questions, concerns or if you would like to order any spare parts or replacements. Please contact us at [support@lunixinc.com](mailto:support@lunixinc.com) and we will get back to you within 24 hours

## Overview

### Lunix Wellness Products Collection





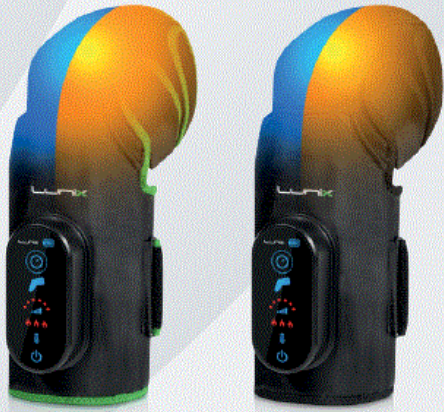


**HEAT  
THERAPY**



**COLD  
THERAPY**

**LX4 Touchscreen  
Knee Massager**

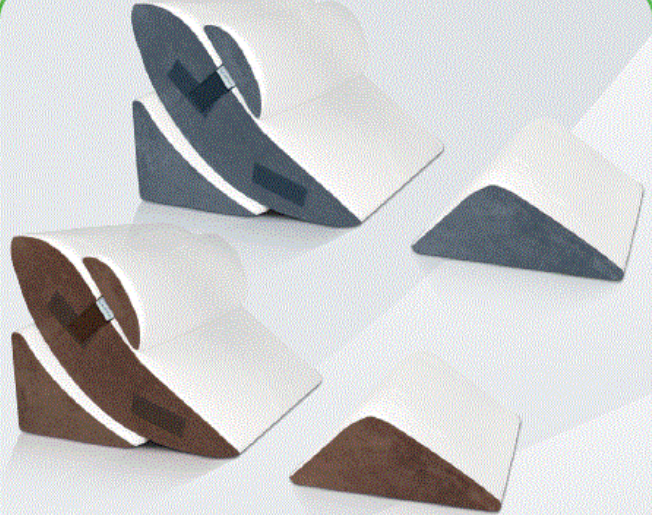

**LX5 4Pcs Orthopedic  
Bed Wedge Pillow Set**



**LX6 3Pcs Orthopedic  
Bed Wedge Pillow Set**



**HEAT  
THERAPY**

**LX7 Touchscreen  
Hand Massager**



**LX8 2 Layers Orthopedic  
Bed Wedge Pillow Set**




**HEAT  
THERAPY**



**COLD  
THERAPY**

**LX10 Cordless Full Leg  
Compression Massager**




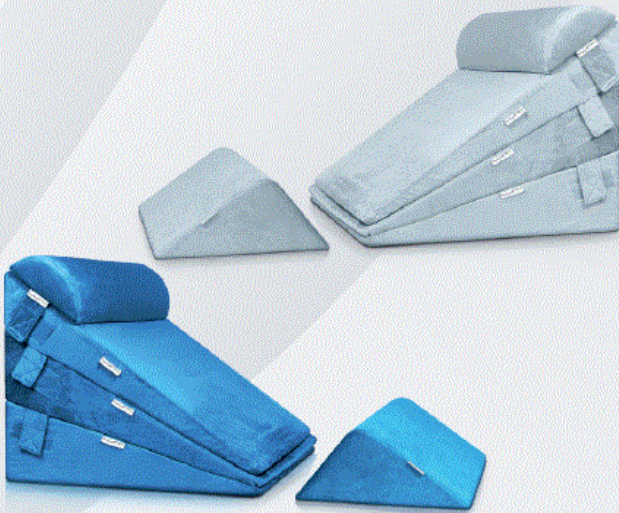

**LX11 5Pcs Orthopedic  
Bed Wedge Pillow Set**



**LX12 3Pcs Orthopedic  
Wedge Pillow Set for Kids**

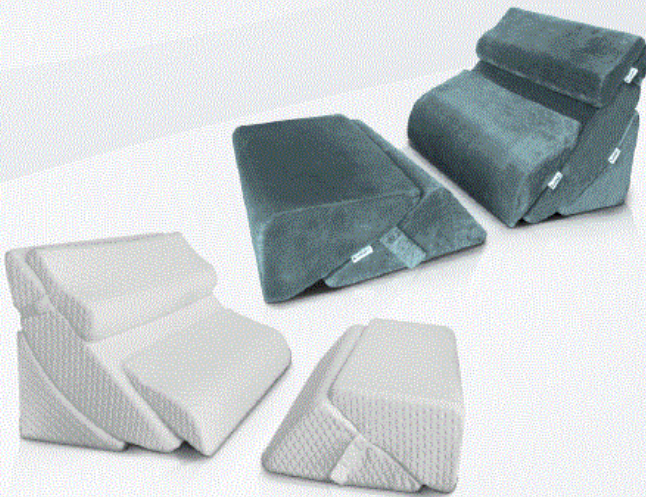

**LX13 6Pcs Orthopedic  
Bed Wedge Pillow Set**



**LX14 1Pc Orthopedic  
Bed Wedge**



**LX15 14pcs Modular  
Couch for Kids**



**INFRARED  
THERAPY**

**LX16 Red Light  
Therapy Belt**





**INFRARED  
THERAPY**

**LX17 Infrared  
Sauna Blanket**



**LX18 Vibration Plate**



**INFRARED  
THERAPY**

**LX19 Red Light Therapy for  
Knee, Elbow or Shoulder**



**HEAT  
THERAPY**



**COLD  
THERAPY**

**LX20 Shiatsu Foot Massager**



**HEAT  
THERAPY**



**COLD  
THERAPY**

**LX21 Shiatsu Foot  
Massager with Remote**



**LX22 14pcs Modular  
Couch for Kids**





## FCC Compliance

This device contains a module that complies with the limits for a Class B digital device as described in part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

The limits for a Class B digital device are designed to provide reasonable protection against harmful interference in residential settings. This product generates, uses and



can radiate radio frequency energy, and, if not operated in accordance with the instructions, may cause harmful interference to radio communications. The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## **WARRANTY**

- To guarantee you have the best experience, we offer a one-year warranty covering defects in materials, workmanship, and assembly on all our products\*. To ensure that you don't invalidate the terms of the warranty, please read and understand this booklet.
- If a defect in materials, workmanship, or assembly is found BEFORE the product has been used, we will exchange the entire product if it is returned complete and in perfect condition in its original packaging. \*\*
- IT IS THE PARENTS' OR GUARDIANS' RESPONSIBILITY TO ENSURE MINORS RECEIVE APPROPRIATE GUIDANCE AND SUPERVISION WHEN USING THIS PRODUCT.
- Extend your guarantee to 2 years—just text your order number at [307-461-9622](tel:307-461-9622), and you're all set! It's quick, easy, and hassle-free.
- LUNIX DOES NOT operate a new-for-old warranty once the product has been used. Warranty is only valid if the items were purchased directly from LUNIX (purchases from third-party sellers will not be covered under the warranty).

## **COVERED BY WARRANTY**

- 1-year warranty for the Air Compression (excludes damages caused by the user, including but not limited to incorrect maintenance.)
- 6-month warranty for the Battery (excludes damages caused by the user, including but not limited to incorrect maintenance.)

## **THIS IS A COMPLEX HIGH PERFORMANCE HAND COMPRESSION MASSAGER AND MUST BE TREATED WITH CARE AND RESPECT.**

LUNIX has made every effort to ensure your product is as strong and durable as possible. However, it is still possible that some mishaps could happen and we take full responsibility. If the air compression, the battery or the programs start to malfunction,

please contact us at [support@lunixinc.com](mailto:support@lunixinc.com) and we will provide a new replacement.

## NOT COVERED BY WARRANTY

- All other parts not mentioned above
- Lack of maintenance, improper use or abuse
- Water damage or problems resulting from water intake

Extend your guarantee to 2 years—just text your order number at [307-461-9622](tel:307-461-9622), and you're all set! It's quick, easy, and hassle-free.


## US Based Customer Support:

Lunix Replacement Parts available at: [www.lunixinc.com](http://www.lunixinc.com)

## FAQ

- **Q: How can I extend my guarantee to 2 years?**
  - A: To extend your guarantee, simply text your order number to [307-461-9622](tel:307-461-9622).
- **Q: Where can I find replacement parts for the Lunix Hand Massager?**
  - A: Replacement parts are available on the Lunix website at [www.lunixinc.com](http://www.lunixinc.com).
- **Q: What should I do if I have questions about my model or its operation?**
  - A: Contact LUNIX Customer Support by email at [support@lunixinc.com](mailto:support@lunixinc.com) for assistance with any questions or concerns.

## Documents / Resources

	<p><a href="#">Lunix LX3 Cordless Hand Massager [pdf]</a> Instruction Manual</p> <p>LX3 Cordless Hand Massager, LX3, Cordless Hand Massager, Hand Massager</p>
---	--

## References

- [User Manual](#)

---

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.