

C2000™ DIMM100 Experimenter's Kit Overview

The C2000™ DIMM100 Experimenter's Kit provides a quick, easy, low-cost way to evaluate the TMS320F28x family of devices (see [Figure 1](#)). The kit consists of a docking station and a F28x controlCARD™. The docking station is a small baseboard that accepts any of the DIMM100 plug-in controlCARDS and allows the user access to all the key GPIO and ADC signals of the F28x device. Additionally, the docking station also provides two prototyping areas (one on each side of the DIMM100 connector) with an array of 0.1" spaced plated through holes for wire-wrapping and soldering.

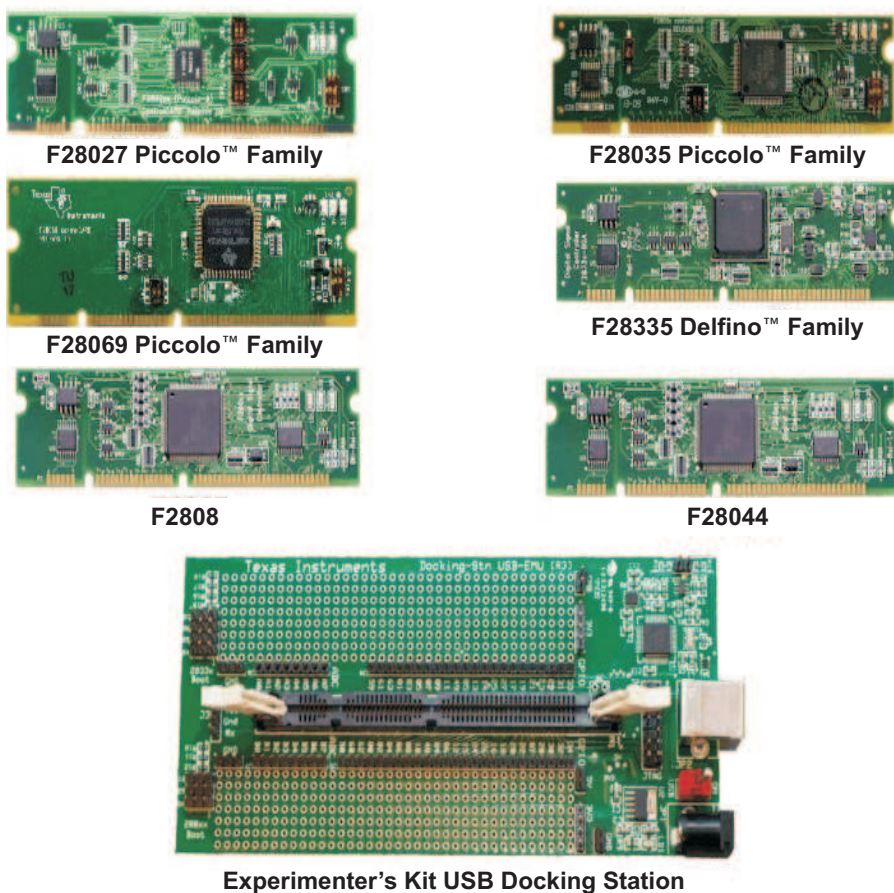


Figure 1. C2000™ DIMM100 Experimenter's Kit

Contents

1	Introduction	3
2	Hardware Setup	4
3	Software Setup	5
4	Using the Onboard USB JTAG Emulation	5
5	Running Your First Program	5
6	Other Types of controlCARDS™	6
7	References	6

List of Figures

1	C2000™ DIMM100 Experimenter's Kit	1
2	Retaining Clips	4

Trademarks

C2000, controlCARD, Code Composer Studio are trademarks of Texas Instruments.

1 Introduction

Other features of the docking station include the following:

- Onboard xds100v1 USB emulator or the ability to use an external JTAG emulator
- Can use either 5-V supply of the USB or an external power supply to power the board
- UART communications through onboard USB-to-UART bridge (once jumper J9 is placed)
- 5.0-V supply for prototyping area
- 3.3-V supply for prototyping area
- All key signals accessible through clearly labeled header pins

DIM100 controlCARDS are small, 100-pin, Dual In Line Memory Module (DIMM) style, vertical, plug-in boards that have all the necessary support circuitry (clock, supply LDO, decoupling, pull-ups, and so on) to provide reliable operation for the C2000 MCU. The board design is robust and meant for operation in noisy electrical environments. TI offers several pin compatible controlCARDS for evaluating the different MCUs available in the C2000 family.

DIM100 controlCARDS include the following features:

- Small size: 90 mm × 25 mm (3.5" × 1")
- All key GPIO, ADC, and other important signals routed to gold edge connector fingers
- Extensive supply pin decoupling with L+C close to pins
- Clamping diode protection at ADC input pins
- Anti-aliasing filter (noise filter) at ADC input pins
- Ground plane

Both the controlCARD and docking station include a Hardware Developer's Package, a set of files that make copying or redeploying this technology very easy (see [Section 3](#)).

The Hardware Developer's Package includes the following:

- Schematics (source or .PDF files)
- Bill of materials (BOM)
- Gerber files to freely use or modify
- Pin-out table showing all key signals on the 100-pin connector
- DIMM100 pin / socket mechanical details
- PCB files done in the popular Freeware tool, ExpressPCB, for easy modification (docking station only)

NOTE:

- This EVM includes a crystal component (CSTCR6M00G53Z-R0) that contains > 0.1% of Lead Titanium Zirconium Oxide CAS# 12626-81-2, listed in EU REACH as a Substance of Very High Concern.
 - The ceramic crystal component CSTCR6M00G53Z-R0 is RoHS exempt through exemption 7(c)-1.
 - The ceramic resistor component CRCW08050000Z0EA is RoHS exempt through exemption 7(c)-1.
-

2 Hardware Setup

This guide sets up the board to use onboard USB emulation and uses the 5-V supply of the USB to power the board.

Follow these steps to set up the hardware:

- Step 1. Unpack the DIMM style controlCARD.
- Step 2. Spread open the winged retaining clips on connector J1.
- Step 3. Sit the DIMM card loosely in the connector slot. Ensure to align the two keyed notches and position the card bottom corners inside the retaining clips (see [Figure 2](#)).
- Step 4. Push down vertically using even pressure from both ends of the card until the clips snap and lock.

NOTE: To remove or eject the card, simply spread open the retaining clips with your thumbs.

- Step 5. Place switch 1 (SW1) in the ON position, then connect the USB cable to USB connector JP2.
- Step 6. Once you download the TI Software or are ready to run your own project, turn on the board power by putting SW1 in the USB position. This allows the board to use the 5 V of the USB as the supply voltage.
- Step 7. For full details (schematics, pin-out table, and so on) of the hardware see the Hardware Developer's package, DockingStnHWdevPkg.

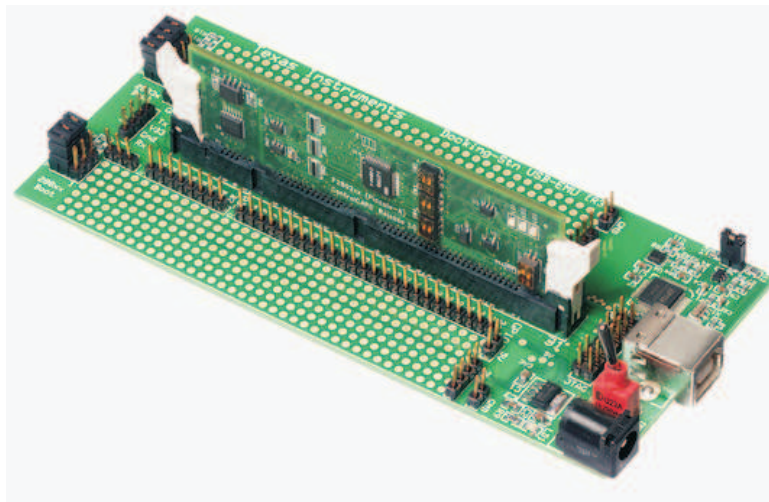


Figure 2. Retaining Clips

3 Software Setup

All of the documentation, software, and hardware files needed to use the experimenter's kit and develop on a C2000 MCU is in the controlSUITE package. The controlSUITE installs the Hardware Developer's package for the experimenter's kit baseboard and for all C2000 controlCARDS. In addition all software and documentation for this and all other kits can also be installed.

To install controlSUITE, do the following:

1. Visit <http://www.ti.com/controlsuite> and download the controlSUITE installer.
2. Run the installer and after a few clicks select the experimenter's kit checkbox.
3. By default the installer creates a directory called controlSUITE on the C drive inside the TI directory.
 - The example software for the experimenter's kit is at:
\\controlSUITE\development_kits\TemplateProjects\
 - The hardware documentation for the experimenter's kits is at:
\\controlSUITE\development_kits\~ExperimentersKits
 - The controlCARD hardware developer's package is at:
\\controlSUITE\development_kits\~controlCARDS
 - More examples for your specific device are within the controlSUITE at:
\\controlSUITE\device_support

4 Using the Onboard USB JTAG Emulation

The onboard USB JTAG emulation is based on xds100v1 emulation technology from TI and provides an easy way to connect to the board and begin Code Composer Studio™ development.

To set up the onboard USB JTAG emulation, follow these steps:

1. Download and install [Code Composer Studio \(CCS\)](#).
2. Connect the USB docking station to an available USB port.
3. If prompted, do not allow Windows to go online to search for drivers, but allow Windows to search your computer for drivers.
4. Once Windows has finished installing the drivers, the onboard USB JTAG emulator should be ready for use.
5. Open CCS and create a new target configuration, Target → New Target Configuration...
6. Choose the title of your new configuration to be xds100v1-f28X (where X is the part number of the C2000 MCU that is being worked with, for example F28035. Use the shared location.
7. Choose the device that goes with your kit. In CCS, the onboard emulator is called the Texas Instruments XDS100v1 USB Emulator.
8. Choose the connection as Texas Instruments xds100v1 USB Debug Probe (or Emulator). In the Board or Device field, select the C2000 device that is on your controlCARD.
9. Open up the project for the kit by clicking Project → Import Existing CCS/CCE Eclipse Project. Once the dialog box appears, browse to find the applicable project.

For troubleshooting on Windows machines, the status of the driver can be checked by using the Device Manager. With a docking station plugged in, TI XDS100 Channel A and TI XDS100 Channel B should be seen. If they are not seen, refer to this [E2E thread](#).

5 Running Your First Program

The FlashingLeds project, included as a template within the controlSUITE download, allows users to quickly get started with a C2000 MCU. The documentation for this project is at:

\\controlSUITE\development_kits\TemplateProjects\~Docs\SystemFrameworkOverview.pdf

This project can be imported into CCS. When importing, ensure that the option to import the project into your workspace is unchecked.

6 Other Types of controlCARDS™

This document specifically describes a certain subset of controlCARDS in the DIM100 format – such as the TMDSDOCK28335, TMDSDOCK28035, and so on. These controlCARDS do not contain emulation circuitry on the controlCARD and therefore require that the baseboard contain emulation circuitry. controlCARDS such as the TMDSCNCD28069MISO contain an ISOLated debug probe, and in those controlCARDS the oncard emulator must be used for CCS to connect to the device.

For newer devices, such as the F28379D, a different controlCARD connector standard was used, referred to as HSEC180. It is possible for newer controlCARDS to interface to DIM100 baseboards using the TMDSADAP180TO100. However, at this time there is no provision to bring a DIM100 controlCARD into a baseboard containing an HSEC180 controlCARD connector.

7 References

- [controlSUITE](#)
- [C2000 Getting Started Guide with CCS v4](#)
- [C2000 Processor Wiki](#)
- [C2000 XDS100 Wiki](#)
- [C2000 Tools Page](#)

Revision History

NOTE: Page numbers for previous revisions may differ from page numbers in the current version.

Changes from G Revision (September 2017) to H Revision	Page
--	------

- | | |
|---|---|
| • Changed note in <i>Introduction</i> | 3 |
|---|---|

IMPORTANT NOTICE FOR TI DESIGN INFORMATION AND RESOURCES

Texas Instruments Incorporated ("TI") technical, application or other design advice, services or information, including, but not limited to, reference designs and materials relating to evaluation modules, (collectively, "TI Resources") are intended to assist designers who are developing applications that incorporate TI products; by downloading, accessing or using any particular TI Resource in any way, you (individually or, if you are acting on behalf of a company, your company) agree to use it solely for this purpose and subject to the terms of this Notice.

TI's provision of TI Resources does not expand or otherwise alter TI's applicable published warranties or warranty disclaimers for TI products, and no additional obligations or liabilities arise from TI providing such TI Resources. TI reserves the right to make corrections, enhancements, improvements and other changes to its TI Resources.

You understand and agree that you remain responsible for using your independent analysis, evaluation and judgment in designing your applications and that you have full and exclusive responsibility to assure the safety of your applications and compliance of your applications (and of all TI products used in or for your applications) with all applicable regulations, laws and other applicable requirements. You represent that, with respect to your applications, you have all the necessary expertise to create and implement safeguards that (1) anticipate dangerous consequences of failures, (2) monitor failures and their consequences, and (3) lessen the likelihood of failures that might cause harm and take appropriate actions. You agree that prior to using or distributing any applications that include TI products, you will thoroughly test such applications and the functionality of such TI products as used in such applications. TI has not conducted any testing other than that specifically described in the published documentation for a particular TI Resource.

You are authorized to use, copy and modify any individual TI Resource only in connection with the development of applications that include the TI product(s) identified in such TI Resource. NO OTHER LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE TO ANY OTHER TI INTELLECTUAL PROPERTY RIGHT, AND NO LICENSE TO ANY TECHNOLOGY OR INTELLECTUAL PROPERTY RIGHT OF TI OR ANY THIRD PARTY IS GRANTED HEREIN, including but not limited to any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information regarding or referencing third-party products or services does not constitute a license to use such products or services, or a warranty or endorsement thereof. Use of TI Resources may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

TI RESOURCES ARE PROVIDED "AS IS" AND WITH ALL FAULTS. TI DISCLAIMS ALL OTHER WARRANTIES OR REPRESENTATIONS, EXPRESS OR IMPLIED, REGARDING TI RESOURCES OR USE THEREOF, INCLUDING BUT NOT LIMITED TO ACCURACY OR COMPLETENESS, TITLE, ANY EPIDEMIC FAILURE WARRANTY AND ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF ANY THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

TI SHALL NOT BE LIABLE FOR AND SHALL NOT DEFEND OR INDEMNIFY YOU AGAINST ANY CLAIM, INCLUDING BUT NOT LIMITED TO ANY INFRINGEMENT CLAIM THAT RELATES TO OR IS BASED ON ANY COMBINATION OF PRODUCTS EVEN IF DESCRIBED IN TI RESOURCES OR OTHERWISE. IN NO EVENT SHALL TI BE LIABLE FOR ANY ACTUAL, DIRECT, SPECIAL, COLLATERAL, INDIRECT, PUNITIVE, INCIDENTAL, CONSEQUENTIAL OR EXEMPLARY DAMAGES IN CONNECTION WITH OR ARISING OUT OF TI RESOURCES OR USE THEREOF, AND REGARDLESS OF WHETHER TI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

You agree to fully indemnify TI and its representatives against any damages, costs, losses, and/or liabilities arising out of your non-compliance with the terms and provisions of this Notice.

This Notice applies to TI Resources. Additional terms apply to the use and purchase of certain types of materials, TI products and services. These include; without limitation, TI's standard terms for semiconductor products (<http://www.ti.com/sc/docs/stdterms.htm>), [evaluation modules](#), and [samples](http://www.ti.com/sc/docs/sampterm.htm) (<http://www.ti.com/sc/docs/sampterm.htm>).

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2017, Texas Instruments Incorporated