

















Position of Parts in Engine Compartment

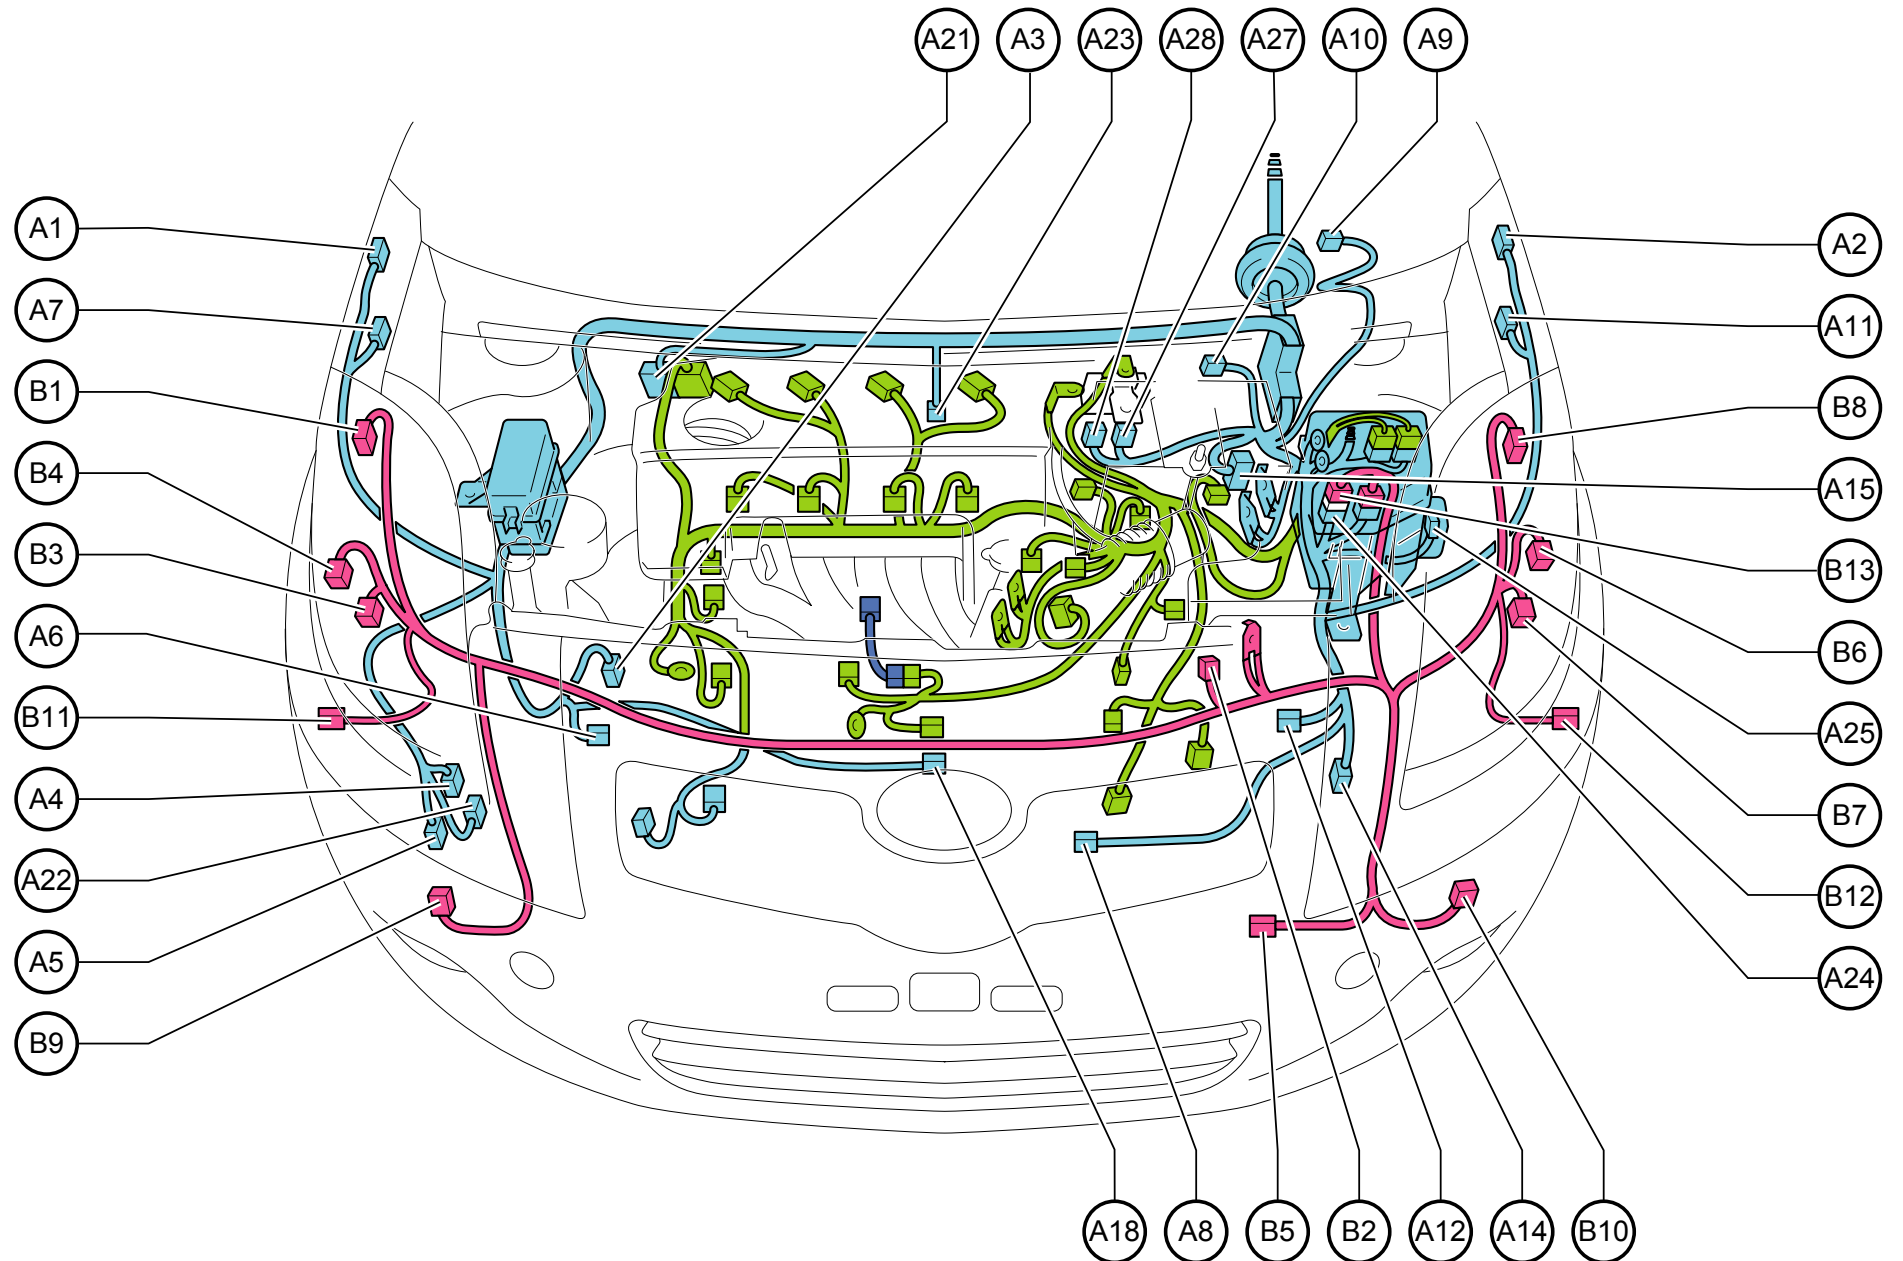
















- A 1 Turn Signal Lamp (Front Side RH)
- A 2 Turn Signal Lamp (Front Side LH)
- A 3 A/C Pressure Sensor
- A 4 Rear Washer Motor
- A 5 Windshield Washer Motor
- A 6 Airbag Sensor (Front RH)
- A 7 Speed Sensor (Front RH)
- A 8 Cooling Fan Motor
- A 9 Windshield Wiper Motor
- A 10 Brake Fluid Level Warning SW
- A 11 Speed Sensor (Front LH)
- A 12 Airbag Sensor (Front LH)
- A 14 Radiator Fan Resistor
- A 15 Skid Control ECU with Actuator
- A 18 Engine Hood Courtesy SW
- A 21 Engine Control Module
- A 22 Water Level Warning SW
- A 23 Security Horn
- A 24 Junction Connector
- A 25 Junction Connector
- A 27 Fusible Link Block
- A 28 Fusible Link Block

- B 1 Turn Signal Lamp (Front RH)
- B 2 Horn
- B 3 Parking Lamp (RH)
- B 4 Headlamp (RH)
- B 5 Ambient Temp. Sensor
- B 6 Headlamp (LH)
- B 7 Parking Lamp (LH)
- B 8 Turn Signal Lamp (Front LH)
- B 9 Fog Lamp (Front RH)
- B 10 Fog Lamp (Front LH)
- B 11 Side Marker Lamp (Front RH)
- B 12 Side Marker Lamp (Front LH)
- B 13 Junction Connector


Position of Parts in Engine Compartment

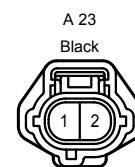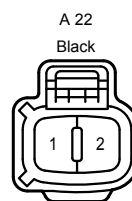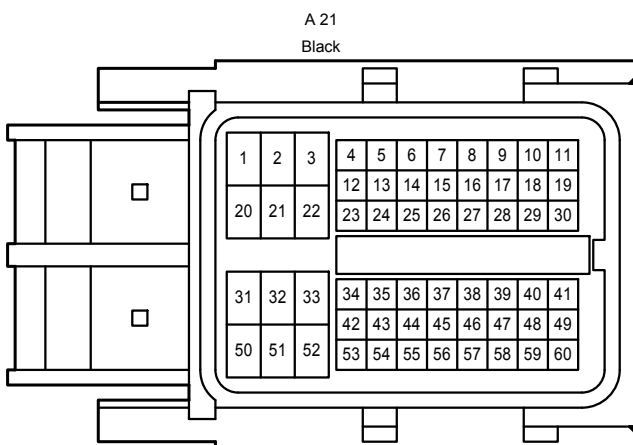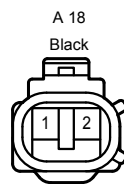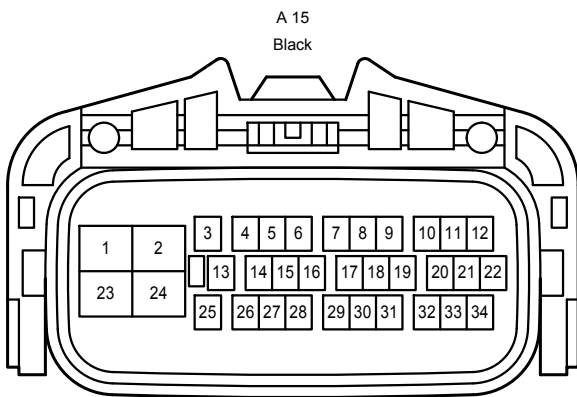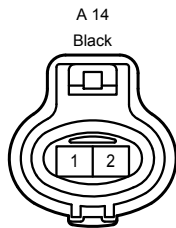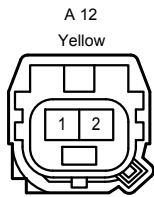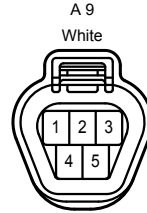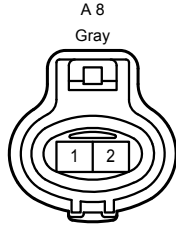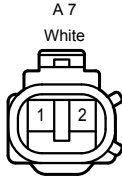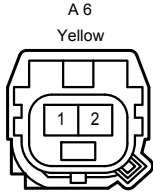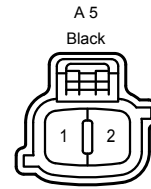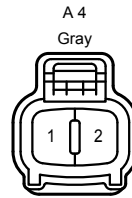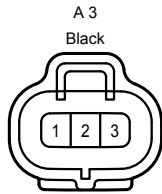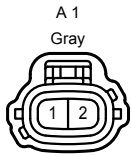

Position of Parts in Engine Compartment

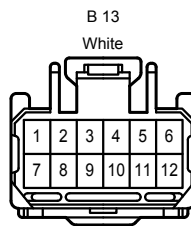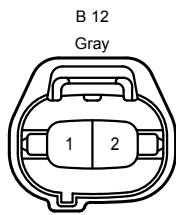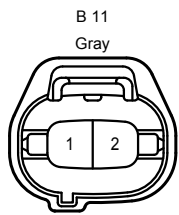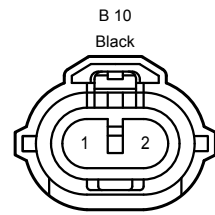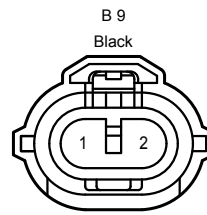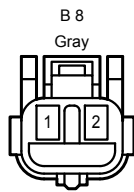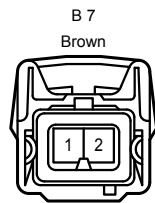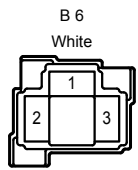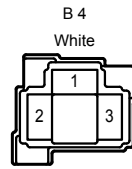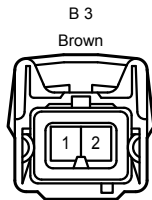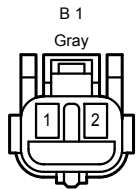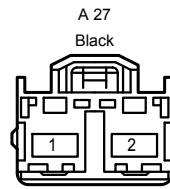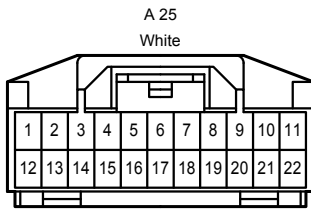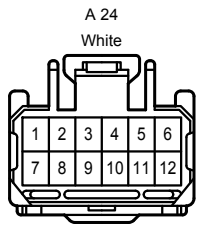


Position of Parts in Engine Compartment

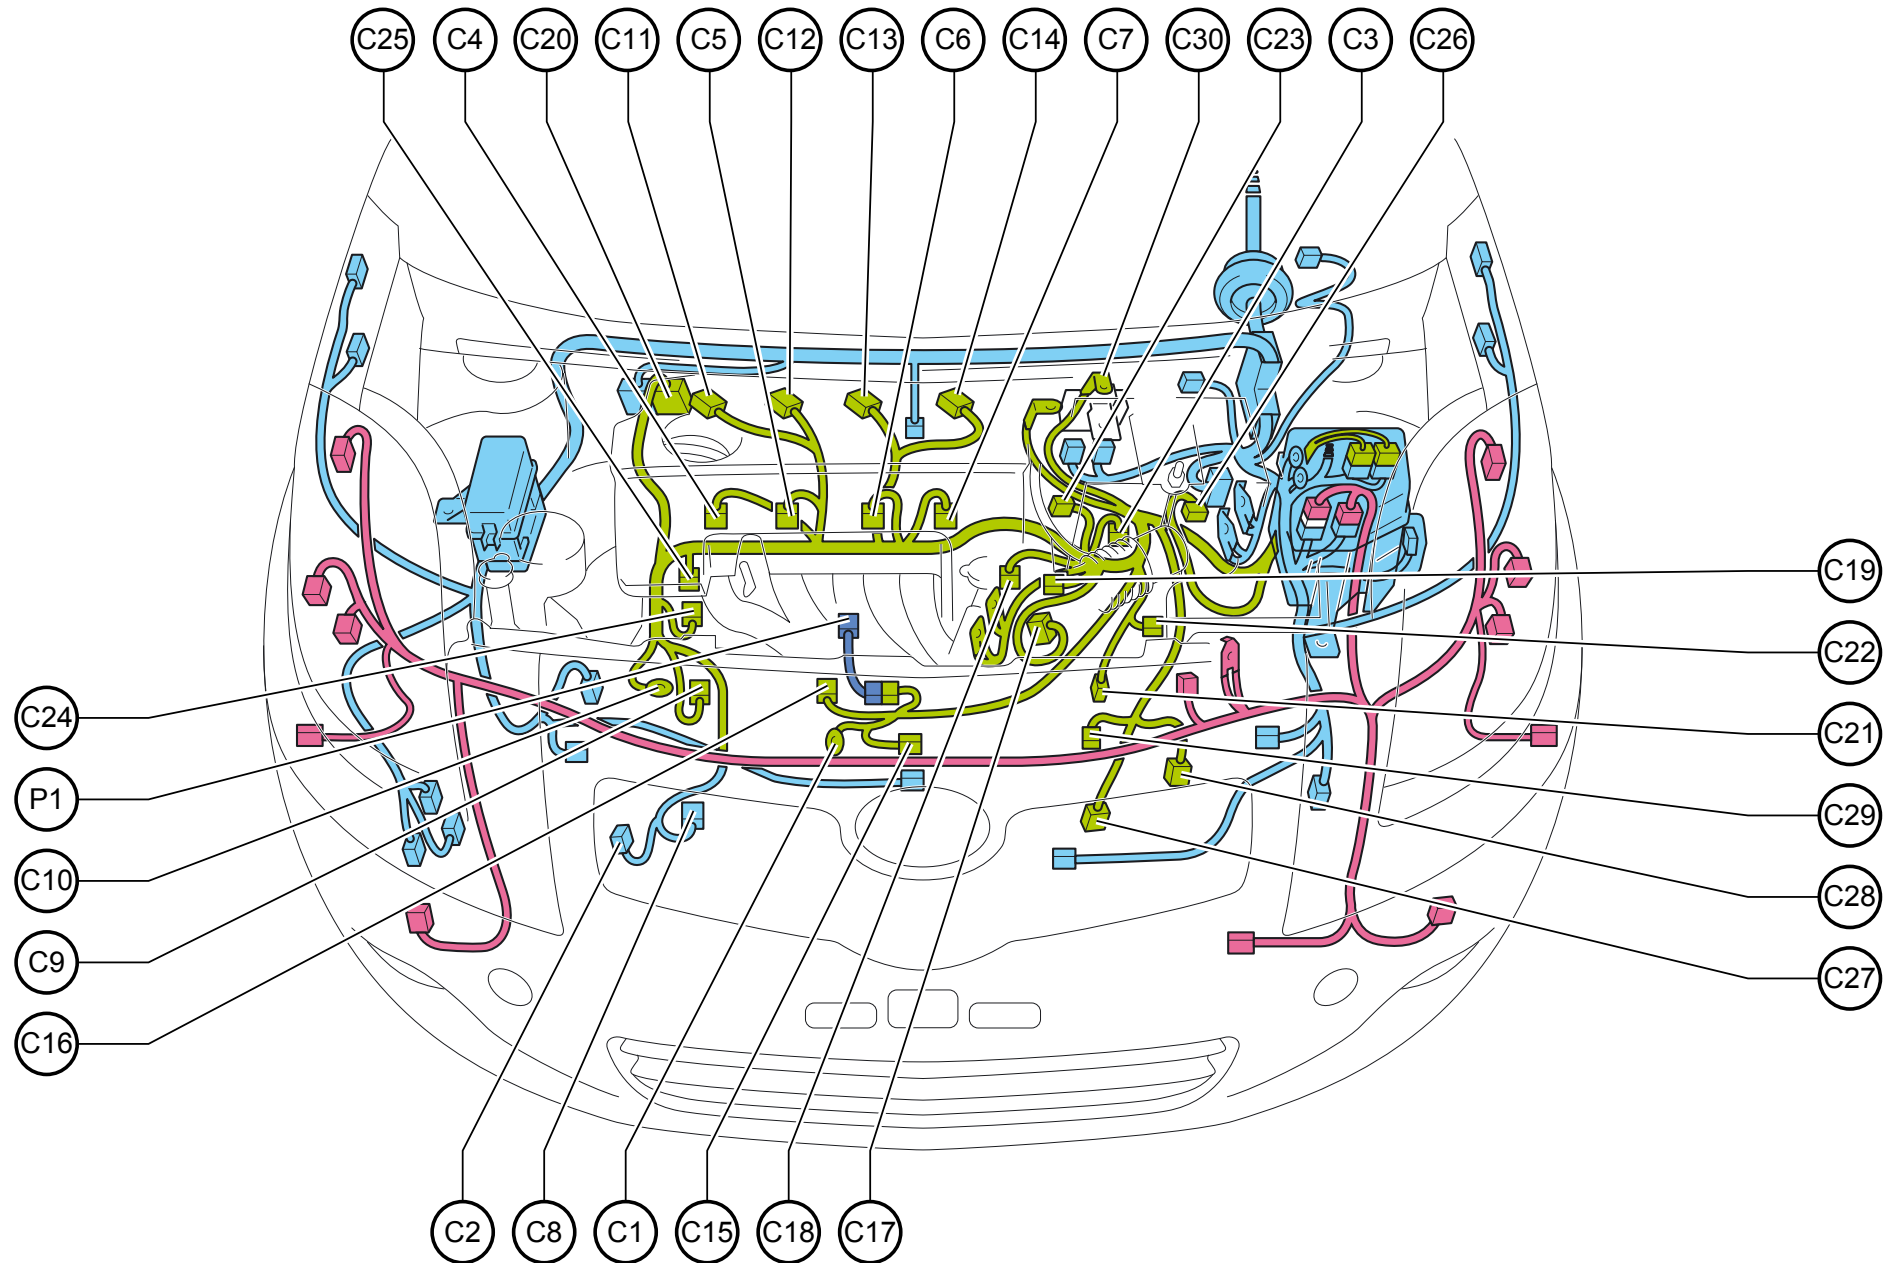

- C 1 Starter
- C 2 Crankshaft Position Sensor
- C 3 VSV (Purge)
- C 4 Fuel Injector (No.1)
- C 5 Fuel Injector (No.2)
- C 6 Fuel Injector (No.3)
- C 7 Fuel Injector (No.4)
- C 8 A/C Compressor
- C 9 Generator
- C 10 Generator
- C 11 Ignition Coil (No.1)
- C 12 Ignition Coil (No.2)
- C 13 Ignition Coil (No.3)
- C 14 Ignition Coil (No.4)
- C 15 Starter
- C 16 Engine Oil Pressure SW
- C 17 Throttle Body Assembly
- C 18 Camshaft Position Sensor
- C 19 Engine Coolant Temp. Sensor
- C 20 Engine Control Module
- C 21 Speed Sensor
- C 22 Back-Up Lamp SW
- C 23 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- C 24 Camshaft Timing Oil Control Valve
- C 25 Noise Filter
- C 26 Mass Air Flow Meter
- C 27 Park/Neutral Position SW
- C 28 Electronically Controlled Transmission Solenoid
- C 29 Speed Sensor (Turbine)
- C 30 Fusible Link Block


- P 1 Knock Control Sensor (Bank 1)

Position of Parts in Engine Compartment

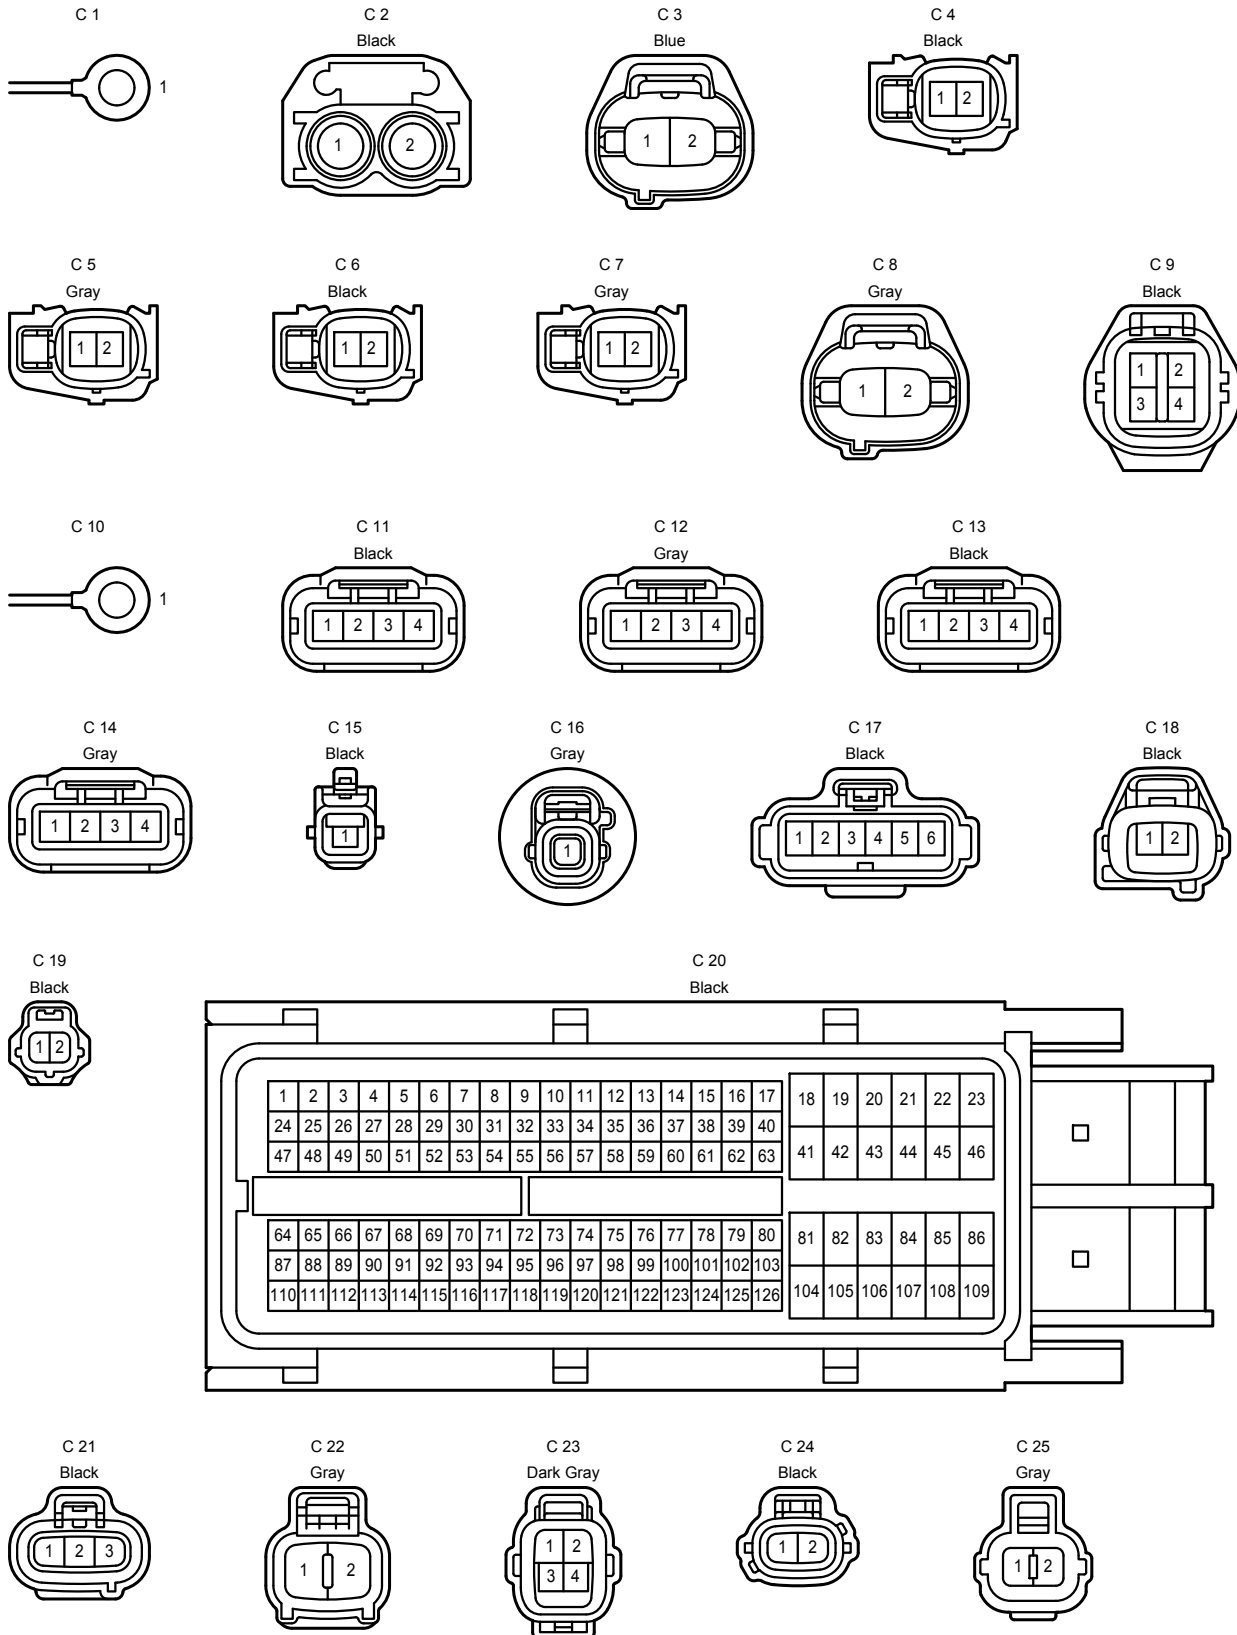


Position of Parts in Engine Compartment


C 26
Black

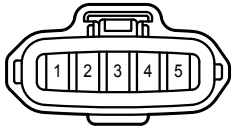


C 27
Gray

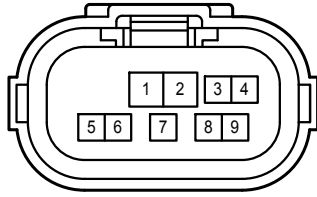

C 28
Gray

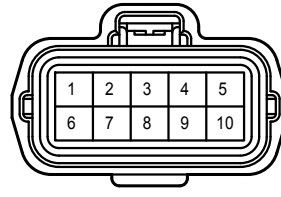


C 29
Black

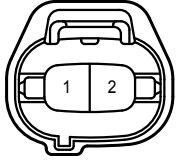



C 30




P 1
Black



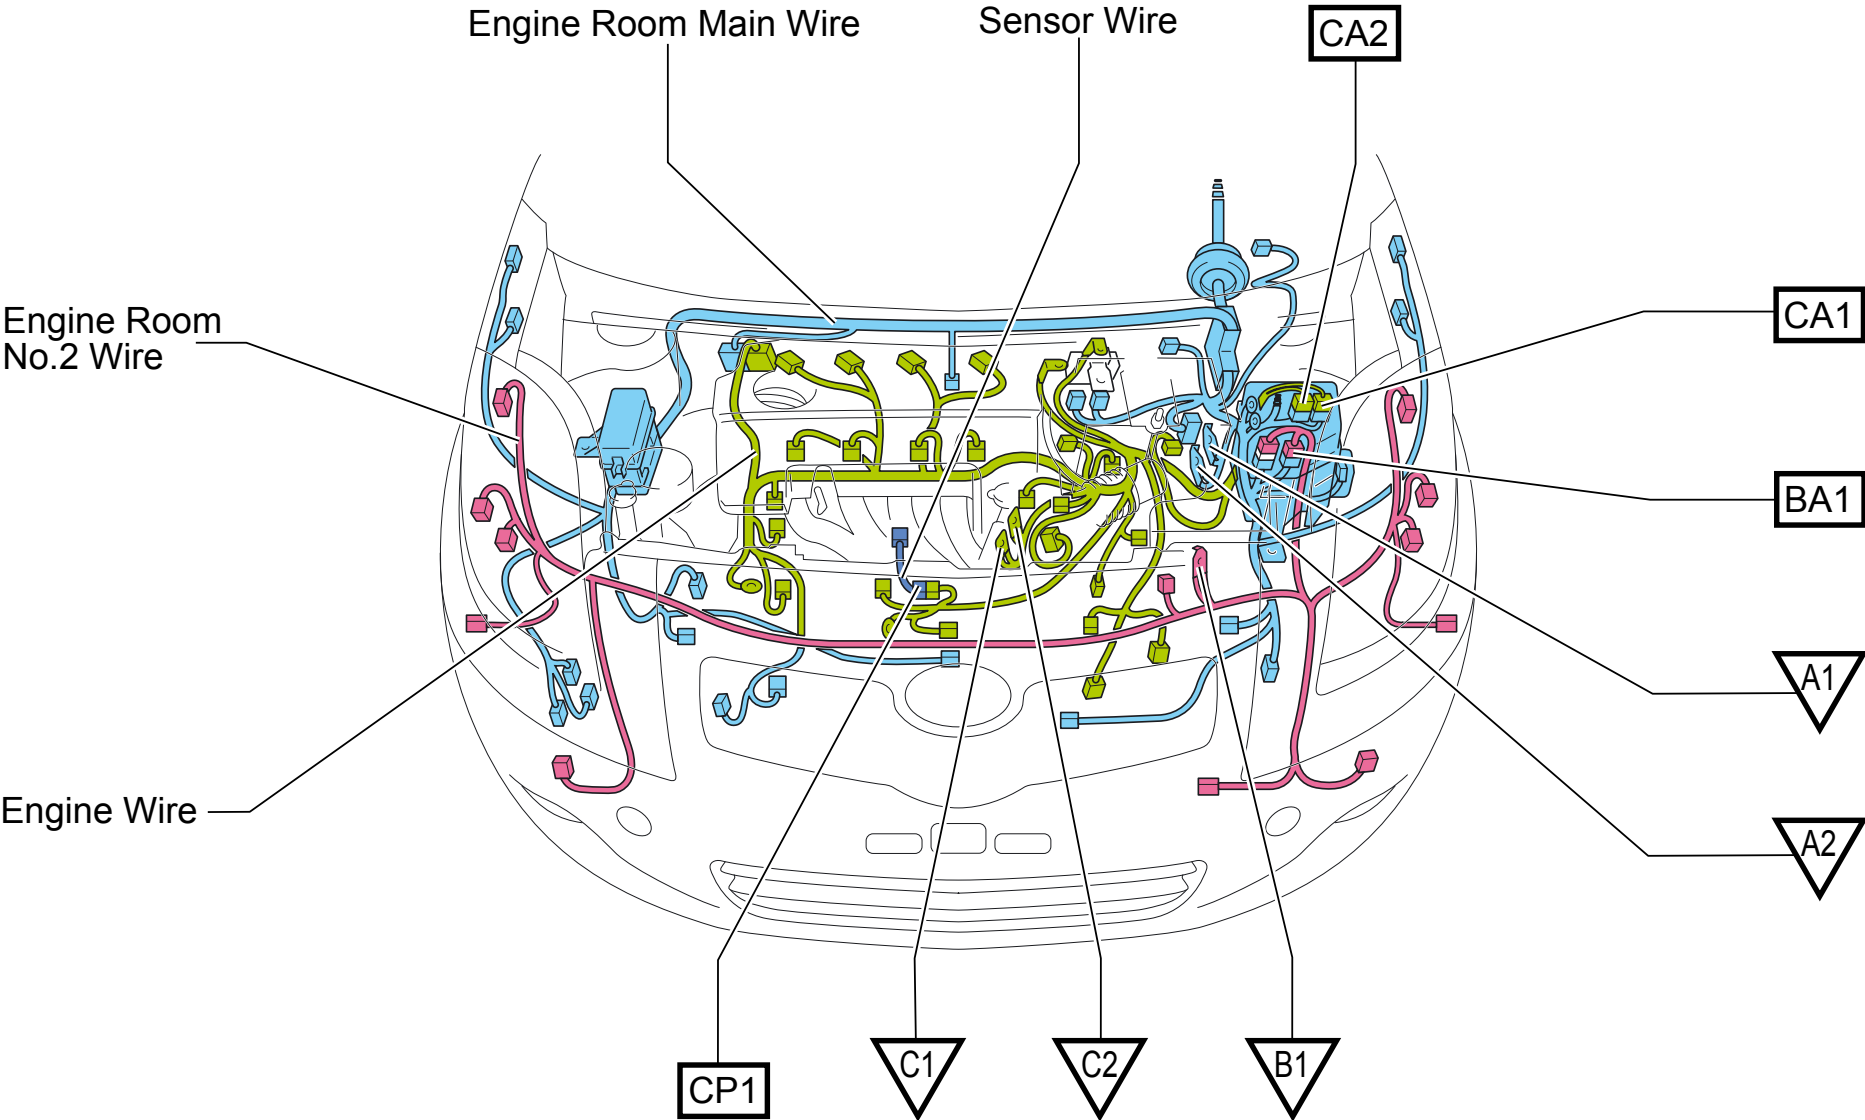

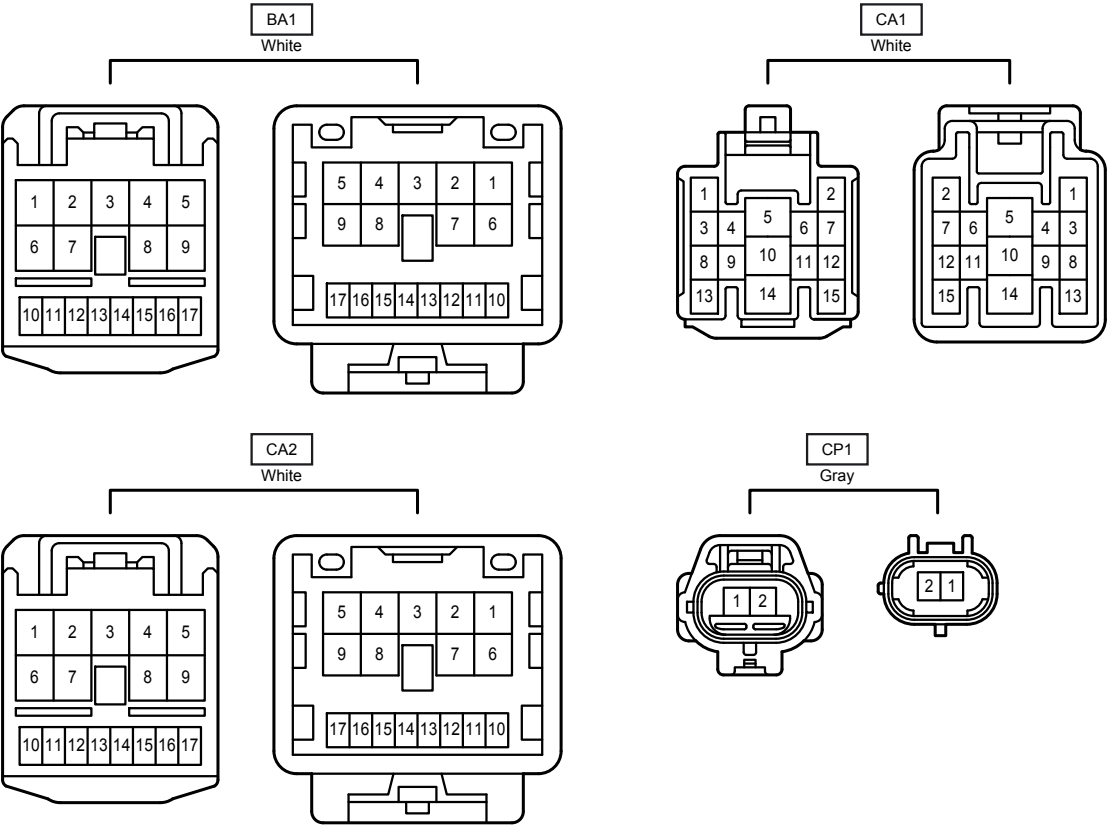

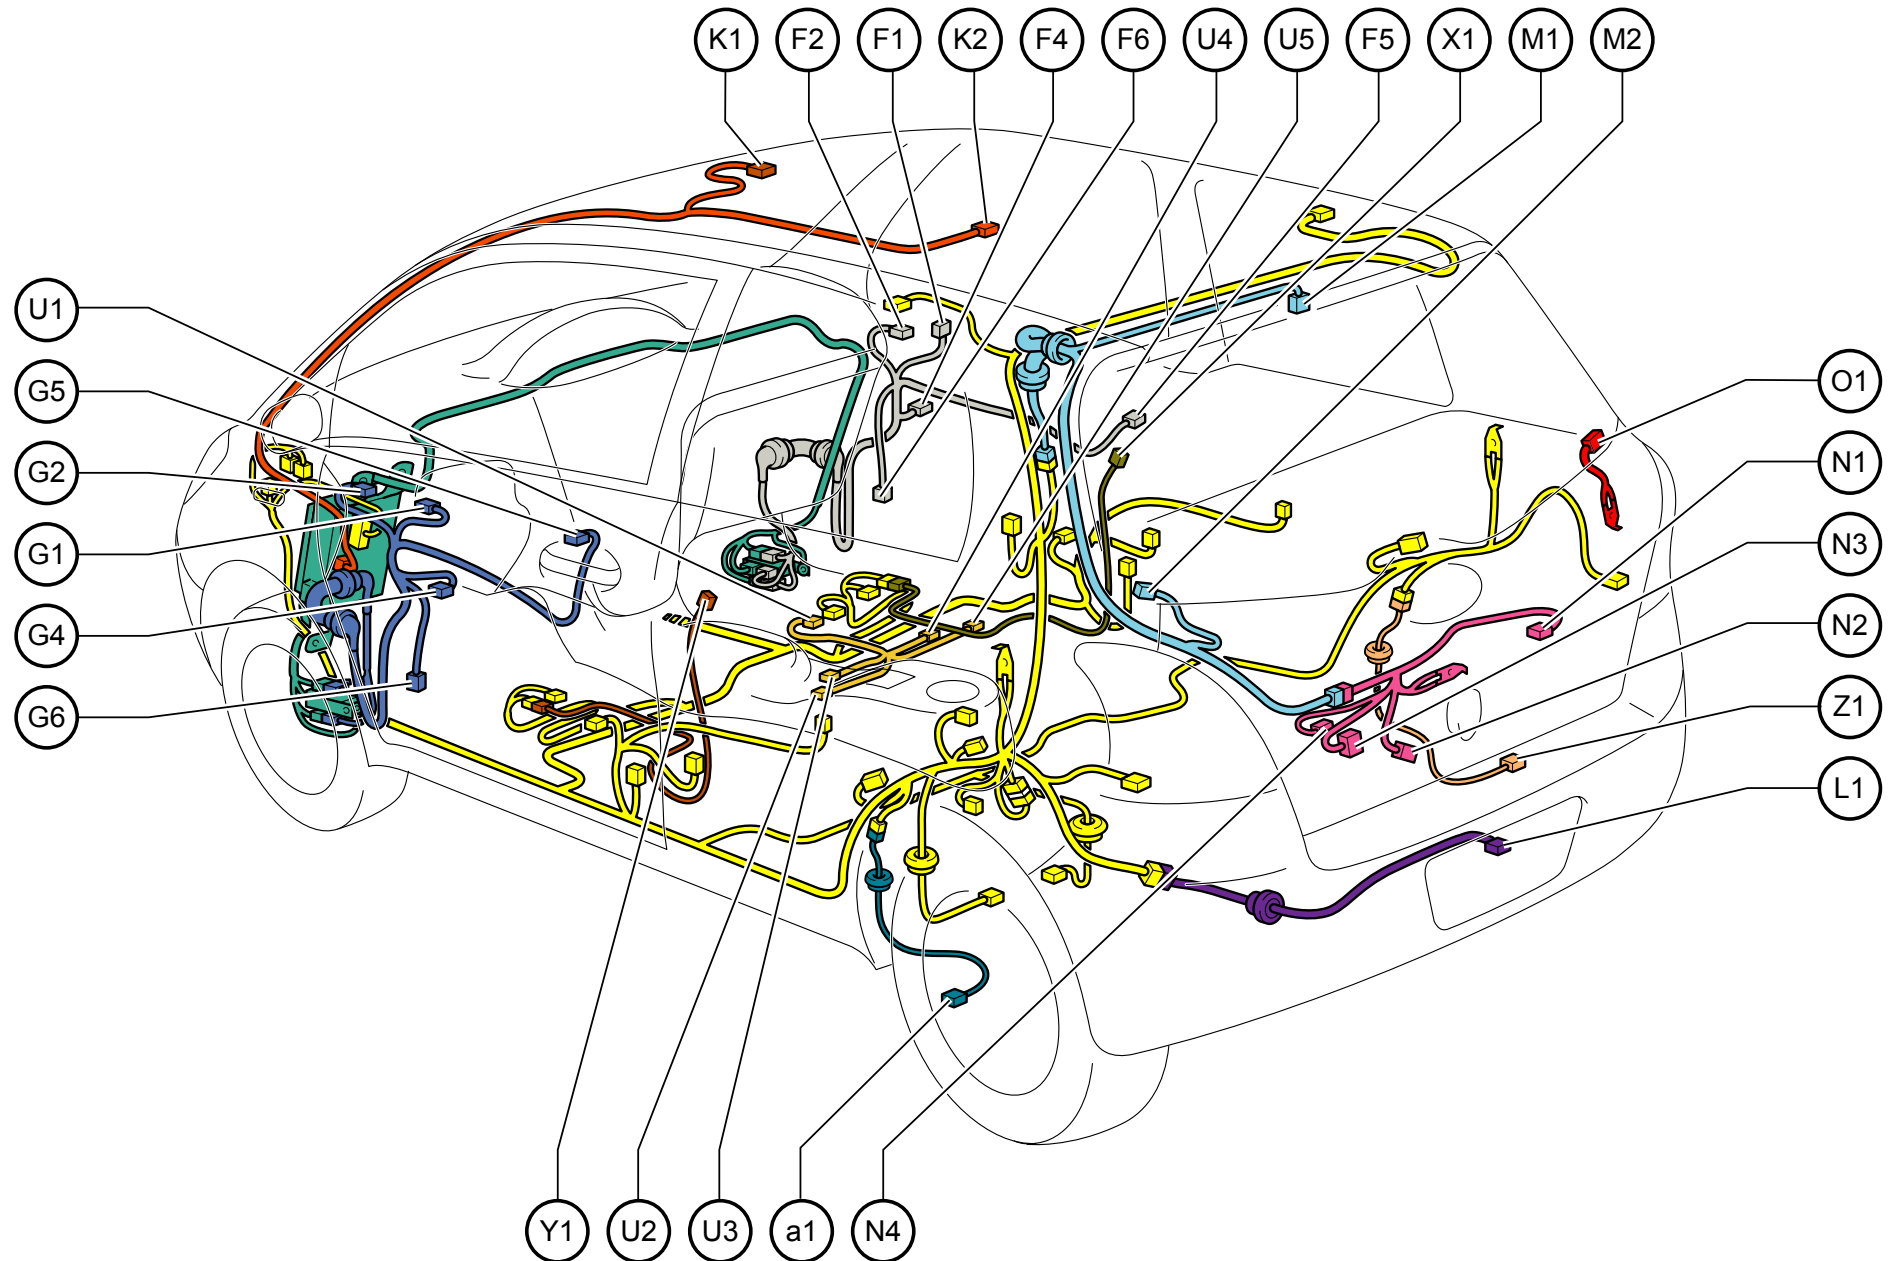

F 1 Power Window SW (Front RH)
F 2 Outer Rear View Mirror (RH)
F 4 Power Window Regulator Motor (Front RH)
F 5 Door Lock Assembly (Front Passenger's Side)
F 6 Speaker (Front Door RH)

G 1 Power Window Master SW
G 2 Outer Rear View Mirror (LH)
G 4 Power Window Regulator Motor (Front LH)
G 5 Door Lock Assembly (Driver's Side)
G 6 Speaker (Front Door LH)

K 1 Map Lamp
K 2 Room Lamp (Center)

L 1 License Plate Lamp

M 1 Center Stop Lamp
M 2 Rear Window Defogger

N 1 Rear Wiper Motor Assembly
N 2 Back Door Courtesy SW
N 3 Back Door Lock Assembly
N 4 Back Door Position SW

O 1 Rear Window Defogger

U 1 Occupant Classification ECU
U 2 Occupant Classification Sensor (Front LH)
U 3 Occupant Classification Sensor (Rear LH)
U 4 Occupant Classification Sensor (Front RH)
U 5 Occupant Classification Sensor (Rear RH)


























X 1 Side Airbag Squib (RH)


Y 1 Side Airbag Squib (LH)

Z 1 Speed Sensor (Rear RH)

a 1 Speed Sensor (Rear LH)




















Position of Parts in Body <3-Door>

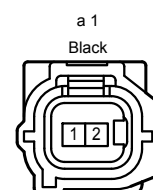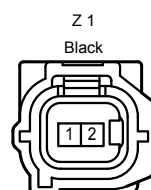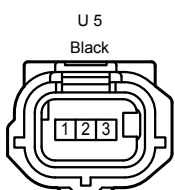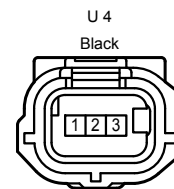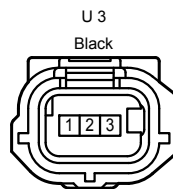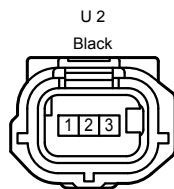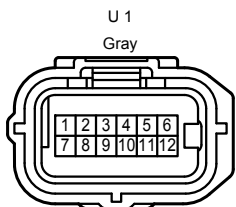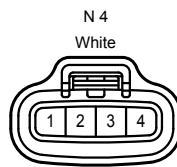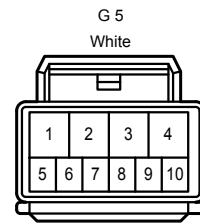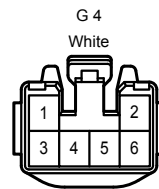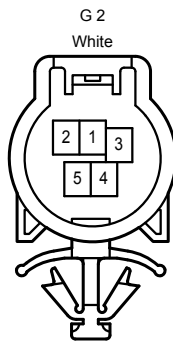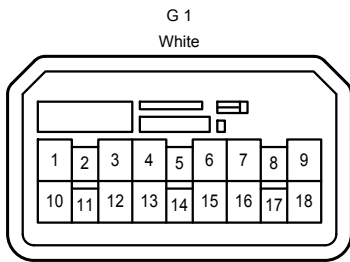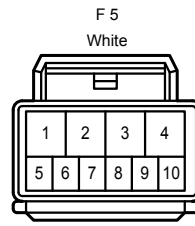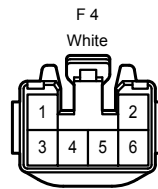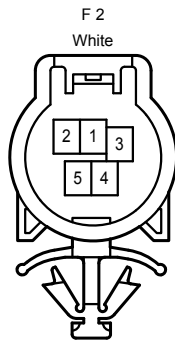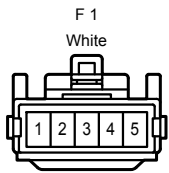


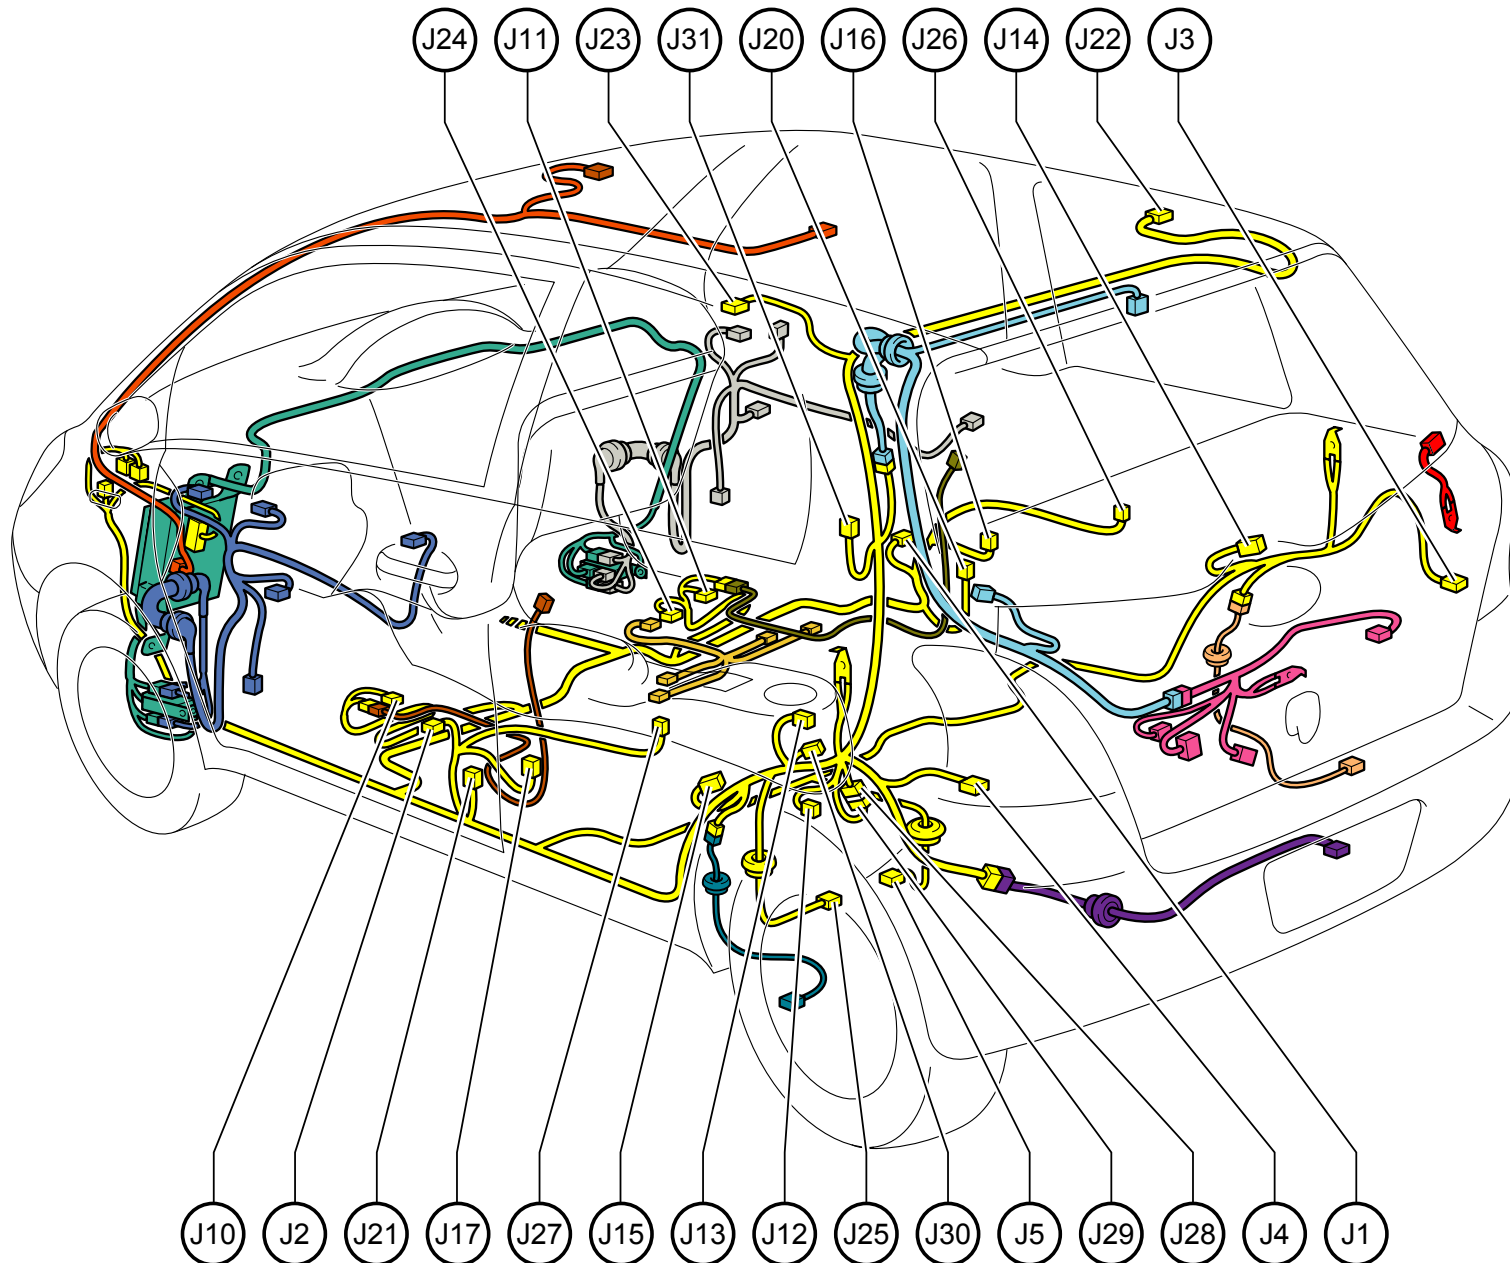



- J 1 Door Courtesy SW (Front RH)
- J 2 Door Courtesy SW (Front LH)
- J 3 Rear Combination Lamp (RH)
- J 4 Rear Combination Lamp (LH)
- J 5 Fuel Suction Pump and Gage Assembly
- J 10 Front Seat Inner Belt (Driver's Side)
- J 11 Front Seat Inner Belt Assembly (Front RH)
- J 12 Room Lamp (Luggage)
- J 13 Door Control Receiver
- J 14 Airbag Sensor (Rear RH)
- J 15 Airbag Sensor (Rear LH)
- J 16 Side Airbag Sensor (RH)
- J 17 Side Airbag Sensor (LH)
- J 20 Pretensioner (RH)
- J 21 Pretensioner (LH)
- J 22 Curtain Shield Airbag Squib (RH)
- J 23 Curtain Shield Airbag Squib (LH)
- J 24 Occupant Classification ECU
- J 25 Canister Pump Module
- J 26 Speaker (Rear RH)
- J 27 Speaker (Rear LH)
- J 28 Junction Connector
- J 29 Junction Connector
- J 30 Diode (Room Lamp)
- J 31 Noise Filter

Position of Parts in Body <3-Door>

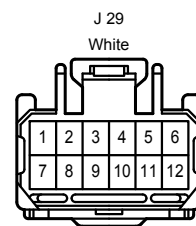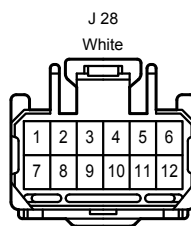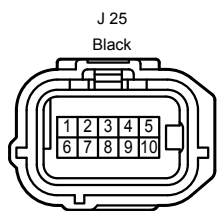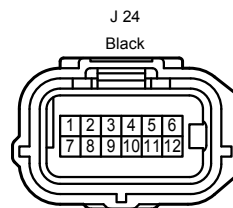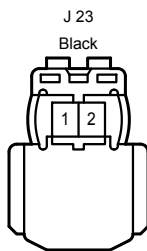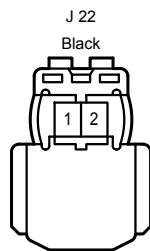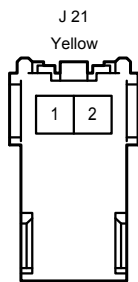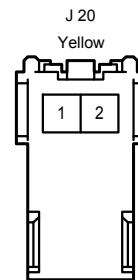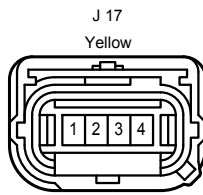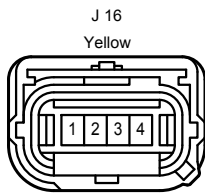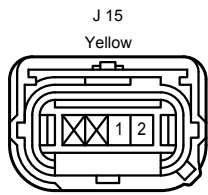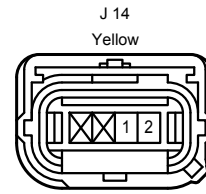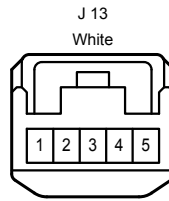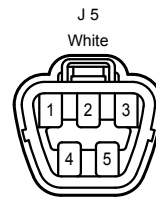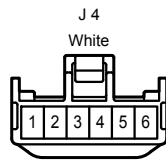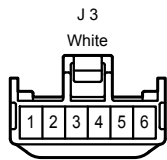

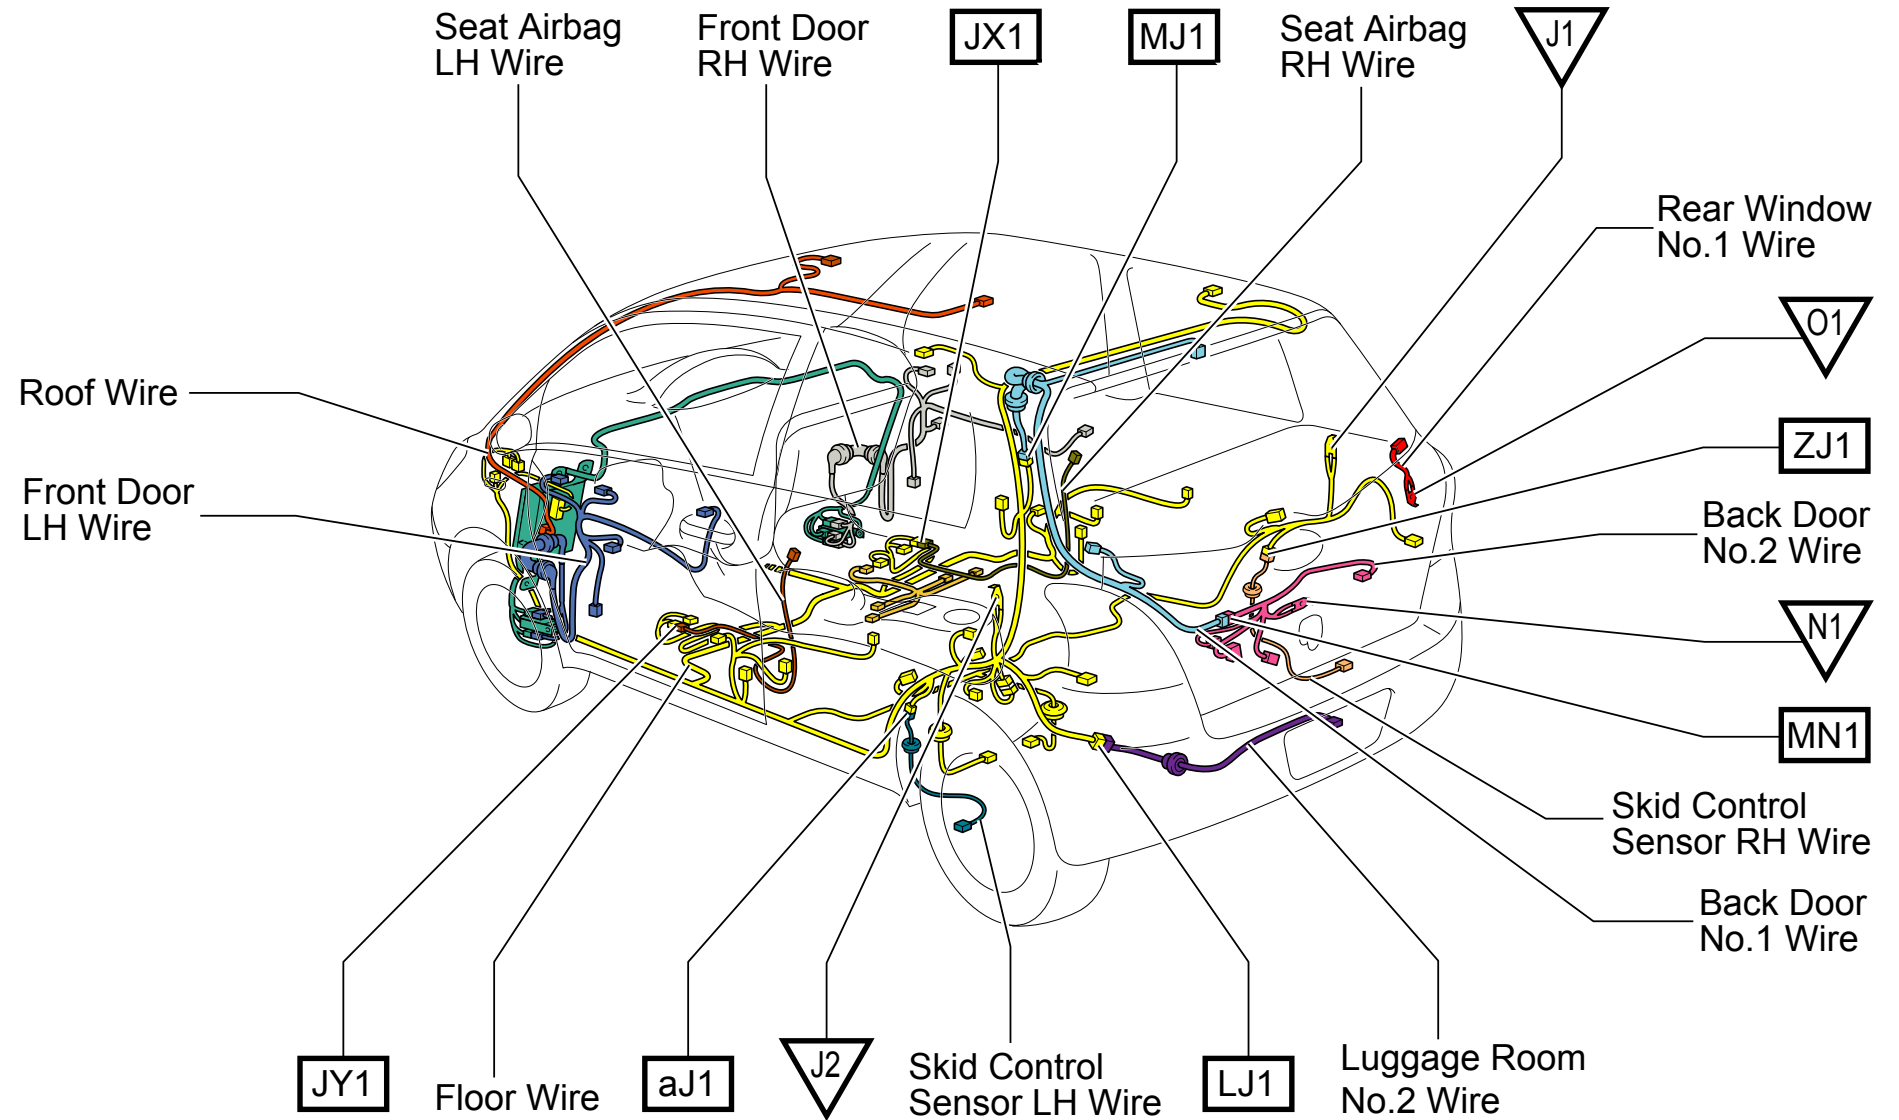

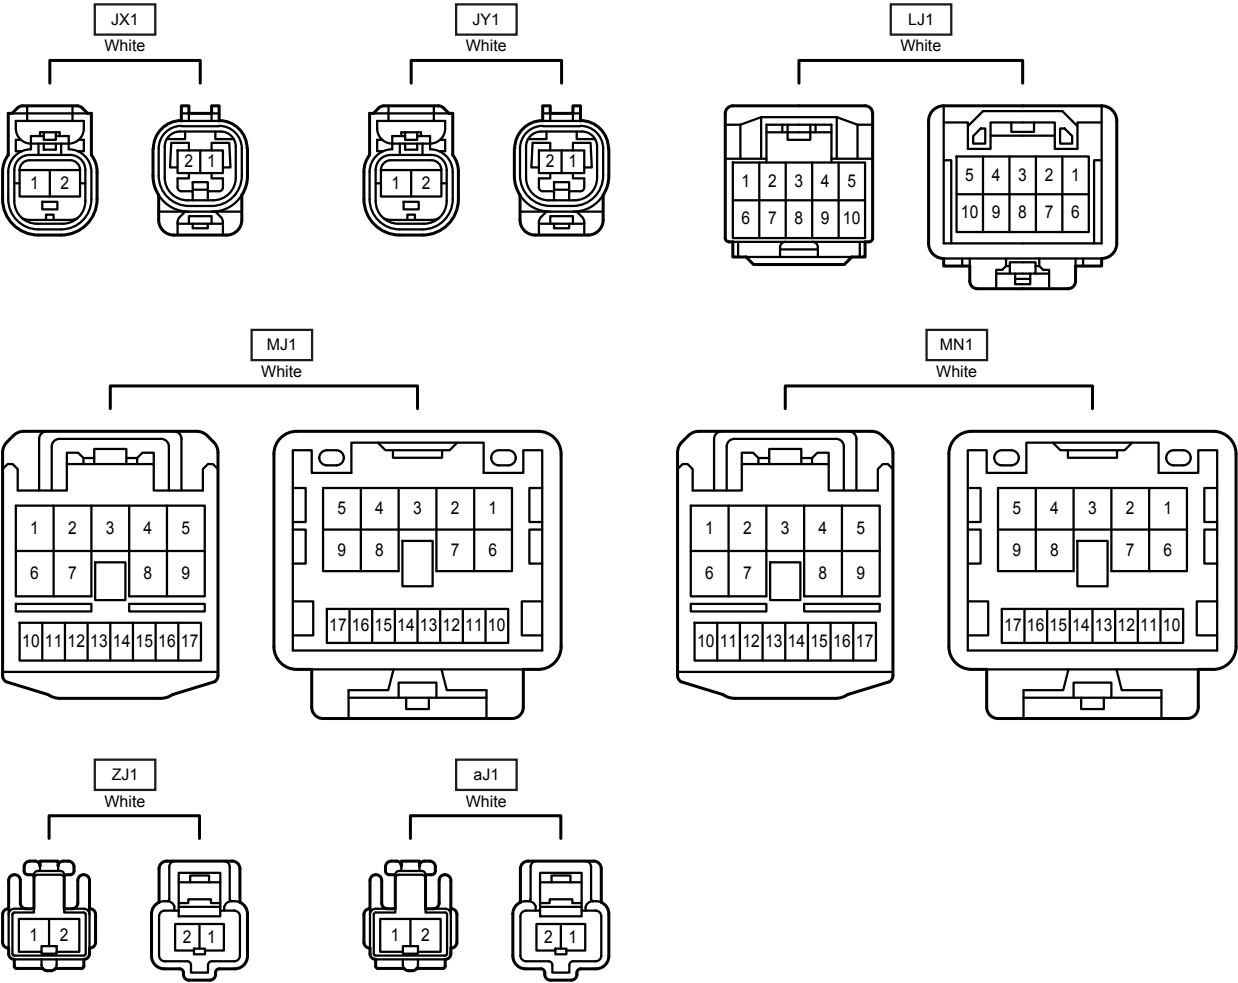

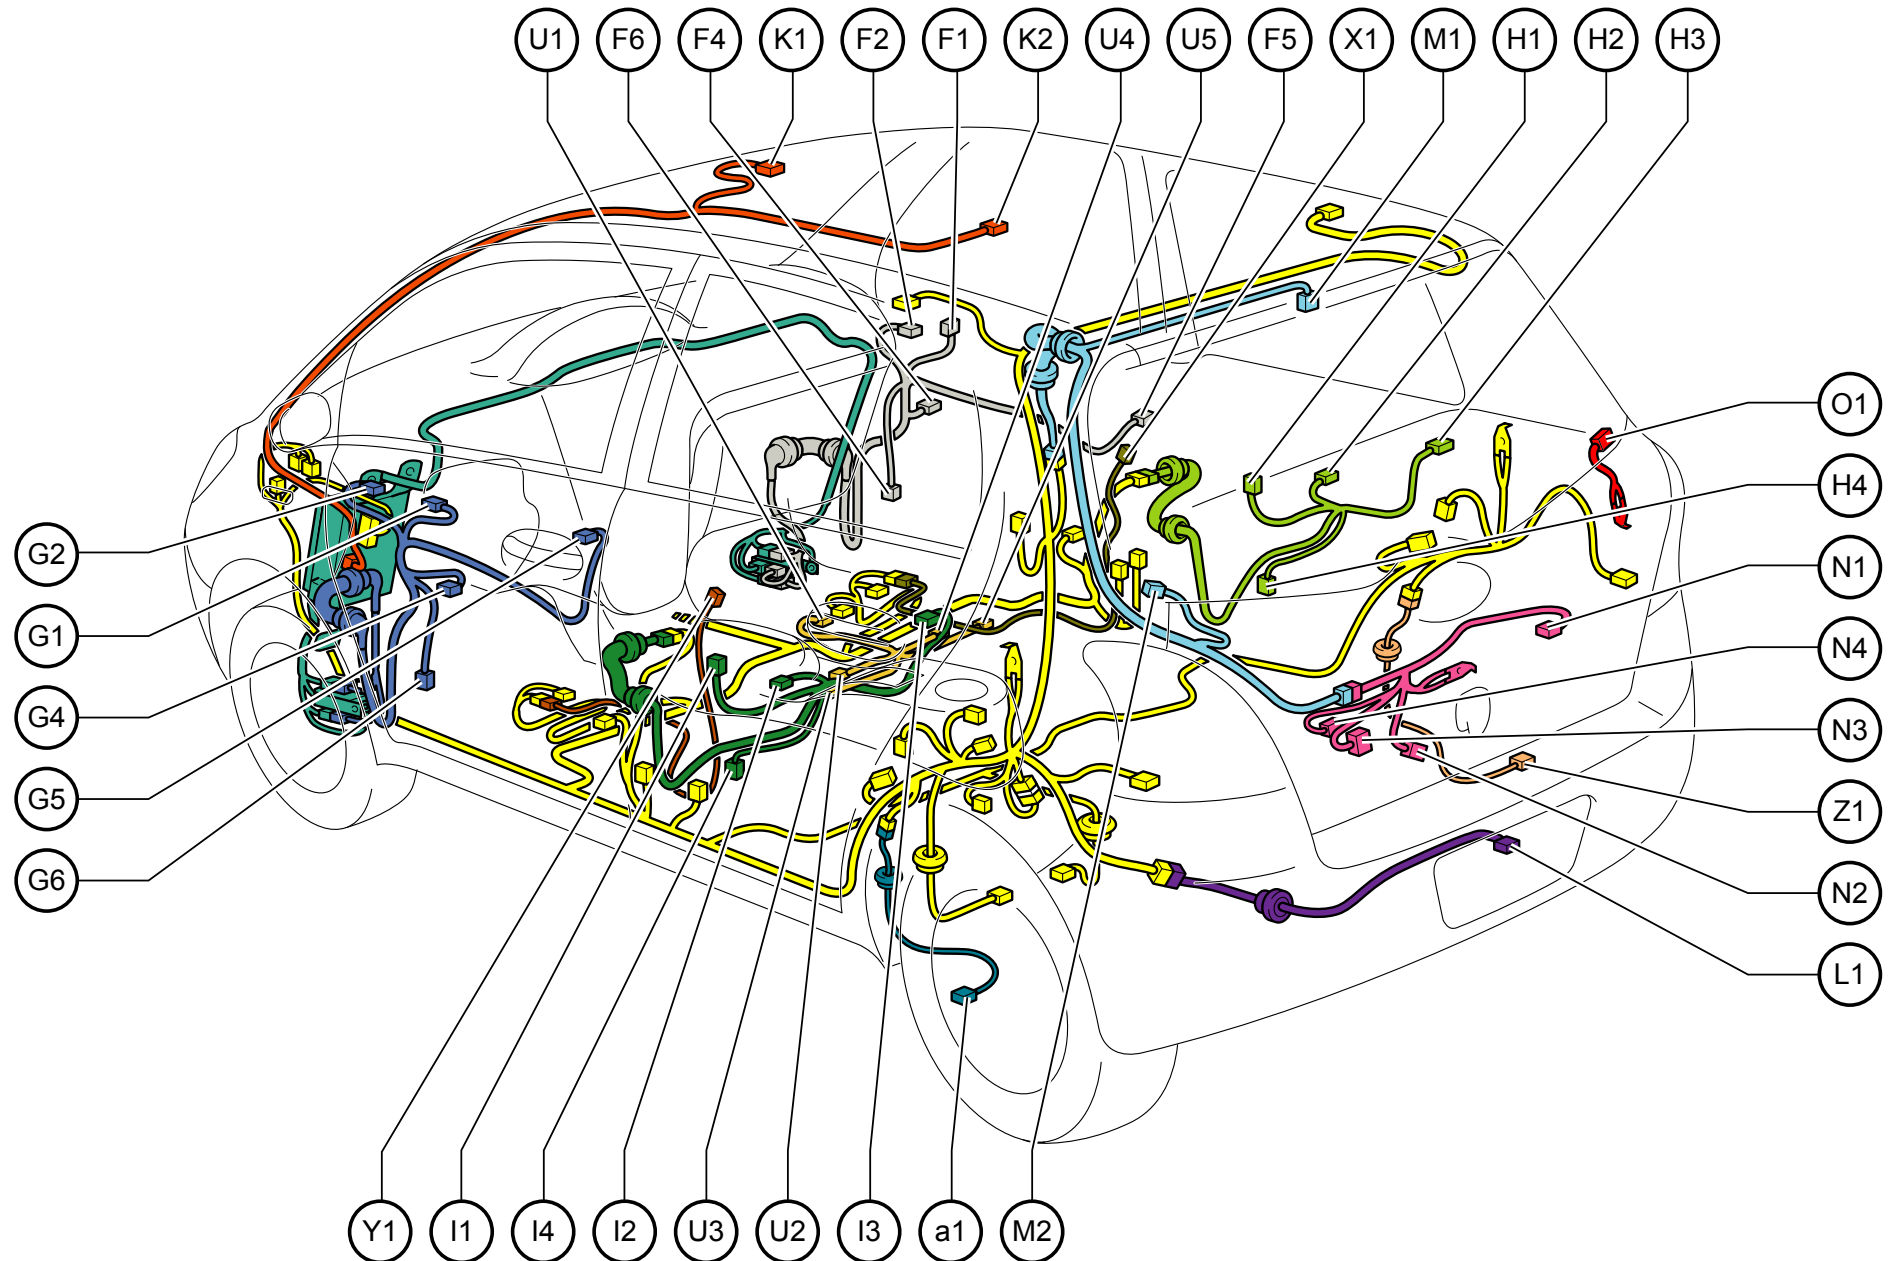

F 1 Power Window SW (Front RH)
F 2 Outer Rear View Mirror (RH)
F 4 Power Window Regulator Motor (Front RH)
F 5 Door Lock Assembly (Front Passenger's Side)
F 6 Speaker (Front Door RH)

G 1 Power Window Master SW
G 2 Outer Rear View Mirror (LH)
G 4 Power Window Regulator Motor (Front LH)
G 5 Door Lock Assembly (Driver's Side)
G 6 Speaker (Front Door LH)

H 1 Power Window SW (Rear RH)
H 2 Power Window Regulator Motor (Rear RH)
H 3 Door Lock Assembly (Rear RH)
H 4 Speaker (Rear RH)

I 1 Power Window SW (Rear LH)
I 2 Power Window Regulator Motor (Rear LH)
I 3 Door Lock Assembly (Rear LH)
I 4 Speaker (Rear LH)

K 1 Map Lamp
K 2 Room Lamp (Center)

L 1 License Plate Lamp

M 1 Center Stop Lamp
M 2 Rear Window Defogger

N 1 Rear Wiper Motor Assembly
N 2 Back Door Courtesy SW
N 3 Back Door Lock Assembly
N 4 Back Door Position SW

O 1 Rear Window Defogger

U 1 Occupant Classification ECU
U 2 Occupant Classification Sensor (Front LH)
U 3 Occupant Classification Sensor (Rear LH)
U 4 Occupant Classification Sensor (Front RH)
U 5 Occupant Classification Sensor (Rear RH)




























X 1 Side Airbag Squib (RH)

Y 1 Side Airbag Squib (LH)

Z 1 Speed Sensor (Rear RH)

a 1 Speed Sensor (Rear LH)


Position of Parts in Body <5-Door>

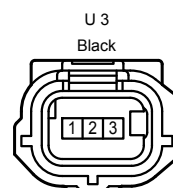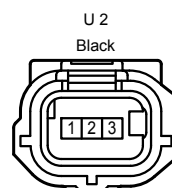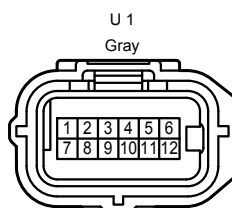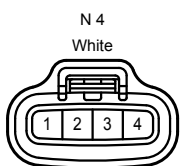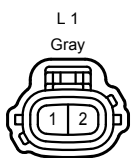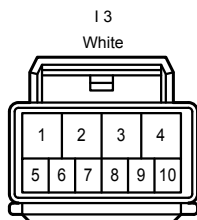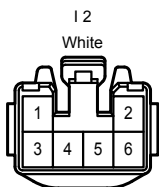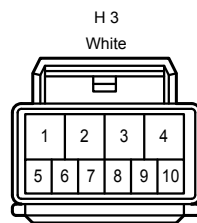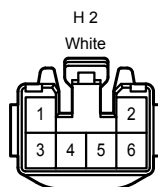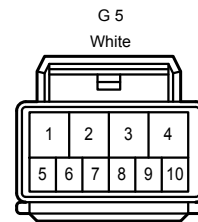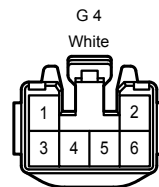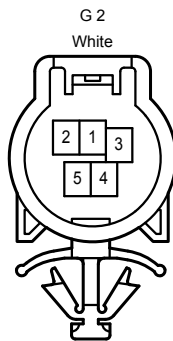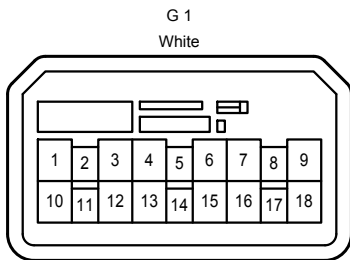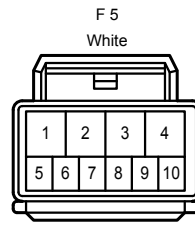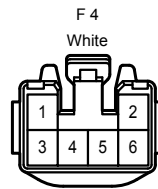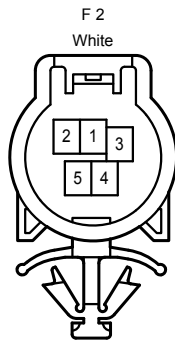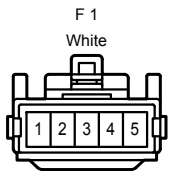

Position of Parts in Body <5-Door>


U 4

Black

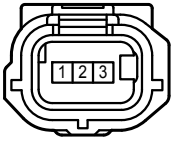


U 5

Black

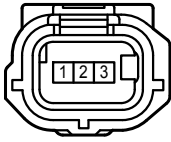


X 1

White




Y 1

White



Z 1


Black

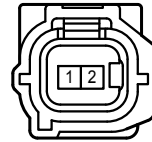

a 1




















Black










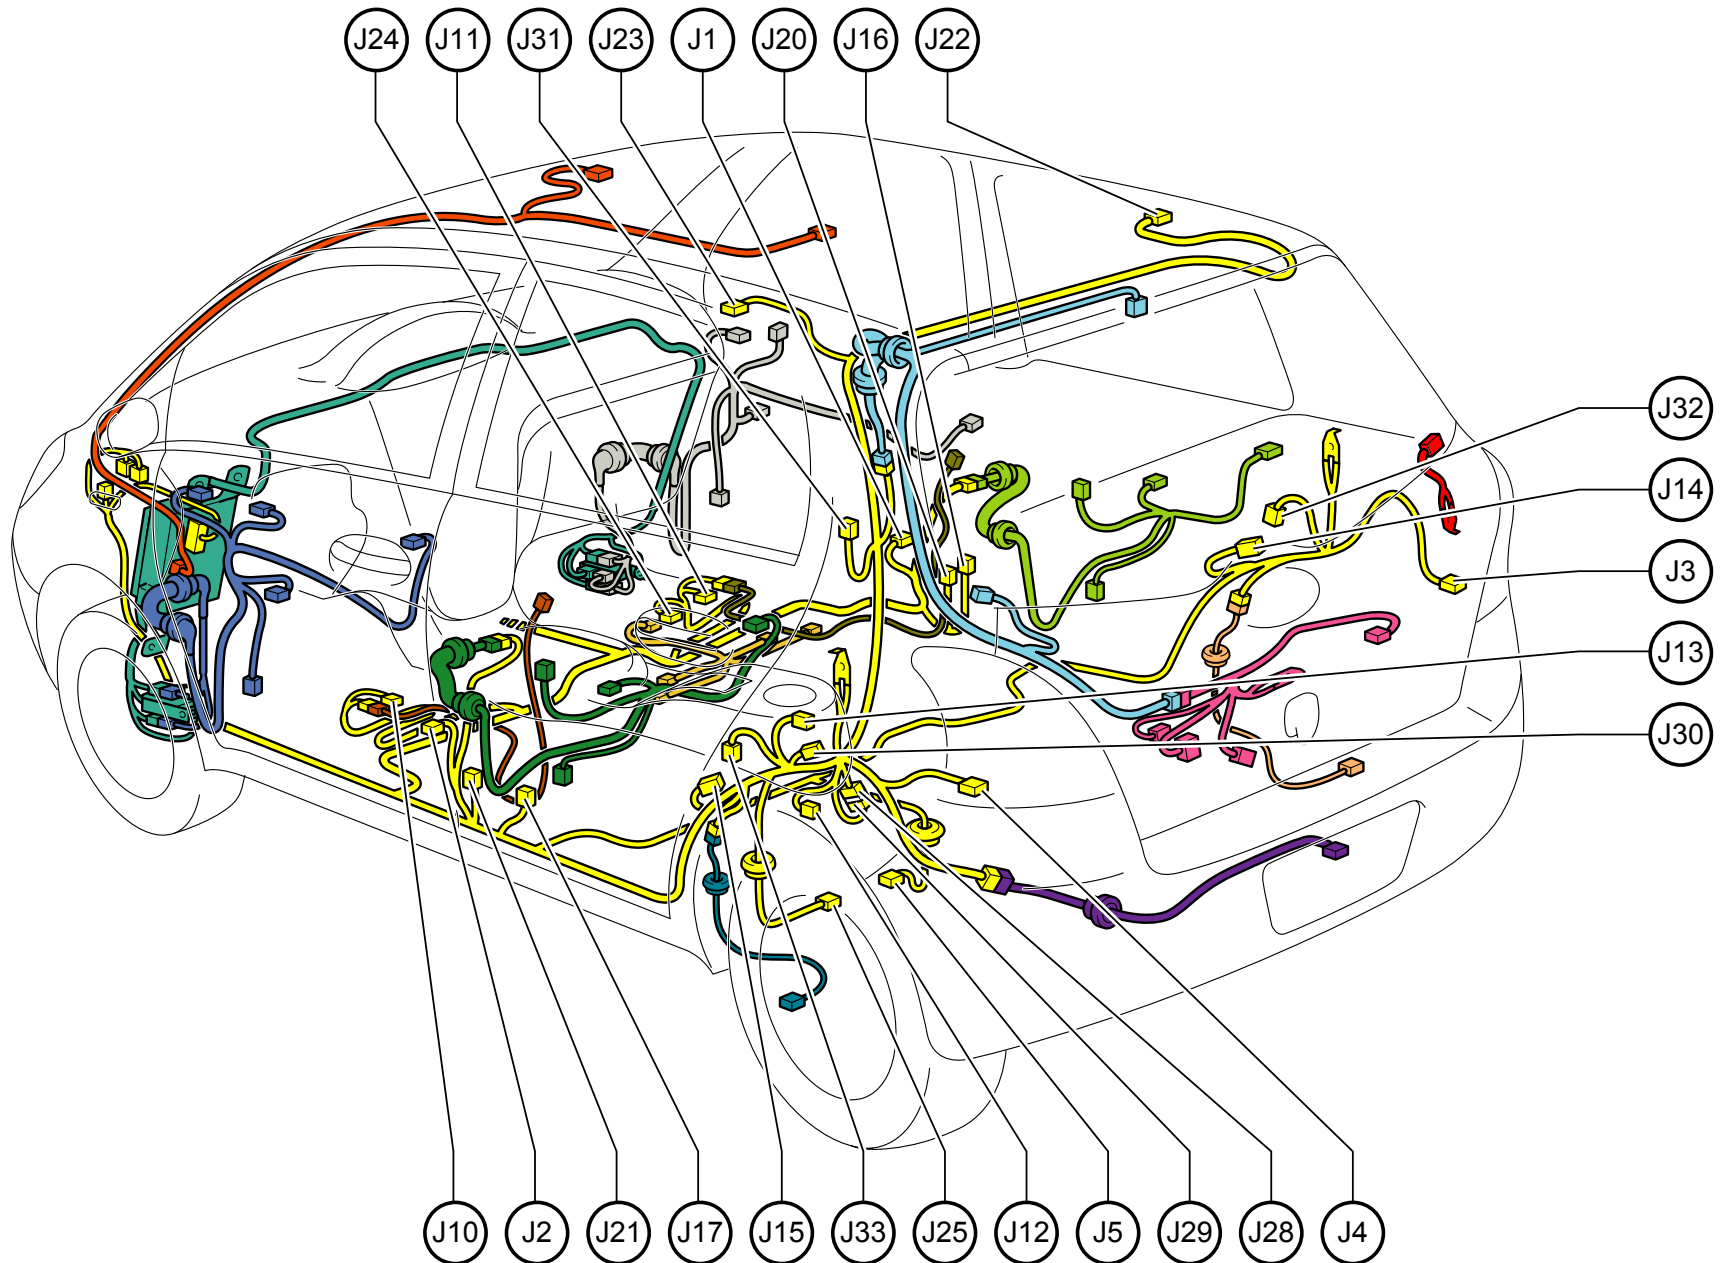



- J 1 Door Courtesy SW (Front RH)
- J 2 Door Courtesy SW (Front LH)
- J 3 Rear Combination Lamp (RH)
- J 4 Rear Combination Lamp (LH)
- J 5 Fuel Suction Pump and Gage Assembly
- J 10 Front Seat Inner Belt (Driver's Side)
- J 11 Front Seat Inner Belt Assembly (Front RH)
- J 12 Room Lamp (Luggage)
- J 13 Door Control Receiver
- J 14 Airbag Sensor (Rear RH)
- J 15 Airbag Sensor (Rear LH)
- J 16 Side Airbag Sensor (RH)
- J 17 Side Airbag Sensor (LH)
- J 20 Pretensioner (RH)
- J 21 Pretensioner (LH)
- J 22 Curtain Shield Airbag Squib (RH)
- J 23 Curtain Shield Airbag Squib (LH)
- J 24 Occupant Classification ECU
- J 25 Canister Pump Module
- J 28 Junction Connector
- J 29 Junction Connector
- J 30 Diode (Room Lamp)
- J 31 Noise Filter
- J 32 Door Courtesy SW (Rear RH)
- J 33 Door Courtesy SW (Rear LH)


Position of Parts in Body <5-Door>

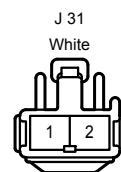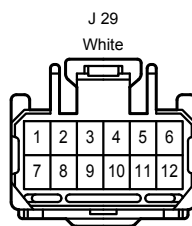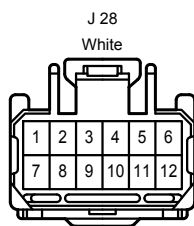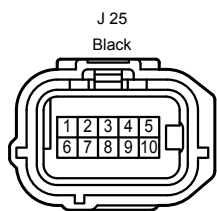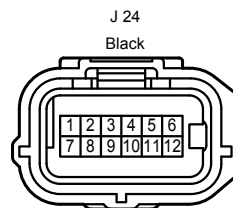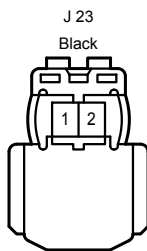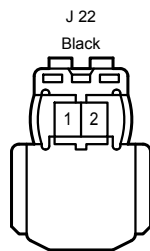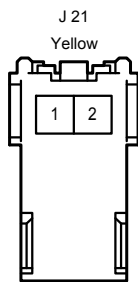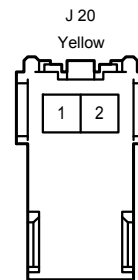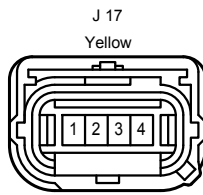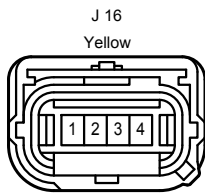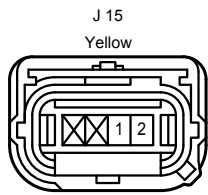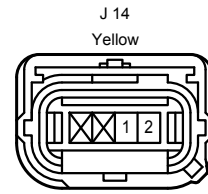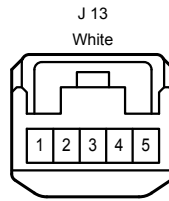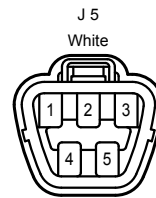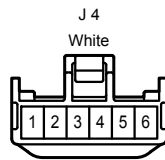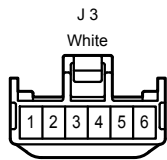

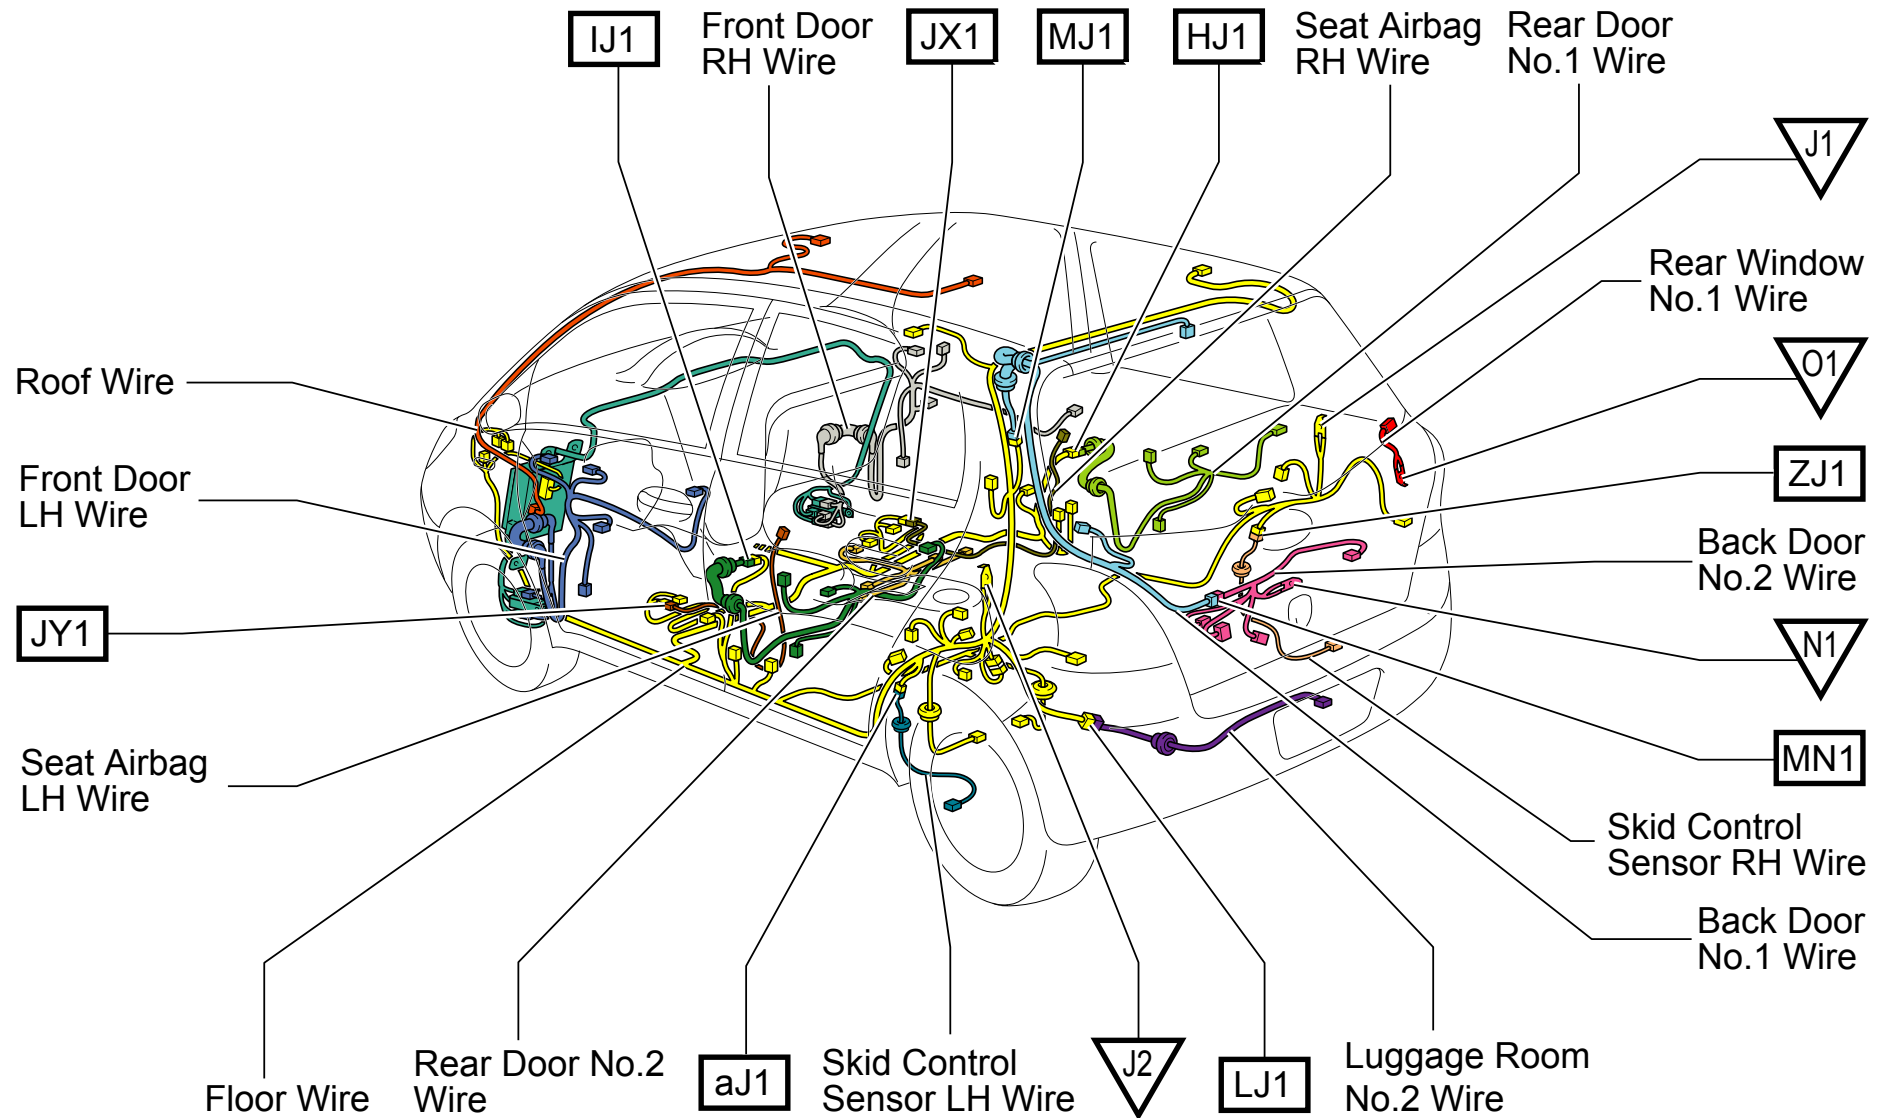


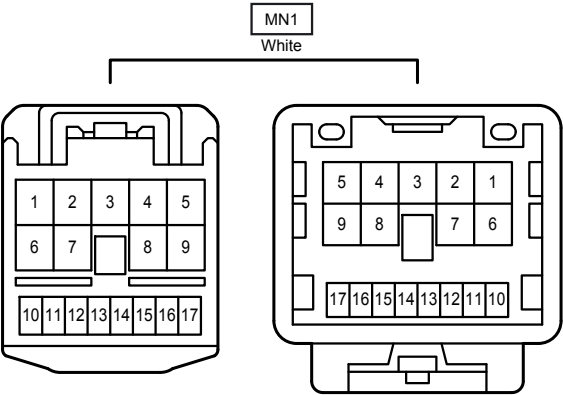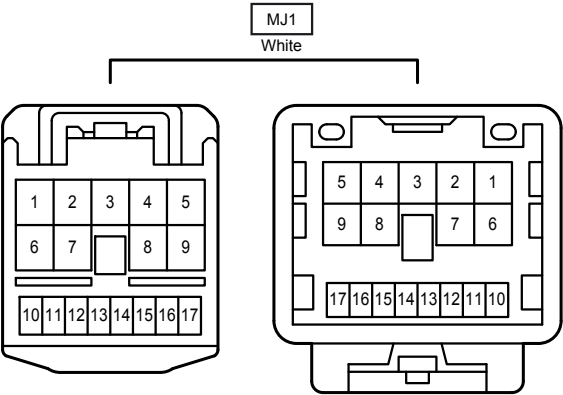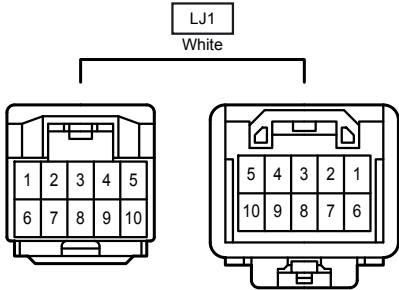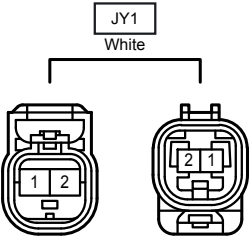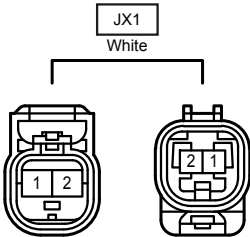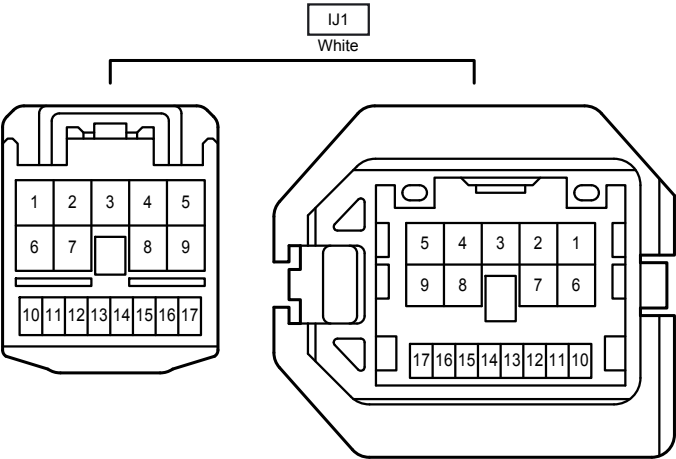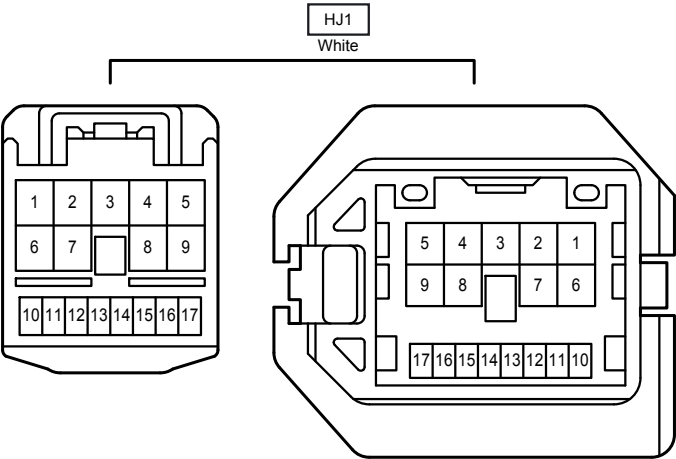

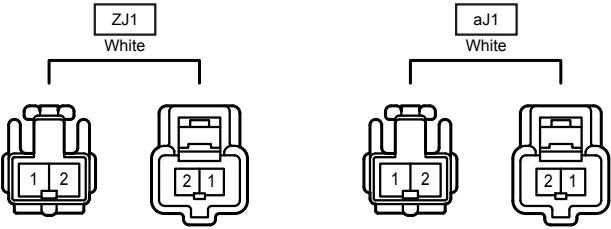

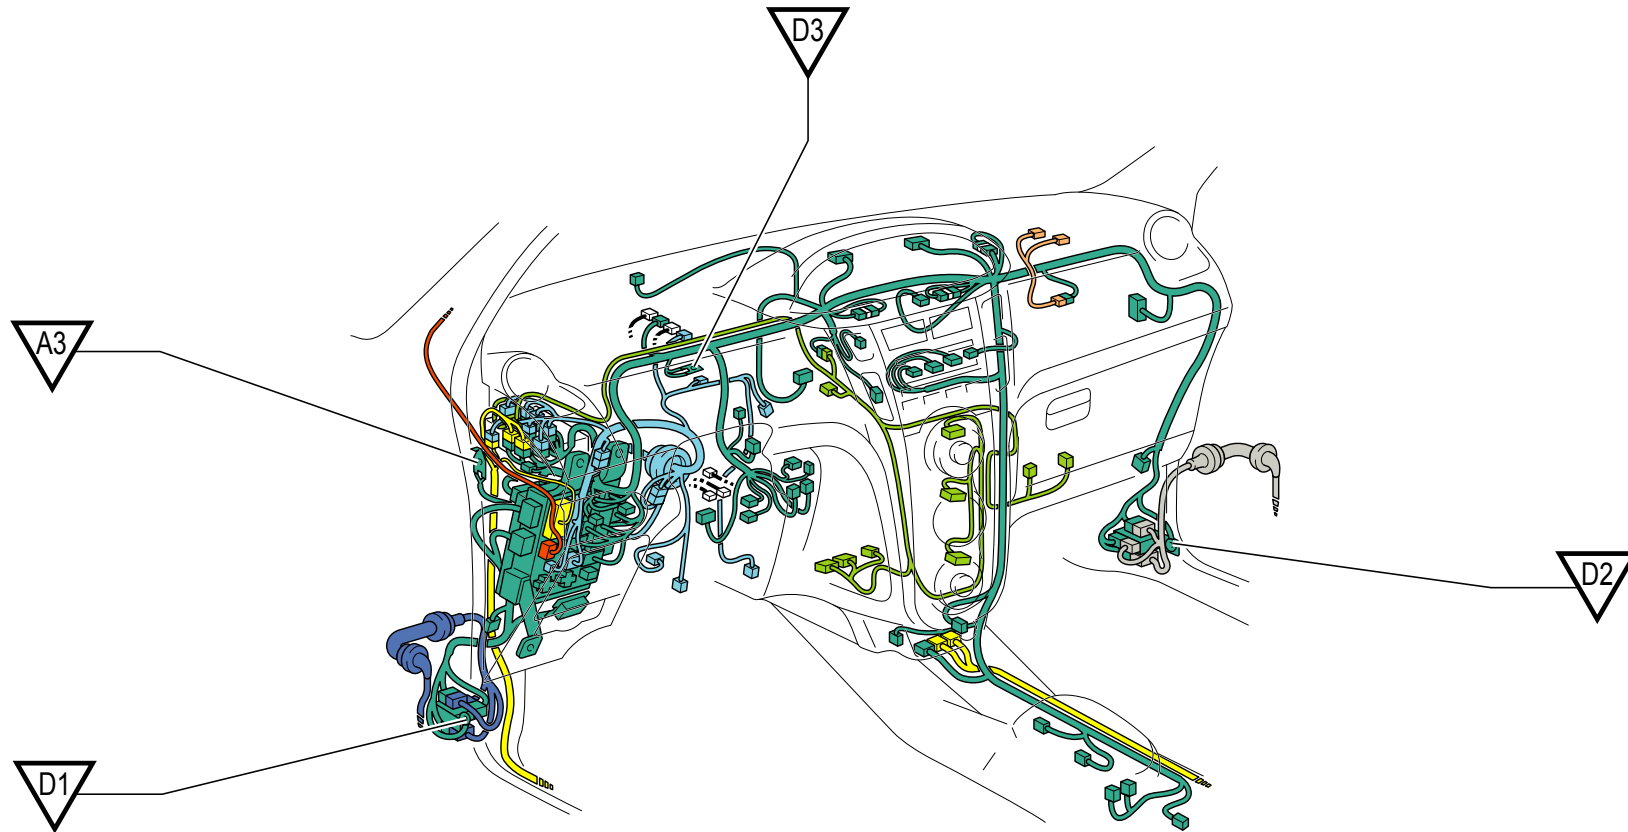

Position of Parts in Instrument Panel

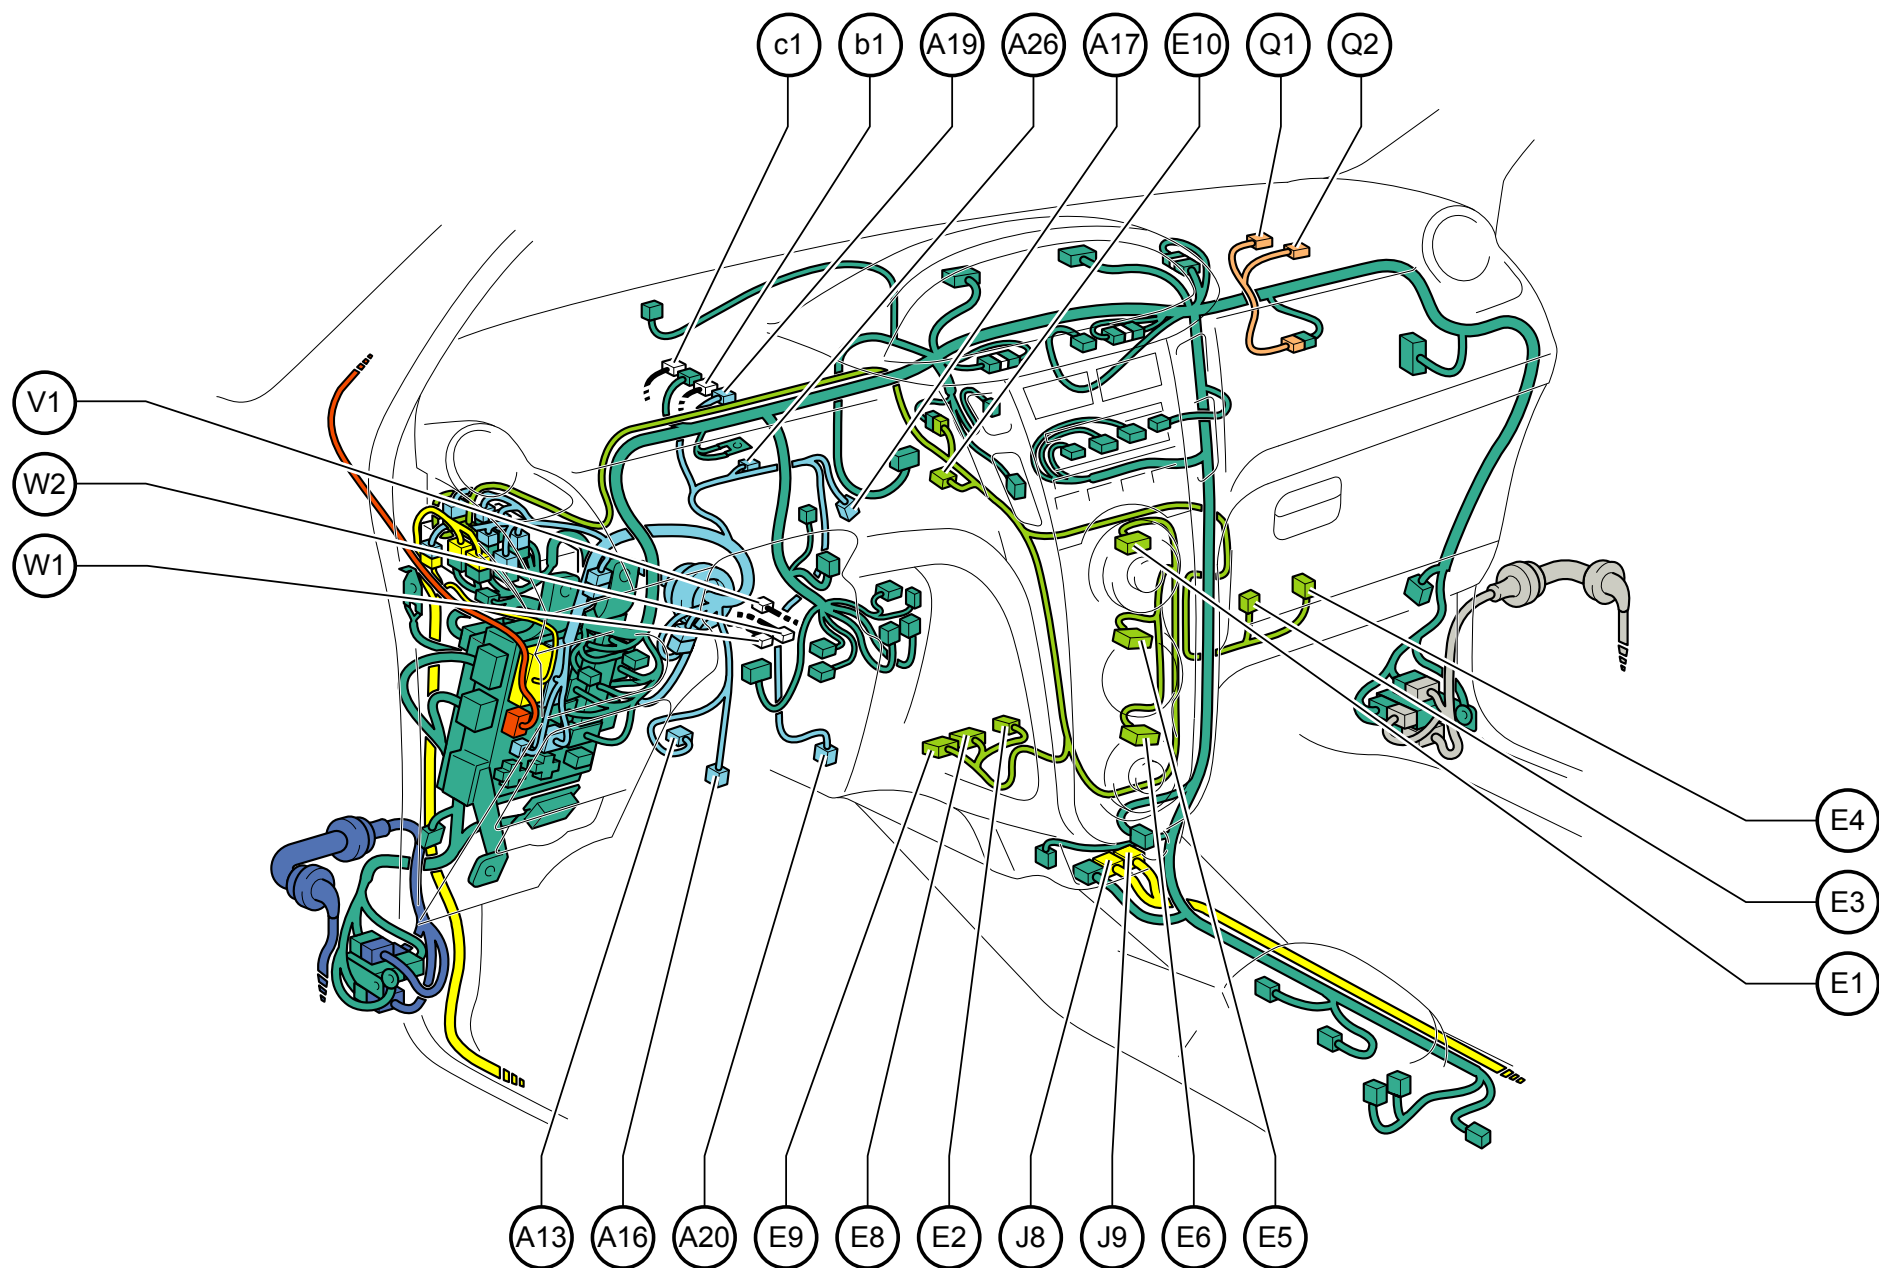

- A 13 Stop Lamp SW
- A 16 Clutch Start SW
- A 17 PTC Heater
- A 19 Power Steering ECU
- A 20 Accelerator Position Sensor
- A 26 Junction Connector

- E 1 Blower SW
- E 2 A/C Thermistor No.1
- E 3 Blower Resistor
- E 4 Blower Motor
- E 5 A/C SW
- E 6 Rear Window Defogger SW
- E 8 A/C Amplifier
- E 9 A/C Amplifier
- E 10 Junction Connector

- J 8 Airbag Sensor Assembly Center
- J 9 Airbag Sensor Assembly Center

- Q 1 Airbag Squib (Front Passenger's Airbag Assembly)
- Q 2 Airbag Squib (Front Passenger's Airbag Assembly)























- V 1 Steering Pad SW , Spiral Cable

- W 1 Airbag Squib (Steering Wheel Pad) , Spiral Cable
- W 2 Airbag Squib (Steering Wheel Pad) , Spiral Cable


- b 1 Power Steering Motor , Power Steering ECU

- c 1 Power Steering Torque Sensor , Power Steering ECU

Position of Parts in Instrument Panel

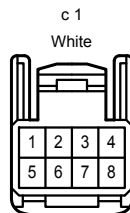


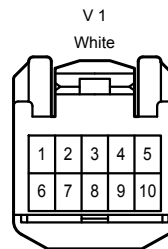
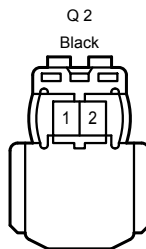
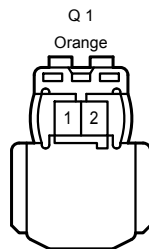
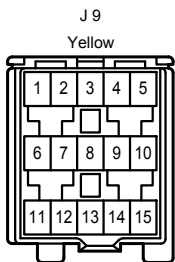
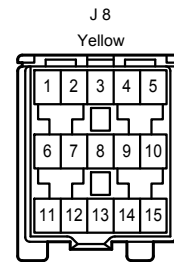
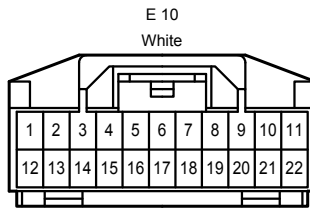
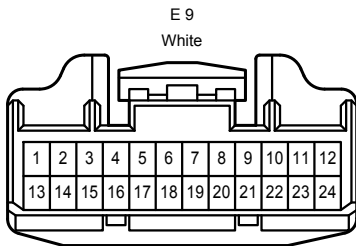
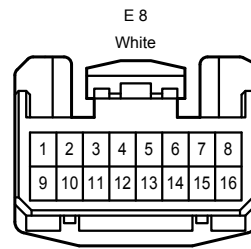
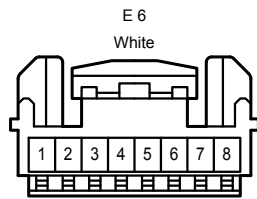
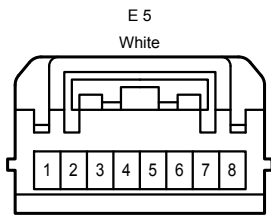

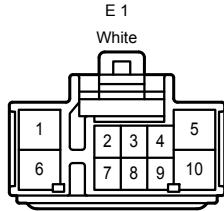

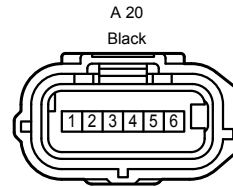

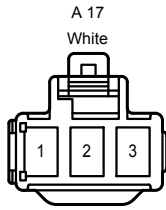

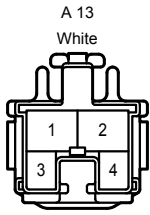


Position of Parts in Instrument Panel
















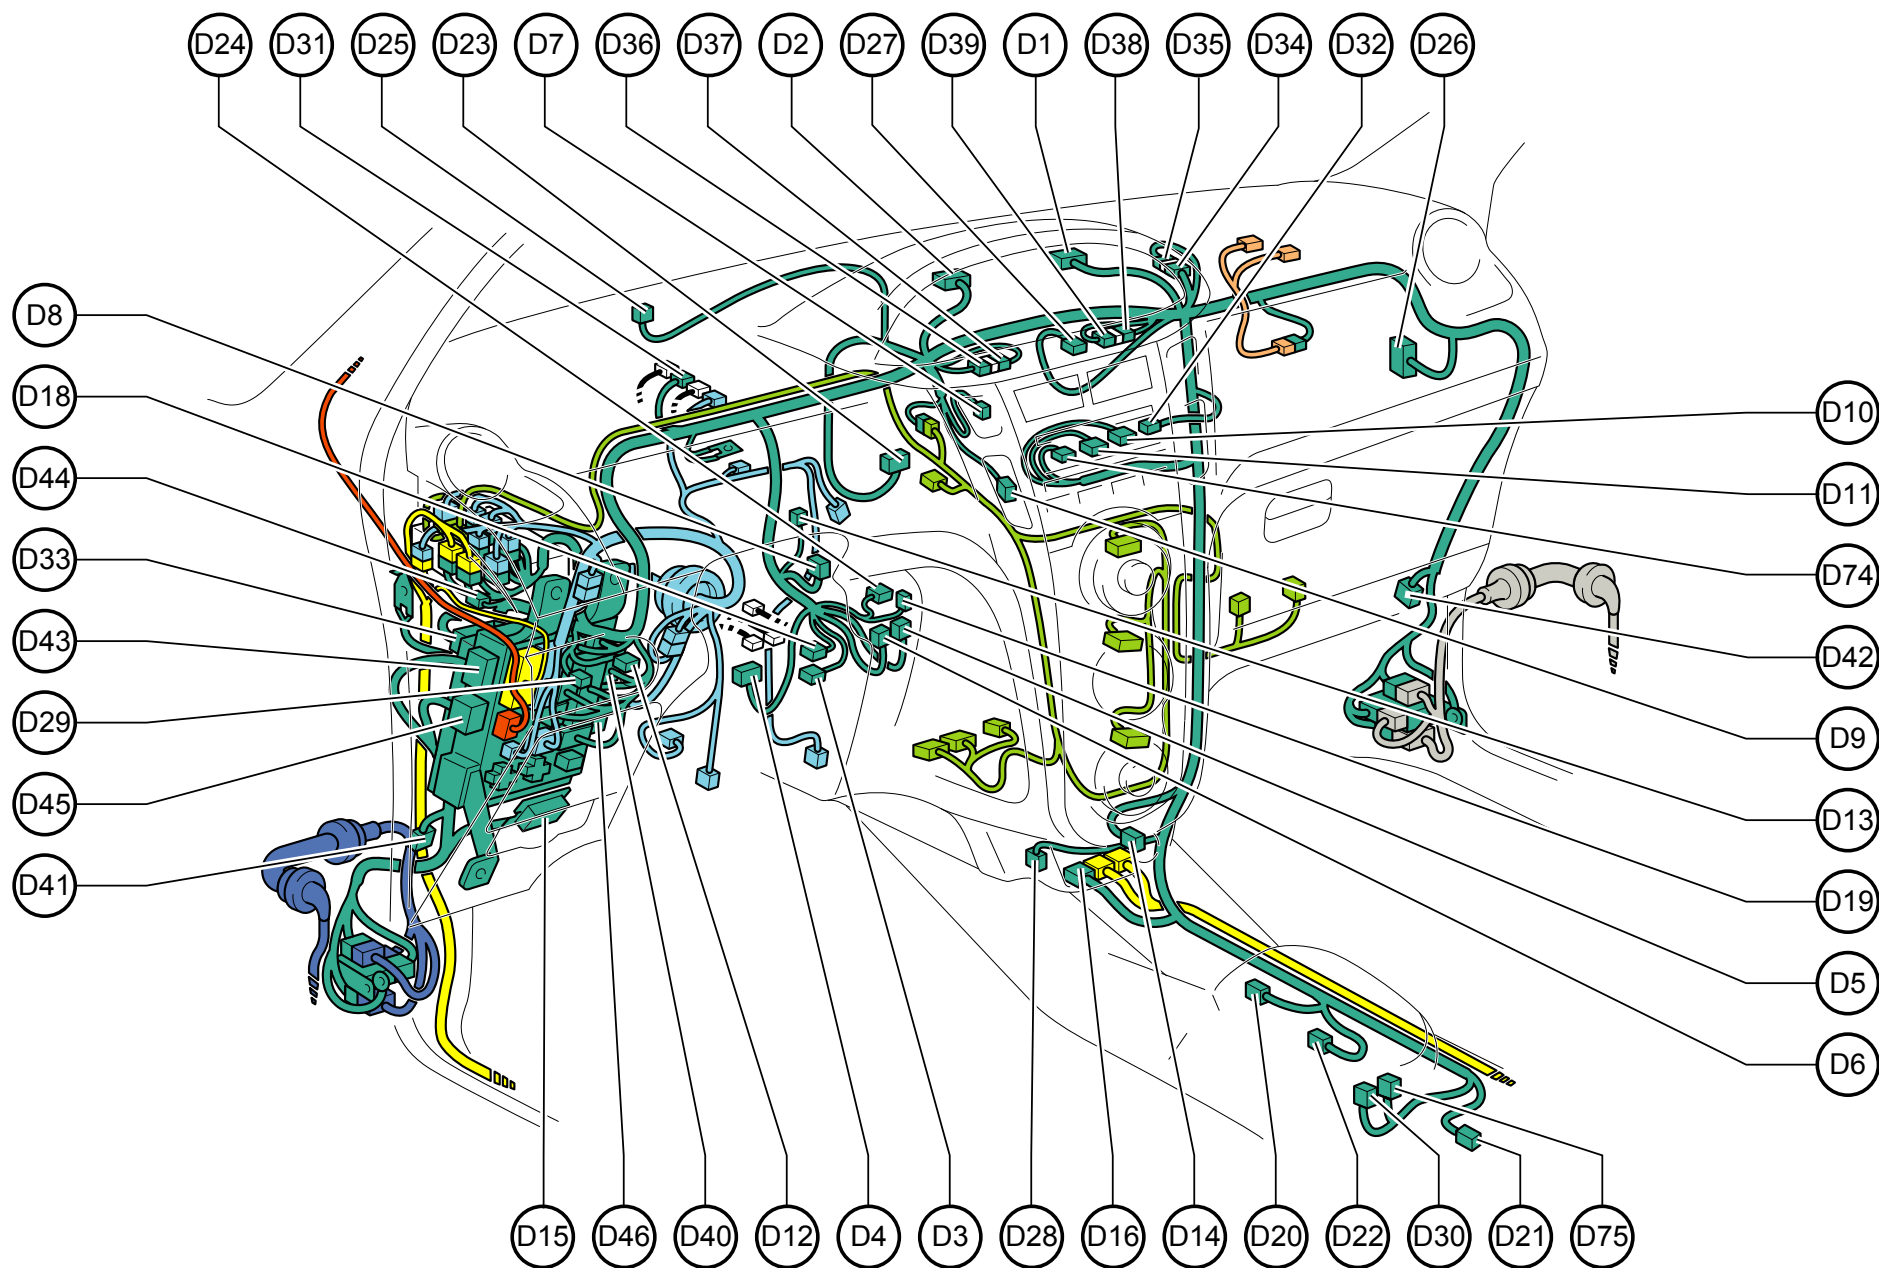


- D 1 Combination Meter
- D 2 Combination Meter
- D 3 Spiral Cable
- D 4 Headlamp Dimmer SW Assembly
- D 5 Windshield Wiper SW Assembly
- D 6 Windshield Wiper SW Assembly
- D 7 Hazard Warning Signal SW
- D 8 Ignition SW
- D 9 Running Light Relay
- D 10 Radio Receiver Assembly
- D 11 Radio Receiver Assembly
- D 12 Outer Mirror SW
- D 13 Key Interlock Solenoid
- D 14 Cigarette Lighter or Power Outlet
- D 15 Data Link Connector 3
- D 16 Airbag Sensor Assembly Center
- D 18 Spiral Cable
- D 19 Unlock Warning SW
- D 20 A/T Shift Lever Illumination
- D 21 Parking Brake SW
- D 22 Shift Lock Control ECU
- D 23 Transponder Key ECU
- D 24 Transponder Key Amplifier
- D 25 Security Indicator Lamp
- D 26 Theft Warning ECU
- D 27 Passenger Seat Belt Warning Lamp
- D 28 Oxygen Sensor (Bank 1 Sensor 2)
- D 29 Light Control Rheostat
- D 30 Door Lock Control SW
- D 31 Power Steering ECU
- D 32 Antenna Amplifier
- D 33 Main Body ECU
- D 34 Junction Connector
- D 35 Junction Connector
- D 36 Junction Connector
- D 37 Junction Connector
- D 38 Junction Connector
- D 39 Junction Connector
- D 40 Junction Connector
- D 41 Junction Connector
- D 42 Junction Connector
- D 43 Fuse Block
- D 44 Diode (Starter)
- D 45 ACC Cut Relay
- D 46 Front Fog Light Relay
- D 74 Radio Receiver Assembly
- D 75 Stereo Jack Adapter






Position of Parts in Instrument Panel

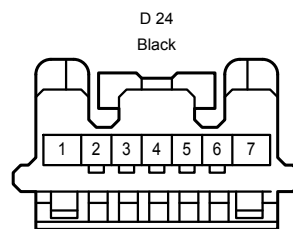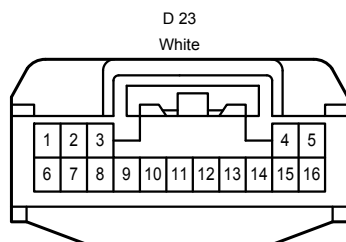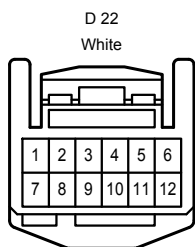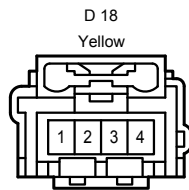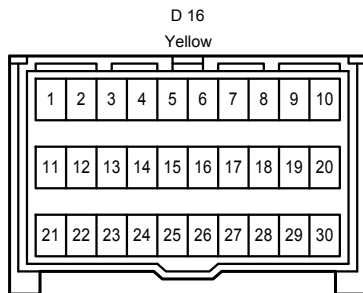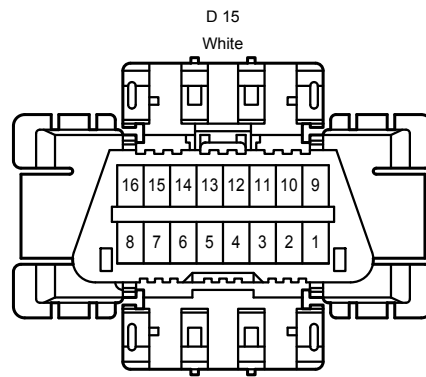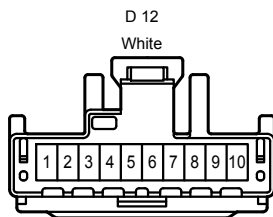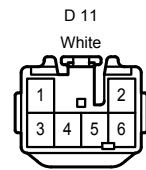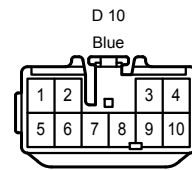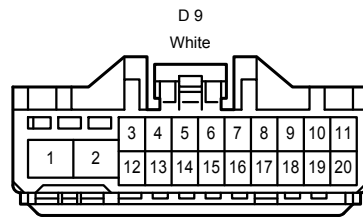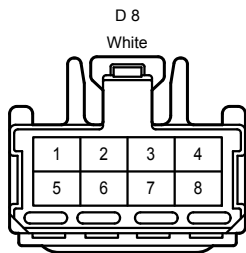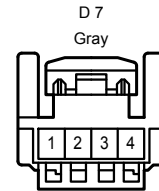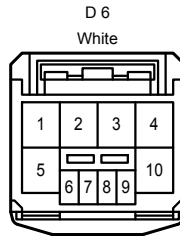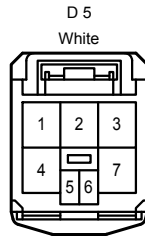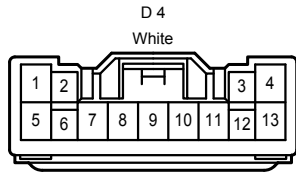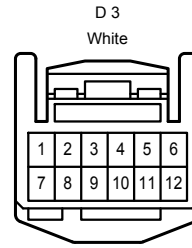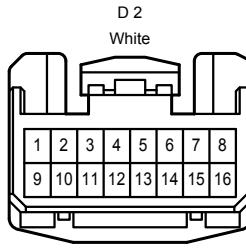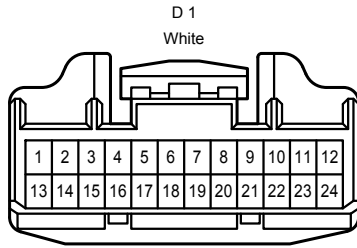



Position of Parts in Instrument Panel

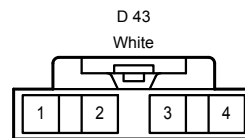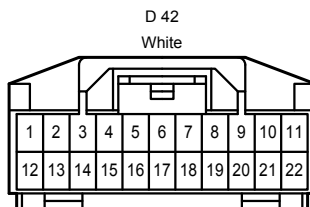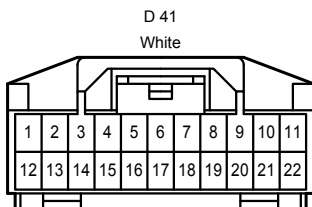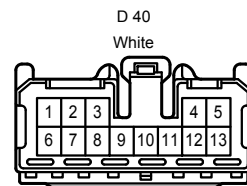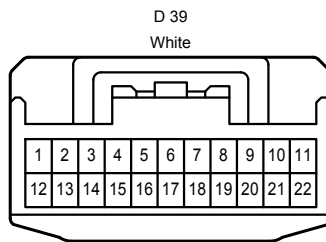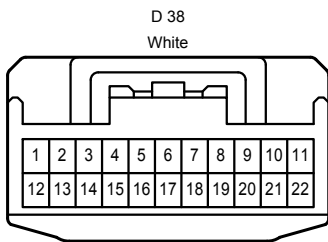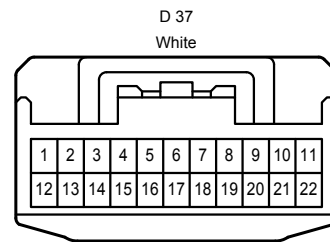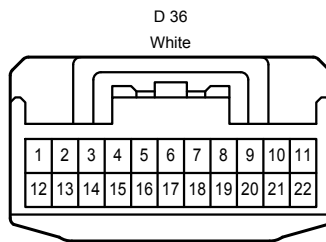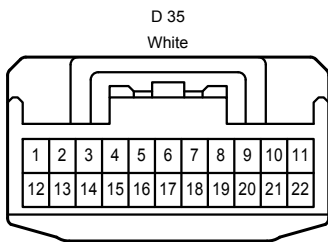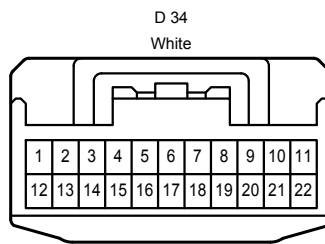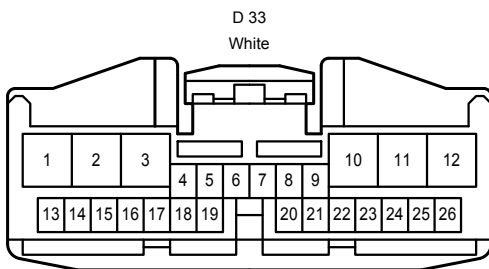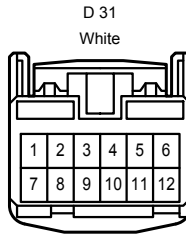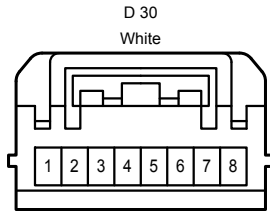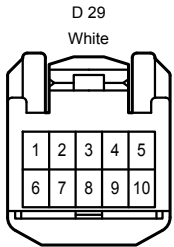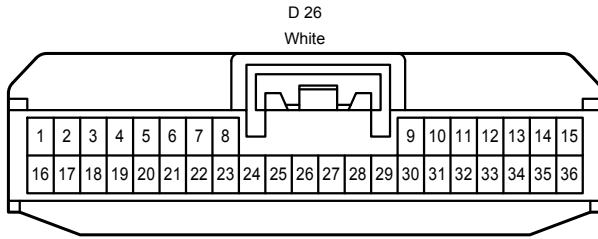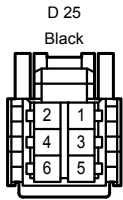


Position of Parts in Instrument Panel

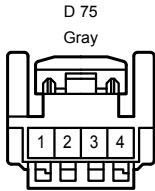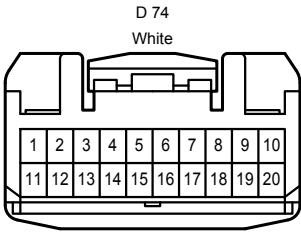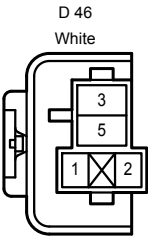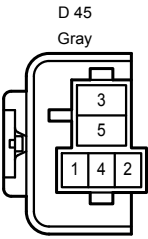


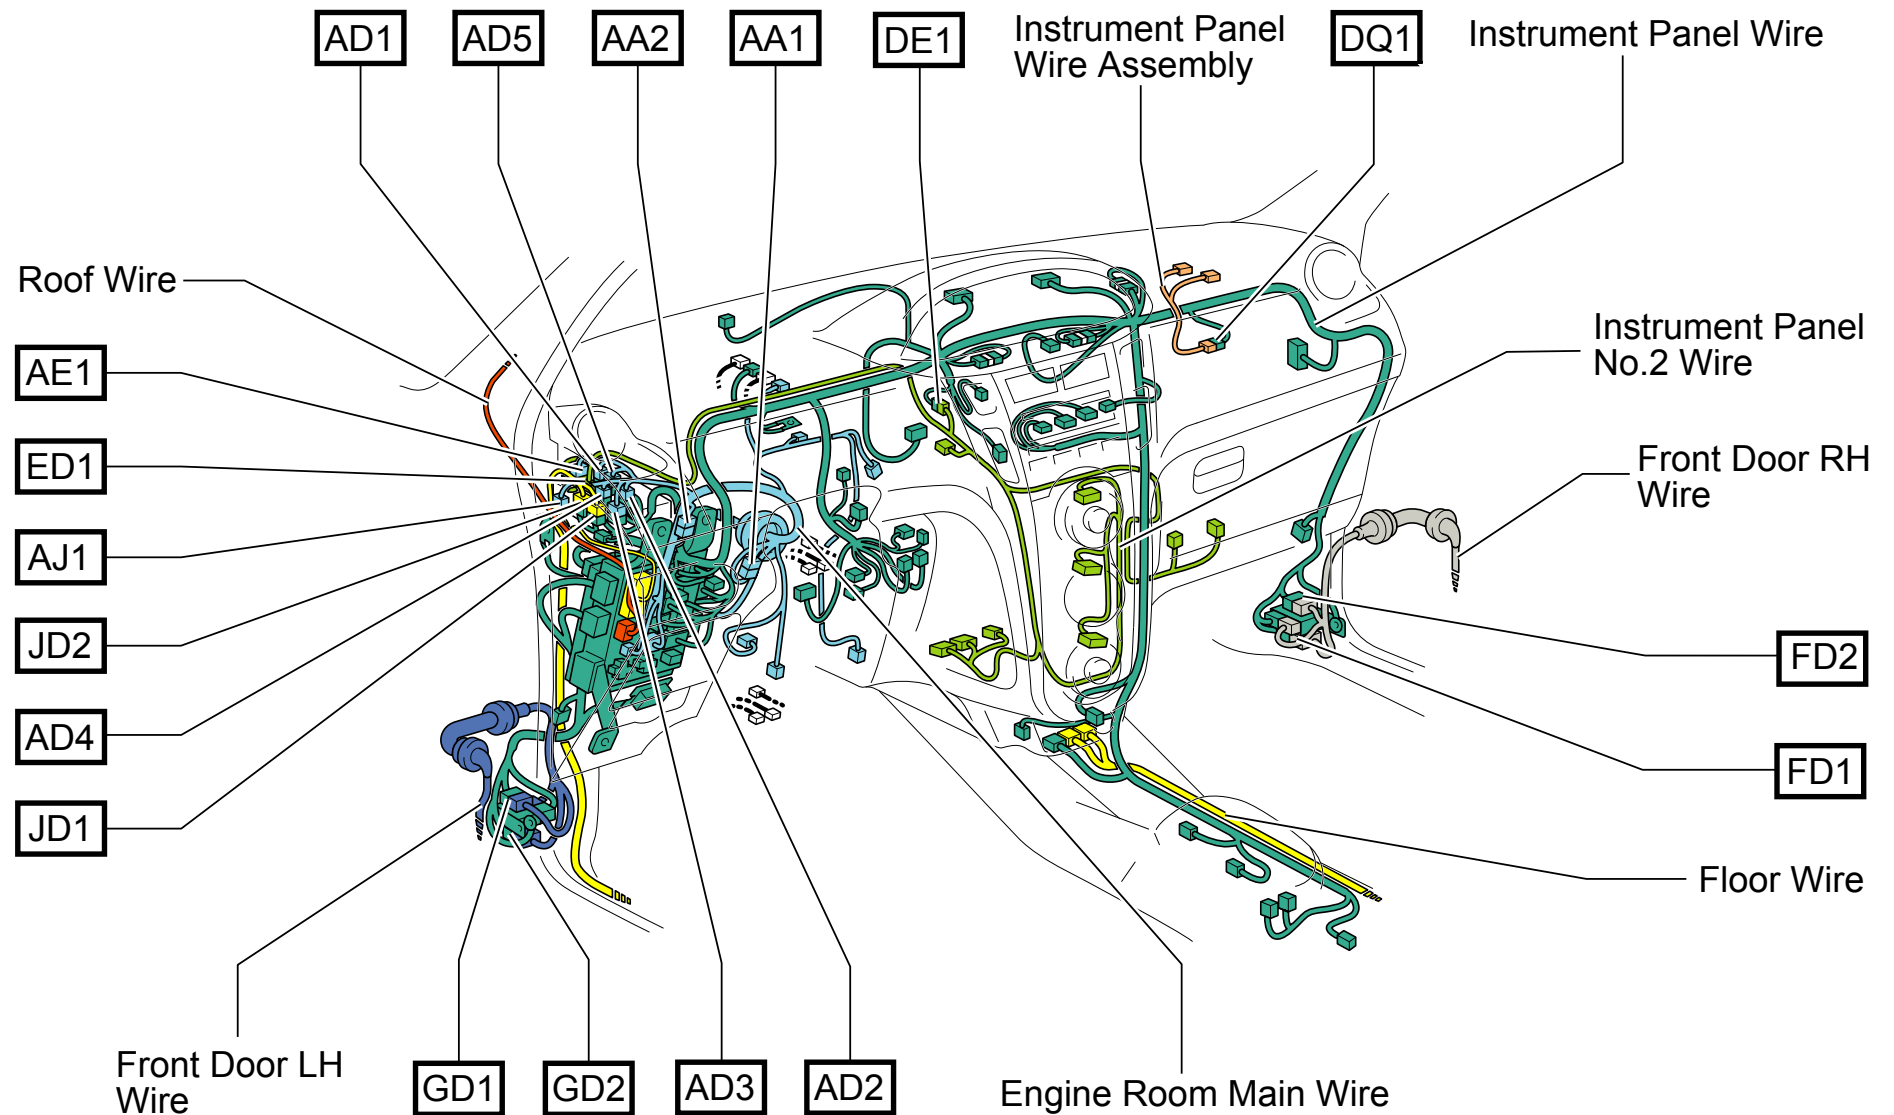

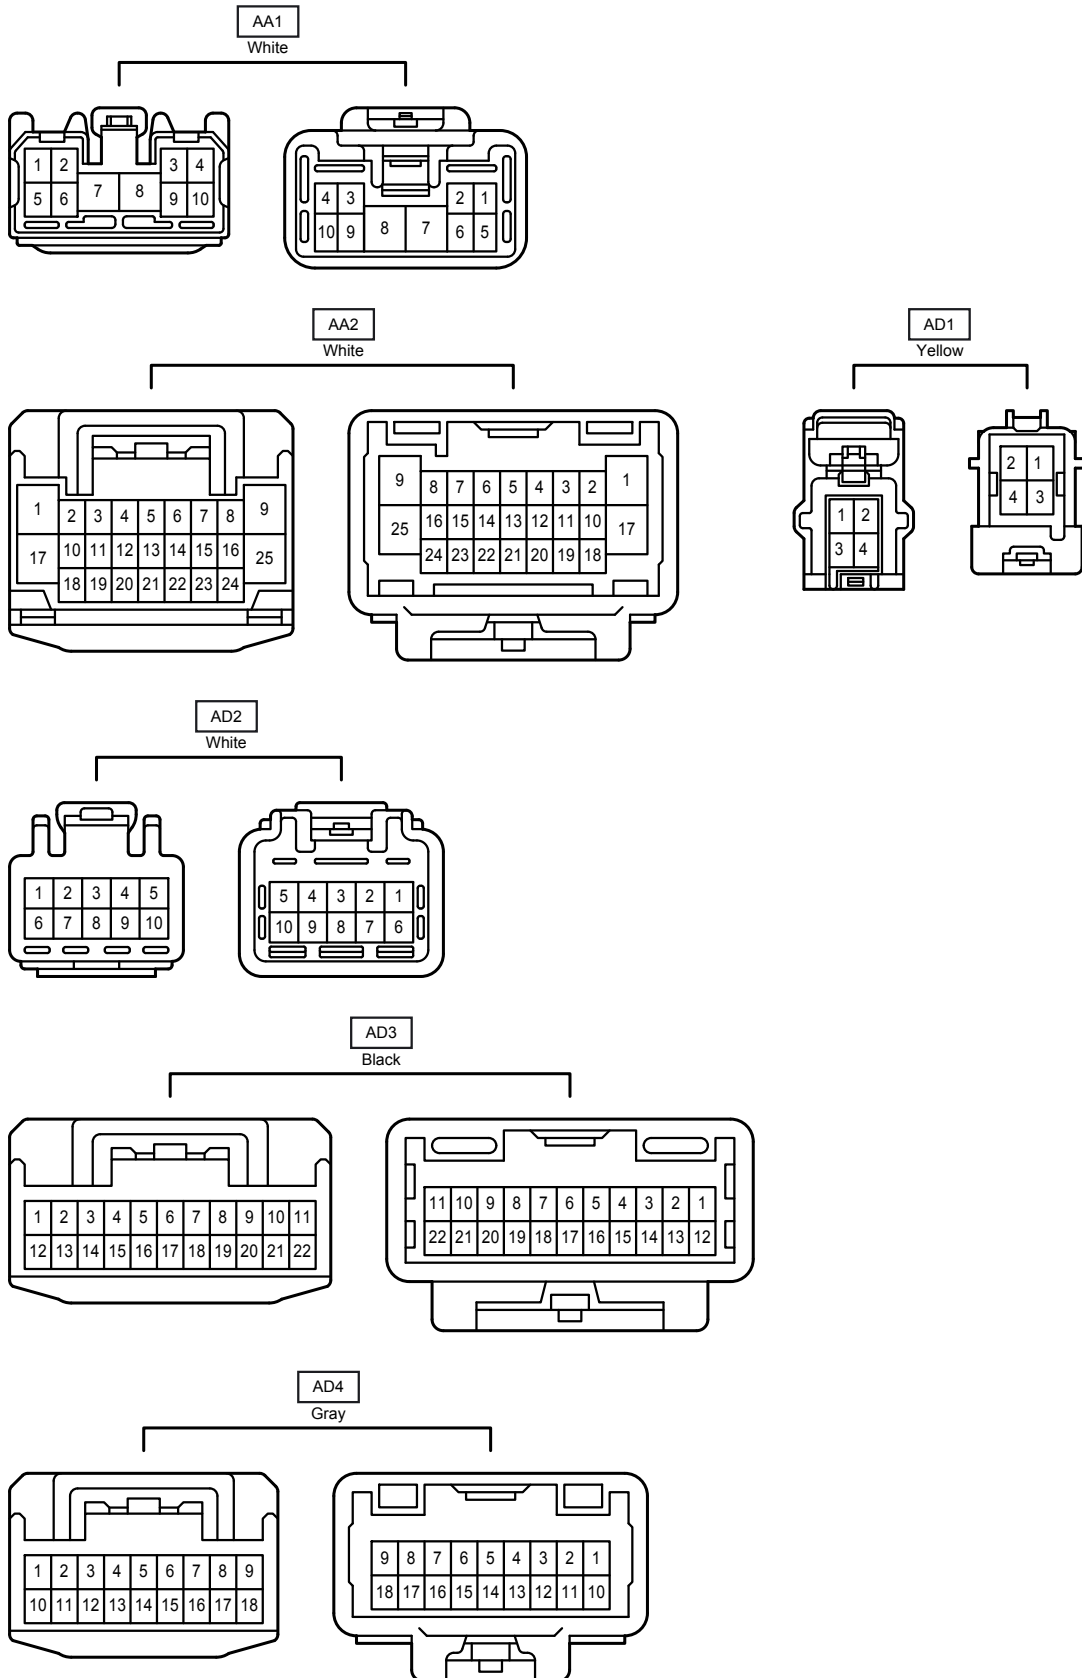


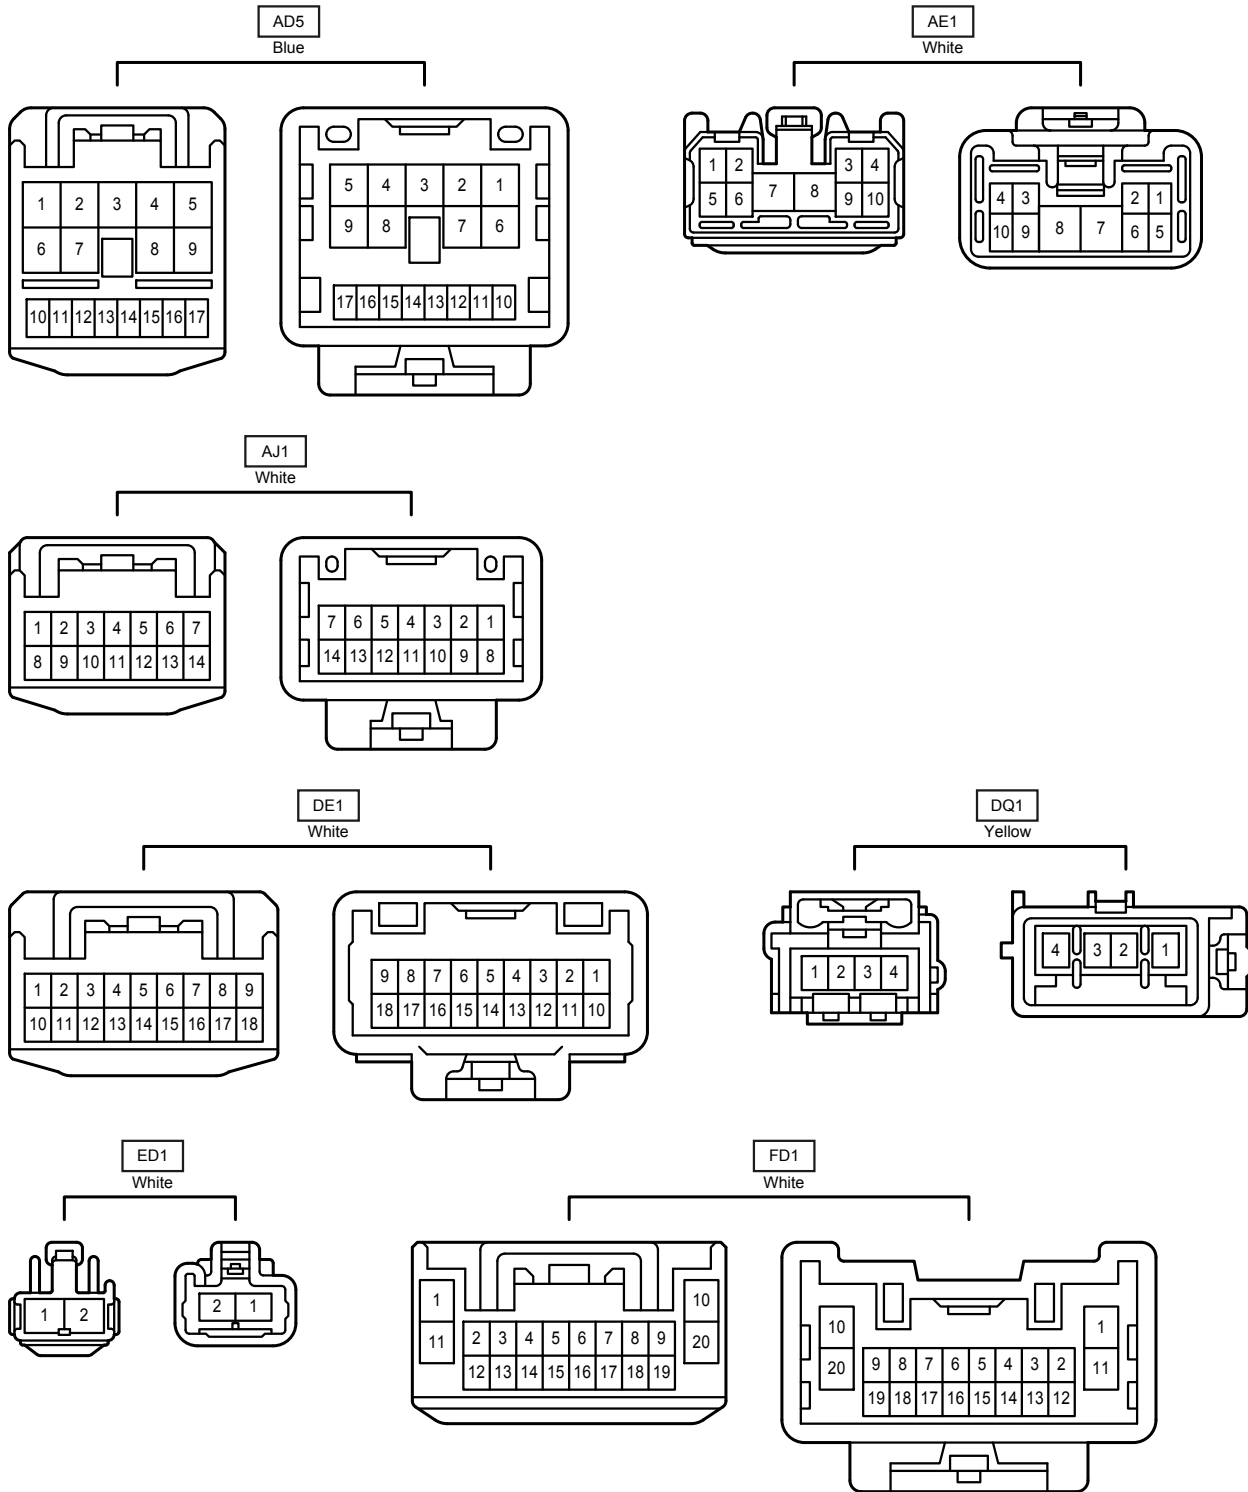


FD2
White

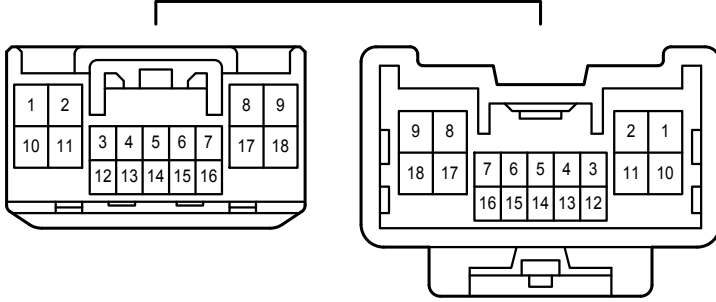

GD1
White

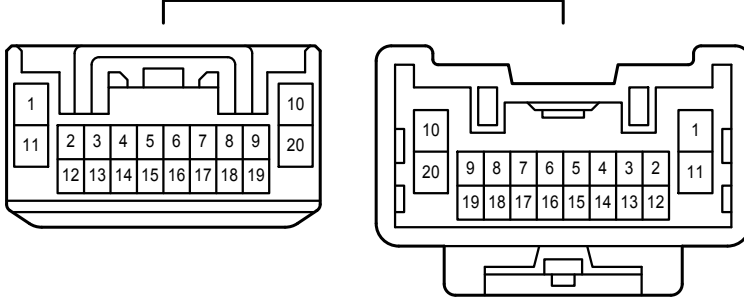

GD2
White

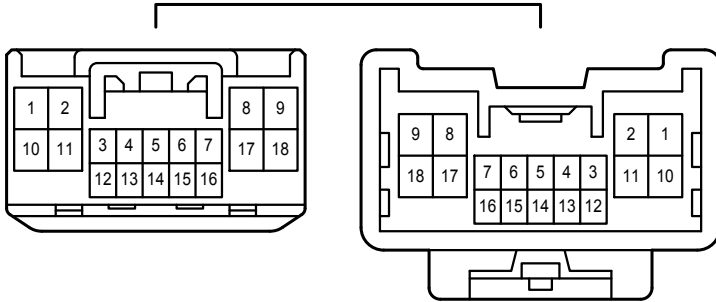

JD1
White

