

Technical Support and E-Warranty Certificate www.vevor.com/support

VACUUM PACKING MACHINE USER MANUAL

Model:DZ-260C-V1,DZ-260C-V2,DZ-260C-V3

We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.



VACUUM PACKING MACHINE

Model: DZ-260C-V1, DZ-260C-V2, DZ-260C-V3



NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.



- 1. Read carefully and understand all **ASSEMBLY AND OPERATION INSTRUCTIONS** before operating.
- 2. Failure to follow the safety rules and other basic safety precautions may result in serious personal injury.

GENERAL SAFETY RULES

Please read the entire operating instructions before using the products for the first time; They contain important information about the correct operation.

The guarantee/warranty will be void if damage is incurred resulting from non-compliance with the operating instructions. Liability for any and all consequential damage is excluded!

We do not assume any liability for damage to property or personal injury caused by improper use or the failure to observe the safety instructions! In such cases the guarantee/warranty will be void

The unauthorized conversion, modification of disassembly of the products is inadmissible because of safety and approval reasons (CE).

The product is not a toy and must be kept out of the reach of children. Particular care must therefore be exercised if children are present.

The product must not get damp or wet, it is only intended for use in dry, indoor locations (not bathrooms or similarly damp areas). There is a risk of a fatal electric shock.

Do not expose the product or its accessories to damp or extremely high or low temperatures.

Do not leave packing materials unattended. They may become dangerous playing material for children.

Dropping, falling, pressure or tensile forces could destroy or at least limit the function of the product.

Never position the device in the vicinity of combustible or easily inflammable materials.

Always make sure that the rotary table on which the object is placed is located in the center of the housing!

This machine uses plastic film or plastic aluminum film as materials to vacuum package paste foods, fruits, sauce vegetables, chemicals, pharmaceuticals, electronic components, precision instruments, rare metals, and other items. Products packaged under vacuum are not easily oxidized or moldy. Especially suitable for industries such as tea, food, and medicine.

If you have reason to assume that safe operation is no longer possible, disconnect the device immediately and secure it against inadvertent operation.

It can be assumed that safe operation is no longer possible if:


- the device shows visible signs of damage,
- the device no longer functions,
- after a longer period of storage under unfavourable conditions,
- following heavy stress during transportation.


SAVE THESE INSTRUCTIONS

MODEL AND PARAMETERS

Model	DZ-260C-V1	DZ-260C-V2	DZ-260C-V3
Seal Length	320mm	320mm	320mm
Chamber Dimensions	355*340*70mm	355*340*70mm	355*340*70mm
Vacuum Pump Type	Oil Pump	Oil Pump	Oil Pump
Pumping Speed of Vacuum Pump	6.5m³/h	6.5m³/h	6.5m³/h
Voltage	Voltage AC 120V 60Hz		AC 230V 50Hz
Max. Power	Max. Power 1800W		1800W
Vacuum Pump Power	· 180VV		180W
Machine Material 201 Stainless Steel		201 Stainless Steel	201 Stainless Steel

STRUCTURE DIAGRAM

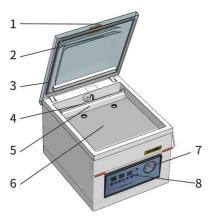

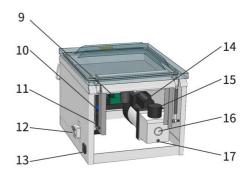

1	Vacuum cover	10	Heating transformer
2	Silicone strip	11	Vacuum pump solenoid valve
3	Vacuum sealing bar	12	Power switch
4	Sealing heating strip	13	Power plug
5	Bag pressing rod	14	Vacuum pump
6	Base plate	15	Oil injection port
7	Indicator	16	Oil level observation window
8	Vacuum gauge	17	Oil drain screw
9	Circuit board		

PARTS LIST

Model Parts	DZ-260C-V1	DZ-260C-V2	DZ-260C-V3
Heating Wire	×2	×2	×2
Teflon Cloth	×2	×2	×2
Filler Board	×1	×1	×1
Vacuum Pump Oil	×1	×1	×1
Allen Key	×1	×1	×1
Vacuum Bag	×30	×30	×30
Chamber Sealing Strip	×1	×1	×1
Power Cord	×1	×1	×1
User Manual	×1	×1	×1

OPERATING INSTRUCTIONS

1.Unscrew the rear cover plate.



- 2.1. Take out the oil mist filter;
 - 2.Add vacuum pump oil;
 - ③.Oil level between 1/2-3/4 of the observation hole(do not fill);
 After adding the oil,screw back the oil

After adding the oil, screw back the oil mist filter, close the back cover.



3.PANEL USAGE INSTRUCTIONS


Step 1:Connect the matching power supply

Step 2:Open AIR SWITCH

Step 3: ①VACUUM TIME: In the standby state, click the DECREASE or INCREASE button to set the ideal vacuum time, general items are set for 30-40s.

Step 4: ②SEALING TIME: Click the DECREASE or INCREASE button to set the time, and the sealing time is generally set to 2-2.2s. The sealing time is set according to the thickness of the vacuum bag. It is strictly prohibited to set the sealing time too long or burn out the sealing heating strip.

Step 5: $\cent{@}$ COOLING TIME : In the standby state, click the DECREASE or INCREASE button to set the ideal cooling time, general items are set for 3-5s.

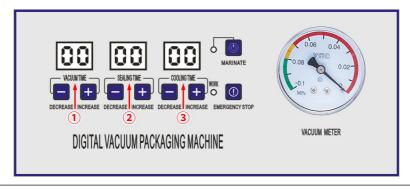

4.1) Put your product in it, the vacuum bag seal is placed on the heating strip.Press the bag strip to flatten the product.



6.MARINATE: Click the marinate button in the upper right corner of the control panel, the marinate indicator light will light up, adjust the pumping time, and start the marinate work. At this time, the machine is in a vacuum only state without sealing.




5. Hold the front of the cover with both hands and firmly press down on the cover. The machine starts to work, after the vacuum meter pointer starts to run, loosen the hands, the machine automatically completes the packaging.



7. When the machine needs to change oil or is not used for a long time, loosen the screw under the oil window and drain the vacuum pump oil. Suggest replacing the vacuum pump oil after the machine has been working continuously for 800 hours.




CIRCUIT DIAGRAM

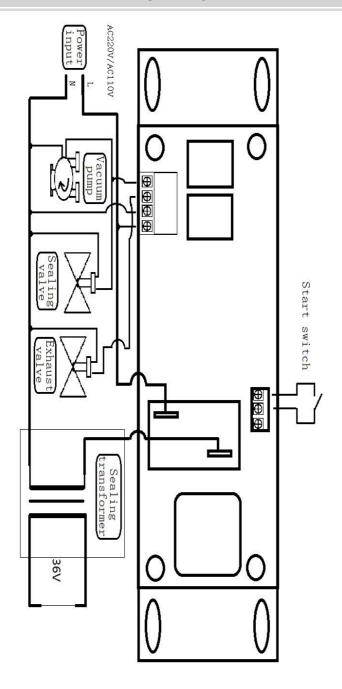

MAINTENANCE

- 1. After using , the surface of the machine should be cleaned and residual materials inside the machine should be removed.
- 2. When storing, keep in a clean, dry, and safe location away from children.
- 3. All maintenance, service, and repairs not discussed in the manual should only be performed by qualified service technicians.

Replace the high temperature cloth(Teflon Cloth)

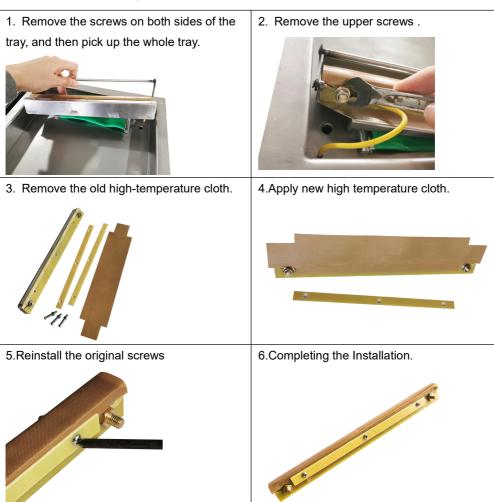

Replace the Chamber Sealing Strip

1. Remove the Chamber Sealing Strip.



2. Replace the Chamber Sealing Strip with a new one



3.Completing the Installation



TROUBLESHOOTING AND SOLUTIONS

Problem	Possible Cause	Solution
The machine doesn't	1.No connection of the	1.Check whether the plug
work and the control	power supply.	and socket are effectively
panel shows nothing.	2.The contact of the power	connected.
	switch looses.	2.Check whether the wiring
		of the power input part
		inside the machine is loose
		or detached.
The control panel	The parameter is being	Complete the parameter
startup,but the	set.	setting.
machine doesn't work.		
The best vacuum state	1.Short vacuumizing time.	1.Extend the vacuum time.
can't be achieved.The	2.The oil in the vacuum	2.Check the oil level, refuel
vacuum pumping	pump is not enough or the	or change the oil (pay
speed is slow。	oil is not clean.	attention to the oil type
	3.Air leakage and wear of	(vacuum oil 46#,68#) and
	the sealing ring.	oil quantity.
		3.Replace the sealing ring.
Sealing failure or	1.The bags are not	1.Place the bags on the
poor sealing.	correctly placed on the	plate in order.
	heating plates.	2.Shorten/prolong the
	2.Too long/short sealing	sealing time.
	time.	3.Choose proper
	3.Inappropriate heating	temperature.
	temperature	4.Clean or replace the
	4.Silicon strip damaged or	silicon rubber.
	with impurity.	5.Change electric heating
	5.Damage of electric	wire.
	heating wire.	

CORRECT DISPOSAL



This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all

accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices

Manufacturer: Shanghaimuxinmuyeyouxiangongsi

Address: Baoshangu Shuangchenglu 803long 11hao 1602A-1609shi

Shanghai

EC REP: SHUNSHUN GmbH.

Römeräcker 9 Z2021,76351 Linkenheim-Hochstetten, Germany

Tel: +49 1727041930 euvertreter@gmail.com

UK REP: Pooledas Group Ltd.

Unit 5 Albert Edward House, The Pavilions Preston, United Kingdom

Tel: 01772418127 pooledas123@gmail.com

Imported to AUS: SIHAO PTY LTD.

1 ROKEVA STREETEASTWOOD NSW 2122 Australia

Imported to USA: Sanven Technology Ltd.

Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

Made In China



Technical Support and E-Warranty Certificate www.vevor.com/support