

PORTABLE MD PLAYER

DMC-K3

SERVICE MANUAL

KENWOOD

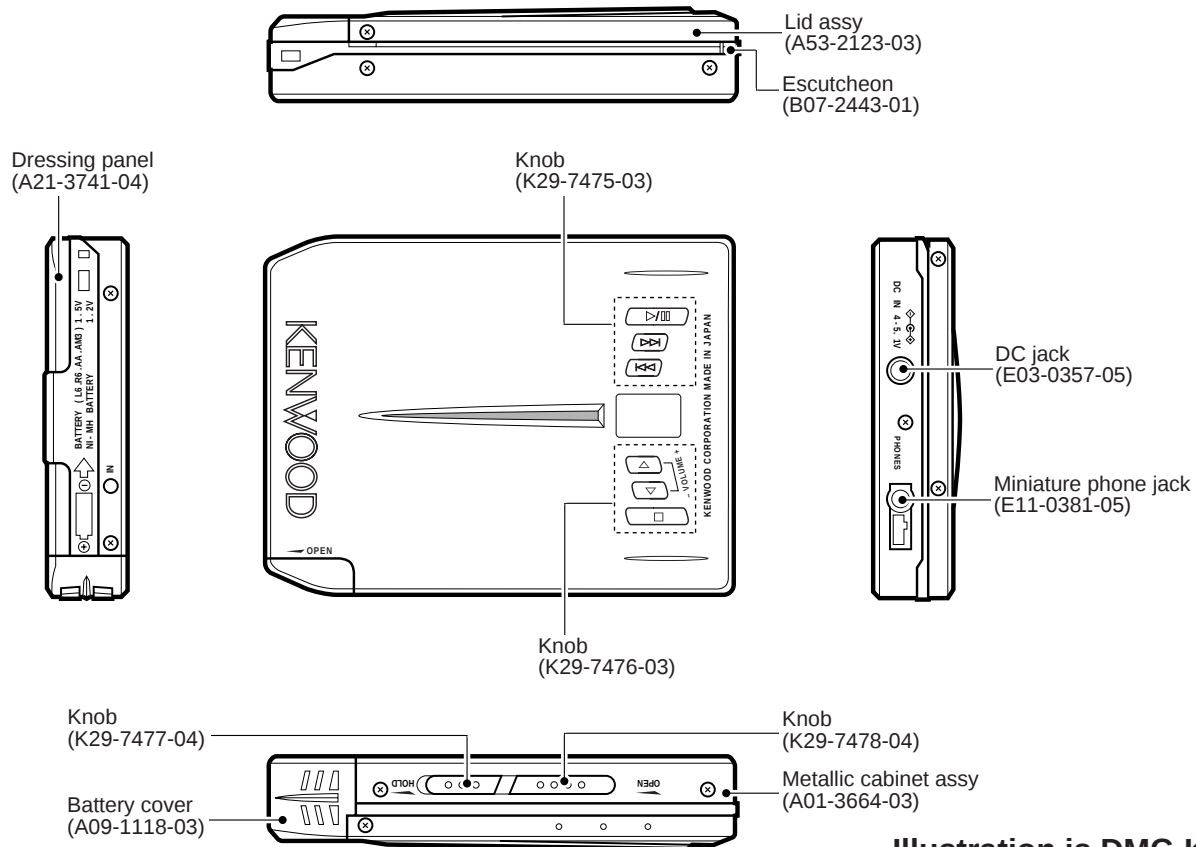


Illustration is DMC-K3(S).

SPECIFICATIONS

System	Mini disc digital audio system
Read method	Noncontact optical reading system (semiconductor laser)
Sampling frequency	44.1 kHz
Audio compression	ATRAC (Adaptive Transform Acoustic Coding)
Number of channels	2 channels
Frequency response	20 Hz to 20,000 Hz (± 3 dB)
Wow & flutter	Less than unmeasurable limit (± 0.001 % W.PEAK)
Input/Output terminal ..	Remote control/Phones jack
Rated power output	9 mW+9 mW
Power source	
DC IN jack (4-5.1V)	
:	Specially provided AC adaptor
:	Car battery adaptor (sold separately, DC-C70)
DC 1.5V :	Commercially sold AA alkaline battery (LR-6) $\times 1$
DC 1.2V :	Specially provided rechargeable battery (NB-150) $\times 1$
	(Charging time : About 3 hours)

Battery life (Fully charge, with "PS on" setting ON)	
Specially provided rechargeable battery (NB-150) $\times 1$	Approx. 7 hours
Commercially sold AA alkaline battery (LR-6) $\times 1$	Approx. 8 hours
• At 0.5mW+0.5mW output (32 Ω load) .	
• Standard value during continuous use/charging in an temperature of 25°C.	
• Time of use may vary depending on battery maker, battery type, use environment, and temperatute.	
• Time will be shorter when "PS off" Mode is set.	
Dimensions (not including protruding parts)	
W :99 mm (3-7/8")	
H :17 mm (11/16")	
D :75 mm (2-15/16")	
Weight (Net)	115g (0.25 lb)
	not including the accessory rechargeable batter
	140g (0.31 lb)
	including the accessory rechargeable battery



1. KENWOOD follows a policy of continuous advancements in development. For reason specifications may be changed without notice.
2. The full performance may not be exhibited in an extremely cold location (under a water-freezing temperature).

In compliance with Federal Regulations, following are reproductions of labels on, or inside the product relating to laser product safety.

KENWOOD-Corp. certifies this equipment conforms to DHHS Regulations No. 21 CFR 1040. 10, Chapter 1, Subchapter J.

DANGER : Laser radiation when open and interlock defeated.
AVOID DIRECT EXPOSURE TO BEAM.

CONTENTS / ACCESSORIES


Contents

SPECIFICATIONS	Top cover
CONTENTS / ACCESSORIES	2
CONTROLS	3
DISASSEMBLY FOR REPAIR	4
CIRCUIT DESCRIPTION	5


PC BOARD	9
SCHEMATIC DIAGRAM	11
EXPLODED VIEW	15
PARTS LIST	17

Accessories


AC adapter (1) *
(W09-)

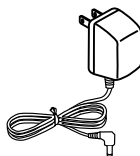


Batteries : NB150 (1)
(W09-1267-05)




Carrying case (1)
(W01-0938-05)

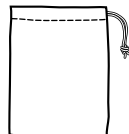


Stereo headphone (1) *
(W01-0963-05)

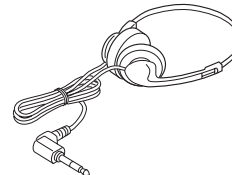

Remotcon (1)
(A70-1258-05)

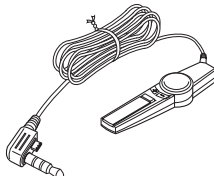

Stereo headphone (1) *
(W01-)

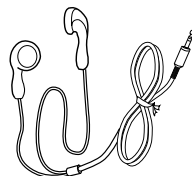

* Refer to parts list on page 17.

Caution

Beware of condensation

When water vapor comes into contact with the surface of cold material, water drops are produced.

If condensation occurs, correct operation may not be possible, or the unit may not function correctly.

This is not a malfunction, however, and the unit should be dried.
(To do this, turn the POWER switch ON and leave the unit as it is for several hours.)

Be especially careful in the following conditions:

- When the unit is brought from a cold place to warm place, and there is a large temperature difference.
- When a heater starts operating.
- When the unit is brought from an air-conditioned place to a place of high temperature with high humidity.
- When there is a large difference between the internal temperature of the unit and the ambient temperature, or in conditions where condensation occurs easily.

Resetting the unit

This system uses a microcomputer so it may malfunction due to external noise or interference. In such a case, unplug the power cord and remove the batteries, then plug the power cord again and insert the batteries again.

Troubleshooting

Symptom	Cause	Remedy
Unit fails to turn ON.	• The disc holder is not securely closed. • The battery is depleted. • HOLD status is engaged.	• Close disc holder securely. • Charge the battery. • Deactivate HOLD status.
There is no sound.	• The volume is at minimum level. • The remote control or headphones are disconnected.	• Increase the volume. • Insert plug securely.
The unit does not respond to key operation.	• HOLD status is engaged. • The battery is depleted. • The remote control or headphone plug is not securely inserted. • The disc holder is not securely closed.	• Deactivate HOLD status. • Charge the battery. • Insert plug securely. • Close disc holder securely.
Sound skips.	• The disc is scratched or damaged or the recording is not good. • The unit is in a place where there is excessive vibration.	• Replace the MD. • Move the unit to a place where there is little vibration or set to "PS off".
Battery does not charge.	• You are using commercial rechargeable battery. • The unit has become hot because of exposure to direct sunlight etc. • You are using another AC adaptor than the accessory adaptor. • The AC adaptors has become disconnected.	• Use the special rechargeable battery (NB-150) • Wait until the unit has cooled to normal temperature. • Use the accessory AC adaptor. • Connect the AC adaptor securely.


Meaning of display messages

Message	Meaning	Action
"noDISC"	• There is no MD in the unit.	• Insert a MD into the unit.
"BLANK "	• Nothing is recorded on this MD.	• Replace the disc with a prerecorded MD when playing it back.
"ERROR "	• The *UTOC contents are faulty. • The disc is scratched or damaged, so playback is not possible.	• Replace the MD. • Replace the MD.


*UTOC: A recordable MD has an area for recording so-called UTOC (User's Table of Contents) data. The UTOC contains number of tracks, playing time, written data, and other rewritable information.

CONTROLS

Main Unit

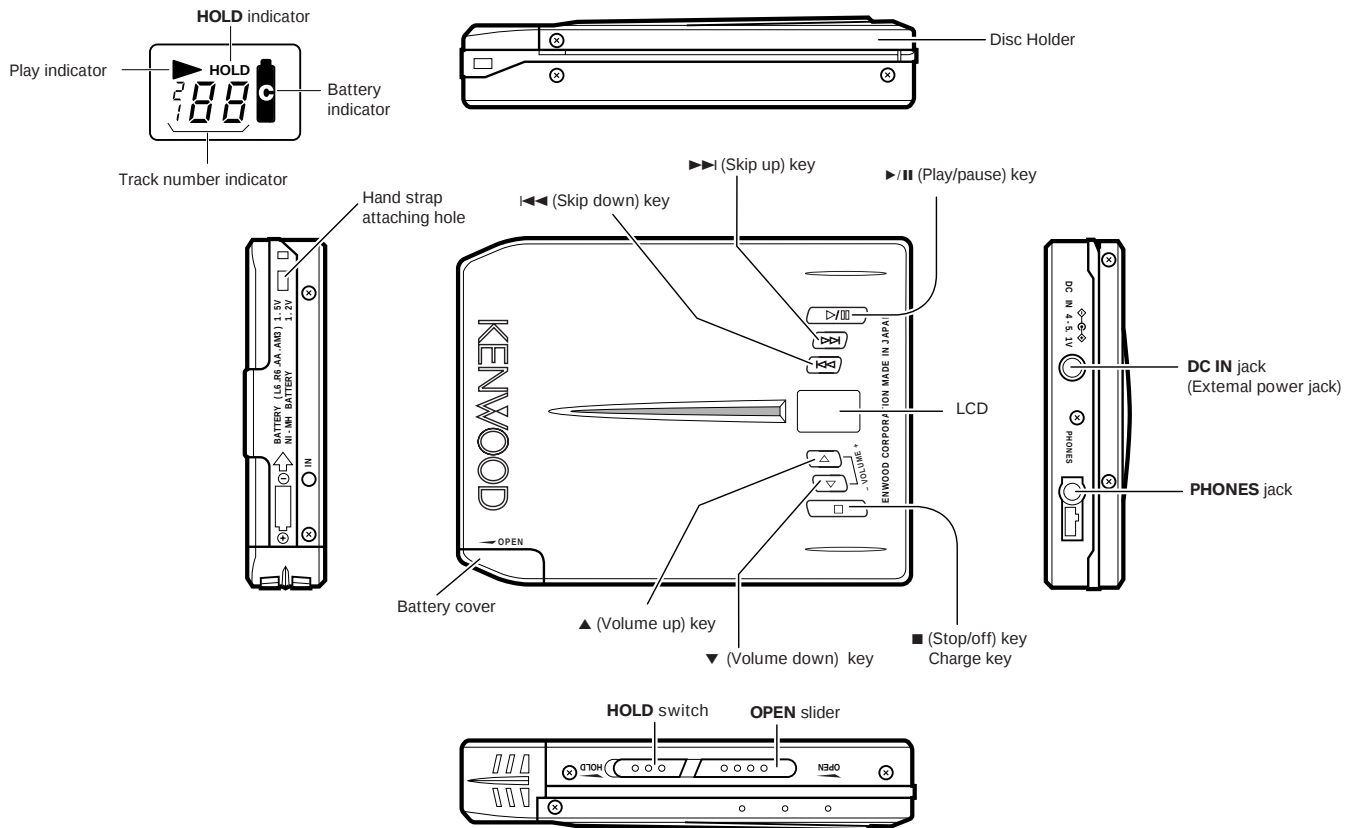

Remote Control

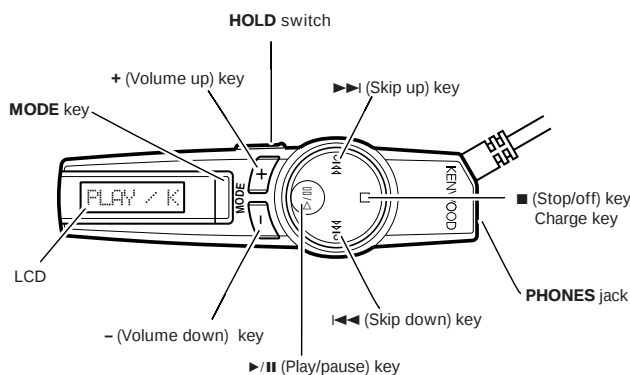

MODE key (Only by remote control operation)

Use this key to set playback-related features and other convenient functions. Please also read "Playback (Application)" and "Convenient functions" for details.

The mode changes each time the MODE key is pressed.

- ① Fast forward/fast reverse (search)
- ② Changing the display mode
- ③ Play Mode
- ④ Changing the tone (BASS BOOST)
- ⑤ Original display


When the MODE key is held depressed for more than 2 seconds:

The mode changes each time the MODE key is pressed.

- ① AUTO PLAY
- ② AUTO POWER SAVE
- ③ Operating tone (Beep)
- ④ Original display

● To change one of the above set-ups after returning to the original display, restart from the step of pressing and holding the MODE key for more than 2 seconds.

Using the Clip

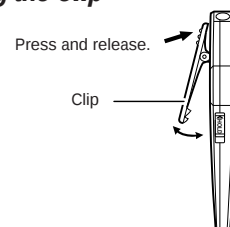


● Clip the remote control unit to the edge of your bag or pocket.

DMC-K3

DISASSEMBLY FOR REPAIR


How to Remove Case

1. Remove 7 screws(①).
2. Slide the case to the opposite side of the battery case(②).

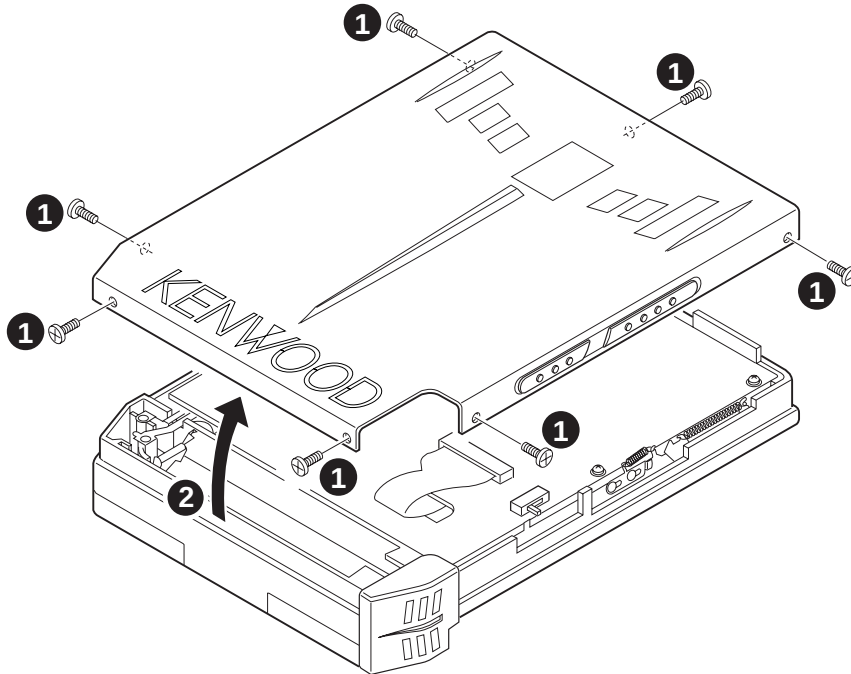

How to Check PCB


3. Remove 7 screws(③x5, ④x2) and unsolder the corner of pcb(⑤).
4. Connect the ground wire to the LCD mounting hardware and the frame of the unit(⑥).
5. Fix the switch 1 (ON mode) by the tape(⑦). And check the unit with standing it.

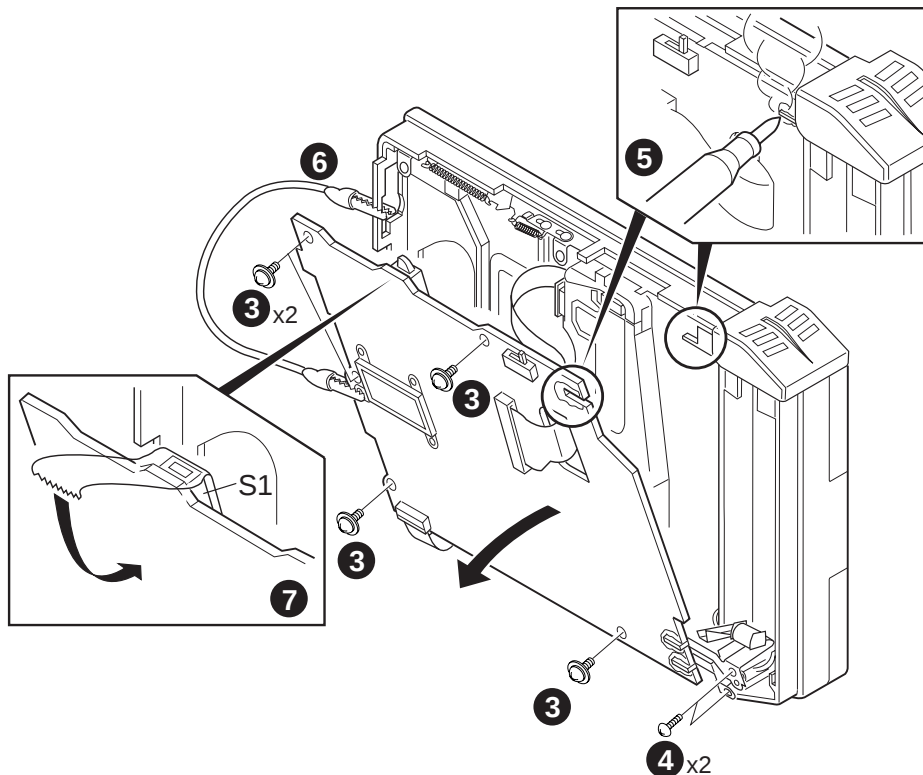

CIRCUIT DESCRIPTION

1. Main microprocessor : uPD784036GC831 (X33 : IC5)

1-1 Microprocessor periphery block diagram(X33)

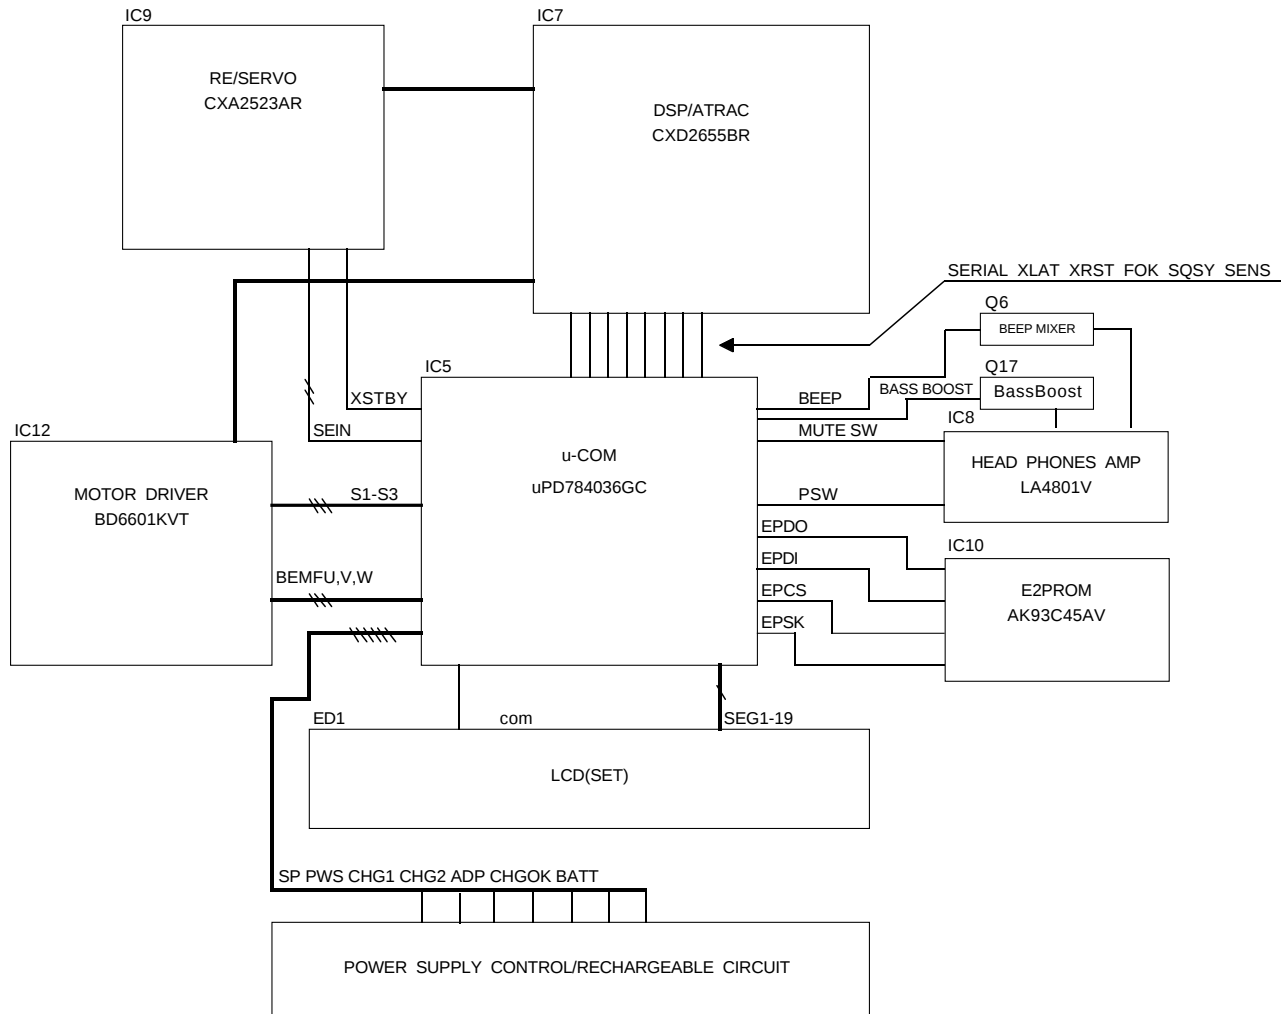

1-2 Pin description

Pin No.	Name	I/O	Description	
			Function	H/L
1	XLAT	O	DSP IC (CXD2655BR) LATCH signal	
2	XRST	O	DSP IC (CXD2655BR) HARD RESET signal	
3	XSTBY	O	RF/SERVO IC (CXA2523AR) STAND BY signal	
4	LDON	O	PICK UP LASER on/off signal	L: LIGHTING H: NON LIGHTING
5	BEEP	O	BEEP output/ to HP AMP	
6	BASS BOOST	O	Analog bass boost control	L: BOOST ON H: BOOST OFF
7	RESET	—	μ-com RESET	
8	VDD	—	μ-com +power supply	
9	X2	O	μ-com SYSTEM CLOCK OSC port (out)	
10	X1	I	μ-com SYSTEM CLOCK OSC port (in)	
11	VSS	—	μ-com GND	
12	LCD DATA	O	LCD remocon display data serial output	
13	BEMFW	I	SLED MOTOR comparator signal(W)	
14	BEMFV	I	SLED MOTOR comparator signal(V)	
15	BEMFU	I	SLED MOTOR comparator signal(U)	
16~18	S1~3	O	SLED MOTOR control signal for DRIVER input port	
19	NC	O	—	

CIRCUIT DESCRIPTION

Pin No.	Name	I/O	Description	
			Function	H/L
20	SP	O	SYSTEM POWER port DSP IC (CXD2655BR) RF/SERVO IC (CXA2523AR) Motor Driver/HP amp VCC2 power supply	H: ON L: OFF
21	CHG1	O	Rechargeable circuit control signal (SET UP POWER SUPPLY)	H: RECHARGEABLE L: NORMAL
22	CHG2	O	Rechargeable circuit control signal (START RECHARGEABLE)	H: RECHARGEABLE L: NORMAL
23,24	TEST0,1	I	Test mode setting	TEST1/0 HH: TEST1 HL: TEST2/3 LH: TEST4
25~43	SEG19~1	O	Set's LCD segment output 19~1	
44	NC	O	—	
45	VSS	—	μ-com GND	
46	TEST	—	μ-com TEST port (CONNECT GND)	
47	COM	O	Set's LCD COMMON	
48	EPSK	O	E2PROM CLOCK output	
49	PW SW	O	HP amp power supply (CONNECT HP. AMP POWER SUPPLY PORT)	H: ON L: OFF
50	MUTE SW	O	HP amp mute control	L: MUTE ON H:MUTE OFF
51	PWS	O	DRAM/LCD remocon power supply port	H: ON L:OFF
52	EPCS	O	E2PROM LATCH signal	
53	EPDI	O	E2PROM DATA signal	
54	EPDO	I	E2PROM DATA signal	
55	VDD	—	μ-com +power supply	
56	KEY0	I	Set's key input	TAKE IN A/D
57	KEY1	I	LCD remocon key input	TAKE IN A/D
58	ADP	I	Adaptor DC detector	TAKE IN A/D
59	CHGOK	I	Rechargeable battery detector	TAKE IN A/D
60	BATT	I	Battery DC input	TAKE IN A/D
61	SEIN(REVERSE)	I	SLED ERROR signal (REVERSE)	TAKE IN A/D
62	SEIN(FORWARD)	I	SLED ERROR signal (FORWARD)	TAKE IN A/D
63	ADON	O	AVREF voltage output	
64	AVDD	—	μ-com A/D power supply	
65	AVREF1	—	μ-com A/D reference voltage input	
66	AVSS	—	μ-com A/D GND	
67,68	NC	O	—	
69,70	AVREF2,3	—	μ-com D/A reference voltage input	
71	JTYPE	I	—	H: EXCEPT JAPAN L:JAPAN
72	HOLD	I	HOLD SW	
73	XINT	I	DSP IC (CXD2655BR) XINT EDGE intercept input	H: L: ↓ EDGE INTERCEPT
74	SQSY	I	DSP IC (CXD2655BR) ADIP SYNC intercept input	H: L: ↓ EDGE INTERCEPT
75	LID SW	I	LID OPEN SW	H: CLOSE L:OPEN
76	SCLK	O	DSP IC (CXD2655BR) SERIAL CLOCK input	
77	W.UP	I	μ-com WAKU UP input EDGE intercept	H: L: ↓ EDGE INTERCEPT
78	SENS	I	DSP IC (CXD2655BR) SENSE signal	
79	SRDT	I	DSP IC (CXD2655BR) SERIAL DATA signal	
80	SWDT	O	DSP IC (CXD2655BR) SERIAL DATA signal	

CIRCUIT DESCRIPTION

1-3 Voltage matrix key (u-COM pin 56, 57)

SET 6KEY		PIN 56 KEY0	
Port voltage [V]	0	0.4	0.8
Key function	▶/II	■	◀◀
Port voltage [V]	1.6	2	2.4
Key function	VOL.DOWN	VOL.UP	KEY OFF

REMOCON 8KEY		PIN 57 KEY1	
Port voltage [V]	0	0.21	0.46
Key function	▶/II	■	▶▶
Port voltage [V]	1	1.6	1.9
Key function	VOL.DOWN	MODE	HOLD
Port voltage [V]	2.57	2.8	
Key function		Non remocon	

2. TEST MODE

- * Test mode I is required when disassemble or replace the laser pickup and MD mechanism.
- * Test mode I and II are required when replace the E2PROM.
- * Need the remote control for adjustment procedure.

How to Reset the Unit.

- * Connect the AC adapter to the wall outlet with pressing <SKIP> key.
- * Contents of initialization.

Volume	VOL 10
Repeat	OFF
Bass boost	BOOST 1
Remocon mode	DISC/TRACK(title mode)
Auto Play	OFF
Resume TNO	TNO[1]
Auto power save	ON
Beep	ON
Display in Remocon	[ENG]
Display in unit	[En]

Power off after display shows for 2 seconds

2-1 TEST MODE I(Adjusting Mode)

- * Contents(to memorize the adjustment result to E2PROM)
 - 1) EF Balance(automatic/manual)
 - 2) Focus Bias(automatic/manual)
- Note:Automatic adjustment only in this manual

2-1-1 Setting

- 1) Connect the #24(P_TEST1) and 23(P_TEST0) ports of IC5 to 2.8v(VDD) port. Next to AC adapter.
Mode is STOP.
Remote cont [TEST1]
Unit [o1]
- 2) Press the SKIP UP key. To memorized the proper value of FE balance automatically. Manual adjustment if press the SKIP DOWN key.

2-1-2 Automatic FE Balance and FOCUS Bias

Adjustment

- 1) The FE balance setting value of the default starts a servo by the value which is memorized in E2PROM. Incidentally, there are 3 kinds of memory area(high/Low reflection Pit/Low reflection groove)which store a balance setting value E2PROM. At the time of automatic adjustment this 3kinds of areas are used appropriately according to a disc.
 - * There is a setting range of 32 steps(00h-1Fh) in the balance setting value. The default value are

High reflection	51h
Low reflection	10h (pit)
Low reflection	90h (groove)

- 2) Display shows the following if automatic adjustment proceeds.
Remote cont [WAIT O] --- O means in operation mode.

Unit [o1]

- 3) Adjustment is over if loading the pre recorded disc. In case of the recordable disc, the servo will be "03" mode. Read the TOC in lead area and read the header and access lead -in area in CPLAY mode
Remote cont [WAIT O]
Unit [o1]
- 4) Proceed pit area adjustment after TOC read if loading the recordable disc. Change to focus bias check after TOC read if loading the pre recorded disc.
Remote cont [WAIT O]
Unit [o1]
- 5) Change to FOCUS Bias step after pit area adjustment if loading the recordable disc.
Remote cont [WAIT O]
Unit [o1]

2-1-3 Focus Bias Check

- 1) The Focus bias will be adjusted automatically at the focus bias points(+16,0,-16)
Remote cont [*80 OO] left 2 figures: bias setting value +80h right 3 figures: C1 error rate(OVR;4 figures)
- 2) Display shows setting value+80h. Press the PLAY/PAUSE key to stop Automatic Adjustment.
Remote cont [*80 10] changed value
[TEST 1] the play/pause key is pressed
Unit [o1] changed value
[oo] the play/pause key is pressed

2-2 TEST MODE II (AUDIO SPEC)

- * Item of audio specification(use test disc TDYS1)

- 1) Reference
TNO [2]: 1kHz sinewave,0dB,L &R, Emphasis off


CIRCUIT DESCRIPTION

- 2) Frequency Response
TON[3]: 40Hz sinewave,0dB,L&R,Emphasis off
- 3) Modulation Noise
TON[6]: 20kHz sinewave,0dB,L&R,Emphasis off
- 4) Noise Ratio
TON[7]: 40Hz Infinity Zero,- dB,L&R,Emphasis off
- 5) Channel Separation
TON[8]: 1kHz sinewave,0dB,L,Emphasis off
- 6) Channel Separation
TON[10]: 1kHz sinewave,0dB,R,Emphasis off
- 7) Deemphasis
TON[13]: 16kHz sinewave,-9.04dB,L&R,Emphasis on


2-2-1 Procedures

- 1) Connect #23(P_TEST0) of IC5 to 2.8V(VDD) and #24(P_TEST1) of that to GND. Next Connect AC adapter to the unit.(the unit will be in CPLAY mode after TOC reads)
Remocon [TEST 4]
Unit [o4]
- 2) The unit will be in CPLAY after TOC reading.
Remocon [TOC OK]
Unit [o4]
- 3) Choose and playback TNO-02 on the disc by PLAY/PAUSE key
Remocon [02] playback TNO
Unit [o4]
- 4) Choose and playback every TNO in the above table by PLAY/PAUSE key. TNO will be chosen TNO 02 if repressing the PLAY/PAUSE key after STOP key pressed,
Remocon [03] playback TNO
Unit [o4]

PC BOARD(Component side view)

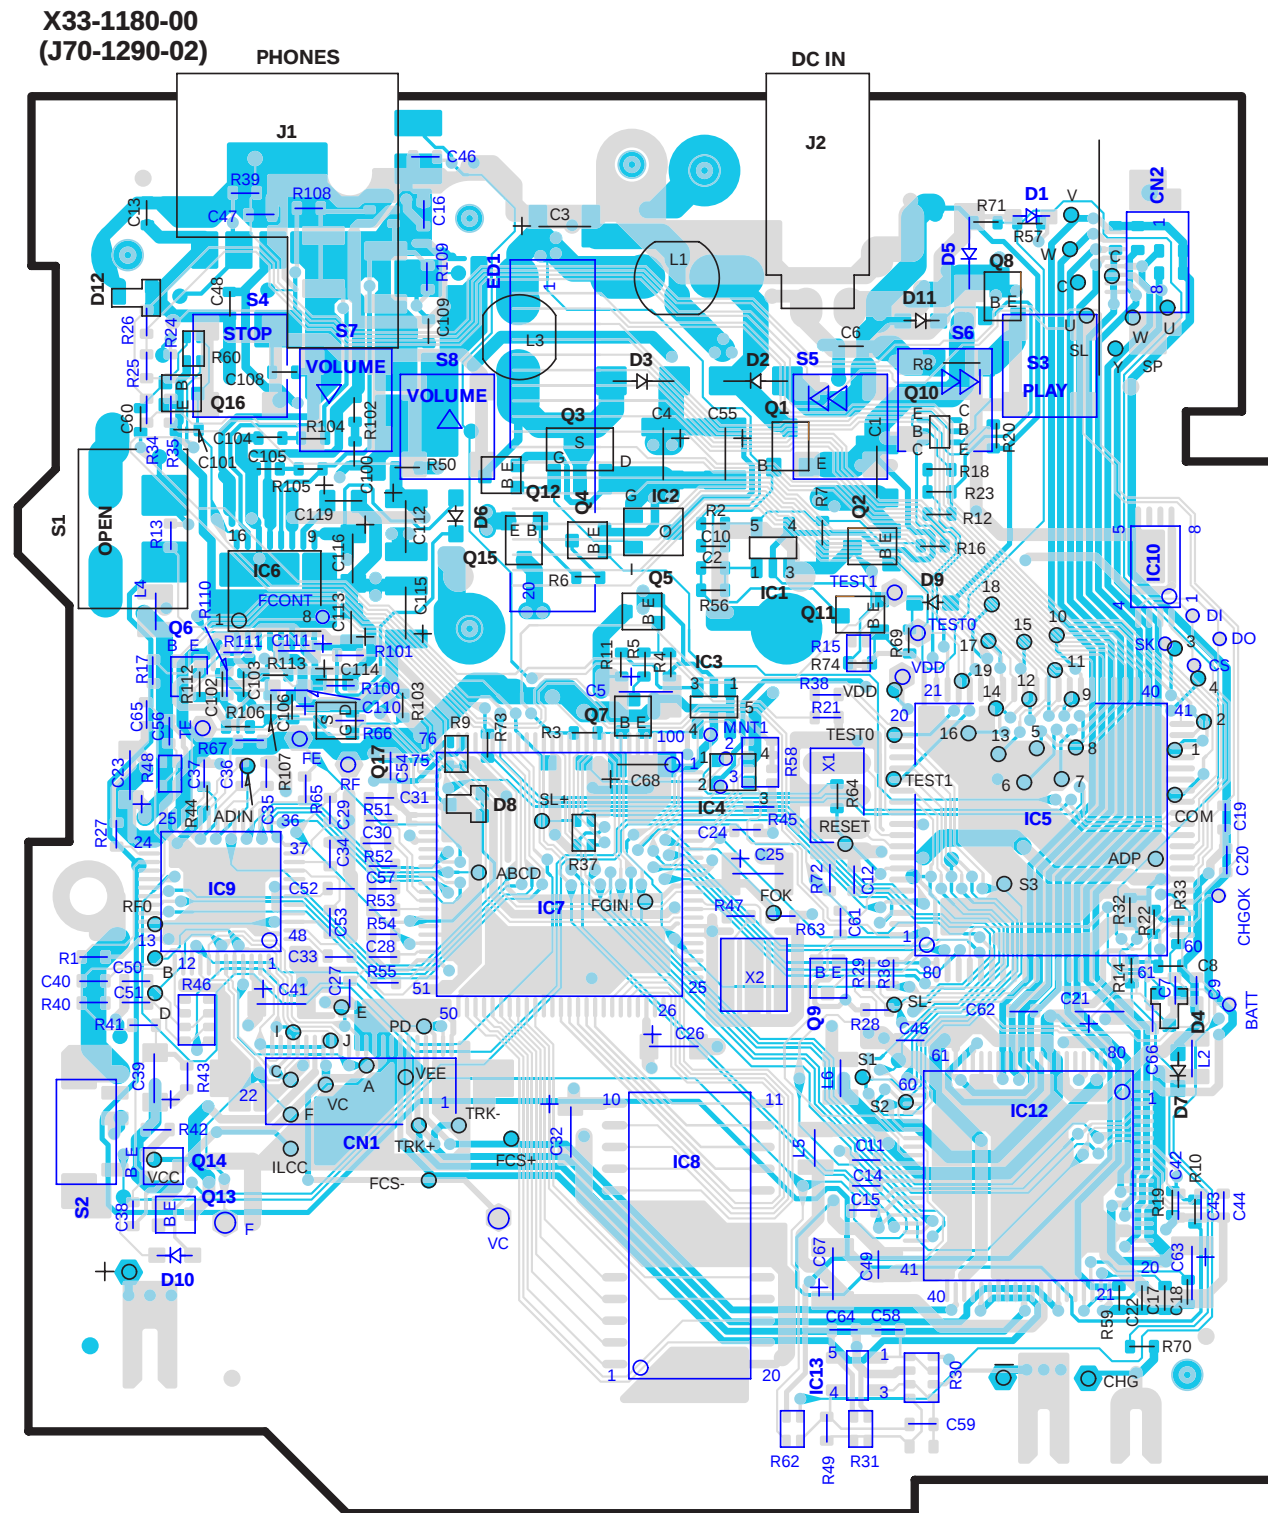

PC BOARD(Foil side view)

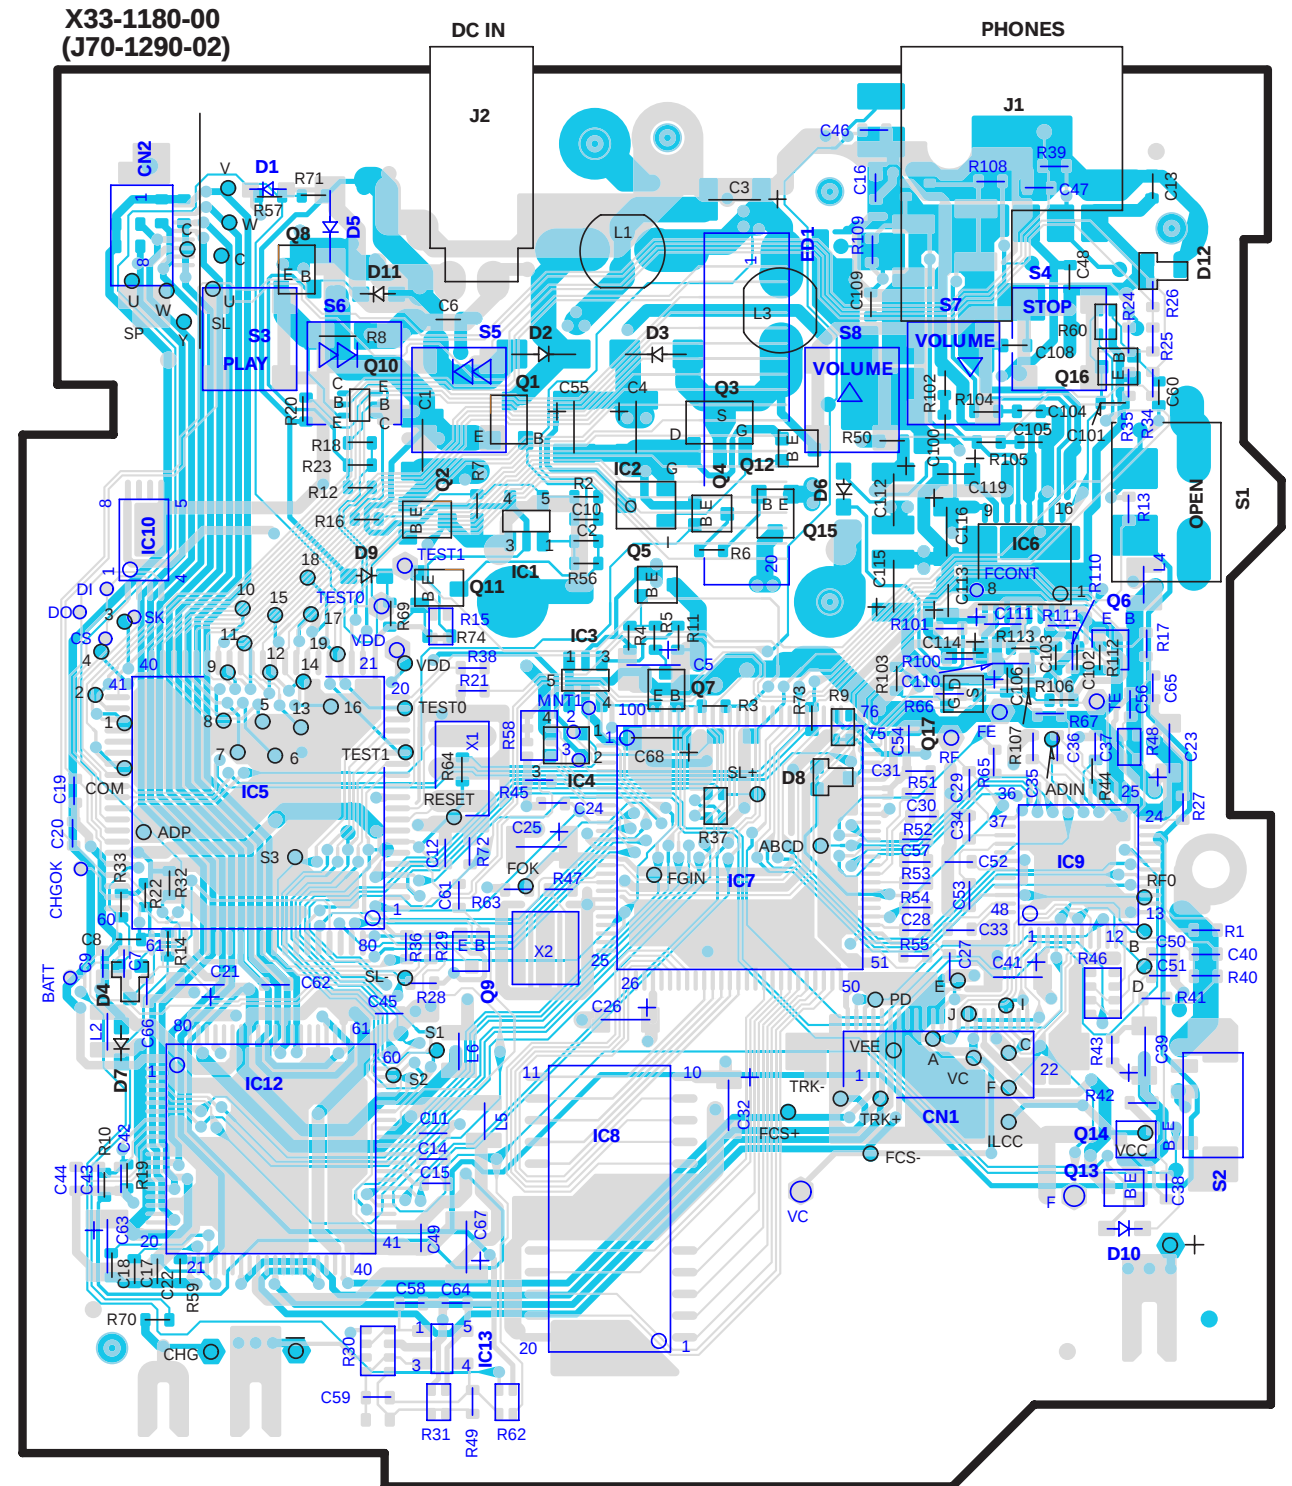

DMC-K3(S)				
DESTINATION	UNIT No.	R28	R29	
COUNTRY ABB.				
JAPAN	J	X33-1180-00	YES	NO
EUROPE	E	X33-1182-71	NO	YES
U.K.	T			

DMC-K3(L)				
DESTINATION	UNIT No.	R28	R29	
COUNTRY ABB.				
JAPAN	J	X33-1180-00	YES	NO

DMC-K3(BL)				
DESTINATION	UNIT No.	R28	R29	
COUNTRY ABB.				
U.S.A.	K	X33-1182-71	NO	YES
EUROPE	E			
U.K.	T			


IC1 : XC6365B103MR
IC2 : XC6383B281MR
IC3 : XC62EP2502MR
IC4 : S-80823ALNP
IC5 : UPD784036GC831
IC6 : LA4801V
IC7 : CXD2655BR
IC8 : MN41V4400TT-07 or
MN41V4400TT-08
IC9 : CXA2523AR
IC10 : AK93C45AV
IC12 : BD6601AKVT
IC13 : NJU7011F

Q1,11,15 : CPH3106
Q2 : DTC323TK
Q3 : XP161A0390PR
Q4,6,9 : DTC114YUA
Q5,14 : 2SA1745(6.7)
Q7 : 2SC4116(Y,GR)
Q8 : CPH3209
Q10 : UMX1N
Q12,16 : DTC114TUA
Q13 : DTA114EUA
Q17 : 2SK3018


D1,7,10,11 : MA111
D2,3,5 : U2FW444N
D4 : RB717F
D8,12 : DA204U
D9 : UDZ10B
ED1 : B38-0172-05


— SIGNAL LINE
— GND LINE
— +B LINE
— -B LINE

MECHA. ASS'Y MDP-03 (X92-2140-10)

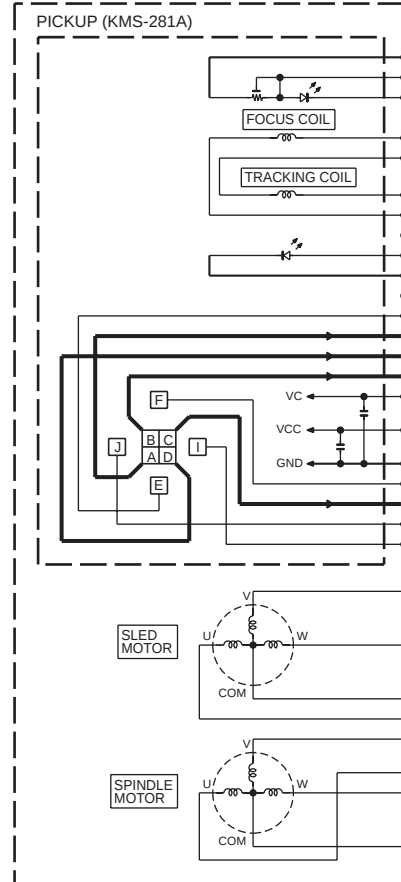

(X33-1180-00)

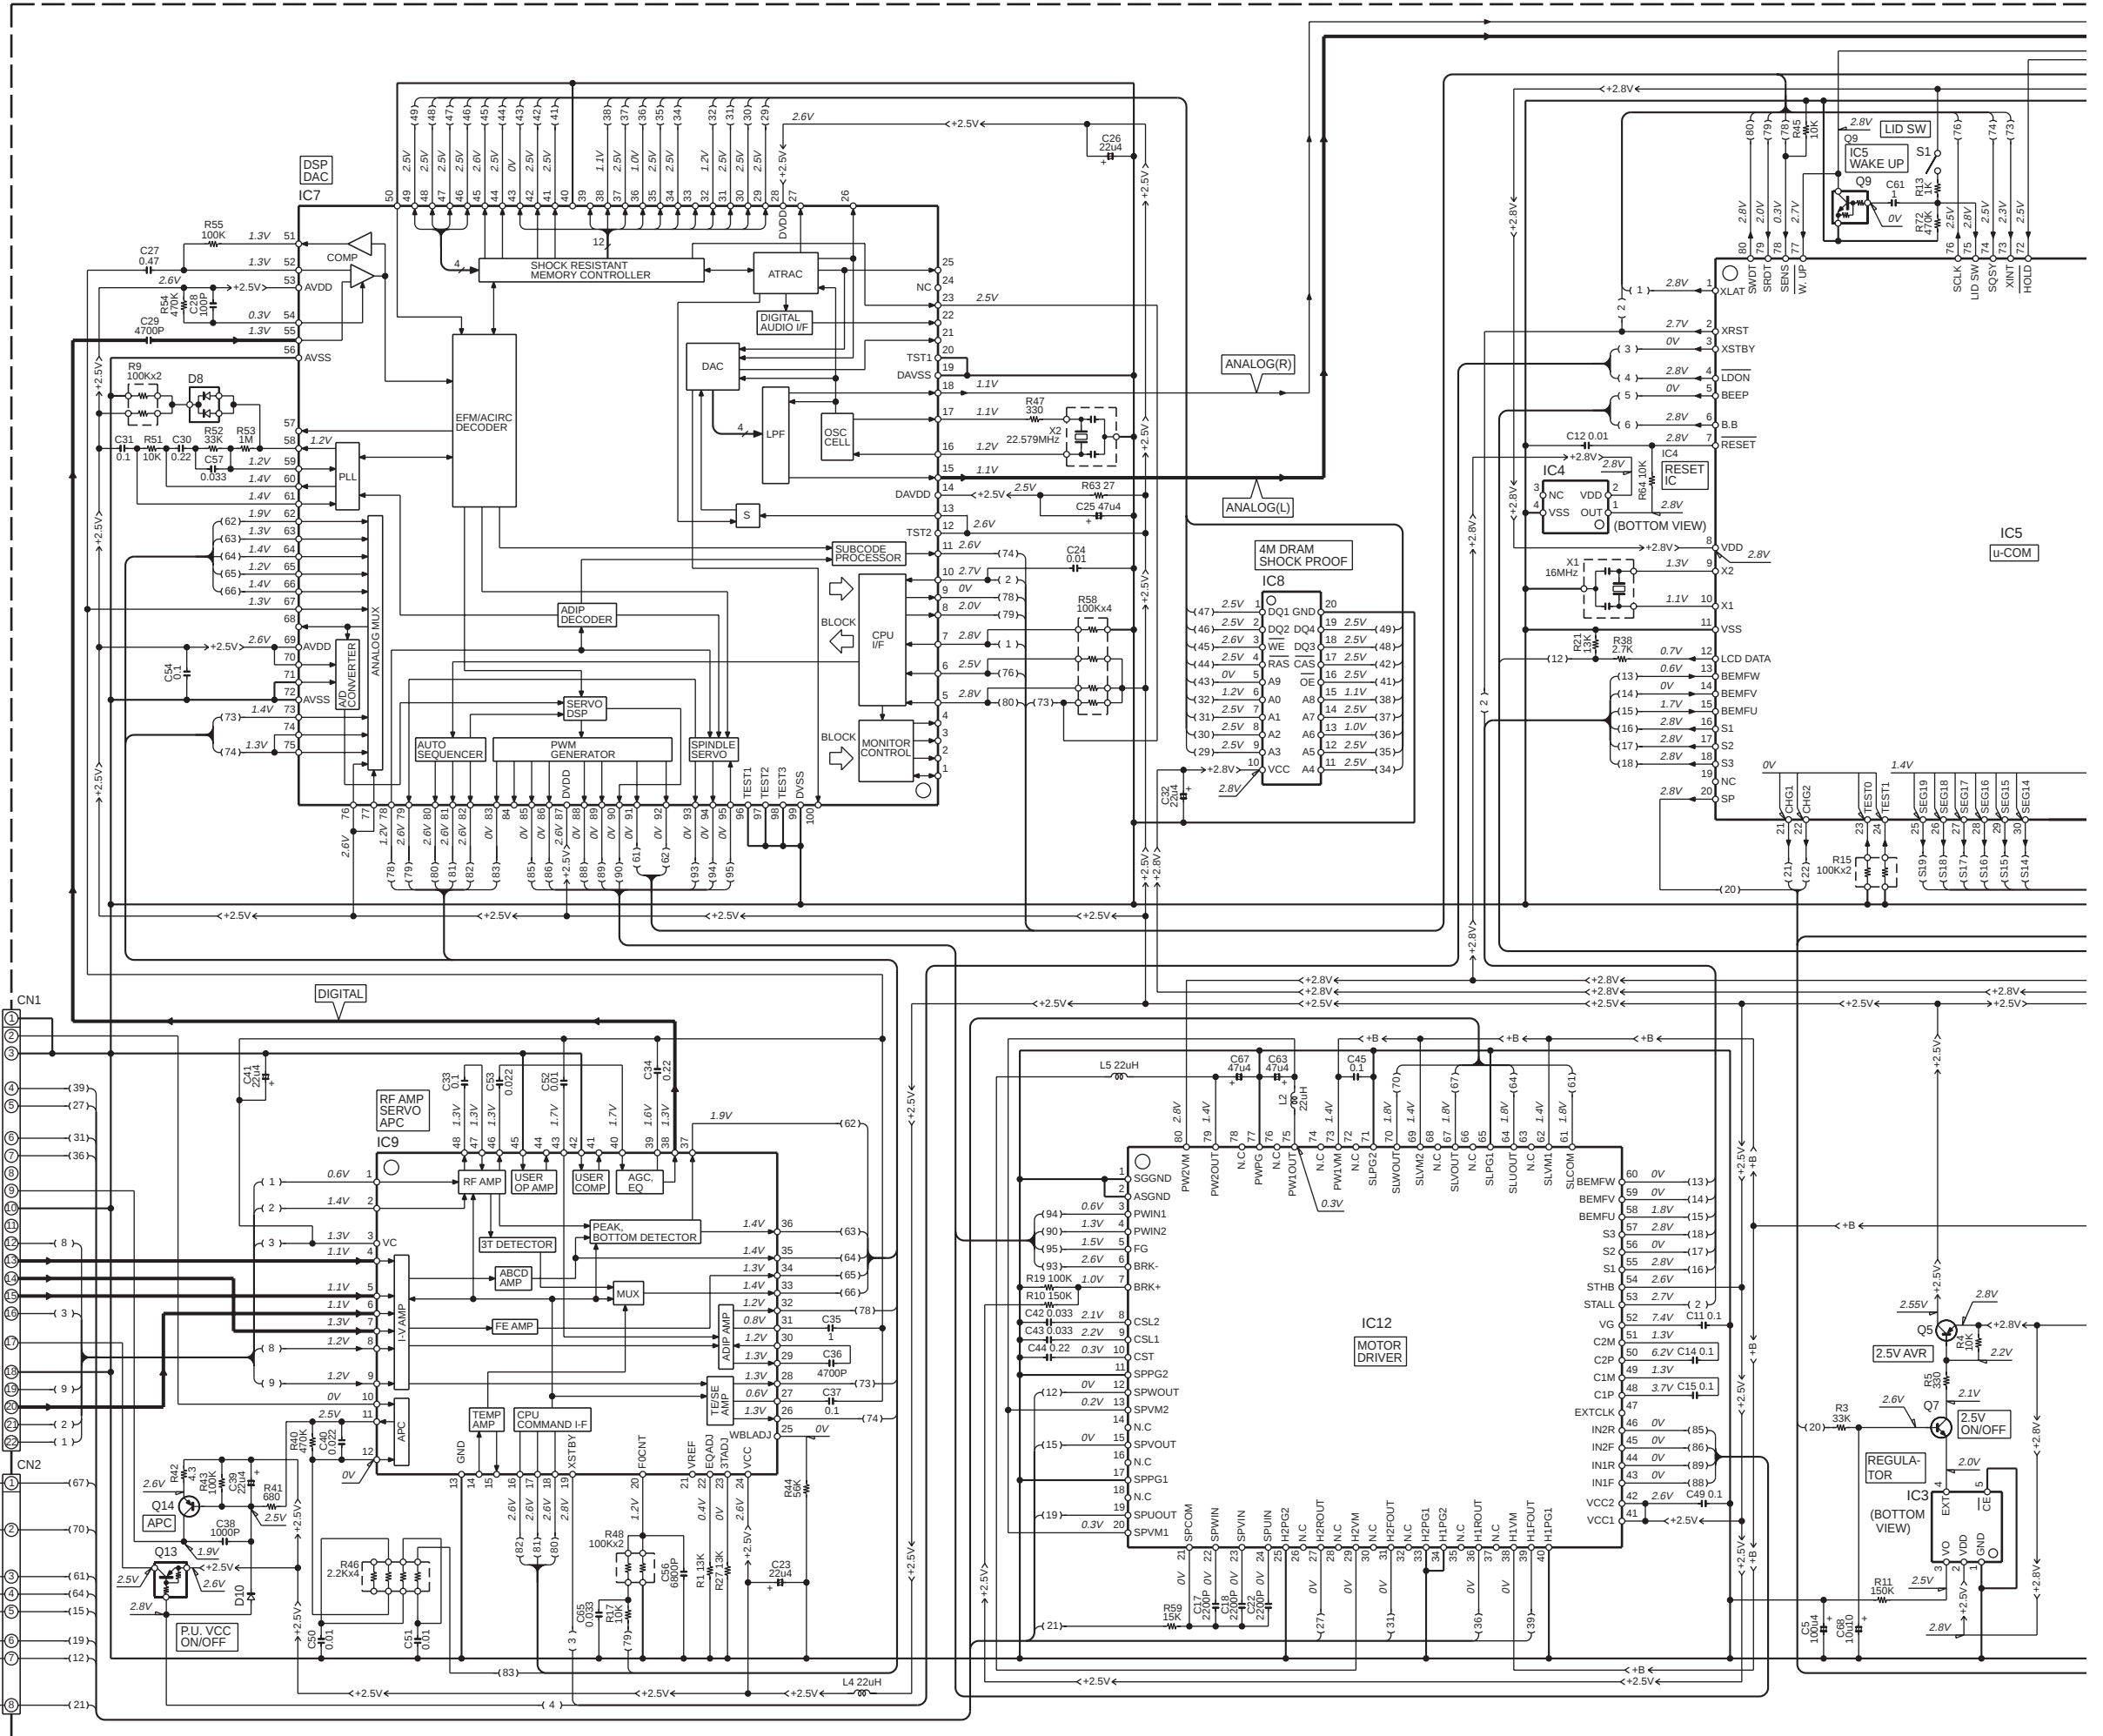


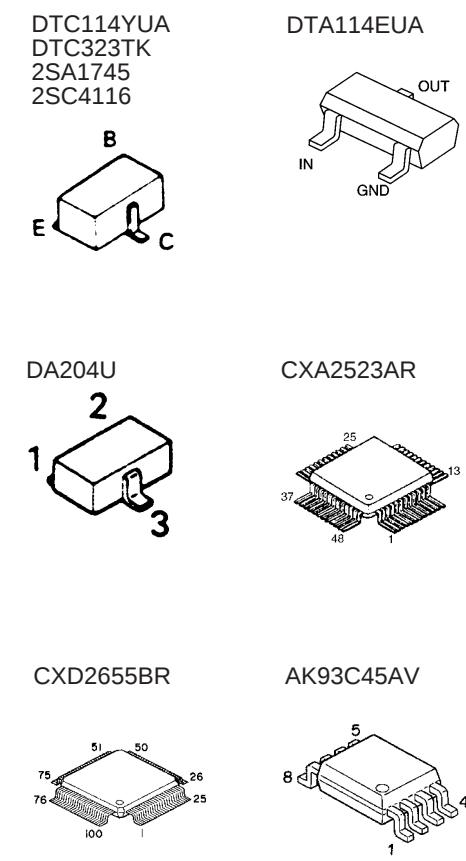

The DC voltage is an actual reading measured with a high impedance type voltmeter. The measurement value may vary depending on the measuring instruments used or on the product.

DMC-K3


EXPLODED VIEW (MECHANISM)

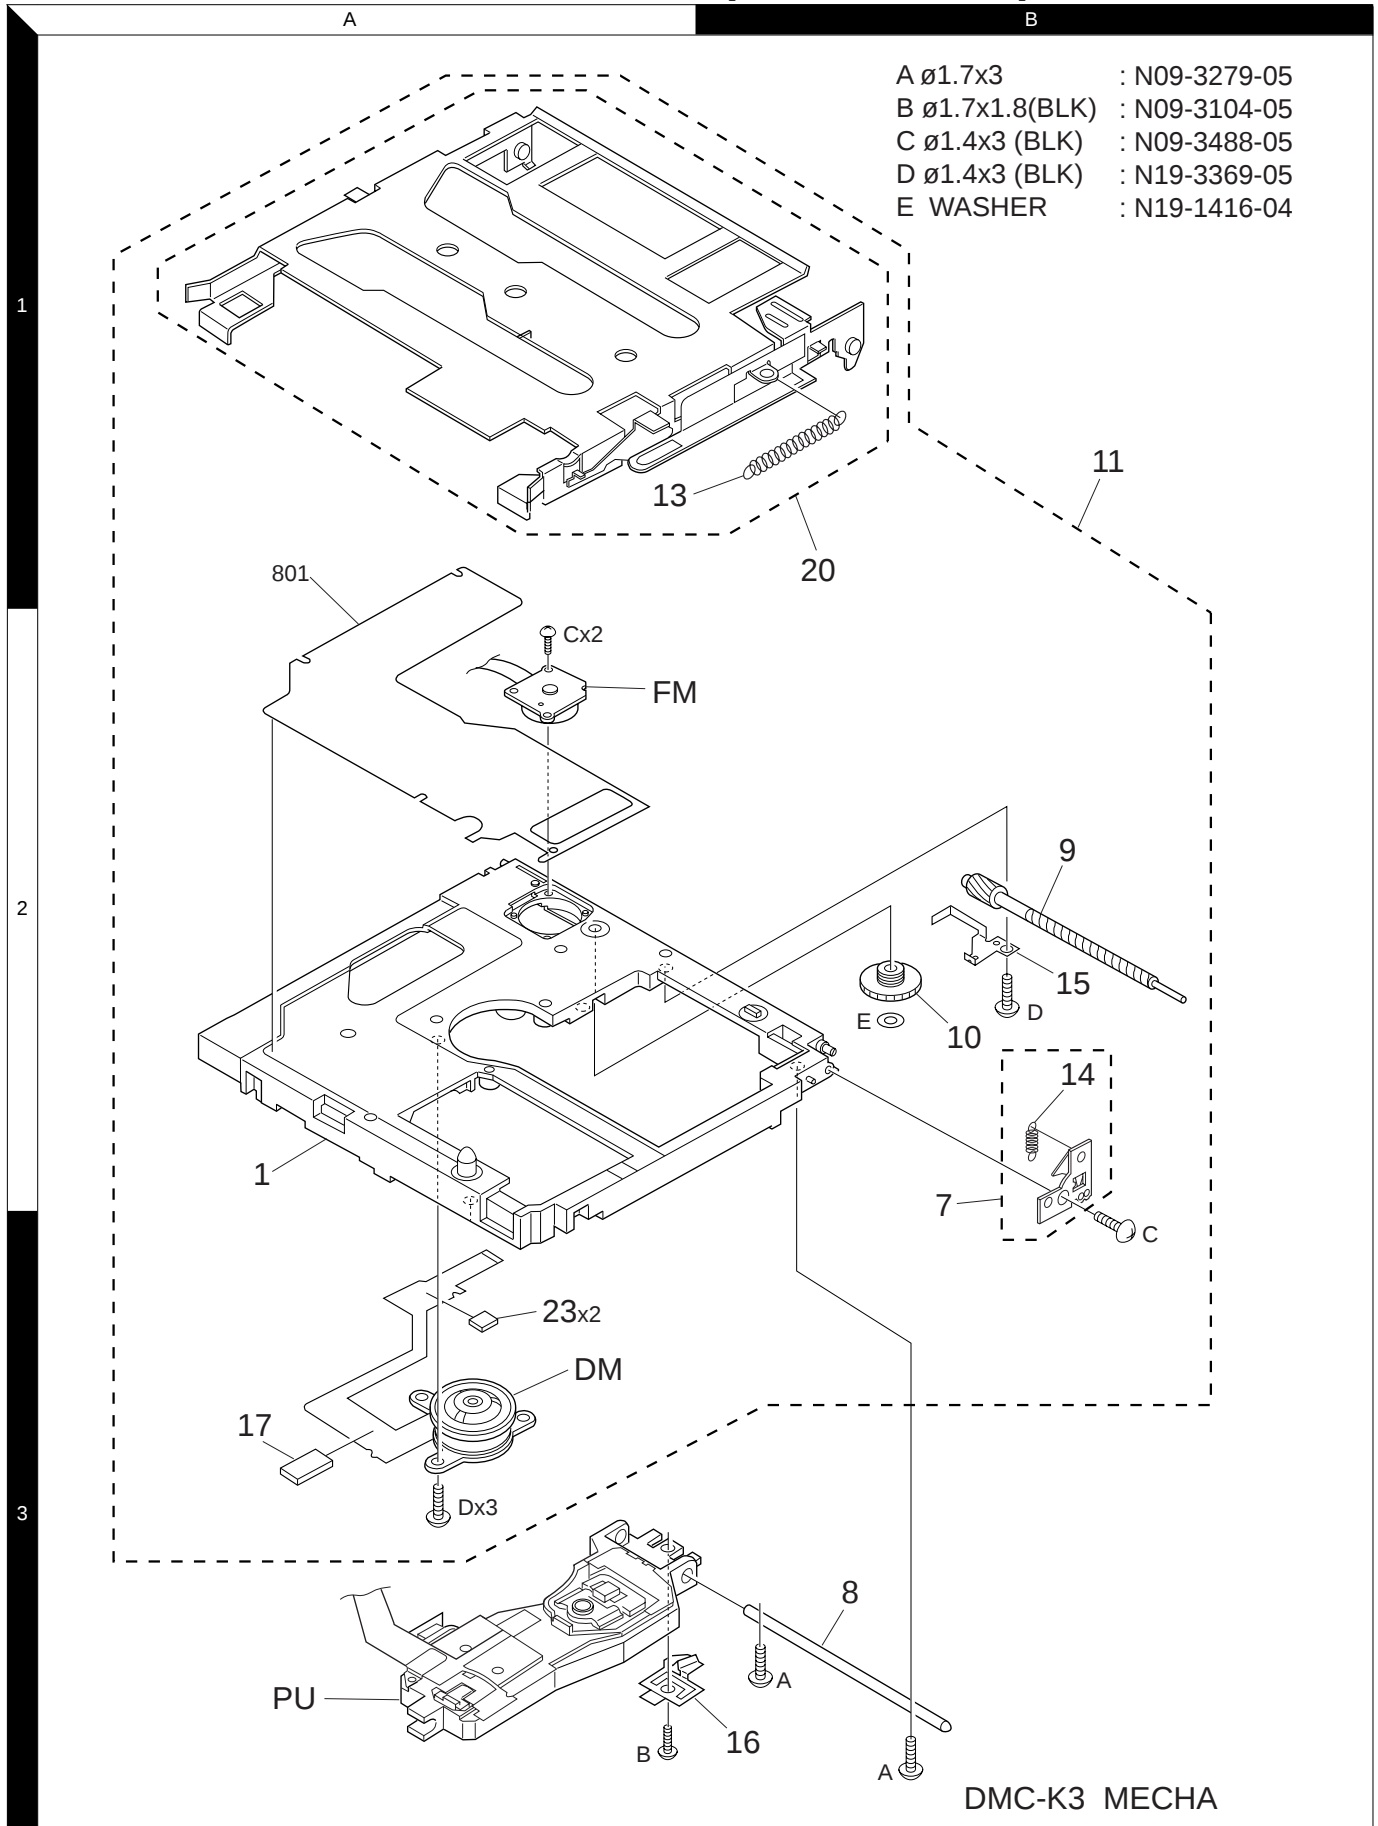

DMC-K3 MECHA

DMC-K3

EXPLODED VIEW (UNIT)

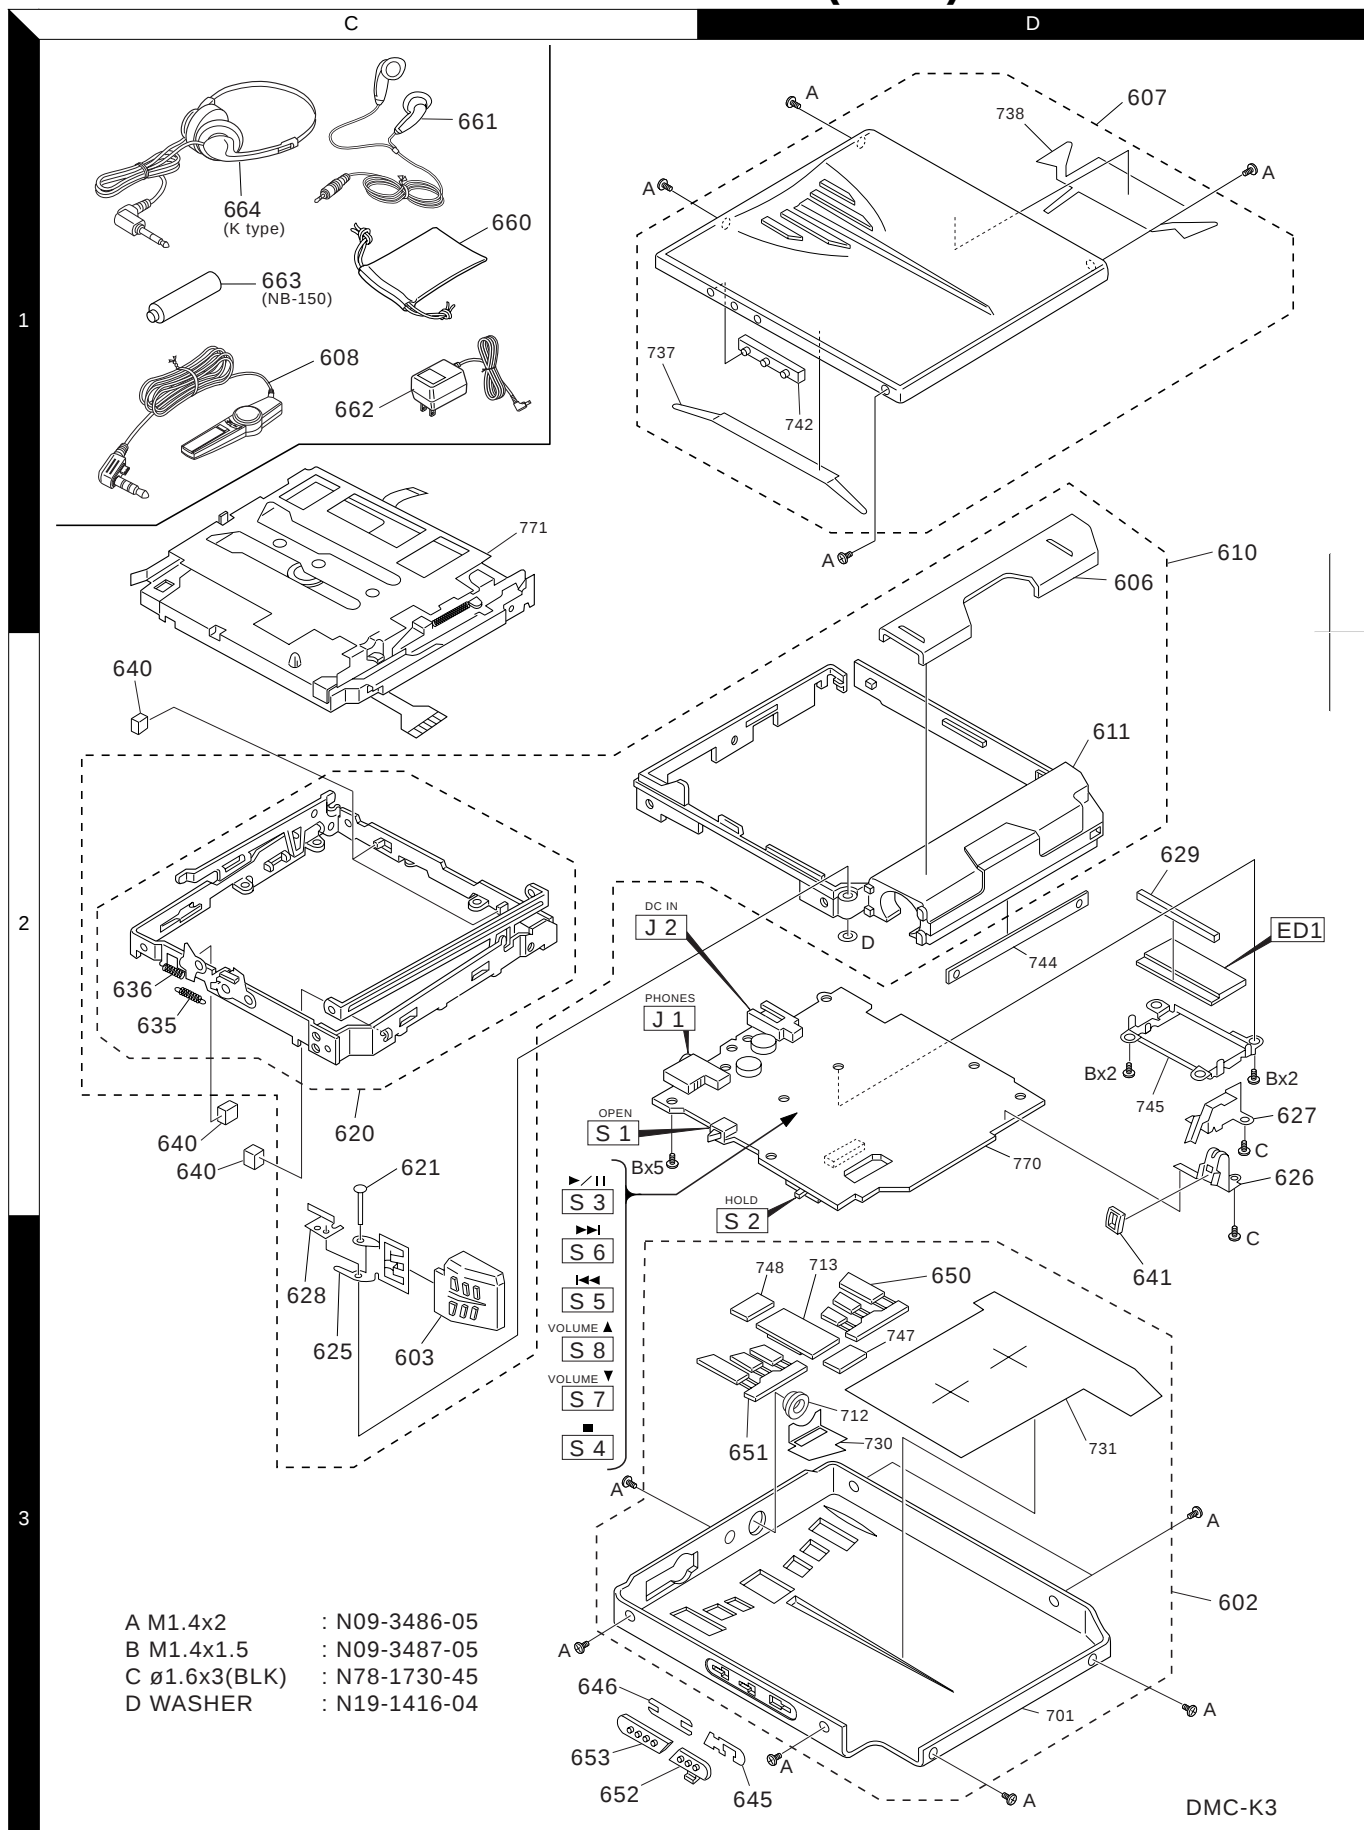

Parts with exploded view numbers larger than 700 are not supplied.

* New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

1

Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
DMC-K3						
602	3D	*	A01-3662-03	METALLIC CABINET ASSY	K1	
602	3D	*	A01-3664-03	METALLIC CABINET ASSY	E1T1	
602	3D	*	A01-3670-03	METALLIC CABINET ASSY	E2T2	
603	3C	*	A09-1118-03	BATTERY COVER	E1T1	
603	3C	*	A09-1119-03	BATTERY COVER	K1E2T2	
606	1D	*	A21-3741-04	DRESSING PANEL	E1T1	
606	1D	*	A21-3750-04	DRESSING PANEL	K1E2T2	
607	1D	*	A53-2123-03	LID ASSY	E1T1	
607	1D	*	A53-2125-03	LID ASSY	K1E2T2	
608	1C	*	A70-1258-05	REMOTE CONTROLLER ASSY		
610	1D	*	B07-2442-02	ESCUTCHEON ASSY	E1T1	
610	1D	*	B07-2444-02	ESCUTCHEON ASSY	K1E2T2	
611	2D	*	B07-2443-01	ESCUTCHEON		
-			B46-0100-50	WARRANTY CARD	E1T1E2	
-			B46-0100-50	WARRANTY CARD	T2	
-			B46-0197-00	QUESTIONNAIRE CARD	K1	
-			B46-0328-03	WARRANTY CARD	K1	
-		*	B60-4092-00	INSTRUCTION MANUAL(EN)	T1K1T2	
-		*	B60-4093-00	INSTRUCTION MANUAL(FR)	E1E2	
-		*	B60-4094-00	INSTRUCTION MANUAL(GE)	E1E2	
-		*	B60-4095-00	INSTRUCTION MANUAL(NE)	E1E2	
-		*	B60-4096-00	INSTRUCTION MANUAL(IT)	E1E2	
-		*	B60-4097-00	INSTRUCTION MANUAL(ES)	E1E2	
620	2C	*	D10-3847-02	ARM ASSY		
621	2C	*	D21-1930-04	SHAFT		
625	3C	*	E23-1776-04	TERMINAL ASSY		
626	2D	*	E23-1780-04	TERMINAL		
627	2D	*	E23-1781-04	TERMINAL		
628	3C	*	E23-1779-04	TERMINAL		
629	2D	*	E29-1642-05	CONDUCTIVE RUBBER		
635	2C	*	G01-4103-04	EXTENSION SPRING		
636	2C	*	G01-4104-04	EXTENSION SPRING		
-			H21-0347-04	PROTECTION SHEET		
-			H25-0336-04	PROTECTION BAG		
-			H25-1588-04	PROTECTION BAG (BATTERY)		
-		*	H50-3198-03	ITEM CARTON CASE	K1	
-		*	H50-3199-03	ITEM CARTON CASE	E1T1	
-		*	H50-3201-03	ITEM CARTON CASE	E2T2	
640	2C	*	J02-1437-04	INSULATOR		
641	3D	*	J19-5962-04	HOLDER		
645	3D	*	J30-0494-04	SPACER		
646	3C	*	J30-0495-04	SPACER		
650	3D	*	K29-7475-03	KNOB	PLAY	
651	3D	*	K29-7476-03	KNOB	SONATA	
652	3C	*	K29-7477-04	KNOB		
653	3C	*	K29-7478-04	KNOB		
660	1C		W01-0938-05	CARRYING CASE		
661	1C	*	W01-0960-05	STEREO HEADPHONE(INNER)	E1T1E2	
661	1C	*	W01-0960-05	STEREO HEADPHONE(INNER)	T2	
662	1C		W08-0658-05	AC ADAPTER	E1E2	
662	1C		W08-0659-05	AC ADAPTER	T1T2	

L : Scandinavia K : USA P : Canada R : Mexico C : China I : Malaysia
Y : PX(Far East, Hawaii) T : Europe E : Europe G : Germany V : China(Shanghai)
Y : AAFES(Europe) X : Australia Q : Russia H : Korea M : Other Areas Δ indicates safety critical components.

* New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

2

Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
662	1C		W09-1251-05	AC ADAPTER	K1	
663	1C	*	W09-1267-05	BATTERY (NI-MH)NB-150		
664	1C	*	W01-0963-05	STEREO HEADPHONE(OPEN)	K1	
CONTROL (X33-1180-00)						
ED1	2D	*	B38-0172-05	LIQUID CRYSTAL		
C1		*	C92-0206-05	TANTAL	22UF	16WV
C2			CK73GB1H471K	CHIP C	470PF	K
C3~5			C92-0170-05	TANTAL	100UF	4WV
C6			CK73GB1C104K	CHIP C	0.10UF	K
C7			CK73GF1A105Z	CHIP C	1.0UF	Z
C8			CK73GB1E103K	CHIP C	0.010UF	K
C9			CK73GF1A105Z	CHIP C	1.0UF	Z
C10			CK73GB1E103K	CHIP C	0.010UF	K
C11			CK73GB1C104K	CHIP C	0.10UF	K
C12, 13			CK73GB1E103K	CHIP C	0.010UF	K
C14, 15			CK73GB1C104K	CHIP C	0.10UF	K
C16			CK73GB1E103K	CHIP C	0.010UF	K
C17, 18			CK73GB1H222K	CHIP C	2200PF	K
C19, 20			CK73GB1E103K	CHIP C	0.010UF	K
C21			C92-0623-05	CHIP TAN	22UF	4WV
C22			CK73GB1H222K	CHIP C	2200PF	K
C23			C92-0623-05	CHIP TAN	22UF	4WV
C24			CK73GB1E103K	CHIP C	0.010UF	K
C25			C92-0619-05	CHIP TAN	47UF	4WV
C26			C92-0623-05	CHIP TAN	22UF	4WV
C27			CK73GF1A474Z	CHIP C	0.47UF	Z
C28			CC73GCH1H101J	CHIP C	100PF	J
C29			CK73GB1H472K	CHIP C	4700PF	K
C30			CK73GF1C224Z	CHIP C	0.22UF	Z
C31			CK73GB1C104K	CHIP C	0.10UF	K
C32			C92-0623-05	CHIP TAN	22UF	4WV
C33			CK73GB1C104K	CHIP C	0.10UF	K
C34			CK73GF1C224Z	CHIP C	0.22UF	Z
C35			CK73GF1A105Z	CHIP C	1.0UF	Z
C36			CK73GB1H472K	CHIP C	4700PF	K
C37			CK73GB1C104K	CHIP C	0.10UF	K
C38			CK73GB1H102K	CHIP C	1000PF	K
C39			C92-0623-05	CHIP TAN	22UF	4WV
C40			CK73GB1E223K	CHIP C	0.022UF	K
C41			C92-0623-05	CHIP TAN	22UF	4WV
C42, 43			CK73GB1C333K	CHIP C	0.033UF	K
C44			CK73GF1C224Z	CHIP C	0.22UF	Z
C45			CK73GB1C104K	CHIP C	0.10UF	K
C46			CK73GB1H102K	CHIP C	1000PF	K
C47, 48			CK73GB1E103K	CHIP C	0.010UF	K
C49			CK73GB1C104K	CHIP C	0.10UF	K
C50~52			CK73GB1E103K	CHIP C	0.010UF	K
C53			CK73GB1E223K	CHIP C	0.022UF	K
C54			CK73GB1C104K	CHIP C	0.10UF	K
C55			C92-0170-05	TANTAL	100UF	4WV
C56			CK73GB1H682K	CHIP C	6800PF	K
C57			CK73GB1C333K	CHIP C	0.033UF	K
C58, 59			CK73GB1E103K	CHIP C	0.010UF	K
C60, 61			CK73GF1A105Z	CHIP C	1.0UF	Z

L : Scandinavia K : USA P : Canada R : Mexico C : China I : Malaysia
Y : PX(Far East, Hawaii) T : Europe E : Europe G : Germany V : China(Shanghai)
Y : AAFES(Europe) X : Australia Q : Russia H : Korea M : Other Areas Δ indicates safety critical components.

PARTS LIST

DMC-K3

* New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

3

Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
C62 C63 C64 C65 C66			CK73GB1C104K C92-0619-05 CK73GB1E103K CK73GB1C333K CK73GF1A105Z	CHIP C 0.10UF K CHIP TAN 47UF 4WV CHIP C 0.010UF K CHIP C 0.033UF K CHIP C 1.0UF Z		
C67 C68 C100, 101 C102, 103 C104, 105			C92-0619-05 C92-0628-05 CK73GF1A105Z CK73GB1H152K CK73GB1A154K	CHIP TAN 47UF 4WV CHIP-TAN 10UF 10WV CHIP C 1.0UF Z CHIP C 1500PF K CHIP C 0.15UF K		
C106 C108, 109 C110, 111 C112 C113, 114		*	CK73GB1C104K CK73GB1E103K C92-0195-05 C92-0619-05 C92-0195-05	CHIP C 0.10UF K CHIP C 0.010UF K TANTAL 4.7UF 4WV CHIP TAN 47UF 4WV TANTAL 4.7UF 4WV		
C115 C116 C119		*	C92-0619-05 C92-0623-05 C92-0195-05	CHIP TAN 47UF 4WV CHIP TAN 22UF 4WV TANTAL 4.7UF 4WV		
CN1 CN2 J1 J2		*	E40-8322-05 E40-8047-05 E11-0381-05 E03-0357-05	FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR MINIATURE PHONE JACK(4P+3P) DC JACK		
L1 L2 L3 L4~6 X1		*	L33-0377-05 L40-2201-89 L33-0377-05 L40-2201-89 L78-0693-05	CHOKE COIL SMALL FIXED INDUCTOR(22UH,K) CHOKE COIL SMALL FIXED INDUCTOR(22UH,K) RESONATOR (16M)		
X2		*	L78-0697-05	RESONATOR (22.57M)		
R1 R2 R3 R4 R5			RK73GB1J133J RK73GB1J332J RK73GB1J333J RK73GB1J103J RK73GB1J331J	CHIP R 13K J 1/16W CHIP R 3.3K J 1/16W CHIP R 33K J 1/16W CHIP R 10K J 1/16W CHIP R 330 J 1/16W		
R6 R7 R8 R9 R10, 11		*	RK73GB1J432J RK73GB1J822J R92-1918-05 RK75GA1J104J RK73GB1J154J	CHIP R 4.3K J 1/16W CHIP R 8.2K J 1/16W METAL GLAZE 0.33 J 1/4W CHIP R 100K J 1/16W CHIP R 150K J 1/16W		
R12 R13 R14 R15 R16		*	RK73GB1J561J RK73GB1J102J RK73GB1J333J RK75GA1J104J RK73GB1J272J	CHIP R 560 J 1/16W CHIP R 1.0K J 1/16W CHIP R 33K J 1/16W CHIP R 100K J 1/16W CHIP R 2.7K J 1/16W		
R17 R18 R19 R20 R21			RK73GB1J103J RK73GB1J392J RK73GB1J104J RK73GB1J241J RK73GB1J133J	CHIP R 10K J 1/16W CHIP R 3.9K J 1/16W CHIP R 100K J 1/16W CHIP R 240 J 1/16W CHIP R 13K J 1/16W		
R22 R23 R24 R25 R26			RK73GB1J154J RK73GB1J122J RK73GB1J272J RK73GB1J302J RK73GB1J432J	CHIP R 150K J 1/16W CHIP R 1.2K J 1/16W CHIP R 2.7K J 1/16W CHIP R 3.0K J 1/16W CHIP R 4.3K J 1/16W		
R27			RK73GB1J133J	CHIP R 13K J 1/16W		

L : Scandinavia K : USA P : Canada R : Mexico C : China I : Malaysia
Y : PX(Far East, Hawaii) T : Europe E : Europe G : Germany V : China(Shanghai)
Y : AAFES(Europe) X : Australia Q : Russia H : Korea M : Other Areas Δ indicates safety critical components.

* New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

4

Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
R29 R30 R31 R32 R33		*	RK73GB1J474J RK75GB1J564J RK75GA1J184J R92-1917-05 RK73GB1J103J	CHIP R 470K J 1/16W CHIP R 560K J 1/16W CHIP R 180K J 1/16W METAL GLAZE 22K F 1/16W CHIP R 10K J 1/16W		
R34 R35 R36 R37 R38		*	RK73GB1J822J RK73GB1J183J RK73GB1J334J RK75GA1J104J RK73GB1J272J	CHIP R 8.2K J 1/16W CHIP R 18K J 1/16W CHIP R 330K J 1/16W CHIP R 100K J 1/16W CHIP R 2.7K J 1/16W		
R39 R40 R41 R42 R43		*	RK73GB1J751J RK73GB1J474J RK73GB1J681J RK73GB1J4R3J RK73GB1J104J	CHIP R 750 J 1/16W CHIP R 470K J 1/16W CHIP R 680 J 1/16W CHIP R 4.3 J 1/16W CHIP R 100K J 1/16W		
R44 R45 R46 R47 R48		*	RK73GB1J563J RK73GB1J103J RK75GB1J222J RK73GB1J331J RK75GA1J104J	CHIP R 56K J 1/16W CHIP R 10K J 1/16W CHIP R 2.2K J 1/16W CHIP R 330 J 1/16W CHIP R 100K J 1/16W		
R49 R50 R51 R52 R53		*	RK73GB1J134J RK73GB1J2R2J RK73GB1J103J RK73GB1J333J RK73GB1J105J	CHIP R 130K J 1/16W CHIP R 2.2 J 1/16W CHIP R 10K J 1/16W CHIP R 33K J 1/16W CHIP R 1.0M J 1/16W		
R54 R55 R56 R57 R58		*	RK73GB1J474J RK73GB1J104J RK73GB1J331J RK73GB1J682J RK75GB1J104J	CHIP R 470K J 1/16W CHIP R 100K J 1/16W CHIP R 330 J 1/16W CHIP R 6.8K J 1/16W CHIP R 100K J 1/16W		
R59 R60 R62 R63 R64		*	RK73GB1J153J RK75GA1J104J RK75GA1J104J RK73GB1J270J RK73GB1J103J	CHIP R 15K J 1/16W CHIP R 100K J 1/16W CHIP R 100K J 1/16W CHIP R 27 J 1/16W CHIP R 10K J 1/16W		
R69 R70 R71 R72 R73			RK73GB1J102J RK73GB1J103J RK73GB1J563J RK73GB1J474J RK73GB1J133J	CHIP R 1.0K J 1/16W CHIP R 10K J 1/16W CHIP R 56K J 1/16W CHIP R 470K J 1/16W CHIP R 13K J 1/16W		
R74 R100, 101 R102 R103 R104, 105		*	RK73GB1J103J RK73GB1J103J RK73GB1J1R0J RK73GB1J104J RK73GB1J4R3J	CHIP R 10K J 1/16W CHIP R 10K J 1/16W CHIP R 1 J 1/16W CHIP R 100K J 1/16W CHIP R 4.3 J 1/16W		
R106, 107 R108, 109 R110, 111 R112, 113			RK73GB1J622J RK73GB1J2R2J RK73GB1J335J RK73GB1J561J	CHIP R 6.2K J 1/16W CHIP R 2.2 J 1/16W CHIP R 3.3M J 1/16W CHIP R 560 J 1/16W		
S1 S2 S3~8		*	S68-0111-05 S62-0062-05 S70-0068-05	PUSH SWITCH SLIDE SWITCH TACT SWITCH		
D1 D2, 3 D4			MA111 U2FWJ44N RB717F	DIODE DIODE DIODE		

L : Scandinavia K : USA P : Canada R : Mexico C : China I : Malaysia
Y : PX(Far East, Hawaii) T : Europe E : Europe G : Germany V : China(Shanghai)
Y : AAFES(Europe) X : Australia Q : Russia H : Korea M : Other Areas Δ indicates safety critical components.

PARTS LIST

HOW TO READ THE PARTS LIST

Destination column has the abbreviation for the sale country and model. Alphabets mean the country. Numerals do the model.

Example: T1 shows DMC-K3 for U.K. market. "T" does all models for U.K.

ABBREVIATION OF MODEL AND MASS PRODUCTION'S DESTINATIONS

MODEL	CNT	Australia	Canada	China	England	Europe	Germany	Korea	Malaysia
ABB.		X	P	C	T	E	G	H	I
DMC-K3(S)	-	-	-	-	T1	E1	-	-	-
DMC-K3(BL)	-	-	-	-	T2	E2	-	-	-
									-
MODEL	CNT	Mexico	PX/AAFES	Russia	Scandinavia	Shanghai	USA	Other area	
ABB.		R	Y	R	L	V	K	M	
DMC-K3(S)	-	-	-	-	-	-	-	-	-
DMC-K3(BL)	-	-	-	-	-	-	K1	-	-

(S): Siliver, (BL): Black

* New Parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

5

Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
D5			U2FWJ44N	DIODE		
D7			MA111	DIODE		
D8			DA204U	DIODE		
D9		*	UDZ10B	ZENER DIODE		
D10, 11			MA111	DIODE		
D12			DA204U	DIODE		
IC1		*	XC6365B103MR	ANALOGUE IC		
IC2		*	XC6383B281MR	ANALOGUE IC		
IC3		*	XC62EP2502MR	ANALOGUE IC		
IC4		*	S-80823ALNP	MOS-IC		
IC5		*	UPD784036GC831	MI-COM IC		
IC6		*	LA4801V	ANALOGUE IC		
IC7		*	CXD2655BR	MOS-IC		
IC8			MN41V4400TT-07	MEMORY IC		
IC8			MN41V4400TT-08	MEMORY IC		
IC9			CXA2523AR	ANALOGUE IC		
IC10			AK93C45AV	MEMORY IC		
IC12		*	BD6601AKVT	ANALOGUE IC		
IC13		*	NJU7011F	MOS-IC		
Q1		*	CPH3106	TRANSISTOR		
Q2			DTC323TK	DIGITAL TRANSISTOR		
Q3			XP161A0390PR	FET		
Q4			DTC114YUA	DIGITAL TRANSISTOR		
Q5			2SA1745(6,7)	TRANSISTOR		
Q6			DTC114YUA	DIGITAL TRANSISTOR		
Q7			2SC4116(Y,GR)	TRANSISTOR		
Q8		*	CPH3209	TRANSISTOR		
Q9			DTC114YUA	DIGITAL TRANSISTOR		
Q10		*	UMX1N	TRANSISTOR		
Q11		*	CPH3106	TRANSISTOR		
Q12			DTC114TUA	DIGITAL TRANSISTOR		
Q13			DTA114EUA	DIGITAL TRANSISTOR		
Q14			2SA1745(6,7)	TRANSISTOR		
Q15		*	CPH3106	TRANSISTOR		
Q16			DTC114TUA	DIGITAL TRANSISTOR		
Q17		*	2SK3018	FET		
MECHANISM (X92-2140-10)						
1		*	A10-3457-03	CHASSIS ASSY		
7		*	D10-3648-14	ARM ASSY		
8		*	D10-3846-04	ROD		
9		*	D13-1908-04	GEAR ASSY		
10		*	D13-1910-03	GEAR		
11		*	D40-1620-01	MECHANISM ASSY		
13			G01-3911-14	EXTENSION SPRING		
14			G01-3912-04	EXTENSION SPRING		
15			G02-1096-04	FLAT SPRING		
16		*	G02-1666-04	FLAT SPRING		
17		*	G16-0926-04	SHEET		
20		*	J19-5699-42	HOLDER ASSY		
23		*	J69-0091-04	ADHESIVE DOUBLE-COATED TAPE		
DM		*	T43-0064-04	MOTOR ASSY		
FM		*	T43-0063-05	DIRECT DRIVE MOTOR		
PU		*	T25-0078-05	OPTICAL PICKUP HEAD		

L : Scandinavia K : USA P : Canada R : Mexico C : China I : Malaysia

Y : PX(Far East, Hawaii) T : Europe E : Europe G : Germany V : China(Shanghai)

Y : AAFES(Europe) X : Australia Q : Russia H : Korea M : Other Areas Δ indicates safety critical components.

PARTS LIST

DMC-K3

DMC-K3

Note:

Component and circuit are subject to modification to insure best operation under differing local conditions. This manual is based on Europe (E) standard, and provides information on regional circuit modification through use of alternate schematic diagrams, and information on regional component variations through use of parts list.

KENWOOD CORPORATION

14-6,Dogenzaka 1-chome, Shibuya-ku, Tokyo, 150-8501 Japan

KENWOOD SERVICE CORPORATION

P.O BOX 22745, 2201 East Dominguez St., Long Beach, CA 90801-5745, U.S.A.

KENWOOD ELECTRONICS CANADA INC.

6070 Kestrel Road, Mississauga, Ontario, Canada L5T 1S8

KENWOOD ELECTRONICS LATIN AMERICA S.A.

P.O BOX 55-2791, Piso 6 plaza Chase, Cl. 47 y Aquilino de la Guardia Panama, Republic de Panama

KENWOOD ELECTRONICS BRASIL LTDA.

Av. Moema, 170-17", Andar-Cobertura "B", Ed. Maximum Service Center, 04077-020 Moema, São Paulo-SP-Brasil

KENWOOD ELECTRONICS U.K. LIMITED

KENWOOD House, Dwight Road, Watford, Herts., WD1 8EB., United Kingdom

KENWOOD ELECTRONICS BELGUM N.V.

Meachelsesteenweg 418, B-1930 Zaventem, Belgium

KENWOOD ELECTRONICS DEUTSCHLAND GMBH

Rembrücker Str. 15, 63150 Heusenstamm, Germany

KENWOOD ELECTRONICS FRANCE S.A.

13 Boulevard Ney, 75018 Paris, France

KENWOOD ELECTRONICS ITALIA S.p.A.

Via G. Sirtori, 7/9 20129, Milano, Italy

KENWOOD IBÉRICA S.A.

Bolivia, 239-08020 Barcelona, Spain

KENWOOD ELECTRONICS AUSTRALIA PTY. LTD.

(A.C.N. 001499 074)

P.O Box 504, 8 Figtree Drive, Australia Centre, Homebush, N.S.W. 2140, Australia

KENWOOD & LEE ELECTRONICS, LTD.

Unit 3712-3724, Level 37, Tower 1, Metroplaza, 223 Hing Fong Road, Kwai Fong N.T., Hong Kong

KENWOOD ELECTRONICS GULF FZE

P.O.Box 61318, Jebel Ali, Dubai, U.A.E.

KENWOOD ELECTRONICS SINGAPORE PTE LTD.

No. 1 Genting Lane #02-02, KENWOOD Building, Singapore, 349544

KENWOOD ELECTRONICS (MALAYSIA) SDN BHD.

#4.01 Level 4, Wisma Academy Lot 4A, Jalan 19/1 46300 Petaling Jaya Selangor Darul Ehsan Malaysia

KENWOOD ELECTRONICS (THAILAND) CO., LTD.

2019 New Pechburi Road, Bangkapi, Huaykwang, Bangkok, 10320 Thailand