



Cisco BroadWorks

Partner Configuration Guide

Yealink W90B IP DECT Phone

April 2021
Document Version 1.2

Cisco® Guide

Notification

BroadSoft Cisco BroadWorks has been renamed to Cisco BroadWorks. You will begin to see the Cisco name and company logo, along with the new product name on the software, documentation, and packaging. During the transition process, you may see both BroadSoft and Cisco brands and former product names. These products meet the same high standards and quality that both BroadSoft and Cisco are known for in the industry.

Copyright Notice

Copyright© 2021 Cisco Systems, Inc. All rights reserved

Trademarks

Any product names mentioned in this document may be trademarks or registered trademarks of Cisco or their respective companies and are hereby acknowledged.

Document Revision History

Version	Reason for Change
1.1	Introduced document for Yealink W90B IP DECT Phone version 130.85.0.15 validation with Cisco BroadWorks Release 22.0.
1.2	Edited and published document.

Table of Contents

1	Overview.....	7
2	Interoperability Status	8
2.1	Verified Versions.....	8
2.2	Interface Capabilities Supported.....	9
2.2.1	SIP Interface Capabilities	9
2.2.2	Other Interface Capabilities.....	14
2.3	Known Issues	17
3	Cisco BroadWorks Configuration	18
3.1	Cisco BroadWorks Device Profile Type Configuration	18
3.2	Cisco BroadWorks Configuration Steps.....	19
4	W90B IP DECT PHONE Configuration	20
4.1	Configuration Method	20
4.2	System Level Configuration	20
4.3	Subscriber Level Configuration.....	21
4.4	SIP Advanced Feature Configuration.....	22
4.4.1	Shared Call Appearance Configuration.....	22
4.4.2	Busy Lamp Field Configuration.....	25
4.4.3	Feature Key Synchronization Configuration	25
4.4.4	Call Center Feature Configuration	25
4.4.5	Call Recording Feature Configuration	26
4.4.6	Security Classification Feature Configuration	26
4.4.7	Emergency Call Configuration	26
4.4.8	Advice of Charge Configuration.....	26
4.4.9	PANI header support Configuration.....	26
4.5	Xtended Services Interface Feature Configuration.....	26
4.5.1	Cisco BroadWorks User Service Configuration	29
4.5.2	Cisco BroadWorks Directory Configuration	30
4.5.3	Cisco BroadWorks Call Logs Configuration.....	31
4.5.4	Cisco BroadWorks Call Park Configuration	32
4.6	Instant Message and Presence Configuration.....	33
4.7	Connected Line Presentation on UPDATE or Re-Invite	33
5	Device Management.....	35
5.1	Device Management Capabilities Supported	35
5.2	Device Management Configuration	36
5.2.1	Configure Cisco BroadWorks Tags	37
5.2.2	Configure Cisco BroadWorks Device Profile Type	40
5.2.3	Create Device Profile Instance	47
5.2.4	Configure Cisco BroadWorks User	49
5.2.5	Configure Edge Device	49

5.2.6	Configure Yealink W90B IP DECT PHONE	49
5.3	Upgrade from Previous CPE Kits	58
Appendix A: Reference W90B Configuration Files		58
Appendix B: %TIMEZONENAME% Values.....		1140
References		1143

Table of Figures

Figure 1 Device Identity/Profile Type.....	19
Figure 2 Shared Call Appearance Configuration.....	23
Figure 3 Xtended Services Interface Configuration.....	27
Figure 4 Xtended Services Platform Account Configuration.....	28
Figure 5 Xtended Services Platform Configuration	29
Figure 6 Call Logs Configuration	32
Figure 7 Call Park Configuration.....	33
Figure 8 Connected Line Presentation on Update or Re-Invite	34
Figure 9 System Default Tag Settings.....	38
Figure 10 Device Type Specific Tag Settings.....	39
Figure 11 Device Access FQDN.....	41
Figure 12 %BWMACADDRESS%.cfg File	44
Figure 13 Static File Settings	45
Figure 14 Device Profile Instance.....	47
Figure 15 Device Profile Instance Custom Tags Override	48
Figure 16 Device Profile Instance Custom Tags Add.....	48
Figure 17 Login Screen.....	50
Figure 18 Auto Provision Screen	51
Figure 19 Device Access FQDN.....	52
Figure 20 Default Device Profile Type.....	53
Figure 21 Configure Advanced Options.....	54
Figure 22 Device Management Options Settings.....	55
Figure 23 Default y000000000130.cfg	56

1 Overview

This guide describes the configuration procedures required for the Yealink W90B IP DECT Phone for interoperability with Cisco BroadWorks. This includes the following model:

- Yealink W90B IP DECT

The W90B is an IP DECT Phone that uses the Session Initiation Protocol (SIP) to communicate with Cisco BroadWorks for call control.

This guide describes the specific configuration items that are important for use with Cisco BroadWorks. It does not describe the purpose and use of all configuration items on the W90B IP DECT Phone. For those details, see the *Yealink W90B IP DECT Phone User Guide* [\[1\]](#) supplied by Yealink.

2 Interoperability Status

This section provides the known interoperability status of the Yealink W90B IP DECT PHONE with Cisco BroadWorks. This includes the version(s) tested, capabilities supported and known issues.

Interoperability testing validates that the device interfaces properly with Cisco BroadWorks via the SIP interface. Qualitative aspects of the device or device capabilities not affecting the SIP interface such as display features, performance, and audio qualities are not covered by interoperability testing. Requests for information and/or issues regarding these aspects should be directed to Yealink.

2.1 Verified Versions

The following table identifies the verified Yealink W90B IP DECT PHONE and Cisco BroadWorks versions and the month/year the testing occurred. If the device has undergone more than one test cycle, versions for each test cycle are listed, with the most recent listed first.

Compatible Versions in the following table identify specific W90B IP DECT PHONE versions which the partner has identified as compatible and should interface properly with Cisco BroadWorks. Generally, maintenance releases of the validated version are considered compatible and are not specifically listed here. For any questions concerning maintenance and compatible releases, contact Yealink.

NOTE: Interoperability testing is usually performed with the latest generally available (GA) device firmware/software and the latest GA Cisco BroadWorks release and service pack at the time the testing occurs. If there is a need to use a non-verified mix of Cisco BroadWorks and device software versions, customers can mitigate their risk by self-testing the combination themselves using the *Cisco BroadWorks SIP Phone Interoperability Test Plan*.

Verified Versions			
Date (mm/yyyy)	Cisco BroadWorks Release	W90B IP DECT PHONE Verified Version	W90B IP DECT PHONE Compatible Versions
04/2021	Release 22.0	130.85.0.15	List any specific compatible versions

2.2 Interface Capabilities Supported

This section identifies interface capabilities that have been verified through testing as supported by Yealink W90B IP DECT PHONE.

The *Supported* column in the tables in this section identifies the Yealink W90B IP DECT PHONE's support for each of the items covered in the test plan, with the following designations:

- Yes Test item is supported
- No Test item is not supported
- NA Test item is not applicable to the device type
- NT Test item was not tested

Caveats and clarifications are identified in the *Comments* column.

2.2.1 SIP Interface Capabilities

The Yealink W90B IP DECT PHONE has completed interoperability testing with Cisco BroadWorks using the *Cisco BroadWorks SIP Phone Interoperability Test Plan* [5]. The results are summarized in the following table.

The Cisco BroadWorks test plan is composed of packages, each covering distinct interoperability areas, such as “Basic” call scenarios and “Redundancy” scenarios. Each package is composed of one or more test items, which in turn are composed of one or more test cases. The test plan exercises the SIP interface between the device and Cisco BroadWorks with the intent to ensure interoperability sufficient to support the Cisco BroadWorks feature set.

NOTE: *DUT* in the following table refers to the *Device Under Test*, which in this case is the Yealink W90B IP DECT PHONE.

Cisco BroadWorks SIP Phone Interoperability Test Plan Support Table			
Test Plan Package	Test Plan Package Items	Supported	Comments
Basic	Call Origination	Yes	
	Call Termination	Yes	
	Session Audit	Yes	
	Session Timer	Yes	
	Ringback	Yes	
	Forked Dialog	Yes	
	181 Call Being Forwarded	Yes	
	Dial Plan	Yes	
	DTMF – Inband	Yes	
	DTMF – RFC 2833	Yes	
	DTMF – DTMF Relay	Yes	
	Codec Negotiation	Yes	
	Codec Renegotiation	No	Not Tested

Cisco BroadWorks SIP Phone Interoperability Test Plan Support Table			
Test Plan Package	Test Plan Package Items	Supported	Comments
Cisco BroadWorks Services	Third-Party Call Control – Basic	No	
	Third-Party Call Control – Advanced	No	Not Tested
	Voice Message Deposit/Retrieval	Yes	
	Message Waiting Indicator	Yes	
	Voice Portal Outcall	Yes	
	Advanced Alerting – Ringing	No	
	Advanced Alerting – Call Waiting	No	
	Advanced Alerting – Ring Splash	Yes	
	Advanced Alerting – Silent Alerting	Yes	
	Calling Line ID	Yes	
	Calling Line ID with Unicode Characters	Yes	
	Connected Line ID	Yes	
	Connected Line ID with Unicode Characters	Yes	
	Connected Line ID on UPDATE	Yes	
	Connected Line ID on Re-INVITE	Yes	
	Diversion Header	Yes	
	History-Info Header	Yes	
	Advice of Charge	No	
	Meet-Me Conferencing	Yes	
	Meet-Me Conferencing – G722	Yes	
	Meet-Me Conferencing – AMR-WB	No	
	Meet-Me Conference – Opus	Yes	
	Collaborate – Audio	Yes	
	Collaborate – Audio – G722	Yes	
	Collaborate – Audio – Opus	Yes	
	Call Decline Policy	No	
DUT Services – Call Control Services	Call Waiting	Yes	
	Call Hold	Yes	
	Call Transfer	Yes	
	Three-Way Calling	Yes	Before answer scenario is not supported.
	Network-Based Conference	Yes	
DUT Services – Registration and Authentication	Register Authentication	Yes	
	Maximum Registration	Yes	

Cisco BroadWorks SIP Phone Interoperability Test Plan Support Table			
Test Plan Package	Test Plan Package Items	Supported	Comments
	Minimum Registration	Yes	
	Invite Authentication	Yes	
	Re-Invite/Update Authentication	Yes	
	Refer Authentication	No	
	Device Authenticating Cisco BroadWorks	No	Not Tested
DUT Services – Emergency Call	Emergency Call	No	
	Emergency Call with Ringback	No	
DUT Services – P-Access-Network-Info	REGISTER with P-Access-Network-Info Header	Yes	
	INVITE with P-Access-Network-Info Header	Yes	
DUT Services – Miscellaneous	Do Not Disturb	Yes	
	Call Forwarding Always	Yes	
	Call Forwarding Always Diversion Inhibitor	No	
	Anonymous Call	No	
	Anonymous Call Block	No	
	Remote Restart Via Notify	Yes	check-sync.
Advanced Phone Services – Busy Lamp Field	Busy Lamp Field	No	
	Call Park Notification	No	
Advanced Phone Services – Feature Key Synchronization, Private Line	Do Not Disturb	Yes	
	SUBSCRIBE for as-feature-event	Yes	
	Do Not Disturb Ring Splash	Yes	
	Call Forwarding	Yes	
	Call Forwarding Always Ring Splash	Yes	
	Call Forwarding Always Diversion Inhibitor	No	
	Call Center Agent Logon/Logoff	No	
	Call Center Agent Unavailable Code	No	
	Executive – Call Filtering	No	
	Executive-Assistant – Call Filtering	No	
	Executive-Assistant – Diversion	No	
	Call Recording	No	
	Security Classification	No	
Advanced Phone Services – Feature	Do Not Disturb	Yes	
	SUBSCRIBE for as-feature-event	Yes	

Cisco BroadWorks SIP Phone Interoperability Test Plan Support Table			
Test Plan Package	Test Plan Package Items	Supported	Comments
Key Synchronization, Shared Line	Do Not Disturb Ring Splash	Yes	
	Call Forwarding	Yes	
	Call Forwarding Always Ring Splash	Yes	
	Call Forwarding Always Diversion Inhibitor	No	
	Security Classification	No	
Advanced Phone Services – Missed Calls Display Synchronization	Missed Calls Display Sync	Yes	
Advanced Phone Services – Shared Call Appearance using Call Info	Line-Seize	No	
	Call-Info/Lamp Management	Yes	
	Public Hold	Yes	
	Private Hold	Yes	
	Hybrid Key System	No	
	Multiple Call Arrangement	Yes	
	Bridge Active Line	Yes	
	Bridge Active Line – Silent Monitor	No	
	Call Park Notification	Yes	
Advanced Phone Services – Call Park Notification	Call Park Notification	Yes	
Advanced Phone Services – Call Center	Hold Reminder	No	
	Call Information	No	
	Hoteling Event	No	
	Status Event	No	
	Disposition Code	No	
	Emergency Escalation	No	
	Customer Originated Trace	No	
Advanced Phone Services – Call Recording Controls	Pause/Resume	No	
	Start/Stop	No	
	Record Local Conference	No	
	Record Network Conference	No	
Advanced Phone Services – Call Recording Video	Basic Call	No	
	Record Local Conference	No	
	Record Network Conference	No	
Advanced Phone Services – Security Classification	Security Classification	No	
	Network-Based Conference Creator	No	

Cisco BroadWorks SIP Phone Interoperability Test Plan Support Table			
Test Plan Package	Test Plan Package Items	Supported	Comments
Advanced Phone Services – Conference Event	Network-Based Conference Participant	No	
	Meet-Me Conference Participant	No	
Redundancy	DNS SRV Lookup	Yes	DNS SRV lookup using contact header is not tested.
	Register Failover/Failback	Yes	
	Invite Failover/Failback	Yes	
	Bye Failover	Yes	
SBC/ALG - Basic	Register	Yes	
	Outgoing Invite	Yes	
	Incoming Invite	Yes	
SBC/ALG – Failover/Failback	Register Failover/Failback	Yes	
	Invite Failover/Failback	Yes	
Video – Basic Video Calls	Call Origination	NA	
	Call Termination	NA	
	Call Hold	NA	
	Call Waiting	NA	
	Call Transfer	NA	
Video – Cisco BroadWorks Video Services	Auto Attendant	NA	
	Auto Attendant – HD	NA	
	Voice Messaging	NA	
	Voice Messaging – HD	NA	
	Custom Ringback	NA	
Video – Cisco BroadWorks Video Conference	Network-based Conference	NA	
	Network-based Conference – HD	NA	
	Collaborate – Video	NA	
	Collaborate – Video – HD	NA	
TCP	Register	Yes	
	Outgoing Invite	Yes	
	Incoming Invite	Yes	
IPV6	Call Origination	No	Not Tested
	Call Termination	No	Not Tested
	Session Audit	No	Not Tested
	Ringback	No	Not Tested
	Codec Negotiation/Renegotiation	No	Not Tested
	Voice Message Deposit/Retrieval	No	Not Tested

Cisco BroadWorks SIP Phone Interoperability Test Plan Support Table

Test Plan Package	Test Plan Package Items	Supported	Comments
	Call Control	No	Not Tested
	Registration with Authentication	No	Not Tested
	Busy Lamp Field	No	Not Tested
	Redundancy	No	Not Tested
	SBC	No	Not Tested
	Video	No	
	Dual Stack with Alternate Connectivity	No	

2.2.2 Other Interface Capabilities

The Yealink W90B IP DECT PHONE may have implemented support for the following:

- Cisco BroadWorks Xtended Services Interface (Xsi)
- Extensible Messaging and Presence Protocol (XMPP) (BroadCloud/Cisco BroadWorks Collaborate Instant Messaging and Presence [IM&P])

Support for these interfaces is demonstrated by completing the *Cisco BroadWorks SIP Phone Functional Test Plan* [9]. Support for these interfaces is summarized in the following table.

Cisco BroadWorks Xtended Services Interface (Xsi) and BroadCloud IM&P Support Table

Interface	Feature	Supported	Comments
Xsi Features – Authentication	Authenticate with SIP Credentials	Yes	
	Authenticate with Cisco BroadWorks User Login Credentials	Yes	
	Authenticate with Cisco BroadWorks User Directory Number	No	
	Reuse Authorization Header	Yes	
Xsi Features – User Service Configuration	Remote Office	Yes	Handle Invalid Phone Number is not supported
	Cisco BroadWorks Anywhere	Yes	Handle Invalid Phone Number is not tested; Enable Click To Dial Alerting for All Locations and also not support to display <i>Alert all locations for Click-to-Dial calls</i> .
	Simultaneous Ringing	Yes	Handle Invalid Phone Number is not tested; Does not support to display Do not ring my Simultaneous Ring Numbers if I'm already on a call.
	Caller ID Blocking	Yes	
	Call Forwarding Always	No	Not Tested.
	Call Forwarding Busy	No	Not Tested.

Cisco BroadWorks Xtended Services Interface (Xsi) and BroadCloud IM&P Support Table			
Interface	Feature	Supported	Comments
	Call Forwarding No Answer	No	Not Tested.
	Do Not Disturb	No	Not Tested.
Xsi Features – Directories	Enterprise Directory	Yes	
	Enterprise Common Phone List	Yes	
	Group Directory	Yes	Call Using Group Directory Search is not supported
	Group Common Phone List	Yes	
	Personal Phone List	Yes	
	Search All Directories	No	
Xsi Features – Call Logs	Placed Calls	Yes	
	Received Calls	Yes	
	Missed Calls	Yes	Delete Missed Call is not supported
	All Calls	Yes	Delete All calls is not supported
	Sort by Name	No	
Xsi Features – Visual Voice Mail	View Messages	No	
	Listen to Audio Message	No	
	Watch Video Message	No	
	Mark Message Read/Unread	No	
	Delete Message	No	
	Mark All Messages Read/Unread	No	
Xsi Features – Push Notification	Register/Deregister for Push Notifications	No	
	Incoming Call via Push Notification	No	
	Call Update via Push Notification	No	
	Incoming Call via Push Notification; Second Incoming Call	No	
	MWI via Push Notification	No	
	Ring Splash via Push Notification	No	
Xsi Features – Call Recording Configurations	Call Record Mode Get	No	
	Set Record Mode	No	
	Set Play Call Recording to Start and Stop Announcement	No	
	Set Record Voice Messaging	No	
	Set Pause and Resume Notification	No	

Cisco BroadWorks Xtended Services Interface (Xsi) and BroadCloud IM&P Support Table			
Interface	Feature	Supported	Comments
	Set Recording Notification	No	
Xsi Features – Call Recording Controls	Record Mode set to Never	No	
	Record Mode set to Always	No	
	Record Mode set to Always with Pause/Resume	No	
	Start Recording Mid-Call with Record Mode set to On Demand	No	
	Start Recording During Call Setup with Record Mode set to On Demand	No	
	Perform User Initiated Start with Record Mode set to On Demand	No	
	Perform Mid-Call Start Recording after Placing Call on Hold	No	
	Perform Mid-Call Change to Call Recording Mode	No	
	Record Local Three-Way Call	No	
	Record Network Three-Way Call	No	
XMPP Features – Contact/Buddy List	Contacts	No	
	Favorites	No	
	Groups	No	
	Non-XMPP Contacts	No	
	Conferences	No	
XMPP Features – Presence	Login Invisible	No	
	Presence State	No	
	Presence Status	No	
	Contact's Presence State	No	

2.3 Known Issues

This section lists the known interoperability issues between Cisco BroadWorks and specific partner release(s). Issues identified during interoperability testing and known issues identified in the field are listed.

The following table provides a description of each issue and, where possible, identifies a workaround. The verified partner device versions are listed with an "X" indicating that the issue occurs in the specific release. The issues identified are device deficiencies or bugs, and are typically not Cisco BroadWorks release dependent.

The *Issue Number* is a tracking number for the issue. If it is a Yealink issue, the issue number is from Yealink's tracking system. If it is a Cisco BroadWorks issue, the issue number is from Cisco BroadSoft's tracking system.

For more information on any issues related to the particular partner device release, see the partner release notes.

Issue Number	Issue Description	Partner Version			
		130.85.0.15			
	No issues identified.				

3 Cisco BroadWorks Configuration

This section identifies the required Cisco BroadWorks device profile type for the Yealink W90B IP DECT PHONE as well as any other unique Cisco BroadWorks configuration required for interoperability with the W90B IP DECT PHONE.

3.1 Cisco BroadWorks Device Profile Type Configuration

This section identifies the device profile type to use when deploying the Yealink W90B IP DECT PHONE with Cisco BroadWorks.

Create a device profile type for the Yealink W90B IP DECT PHONE with settings as shown in the following example. For an explanation of the profile parameters, see the *Cisco BroadWorks Device Management Configuration Guide* [\[2\]](#).

The device profile type shown provides the *Number of Ports* (number of SIP lines) setting for Yealink W90B Phone. For W90B IP DECT PHONE, create a new device profile type and set the *Number of Ports* to match the available number of SIP lines per model according to the following table.

Model	Number of Lines
W90B	250 SIP accounts, 0 line keys

Identity/Device Profile Type Modify

Modify an existing identity/device profile type.

OK Apply Delete Export Cancel

Identity/Device Profile Type: Yealink-W90B
 Signaling Address Type: Intelligent Proxy Addressing
☐ Obsolete

Standard Options

Number of Ports: ☐ Unlimited ☒ Limited To

Ringback Tone/Early Media Support: ☐ RTP - Session
☐ RTP - Early Session
☒ Local Ringback - No Early Media

Authentication: ☒ Enabled
☐ Disabled

Hold Normalization: ☐ Unspecified Address
☐ Inactive
☒ RFC3264

☒ Registration Capable ☒ Authenticate REFER
☐ Static Registration Capable ☐ Video Capable
☐ E164 Capable ☐ Use History Info Header
☐ Trusted

Advanced Options

☐ Route Advance	☐ Forwarding Override
☐ Wireless Integration	☐ Conference Device
☐ PBX Integration	☐ Mobility Manager Device
☐ Add P-Called-Party-ID	☐ Music On Hold Device
☐ Auto Configuration Soft Client	☐ Requires BroadWorks Digit Collection
☐ Requires BroadWorks Call Waiting Tone	☐ Requires MWI Subscription
☐ Advice of Charge Capable	☐ Support Call Center MIME Type
☐ Support Emergency Disconnect Control	☐ Support Identity In UPDATE and Re-INVITE
☐ Enable Monitoring	☐ Support RFC 3398
☐ Static Line/Port Ordering	☐ Support Client Session Info
☐ Support Call Info Conference Subscription URI	☐ Support Remote Party Info
☐ Support Visual Device Management	☐ Bypass Media Treatment
☐ Support Cause Parameter	

Reset Event: ☐ reSync ☒ checkSync ☐ Not Supported

Trunk Mode: ☒ User ☐ Pilot ☐ Proxy

Hold Announcement Method: ☒ Inactive ☐ Bandwidth Attributes

Unscreened Presentation Identity Policy: ☒ Profile Presentation Identity
☐ Unscreened Presentation Identity
☐ Unscreened Presentation Identity With Profile Domain

Web Based Configuration URL Extension:

Device Configuration Options: ☐ Not Supported ☒ Device Management ☐ Legacy

Figure 1 Device Identity/Profile Type

3.2 Cisco BroadWorks Configuration Steps

There are no additional Cisco BroadWorks configuration steps are required.

4 W90B IP DECT PHONE Configuration

This section describes the configuration settings required for the W90B IP DECT PHONE integration with Cisco BroadWorks, primarily focusing on the SIP interface configuration. The W90B IP DECT PHONE configuration settings identified in this section have been derived and verified through interoperability testing with Cisco BroadWorks. For configuration details not covered in this section, see the *Yealink W90B IP DECT PHONE User Guide* [1].

4.1 Configuration Method

The capabilities of the *W90B IP DECT PHONE* have been verified for use with Cisco BroadWorks based on the settings described in the following table. For more information on the meaning, purpose, and applicability of the individual configuration items see the *Yealink W90B IP DECT PHONE User Guide* [1].

Configuration Files

Files Provided by Partner	Level	Description
<MACADDRESS>.cfg	device-specific configuration file	Device specific account information file.

4.2 System Level Configuration

This section describes system-wide configuration items that are generally required for each *W90B IP DECT PHONE* to work with Cisco BroadWorks. Subscriber-specific settings are described in the next section.

Step	Command	Purpose
System Configuration Items y0000000000<xx>.cfg		
Step 1	Set SIP Proxy/Domain. <pre>template.1.sip_server.1.address = as.Cisco BroadWorks.net template.1.sip_server.1.port = 5060 account.1.sip_server_type = 2</pre>	Set the W90B IP DECT PHONE SIP server to the Fully Qualified Domain Name (FQDN) for the Cisco BroadWorks Application Server cluster. The domain must match the domain configured for the Cisco BroadWorks subscriber's line/port domain. Set the SIP server type of W90B: Default=0 BroadSoft=2
Step 2	Set Outbound Proxy. <pre>template.1.outbound.enable = 1 template.1.outbound.1.address = sbc.Cisco BroadWorks.net template.1.outbound.1.port = 5060</pre>	Set the Outbound Proxy to the session border controller (SBC) if one is deployed between the W90B IP DECT PHONE and Cisco BroadWorks. If there are redundant SBCs, set it to the FQDN for the SBC cluster.
Step 3	Set SIP Timers. <pre>sip.timer_t1 = 0.5 sip.timer_t2 = 4 sip.timer_t4 = 5</pre>	The SIP timers should be set to levels short enough to support a timely failover when there is no server response.

Step	Command	Purpose
System Configuration Items y0000000000<xx>.cfg		
Step 4	Set Register Expire Timer. template.1.sip_server.1.expires = 3600	Set the registration period.
Step 5	Enable reliable response. account.1.100rel_enable = 1	Reliable provisional response (PRACK) should be enabled.
Step 6	Enable Session Timer. account.1.session_timer.enable = 1 account.1.session_timer.expires = 300 account.1.session_timer.refresher = 1	Set the W90B IP DECT PHONE to enable Session Timer. Session Refresher: 0 = uac 1 = uas
Step 7	Enable Call Waiting. call_waiting.enable = 1 call_waiting.tone = 1	Set the W90B IP DECT PHONE series to enable Call Waiting and Call Waiting Tone.
Step 8	Enable MWI. account.1.subscribe_mwi = 0 account.1.subscribe_mwi_expires = 3600	MWI: Solicited when setting SubscribeMWI = 1. MWI: Not solicited when setting SubscribeMWI = 0.
Step 9	Enable negotiated DTMF type. account.1.dtmf.type = 1	Set the W90B IP DECT PHONE to enable inband or RFC 2833 negotiated DTMF.
Step 10	Select Transport Type. template.1.sip_server.1.transport_type = 0	Set the SIP transport: Transport = 0 (UDP) Transport = 1 (TCP) Transport = 2 (TLS) (except T18P) Transport = 3 (DNS-SRV) (except T80P)
	Enable Feature Key Sync. features.feature_key_sync.enable = 1	Enable Feature Key Sync: 1 = Enabled 0 = Disabled

4.3 Subscriber Level Configuration

This section identifies the device-specific parameters, including registration and authentication. These settings must be unique across devices to be matched with the settings for a Cisco BroadWorks subscriber.

Provisioning a subscriber to register with Cisco BroadWorks allows calls to terminate to the subscriber's line. Registration requires that a unique address of record (AoR) is provisioned on Cisco BroadWorks and the phone; provisioning an AoR on Cisco BroadWorks consists of setting the line/port parameter to a unique value within the Application Server cluster.

Step	Command	Purpose
Subscriber parameters for the <MACADDRESS>.cfg		
Step 1	Enable line 1 to be used. Example: account.1.enable = 1	Enable a line of the W90B IP DECT PHONE to be used.

Step	Command	Purpose
Subscriber parameters for the <MACADDRESS>.cfg		
Step 2	Configure display name for a line. Example: <pre>account.1.display_name = Joe</pre>	For the line, configure the name to be displayed on the device.
Step 3	S]=et Register User ID for a line. Example: <pre>account.1.user_name = 2405551111</pre>	The <i>register user ID</i> must correspond with the line/port setting on Cisco BroadWorks.
Step 4	Enable SIP Authentication for a line. Example: <pre>account.1.auth_name = 2405551111 account.1.password = 123456</pre>	If the Authentication service is configured on Cisco BroadWorks, these parameters must be configured to match the Cisco BroadWorks settings.
Step 5	Configure Network Phonebook. <pre>account.1.xsi.host = xsp1.iopl.broad works.net account.1.xsi.user = 2413333601@as.iopl. Cisco BroadWorks.net account.1.xsi.password = yealink</pre>	This configures the phone to use the Cisco BroadWorks Xsi interface to retrieve the group phone directory. Host: This is the identity of the Cisco BroadWorks Xsp server/cluster address and relevant xsi-actions parameters. User: This is the Cisco BroadWorks user's login name. Password: This is the Cisco BroadWorks user's login password.

4.4 SIP Advanced Feature Configuration

This section provides configuration instructions for advanced SIP features supported by the phone including but not limited to Shared Call Appearance, Busy Lamp Field, Feature Key Synchronization, Call Center, and Emergency Call.

4.4.1 Shared Call Appearance Configuration

The Shared Call Appearance (SCA) feature allows the administrator to add multiple locations to a given line. Any of the locations can be used to originate or receive calls.

When a call comes in to an idle line, all the provisioned locations for that line are alerted. The first location to answer the call is connected to the originator. If the line is already active in a call, only the active location is alerted.

A subscriber can originate calls from any of the configured locations. All other locations are unable to originate calls until all calls are released.

It is recommended that the phone number plus an index (<phoneNumber>_<index>) is used when provisioning the unique address of record (AoR) for each shared line. For example: 2405551111_2. If a phone number does not exist, the MAC address plus an index could be used (<macAddress>_<index>).

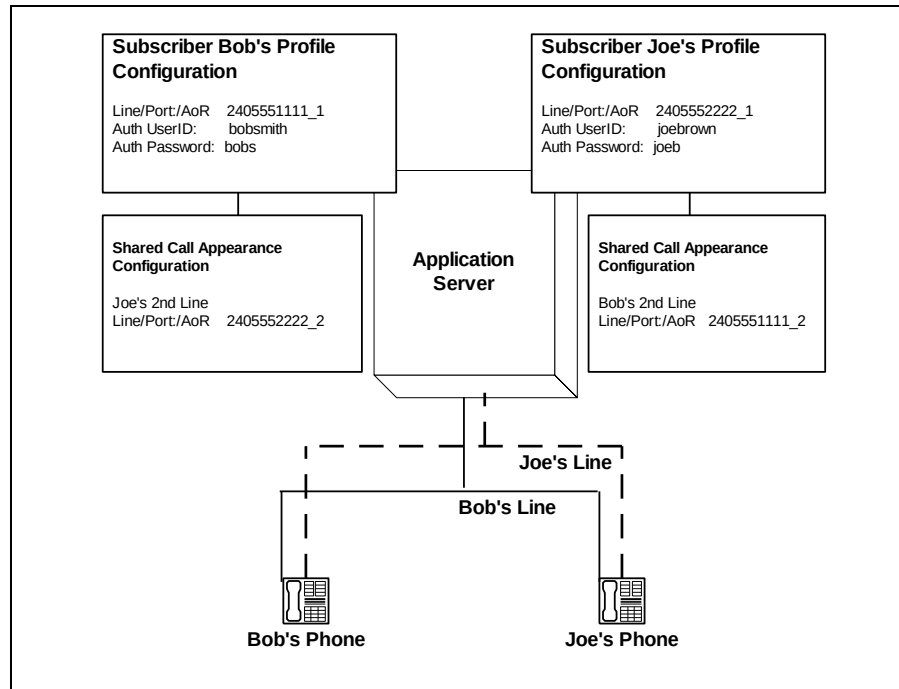


Figure 2 Shared Call Appearance Configuration

Figure 2 shows that Bob and Joe each have two lines and that Bob shares a line with Joe and Joe shares a line with Bob. The figure also shows the applicable Subscriber Profile and Shared Call Appearance Configuration data for subscribers Bob and Joe.

When Bob (2405551111) is called, Bob's first line and Joe's second line will ring. When Joe (2405552222) is called, Joe's first line and Bob's second line will ring.

The following steps show how to configure both phones for this Shared Call Appearance configuration.

For configurations of SCA for the device, see the example in the following section.

4.4.1.1 Bob's Phone Configuration – MAC.cfg

This is the SCA configurations as specified in *MAC.cfg*, that is, *0015651130dc.cfg* where "0015651130dc" is the MAC address of the SIP phone.

The following steps are used to configure line 1 for Bob's phone. This line rings when Bob is called, so it has Bob's authentication information.

Step	Command	Purpose
Step 1	Configure line as shared. <code>account.1.shared_line = 1;</code>	Configure the line as "shared" (as opposed to "private").
Step 2	Set Register User ID. Example: <code>account.1.user_name = 2405551111_1;</code>	The register user ID must correspond with the line/port setting on Cisco BroadWorks.

Step	Command	Purpose
Step 3	Enable SIP Authentication. Example: <pre>account.1.auth_name = bobsmith; account.1.password = bobs;</pre>	If the Authentication service is configured on Cisco BroadWorks, these parameters must be configured to match the Cisco BroadWorks settings. This line rings when Bob is called, so it has Bob's authentication information.
Step 4	Configure display name. Example: <pre>account.1.display_name = Bob Smith;</pre>	Configure the name to be displayed on the device for this line.

The following steps are used to configure line 2 for Bob's phone. This line rings when Joe is called, so it has Joe's authentication information.

Step	Command	Purpose
Step 1	Configure line as shared. <pre>account.2.shared_line = 1;</pre>	Configure the line as "shared" (as opposed to "private").
Step 2	Set Register User ID. Example: <pre>account.2.user_name = 2405551111_2;</pre>	The register user ID must correspond with the line/port setting on Cisco BroadWorks.
Step 3	Enable SIP Authentication. Example: <pre>account.2.auth_name = joebrown; account.2.password = joeb;</pre>	If the Authentication service is configured on Cisco BroadWorks, these parameters must be configured to match the Cisco BroadWorks settings. This line rings when Joe is called, so it has Joe's authentication information.
Step 4	Configure display name. Example: <pre>account.2.display_name = Joe Brown;</pre>	Configure the name to be displayed on the device for this line.

4.4.1.2 Joe's Phone Configuration – MAC.cfg

The following steps are used to configure line 1 for Joe's phone. This line rings when Joe is called, so it has Joe's authentication information.

Step	Command	Purpose
Step 1	Configure line as shared. <pre>account.1.shared_line = 1;</pre>	Configure the line as "shared" (as opposed to "private").
Step 2	Set Register User ID. Example: <pre>account.1.user_name = 2405552222_1;</pre>	The register user ID must correspond with the line/port setting on Cisco BroadWorks.
Step 3	Enable SIP Authentication. Example: <pre>account.1.Auth_Name = joebrown; account.1.password = joeb;</pre>	If the Authentication service is configured on Cisco BroadWorks, these parameters must be configured to match the Cisco BroadWorks settings. This line rings when Joe is called, so it has Joe's authentication information.

Step	Command	Purpose
Step 4	Configure display name. Example: <code>account.1.Display_Name = Joe Brown;</code>	Configure the name to be displayed on the device for this line.

The following steps are used to configure line 2 for Joe's phone. This line rings when Bob is called, so it has Bob's authentication information.

Step	Command	Purpose
Step 1	Configure line as shared. <code>account.2.shared_line = 1;</code>	Configure the line as "shared" (as opposed to "private").
Step 2	Set Register User ID. Example: <code>account.2.user_name = 2405552222_2;</code>	The register user ID must correspond with the line/port setting on Cisco BroadWorks.
Step 3	Enable SIP Authentication. Example: <code>account.2.Auth_Name = bobsmith;</code> <code>account.2.password password = bobs;</code>	If the Authentication service is configured on Cisco BroadWorks, these parameters must be configured to match the Cisco BroadWorks settings. This line rings when Bob is called, so it has Bob's authentication information.
Step 4	Configure display name. Example: <code>account.2.Display_Name = Bob Smith;</code>	Configure the name to be displayed on the device for this line.

4.4.1.3 Hybrid Key System Configuration

Yealink W90B IP DECT PHONE does not support Hybrid Key System.

4.4.2 Busy Lamp Field Configuration

Yealink W90B IP DECT PHONE does not support Busy Lamp Field.

4.4.3 Feature Key Synchronization Configuration

Feature Key Synchronization provides synchronization of phone services such as *Call Forwarding* and *Do Not Disturb* with the settings on Cisco BroadWorks for the analogous services. Configure the phone to enable Feature Key Synchronization as follows:

Step	Command	Purpose
Step 1	Enable Feature Key Synchronization. Example: <code>features.feature_key_sync.enable = 1</code>	Enable Feature Key Synchronization feature. 0 for Disabled 1 for Enable

4.4.4 Call Center Feature Configuration

Yealink W90B IP DECT PHONE does not support Call Center feature.

4.4.5 Call Recording Feature Configuration

Yealink W90B IP DECT PHONE does not support Call recording feature.

4.4.6 Security Classification Feature Configuration

Yealink W90B IP DECT PHONE does not support Security Classification feature.

4.4.7 Emergency Call Configuration

Yealink W90B IP DECT PHONE does not support Emergency Call.

4.4.8 Advice of Charge Configuration

Yealink W90B IP DECT PHONE does not support Advice of Charge feature.

4.4.9 PANI header support Configuration

This section provides configuration instructions to configure the device to enable P-Access-Network-Info header. Configure the emergency for phone as follows:

Step	Command	Purpose
Step 1	Configure the PANI header support for Invite message. Example: <pre>account.1.invite_with_pani_header.enable=1</pre>	Configure the PANI header support for Invite message. 0 for Disabled 1 for Enable
Step 1	Configure the PANI header support for register message Example: <pre>account.1.reg_with_pani_header.enable=1</pre>	Configure the PANI header support for register message. 0 for Disabled 1 for Enable

4.5 Xtended Services Interface Feature Configuration


This section applies to SIP phones, soft clients, and other devices that provide a user interface.

This section provides configuration instructions for configuration of Xtended Services Interface features supported by the phone, including but not limited to, Cisco BroadWorks Directory and Cisco BroadWorks Call Logs.

For a phone to access Xtended Services Interface features including services, directories, call logs and so on. The SIP phone must first authenticate the user. At present, Yealink SIP phone supports two methods for authenticating the user: Cisco BroadWorks User Login Credentials and SIP Authentication Credentials.

Cisco BroadWorks User Login Credentials

- 1) Browse to the *Applications* → *Broadsoft XSI* → *XSI Account*.

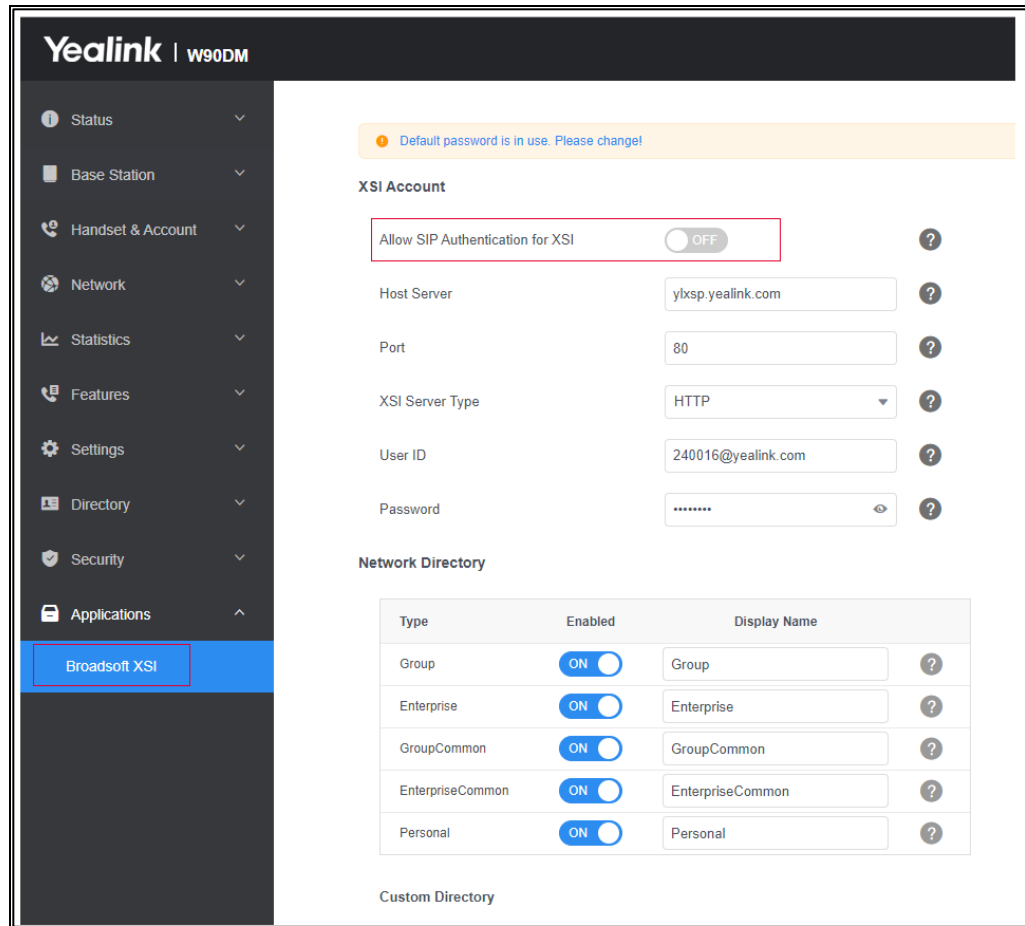

Yealink | W90DM

Default password is in use. Please change!

XSI Account

Allow SIP Authentication for XSI ☐ OFF ?

Host Server ?

Port ?

XSI Server Type ?

User ID ?

Password ?

Network Directory

Type	Enabled	Display Name	
Group	☒ ON	Group	?
Enterprise	☒ ON	Enterprise	?
GroupCommon	☒ ON	GroupCommon	?
EnterpriseCommon	☒ ON	EnterpriseCommon	?
Personal	☒ ON	Personal	?

Custom Directory

Figure 3 Xtended Services Interface Configuration

2) Type in the related parameters and then click **Confirm**.

SIP Authentication Credentials

3) Browse to the *Account* → *Register*, type in the correct account parameters, then click the **Confirm** button.

Handset 1 & Account 1

9291007978

Delete Handset

Account

Register status

Registered

Line Active

ON

Label

240019

Display Name

240019

Register Name

240019

Username

240019

Password

NAT

Disabled

SIP Server

2.ylas.yealink.com

Show Advanced Settings

Figure 4 Xtended Services Platform Account Configuration

- 4) Browse to *Applications* → *Broadsoft XSI*, type in the correct parameters, then save the configuration.

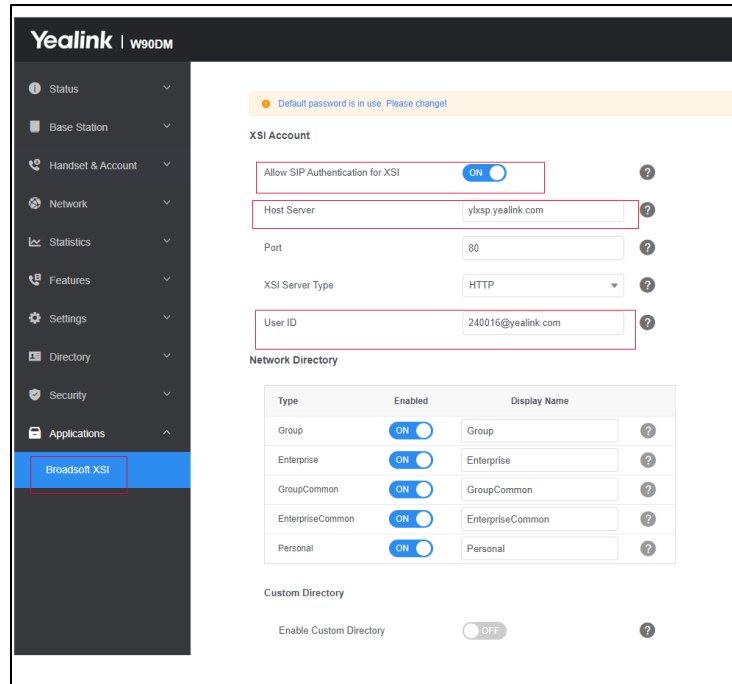


Figure 5 Xtended Services Platform Configuration

4.5.1 Cisco BroadWorks User Service Configuration

Integration with the Cisco BroadWorks Xtended Services Interface for User Service Configuration enables the phone to display and configure Cisco BroadWorks user services such as Remote Office, Cisco BroadWorks Anywhere, Call Forwarding, and Simultaneous Ring. To enable User Service Configuration, perform the following steps.

Step	Command	Purpose
Step 1	bw.xsi.enable = Example: bw.xsi.enable = 1	Enable XSI feature. 0 for Disabled 1 for Enable
Step 2	sip.authentication_for_xsi = Example: sip.authentication_for_xsi = 1	Enable the XSP authentication mode. 0= Cisco BroadWorks User Login credentials 1= SIP Authentication credentials
Step 3	account.1.xsi.user= account.1.xsi.password = Example: account.1.xsi.user= 2405551111 account.1.xsi.password = 123456	Set the Xsi login user name and password for line 1.
Step 4	account.1.xsi.host = Example: account.1.xsi.host =xsp1.iop1.Cisco BroadWorks.net	Set the IP address or domain name of the Xsp server.

Step 5	<code>account.1.xsi.server_type =</code> Example: <code>xsi.server_type =http</code>	Set the transport type for Xsi.
Step6	<code>account.1.xsi.port =</code> Example: <code>account.1.xsi.port =80</code>	Set the transport port for Xsi.

4.5.2 Cisco BroadWorks Directory Configuration

Integration with the Cisco BroadWorks Xtended Services Interface for directories enables the phone to download personal, group, and enterprise directories from Cisco BroadWorks and makes them available to a user via the phone menus. To enable this feature, perform the following steps.

Step	Command	Purpose
Step 1	Enable the Network directory to be displayed on the IP phone. Example: <code>bw.xsi.directory.enable =1</code>	Enable the Network directory to be displayed on the IP phone. 0 = Disabled 1 = Enabled
Step 2	Enable the group directory to be displayed on the IP phone. Example: <code>bw_phonebook.group_enable = 1</code>	Enable the group directory to be displayed on the IP phone. 0 = Disabled 1 = Enabled
Step 3	Configure the group directory name displayed on the IP phone. Example: <code>bw_phonebook.group_displayname = Group</code>	Configure "Group" as the group directory name displayed on the IP phone. The default value is "Group".
Step 4	Configure the group common directory to be displayed on the IP phone. Example: <code>bw_phonebook.group_common_enable = 1</code>	Enable the group common directory to be displayed on the IP phone. 0 = Disabled 1 = Enabled
Step 5	Configure the group common directory name displayed on the IP phone. Example: <code>bw_phonebook.group_common_displayname = GroupCommon</code>	Configure "GroupCommon" as the group common directory name displayed on the IP phone. The default value is "GroupCommon".
Step 6	Configure the enterprise directory to be displayed on the IP phone. Example: <code>bw_phonebook.enterprise_enable = 1</code>	Enable the enterprise directory to be displayed on the IP phone. 0 = Disabled 1 = Enabled
Step 7	Configure the enterprise directory name displayed on the IP phone. Example: <code>bw_phonebook.enterprise_displayname = Enterprise</code>	Configure "Enterprise" as the enterprise directory name displayed on the IP phone. The default value is "Enterprise".

Step	Command	Purpose
Step 8	Enable the enterprise common directory to be displayed on the IP phone. Example: <code>bw_phonebook.enterprise_common_enable = 1</code>	Enable the enterprise common directory to be displayed on the IP phone. 0 = Disabled 1 = Enabled
Step 9	Configure the enterprise common directory name displayed on the IP phone. Example: <code>bw_phonebook.enterprise_common_displayname = EnterpriseCommon</code>	Configure "EnterpriseCommon" as the enterprise common directory name displayed on the IP phone. The default value is "EnterpriseCommon".
Step 10	Enable the personal directory to be displayed on the IP phone. Example: <code>bw_phonebook.personal_enable = 1</code>	Enable the personal directory to be displayed on the IP phone. 0 = Disabled 1 = Enabled
Step 11	Configure the personal directory name displayed on the IP phone. <code>bw_phonebook.personal_displayname = Personal</code>	Configure "Personal" as the personal directory name displayed on the IP phone. The default value is "Personal".
Step 12	Enable the custom directory feature. Example: <code>bw_phonebook.custom = 1</code>	Enable the custom directory feature. 0 = Disabled 1 = Enabled
Step 13	It enables or disables the phone to automatically download all contacts in the BroadSoft Directory from the server. <code>bw.xsi.directory.update.enable</code>	Enable to automatically download all contacts in the BroadSoft Directory from the server. 0-Disabled, the phone downloads partial contacts from the server (the maximum of contacts available for viewing at one time is determined by the server), and you can manually download the remaining contacts as needed. 1-Enabled

4.5.3 Cisco BroadWorks Call Logs Configuration

Integration with the Cisco BroadWorks Xtended Services Interface for Call Logs enables the phone to get call log history (missed, placed, and received calls) from Cisco BroadWorks and make them available to a user via the phone menus. To enable this feature, perform the following step.

Step	Command	Purpose
Step 1	Enable the BroadSoft call log feature. Example: <code>bw.xsi.call_log.enable = 1</code>	Enable Cisco BroadWorks call log feature. ▪ 0 for Disabled ▪ 1 for Enabled

Configure the phone as shown in the following figure.

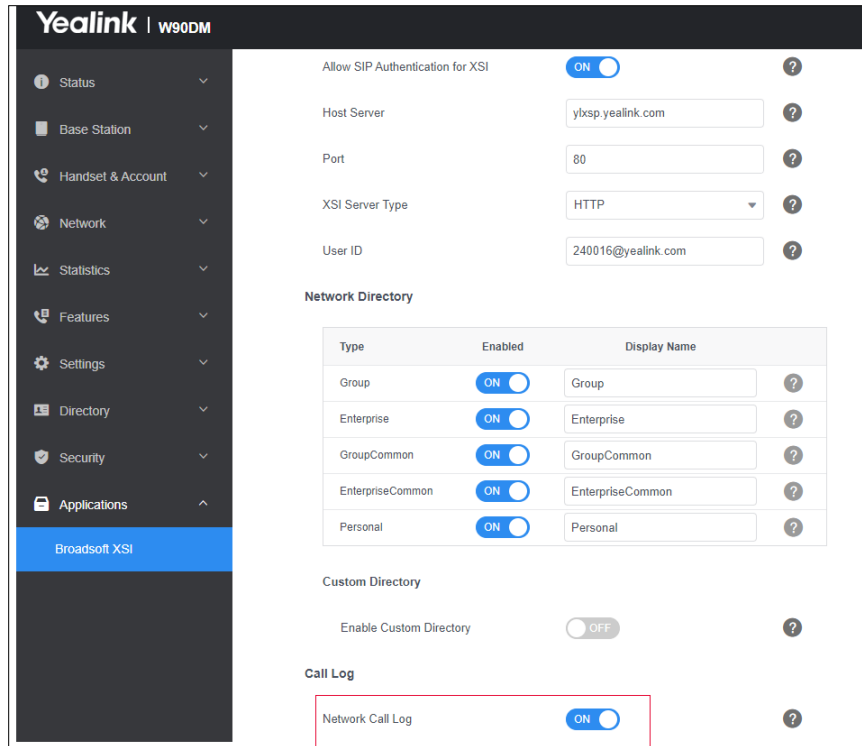


Figure 6 Call Logs Configuration

4.5.4 Cisco BroadWorks Call Park Configuration

Integration with the Cisco BroadWorks Xtended Services Interface for Call Park makes call park available to a user via the phone menus. To enable this feature, perform the following steps.

Step	Command	Purpose
Step 1	Enable call park feature for the line. Example: <code>account.1.callpark_enable= 1</code>	Enable call park feature. ▪ 0 for Disabled ▪ 1 for Enabled
Step 2	Enable the phone to display the Park soft key during a call. Example: <code>features.call_park.enable = 1</code>	The Park soft key appears on the LCD screen during a call. ▪ 0 for Disabled ▪ 1 for Enabled
Step 3	Enable the phone to display the GPark soft key during a call. Example: <code>features.call_park.group_enable= 1</code>	The GPark soft key appears on the LCD screen during a call. ▪ 0 for Disabled ▪ 1 for Enabled
Step 4	Enable the phone to play a warning tone when a call is parked against its line. Example: <code>features.call_park.park_ring = 1</code>	Enable the phone to play a warning tone when a call is parked against its line. ▪ 0 for Disabled ▪ 1 for Enabled

Step	Command	Purpose
Step 5	Enable the phone to display a parked indicator when a call is parked against its line. Example: <pre>features.call_park.park_visual_notif y_enable = 1</pre>	Enable the phone to display a parked indicator when a call is parked against its line. ▪ 0 for Disabled ▪ 1 for Enabled

Configure the Call Park settings as shown in the following figure.

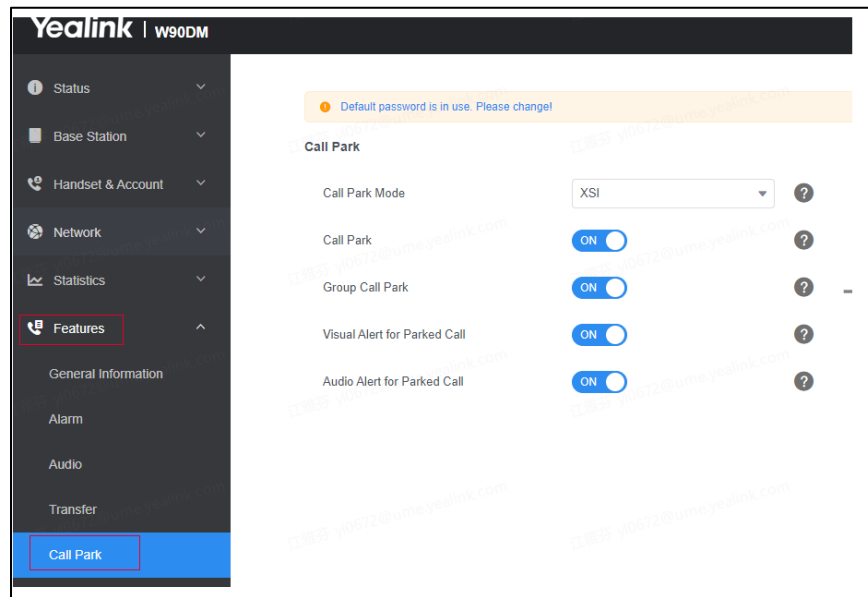


Figure 7 Call Park Configuration

4.6 Instant Message and Presence Configuration

Yealink W90B IP DECT PHONE does not support Instant Message and Presence.

4.7 Connected Line Presentation on UPDATE or Re-Invite

Set the phones ability to refresh caller ID:

Step	Command	Purpose
Step 1	Enable refresh caller id feature. Example: <pre>account.1.refresh_remote_id.enable = 1</pre>	Enable refresh caller id feature. ▪ 0 for Disabled ▪ 1 for Enable

Log in to the devices web portal, and enter Account-advance-Caller ID Source. Select the configuration item PAI-FROM, or PAI-RPID-FROM.

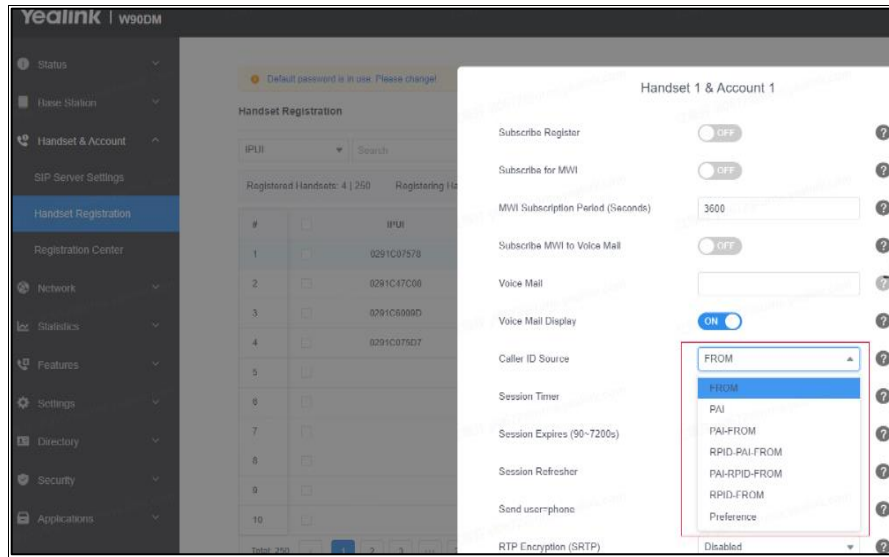


Figure 8 Connected Line Presentation on Update or Re-Invite

Or you can use the configuration parameter: `account.x.cid_source=`. The available values are:

- 0 – FROM
- 1 – PAI
- 2 – PAI-FROM
- 3 – PRID-PAI-FROM
- 4 – PAI-RPID-FROM
- 5 – RPID-FROM

You can select 1, 2, or 4 to make it work.

5 Device Management

The Cisco BroadWorks Device Management feature provides the capability to automate generation of device configuration files to support mass deployment of devices. This section identifies the device management capabilities supported by the Yealink W90B IP DECT PHONE and the configuration steps required. For Device Management configuration details not covered here, see the *Cisco BroadWorks Device Management Configuration Guide* [2] and the *Cisco BroadWorks CPE Kit Usage Guide* [8].

5.1 Device Management Capabilities Supported

The Yealink W90B IP DECT PHONE has completed Device Management interoperability testing with Cisco BroadWorks using the *Cisco BroadWorks Device Management Interoperability Test Plan* [7]. The results are summarized in the following table.

The Cisco BroadWorks test plan is composed of packages, each covering distinct interoperability areas. Each package is composed of one or more test items, which in turn, are composed of one or more test cases. The test plan exercises the Device Management interface between the device and Cisco BroadWorks with the intent to ensure interoperability.

The *Supported* column in the following table identifies the Yealink W90B IP DECT PHONE's support for each of the items covered in the test plan packages, with the following designations:

- Yes Test item is supported
- No Test item is not supported
- NA Test item is not applicable
- NT Test item was not tested

Caveats and clarifications are identified in the *Comments* column.

NOTE: *DUT* in the following table refers to the *Device Under Test*, which in this case is the Yealink W90B IP DECT PHONE.

Cisco BroadWorks Device Management Interoperability Test Plan Support Table			
Test Plan Package	Test Plan Package Items	Supported	Comments
HTTP File Download	HTTP Download Using XSP IP Address	Yes	
	HTTP Download Using XSP FQDN	Yes	
	HTTP Download Using XSP Cluster FQDN	No	Not Tested
	HTTP Download With Double Slash	Yes	
HTTPS File Download	HTTPS Download Using XSP IP Address	Yes	
	HTTPS Download Using XSP FQDN	Yes	
	HTTPS Download Using XSP Cluster FQDN	No	Not Tested
HTTPS File Download with	HTTPS Download with Client Authentication Using XSP FQDN	Yes	

Cisco BroadWorks Device Management Interoperability Test Plan Support Table

Test Plan Package	Test Plan Package Items	Supported	Comments
Client Authentication	HTTPS Download with Client Authentication Using XSP Cluster FQDN	No	Not Tested
Time Zone Mapping	Inspect Time Zone Setting	Yes	
Language Mapping	Inspect Language Setting	No	
File Inspection	Inspect System Config File	Yes	
	Inspect Device-Specific Config File	Yes	
	Inspect Other Config Files	Yes	
	Inspect Static Files	Yes	
Device Inspection	Inspect SIP Settings	Yes	
	Inspect Line Settings	Yes	
	Inspect Service Settings	Yes	
HTTP File Upload	HTTP Upload Using XSP IP Address	Yes	
	HTTP Upload Using XSP FQDN	Yes	
	HTTP Upload Using XSP Cluster FQDN	No	Not Tested
Call Processing Sanity Tests	Register with Authentication	Yes	
	Call Origination	Yes	
	Call Termination	Yes	
	Remote Restart	Yes	
	Shared Line Origination	Yes	
	Shared Line Termination	Yes	
	Shared Line Status	Yes	
	Busy Lamp Field	No	
	Network-Based Conference	Yes	
Flexible Seating	Association via Voice Portal	No	
	Association via Phone	No	
No Touch Provisioning	Provision via DHCP Options Field	Yes	
	No Touch Provision via DM redirect	Yes	
	No Touch Provision via Vendor redirect	Yes	No Touch Provisioning via Vendor-Hosted Redirect Service using HTTP is not supporting.

5.2 Device Management Configuration

This section identifies the steps required to enable the Yealink W90B IP DECT PHONE for device management. For Device Management configuration details not covered here, see the *Cisco BroadWorks Device Management Configuration Guide* [2] and the *Cisco BroadWorks CPE Kit Usage Guide* [8].

5.2.1 Configure Cisco BroadWorks Tags

The template files in Device Management use tags to represent the data stored on Cisco BroadWorks. When a configuration changes for a user, Device Management parses the template files and replaces the Device Management tags with the associated data stored on Cisco BroadWorks. There are default tags defined in the Device Management software and there are custom tags that the service provider can create/define via the web portal for use by Device Management. There are two types of custom tags that can be defined: system-default tags are common to all phones on the system; device-type-specific tags are common to Yealink W90B only.

The Yealink W90B IP DECT PHONE makes use of dynamic tags, which may be configured by a Cisco BroadWorks administrator as either system default or device type specific tags. This section identifies the required tags.

5.2.1.1 Create System Default Tags

Browse to *System → Resources → Device Management Tag Sets* and select the *System Default* tag set. Add the system default tags in the following table if they do not already exist.

Tag Name	Valid Settings	Description
%SNTP_SERVER_1%	IP address/FQDN	NTP server address.
%SNTP_SERVER_2%	IP address/FQDN	NTP server address alternate.
%DNS_SERVER_1%	IP address	DNS server address.
%DNS_SERVER_2%	IP address	DNS server address alternate.
%SBC_ADDRESS%	IP address/FQDN	SBC SIP address.
%SBC_PORT%	Port	SBC SIP port.
%USE_SBC_BOOLEAN%	0/1	Use SBC: 1=yes, 0=no.
%XSP_ADDRESS_XSI_ACTIONS%	IP address/FQDN	Xtended Services Platform server address.

Example System Default Tag settings

Device Management Tag Sets Modify

Display all the device management tags defined in the tag set. Tags can be added to the set or deleted from the set.

Tag Set: System Default

Delete	Tag Name ▲	Tag Value	Edit
☐	%APPLICATION_DOMAIN%	as.iop1.broadworks.net	Edit
☐	%DNS_SERVER_1%	199.19.193.13	Edit
☐	%DNS_SERVER_2%	199.19.193.29	Edit
☐	%DNS_SERVER%	199.19.193.12	Edit
☐	%KWS300_XSP_PATH%	http://xsp.broadsoft.com/dms/kws300	Edit
☐	%OUTBOUNDPROXYADDRESS%	199.19.193.9	Edit
☐	%OUTBOUNDPROXYPORT%	5060	Edit
☐	%OUTBOUNDPROXYTRANSPORT%	UDP	Edit
☐	%SBC_ADDRESS%	sbc1.iop2.broadworks.net	Edit
☐	%SBC_PORT%	5060	Edit
☐	%SIP_TRANSPORT%	0	Edit
☐	%SNTP_SERVER_1%	time-a.nist.gov	Edit
☐	%SNTP_SERVER_2%	time-b.nist.gov	Edit
☐	%SNTP_SERVER%	time-b.nist.gov	Edit
☐	%SNTP_SERVERIP%	192.5.41.41	Edit
☐	%USE_SBC_BOOLEAN%	1	Edit
☐	%XSP_ADDRESS_XSI_ACTIONS%	xsp1.iop1.broadworks.net	Edit
☐	%XSP_ADDRESS%	xsp1.iop1.broadworks.net	Edit

[Page 1 of 1]

Figure 9 System Default Tag Settings

5.2.1.2 Create Device Type-specific Tags

Browse to *System → Resources → Device Management Tag Sets* and select *Add* to add a new tag set. Configure the tag set name using the device name appended by Tags: *Yealink W90B_Tags*. Add the device type specific tags in the following table to the device tag set. If the tag set already exists, ensure the tags are defined in the following table.

Tag Name	Valid Settings	Description
%COUNTRY%	United States, Australia, Austria, Brazil, Belgium, China, Czech, Denmark, Finland, France, Germany, Great Britain, Greece, Hungary, Lithuania, India, Italy, Japan, Mexico, New Zealand, Netherlands, Norway, Portugal, Spain, Switzerland, Sweden, Russia, Chile, Czech ETSI	Identifies the country for standard ringtones.
%FEATURE_BW_CALL_PARK%	0 1	Enable/Disable the call park feature for the phone. 0 = Disabled 1 = Enable

Tag Name	Valid Settings	Description
%TRANSPORT_TYPE%	0 1 2 3	Defines the SIP transport. 0 = UDP 1 = TCP 2 = TLS 3 = DNS NAPTR
%REJECT_ANONYMOUS_CALL_BINARY%	0 1	Enable/Disable the anonymous call rejection feature for each line. 0 = Disabled 1 = Enable
%CALL_WAITING_BINARY%	0 1	Enable/Disable the call waiting feature. 0 = Disabled 1 = Enable
%FEATURE_SYN%	0 1	Enable/Disable the feature key synchronization for the phone. 0 = Disabled 1 = Enable
%LANGUAGEWEB%	English Turkish Portuguese Spanish Italian German French Polish Russian	Identifies language for web management.
%XSIPASSWORD-x%	string	Xsi login password for line x. Note: Leave the value as blank, this tag will be customized at each device profile level.
%TIMEZONENAME%	See Appendix B.	Defines the time zone name.
%W90B_FIRMWARE%	130.<x.x.x>.rom Example:130.85.0.10.rom	Defines the firmware version for W90B.

Example Device Type-specific Tag Settings

Tag Name	Tag Value
%AUTO_ANSWER_BINARY%	0
%CALL_WAITING_BINARY%	Enable
%COUNTRY%	United States
%FEATURE_BW_CALL_PARK%	0
%FEATURE_BW_DIR%	1
%FEATURE_KEY_SYNC%	0
%FEATURE_SYNC%	0
%LANGUAGEWEB%	English
%REJECT_ANONYMOUS_CALL_BINARY%	Enable
%TRANSPORT_TYPE%	UDP
%W52P_FIRMWARE%	25.80.193.10.rom
%W60B_FIRMWARE%	77.81.0.10.rom
%XSIPASSWORD-1%	123456

Figure 10 Device Type Specific Tag Settings

5.2.2 Configure Cisco BroadWorks Device Profile Type

The device profile type is a system-level structure that defines how the device interfaces with Cisco BroadWorks. It also identifies the default configuration files and other files, such as firmware, which are required for the device to operate correctly. The device profile type is created by the system administrator. Group administrators use the device profile type to create a device profile. The device profile is an instance of the device profile type that is associated with a physical device.

There are two Cisco BroadWorks device profile configuration methods described: import and manual. The import method takes a DTAF as input and builds the Cisco BroadWorks device profile type(s) automatically. The manual method takes the administrator through the steps to manually add and configure the device profile type(s).

The import method should be used if all of the following prerequisites are met:

- The Cisco BroadWorks Release is 17.0 or later.
- The device profile type(s) being imported do not already exist on the system. (If either a previous import or manual configuration was done, then the import fails.)
- There is a DTAF file available for import with a Cisco BroadWorks release level that is the same as or prior to the release to which it is being imported. If the DTAF file is at a release level later than the release being imported to, then the import can fail.

Otherwise, use the manual method.

For more detailed instructions, see the *Cisco BroadWorks CPE Kit Usage Guide* [8] and the *Cisco BroadWorks Device Management Configuration Guide* [2].

5.2.2.1 Configuration Method 1: Import

This section identifies the steps necessary to make use of the Device Management import feature to configure Cisco BroadWorks to add the Yealink W90B IP DECT PHONE as a Device Management-enabled device type. Also, see the *Cisco BroadWorks CPE Kit Usage Guide* [8].

Download the Yealink W90B CPE kit from BroadSoft Portal at <https://solutionpartner.cisco.com/site/index.gsp>. Extract the DTAF file(s) from the CPE kit. These are the import files. Repeat the following steps for each model you wish to import.

- 1) Log in to Cisco BroadWorks as an administrator.
- 2) Browse to *System* → *Resources* → *Identity/Device Profile Types* and then click **Import**.
- 3) Select *Browse* to find the extracted DTAF file for the model and then click **OK** to start the import.

After the import finishes, complete the following post-import configuration steps:

- 4) Browse to *System* → *Resources* → *Identity/Device Profile Types*.
- 5) Perform a search to find the imported Yealink device profile type, Yealink W90B.
- 6) Browse to the *Profile* page and change the Device Management Device Access FQDN to your Xtended Services Platform (Xsp) or Xtended Services Platform cluster address.

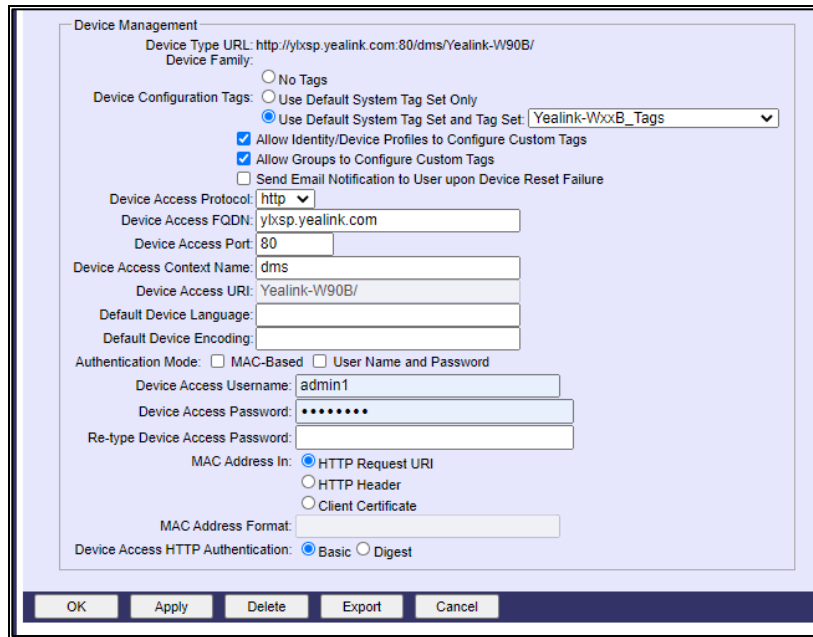


Figure 11 Device Access FQDN

- 7) Click the **Files and Authentication** link and then select the option to rebuild all the system files.

Firmware files must be obtained from Yealink. These files are not included in the import. Complete the steps in section [5.2.2.2.2 Static Files](#) to define the static firmware files and to upload the firmware.

NOTE: The non-firmware static files in section [5.2.2.2.2 Static Files](#) are included in the import.

- 8) After importing the DTAFs, restart the Application Server to load the *TimeZoneAlias* files.

5.2.2.2 Configuration Method 2: Manual

This section identifies the manual steps necessary to configure Cisco BroadWorks to add the Yealink W90B IP DECT PHONE as a Device Management-enabled device type. This method should not be used except in special cases as described in the opening to section [5.2.2 Configure Cisco BroadWorks Device Profile Type](#).

For more detailed instruction on manual configuration, see the *Cisco BroadWorks CPE Kit Usage Guide* [\[8\]](#) and the *Cisco BroadWorks Device Management Configuration Guide* [\[2\]](#).

The steps in this section can also be followed to update previously imported or configured device profile type(s) with new configuration files and firmware.

If there are DTAFs for more than one device model, these steps must be completed for each model.

5.2.2.2.1 Create or Modify Device Profile Type

This section identifies the Cisco BroadWorks device profile type settings relevant to Device Management for the Yealink W90B IP DECT PHONE.

Browse to *System* → *Resources* → *Identity/Device Profile Types* and perform a search to find the Yealink device profile type(s) created in section [3.1 Cisco BroadWorks Device Profile Type Configuration](#) or add the device profile type for each model using the settings from section [3.1 Cisco BroadWorks Device Profile Type Configuration](#) if they do not exist.

Configure the device profile type *Signaling Address Type*, *Standard* and *Advanced* options settings to match the settings in section [3.1 Cisco BroadWorks Device Profile Type Configuration](#).

Configure the device profile type *Device Management* options as shown in section [5.2.2.1 Configuration Method 1: Import](#).

The following subsections identify the required settings specific to Device Management.

5.2.2.2.2 Define Device Profile Type Files

This section describes the Cisco BroadWorks Device Management configuration necessary to identify the configuration files and other files that the Yealink W90B IP DECT PHONE downloads.

To define the files, configuration templates, firmware and other files the W90B IP DECT PHONE uses, they must be uploaded to Cisco BroadWorks. Download the Yealink W90B CPE kit from BroadSoft Portal at <https://solutionpartner.cisco.com/site/index.gsp>. Extract the configuration files from the *Configuration Files* folder of CPE kit. Obtain the firmware files directly from Yealink.

The following table identifies the Yealink configuration files distributed with the version 80 CPE kit.

File Name	CPE Kit Template File Name	File Type	Description
		System-level, Device-specific, Static, Time Zone Alias	
Examples:			
<i>BWMACADDRESS.cfg</i>	<i>%BWMACADDRESS%.cfg</i>	Device-specific	This file contains device specific parameters that the phone needs to load.
<i>contactData.xml</i>	<i>contactData1.xml</i>	Static	This file contains the contact information in XML format.
<i>blacklist.xml</i>	<i>blacklist.xml</i>	Static	This file contains the blacklist contact information in XML format.
<i>DialPlan.xml</i>	<i>DialPlan.xml</i>	Static	Specifies the dialing rules.
<i>AutoDST.xml</i>	<i>AutoDST.xml</i>	Static	Rules set of the beginning and end of Day Light Savings Time.
<i>TimeZoneAliasLabels_Yealink+<model>.properties</i>	<i>TimeZoneAliasLabels_Yealink-<model>.properties</i>	Time Zone Alias	The Time zone Alias file is a Cisco BroadWorks Device Management file used to map time zone identifiers between Cisco BroadWorks and Yealink phones. A Time zone Alias file is required for each model.
<i>WebItemsLevel.cfg</i>	<i>WebItemsLevel.cfg</i>	Static	This file defines the access level of configuration items in cfg format.
<i>super_search.xml</i>	<i>super_search.xml</i>	Static	This file configures the search source list in dialing.

The following table identifies other files that the Yealink W90B IP DECT PHONE downloads from the server or uploads to the server. These files are not provided in the CPE kit and must be obtained from Yealink.

File Name	File Type	Description
<i>x.x.x.x.rom</i>	Static	Device firmware file.
<i>%BWMACADDRESS%-local.cfg</i>	Static	Supported upload Define, the configuration used to record the change of the phone.

Browse to *System → Resources → Identity/Device Profile Types → Files and Authentication* to add the files as described in the following subsections.

5.2.2.2.2.1 Device-specific Files

This section identifies the device-specific files used by Yealink and provides instructions for defining the files and uploading for Device Management.

W90B downloads a phone-specific file based on the phone's MAC address using the following file name format:

- <mac-address>.cfg

Add a Cisco BroadWorks device profile type file to Yealink W90B device profile with the settings shown in [Figure 32 %BWMACADDRESS%.cfg File](#).

After creating the device profile type file, upload <mac-address>.cfg extracted from the CPE kit. Use the **Browse** button on the file definition screen. Be sure to click **Apply** after uploading the file.

Example Device-specific File Settings

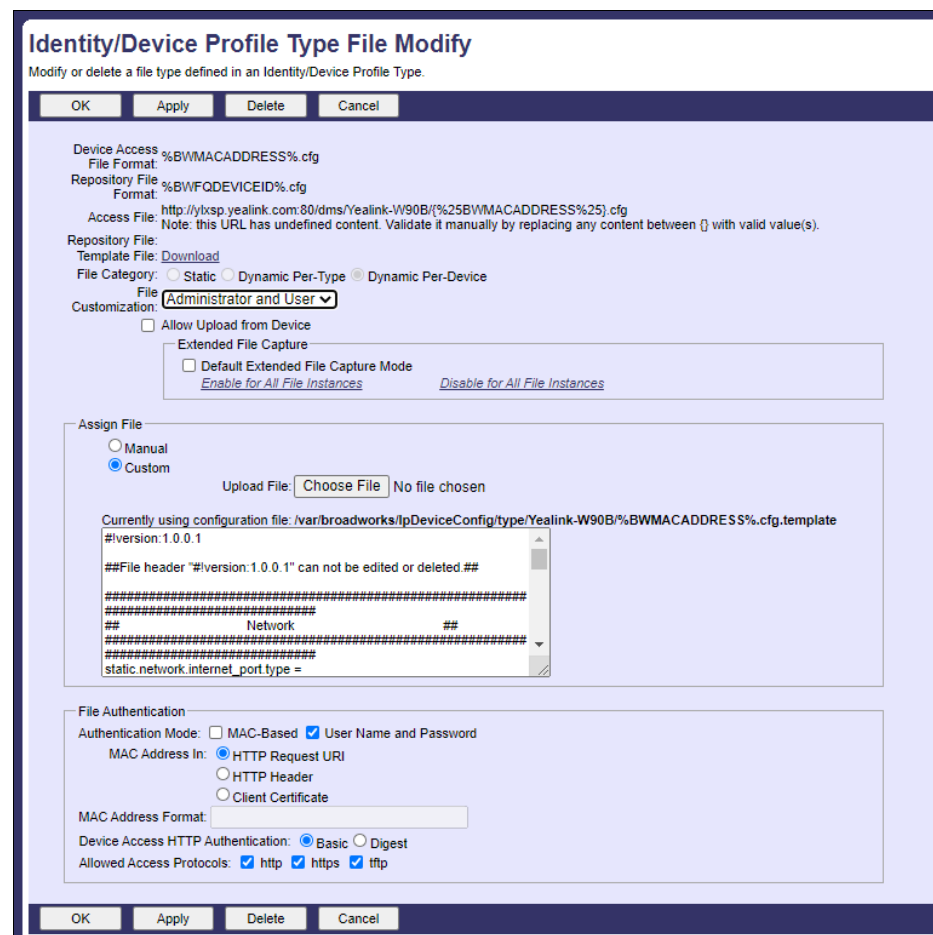


Figure 32 %BWMACADDRESS%.cfg File

5.2.2.2.2.2 Static Files

Static files are files such as firmware and media files that are not configurable and/or do not make use of the dynamic Cisco BroadWorks Device Management tags. The Yealink W90B requires the following static files:

- <firmware-version>.rom
- contactData.xml

- *config.bin*
- *AutoDST.xml*
- *DialBlock.xml*
- *DialPlan.xml*
- *DialNow.xml*
- *super_search.xml*
- *WebItemsLevel.cfg*

Add the static files to the device profile type with the settings shown in [Figure 43 Static File Settings](#).

After creating the device profile type file, upload static files *extracted from the CPE kit or obtained from Yealink*. Use the **Browse** button on the file definition screen. Be sure to click **Apply** after uploading the file

Example Static File settings

Identity/Device Profile Type File Modify

Modify or delete a file type defined in an Identity/Device Profile Type.

Device Access File Format: AutoDST.xml

Repository File Format: AutoDST.xml

Access File: <http://xsp1.iop1.broadworks.net:80/dms/Yealink-T27G/AutoDST.xml>

Repository File: [Download](#)

Template File: [Download](#)

File Category: ☒ Static ☐ Dynamic Per-Type ☐ Dynamic Per-Device

File Customization:

☒ Enable caching

Assign File

☐ Manual

☒ Custom

Upload File: No file chosen

Currently using configuration file: `/var/broadworks/lpDeviceConfig/type/Yealink-T27G/AutoDST.xml.template`

```

<DST szTime="-9:30" szZone="French Polynesia 77"
  <DST szTime="-9" szZone="United States-Alaska Time"
    iType="1" szStart="3/2/7/2" szEnd="11/1/7/2"
    szOffset="60"/>
  <DST szTime="-8" szZone="Canada(Vancouver,Whitehorse)"
    iType="1" szStart="3/2/7/2" szEnd="11/1/7/2"
    szOffset="60"/>
  <DST szTime="-8" szZone="Mexico(Tijuana,Mexicali)"
    iType="1" szStart="4/1/7/0" szEnd="10/5/7/0"
    szOffset="60"/>
  <DST szTime="-8" szZone="United States-Pacific Time"

```

File Authentication

Authentication Mode: ☐ MAC-Based ☐ User Name and Password

MAC Address In: ☒ HTTP Request URI

☐ HTTP Header with Following Format:

Device Access HTTP Authentication: ☒ Basic ☐ Digest

Allowed Access Protocols: ☒ http ☒ https ☒ ftp

Figure 43 Static File Settings

5.2.2.2.3 Time Zone Alias File

The CPE kit contains a time zone properties file for each device model. This file maps the Cisco BroadWorks user's time zone settings to the device's time zone settings.

This time zone mapping file must be added to the `/usr/local/Cisco BroadWorks/bw_base/conf/dms` directory on the Application Server using the following file name format:

- `TimeZoneAliasLabels_<Device_Type_Name>.properties`

For example, if the device type name is `Yealink_W90B`, the time zone mapping file name must be `TimeZoneAliasLabels_Yealink_W90B.properties`. A space in the device name must be converted to a "+" in the file name.

The file must contain the mapping of Cisco BroadWorks time zones values to Yealink time zone values. The following is an example of the file contents:

```
US_ALASKA=-9 cat
US_HAWAII=-10
CANADA_PACIFIC_TIME=-8
MEXICO_PACIFIC_TIME=-8
US_PACIFIC_TIME=-8
US_ARIZONA=-7
CANADA_MOUNTAIN_TIME=-7
MEXICO_MOUNTAIN_TIME=-7
US_MOUNTAIN_TIME=-7
CANADA_CENTRAL_TIME=-6
US_CENTRAL_TIME=-6
CANADA_EASTERN_TIME=-5
US_INDIANA=-5
US_EASTERN_TIME=-5
VENEZUELA_TIME=-4.5
CANADA_ALTANTIC_TIME=-4
CHILE_TIME=-4
CANADA_NEWFOUNDLAND=-3.5
ARGENTINA_TIME=-3
GREENWICH_MEAN_TIME=0
CENTRAL_EUROPEAN_TIME=+1
EASTERN_EUROPEAN_TIME=+2
EAST_AFRICAN_TIME=+3
IRAN_TIME=+3.5
AZERBAIJAN_TIME=+4
AFGHANISTAN_TIME=+4.5
PAKISTAN_TIME=+5
INDIA_TIME=+5.5
EASTERN_KAZAKHSTAN_TIME=+6
MYANMAR_TIME=+6.5
THAILAND_TIME=+7
CHINA_TIME=+8
JAPAN_TIME=+9
AUSTRALIAN_CENTRAL_STANDARD_TIME=+9.5
AUSTRALIAN_EASTERN_STANDARD_TIME=+10
NEWZEALAND_TIME=+12
```

This file should contain all the time zones supported by the Service Providers Cisco BroadWorks system. The Application server must be restarted to load this file.

The Cisco BroadWorks Application Server must be restarted for the TimeZoneAlias files to be picked up by the system.

5.2.2.2.4 Language Mapping


Language mapping is not provided for Yealink W90B.

5.2.3 Create Device Profile Instance

The previous sections defined the device profile type such that the system is ready to mass deploy device profiles. A device profile is an instance of the device profile type and defines the Cisco BroadWorks interface to an individual Yealink phone deployed at a user's desk.

Browse to the Cisco BroadWorks <group> → *Resources* → *Identity/Device Profiles* and select *Add* to add a new Yealink W90B IP DECT PHONE device profile. Configure the device profile as shown in the [Figure 65](#).

Example Identity/Device Profile Settings

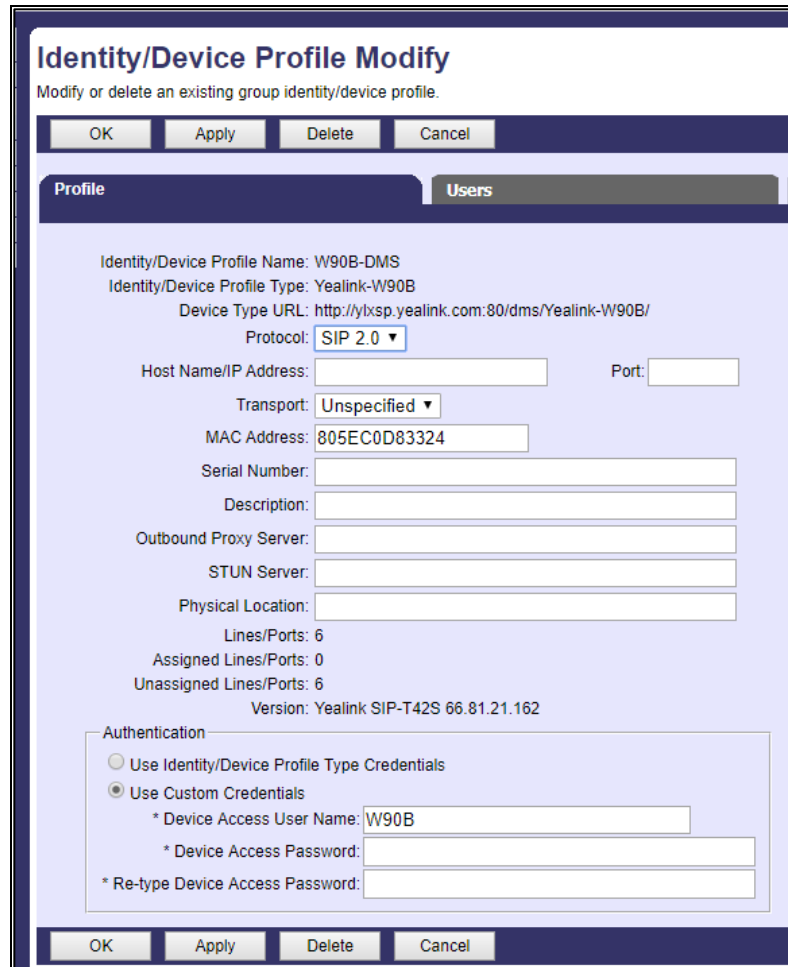

Identity/Device Profile Modify
Modify or delete an existing group identity/device profile.

OK Apply Delete Cancel

Profile Users

Identity/Device Profile Name: W90B-DMS
Identity/Device Profile Type: Yealink-W90B
Device Type URL: http://ylxsp.yealink.com:80/dms/Yealink-W90B/
Protocol: SIP 2.0 ▼

Host Name/IP Address: Port:
Transport: Unspecified ▼
MAC Address: 805EC0D83324
Serial Number:
Description:
Outbound Proxy Server:
STUN Server:
Physical Location:

Lines/Ports: 6
Assigned Lines/Ports: 0
Unassigned Lines/Ports: 6
Version: Yealink SIP-T42S 66.81.21.162

Authentication
☐ Use Identity/Device Profile Type Credentials
☒ Use Custom Credentials
* Device Access User Name: W90B
* Device Access Password:
* Re-type Device Access Password:

OK Apply Delete Cancel

Figure 54 Device Profile Instance

For the Xtended Services Interface feature to be authenticated, it is necessary to override the Xtended Services Interface password for each of the lines at the device profile instance level. To override custom tags at the device profile instance level, click on the *Custom Tags* tab.



Figure 65 Device Profile Instance Custom Tags Override

Then click **Add** to add a custom tag with the following parameters:

Parameter	Value	Description/Notes
Tag Name	XSIPASSWORD-<line number> Example: XSIPASSWORD-1	This tag provides the Xsi password of the user for the line which is assigned to the phone. Line number is an integer corresponding to the phone line in assignment.
Tag Value	The user's Xsi password. Example: 123456	

Example device profile custom tag setting

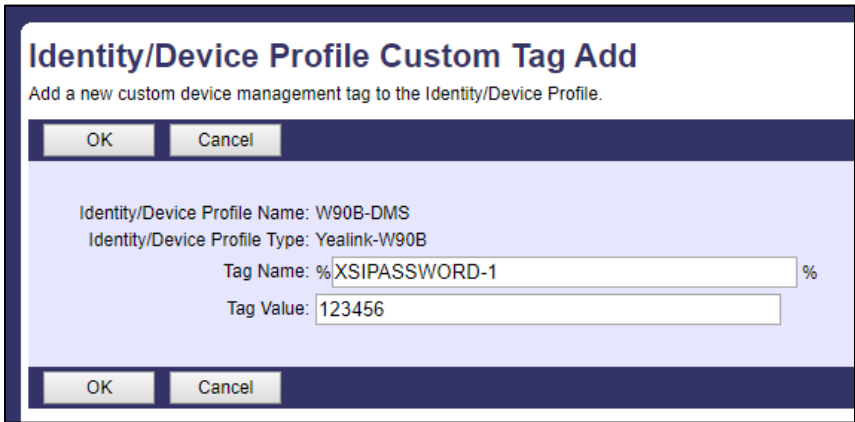


Figure 76 Device Profile Instance Custom Tags Add

Repeat the tag adding process for each of the lines provisioned on the device.

5.2.4 Configure Cisco BroadWorks User

Configure the user with the desired Cisco BroadWorks configuration and services. Any services that require a specific configuration on the device are managed via Device Management and are defined in the device configuration files, if the template files are created with the correct Device Management tags.

The device profile created in the previous section must be assigned to the Cisco BroadWorks user. Assigning the device profile to the user automatically causes the Device Management feature to generate the device configuration files for this user's device.

To assign the device profile to the user, browse to the *Cisco BroadWorks <user> → Addresses*.

5.2.5 Configure Edge Device

In many deployments, an edge device is deployed on the enterprise edge. Configure the edge device SIP server setting with the service provider's Session Border Controller IP address or FQDN. If there is no edge device and the phones communicate directly with the service provider's SBC, skip this section.

To integrate the edge device with Device Management, the SBC address tag (%SBC_ADDRESS%) defined in section [5.2.1.1 Create System Default Tags](#) must be overridden at the group level with the LAN address of the edge device. At the *Group → Utilities → Device Configuration* page, select the Yealink device profile (example: Yealink-W90B). Perform the following steps.

- 1) Click on the *Custom Tags* tab.
- 2) Click the **Add** button.
- 3) Add the *SBC* tag.
- 4) Enter "SBC_ADDRESS" as the tag.
- 5) Enter the IP address as the value (edge device LAN IP address).
- 6) Click **OK** to save the tag data.

This Tag/Value will be applied to all Yealink W90B phones in the group using the modified *Device Profile Type*.

5.2.6 Configure Yealink W90B IP DECT PHONE

This section describes the steps necessary to configure the Yealink W90B to integrate with Cisco BroadWorks Device Management.

The phone must be configured with the Device Management URL and authentication user name and password. This configuration can be accomplished as described in the sections:

- [5.2.6.1 Manual Provisioning](#)
- [5.2.6.2 No Touch Provisioning](#)

5.2.6.1 Manual Provisioning

5.2.6.1.1 Check Enterprise/Business DHCP Server Settings

The Yealink phone uses the file server parameters configured on the phone unless *Option 66* has been defined on the DHCP server. If the DHCP server returns data set for the *Option 66* parameter, then the Yealink phone uses the address defined in this field as the server address to retrieve its configuration data.

When using manual provisioning, to make sure that the phone interfaces properly with Device Management, the *Option 66* parameter must not be set on the DHCP server. If *Option 66* is defined and cannot be cleared, then the Zero Active parameter in the DHCP menu must be set to "Disabled". This parameter is set at boot time by accessing the web user interface.

- 1) Click the **Settings** tab.
- 2) In the *Zero Active* drop-down box, select *Disabled*.
- 3) Confirm the configuration changes and start the phone initialization.

5.2.6.1.2 Provision Manual Device Management Settings

Log in to the web user interface for the W90B IP DECT PHONE (<https://<phone-ip-address>>). Go to the *Settings* → *Auto Provision* web page and set the following:

- Power On – On
- URL – Device Management server (Xtended Services Platform) device address URL
Example: [http\(s\)://xsp1.iop1.Cisco BroadWorks.net:80/dms/Yealink_W90B/](http(s)://xsp1.iop1.CiscoBroadWorks.net:80/dms/Yealink_W90B/)
- HTTP Authentication:
User Name – Cisco BroadWorks Device Access (Example: yealink)
Password – Cisco BroadWorks Device Access Password (Example: 123456)

Restart the phone to force the phone to download the Device Management configuration files and firmware.

Example Login (Default User Name/Password is admin/admin)

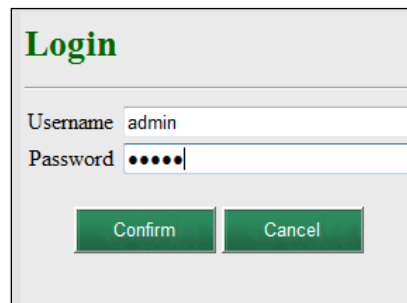


Figure 87 Login Screen

Example Auto Provision web page

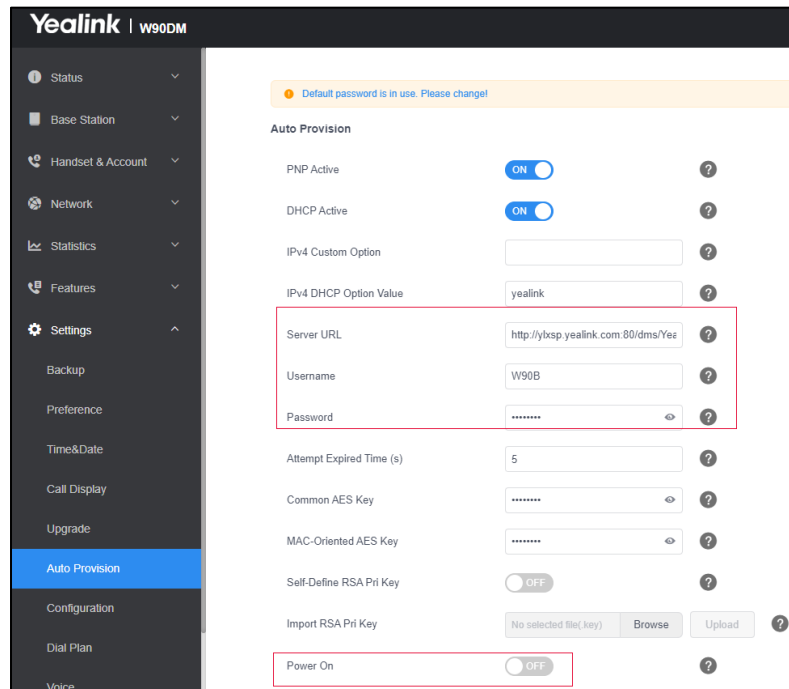


Figure 18 Auto Provision Screen

The Yealink phone uses the file server parameters configured on the phone unless *Option 66* has been defined on the DHCP server. If the DHCP server returns data set for the *Option 66* parameter, then the Yealink phone uses the address defined in this field as the server address to retrieve its configuration data.

After all parameters are entered, click the **Save** button. Allow the phone to reboot and retrieve the new configuration parameters from Device Management.

5.2.6.2 No Touch Provisioning

5.2.6.2.1 No Touch Provisioning via Cisco BroadWorks Device Management

The No Touch Provisioning method via Cisco BroadWorks Device Management uses DHCP and Device Management default configuration files. This enables configuration of the phone out-of-the-box without pre-provisioning before sending it to a customer's site.

No Touch Provisioning is done using the DHCP options provided by the end customer's DHCP server. The steps are as follows:

- 1) The phones are shipped to the end customer without pre-provisioning.
- 2) The end customer's DHCP server is configured with *Option 66* with the default Device Management URL.
- 3) The phone is plugged in and it receives the default Device Management URL from the DHCP server.
- 4) The phone queries for the default product file from Device Management.
- 5) The phone receives the default device file from Device Management and provisions the phone with the physical Device Management URL for the specific device model.

- 6) The phone resynchronizes with Device Management and prompts Zero Touch Update.
- 7) The end user or administrator enters the device management credentials into the Auto Provision username and password fields.
- 8) The phone resynchronizes with Device Management and downloads the files associated with the credentials supplied via the above step.

Device Management must be configured to facilitate the No Touch Provisioning method. Configuration can be performed using the Device Management import function or done manually. Each method is described in the following subsections

5.2.6.2.2 Configuration Method 1: Import

This section identifies the steps necessary to make use of the Device Management import feature to configure Cisco BroadWorks to add the Device Management Defaults device type for No Touch Provisioning.

The import method is available in Cisco BroadWorks Release 17.0 and later. For previous releases, use the manual configuration method described in the next section.


Download the Yealink W90B CPE kit from BroadSoft Portal at <https://solutionpartner.cisco.com/site/index.gsp>. Extract the *DeviceManagementDefaults.DTAF.zip* file from the CPE kit. This is the import file.

Log in to Cisco BroadWorks as an administrator. Browse to *System → Resources → Identity/Device Profile Types* and select *Import*. Select *Browse* to find the extracted DTAF file and click **OK** to start the import.

After the import finishes, the following post-import configuration steps must be completed.

Browse to *System → Resources → Identity/Device Profile Types* and perform a search to find the imported *DeviceManagementDefaults* device profile type. Browse to the *Profile* page and change the Device Management Device Access FQDN to your Xtended Services Platform or Xtended Services Platform cluster address.

Example:

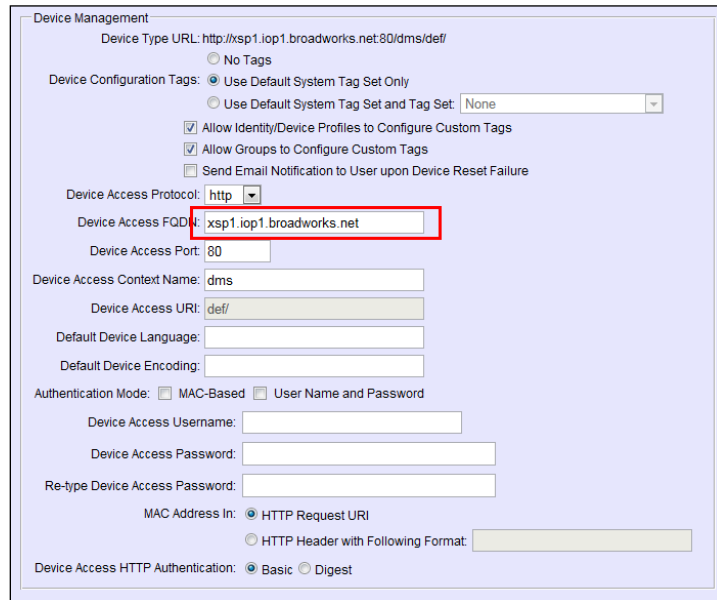

The screenshot shows the 'Device Management' configuration page. The 'Device Type URL' is set to 'http://xsp1.iop1.broadworks.net:80/dms/def/'. Under 'Device Configuration Tags', 'Use Default System Tag Set Only' is selected. Checkboxes for 'Allow Identity/Device Profiles to Configure Custom Tags' and 'Allow Groups to Configure Custom Tags' are checked. 'Device Access Protocol' is set to 'http'. The 'Device Access FQDN' field, which is highlighted with a red box, contains 'xsp1.iop1.broadworks.net'. Other fields include 'Device Access Port' (80), 'Device Access Context Name' (dms), 'Device Access URI' (def/), 'Default Device Language', 'Default Device Encoding', 'Authentication Mode' (MAC-Based), 'Device Access Username', 'Device Access Password', 'Re-type Device Access Password', 'MAC Address In' (HTTP Request URI), and 'Device Access HTTP Authentication' (Basic).

Figure 19 Device Access FQDN

Next, using the *Files and Authentication* link, select the option to rebuild all the system files.

5.2.6.2.3 Configuration Method 2: Manual

This section identifies the manual steps necessary configure Cisco BroadWorks to add the Device Management Defaults device type for No Touch Provisioning

The manual method must be used for Cisco BroadWorks releases prior to Release 17.0. It is an optional method in Release 17.0 and later. The steps in this section can also be followed to update previously imported or configured device profile type(s) with new configuration files and firmware.


5.2.6.2.3.1 Create Default Device Profile Type

A Device Management default device profile type must be created. This device profile type can be configured to serve default provisioning files to Yealink W90B endpoints, as well as other vendor devices.

Create a default device profile type as shown in the following figure. Only the device management settings are important in this context since the profile type is used only to serve default provisioning files. The standard and advanced settings do not matter.

5.2.6.2.3.1.1 Configure Standard Options

The device profile type name and standard options do not matter, but an example is provided for reference. All settings can be left with their default values.

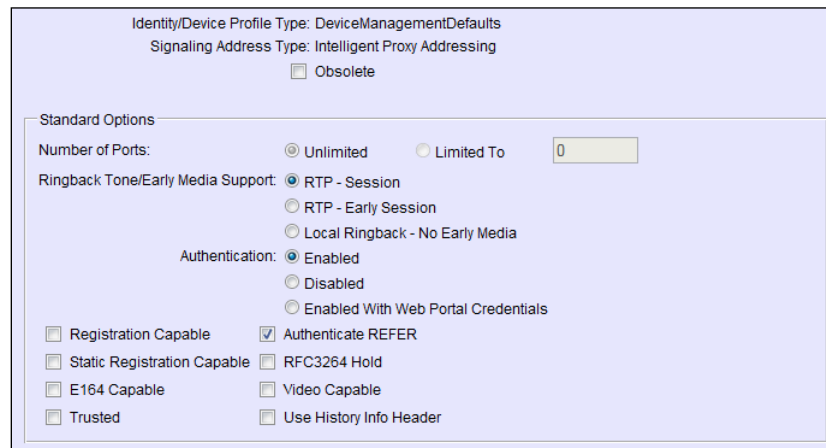

Identity/Device Profile Type: DeviceManagementDefaults
Signaling Address Type: Intelligent Proxy Addressing
☐ Obsolete

Standard Options

Number of Ports: ☒ Unlimited ☐ Limited To

Ringback Tone/Early Media Support: ☒ RTP - Session
☐ RTP - Early Session
☐ Local Ringback - No Early Media

Authentication: ☒ Enabled
☐ Disabled
☐ Enabled With Web Portal Credentials

☐ Registration Capable ☒ Authenticate REFER
☐ Static Registration Capable ☐ RFC3264 Hold
☐ E164 Capable ☐ Video Capable
☐ Trusted ☐ Use History Info Header

Figure 20 Default Device Profile Type

5.2.6.2.3.1.2 Configure Advanced Options

The advanced options do not matter, but an example is provided for reference. All settings can be left with their default values.

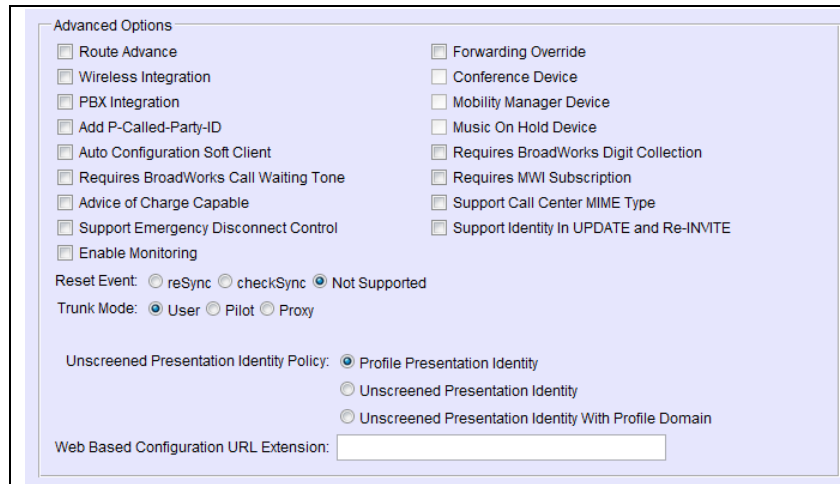


Figure 21 Configure Advanced Options


5.2.6.2.3.1.3 Configure Device Management Options

Configure the device profile type *Device Management Options* as directed in the following table. These are common settings, which apply to all devices enabled for Device Management.

Parameters not identified in the following table can usually be left with their default values.

Parameter	Value	Description
Device Configuration Tags	Use Default System Tag Set Only	
Allow Identity/Device Profiles to Configure Custom Tags	Checked	Optional
Allow Groups to Configure Custom Tags	Checked	Optional
Device Access Protocol	http	
Device Access FQDN	<Cisco BroadWorks-XSP-Cluster-Address> Example: xsp.iop1.Cisco BroadWorks.net	If using an Xtended Services Platform farm, set this to the Xtended Services Platform cluster FQDN. Otherwise, set it to the individual Xtended Services Platform FQDN or IP address.
Device Access Port	<Cisco BroadWorks-XSP-Port> Example: 80	This should be set to "80".
Device Access Context Name	dms	This does not need to be defined. Cisco BroadWorks defaults to the system-defined value.
Device Access URI	def	This defines the directory the Xtended Services Platform uses to access the default configuration files.

Example *Device Management Options* settings:

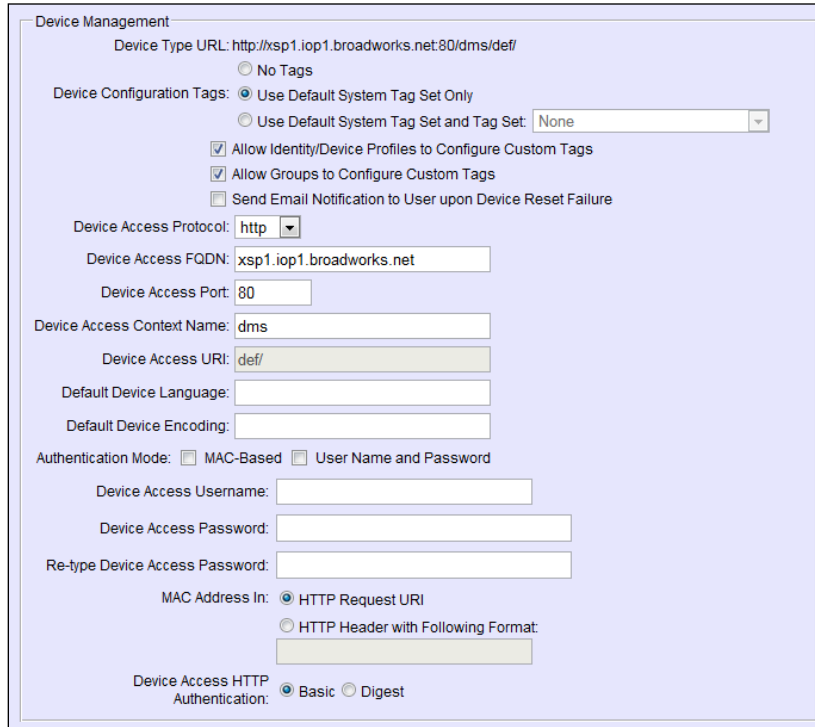

Device Management

Device Type URL:

☐ No Tags

Device Configuration Tags: ☒ Use Default System Tag Set Only

☐ Use Default System Tag Set and Tag Set:

☒ Allow Identity/Device Profiles to Configure Custom Tags

☒ Allow Groups to Configure Custom Tags

☐ Send Email Notification to User upon Device Reset Failure

Device Access Protocol:

Device Access FQDN:

Device Access Port:

Device Access Context Name:

Device Access URI:

Default Device Language:

Default Device Encoding:

Authentication Mode: ☐ MAC-Based ☐ User Name and Password

Device Access Username:

Device Access Password:

Re-type Device Access Password:

MAC Address In: ☒ HTTP Request URI

☐ HTTP Header with Following Format:

Device Access HTTP Authentication: ☒ Basic ☐ Digest

Figure 22 Device Management Options Settings

5.2.6.2.3.2 Define Device Profile Type Files

This section describes the Cisco BroadWorks Device Management configuration necessary to identify the configuration files used to enable the *DeviceManagementDefaults* device type for Yealink W90B. The files must be defined as described in the following sections:

y000000000130.cfg

Add the static files to the device profile type with the settings shown in the following figure.

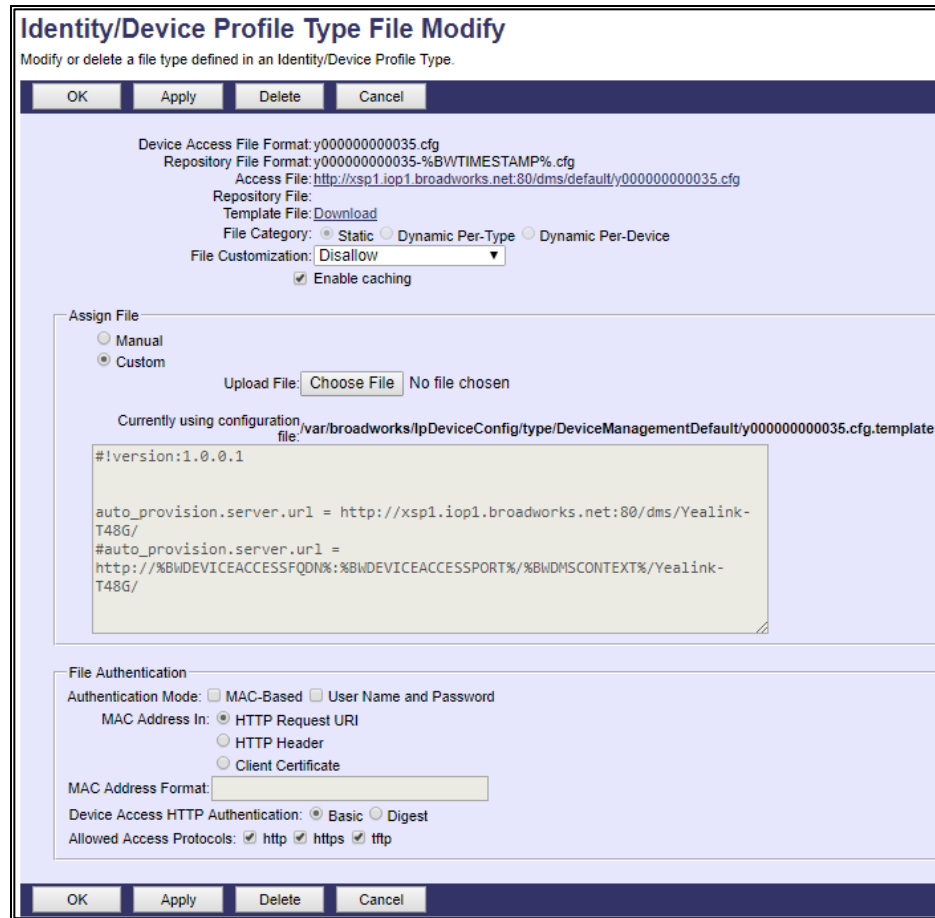


Figure 23 Default y000000000130.cfg

5.2.6.2.4 DHCP Server Configuration (Cisco BroadWorks Default) and Redirect Events

Configure the end customer's DHCP server with *Option 66/43* containing the default Cisco BroadWorks Device Management URL as *http://<Device Access FQDN>:<Device Access Port>/<Device Access Context Name>/def*.

Example:

```
option BWRedir code 43 = string;

subnet 10.2.0.0 netmask 255.255.255.0 {
option subnet-mask 255.255.255.0;
option domain-name-servers 10.2.0.29;
option routers 10.2.0.1;
option BWRedir "http://ylxsp.yealink.com:80/dms/"
}
```

Yealink W90B starts the provisioning process by following this default Cisco BroadWorks Device Management URL to obtain an initial configuration redirect. The following steps detail the phone's sequence to become fully provisioned on Cisco BroadWorks after receiving the redirect from Cisco BroadWorks.

- 1) The phone does initial resynchronization with Device Management and downloads the default file from location specified in DHCP offer.

- 2) The phone displays configuration wizard on the phone screen.
- 3) The end user or administrator follows the wizard and enters the device username and password using the user interface on the phone.
- 4) The phone resynchronizes with Device Management and downloads the file(s) associated with the credentials supplied via the previous step.

5.2.6.2.5 DHCP Server Configuration (Direct DM Location) and Redirect Events

Configure the end customer's DHCP server with *Option 66/43* containing the direct Yealink Device Management URL as *http://<Device Access FQDN>:<Device Access Port>/<Device Access Context Name>/Yealink-W90B*.

Example:

```
option BWRedir code 43 = string;

subnet 10.2.0.0 netmask 255.255.255.0 {
option subnet-mask 255.255.255.0;
option domain-name-servers 10.2.0.29;
option routers 10.2.0.1;
option BWRedir "http://ylxsp.yealink.com:80/dms/Yealink-W90B/"
}
```

Yealink W90B starts the provisioning process by following Yealink Device Management URL to obtain the device configuration files. The following steps detail the phone's sequence to become fully provisioned on Cisco BroadWorks after receiving the direct URL from Cisco BroadWorks.

- 1) The phone does initial resynchronization with Device Management and downloads the configuration file from location specified in DHCP offer.
- 2) The end user or administrator enters the device username and password using the user interface on the phone.
- 3) The phone resynchronizes with Device Management and downloads the file(s) associated with the credentials supplied via the previous step.

5.2.6.2.6 No Touch Provisioning via Yealink Redirect Service

Yealink Device Management Redirect is a web redirect service hosted by Yealink. It works in conjunction with the Cisco BroadWorks Device Management Redirect. Hence, prior to device deployment, the administrator is required to login to Yealink's web portal to associate each device based on the MAC address to the default Cisco BroadWorks Device Management URL. At boot time, the Yealink W90B IP DECT phones automatically queries the Yealink Device Management Redirect service for the associated Cisco BroadWorks URL. The Yealink W90B IP DECT Phone finally completes the provisioning process as detailed in the previous section. For more information about the Yealink Device Management Redirect service, go to <https://rps.yealink.com/>.

NOTE: If a secured (HTTPS) connection is required, then install the CA certificates or set the *security* → *trusted_certificates* to "disable" and restart the phone.

5.3 Upgrade from Previous CPE Kits

The previous configuration sections are primarily structured around importing or manually configuring the Yealink W90B device profile types for the first time. Many of the steps are unnecessary when upgrading to a new firmware release or CPE kit version.

For general instructions on upgrading, see *Cisco BroadWorks CPE Kit Usage Guide* [8].

Appendix A: Reference W90B Configuration Files

NOTE: The following samples are examples and should be used as a reference only. DO NOT CUT AND PASTE THESE EXAMPLES TO GENERATE YOUR CONFIGURATION FILES. Use the configuration files obtained from Yealink with the specific release to generate your configuration files.

Device-specific File: %BWMACADDRESS%.cfg

NOTE: This is an example file and it should be used for reference only.

```
#!/version:1.0.0.1

##File header "#!/version:1.0.0.1" can not be edited or deleted.##

#####
#####
##                                     Network
##
#####
static.network.internet_port.type =
static.network.internet_port.ip =
static.network.internet_port.mask =
static.network.internet_port.gateway =
static.network.static_dns_enable =
static.network.primary_dns=
static.network.secondary_dns =

static.network.static_nat.enable =
static.network.static_nat.addr =
static.ice.enable =
static.sip.nat_stun.enable =
static.sip.nat_stun.port =
static.sip.nat_stun.server =
static.sip.nat_turn.enable =
static.sip.nat_turn.server =
static.sip.nat_turn.port =
static.sip.nat_turn.username =
static.sip.nat_turn.password =

static.network.lldp.enable =
static.network.lldp.packet_interval =

static.network.cdp.enable =
static.network.cdp.packet_interval =
```

```

static.network.vlan.internet_port_enable =
static.network.vlan.internet_port_vid =
static.network.vlan.internet_port_priority =
static.network.vlan.dhcp_enable =
static.network.vlan.dhcp_option =
static.network.vlan.vlan_change.enable =

static.network.qos.audiotos =
static.network.qos.signaltos =

static.network.port.max_rtpport =
static.network.port.min_rtpport =

static.wui.http_enable =
static.wui.https_enable =
static.network.port.http =
static.network.port.https =

static.network.802_1x.mode =
static.network.802_1x.eap_fast_provision_mode =
static.network.802_1x.anonymous_identity =
static.network.802_1x.identity =
static.network.802_1x.md5_password =
static.network.802_1x.root_cert_url =
static.network.802_1x.client_cert_url =

sip.reg_surge_prevention =

#####
#####
##                               OpenVPN
##
#####
#####
static.network.vpn_enable =
static.openvpn.url =

#####
#####
##                               Network Other
##
#####
#####
static.network.dhcp_host_name =
static.network.dhcp.option60type =
static.network.attempt_expired_time =
static.network.mtu_value =

#####
#####
##                               Features
##
#####
#####
call_waiting.enable =
call_waiting.tone =
call_waiting.off_code =
call_waiting.on_code =
call_waiting.mode =

features.key_as_send =
sip.use_23_as_pound =

```

```

features.busy_tone_delay =

features.normal_refuse_code =
features.dnd_refuse_code =

sip.rfc2543_hold =

sip.use_out_bound_in_dialog =

phone_setting.is_deall180 =

features.save_call_history =

#####
#####
##                               Account
##
#####
#####
ipui_account.data.url=

#####
#####
##                               DTMF
##
#####
#####
features.dtmf.hide =
features.dtmf.hide_delay =
features.dtmf.duration =
features.dtmf.volume =
features.dtmf.repetition =

forward.international.enable =

features.fwd_diversion_enable =

features.relog_offtime =
features.call_num_filter =
sip.trust_ctrl =
features.voice_mail_tone_enable =
features.voice_mail_alert.enable =
features.reboot_in_talk_enable =
features.caller_name_type_on_dialing =
phone_setting.end_call_on_hook.enable =
base.active_handset.number =

features.call.dialtone_time_out =
##v81 Add
features.ringer_device.is_use_headset=
features.rtp_symmetric.enable =

#####
#####
##                               Transfer
##
#####
#####
transfer.semi_attend_tran_enable =
transfer.blind_tran_on_hook_enable =
transfer.on_hook_trans_enable =

```



```
#####
#####
##                               Phone Lock
##
#####
#####
phone_setting.emergency.number =

#####
#####
##                               Power Led Settings
##
#####
#####
phone_setting.common_power_led_enable =
phone_setting.ring_power_led_flash_enable =
phone_setting.mail_power_led_flash_enable =
phone_setting.missed_call_power_led_flash.enable =

#####
#####
##                               Watch Dog
##
#####
#####
static.watch_dog.enable =

#####
#####
##                               Time&Date
##
#####
#####
local_time.dhcp_time =
local_time.manual_time_enable =
local_time.summer_time =
local_time.dst_time_type =
local_time.start_time =
local_time.end_time =
local_time.offset_time =
local_time.manual_ntp_srv_prior =

local_time.interval =
local_time.time_format =
local_time.date_format =
lcl.datetime.date.format =

auto_dst.url =
http://%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICEEA
CCESSURI%Autodst.xml
local_time.ntp_server1 = %SNTP_SERVER_1%
local_time.ntp_server2 = %SNTP_SERVER_2%
local_time.time_zone = %BWTIMEZONE-1%
local_time.time_zone_name = %TIMEZONENAME%

#####
#####
##                               Call Display
##
```

```
#####
#####
phone_setting.called_party_info_display.enable =
phone_setting.call_info_display_method =

#####
#####
##                               Base_Upgrade
##
#####
#####
static.firmware.url =
http://%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICEA
CCESSURI%W90B_FIRMWARE%

#####
#####
##                               Handset_upgrade
##
#####
#####
over_the_air.url =
over_the_air.url.w53h =
over_the_air.url.w56h =
over_the_air.url.cp930w =
over_the_air.url.t41s_dd10k =
over_the_air.url.w59r =
over_the_air.base_trigger =
over_the_air.handset_trigger =
over_the_air.handset_tip =

#W80B ADD
over_the_air.mode =

#####
#####
##                               Autop PNP
##
#####
#####
static.auto_provision.pnp_enable =

#####
#####
##                               Autop URL
##
#####
#####
static.auto_provision.server.url =
http://%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICEA
CCESSURI%
static.auto_provision.server.username =%BWDEVICEUSERNAME%
static.auto_provision.server.password =%DEVICE_ACCESS_PWD%

#####
#####
##                               Autop Weekly
##
#####
#####
static.auto_provision.weekly.enable =
```

```

static.auto_provision.weekly_upgrade_interval =
static.auto_provision.weekly.begin_time =
static.auto_provision.weekly.end_time =
static.auto_provision.weekly.dayofweek =

#####
#####
##
##
##
#####
#####
static.auto_provision.repeat.enable =
static.auto_provision.repeat.minutes =

#####
#####
##
##
##
#####
#####
static.auto_provision.dhcp_option.enable =
static.auto_provision.dhcp_option.list_user_options =
static.auto_provision.dhcp_option.option60_value =

#####
#####
##
##
##
#####
#####
static.auto_provision.power_on =

#####
#####
##
##
##
#####
#####
static.auto_provision.flexible.enable =
static.auto_provision.flexible.interval=
static.auto_provision.flexible.begin_time =
static.auto_provision.flexible.end_time =

#####
#####
##
##
##
#####
#####
static.auto_provision.attempt_expired_time =

static.auto_provision.aes_key.com =
static.auto_provision.aes_key.mac =

static.auto_provision.inactivity_time_expire =

static.auto_provision.aes_key_in_file =
static.auto_provision.encryption.config =

```

```

static.auto_provision.url_wildcard.pn =
static.auto_provision.reboot_force.enable =

static.auto_provision.custom.protect =
static.auto_provision.local_log.backup.enable =
static.auto_provision.local_log.backup.path =
static.auto_provision.local_log.backup.upload_period =
static.auto_provision.local_log.backup.append =
static.auto_provision.local_log.backup.append.limit_mode =
static.auto_provision.local_log.backup.append.max_file_size =
static.auto_provision.local_log.backup.bootlog.upload_wait_time =
static.auto_provision.attempt_before_failed =
static.auto_provision.retry_delay_after_file_transfer_failed =
static.auto_provision.custom.sync =
static.auto_provision.custom.sync.path =
static.auto_provision.custom.upload_method =
static.auto_provision.server.type =
static.auto_provision.user_agent_mac.enable =
static.auto_provision.update_file_mode =
static.auto_provision.dns_resolv_nosys =
static.auto_provision.dns_resolv_nretry =
static.auto_provision.dns_resolv_timeout =

#####
#####
##                                     Alarm
##
#####
#####
#* range from 1 to 10
alarm.*.handset_stop.enable=1
alarm.*.name=
alarm.*.pre_alarm.delay=0
alarm.*.pre_alarm.handset_stop.enable=1
alarm.*.ring.enable=1
alarm.*.trigger_delay=3
alarm.*.type=0
alarm.*.weekly.begin_time=00:00
alarm.*.weekly.dayofweek=0123456
alarm.*.weekly.end_time=00:00

#####
#####
##                                     All Base Diagnostics
##
#####
#####
static.diagnose.server.port =
static.diagnose.server.username =
static.diagnose.server.url =
static.diagnose.server.password =
static.diagnose.type =
static.diagnose.pcap.max_size =
static.diagnose.log.max_size =

#####
#####
##                                     log Setting
##

```

```
#####
#####
static.local_log.enable =
static.local_log.level =
static.local_log.max_file_size =

static.syslog.enable =
static.syslog.server =
static.syslog.server_port =
static.syslog.transport_type =
static.syslog.level =
static.syslog.facility =
static.syslog.prepend_mac_address.enable =

#####
#####
##                               Dial Plan
##
#####
#####

dialplan.replace.prefix.1 =
dialplan.replace.replace.1 =
dialplan.replace.line_id.1 =
#dialplan_replace_rule.url =
http://%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICEA
CCESSURI%dialplan.xml

dialplan.dialnow.rule.1 =
dialplan.dialnow.line_id.1 =
phone_setting.dialnow_delay =
#dialplan_dialnow.url =
http://%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICEA
CCESSURI%dialnow.xml

dialplan.area_code.code =
dialplan.area_code.min_len =
dialplan.area_code.max_len =
dialplan.area_code.line_id =

dialplan.block_out.number.1 =
dialplan.block_out.line_id.1 =

dialplan.emergency.enable =
dialplan.emergency.asserted_id_source =
dialplan.emergency.custom_asserted_id =
dialplan.emergency.server.1.address =
dialplan.emergency.server.1.port =
dialplan.emergency.server.1.transport_type =
dialplan.emergency.1.value =
dialplan.emergency.1.server_priority =

#####
#####
##                               Echo Cancellation
##
#####
#####
voice.vad =
voice.cng =
```

```
#####
#####
##                               Jitter Buffer
##
#####
#####
voice.jib.adaptive =
voice.jib.min =
voice.jib.max =
voice.jib.normal =

#####
#####
##                               Tone
##
#####
#####
voice.tone.country =
voice.tone.dial =
voice.tone.ring =
voice.tone.busy =
voice.tone.callwaiting =

#####
#####
##                               TR069
##
#####
#####
static.managementserver.enable =
static.managementserver.username =
static.managementserver.password =
static.managementserver.url =
static.managementserver.periodic_inform_enable =
static.managementserver.periodic_inform_interval =
static.managementserver.connection_request_username =
static.managementserver.connection_request_password =

#####
#####
##                               SIP Advanced
##
#####
#####
sip.timer_t1 =
sip.timer_t2 =
sip.timer_t4 =
sip.listen_port =
sip.tls_listen_port =
sip.disp_incall_to_info =
###DECT V83 Add
sip.request_validation.source.list =
sip.request_validation.digest.list =
sip.request_validation.event =
sip.request_validation.digest.realm =
sip.send_response_by_request =
sip.notify_reboot_enable =
sip.requesturi.e164.addglobalprefix =
sip.cid_source.preference =
sip.mac_in_ua =
```

```
#####
#####
##                               Contacts
##
#####
#####

#handset.1.contact_list.url =
http://%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICEA
CCESSURI%contactData1.xml

static.directory_setting.shared_contact.enable =
shared_contact_list.url =

#####
#####
##                               Remote Phonebook
##
#####
#####

remote_phonebook.data.1.url =
remote_phonebook.data.1.name =
remote_phonebook.display_name =

features.remote_phonebook.enable =
features.remote_phonebook.flash_time =

#####
#####
##                               LDAP
##
#####
#####

ldap.enable =
ldap.customize_label =
ldap.name_filter =
ldap.number_filter =
ldap.tls_mode =
ldap.host =
ldap.port =
ldap.base =
ldap.user =
ldap.password =
ldap.max_hits =
ldap.name_attr =
ldap.numb_attr =
ldap.display_name =
ldap.version =
ldap.call_in_lookup =
ldap.call_out_lookup =
ldap.ldap_sort =
ldap.incoming_call_special_search.enable =

#####
#####
##                               XML_Phonebook
##
#####
#####
#X ranges from 1 to 8
```

```

xml_phonebook.data.max_hits =
xml_phonebook.data.x.password =
xml_phonebook.data.x.username =
xml_phonebook.data.x.name =
xml_phonebook.data.x.url =

#####
#####
##                               Super Search
##
#####
#####
super_search.recent_call =
super_search.url =
search_in_dialing.local_directory.priority =
search_in_dialing.local_directory.enable =
search_in_dialing.history.priority =
search_in_dialing.history.enable =
search_in_dialing.remote_phone_book.priority =
search_in_dialing.remote_phone_book.enable =
search_in_dialing.ldap.priority =
search_in_dialing.ldap.enable =
search_in_dialing.bw_directory.priority =
search_in_dialing.bw_directory.enable =

directory.search_default_input_method =
directory.search_type =

phone_setting.ringing_timeout =
phone_setting.ringback_timeout =

#####
#####
##                               Security Settings
##
#####
#####

static.security.user_password =

static.security.user_name.user =
static.security.user_name.admin =

base.pin_code =
base.double_pin_code.enable =
base.pin_code_for_register =
wui.quick_login =
wui.secure_domain_list =
static.features.custom_factory_config.enable =
static.security.default_ssl_method =
static.security.server_ssl_method =

static.security.var_enable =
#static.web_item_level.url
=http://%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICE
ACCESSURI%WebItemsLevel.cfg
static.security.default_access_level =
static.security.user_name.var =

```



```
#####
#####
##                               Security
##
#####
#####
static.security.trust_certificates =
static.security.cn_validation =

static.security.ca_cert =
static.security.dev_cert =
static.phone_setting.reserve_certs_enable =

#####
#####
##                               Trusted Certificates
##
#####
#####
#static.trusted_certificates.url =
http://%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICEA
CCESSURI%ca.crt
#trusted_certificates.delete = http://localhost/all,delete all the trusted
certificates;
static.trusted_certificates.delete =

#####
#####
##                               Server Certificates
##
#####
#####
#static.server_certificates.url =
http://%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICEA
CCESSURI%server.pem
#server_certificates.delete = http://localhost/all, delete the server
certificate;
static.server_certificates.delete =

#####
#####
##                               Language Settings
##
#####
#####
lang.wui =

wui_lang.delete =
wui_lang.url =

#####
#####
##                               Customized Factory Configurations
##
#####
#####
#static.custom_factory_configuration.url
=http://%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICE
ACCESSURI%factory.cfg
static.configuration.url =
```

```
static.custom_mac_cfg.url =

all_configuration_export.enable=

#####
#####
##                               Handset
##
#####
#####

static.auto_provision.handset_configured.enable =
static.auto_provision.custom.handset.protect =
custom.handset.language=
custom.handset.time_format =
custom.handset.date_format =
custom.handset.screen_saver.enable =
custom.handset.backlight_in_charger.enable =
custom.handset.backlight_out_of_charger.enable =
custom.handset.keypad_light.enable =
custom.handset.keypad_tone.enable =
custom.handset.confirmation_tone.enable =
custom.handset.low_battery_tone.enable =
custom.handset.auto_answer.enable =

custom.handset.defined_left_key.type =
custom.handset.defined_right_key.type =
custom.handset.defined_direction_left_key.type =
custom.handset.defined_direction_right_key.type =
custom.handset.defined_direction_up_key.type =
custom.handset.defined_direction_down_key.type =
custom.handset.defined_left_key.xml_url =
custom.handset.defined_right_key.xml_url
custom.handset.defined_direction_left_key.xml_url
custom.handset.defined_direction_right_key.xml_url
custom.handset.defined_direction_up_key.xml_url
custom.handset.defined_direction_down_key.xml_url

#It is only for W56H
custom.handset.wallpaper =

#####
#####
##                               DNS
##
#####
#####
dns_cache_a.1.name =
dns_cache_a.1.ip =
dns_cache_a.1.ttl =
dns_cache_srv.1.name =
dns_cache_srv.1.port =
dns_cache_srv.1.priority =
dns_cache_srv.1.target =
dns_cache_srv.1.weight =
dns_cache_srv.1.ttl =
dns_cache_naptr.1.name =
dns_cache_naptr.1.order =
dns_cache_naptr.1.preference =
dns_cache_naptr.1.replace =
dns_cache_naptr.1.service =
```

```

dns_cache_naptr.1.ttl =

#####
#                               SIP Backup Server                               ##
#####
static.network.dns.ttl_enable =
static.network.dns.last_cache_expired.enable=
static.network.dns.last_cache_expired =
static.network.dns.query_timeout =
static.network.dns.retry_times =
sip.dns_transport_type =
sip.skip_redundant_failover_addr =

#V80 Add
features.barge_in_via_username.enable =

#####
#####
##                               Other                               ##
##
#####
#####
features.dnd.allow =
features.fwd.allow =
phone_setting.disable_account_without_username.enable =
phone_setting.end_call_net_disconnect.enable =
push_xml.sip_notify =
phone_setting.warnings_display.mode =

#####
#####
##                               Broadsoft Setting                               ##
##
#####
#####
bw.enable =
features.feature_key_sync.enable =
bw.xsi.enable =
sip.authentication_for_xsi =

bw.xsi.call_log.enable =
bw.xsi.call_log.multiple_accounts.enable =

bw.xsi.directory.enable =
bw_phonebook.group_enable =
bw_phonebook.personal_enable =
bw_phonebook.group_common_enable =
bw_phonebook.enterprise_enable =
bw_phonebook.enterprise_common_enable =
bw_phonebook.group_displayname =%BWGROUPID-1%
bw_phonebook.personal_displayname =
bw_phonebook.group_common_displayname =
bw_phonebook.enterprise_displayname =%BWENTERPRISEID-
1%BWSERVICEPROVIDERID-1%
bw_phonebook.enterprise_common_displayname =
bw_phonebook.custom =
directory.update_time_interval =

#####
#####
##                               Call Park                               ##
##

```

```
#####
#####

features.call_park.enable = %FEATURE_BW_CALL_PARK%
features.call_park.group_enable = %FEATURE_BW_CALL_PARK%
features.call_park.park_ring = %FEATURE_BW_CALL_PARK%
features.call_park.park_visual_notify_enable = %FEATURE_BW_CALL_PARK%
features.call_park.group_park_code =
features.call_park.park_code =
features.call_park.park_mode =
features.call_park.park_retrieve_code =

#####
#####

##                                     Base Registration
##
#####
#####
static.station.mode=
features.dect_management.ip_address

#* range from 1 to 30
station.allowed.*.mac=
station.allowed.*.name=
station.allowed.*.sync.cluster=
station.allowed.*.sync.level=
station.*.name=
station.*.active=
station.*.sync.cluster=
station.*.sync.level=
station.*.sync.type=
static.station.*.network.type=
static.station.*.network.ip=
static.station.*.network.gateway=
static.station.*.network.mask=

#W90B ADD
station.*.ext_ptp.enable
station.*.lan_master.enable
station.*.lan_transport
station.allowed.*.ext_ptp.enable
station.allowed.*.lan_master.enable
station.allowed.*.sync.type

#W80B ADD
features.media_transmit.enable=

#W90B ADD
phone_setting.auto_sync.action=
features.sync.tree.mode=

#####
#####

##                                     web
##
#####
#####
web_setting.dm.title =
web_setting.base.title =
```

```

web_setting.dm.model_name =
web_setting.base.model_name =
phone_setting.dm.login_note_text =
phone_setting.base.login_note_text =

#####
#####
##
##
#####
#####
static.dm.enable=
static.dm.server.address=
static.dm.server.port=

#####
#####
##
##
#####
#####
voice.handset.tia4965.enable=
voice.headset.tia4965.enable=

#####
#####
##
##
#####
#####
#template.X.name=
#template.X.outbound.Y.address=
#template.X.outbound.Y.port=
#template.X.outbound.enable=
#template.X.outbound.fallback_interval=
#template.X.sip_server.Y.address=
#template.X.sip_server.Y.expires=
#template.X.sip_server.Y.port=
#template.X.sip_server.Y.retry_counts=
#template.X.sip_server.Y.transport_type=
###(X ranges from 1 to 10;Y ranges from 1 to 2)

template.1.name =
template.1.sip_server.1.address = %BWHOST-1%
template.1.sip_server.1.port = 5060
template.1.sip_server.1.transport_type = %TRANSPORT%
template.1.sip_server.1.expires = 3600
template.1.sip_server.1.retry_counts =
template.1.sip_server.2.address =
template.1.sip_server.2.port =
template.1.sip_server.2.transport_type =
template.1.sip_server.2.expires =
template.1.sip_server.2.retry_counts =
template.1.outbound.1.address= %SBC_ADDRESS%
template.1.outbound.1.port= %SBC_PORT%
template.1.outbound.2.address=
template.1.outbound.2.port=
template.1.outbound.enable= %USE_SBC_BOOLEAN%
template.1.outbound.fallback_interval=

template.2.name =
template.2.sip_server.1.address = %BWHOST-2%

```

```
template.2.sip_server.1.port = 5060
template.2.sip_server.1.transport_type = %TRANSPORT%
template.2.sip_server.1.expires = 3600
template.2.sip_server.1.retry_counts =
template.2.sip_server.2.address =
template.2.sip_server.2.port =
template.2.sip_server.2.transport_type =
template.2.sip_server.2.expires =
template.2.sip_server.2.retry_counts =
template.2.outbound.1.address= %SBC_ADDRESS%
template.2.outbound.1.port= %SBC_PORT%
template.2.outbound.2.address=
template.2.outbound.2.port=
template.2.outbound.enable= %USE_SBC_BOOLEAN%
template.2.outbound.fallback_interval=

template.3.name =
template.3.sip_server.1.address = %BWHOST-3%
template.3.sip_server.1.port = 5060
template.3.sip_server.1.transport_type = %TRANSPORT%
template.3.sip_server.1.expires = 3600
template.3.sip_server.1.retry_counts =
template.3.sip_server.2.address =
template.3.sip_server.2.port =
template.3.sip_server.2.transport_type =
template.3.sip_server.2.expires =
template.3.sip_server.2.retry_counts =
template.3.outbound.1.address= %SBC_ADDRESS%
template.3.outbound.1.port= %SBC_PORT%
template.3.outbound.2.address=
template.3.outbound.2.port=
template.3.outbound.enable= %USE_SBC_BOOLEAN%
template.3.outbound.fallback_interval=

template.4.name =
template.4.sip_server.1.address = %BWHOST-4%
template.4.sip_server.1.port = 5060
template.4.sip_server.1.transport_type = %TRANSPORT%
template.4.sip_server.1.expires = 3600
template.4.sip_server.1.retry_counts =
template.4.sip_server.2.address =
template.4.sip_server.2.port =
template.4.sip_server.2.transport_type =
template.4.sip_server.2.expires =
template.4.sip_server.2.retry_counts =
template.4.outbound.1.address= %SBC_ADDRESS%
template.4.outbound.1.port= %SBC_PORT%
template.4.outbound.2.address=
template.4.outbound.2.port=
template.4.outbound.enable= %USE_SBC_BOOLEAN%
template.4.outbound.fallback_interval=

template.5.name =
template.5.sip_server.1.address = %BWHOST-5%
template.5.sip_server.1.port = 5060
template.5.sip_server.1.transport_type = %TRANSPORT%
template.5.sip_server.1.expires = 3600
template.5.sip_server.1.retry_counts =
template.5.sip_server.2.address =
template.5.sip_server.2.port =
template.5.sip_server.2.transport_type =
template.5.sip_server.2.expires =
template.5.sip_server.2.retry_counts =
```

```
template.5.outbound.1.address= %SBC_ADDRESS%
template.5.outbound.1.port= %SBC_PORT%
template.5.outbound.2.address=
template.5.outbound.2.port=
template.5.outbound.enable= %USE_SBC_BOOLEAN%
template.5.outbound.fallback_interval=

template.6.name =
template.6.sip_server.1.address = %BWHOST-6%
template.6.sip_server.1.port = 5060
template.6.sip_server.1.transport_type = %TRANSPORT%
template.6.sip_server.1.expires = 3600
template.6.sip_server.1.retry_counts =
template.6.sip_server.2.address =
template.6.sip_server.2.port =
template.6.sip_server.2.transport_type =
template.6.sip_server.2.expires =
template.6.sip_server.2.retry_counts =
template.6.outbound.1.address= %SBC_ADDRESS%
template.6.outbound.1.port= %SBC_PORT%
template.6.outbound.2.address=
template.6.outbound.2.port=
template.6.outbound.enable= %USE_SBC_BOOLEAN%
template.6.outbound.fallback_interval=

template.7.name =
template.7.sip_server.1.address = %BWHOST-7%
template.7.sip_server.1.port = 5060
template.7.sip_server.1.transport_type = %TRANSPORT%
template.7.sip_server.1.expires = 3600
template.7.sip_server.1.retry_counts =
template.7.sip_server.2.address =
template.7.sip_server.2.port =
template.7.sip_server.2.transport_type =
template.7.sip_server.2.expires =
template.7.sip_server.2.retry_counts =
template.7.outbound.1.address= %SBC_ADDRESS%
template.7.outbound.1.port= %SBC_PORT%
template.7.outbound.2.address=
template.7.outbound.2.port=
template.7.outbound.enable= %USE_SBC_BOOLEAN%
template.7.outbound.fallback_interval=

template.8.name =
template.8.sip_server.1.address = %BWHOST-8%
template.8.sip_server.1.port = 5060
template.8.sip_server.1.transport_type = %TRANSPORT%
template.8.sip_server.1.expires = 3600
template.8.sip_server.1.retry_counts =
template.8.sip_server.2.address =
template.8.sip_server.2.port =
template.8.sip_server.2.transport_type =
template.8.sip_server.2.expires =
template.8.sip_server.2.retry_counts =
template.8.outbound.1.address= %SBC_ADDRESS%
template.8.outbound.1.port= %SBC_PORT%
template.8.outbound.2.address=
template.8.outbound.2.port=
template.8.outbound.enable= %USE_SBC_BOOLEAN%
template.8.outbound.fallback_interval=

template.9.name =
template.9.sip_server.1.address = %BWHOST-9%
```

```

template.9.sip_server.1.port = 5060
template.9.sip_server.1.transport_type = %TRANSPORT%
template.9.sip_server.1.expires = 3600
template.9.sip_server.1.retry_counts =
template.9.sip_server.2.address =
template.9.sip_server.2.port =
template.9.sip_server.2.transport_type =
template.9.sip_server.2.expires =
template.9.sip_server.2.retry_counts =
template.9.outbound.1.address= %SBC_ADDRESS%
template.9.outbound.1.port= %SBC_PORT%
template.9.outbound.2.address=
template.9.outbound.2.port=
template.9.outbound.enable= %USE_SBC_BOOLEAN%
template.9.outbound.fallback_interval=

template.10.name =
template.10.sip_server.1.address = %BWHOST-10%
template.10.sip_server.1.port = 5060
template.10.sip_server.1.transport_type = %TRANSPORT%
template.10.sip_server.1.expires = 3600
template.10.sip_server.1.retry_counts =
template.10.sip_server.2.address =
template.10.sip_server.2.port =
template.10.sip_server.2.transport_type =
template.10.sip_server.2.expires =
template.10.sip_server.2.retry_counts =
template.10.outbound.1.address= %SBC_ADDRESS%
template.10.outbound.1.port= %SBC_PORT%
template.10.outbound.2.address=
template.10.outbound.2.port=
template.10.outbound.enable= %USE_SBC_BOOLEAN%
template.10.outbound.fallback_interval=

#####
#####
##                                     Account1 Settings
##
#####
#####

account.1.enable=%BWLIN-BINARY-1%
account.1.label=%BWEXTENSION-1%
account.1.display_name=%BWCLID-1%
account.1.auth_name=%BWAUTHUSER-1%
account.1.user_name=%BWLINPORT-1%
account.1.password=%BWAUTHPASSWORD-1%

#W80B ADD
account.1.sip_server.template =
account.1.media_transmit.enable =

account.1.alarm.template =
account.1.alarm.server =
account.1.alarm.number =

#####
#####
##                                     Fallback
##
##

```



```
#####
#####
account.1.sip_server.1.failback_mode =
account.1.sip_server.1.failback_timeout =
account.1.sip_server.1.register_on_enable =
account.1.sip_server.1.failback_subscribe.enable =
account.1.sip_server.1.invite_retry_counts =
account.1.sip_server.1.only_signal_with_registered =

account.1.sip_server.2.failback_mode =
account.1.sip_server.2.failback_timeout =
account.1.sip_server.2.register_on_enable =
account.1.sip_server.2.failback_subscribe.enable =
account.1.sip_server.2.invite_retry_counts =
account.1.sip_server.2.only_signal_with_registered =

account.1.naptr_build =
account.1.failback.redundancy_type =
account.1.failback.timeout =

account.1.dns_cache_type =
account.1.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.1.anonymous_call =
account.1.reject_anonymous_call =
account.1.send_anonymous_code =
account.1.anonymous_call_oncode =
account.1.anonymous_call_offcode =
account.1.send_anonymous_rejection_code =
account.1.anonymous_reject_oncode =
account.1.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.1.codec.g722.enable =
account.1.codec.g722.priority =

account.1.codec.g729.enable =
account.1.codec.g729.priority =

account.1.codec.g726_16.enable =
account.1.codec.g726_16.priority =

account.1.codec.g726_24.enable =
account.1.codec.g726_24.priority =

account.1.codec.g726_32.enable =
account.1.codec.g726_32.priority =

account.1.codec.g726_40.enable =
account.1.codec.g726_40.priority =
```

```

account.1.codec.ilbc.enable =
account.1.codec.ilbc.priority =

account.1.codec.pcmu.enable =
account.1.codec.pcmu.priority =

account.1.codec.pcma.enable =
account.1.codec.pcma.priority =

account.1.codec.opus.enable =
account.1.codec.opus.priority =

#####
#####
##                               NAT Settings
##
#####
#####

account.1.nat.nat_traversal =
account.1.nat.udp_update_enable =
account.1.nat.udp_update_time =
account.1.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.1.blf.subscribe_period =
account.1.dtmf.type =
account.1.dtmf.dtmf_payload =
account.1.dtmf.info_type =
account.1.100rel_enable =
account.1.subscribe_register =
account.1.subscribe_mwi =
account.1.subscribe_mwi_expires =
account.1.subscribe_mwi_to_vm =
voice_mail.number.1 = %BWVOICE-PORTAL-NUMBER-1%
account.1.display_mwi.enable =
account.1.cid_source =
account.1.cid_source_privacy =
account.1.cid_source_ppi =
account.1.session_timer.enable =
account.1.session_timer.expires =
account.1.session_timer.refresher =
account.1.enable_user_equal_phone =
account.1.srtp_encryption =
account.1.ptime =
account.1.shared_line = %BWSHAREDLINE-BINARY-1%
account.1.register_mac =
account.1.register_line =
account.1.reg_fail_retry_interval =
account.1.reg_failed_retry_min_time =
account.1.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##

```

```
#####
#####
account.1.conf_type =
account.1.conf_uri = %BWNWORK-CONFERENCE-SIPURI-1%

account.1.sip_server_type =
account.1.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.1.register_expires_overlap =
account.1.subscribe_expires_overlap =
account.1.auto_dial_enable =
account.1.auto_dial_num =
account.1.cp_source =
account.1.transfer_refer_to_contact_header.enable =
#V80 Add
account.1.custom_ua =
account.1.callpark.enable =
account.1.check_cseq.enable =
account.1.check_to_tag.enable =
account.1.hold_use_inactive =
account.1.line_seize.expires =
account.1.update_ack_while_dialing =
account.1.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.1.always_fwd.enable =
account.1.always_fwd.target =
account.1.always_fwd.off_code =
account.1.always_fwd.on_code =
account.1.busy_fwd.enable =
account.1.busy_fwd.target =
account.1.busy_fwd.off_code =
account.1.busy_fwd.on_code =
account.1.timeout_fwd.enable =
account.1.timeout_fwd.target =
account.1.timeout_fwd.timeout =
account.1.timeout_fwd.off_code =
account.1.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.1.dnd.enable =
account.1.dnd.on_code =
account.1.dnd.off_code =
```

```
#####
#####
##                               IPUi Registration
##
#####
#####
handset.1.reg.enable =
handset.1.ipui =

#####
#####
##           Broadsoft XSI
##
#####
#####

account.1.xsi.user =%BWLOGIN-ID-1%
account.1.xsi.password =%XSIPASSWORD-1%
account.1.xsi.host =%XSP_ADDRESS%
account.1.xsi.server_type =
account.1.xsi.port =

#####
#####
##                               LADP
##
#####
#####
handset.1 ldap.enable =
handset.1 ldap.name_filter=
handset.1 ldap.number_filter=
handset.1 ldap.host=
handset.1 ldap.port=
handset.1 ldap.base=
handset.1 ldap.user=
handset.1 ldap.password=
handset.1 ldap.max_hits=
handset.1 ldap.name_attr=
handset.1 ldap.numb_attr=
handset.1 ldap.display_name=
handset.1 ldap.version=
handset.1 ldap.call_in_lookup=
handset.1 ldap.ldap_sort=
handset.1 ldap.tls_mode=
handset.1 ldap.call_out_lookup=
handset.1 ldap.incoming_call_special_search.enable=

#####
#####
##                               Account2 Settings
##
#####
#####

account.2.enable=%BWLINE-BINARY-2%
account.2.label=%BWEXTENSION-2%
account.2.display_name=%BWCLID-2%
account.2.auth_name=%BWAUTHUSER-2%
```

```

account.2.user_name=%BWLINEPORT-2%
account.2.password=%BWAUTHPASSWORD-2%

#W80B ADD
account.2.sip_server.template =
account.2.media_transmit.enable =

account.2.alarm.template =
account.2.alarm.server =
account.2.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.2.sip_server.1.failback_mode =
account.2.sip_server.1.failback_timeout =
account.2.sip_server.1.register_on_enable =
account.2.sip_server.1.failback_subscribe.enable =
account.2.sip_server.1.invite_retry_counts =
account.2.sip_server.1.only_signal_with_registered =

account.2.sip_server.2.failback_mode =
account.2.sip_server.2.failback_timeout =
account.2.sip_server.2.register_on_enable =
account.2.sip_server.2.failback_subscribe.enable =
account.2.sip_server.2.invite_retry_counts =
account.2.sip_server.2.only_signal_with_registered =

account.2.naptr_build =
account.2.failback.redundancy_type =
account.2.failback.timeout =

account.2.dns_cache_type =
account.2.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.2.anonymous_call =
account.2.reject_anonymous_call =
account.2.send_anonymous_code =
account.2.anonymous_call_oncode =
account.2.anonymous_call_offcode =
account.2.send_anonymous_rejection_code =
account.2.anonymous_reject_oncode =
account.2.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.2.codec.g722.enable =
account.2.codec.g722.priority =

```

```
account.2.codec.g729.enable =
account.2.codec.g729.priority =

account.2.codec.g726_16.enable =
account.2.codec.g726_16.priority =

account.2.codec.g726_24.enable =
account.2.codec.g726_24.priority =

account.2.codec.g726_32.enable =
account.2.codec.g726_32.priority =

account.2.codec.g726_40.enable =
account.2.codec.g726_40.priority =

account.2.codec.ilbc.enable =
account.2.codec.ilbc.priority =

account.2.codec.pcmu.enable =
account.2.codec.pcmu.priority =

account.2.codec.pcma.enable =
account.2.codec.pcma.priority =

account.2.codec.opus.enable =
account.2.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.2.nat.nat_traversal =
account.2.nat.udp_update_enable =
account.2.nat.udp_update_time =
account.2.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.2.blf.subscribe_period =
account.2.dtmf.type =
account.2.dtmf.dtmf_payload =
account.2.dtmf.info_type =
account.2.100rel_enable =
account.2.subscribe_register =
account.2.subscribe_mwi =
account.2.subscribe_mwi_expires =
account.2.subscribe_mwi_to_vm =
voice_mail.number.2 = %BWVOICE-PORTAL-NUMBER-2%
account.2.display_mwi.enable =
account.2.cid_source =
account.2.cid_source_privacy =
account.2.cid_source_ppi =
account.2.session_timer.enable =
account.2.session_timer.expires =
account.2.session_timer.refreshes =
```

```
account.2.enable_user_equal_phone =
account.2.srtp_encryption =
account.2.ptime =
account.2.shared_line = %BWSHAREDLINE-BINARY-2%
account.2.register_mac =
account.2.register_line =
account.2.reg_fail_retry_interval =
account.2.reg_failed_retry_min_time =
account.2.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.2.conf_type =
account.2.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-2%

account.2.sip_server_type =
account.2.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.2.register_expires_overlap =
account.2.subscribe_expires_overlap =
account.2.auto_dial_enable =
account.2.auto_dial_num =
account.2.cp_source =
account.2.transfer_refer_to_contact_header.enable =
#V80 Add
account.2.custom_ua =
account.2.callpark_enable =
account.2.check_cseq.enable =
account.2.check_to_tag.enable =
account.2.hold_use_inactive =
account.2.line_seize.expires =
account.2.update_ack_while_dialing =
account.2.sub_fail_retry_interval =

#####
#####
##                                     Call Forward
##
#####
#####
account.2.always_fwd.enable =
account.2.always_fwd.target =
account.2.always_fwd.off_code =
account.2.always_fwd.on_code =
account.2.busy_fwd.enable =
account.2.busy_fwd.target =
account.2.busy_fwd.off_code =
account.2.busy_fwd.on_code =
account.2.timeout_fwd.enable =
account.2.timeout_fwd.target =
```

```
account.2.timeout_fwd.timeout =
account.2.timeout_fwd.off_code =
account.2.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.2.dnd.enable =
account.2.dnd.on_code =
account.2.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.2.reg.enable =
handset.2.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.2.xsi.user =%BWLOGIN-ID-2%
account.2.xsi.password =%XSIPASSWORD-2%
account.2.xsi.host =%XSP_ADDRESS%
account.2.xsi.server_type =
account.2.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.2.ldap.enable =
handset.2.ldap.name_filter=
handset.2.ldap.number_filter=
handset.2.ldap.host=
handset.2.ldap.port=
handset.2.ldap.base=
handset.2.ldap.user=
handset.2.ldap.password=
handset.2.ldap.max_hits=
handset.2.ldap.name_attr=
handset.2.ldap.numb_attr=
handset.2.ldap.display_name=
handset.2.ldap.version=
handset.2.ldap.call_in_lookup=
handset.2.ldap.ldap_sort=
handset.2.ldap.tls_mode=
handset.2.ldap.call_out_lookup=
handset.2.ldap.incoming_call_special_search.enable=
```



```
#####
#####
##                               Account3 Settings
##
#####
#####

account.3.enable=%BWLIN-BINARY-3%
account.3.label=%BWEXTENSION-3%
account.3.display_name=%BWCLID-3%
account.3.auth_name=%BWAUTHUSER-3%
account.3.user_name=%BWLINPORT-3%
account.3.password=%BWAUTHPASSWORD-3%

#W80B ADD
account.3.sip_server.template =
account.3.media_transmit.enable =

account.3.alarm.template =
account.3.alarm.server =
account.3.alarm.number =

#####
#####
##                               Failback
##
##
#####
#####
account.3.sip_server.1.failback_mode =
account.3.sip_server.1.failback_timeout =
account.3.sip_server.1.register_on_enable =
account.3.sip_server.1.failback_subscribe.enable =
account.3.sip_server.1.invite_retry_counts =
account.3.sip_server.1.only_signal_with_registered =

account.3.sip_server.2.failback_mode =
account.3.sip_server.2.failback_timeout =
account.3.sip_server.2.register_on_enable =
account.3.sip_server.2.failback_subscribe.enable =
account.3.sip_server.2.invite_retry_counts =
account.3.sip_server.2.only_signal_with_registered =

account.3.naptr_build =
account.3.failback.redundancy_type =
account.3.failback.timeout =

account.3.dns_cache_type =
account.3.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
##
#####
#####
account.3.anonymous_call =
account.3.reject_anonymous_call =
account.3.send_anonymous_code =
account.3.anonymous_call_oncode =
account.3.anonymous_call_offcode =
```

```
account.3.send_anonymous_rejection_code =
account.3.anonymous_reject_oncode =
account.3.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.3.codec.g722.enable =
account.3.codec.g722.priority =

account.3.codec.g729.enable =
account.3.codec.g729.priority =

account.3.codec.g726_16.enable =
account.3.codec.g726_16.priority =

account.3.codec.g726_24.enable =
account.3.codec.g726_24.priority =

account.3.codec.g726_32.enable =
account.3.codec.g726_32.priority =

account.3.codec.g726_40.enable =
account.3.codec.g726_40.priority =

account.3.codec.ilbc.enable =
account.3.codec.ilbc.priority =

account.3.codec.pcmu.enable =
account.3.codec.pcmu.priority =

account.3.codec.pcma.enable =
account.3.codec.pcma.priority =

account.3.codec.opus.enable =
account.3.codec.opus.priority =

#####
#####
##                               NAT Settings
##
##
#####
#####

account.3.nat.nat_traversal =
account.3.nat.udp_update_enable =
account.3.nat.udp_update_time =
account.3.nat.rport =

#####
#####
##                               Register Advanced
##
##
#####
#####

account.3.blf.subscribe_period =
account.3.dtmf.type =
account.3.dtmf.dtmf_payload =
```

```

account.3.dtmf.info_type =
account.3.100rel_enable =
account.3.subscribe_register =
account.3.subscribe_mwi =
account.3.subscribe_mwi_expires =
account.3.subscribe_mwi_to_vm =
voice_mail.number.3 = %BWVOICE-PORTAL-NUMBER-3%
account.3.display_mwi.enable =
account.3.cid_source =
account.3.cid_source_privacy =
account.3.cid_source_ppi =
account.3.session_timer.enable =
account.3.session_timer.expires =
account.3.session_timer.refresher =
account.3.enable_user_equal_phone =
account.3.srtp_encryption =
account.3.ptime =
account.3.shared_line = %BWSHAREDLINE-BINARY-3%
account.3.register_mac =
account.3.register_line =
account.3.reg_fail_retry_interval =
account.3.reg_failed_retry_min_time =
account.3.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.3.conf_type =
account.3.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-3%

account.3.sip_server_type =
account.3.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.3.register_expires_overlap =
account.3.subscribe_expires_overlap =
account.3.auto_dial_enable =
account.3.auto_dial_num =
account.3.cp_source =
account.3.transfer_refer_to_contact_header.enable =
#V80 Add
account.3.custom_ua =
account.3.callpark_enable =
account.3.check_cseq.enable =
account.3.check_to_tag.enable =
account.3.hold_use_inactive =
account.3.line_seize.expires =
account.3.update_ack_while_dialing =
account.3.sub_fail_retry_interval =

#####
#####

```

```

##                                Call Forward
##
#####
#####
account.3.always_fwd.enable =
account.3.always_fwd.target =
account.3.always_fwd.off_code =
account.3.always_fwd.on_code =
account.3.busy_fwd.enable =
account.3.busy_fwd.target =
account.3.busy_fwd.off_code =
account.3.busy_fwd.on_code =
account.3.timeout_fwd.enable =
account.3.timeout_fwd.target =
account.3.timeout_fwd.timeout =
account.3.timeout_fwd.off_code =
account.3.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.3.dnd.enable =
account.3.dnd.on_code =
account.3.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.3.reg.enable =
handset.3.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####
account.3.xsi.user =%BWLOGIN-ID-3%
account.3.xsi.password =%XSIPASSWORD-3%
account.3.xsi.host =%XSP_ADDRESS%
account.3.xsi.server_type =
account.3.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.3.ldap.enable =
handset.3.ldap.name_filter=
handset.3.ldap.number_filter=
handset.3.ldap.host=
handset.3.ldap.port=

```

```

handset.3.ldap.base=
handset.3.ldap.user=
handset.3.ldap.password=
handset.3.ldap.max_hits=
handset.3.ldap.name_attr=
handset.3.ldap.numb_attr=
handset.3.ldap.display_name=
handset.3.ldap.version=
handset.3.ldap.call_in_lookup=
handset.3.ldap.ldap_sort=
handset.3.ldap.tls_mode=
handset.3.ldap.call_out_lookup=
handset.3.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account4 Settings
##
#####
#####

account.4.enable=%BWLIN-BINARY-4%
account.4.label=%BWEXTENSION-4%
account.4.display_name=%BWCLID-4%
account.4.auth_name=%BWAUTHUSER-4%
account.4.user_name=%BWLINPORT-4%
account.4.password=%BWAUTHPASSWORD-4%

#W80B ADD
account.4.sip_server.template =
account.4.media_transmit.enable =

account.4.alarm.template =
account.4.alarm.server =
account.4.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.4.sip_server.1.failback_mode =
account.4.sip_server.1.failback_timeout =
account.4.sip_server.1.register_on_enable =
account.4.sip_server.1.failback_subscribe.enable =
account.4.sip_server.1.invite_retry_counts =
account.4.sip_server.1.only_signal_with_registered =

account.4.sip_server.2.failback_mode =
account.4.sip_server.2.failback_timeout =
account.4.sip_server.2.register_on_enable =
account.4.sip_server.2.failback_subscribe.enable =
account.4.sip_server.2.invite_retry_counts =
account.4.sip_server.2.only_signal_with_registered =

account.4.naptr_build =
account.4.failback.redundancy_type =
account.4.failback.timeout =

```

```
account.4.dns_cache_type =
account.4.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.4.anonymous_call =
account.4.reject_anonymous_call =
account.4.send_anonymous_code =
account.4.anonymous_call_oncode =
account.4.anonymous_call_offcode =
account.4.send_anonymous_rejection_code =
account.4.anonymous_reject_oncode =
account.4.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.4.codec.g722.enable =
account.4.codec.g722.priority =

account.4.codec.g729.enable =
account.4.codec.g729.priority =

account.4.codec.g726_16.enable =
account.4.codec.g726_16.priority =

account.4.codec.g726_24.enable =
account.4.codec.g726_24.priority =

account.4.codec.g726_32.enable =
account.4.codec.g726_32.priority =

account.4.codec.g726_40.enable =
account.4.codec.g726_40.priority =

account.4.codec.ilbc.enable =
account.4.codec.ilbc.priority =

account.4.codec.pcmu.enable =
account.4.codec.pcmu.priority =

account.4.codec.pcma.enable =
account.4.codec.pcma.priority =

account.4.codec.opus.enable =
account.4.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.4.nat.nat_traversal =
```

```

account.4.nat.udp_update_enable =
account.4.nat.udp_update_time =
account.4.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.4.blf.subscribe_period =
account.4.dtmf.type =
account.4.dtmf.dtmf_payload =
account.4.dtmf.info_type =
account.4.100rel_enable =
account.4.subscribe_register =
account.4.subscribe_mwi =
account.4.subscribe_mwi_expires =
account.4.subscribe_mwi_to_vm =
voice_mail.number.4 = %BWVOICE-PORTAL-NUMBER-4%
account.4.display_mwi.enable =
account.4.cid_source =
account.4.cid_source_privacy =
account.4.cid_source_ppi =
account.4.session_timer.enable =
account.4.session_timer.expires =
account.4.session_timer.refresher =
account.4.enable_user_equal_phone =
account.4.srtp_encryption =
account.4.ptime =
account.4.shared_line = %BWSHAREDLINE-BINARY-4%
account.4.register_mac =
account.4.register_line =
account.4.reg_fail_retry_interval =
account.4.reg_failed_retry_min_time =
account.4.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
##
#####
#####
account.4.conf_type =
account.4.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-4%

account.4.sip_server_type =
account.4.unregister_on_reboot =

#####
#####
##                               Register Other
##
##
#####
#####
##DECT V81 Add

account.4.register_expires_overlap =
account.4.subscribe_expires_overlap =
account.4.auto_dial_enable =
account.4.auto_dial_num =

```

```

account.4.cp_source =
account.4.transfer_refer_to_contact_header.enable =
#V80 Add
account.4.custom_ua =
account.4.callpark_enable =
account.4.check_cseq.enable =
account.4.check_to_tag.enable =
account.4.hold_use_inactive =
account.4.line_seize.expires =
account.4.update_ack_while_dialing =
account.4.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.4.always_fwd.enable =
account.4.always_fwd.target =
account.4.always_fwd.off_code =
account.4.always_fwd.on_code =
account.4.busy_fwd.enable =
account.4.busy_fwd.target =
account.4.busy_fwd.off_code =
account.4.busy_fwd.on_code =
account.4.timeout_fwd.enable =
account.4.timeout_fwd.target =
account.4.timeout_fwd.timeout =
account.4.timeout_fwd.off_code =
account.4.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.4.dnd.enable =
account.4.dnd.on_code =
account.4.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.4.reg.enable =
handset.4.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.4.xsi.user =%BWLOGIN-ID-4%
account.4.xsi.password =%XSIPASSWORD-4%
account.4.xsi.host =%XSP_ADDRESS%
account.4.xsi.server_type =

```



```

account.4.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.4.ldap.enable =
handset.4.ldap.name_filter=
handset.4.ldap.number_filter=
handset.4.ldap.host=
handset.4.ldap.port=
handset.4.ldap.base=
handset.4.ldap.user=
handset.4.ldap.password=
handset.4.ldap.max_hits=
handset.4.ldap.name_attr=
handset.4.ldap.numb_attr=
handset.4.ldap.display_name=
handset.4.ldap.version=
handset.4.ldap.call_in_lookup=
handset.4.ldap.ldap_sort=
handset.4.ldap.tls_mode=
handset.4.ldap.call_out_lookup=
handset.4.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account5 Settings
##
#####
#####
account.5.enable=%BWLIN-BINARY-5%
account.5.label=%BWEXTENSION-5%
account.5.display_name=%BWCLID-5%
account.5.auth_name=%BWAUTHUSER-5%
account.5.user_name=%BWLINPORT-5%
account.5.password=%BWAUTHPASSWORD-5%

#W80B ADD
account.5.sip_server.template =
account.5.media_transmit.enable =

account.5.alarm.template =
account.5.alarm.server =
account.5.alarm.number =

#####
#####
##                                Failback
##
#####
#####
account.5.sip_server.1.failback_mode =
account.5.sip_server.1.failback_timeout =
account.5.sip_server.1.register_on_enable =
account.5.sip_server.1.failback_subscribe.enable =

```

```

account.5.sip_server.1.invite_retry_counts =
account.5.sip_server.1.only_signal_with_registered =

account.5.sip_server.2.failback_mode =
account.5.sip_server.2.failback_timeout =
account.5.sip_server.2.register_on_enable =
account.5.sip_server.2.failback_subscribe.enable =
account.5.sip_server.2.invite_retry_counts =
account.5.sip_server.2.only_signal_with_registered =

account.5.naptr_build =
account.5.failback.redundancy_type =
account.5.failback.timeout =

account.5.dns_cache_type =
account.5.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.5.anonymous_call =
account.5.reject_anonymous_call =
account.5.send_anonymous_code =
account.5.anonymous_call_oncode =
account.5.anonymous_call_offcode =
account.5.send_anonymous_rejection_code =
account.5.anonymous_reject_oncode =
account.5.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.5.codec.g722.enable =
account.5.codec.g722.priority =

account.5.codec.g729.enable =
account.5.codec.g729.priority =

account.5.codec.g726_16.enable =
account.5.codec.g726_16.priority =

account.5.codec.g726_24.enable =
account.5.codec.g726_24.priority =

account.5.codec.g726_32.enable =
account.5.codec.g726_32.priority =

account.5.codec.g726_40.enable =
account.5.codec.g726_40.priority =

account.5.codec.ilbc.enable =
account.5.codec.ilbc.priority =

account.5.codec.pcmu.enable =
account.5.codec.pcmu.priority =

```

```

account.5.codec.pcma.enable =
account.5.codec.pcma.priority =

account.5.codec.opus.enable =
account.5.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.5.nat.nat_traversal =
account.5.nat.udp_update_enable =
account.5.nat.udp_update_time =
account.5.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.5.blf.subscribe_period =
account.5.dtmf.type =
account.5.dtmf.dtmf_payload =
account.5.dtmf.info_type =
account.5.100rel_enable =
account.5.subscribe_register =
account.5.subscribe_mwi =
account.5.subscribe_mwi_expires =
account.5.subscribe_mwi_to_vm =
voice_mail.number.5 = %BWVOICE-PORTAL-NUMBER-5%
account.5.display_mwi.enable =
account.5.cid_source =
account.5.cid_source_privacy =
account.5.cid_source_ppi =
account.5.session_timer.enable =
account.5.session_timer.expires =
account.5.session_timer.refreshes =
account.5.enable_user_equal_phone =
account.5.srtp_encryption =
account.5.ptime =
account.5.shared_line = %BWSHAREDLINE-BINARY-5%
account.5.register_mac =
account.5.register_line =
account.5.reg_fail_retry_interval =
account.5.reg_failed_retry_min_time =
account.5.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####

account.5.conf_type =
account.5.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-5%

account.5.sip_server_type =
account.5.unregister_on_reboot =

```

```
#####
#####
##                                Register Other
##
#####
#####
##DECT V81 Add

account.5.register_expires_overlap =
account.5.subscribe_expires_overlap =
account.5.auto_dial_enable =
account.5.auto_dial_num =
account.5.cp_source =
account.5.transfer_refer_to_contact_header.enable =
#V80 Add
account.5.custom_ua =
account.5.callpark_enable =
account.5.check_cseq.enable =
account.5.check_to_tag.enable =
account.5.hold_use_inactive =
account.5.line_seize.expires =
account.5.update_ack_while_dialing =
account.5.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.5.always_fwd.enable =
account.5.always_fwd.target =
account.5.always_fwd.off_code =
account.5.always_fwd.on_code =
account.5.busy_fwd.enable =
account.5.busy_fwd.target =
account.5.busy_fwd.off_code =
account.5.busy_fwd.on_code =
account.5.timeout_fwd.enable =
account.5.timeout_fwd.target =
account.5.timeout_fwd.timeout =
account.5.timeout_fwd.off_code =
account.5.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.5.dnd.enable =
account.5.dnd.on_code =
account.5.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.5.reg.enable =
```

```

handset.5.ipui =

#####
#####
##          Broadsoft XSI
##
#####
#####

account.5.xsi.user =%BWLOGIN-ID-5%
account.5.xsi.password =%XSIPASSWORD-5%
account.5.xsi.host =%XSP_ADDRESS%
account.5.xsi.server_type =
account.5.xsi.port =

#####
#####
##                               LADP
##
#####
#####
handset.5.ldap.enable =
handset.5.ldap.name_filter=
handset.5.ldap.number_filter=
handset.5.ldap.host=
handset.5.ldap.port=
handset.5.ldap.base=
handset.5.ldap.user=
handset.5.ldap.password=
handset.5.ldap.max_hits=
handset.5.ldap.name_attr=
handset.5.ldap.numb_attr=
handset.5.ldap.display_name=
handset.5.ldap.version=
handset.5.ldap.call_in_lookup=
handset.5.ldap.ldap_sort=
handset.5.ldap.tls_mode=
handset.5.ldap.call_out_lookup=
handset.5.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account6 Settings
##
#####
#####

account.6.enable=%BWLINE-BINARY-6%
account.6.label=%BWEXTENSION-6%
account.6.display_name=%BWCLID-6%
account.6.auth_name=%BWAUTHUSER-6%
account.6.user_name=%BWLINEPORT-6%
account.6.password=%BWAUTHPASSWORD-6%

#W80B ADD
account.6.sip_server.template =
account.6.media_transmit.enable =

```

```

account.6.alarm.template =
account.6.alarm.server =
account.6.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.6.sip_server.1.failback_mode =
account.6.sip_server.1.failback_timeout =
account.6.sip_server.1.register_on_enable =
account.6.sip_server.1.failback_subscribe.enable =
account.6.sip_server.1.invite_retry_counts =
account.6.sip_server.1.only_signal_with_registered =

account.6.sip_server.2.failback_mode =
account.6.sip_server.2.failback_timeout =
account.6.sip_server.2.register_on_enable =
account.6.sip_server.2.failback_subscribe.enable =
account.6.sip_server.2.invite_retry_counts =
account.6.sip_server.2.only_signal_with_registered =

account.6.naptr_build =
account.6.fallback.redundancy_type =
account.6.fallback.timeout =

account.6.dns_cache_type =
account.6.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.6.anonymous_call =
account.6.reject_anonymous_call =
account.6.send_anonymous_code =
account.6.anonymous_call_oncode =
account.6.anonymous_call_offcode =
account.6.send_anonymous_rejection_code =
account.6.anonymous_reject_oncode =
account.6.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.6.codec.g722.enable =
account.6.codec.g722.priority =

account.6.codec.g729.enable =
account.6.codec.g729.priority =

account.6.codec.g726_16.enable =
account.6.codec.g726_16.priority =

account.6.codec.g726_24.enable =

```

```

account.6.codec.g726_24.priority =

account.6.codec.g726_32.enable =
account.6.codec.g726_32.priority =

account.6.codec.g726_40.enable =
account.6.codec.g726_40.priority =

account.6.codec.ilbc.enable =
account.6.codec.ilbc.priority =

account.6.codec.pcmu.enable =
account.6.codec.pcmu.priority =

account.6.codec.pcma.enable =
account.6.codec.pcma.priority =

account.6.codec.opus.enable =
account.6.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.6.nat.nat_traversal =
account.6.nat.udp_update_enable =
account.6.nat.udp_update_time =
account.6.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.6.blf.subscribe_period =
account.6.dtmf.type =
account.6.dtmf.dtmf_payload =
account.6.dtmf.info_type =
account.6.100rel_enable =
account.6.subscribe_register =
account.6.subscribe_mwi =
account.6.subscribe_mwi_expires =
account.6.subscribe_mwi_to_vm =
voice_mail.number.6 = %BWVOICE-PORTAL-NUMBER-6%
account.6.display_mwi.enable =
account.6.cid_source =
account.6.cid_source_privacy =
account.6.cid_source_ppi =
account.6.session_timer.enable =
account.6.session_timer.expires =
account.6.session_timer.refreshes =
account.6.enable_user_equal_phone =
account.6.srtp_encryption =
account.6.ptime =
account.6.shared_line = %BWSHAREDLINE-BINARY-6%
account.6.register_mac =
account.6.register_line =
account.6.reg_fail_retry_interval =

```

```
account.6.reg_failed_retry_min_time =
account.6.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.6.conf_type =
account.6.conf_uri = %BWNWORK-CONFERENCE-SIPURI-6%

account.6.sip_server_type =
account.6.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.6.register_expires_overlap =
account.6.subscribe_expires_overlap =
account.6.auto_dial_enable =
account.6.auto_dial_num =
account.6.cp_source =
account.6.transfer_refer_to_contact_header.enable =
#V80 Add
account.6.custom_ua =
account.6.callpark_enable =
account.6.check_cseq.enable =
account.6.check_to_tag.enable =
account.6.hold_use_inactive =
account.6.line_seize.expires =
account.6.update_ack_while_dialing =
account.6.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.6.always_fwd.enable =
account.6.always_fwd.target =
account.6.always_fwd.off_code =
account.6.always_fwd.on_code =
account.6.busy_fwd.enable =
account.6.busy_fwd.target =
account.6.busy_fwd.off_code =
account.6.busy_fwd.on_code =
account.6.timeout_fwd.enable =
account.6.timeout_fwd.target =
account.6.timeout_fwd.timeout =
account.6.timeout_fwd.off_code =
account.6.timeout_fwd.on_code =

#####
#####
```



```
##                                DND
##
#####
#####
account.6.dnd.enable =
account.6.dnd.on_code =
account.6.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.6.reg.enable =
handset.6.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####
account.6.xsi.user =%BWLOGIN-ID-6%
account.6.xsi.password =%XSIPASSWORD-6%
account.6.xsi.host =%XSP_ADDRESS%
account.6.xsi.server_type =
account.6.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.6.ldap.enable =
handset.6.ldap.name_filter=
handset.6.ldap.number_filter=
handset.6.ldap.host=
handset.6.ldap.port=
handset.6.ldap.base=
handset.6.ldap.user=
handset.6.ldap.password=
handset.6.ldap.max_hits=
handset.6.ldap.name_attr=
handset.6.ldap.numb_attr=
handset.6.ldap.display_name=
handset.6.ldap.version=
handset.6.ldap.call_in_lookup=
handset.6.ldap.ldap_sort=
handset.6.ldap.tls_mode=
handset.6.ldap.call_out_lookup=
handset.6.ldap.incoming_call_special_search.enable=

#####
#####
```

```

##                                     Account7 Settings
##
#####
#####

account.7.enable=%BWLIN-BINARY-7%
account.7.label=%BWEXTENSION-7%
account.7.display_name=%BWCLID-7%
account.7.auth_name=%BWAUTHUSER-7%
account.7.user_name=%BWLINPORT-7%
account.7.password=%BWAUTHPASSWORD-7%

#W80B ADD
account.7.sip_server.template =
account.7.media_transmit.enable =

account.7.alarm.template =
account.7.alarm.server =
account.7.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.7.sip_server.1.failback_mode =
account.7.sip_server.1.failback_timeout =
account.7.sip_server.1.register_on_enable =
account.7.sip_server.1.failback_subscribe.enable =
account.7.sip_server.1.invite_retry_counts =
account.7.sip_server.1.only_signal_with_registered =

account.7.sip_server.2.failback_mode =
account.7.sip_server.2.failback_timeout =
account.7.sip_server.2.register_on_enable =
account.7.sip_server.2.failback_subscribe.enable =
account.7.sip_server.2.invite_retry_counts =
account.7.sip_server.2.only_signal_with_registered =

account.7.naptr_build =
account.7.failback.redundancy_type =
account.7.failback.timeout =

account.7.dns_cache_type =
account.7.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####

account.7.anonymous_call =
account.7.reject_anonymous_call =
account.7.send_anonymous_code =
account.7.anonymous_call_oncode =
account.7.anonymous_call_offcode =
account.7.send_anonymous_rejection_code =
account.7.anonymous_reject_oncode =
account.7.anonymous_reject_offcode =

```

```
#####
#####
##                               Codec
##
#####
#####
account.7.codec.g722.enable =
account.7.codec.g722.priority =

account.7.codec.g729.enable =
account.7.codec.g729.priority =

account.7.codec.g726_16.enable =
account.7.codec.g726_16.priority =

account.7.codec.g726_24.enable =
account.7.codec.g726_24.priority =

account.7.codec.g726_32.enable =
account.7.codec.g726_32.priority =

account.7.codec.g726_40.enable =
account.7.codec.g726_40.priority =

account.7.codec.ilbc.enable =
account.7.codec.ilbc.priority =

account.7.codec.pcmu.enable =
account.7.codec.pcmu.priority =

account.7.codec.pcma.enable =
account.7.codec.pcma.priority =

account.7.codec.opus.enable =
account.7.codec.opus.priority =

#####
#####
##                               NAT Settings
##
##
#####
#####

account.7.nat.nat_traversal =
account.7.nat.udp_update_enable =
account.7.nat.udp_update_time =
account.7.nat.rport =

#####
#####
##                               Register Advanced
##
##
#####
#####

account.7.blf.subscribe_period =
account.7.dtmf.type =
account.7.dtmf.dtmf_payload =
account.7.dtmf.info_type =
account.7.100rel_enable =
account.7.subscribe_register =
account.7.subscribe_mwi =
account.7.subscribe_mwi_expires =
```

```

account.7.subscribe_mwi_to_vm =
voice_mail.number.7 = %BWVOICE-PORTAL-NUMBER-7%
account.7.display_mwi.enable =
account.7.cid_source =
account.7.cid_source_privacy =
account.7.cid_source_ppi =
account.7.session_timer.enable =
account.7.session_timer.expires =
account.7.session_timer.refreshes =
account.7.enable_user_equal_phone =
account.7.srtp_encryption =
account.7.ptime =
account.7.shared_line = %BWSHAREDLINE-BINARY-7%
account.7.register_mac =
account.7.register_line =
account.7.reg_fail_retry_interval =
account.7.reg_failed_retry_min_time =
account.7.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.7.conf_type =
account.7.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-7%

account.7.sip_server_type =
account.7.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.7.register_expires_overlap =
account.7.subscribe_expires_overlap =
account.7.auto_dial_enable =
account.7.auto_dial_num =
account.7.cp_source =
account.7.transfer_refer_to_contact_header.enable =
#V80 Add
account.7.custom_ua =
account.7.callpark_enable =
account.7.check_cseq.enable =
account.7.check_to_tag.enable =
account.7.hold_use_inactive =
account.7.line_seize.expires =
account.7.update_ack_while_dialing =
account.7.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.7.always_fwd.enable =

```

```

account.7.always_fwd.target =
account.7.always_fwd.off_code =
account.7.always_fwd.on_code =
account.7.busy_fwd.enable =
account.7.busy_fwd.target =
account.7.busy_fwd.off_code =
account.7.busy_fwd.on_code =
account.7.timeout_fwd.enable =
account.7.timeout_fwd.target =
account.7.timeout_fwd.timeout =
account.7.timeout_fwd.off_code =
account.7.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.7.dnd.enable =
account.7.dnd.on_code =
account.7.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.7.reg.enable =
handset.7.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####

account.7.xsi.user =%BWLOGIN-ID-7%
account.7.xsi.password =%XSIPASSWORD-7%
account.7.xsi.host =%XSP_ADDRESS%
account.7.xsi.server_type =
account.7.xsi.port =

#####
#####
##                               LADP
##
#####
#####
handset.7.ldap.enable =
handset.7.ldap.name_filter=
handset.7.ldap.number_filter=
handset.7.ldap.host=
handset.7.ldap.port=
handset.7.ldap.base=
handset.7.ldap.user=
handset.7.ldap.password=
handset.7.ldap.max_hits=
handset.7.ldap.name_attr=

```

```

handset.7.ldap.numb_attr=
handset.7.ldap.display_name=
handset.7.ldap.version=
handset.7.ldap.call_in_lookup=
handset.7.ldap.ldap_sort=
handset.7.ldap.tls_mode=
handset.7.ldap.call_out_lookup=
handset.7.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account8 Settings
##
#####
#####

account.8.enable=%BWLIN-BINARY-8%
account.8.label=%BWEXTENSION-8%
account.8.display_name=%BWCLID-8%
account.8.auth_name=%BWAUTHUSER-8%
account.8.user_name=%BWLINPORT-8%
account.8.password=%BWAUTHPASSWORD-8%

#W80B ADD
account.8.sip_server.template =
account.8.media_transmit.enable =

account.8.alarm.template =
account.8.alarm.server =
account.8.alarm.number =

#####
#####
##                                     Failback
##
#####
#####
account.8.sip_server.1.failback_mode =
account.8.sip_server.1.failback_timeout =
account.8.sip_server.1.register_on_enable =
account.8.sip_server.1.failback_subscribe.enable =
account.8.sip_server.1.invite_retry_counts =
account.8.sip_server.1.only_signal_with_registered =

account.8.sip_server.2.failback_mode =
account.8.sip_server.2.failback_timeout =
account.8.sip_server.2.register_on_enable =
account.8.sip_server.2.failback_subscribe.enable =
account.8.sip_server.2.invite_retry_counts =
account.8.sip_server.2.only_signal_with_registered =

account.8.naptr_build =
account.8.failback.redundancy_type =
account.8.failback.timeout =

account.8.dns_cache_type =
account.8.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####

```

```

##                                     Basic
##
#####
#####
account.8.anonymous_call =
account.8.reject_anonymous_call =
account.8.send_anonymous_code =
account.8.anonymous_call_oncode =
account.8.anonymous_call_offcode =
account.8.send_anonymous_rejection_code =
account.8.anonymous_reject_oncode =
account.8.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.8.codec.g722.enable =
account.8.codec.g722.priority =

account.8.codec.g729.enable =
account.8.codec.g729.priority =

account.8.codec.g726_16.enable =
account.8.codec.g726_16.priority =

account.8.codec.g726_24.enable =
account.8.codec.g726_24.priority =

account.8.codec.g726_32.enable =
account.8.codec.g726_32.priority =

account.8.codec.g726_40.enable =
account.8.codec.g726_40.priority =

account.8.codec.ilbc.enable =
account.8.codec.ilbc.priority =

account.8.codec.pcmu.enable =
account.8.codec.pcmu.priority =

account.8.codec.pcma.enable =
account.8.codec.pcma.priority =

account.8.codec.opus.enable =
account.8.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####
account.8.nat.nat_traversal =
account.8.nat.udp_update_enable =
account.8.nat.udp_update_time =
account.8.nat.rport =

```

```
#####
#####
##                               Register Advanced
##
#####
#####

account.8.blf.subscribe_period =
account.8.dtmf.type =
account.8.dtmf.dtmf_payload =
account.8.dtmf.info_type =
account.8.100rel_enable =
account.8.subscribe_register =
account.8.subscribe_mwi =
account.8.subscribe_mwi_expires =
account.8.subscribe_mwi_to_vm =
voice_mail.number.8 = %BWVOICE-PORTAL-NUMBER-8%
account.8.display_mwi.enable =
account.8.cid_source =
account.8.cid_source_privacy =
account.8.cid_source_ppi =
account.8.session_timer.enable =
account.8.session_timer.expires =
account.8.session_timer.refresher =
account.8.enable_user_equal_phone =
account.8.srtp_encryption =
account.8.ptime =
account.8.shared_line = %BWSHAREDLINE-BINARY-8%
account.8.register_mac =
account.8.register_line =
account.8.reg_fail_retry_interval =
account.8.reg_failed_retry_min_time =
account.8.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.8.conf_type =
account.8.conf_uri = %BWNWORK-CONFERENCE-SIPURI-8%

account.8.sip_server_type =
account.8.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.8.register_expires_overlap =
account.8.subscribe_expires_overlap =
account.8.auto_dial_enable =
account.8.auto_dial_num =
account.8.cp_source =
account.8.transfer_refer_to_contact_header.enable =
#V80 Add
account.8.custom_ua =
```



```

account.8.callpark_enable =
account.8.check_cseq.enable =
account.8.check_to_tag.enable =
account.8.hold_use_inactive =
account.8.line_seize.expires =
account.8.update_ack_while_dialing =
account.8.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.8.always_fwd.enable =
account.8.always_fwd.target =
account.8.always_fwd.off_code =
account.8.always_fwd.on_code =
account.8.busy_fwd.enable =
account.8.busy_fwd.target =
account.8.busy_fwd.off_code =
account.8.busy_fwd.on_code =
account.8.timeout_fwd.enable =
account.8.timeout_fwd.target =
account.8.timeout_fwd.timeout =
account.8.timeout_fwd.off_code =
account.8.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.8.dnd.enable =
account.8.dnd.on_code =
account.8.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.8.reg.enable =
handset.8.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.8.xsi.user =%BWLOGIN-ID-8%
account.8.xsi.password =%XSIPASSWORD-8%
account.8.xsi.host =%XSP_ADDRESS%
account.8.xsi.server_type =
account.8.xsi.port =

```

```
#####
#####
##                                LADP
##
#####
#####
handset.8.ldap.enable =
handset.8.ldap.name_filter=
handset.8.ldap.number_filter=
handset.8.ldap.host=
handset.8.ldap.port=
handset.8.ldap.base=
handset.8.ldap.user=
handset.8.ldap.password=
handset.8.ldap.max_hits=
handset.8.ldap.name_attr=
handset.8.ldap.numb_attr=
handset.8.ldap.display_name=
handset.8.ldap.version=
handset.8.ldap.call_in_lookup=
handset.8.ldap.ldap_sort=
handset.8.ldap.tls_mode=
handset.8.ldap.call_out_lookup=
handset.8.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account9 Settings
##
##
#####
#####

account.9.enable=%BWLIN-BINARY-9%
account.9.label=%BWEXTENSION-9%
account.9.display_name=%BWCLID-9%
account.9.auth_name=%BWAUTHUSER-9%
account.9.user_name=%BWLINPORT-9%
account.9.password=%BWAUTHPASSWORD-9%

#W80B ADD
account.9.sip_server.template =
account.9.media_transmit.enable =

account.9.alarm.template =
account.9.alarm.server =
account.9.alarm.number =

#####
#####
##                                Failback
##
##
#####
#####
account.9.sip_server.1.failback_mode =
account.9.sip_server.1.failback_timeout =
account.9.sip_server.1.register_on_enable =
account.9.sip_server.1.failback_subscribe.enable =
account.9.sip_server.1.invite_retry_counts =
account.9.sip_server.1.only_signal_with_registered =
```

```

account.9.sip_server.2.failback_mode =
account.9.sip_server.2.failback_timeout =
account.9.sip_server.2.register_on_enable =
account.9.sip_server.2.failback_subscribe.enable =
account.9.sip_server.2.invite_retry_counts =
account.9.sip_server.2.only_signal_with_registered =

account.9.naptr_build =
account.9.failback.redundancy_type =
account.9.failback.timeout =

account.9.dns_cache_type =
account.9.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.9.anonymous_call =
account.9.reject_anonymous_call =
account.9.send_anonymous_code =
account.9.anonymous_call_oncode =
account.9.anonymous_call_offcode =
account.9.send_anonymous_rejection_code =
account.9.anonymous_reject_oncode =
account.9.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.9.codec.g722.enable =
account.9.codec.g722.priority =

account.9.codec.g729.enable =
account.9.codec.g729.priority =

account.9.codec.g726_16.enable =
account.9.codec.g726_16.priority =

account.9.codec.g726_24.enable =
account.9.codec.g726_24.priority =

account.9.codec.g726_32.enable =
account.9.codec.g726_32.priority =

account.9.codec.g726_40.enable =
account.9.codec.g726_40.priority =

account.9.codec.ilbc.enable =
account.9.codec.ilbc.priority =

account.9.codec.pcmu.enable =
account.9.codec.pcmu.priority =

account.9.codec.pcma.enable =
account.9.codec.pcma.priority =

```

```

account.9.codec.opus.enable =
account.9.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.9.nat.nat_traversal =
account.9.nat.udp_update_enable =
account.9.nat.udp_update_time =
account.9.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.9.blf.subscribe_period =
account.9.dtmf.type =
account.9.dtmf.dtmf_payload =
account.9.dtmf.info_type =
account.9.100rel_enable =
account.9.subscribe_register =
account.9.subscribe_mwi =
account.9.subscribe_mwi_expires =
account.9.subscribe_mwi_to_vm =
voice_mail.number.9 = %BWVOICE-PORTAL-NUMBER-9%
account.9.display_mwi.enable =
account.9.cid_source =
account.9.cid_source_privacy =
account.9.cid_source_ppi =
account.9.session_timer.enable =
account.9.session_timer.expires =
account.9.session_timer.refresher =
account.9.enable_user_equal_phone =
account.9.srtp_encryption =
account.9.ptime =
account.9.shared_line = %BWSHAREDLINE-BINARY-9%
account.9.register_mac =
account.9.register_line =
account.9.reg_fail_retry_interval =
account.9.reg_failed_retry_min_time =
account.9.reg_failed_retry_max_time =

#####
#####
##
##                               Network Conference
##
#####
#####
account.9.conf_type =
account.9.conf_uri = %BWNWORK-CONFERENCE-SIPURI-9%

account.9.sip_server_type =
account.9.unregister_on_reboot =

```

```
#####
#####
##                                Register Other
##
#####
#####
##DECT V81 Add

account.9.register_expires_overlap =
account.9.subscribe_expires_overlap =
account.9.auto_dial_enable =
account.9.auto_dial_num =
account.9.cp_source =
account.9.transfer_refer_to_contact_header.enable =
#V80 Add
account.9.custom_ua =
account.9.callpark_enable =
account.9.check_cseq.enable =
account.9.check_to_tag.enable =
account.9.hold_use_inactive =
account.9.line_seize.expires =
account.9.update_ack_while_dialing =
account.9.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.9.always_fwd.enable =
account.9.always_fwd.target =
account.9.always_fwd.off_code =
account.9.always_fwd.on_code =
account.9.busy_fwd.enable =
account.9.busy_fwd.target =
account.9.busy_fwd.off_code =
account.9.busy_fwd.on_code =
account.9.timeout_fwd.enable =
account.9.timeout_fwd.target =
account.9.timeout_fwd.timeout =
account.9.timeout_fwd.off_code =
account.9.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.9.dnd.enable =
account.9.dnd.on_code =
account.9.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.9.reg.enable =
handset.9.ipui =
```

```
#####
#####
##          Broadsoft XSI
##
#####
#####

account.9.xsi.user =%BWLOGIN-ID-9%
account.9.xsi.password =%XSIPASSWORD-9%
account.9.xsi.host =%XSP_ADDRESS%
account.9.xsi.server_type =
account.9.xsi.port =

#####
#####
##                      LADP
##
#####
#####

handset.9.ldap.enable =
handset.9.ldap.name_filter=
handset.9.ldap.number_filter=
handset.9.ldap.host=
handset.9.ldap.port=
handset.9.ldap.base=
handset.9.ldap.user=
handset.9.ldap.password=
handset.9.ldap.max_hits=
handset.9.ldap.name_attr=
handset.9.ldap.numb_attr=
handset.9.ldap.display_name=
handset.9.ldap.version=
handset.9.ldap.call_in_lookup=
handset.9.ldap.ldap_sort=
handset.9.ldap.tls_mode=
handset.9.ldap.call_out_lookup=
handset.9.ldap.incoming_call_special_search.enable=

#####
#####
##                      Account10 Settings
##
#####
#####

account.10.enable=%BWLINE-BINARY-10%
account.10.label=%BWEXTENSION-10%
account.10.display_name=%BWCLID-10%
account.10.auth_name=%BWAUTHUSER-10%
account.10.user_name=%BWLINEPORT-10%
account.10.password=%BWAUTHPASSWORD-10%

#W80B ADD
account.10.sip_server.template =
account.10.media_transmit.enable =

account.10.alarm.template =
account.10.alarm.server =
```

```

account.10.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.10.sip_server.1.failback_mode =
account.10.sip_server.1.failback_timeout =
account.10.sip_server.1.register_on_enable =
account.10.sip_server.1.failback_subscribe.enable =
account.10.sip_server.1.invite_retry_counts =
account.10.sip_server.1.only_signal_with_registered =

account.10.sip_server.2.failback_mode =
account.10.sip_server.2.failback_timeout =
account.10.sip_server.2.register_on_enable =
account.10.sip_server.2.failback_subscribe.enable =
account.10.sip_server.2.invite_retry_counts =
account.10.sip_server.2.only_signal_with_registered =

account.10.naptr_build =
account.10.failback.redundancy_type =
account.10.failback.timeout =

account.10.dns_cache_type =
account.10.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
##
#####
#####
account.10.anonymous_call =
account.10.reject_anonymous_call =
account.10.send_anonymous_code =
account.10.anonymous_call_oncode =
account.10.anonymous_call_offcode =
account.10.send_anonymous_rejection_code =
account.10.anonymous_reject_oncode =
account.10.anonymous_reject_offcode =

#####
#####
##                               Codec
##
##
#####
#####
account.10.codec.g722.enable =
account.10.codec.g722.priority =

account.10.codec.g729.enable =
account.10.codec.g729.priority =

account.10.codec.g726_16.enable =
account.10.codec.g726_16.priority =

account.10.codec.g726_24.enable =
account.10.codec.g726_24.priority =

```

```
account.10.codec.g726_32.enable =
account.10.codec.g726_32.priority =

account.10.codec.g726_40.enable =
account.10.codec.g726_40.priority =

account.10.codec.ilbc.enable =
account.10.codec.ilbc.priority =

account.10.codec.pcmu.enable =
account.10.codec.pcmu.priority =

account.10.codec.pcma.enable =
account.10.codec.pcma.priority =

account.10.codec.opus.enable =
account.10.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.10.nat.nat_traversal =
account.10.nat.udp_update_enable =
account.10.nat.udp_update_time =
account.10.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.10.blf.subscribe_period =
account.10.dtmf.type =
account.10.dtmf.dtmf_payload =
account.10.dtmf.info_type =
account.10.100rel_enable =
account.10.subscribe_register =
account.10.subscribe_mwi =
account.10.subscribe_mwi_expires =
account.10.subscribe_mwi_to_vm =
voice_mail.number.10 = %BWVOICE-PORTAL-NUMBER-10%
account.10.display_mwi.enable =
account.10.cid_source =
account.10.cid_source_privacy =
account.10.cid_source_ppi =
account.10.session_timer.enable =
account.10.session_timer.expires =
account.10.session_timer.refresher =
account.10.enable_user_equal_phone =
account.10.srtp_encryption =
account.10.ptime =
account.10.shared_line = %BWSHAREDLINE-BINARY-10%
account.10.register_mac =
account.10.register_line =
account.10.reg_fail_retry_interval =
account.10.reg_failed_retry_min_time =
account.10.reg_failed_retry_max_time =
```



```
#####
#####
##                               Network Conference
##
#####
#####
account.10.conf_type =
account.10.conf_uri = %BWNWORK-CONFERENCE-SIPURI-10%

account.10.sip_server_type =
account.10.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.10.register_expires_overlap =
account.10.subscribe_expires_overlap =
account.10.auto_dial_enable =
account.10.auto_dial_num =
account.10.cp_source =
account.10.transfer_refer_to_contact_header.enable =
#V80 Add
account.10.custom_ua =
account.10.callpark_enable =
account.10.check_cseq.enable =
account.10.check_to_tag.enable =
account.10.hold_use_inactive =
account.10.line_seize.expires =
account.10.update_ack_while_dialing =
account.10.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.10.always_fwd.enable =
account.10.always_fwd.target =
account.10.always_fwd.off_code =
account.10.always_fwd.on_code =
account.10.busy_fwd.enable =
account.10.busy_fwd.target =
account.10.busy_fwd.off_code =
account.10.busy_fwd.on_code =
account.10.timeout_fwd.enable =
account.10.timeout_fwd.target =
account.10.timeout_fwd.timeout =
account.10.timeout_fwd.off_code =
account.10.timeout_fwd.on_code =

#####
#####
##                               DND
##
```

```
#####
#####
account.10.dnd.enable =
account.10.dnd.on_code =
account.10.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.10.reg.enable =
handset.10.ipui =

#####
#####
##                                Broadsoft XSI
##
#####

account.10.xsi.user =%BWLOGIN-ID-10%
account.10.xsi.password =%XSIPASSWORD-10%
account.10.xsi.host =%XSP_ADDRESS%
account.10.xsi.server_type =
account.10.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.10.ldap.enable =
handset.10.ldap.name_filter=
handset.10.ldap.number_filter=
handset.10.ldap.host=
handset.10.ldap.port=
handset.10.ldap.base=
handset.10.ldap.user=
handset.10.ldap.password=
handset.10.ldap.max_hits=
handset.10.ldap.name_attr=
handset.10.ldap.numb_attr=
handset.10.ldap.display_name=
handset.10.ldap.version=
handset.10.ldap.call_in_lookup=
handset.10.ldap.ldap_sort=
handset.10.ldap.tls_mode=
handset.10.ldap.call_out_lookup=
handset.10.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account11 Settings
##
```

```
#####
#####

account.11.enable=%BWLINE-BINARY-11%
account.11.label=%BWEXTENSION-11%
account.11.display_name=%BWCLID-11%
account.11.auth_name=%BWAUTHUSER-11%
account.11.user_name=%BWLINEPORT-11%
account.11.password=%BWAUTHPASSWORD-11%

#W80B ADD
account.11.sip_server.template =
account.11.media_transmit.enable =

account.11.alarm.template =
account.11.alarm.server =
account.11.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.11.sip_server.1.failback_mode =
account.11.sip_server.1.failback_timeout =
account.11.sip_server.1.register_on_enable =
account.11.sip_server.1.failback_subscribe.enable =
account.11.sip_server.1.invite_retry_counts =
account.11.sip_server.1.only_signal_with_registered =

account.11.sip_server.2.failback_mode =
account.11.sip_server.2.failback_timeout =
account.11.sip_server.2.register_on_enable =
account.11.sip_server.2.failback_subscribe.enable =
account.11.sip_server.2.invite_retry_counts =
account.11.sip_server.2.only_signal_with_registered =

account.11.naptr_build =
account.11.failback.redundancy_type =
account.11.failback.timeout =

account.11.dns_cache_type =
account.11.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.11.anonymous_call =
account.11.reject_anonymous_call =
account.11.send_anonymous_code =
account.11.anonymous_call_oncode =
account.11.anonymous_call_offcode =
account.11.send_anonymous_rejection_code =
account.11.anonymous_reject_oncode =
account.11.anonymous_reject_offcode =

#####
#####
```

```
##                                     Codec
##
#####
#####
account.11.codec.g722.enable =
account.11.codec.g722.priority =

account.11.codec.g729.enable =
account.11.codec.g729.priority =

account.11.codec.g726_16.enable =
account.11.codec.g726_16.priority =

account.11.codec.g726_24.enable =
account.11.codec.g726_24.priority =

account.11.codec.g726_32.enable =
account.11.codec.g726_32.priority =

account.11.codec.g726_40.enable =
account.11.codec.g726_40.priority =

account.11.codec.ilbc.enable =
account.11.codec.ilbc.priority =

account.11.codec.pcmu.enable =
account.11.codec.pcmu.priority =

account.11.codec.pcma.enable =
account.11.codec.pcma.priority =

account.11.codec.opus.enable =
account.11.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.11.nat.nat_traversal =
account.11.nat.udp_update_enable =
account.11.nat.udp_update_time =
account.11.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.11.blf.subscribe_period =
account.11.dtmf.type =
account.11.dtmf.dtmf_payload =
account.11.dtmf.info_type =
account.11.100rel_enable =
account.11.subscribe_register =
account.11.subscribe_mwi =
account.11.subscribe_mwi_expires =
account.11.subscribe_mwi_to_vm =
voice_mail.number.11 = %BWVOICE-PORTAL-NUMBER-11%
```

```

account.11.display_mwi.enable =
account.11.cid_source =
account.11.cid_source_privacy =
account.11.cid_source_ppi =
account.11.session_timer.enable =
account.11.session_timer.expires =
account.11.session_timer.refresher =
account.11.enable_user_equal_phone =
account.11.srtp_encryption =
account.11.ptime =
account.11.shared_line = %BWSHAREDLINE-BINARY-11%
account.11.register_mac =
account.11.register_line =
account.11.reg_fail_retry_interval =
account.11.reg_failed_retry_min_time =
account.11.reg_failed_retry_max_time =

#####
#####
##
##                               Network Conference
##
#####
#####
account.11.conf_type =
account.11.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-11%

account.11.sip_server_type =
account.11.unregister_on_reboot =

#####
#####
##
##                               Register Other
##
#####
#####
##DECT V81 Add

account.11.register_expires_overlap =
account.11.subscribe_expires_overlap =
account.11.auto_dial_enable =
account.11.auto_dial_num =
account.11.cp_source =
account.11.transfer_refer_to_contact_header.enable =
#V80 Add
account.11.custom_ua =
account.11.callpark_enable =
account.11.check_cseq.enable =
account.11.check_to_tag.enable =
account.11.hold_use_inactive =
account.11.line_seize.expires =
account.11.update_ack_while_dialing =
account.11.sub_fail_retry_interval =

#####
#####
##
##                               Call Forward
##
#####
#####
account.11.always_fwd.enable =
account.11.always_fwd.target =
account.11.always_fwd.off_code =

```

```

account.11.always_fwd.on_code =
account.11.busy_fwd.enable =
account.11.busy_fwd.target =
account.11.busy_fwd.off_code =
account.11.busy_fwd.on_code =
account.11.timeout_fwd.enable =
account.11.timeout_fwd.target =
account.11.timeout_fwd.timeout =
account.11.timeout_fwd.off_code =
account.11.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.11.dnd.enable =
account.11.dnd.on_code =
account.11.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.11.reg.enable =
handset.11.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####
account.11.xsi.user =%BWLOGIN-ID-11%
account.11.xsi.password =%XSIPASSWORD-11%
account.11.xsi.host =%XSP_ADDRESS%
account.11.xsi.server_type =
account.11.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.11.ldap.enable =
handset.11.ldap.name_filter=
handset.11.ldap.number_filter=
handset.11.ldap.host=
handset.11.ldap.port=
handset.11.ldap.base=
handset.11.ldap.user=
handset.11.ldap.password=
handset.11.ldap.max_hits=
handset.11.ldap.name_attr=
handset.11.ldap.numb_attr=
handset.11.ldap.display_name=

```

```

handset.11.ldap.version=
handset.11.ldap.call_in_lookup=
handset.11.ldap.ldap_sort=
handset.11.ldap.tls_mode=
handset.11.ldap.call_out_lookup=
handset.11.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account12 Settings
##
#####
#####

account.12.enable=%BWLIN-BINARY-12%
account.12.label=%BWEXTENSION-12%
account.12.display_name=%BWCLID-12%
account.12.auth_name=%BWAUTHUSER-12%
account.12.user_name=%BWLINPORT-12%
account.12.password=%BWAUTHPASSWORD-12%

#W80B ADD
account.12.sip_server.template =
account.12.media_transmit.enable =

account.12.alarm.template =
account.12.alarm.server =
account.12.alarm.number =

#####
#####
##                               Failback
##
##
#####
#####

account.12.sip_server.1.failback_mode =
account.12.sip_server.1.failback_timeout =
account.12.sip_server.1.register_on_enable =
account.12.sip_server.1.failback_subscribe.enable =
account.12.sip_server.1.invite_retry_counts =
account.12.sip_server.1.only_signal_with_registered =

account.12.sip_server.2.failback_mode =
account.12.sip_server.2.failback_timeout =
account.12.sip_server.2.register_on_enable =
account.12.sip_server.2.failback_subscribe.enable =
account.12.sip_server.2.invite_retry_counts =
account.12.sip_server.2.only_signal_with_registered =

account.12.naptr_build =
account.12.fallback.redundancy_type =
account.12.fallback.timeout =

account.12.dns_cache_type =
account.12.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
##

```

```
#####
#####
account.12.anonymous_call =
account.12.reject_anonymous_call =
account.12.send_anonymous_code =
account.12.anonymous_call_oncode =
account.12.anonymous_call_offcode =
account.12.send_anonymous_rejection_code =
account.12.anonymous_reject_oncode =
account.12.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.12.codec.g722.enable =
account.12.codec.g722.priority =

account.12.codec.g729.enable =
account.12.codec.g729.priority =

account.12.codec.g726_16.enable =
account.12.codec.g726_16.priority =

account.12.codec.g726_24.enable =
account.12.codec.g726_24.priority =

account.12.codec.g726_32.enable =
account.12.codec.g726_32.priority =

account.12.codec.g726_40.enable =
account.12.codec.g726_40.priority =

account.12.codec.ilbc.enable =
account.12.codec.ilbc.priority =

account.12.codec.pcmu.enable =
account.12.codec.pcmu.priority =

account.12.codec.pcma.enable =
account.12.codec.pcma.priority =

account.12.codec.opus.enable =
account.12.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.12.nat.nat_traversal =
account.12.nat.udp_update_enable =
account.12.nat.udp_update_time =
account.12.nat.rport =

#####
#####
```



```

##                                     Register Advanced
##
#####
#####

account.12.blf.subscribe_period =
account.12.dtmf.type =
account.12.dtmf.dtmf_payload =
account.12.dtmf.info_type =
account.12.100rel_enable =
account.12.subscribe_register =
account.12.subscribe_mwi =
account.12.subscribe_mwi_expires =
account.12.subscribe_mwi_to_vm =
voice_mail.number.12 = %BWVOICE-PORTAL-NUMBER-12%
account.12.display_mwi.enable =
account.12.cid_source =
account.12.cid_source_privacy =
account.12.cid_source_ppi =
account.12.session_timer.enable =
account.12.session_timer.expires =
account.12.session_timer.refreshes =
account.12.enable_user_equal_phone =
account.12.srtp_encryption =
account.12.ptime =
account.12.shared_line = %BWSHAREDLINE-BINARY-12%
account.12.register_mac =
account.12.register_line =
account.12.reg_fail_retry_interval =
account.12.reg_failed_retry_min_time =
account.12.reg_failed_retry_max_time =

#####
#####

##                                     Network Conference
##
##
#####
#####

account.12.conf_type =
account.12.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-12%

account.12.sip_server_type =
account.12.unregister_on_reboot =

#####
#####

##                                     Register Other
##
##
#####
#####

##DECT V81 Add

account.12.register_expires_overlap =
account.12.subscribe_expires_overlap =
account.12.auto_dial_enable =
account.12.auto_dial_num =
account.12.cp_source =
account.12.transfer_refer_to_contact_header.enable =
#V80 Add
account.12.custom_ua =
account.12.callpark_enable =
account.12.check_cseq.enable =

```

```

account.12.check_to_tag.enable =
account.12.hold_use_inactive =
account.12.line_seize.expires =
account.12.update_ack_while_dialing =
account.12.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.12.always_fwd.enable =
account.12.always_fwd.target =
account.12.always_fwd.off_code =
account.12.always_fwd.on_code =
account.12.busy_fwd.enable =
account.12.busy_fwd.target =
account.12.busy_fwd.off_code =
account.12.busy_fwd.on_code =
account.12.timeout_fwd.enable =
account.12.timeout_fwd.target =
account.12.timeout_fwd.timeout =
account.12.timeout_fwd.off_code =
account.12.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.12.dnd.enable =
account.12.dnd.on_code =
account.12.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.12.reg.enable =
handset.12.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.12.xsi.user =%BWLOGIN-ID-12%
account.12.xsi.password =%XSIPASSWORD-12%
account.12.xsi.host =%XSP_ADDRESS%
account.12.xsi.server_type =
account.12.xsi.port =

#####
#####

```

```

##                                LADP
##
#####
#####
handset.12.ldap.enable =
handset.12.ldap.name_filter=
handset.12.ldap.number_filter=
handset.12.ldap.host=
handset.12.ldap.port=
handset.12.ldap.base=
handset.12.ldap.user=
handset.12.ldap.password=
handset.12.ldap.max_hits=
handset.12.ldap.name_attr=
handset.12.ldap.numb_attr=
handset.12.ldap.display_name=
handset.12.ldap.version=
handset.12.ldap.call_in_lookup=
handset.12.ldap.ldap_sort=
handset.12.ldap.tls_mode=
handset.12.ldap.call_out_lookup=
handset.12.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account13 Settings
##
#####
#####

account.13.enable=%BWLIN-BINARY-13%
account.13.label=%BWEXTENSION-13%
account.13.display_name=%BWCLID-13%
account.13.auth_name=%BWAUTHUSER-13%
account.13.user_name=%BWLINPORT-13%
account.13.password=%BWAUTHPASSWORD-13%

#W80B ADD
account.13.sip_server.template =
account.13.media_transmit.enable =

account.13.alarm.template =
account.13.alarm.server =
account.13.alarm.number =

#####
#####
##                                Failback
##
#####
#####
account.13.sip_server.1.failback_mode =
account.13.sip_server.1.failback_timeout =
account.13.sip_server.1.register_on_enable =
account.13.sip_server.1.failback_subscribe.enable =
account.13.sip_server.1.invite_retry_counts =
account.13.sip_server.1.only_signal_with_registered =

account.13.sip_server.2.failback_mode =
account.13.sip_server.2.failback_timeout =

```

```

account.13.sip_server.2.register_on_enable =
account.13.sip_server.2.failback_subscribe.enable =
account.13.sip_server.2.invite_retry_counts =
account.13.sip_server.2.only_signal_with_registered =

account.13.naptr_build =
account.13.fallback.redundancy_type =
account.13.fallback.timeout =

account.13.dns_cache_type =
account.13.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.13.anonymous_call =
account.13.reject_anonymous_call =
account.13.send_anonymous_code =
account.13.anonymous_call_oncode =
account.13.anonymous_call_offcode =
account.13.send_anonymous_rejection_code =
account.13.anonymous_reject_oncode =
account.13.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.13.codec.g722.enable =
account.13.codec.g722.priority =

account.13.codec.g729.enable =
account.13.codec.g729.priority =

account.13.codec.g726_16.enable =
account.13.codec.g726_16.priority =

account.13.codec.g726_24.enable =
account.13.codec.g726_24.priority =

account.13.codec.g726_32.enable =
account.13.codec.g726_32.priority =

account.13.codec.g726_40.enable =
account.13.codec.g726_40.priority =

account.13.codec.ilbc.enable =
account.13.codec.ilbc.priority =

account.13.codec.pcmu.enable =
account.13.codec.pcmu.priority =

account.13.codec.pcma.enable =
account.13.codec.pcma.priority =

account.13.codec.opus.enable =
account.13.codec.opus.priority =

```

```
#####
#####
##                                     NAT Settings
##
#####
#####

account.13.nat.nat_traversal =
account.13.nat.udp_update_enable =
account.13.nat.udp_update_time =
account.13.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.13.blf.subscribe_period =
account.13.dtmf.type =
account.13.dtmf.dtmf_payload =
account.13.dtmf.info_type =
account.13.100rel_enable =
account.13.subscribe_register =
account.13.subscribe_mwi =
account.13.subscribe_mwi_expires =
account.13.subscribe_mwi_to_vm =
voice_mail.number.13 = %BWVOICE-PORTAL-NUMBER-13%
account.13.display_mwi.enable =
account.13.cid_source =
account.13.cid_source_privacy =
account.13.cid_source_ppi =
account.13.session_timer.enable =
account.13.session_timer.expires =
account.13.session_timer.refresher =
account.13.enable_user_equal_phone =
account.13.srtp_encryption =
account.13.ptime =
account.13.shared_line = %BWSHAREDLINE-BINARY-13%
account.13.register_mac =
account.13.register_line =
account.13.reg_fail_retry_interval =
account.13.reg_failed_retry_min_time =
account.13.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####

account.13.conf_type =
account.13.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-13%

account.13.sip_server_type =
account.13.unregister_on_reboot =

#####
#####
```

```

##                                Register Other
##
#####
#####
##DECT V81 Add

account.13.register_expires_overlap =
account.13.subscribe_expires_overlap =
account.13.auto_dial_enable =
account.13.auto_dial_num =
account.13.cp_source =
account.13.transfer_refer_to_contact_header.enable =
#V80 Add
account.13.custom_ua =
account.13.callpark_enable =
account.13.check_cseq.enable =
account.13.check_to_tag.enable =
account.13.hold_use_inactive =
account.13.line_seize.expires =
account.13.update_ack_while_dialing =
account.13.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.13.always_fwd.enable =
account.13.always_fwd.target =
account.13.always_fwd.off_code =
account.13.always_fwd.on_code =
account.13.busy_fwd.enable =
account.13.busy_fwd.target =
account.13.busy_fwd.off_code =
account.13.busy_fwd.on_code =
account.13.timeout_fwd.enable =
account.13.timeout_fwd.target =
account.13.timeout_fwd.timeout =
account.13.timeout_fwd.off_code =
account.13.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.13.dnd.enable =
account.13.dnd.on_code =
account.13.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.13.reg.enable =
handset.13.ipui =

```

```
#####
#####
##          Broadsoft XSI
##
#####
#####

account.13.xsi.user =%BWLOGIN-ID-13%
account.13.xsi.password =%XSIPASSWORD-13%
account.13.xsi.host =%XSP_ADDRESS%
account.13.xsi.server_type =
account.13.xsi.port =

#####
#####
##                               LADP
##
#####
#####
handset.13.ldap.enable =
handset.13.ldap.name_filter=
handset.13.ldap.number_filter=
handset.13.ldap.host=
handset.13.ldap.port=
handset.13.ldap.base=
handset.13.ldap.user=
handset.13.ldap.password=
handset.13.ldap.max_hits=
handset.13.ldap.name_attr=
handset.13.ldap.numb_attr=
handset.13.ldap.display_name=
handset.13.ldap.version=
handset.13.ldap.call_in_lookup=
handset.13.ldap.ldap_sort=
handset.13.ldap.tls_mode=
handset.13.ldap.call_out_lookup=
handset.13.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account14 Settings
##
#####
#####

account.14.enable=%BWLINE-BINARY-14%
account.14.label=%BWEXTENSION-14%
account.14.display_name=%BWCLID-14%
account.14.auth_name=%BWAUTHUSER-14%
account.14.user_name=%BWLINEPORT-14%
account.14.password=%BWAUTHPASSWORD-14%

#W80B ADD
account.14.sip_server.template =
account.14.media_transmit.enable =

account.14.alarm.template =
account.14.alarm.server =
account.14.alarm.number =
```

```
#####
#####
##                               Failback
##
#####
#####
account.14.sip_server.1.failback_mode =
account.14.sip_server.1.failback_timeout =
account.14.sip_server.1.register_on_enable =
account.14.sip_server.1.failback_subscribe.enable =
account.14.sip_server.1.invite_retry_counts =
account.14.sip_server.1.only_signal_with_registered =

account.14.sip_server.2.failback_mode =
account.14.sip_server.2.failback_timeout =
account.14.sip_server.2.register_on_enable =
account.14.sip_server.2.failback_subscribe.enable =
account.14.sip_server.2.invite_retry_counts =
account.14.sip_server.2.only_signal_with_registered =

account.14.naptr_build =
account.14.fallback.redundancy_type =
account.14.fallback.timeout =

account.14.dns_cache_type =
account.14.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.14.anonymous_call =
account.14.reject_anonymous_call =
account.14.send_anonymous_code =
account.14.anonymous_call_oncode =
account.14.anonymous_call_offcode =
account.14.send_anonymous_rejection_code =
account.14.anonymous_reject_oncode =
account.14.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.14.codec.g722.enable =
account.14.codec.g722.priority =

account.14.codec.g729.enable =
account.14.codec.g729.priority =

account.14.codec.g726_16.enable =
account.14.codec.g726_16.priority =

account.14.codec.g726_24.enable =
account.14.codec.g726_24.priority =

account.14.codec.g726_32.enable =
```



```

account.14.codec.g726_32.priority =

account.14.codec.g726_40.enable =
account.14.codec.g726_40.priority =

account.14.codec.ilbc.enable =
account.14.codec.ilbc.priority =

account.14.codec.pcmu.enable =
account.14.codec.pcmu.priority =

account.14.codec.pcma.enable =
account.14.codec.pcma.priority =

account.14.codec.opus.enable =
account.14.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.14.nat.nat_traversal =
account.14.nat.udp_update_enable =
account.14.nat.udp_update_time =
account.14.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.14.blf.subscribe_period =
account.14.dtmf.type =
account.14.dtmf.dtmf_payload =
account.14.dtmf.info_type =
account.14.100rel_enable =
account.14.subscribe_register =
account.14.subscribe_mwi =
account.14.subscribe_mwi_expires =
account.14.subscribe_mwi_to_vm =
voice_mail.number.14 = %BWVOICE-PORTAL-NUMBER-14%
account.14.display_mwi.enable =
account.14.cid_source =
account.14.cid_source_privacy =
account.14.cid_source_ppi =
account.14.session_timer.enable =
account.14.session_timer.expires =
account.14.session_timer.refresher =
account.14.enable_user_equal_phone =
account.14.srtp_encryption =
account.14.ptime =
account.14.shared_line = %BWSHAREDLINE-BINARY-14%
account.14.register_mac =
account.14.register_line =
account.14.reg_fail_retry_interval =
account.14.reg_failed_retry_min_time =
account.14.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.14.conf_type =
account.14.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-14%

account.14.sip_server_type =
account.14.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.14.register_expires_overlap =
account.14.subscribe_expires_overlap =
account.14.auto_dial_enable =
account.14.auto_dial_num =
account.14.cp_source =
account.14.transfer_refer_to_contact_header.enable =
#V80 Add
account.14.custom_ua =
account.14.callpark_enable =
account.14.check_cseq.enable =
account.14.check_to_tag.enable =
account.14.hold_use_inactive =
account.14.line_seize.expires =
account.14.update_ack_while_dialing =
account.14.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.14.always_fwd.enable =
account.14.always_fwd.target =
account.14.always_fwd.off_code =
account.14.always_fwd.on_code =
account.14.busy_fwd.enable =
account.14.busy_fwd.target =
account.14.busy_fwd.off_code =
account.14.busy_fwd.on_code =
account.14.timeout_fwd.enable =
account.14.timeout_fwd.target =
account.14.timeout_fwd.timeout =
account.14.timeout_fwd.off_code =
account.14.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```

account.14.dnd.enable =
account.14.dnd.on_code =
account.14.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.14.reg.enable =
handset.14.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.14.xsi.user =%BWLOGIN-ID-14%
account.14.xsi.password =%XSIPASSWORD-14%
account.14.xsi.host =%XSP_ADDRESS%
account.14.xsi.server_type =
account.14.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.14.ldap.enable =
handset.14.ldap.name_filter=
handset.14.ldap.number_filter=
handset.14.ldap.host=
handset.14.ldap.port=
handset.14.ldap.base=
handset.14.ldap.user=
handset.14.ldap.password=
handset.14.ldap.max_hits=
handset.14.ldap.name_attr=
handset.14.ldap.numb_attr=
handset.14.ldap.display_name=
handset.14.ldap.version=
handset.14.ldap.call_in_lookup=
handset.14.ldap.ldap_sort=
handset.14.ldap.tls_mode=
handset.14.ldap.call_out_lookup=
handset.14.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account15 Settings
##
#####
#####

```

```

account.15.enable=%BWLIN-BINARY-15%
account.15.label=%BWEXTENSION-15%
account.15.display_name=%BWCLID-15%
account.15.auth_name=%BWAUTHUSER-15%
account.15.user_name=%BWLINPORT-15%
account.15.password=%BWAUTHPASSWORD-15%

#W80B ADD
account.15.sip_server.template =
account.15.media_transmit.enable =

account.15.alarm.template =
account.15.alarm.server =
account.15.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.15.sip_server.1.failback_mode =
account.15.sip_server.1.failback_timeout =
account.15.sip_server.1.register_on_enable =
account.15.sip_server.1.failback_subscribe.enable =
account.15.sip_server.1.invite_retry_counts =
account.15.sip_server.1.only_signal_with_registered =

account.15.sip_server.2.failback_mode =
account.15.sip_server.2.failback_timeout =
account.15.sip_server.2.register_on_enable =
account.15.sip_server.2.failback_subscribe.enable =
account.15.sip_server.2.invite_retry_counts =
account.15.sip_server.2.only_signal_with_registered =

account.15.naptr_build =
account.15.fallback.redundancy_type =
account.15.fallback.timeout =

account.15.dns_cache_type =
account.15.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.15.anonymous_call =
account.15.reject_anonymous_call =
account.15.send_anonymous_code =
account.15.anonymous_call_oncode =
account.15.anonymous_call_offcode =
account.15.send_anonymous_rejection_code =
account.15.anonymous_reject_oncode =
account.15.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.15.codec.g722.enable =
account.15.codec.g722.priority =

account.15.codec.g729.enable =
account.15.codec.g729.priority =

account.15.codec.g726_16.enable =
account.15.codec.g726_16.priority =

account.15.codec.g726_24.enable =
account.15.codec.g726_24.priority =

account.15.codec.g726_32.enable =
account.15.codec.g726_32.priority =

account.15.codec.g726_40.enable =
account.15.codec.g726_40.priority =

account.15.codec.ilbc.enable =
account.15.codec.ilbc.priority =

account.15.codec.pcmu.enable =
account.15.codec.pcmu.priority =

account.15.codec.pcma.enable =
account.15.codec.pcma.priority =

account.15.codec.opus.enable =
account.15.codec.opus.priority =

#####
#####
##                                NAT Settings
##
#####
#####

account.15.nat.nat_traversal =
account.15.nat.udp_update_enable =
account.15.nat.udp_update_time =
account.15.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.15.blf.subscribe_period =
account.15.dtmf.type =
account.15.dtmf.dtmf_payload =
account.15.dtmf.info_type =
account.15.100rel_enable =
account.15.subscribe_register =
account.15.subscribe_mwi =
account.15.subscribe_mwi_expires =
account.15.subscribe_mwi_to_vm =
voice_mail.number.15 = %BWVOICE-PORTAL-NUMBER-15%
account.15.display_mwi.enable =
account.15.cid_source =
```

```

account.15.cid_source_privacy =
account.15.cid_source_ppi =
account.15.session_timer.enable =
account.15.session_timer.expires =
account.15.session_timer.refresher =
account.15.enable_user_equal_phone =
account.15.srtp_encryption =
account.15.ptime =
account.15.shared_line = %BWSHAREDLINE-BINARY-15%
account.15.register_mac =
account.15.register_line =
account.15.reg_fail_retry_interval =
account.15.reg_failed_retry_min_time =
account.15.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.15.conf_type =
account.15.conf_uri = %BWNWORK-CONFERENCE-SIPURI-15%

account.15.sip_server_type =
account.15.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.15.register_expires_overlap =
account.15.subscribe_expires_overlap =
account.15.auto_dial_enable =
account.15.auto_dial_num =
account.15.cp_source =
account.15.transfer_refer_to_contact_header.enable =
#V80 Add
account.15.custom_ua =
account.15.callpark_enable =
account.15.check_cseq.enable =
account.15.check_to_tag.enable =
account.15.hold_use_inactive =
account.15.line_seize.expires =
account.15.update_ack_while_dialing =
account.15.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.15.always_fwd.enable =
account.15.always_fwd.target =
account.15.always_fwd.off_code =
account.15.always_fwd.on_code =
account.15.busy_fwd.enable =

```

```
account.15.busy_fwd.target =
account.15.busy_fwd.off_code =
account.15.busy_fwd.on_code =
account.15.timeout_fwd.enable =
account.15.timeout_fwd.target =
account.15.timeout_fwd.timeout =
account.15.timeout_fwd.off_code =
account.15.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.15.dnd.enable =
account.15.dnd.on_code =
account.15.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.15.reg.enable =
handset.15.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.15.xsi.user =%BWLOGIN-ID-15%
account.15.xsi.password =%XSIPASSWORD-15%
account.15.xsi.host =%XSP_ADDRESS%
account.15.xsi.server_type =
account.15.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.15.ldap.enable =
handset.15.ldap.name_filter=
handset.15.ldap.number_filter=
handset.15.ldap.host=
handset.15.ldap.port=
handset.15.ldap.base=
handset.15.ldap.user=
handset.15.ldap.password=
handset.15.ldap.max_hits=
handset.15.ldap.name_attr=
handset.15.ldap.numb_attr=
handset.15.ldap.display_name=
handset.15.ldap.version=
handset.15.ldap.call_in_lookup=
```

```

handset.15.ldap.ldap_sort=
handset.15.ldap.tls_mode=
handset.15.ldap.call_out_lookup=
handset.15.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account16 Settings
##
#####
#####

account.16.enable=%BWLIN-BINARY-16%
account.16.label=%BWEXTENSION-16%
account.16.display_name=%BWCLID-16%
account.16.auth_name=%BWAUTHUSER-16%
account.16.user_name=%BWLINPORT-16%
account.16.password=%BWAUTHPASSWORD-16%

#W80B ADD
account.16.sip_server.template =
account.16.media_transmit.enable =

account.16.alarm.template =
account.16.alarm.server =
account.16.alarm.number =

#####
#####
##                                     Failback
##
##
#####
#####

account.16.sip_server.1.failback_mode =
account.16.sip_server.1.failback_timeout =
account.16.sip_server.1.register_on_enable =
account.16.sip_server.1.failback_subscribe.enable =
account.16.sip_server.1.invite_retry_counts =
account.16.sip_server.1.only_signal_with_registered =

account.16.sip_server.2.failback_mode =
account.16.sip_server.2.failback_timeout =
account.16.sip_server.2.register_on_enable =
account.16.sip_server.2.failback_subscribe.enable =
account.16.sip_server.2.invite_retry_counts =
account.16.sip_server.2.only_signal_with_registered =

account.16.naptr_build =
account.16.fallback.redundancy_type =
account.16.fallback.timeout =

account.16.dns_cache_type =
account.16.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
##
#####
#####

```



```

account.16.anonymous_call =
account.16.reject_anonymous_call =
account.16.send_anonymous_code =
account.16.anonymous_call_oncode =
account.16.anonymous_call_offcode =
account.16.send_anonymous_rejection_code =
account.16.anonymous_reject_oncode =
account.16.anonymous_reject_offcode =

#####
#####
##
##                               Codec
##
#####
#####
account.16.codec.g722.enable =
account.16.codec.g722.priority =

account.16.codec.g729.enable =
account.16.codec.g729.priority =

account.16.codec.g726_16.enable =
account.16.codec.g726_16.priority =

account.16.codec.g726_24.enable =
account.16.codec.g726_24.priority =

account.16.codec.g726_32.enable =
account.16.codec.g726_32.priority =

account.16.codec.g726_40.enable =
account.16.codec.g726_40.priority =

account.16.codec.ilbc.enable =
account.16.codec.ilbc.priority =

account.16.codec.pcmu.enable =
account.16.codec.pcmu.priority =

account.16.codec.pcma.enable =
account.16.codec.pcma.priority =

account.16.codec.opus.enable =
account.16.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####
account.16.nat.nat_traversal =
account.16.nat.udp_update_enable =
account.16.nat.udp_update_time =
account.16.nat.rport =

#####
#####
##
##                               Register Advanced
##

```

```
#####
#####

account.16.blf.subscribe_period =
account.16.dtmf.type =
account.16.dtmf.dtmf_payload =
account.16.dtmf.info_type =
account.16.100rel_enable =
account.16.subscribe_register =
account.16.subscribe_mwi =
account.16.subscribe_mwi_expires =
account.16.subscribe_mwi_to_vm =
voice_mail.number.16 = %BWVOICE-PORTAL-NUMBER-16%
account.16.display_mwi.enable =
account.16.cid_source =
account.16.cid_source_privacy =
account.16.cid_source_ppi =
account.16.session_timer.enable =
account.16.session_timer.expires =
account.16.session_timer.refresher =
account.16.enable_user_equal_phone =
account.16.srtp_encryption =
account.16.ptime =
account.16.shared_line = %BWSHAREDLINE-BINARY-16%
account.16.register_mac =
account.16.register_line =
account.16.reg_fail_retry_interval =
account.16.reg_failed_retry_min_time =
account.16.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.16.conf_type =
account.16.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-16%

account.16.sip_server_type =
account.16.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.16.register_expires_overlap =
account.16.subscribe_expires_overlap =
account.16.auto_dial_enable =
account.16.auto_dial_num =
account.16.cp_source =
account.16.transfer_refer_to_contact_header.enable =
#V80 Add
account.16.custom_ua =
account.16.callpark_enable =
account.16.check_cseq.enable =
account.16.check_to_tag.enable =
account.16.hold_use_inactive =
```

```

account.16.line_seize.expires =
account.16.update_ack_while_dialing =
account.16.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.16.always_fwd.enable =
account.16.always_fwd.target =
account.16.always_fwd.off_code =
account.16.always_fwd.on_code =
account.16.busy_fwd.enable =
account.16.busy_fwd.target =
account.16.busy_fwd.off_code =
account.16.busy_fwd.on_code =
account.16.timeout_fwd.enable =
account.16.timeout_fwd.target =
account.16.timeout_fwd.timeout =
account.16.timeout_fwd.off_code =
account.16.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.16.dnd.enable =
account.16.dnd.on_code =
account.16.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.16.reg.enable =
handset.16.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.16.xsi.user =%BWLOGIN-ID-16%
account.16.xsi.password =%XSIPASSWORD-16%
account.16.xsi.host =%XSP_ADDRESS%
account.16.xsi.server_type =
account.16.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.16.ldap.enable =
handset.16.ldap.name_filter=
handset.16.ldap.number_filter=
handset.16.ldap.host=
handset.16.ldap.port=
handset.16.ldap.base=
handset.16.ldap.user=
handset.16.ldap.password=
handset.16.ldap.max_hits=
handset.16.ldap.name_attr=
handset.16.ldap.numb_attr=
handset.16.ldap.display_name=
handset.16.ldap.version=
handset.16.ldap.call_in_lookup=
handset.16.ldap.ldap_sort=
handset.16.ldap.tls_mode=
handset.16.ldap.call_out_lookup=
handset.16.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account17 Settings
##
#####
#####

account.17.enable=%BWLIN-BINARY-17%
account.17.label=%BWEXTENSION-17%
account.17.display_name=%BWCLID-17%
account.17.auth_name=%BWAUTHUSER-17%
account.17.user_name=%BWLINPORT-17%
account.17.password=%BWAUTHPASSWORD-17%

#W80B ADD
account.17.sip_server.template =
account.17.media_transmit.enable =

account.17.alarm.template =
account.17.alarm.server =
account.17.alarm.number =

#####
#####
##                               Failback
##
#####
#####

account.17.sip_server.1.failback_mode =
account.17.sip_server.1.failback_timeout =
account.17.sip_server.1.register_on_enable =
account.17.sip_server.1.failback_subscribe.enable =
account.17.sip_server.1.invite_retry_counts =
account.17.sip_server.1.only_signal_with_registered =

account.17.sip_server.2.failback_mode =
account.17.sip_server.2.failback_timeout =
account.17.sip_server.2.register_on_enable =
account.17.sip_server.2.failback_subscribe.enable =
```

```

account.17.sip_server.2.invite_retry_counts =
account.17.sip_server.2.only_signal_with_registered =

account.17.naptr_build =
account.17.fallback.redundancy_type =
account.17.fallback.timeout =

account.17.dns_cache_type =
account.17.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.17.anonymous_call =
account.17.reject_anonymous_call =
account.17.send_anonymous_code =
account.17.anonymous_call_oncode =
account.17.anonymous_call_offcode =
account.17.send_anonymous_rejection_code =
account.17.anonymous_reject_oncode =
account.17.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.17.codec.g722.enable =
account.17.codec.g722.priority =

account.17.codec.g729.enable =
account.17.codec.g729.priority =

account.17.codec.g726_16.enable =
account.17.codec.g726_16.priority =

account.17.codec.g726_24.enable =
account.17.codec.g726_24.priority =

account.17.codec.g726_32.enable =
account.17.codec.g726_32.priority =

account.17.codec.g726_40.enable =
account.17.codec.g726_40.priority =

account.17.codec.ilbc.enable =
account.17.codec.ilbc.priority =

account.17.codec.pcmu.enable =
account.17.codec.pcmu.priority =

account.17.codec.pcma.enable =
account.17.codec.pcma.priority =

account.17.codec.opus.enable =
account.17.codec.opus.priority =

```

```
#####
#####
##                               NAT Settings
##
#####
#####

account.17.nat.nat_traversal =
account.17.nat.udp_update_enable =
account.17.nat.udp_update_time =
account.17.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.17.blf.subscribe_period =
account.17.dtmf.type =
account.17.dtmf.dtmf_payload =
account.17.dtmf.info_type =
account.17.100rel_enable =
account.17.subscribe_register =
account.17.subscribe_mwi =
account.17.subscribe_mwi_expires =
account.17.subscribe_mwi_to_vm =
voice_mail.number.17 = %BWVOICE-PORTAL-NUMBER-17%
account.17.display_mwi.enable =
account.17.cid_source =
account.17.cid_source_privacy =
account.17.cid_source_ppi =
account.17.session_timer.enable =
account.17.session_timer.expires =
account.17.session_timer.refreshes =
account.17.enable_user_equal_phone =
account.17.srtp_encryption =
account.17.ptime =
account.17.shared_line = %BWSHAREDLINE-BINARY-17%
account.17.register_mac =
account.17.register_line =
account.17.reg_fail_retry_interval =
account.17.reg_failed_retry_min_time =
account.17.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.17.conf_type =
account.17.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-17%

account.17.sip_server_type =
account.17.unregister_on_reboot =

#####
#####
##                               Register Other
##
```

```
#####
#####
##DECT V81 Add

account.17.register_expires_overlap =
account.17.subscribe_expires_overlap =
account.17.auto_dial_enable =
account.17.auto_dial_num =
account.17.cp_source =
account.17.transfer_refer_to_contact_header.enable =
#V80 Add
account.17.custom_ua =
account.17.callpark_enable =
account.17.check_cseq.enable =
account.17.check_to_tag.enable =
account.17.hold_use_inactive =
account.17.line_seize.expires =
account.17.update_ack_while_dialing =
account.17.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.17.always_fwd.enable =
account.17.always_fwd.target =
account.17.always_fwd.off_code =
account.17.always_fwd.on_code =
account.17.busy_fwd.enable =
account.17.busy_fwd.target =
account.17.busy_fwd.off_code =
account.17.busy_fwd.on_code =
account.17.timeout_fwd.enable =
account.17.timeout_fwd.target =
account.17.timeout_fwd.timeout =
account.17.timeout_fwd.off_code =
account.17.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.17.dnd.enable =
account.17.dnd.on_code =
account.17.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.17.reg.enable =
handset.17.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.17.xsi.user =%BWLOGIN-ID-17%
account.17.xsi.password =%XSIPASSWORD-17%
account.17.xsi.host =%XSP_ADDRESS%
account.17.xsi.server_type =
account.17.xsi.port =

#####
#####
##          LADP
##
#####
handset.17.ldap.enable =
handset.17.ldap.name_filter=
handset.17.ldap.number_filter=
handset.17.ldap.host=
handset.17.ldap.port=
handset.17.ldap.base=
handset.17.ldap.user=
handset.17.ldap.password=
handset.17.ldap.max_hits=
handset.17.ldap.name_attr=
handset.17.ldap.numb_attr=
handset.17.ldap.display_name=
handset.17.ldap.version=
handset.17.ldap.call_in_lookup=
handset.17.ldap.ldap_sort=
handset.17.ldap.tls_mode=
handset.17.ldap.call_out_lookup=
handset.17.ldap.incoming_call_special_search.enable=

#####
#####
##          Account18 Settings
##
#####

account.18.enable=%BWLINE-BINARY-18%
account.18.label=%BWEXTENSION-18%
account.18.display_name=%BWCLID-18%
account.18.auth_name=%BWAUTHUSER-18%
account.18.user_name=%BWLINEPORT-18%
account.18.password=%BWAUTHPASSWORD-18%

#W80B ADD
account.18.sip_server.template =
account.18.media_transmit.enable =

account.18.alarm.template =
account.18.alarm.server =
account.18.alarm.number =

```



```
#####
#####
##                               Failback
##
#####
#####
account.18.sip_server.1.failback_mode =
account.18.sip_server.1.failback_timeout =
account.18.sip_server.1.register_on_enable =
account.18.sip_server.1.failback_subscribe.enable =
account.18.sip_server.1.invite_retry_counts =
account.18.sip_server.1.only_signal_with_registered =

account.18.sip_server.2.failback_mode =
account.18.sip_server.2.failback_timeout =
account.18.sip_server.2.register_on_enable =
account.18.sip_server.2.failback_subscribe.enable =
account.18.sip_server.2.invite_retry_counts =
account.18.sip_server.2.only_signal_with_registered =

account.18.naptr_build =
account.18.failback.redundancy_type =
account.18.failback.timeout =

account.18.dns_cache_type =
account.18.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.18.anonymous_call =
account.18.reject_anonymous_call =
account.18.send_anonymous_code =
account.18.anonymous_call_oncode =
account.18.anonymous_call_offcode =
account.18.send_anonymous_rejection_code =
account.18.anonymous_reject_oncode =
account.18.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.18.codec.g722.enable =
account.18.codec.g722.priority =

account.18.codec.g729.enable =
account.18.codec.g729.priority =

account.18.codec.g726_16.enable =
account.18.codec.g726_16.priority =

account.18.codec.g726_24.enable =
account.18.codec.g726_24.priority =

account.18.codec.g726_32.enable =
account.18.codec.g726_32.priority =
```

```
account.18.codec.g726_40.enable =
account.18.codec.g726_40.priority =

account.18.codec.ilbc.enable =
account.18.codec.ilbc.priority =

account.18.codec.pcmu.enable =
account.18.codec.pcmu.priority =

account.18.codec.pcma.enable =
account.18.codec.pcma.priority =

account.18.codec.opus.enable =
account.18.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.18.nat.nat_traversal =
account.18.nat.udp_update_enable =
account.18.nat.udp_update_time =
account.18.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.18.blf.subscribe_period =
account.18.dtmf.type =
account.18.dtmf.dtmf_payload =
account.18.dtmf.info_type =
account.18.100rel_enable =
account.18.subscribe_register =
account.18.subscribe_mwi =
account.18.subscribe_mwi_expires =
account.18.subscribe_mwi_to_vm =
voice_mail.number.18 = %BWVOICE-PORTAL-NUMBER-18%
account.18.display_mwi.enable =
account.18.cid_source =
account.18.cid_source_privacy =
account.18.cid_source_ppi =
account.18.session_timer.enable =
account.18.session_timer.expires =
account.18.session_timer.refresher =
account.18.enable_user_equal_phone =
account.18.srtp_encryption =
account.18.ptime =
account.18.shared_line = %BWSHAREDLINE-BINARY-18%
account.18.register_mac =
account.18.register_line =
account.18.reg_fail_retry_interval =
account.18.reg_failed_retry_min_time =
account.18.reg_failed_retry_max_time =
```

```
#####
#####
##                               Network Conference
##
#####
#####
account.18.conf_type =
account.18.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-18%

account.18.sip_server_type =
account.18.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.18.register_expires_overlap =
account.18.subscribe_expires_overlap =
account.18.auto_dial_enable =
account.18.auto_dial_num =
account.18.cp_source =
account.18.transfer_refer_to_contact_header.enable =
#V80 Add
account.18.custom_ua =
account.18.callpark_enable =
account.18.check_cseq.enable =
account.18.check_to_tag.enable =
account.18.hold_use_inactive =
account.18.line_seize.expires =
account.18.update_ack_while_dialing =
account.18.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.18.always_fwd.enable =
account.18.always_fwd.target =
account.18.always_fwd.off_code =
account.18.always_fwd.on_code =
account.18.busy_fwd.enable =
account.18.busy_fwd.target =
account.18.busy_fwd.off_code =
account.18.busy_fwd.on_code =
account.18.timeout_fwd.enable =
account.18.timeout_fwd.target =
account.18.timeout_fwd.timeout =
account.18.timeout_fwd.off_code =
account.18.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```

account.18.dnd.enable =
account.18.dnd.on_code =
account.18.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.18.reg.enable =
handset.18.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.18.xsi.user =%BWLOGIN-ID-18%
account.18.xsi.password =%XSIPASSWORD-18%
account.18.xsi.host =%XSP_ADDRESS%
account.18.xsi.server_type =
account.18.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.18.ldap.enable =
handset.18.ldap.name_filter=
handset.18.ldap.number_filter=
handset.18.ldap.host=
handset.18.ldap.port=
handset.18.ldap.base=
handset.18.ldap.user=
handset.18.ldap.password=
handset.18.ldap.max_hits=
handset.18.ldap.name_attr=
handset.18.ldap.numb_attr=
handset.18.ldap.display_name=
handset.18.ldap.version=
handset.18.ldap.call_in_lookup=
handset.18.ldap.ldap_sort=
handset.18.ldap.tls_mode=
handset.18.ldap.call_out_lookup=
handset.18.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account19 Settings
##
#####
#####

```

```

account.19.enable=%BWLIN-BINARY-19%
account.19.label=%BWEXTENSION-19%
account.19.display_name=%BWCLID-19%
account.19.auth_name=%BWAUTHUSER-19%
account.19.user_name=%BWLINPORT-19%
account.19.password=%BWAUTHPASSWORD-19%

#W80B ADD
account.19.sip_server.template =
account.19.media_transmit.enable =

account.19.alarm.template =
account.19.alarm.server =
account.19.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.19.sip_server.1.failback_mode =
account.19.sip_server.1.failback_timeout =
account.19.sip_server.1.register_on_enable =
account.19.sip_server.1.failback_subscribe.enable =
account.19.sip_server.1.invite_retry_counts =
account.19.sip_server.1.only_signal_with_registered =

account.19.sip_server.2.failback_mode =
account.19.sip_server.2.failback_timeout =
account.19.sip_server.2.register_on_enable =
account.19.sip_server.2.failback_subscribe.enable =
account.19.sip_server.2.invite_retry_counts =
account.19.sip_server.2.only_signal_with_registered =

account.19.naptr_build =
account.19.fallback.redundancy_type =
account.19.fallback.timeout =

account.19.dns_cache_type =
account.19.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.19.anonymous_call =
account.19.reject_anonymous_call =
account.19.send_anonymous_code =
account.19.anonymous_call_oncode =
account.19.anonymous_call_offcode =
account.19.send_anonymous_rejection_code =
account.19.anonymous_reject_oncode =
account.19.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.19.codec.g722.enable =
account.19.codec.g722.priority =

account.19.codec.g729.enable =
account.19.codec.g729.priority =

account.19.codec.g726_16.enable =
account.19.codec.g726_16.priority =

account.19.codec.g726_24.enable =
account.19.codec.g726_24.priority =

account.19.codec.g726_32.enable =
account.19.codec.g726_32.priority =

account.19.codec.g726_40.enable =
account.19.codec.g726_40.priority =

account.19.codec.ilbc.enable =
account.19.codec.ilbc.priority =

account.19.codec.pcmu.enable =
account.19.codec.pcmu.priority =

account.19.codec.pcma.enable =
account.19.codec.pcma.priority =

account.19.codec.opus.enable =
account.19.codec.opus.priority =

#####
#####
##                                NAT Settings
##
#####
#####

account.19.nat.nat_traversal =
account.19.nat.udp_update_enable =
account.19.nat.udp_update_time =
account.19.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.19.blf.subscribe_period =
account.19.dtmf.type =
account.19.dtmf.dtmf_payload =
account.19.dtmf.info_type =
account.19.100rel_enable =
account.19.subscribe_register =
account.19.subscribe_mwi =
account.19.subscribe_mwi_expires =
account.19.subscribe_mwi_to_vm =
voice_mail.number.19 = %BWVOICE-PORTAL-NUMBER-19%
account.19.display_mwi.enable =
account.19.cid_source =
```

```

account.19.cid_source_privacy =
account.19.cid_source_ppi =
account.19.session_timer.enable =
account.19.session_timer.expires =
account.19.session_timer.refresher =
account.19.enable_user_equal_phone =
account.19.srtp_encryption =
account.19.ptime =
account.19.shared_line = %BWSHAREDLINE-BINARY-19%
account.19.register_mac =
account.19.register_line =
account.19.reg_fail_retry_interval =
account.19.reg_failed_retry_min_time =
account.19.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.19.conf_type =
account.19.conf_uri = %BWNWORK-CONFERENCE-SIPURI-19%

account.19.sip_server_type =
account.19.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.19.register_expires_overlap =
account.19.subscribe_expires_overlap =
account.19.auto_dial_enable =
account.19.auto_dial_num =
account.19.cp_source =
account.19.transfer_refer_to_contact_header.enable =
#V80 Add
account.19.custom_ua =
account.19.callpark_enable =
account.19.check_cseq.enable =
account.19.check_to_tag.enable =
account.19.hold_use_inactive =
account.19.line_seize.expires =
account.19.update_ack_while_dialing =
account.19.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.19.always_fwd.enable =
account.19.always_fwd.target =
account.19.always_fwd.off_code =
account.19.always_fwd.on_code =
account.19.busy_fwd.enable =

```

```

account.19.busy_fwd.target =
account.19.busy_fwd.off_code =
account.19.busy_fwd.on_code =
account.19.timeout_fwd.enable =
account.19.timeout_fwd.target =
account.19.timeout_fwd.timeout =
account.19.timeout_fwd.off_code =
account.19.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.19.dnd.enable =
account.19.dnd.on_code =
account.19.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.19.reg.enable =
handset.19.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.19.xsi.user =%BWLOGIN-ID-19%
account.19.xsi.password =%XSIPASSWORD-19%
account.19.xsi.host =%XSP_ADDRESS%
account.19.xsi.server_type =
account.19.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.19 ldap.enable =
handset.19 ldap.name_filter=
handset.19 ldap.number_filter=
handset.19 ldap.host=
handset.19 ldap.port=
handset.19 ldap.base=
handset.19 ldap.user=
handset.19 ldap.password=
handset.19 ldap.max_hits=
handset.19 ldap.name_attr=
handset.19 ldap.numb_attr=
handset.19 ldap.display_name=
handset.19 ldap.version=
handset.19 ldap.call_in_lookup=

```



```

handset.19.ldap.ldap_sort=
handset.19.ldap.tls_mode=
handset.19.ldap.call_out_lookup=
handset.19.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account20 Settings
##
#####
#####

account.20.enable=%BWLIN-BINARY-20%
account.20.label=%BWEXTENSION-20%
account.20.display_name=%BWCLID-20%
account.20.auth_name=%BWAUTHUSER-20%
account.20.user_name=%BWLINPORT-20%
account.20.password=%BWAUTHPASSWORD-20%

#W80B ADD
account.20.sip_server.template =
account.20.media_transmit.enable =

account.20.alarm.template =
account.20.alarm.server =
account.20.alarm.number =

#####
#####
##                                     Failback
##
##
#####
#####

account.20.sip_server.1.failback_mode =
account.20.sip_server.1.failback_timeout =
account.20.sip_server.1.register_on_enable =
account.20.sip_server.1.failback_subscribe.enable =
account.20.sip_server.1.invite_retry_counts =
account.20.sip_server.1.only_signal_with_registered =

account.20.sip_server.2.failback_mode =
account.20.sip_server.2.failback_timeout =
account.20.sip_server.2.register_on_enable =
account.20.sip_server.2.failback_subscribe.enable =
account.20.sip_server.2.invite_retry_counts =
account.20.sip_server.2.only_signal_with_registered =

account.20.naptr_build =
account.20.fallback.redundancy_type =
account.20.fallback.timeout =

account.20.dns_cache_type =
account.20.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
##
#####
#####

```

```
account.20.anonymous_call =
account.20.reject_anonymous_call =
account.20.send_anonymous_code =
account.20.anonymous_call_oncode =
account.20.anonymous_call_offcode =
account.20.send_anonymous_rejection_code =
account.20.anonymous_reject_oncode =
account.20.anonymous_reject_offcode =

#####
#####
##
##                               Codec
##
#####
#####
account.20.codec.g722.enable =
account.20.codec.g722.priority =

account.20.codec.g729.enable =
account.20.codec.g729.priority =

account.20.codec.g726_16.enable =
account.20.codec.g726_16.priority =

account.20.codec.g726_24.enable =
account.20.codec.g726_24.priority =

account.20.codec.g726_32.enable =
account.20.codec.g726_32.priority =

account.20.codec.g726_40.enable =
account.20.codec.g726_40.priority =

account.20.codec.ilbc.enable =
account.20.codec.ilbc.priority =

account.20.codec.pcmu.enable =
account.20.codec.pcmu.priority =

account.20.codec.pcma.enable =
account.20.codec.pcma.priority =

account.20.codec.opus.enable =
account.20.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####
account.20.nat.nat_traversal =
account.20.nat.udp_update_enable =
account.20.nat.udp_update_time =
account.20.nat.rport =

#####
#####
##
##                               Register Advanced
##
```

```
#####
#####

account.20.blf.subscribe_period =
account.20.dtmf.type =
account.20.dtmf.dtmf_payload =
account.20.dtmf.info_type =
account.20.100rel_enable =
account.20.subscribe_register =
account.20.subscribe_mwi =
account.20.subscribe_mwi_expires =
account.20.subscribe_mwi_to_vm =
voice_mail.number.20 = %BWVOICE-PORTAL-NUMBER-20%
account.20.display_mwi.enable =
account.20.cid_source =
account.20.cid_source_privacy =
account.20.cid_source_ppi =
account.20.session_timer.enable =
account.20.session_timer.expires =
account.20.session_timer.refresher =
account.20.enable_user_equal_phone =
account.20.srtp_encryption =
account.20.ptime =
account.20.shared_line = %BWSHAREDLINE-BINARY-20%
account.20.register_mac =
account.20.register_line =
account.20.reg_fail_retry_interval =
account.20.reg_failed_retry_min_time =
account.20.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.20.conf_type =
account.20.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-20%

account.20.sip_server_type =
account.20.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.20.register_expires_overlap =
account.20.subscribe_expires_overlap =
account.20.auto_dial_enable =
account.20.auto_dial_num =
account.20.cp_source =
account.20.transfer_refer_to_contact_header.enable =
#V80 Add
account.20.custom_ua =
account.20.callpark_enable =
account.20.check_cseq.enable =
account.20.check_to_tag.enable =
account.20.hold_use_inactive =
```

```

account.20.line_seize.expires =
account.20.update_ack_while_dialing =
account.20.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.20.always_fwd.enable =
account.20.always_fwd.target =
account.20.always_fwd.off_code =
account.20.always_fwd.on_code =
account.20.busy_fwd.enable =
account.20.busy_fwd.target =
account.20.busy_fwd.off_code =
account.20.busy_fwd.on_code =
account.20.timeout_fwd.enable =
account.20.timeout_fwd.target =
account.20.timeout_fwd.timeout =
account.20.timeout_fwd.off_code =
account.20.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.20.dnd.enable =
account.20.dnd.on_code =
account.20.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.20.reg.enable =
handset.20.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####
account.20.xsi.user =%BWLOGIN-ID-20%
account.20.xsi.password =%XSIPASSWORD-20%
account.20.xsi.host =%XSP_ADDRESS%
account.20.xsi.server_type =
account.20.xsi.port =

#####
#####
##                                LADP
##

```

```
#####
#####
handset.20.ldap.enable =
handset.20.ldap.name_filter=
handset.20.ldap.number_filter=
handset.20.ldap.host=
handset.20.ldap.port=
handset.20.ldap.base=
handset.20.ldap.user=
handset.20.ldap.password=
handset.20.ldap.max_hits=
handset.20.ldap.name_attr=
handset.20.ldap.numb_attr=
handset.20.ldap.display_name=
handset.20.ldap.version=
handset.20.ldap.call_in_lookup=
handset.20.ldap.ldap_sort=
handset.20.ldap.tls_mode=
handset.20.ldap.call_out_lookup=
handset.20.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account21 Settings
##
#####
#####

account.21.enable=%BWLIN-BINARY-21%
account.21.label=%BWEXTENSION-21%
account.21.display_name=%BWCLID-21%
account.21.auth_name=%BWAUTHUSER-21%
account.21.user_name=%BWLINPORT-21%
account.21.password=%BWAUTHPASSWORD-21%

#W80B ADD
account.21.sip_server.template =
account.21.media_transmit.enable =

account.21.alarm.template =
account.21.alarm.server =
account.21.alarm.number =

#####
#####
##                               Failback
##
#####
#####

account.21.sip_server.1.failback_mode =
account.21.sip_server.1.failback_timeout =
account.21.sip_server.1.register_on_enable =
account.21.sip_server.1.failback_subscribe.enable =
account.21.sip_server.1.invite_retry_counts =
account.21.sip_server.1.only_signal_with_registered =

account.21.sip_server.2.failback_mode =
account.21.sip_server.2.failback_timeout =
account.21.sip_server.2.register_on_enable =
account.21.sip_server.2.failback_subscribe.enable =
```

```
account.21.sip_server.2.invite_retry_counts =
account.21.sip_server.2.only_signal_with_registered =

account.21.naptr_build =
account.21.fallback.redundancy_type =
account.21.fallback.timeout =

account.21.dns_cache_type =
account.21.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.21.anonymous_call =
account.21.reject_anonymous_call =
account.21.send_anonymous_code =
account.21.anonymous_call_oncode =
account.21.anonymous_call_offcode =
account.21.send_anonymous_rejection_code =
account.21.anonymous_reject_oncode =
account.21.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.21.codec.g722.enable =
account.21.codec.g722.priority =

account.21.codec.g729.enable =
account.21.codec.g729.priority =

account.21.codec.g726_16.enable =
account.21.codec.g726_16.priority =

account.21.codec.g726_24.enable =
account.21.codec.g726_24.priority =

account.21.codec.g726_32.enable =
account.21.codec.g726_32.priority =

account.21.codec.g726_40.enable =
account.21.codec.g726_40.priority =

account.21.codec.ilbc.enable =
account.21.codec.ilbc.priority =

account.21.codec.pcmu.enable =
account.21.codec.pcmu.priority =

account.21.codec.pcma.enable =
account.21.codec.pcma.priority =

account.21.codec.opus.enable =
account.21.codec.opus.priority =
```

```
#####
#####
##                                NAT Settings
##
#####
#####

account.21.nat.nat_traversal =
account.21.nat.udp_update_enable =
account.21.nat.udp_update_time =
account.21.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.21.blf.subscribe_period =
account.21.dtmf.type =
account.21.dtmf.dtmf_payload =
account.21.dtmf.info_type =
account.21.100rel_enable =
account.21.subscribe_register =
account.21.subscribe_mwi =
account.21.subscribe_mwi_expires =
account.21.subscribe_mwi_to_vm =
voice_mail.number.21 = %BWVOICE-PORTAL-NUMBER-21%
account.21.display_mwi.enable =
account.21.cid_source =
account.21.cid_source_privacy =
account.21.cid_source_ppi =
account.21.session_timer.enable =
account.21.session_timer.expires =
account.21.session_timer.refresher =
account.21.enable_user_equal_phone =
account.21.srtp_encryption =
account.21.ptime =
account.21.shared_line = %BWSHAREDLINE-BINARY-21%
account.21.register_mac =
account.21.register_line =
account.21.reg_fail_retry_interval =
account.21.reg_failed_retry_min_time =
account.21.reg_failed_retry_max_time =

#####
#####
##                                Network Conference
##
#####
#####

account.21.conf_type =
account.21.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-21%

account.21.sip_server_type =
account.21.unregister_on_reboot =

#####
#####
##                                Register Other
##
```

```
#####
#####
##DECT V81 Add

account.21.register_expires_overlap =
account.21.subscribe_expires_overlap =
account.21.auto_dial_enable =
account.21.auto_dial_num =
account.21.cp_source =
account.21.transfer_refer_to_contact_header.enable =
#V80 Add
account.21.custom_ua =
account.21.callpark_enable =
account.21.check_cseq.enable =
account.21.check_to_tag.enable =
account.21.hold_use_inactive =
account.21.line_seize.expires =
account.21.update_ack_while_dialing =
account.21.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.21.always_fwd.enable =
account.21.always_fwd.target =
account.21.always_fwd.off_code =
account.21.always_fwd.on_code =
account.21.busy_fwd.enable =
account.21.busy_fwd.target =
account.21.busy_fwd.off_code =
account.21.busy_fwd.on_code =
account.21.timeout_fwd.enable =
account.21.timeout_fwd.target =
account.21.timeout_fwd.timeout =
account.21.timeout_fwd.off_code =
account.21.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.21.dnd.enable =
account.21.dnd.on_code =
account.21.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.21.reg.enable =
handset.21.ipui =

#####
#####
```



```

##          Broadsoft XSI
##
#####

account.21.xsi.user =%BWLOGIN-ID-21%
account.21.xsi.password =%XSIPASSWORD-21%
account.21.xsi.host =%XSP_ADDRESS%
account.21.xsi.server_type =
account.21.xsi.port =

#####
#####
##          LADP
##
#####
handset.21.ldap.enable =
handset.21.ldap.name_filter=
handset.21.ldap.number_filter=
handset.21.ldap.host=
handset.21.ldap.port=
handset.21.ldap.base=
handset.21.ldap.user=
handset.21.ldap.password=
handset.21.ldap.max_hits=
handset.21.ldap.name_attr=
handset.21.ldap.numb_attr=
handset.21.ldap.display_name=
handset.21.ldap.version=
handset.21.ldap.call_in_lookup=
handset.21.ldap.ldap_sort=
handset.21.ldap.tls_mode=
handset.21.ldap.call_out_lookup=
handset.21.ldap.incoming_call_special_search.enable=

#####
#####
##          Account22 Settings
##
#####

account.22.enable=%BWLINE-BINARY-22%
account.22.label=%BWEXTENSION-22%
account.22.display_name=%BWCLID-22%
account.22.auth_name=%BWAUTHUSER-22%
account.22.user_name=%BWLINEPORT-22%
account.22.password=%BWAUTHPASSWORD-22%

#W80B ADD
account.22.sip_server.template =
account.22.media_transmit.enable =

account.22.alarm.template =
account.22.alarm.server =
account.22.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.22.sip_server.1.failback_mode =
account.22.sip_server.1.failback_timeout =
account.22.sip_server.1.register_on_enable =
account.22.sip_server.1.failback_subscribe.enable =
account.22.sip_server.1.invite_retry_counts =
account.22.sip_server.1.only_signal_with_registered =

account.22.sip_server.2.failback_mode =
account.22.sip_server.2.failback_timeout =
account.22.sip_server.2.register_on_enable =
account.22.sip_server.2.failback_subscribe.enable =
account.22.sip_server.2.invite_retry_counts =
account.22.sip_server.2.only_signal_with_registered =

account.22.naptr_build =
account.22.fallback.redundancy_type =
account.22.fallback.timeout =

account.22.dns_cache_type =
account.22.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.22.anonymous_call =
account.22.reject_anonymous_call =
account.22.send_anonymous_code =
account.22.anonymous_call_oncode =
account.22.anonymous_call_offcode =
account.22.send_anonymous_rejection_code =
account.22.anonymous_reject_oncode =
account.22.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.22.codec.g722.enable =
account.22.codec.g722.priority =

account.22.codec.g729.enable =
account.22.codec.g729.priority =

account.22.codec.g726_16.enable =
account.22.codec.g726_16.priority =

account.22.codec.g726_24.enable =
account.22.codec.g726_24.priority =

account.22.codec.g726_32.enable =
account.22.codec.g726_32.priority =
```

```

account.22.codec.g726_40.enable =
account.22.codec.g726_40.priority =

account.22.codec.ilbc.enable =
account.22.codec.ilbc.priority =

account.22.codec.pcmu.enable =
account.22.codec.pcmu.priority =

account.22.codec.pcma.enable =
account.22.codec.pcma.priority =

account.22.codec.opus.enable =
account.22.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.22.nat.nat_traversal =
account.22.nat.udp_update_enable =
account.22.nat.udp_update_time =
account.22.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.22.blf.subscribe_period =
account.22.dtmf.type =
account.22.dtmf.dtmf_payload =
account.22.dtmf.info_type =
account.22.100rel_enable =
account.22.subscribe_register =
account.22.subscribe_mwi =
account.22.subscribe_mwi_expires =
account.22.subscribe_mwi_to_vm =
voice_mail.number.22 = %BWVOICE-PORTAL-NUMBER-22%
account.22.display_mwi.enable =
account.22.cid_source =
account.22.cid_source_privacy =
account.22.cid_source_ppi =
account.22.session_timer.enable =
account.22.session_timer.expires =
account.22.session_timer.refresher =
account.22.enable_user_equal_phone =
account.22.srtp_encryption =
account.22.ptime =
account.22.shared_line = %BWSHAREDLINE-BINARY-22%
account.22.register_mac =
account.22.register_line =
account.22.reg_fail_retry_interval =
account.22.reg_failed_retry_min_time =
account.22.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.22.conf_type =
account.22.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-22%

account.22.sip_server_type =
account.22.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.22.register_expires_overlap =
account.22.subscribe_expires_overlap =
account.22.auto_dial_enable =
account.22.auto_dial_num =
account.22.cp_source =
account.22.transfer_refer_to_contact_header.enable =
#V80 Add
account.22.custom_ua =
account.22.callpark_enable =
account.22.check_cseq.enable =
account.22.check_to_tag.enable =
account.22.hold_use_inactive =
account.22.line_seize.expires =
account.22.update_ack_while_dialing =
account.22.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.22.always_fwd.enable =
account.22.always_fwd.target =
account.22.always_fwd.off_code =
account.22.always_fwd.on_code =
account.22.busy_fwd.enable =
account.22.busy_fwd.target =
account.22.busy_fwd.off_code =
account.22.busy_fwd.on_code =
account.22.timeout_fwd.enable =
account.22.timeout_fwd.target =
account.22.timeout_fwd.timeout =
account.22.timeout_fwd.off_code =
account.22.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```

account.22.dnd.enable =
account.22.dnd.on_code =
account.22.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.22.reg.enable =
handset.22.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.22.xsi.user =%BWLOGIN-ID-22%
account.22.xsi.password =%XSIPASSWORD-22%
account.22.xsi.host =%XSP_ADDRESS%
account.22.xsi.server_type =
account.22.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.22.ldap.enable =
handset.22.ldap.name_filter=
handset.22.ldap.number_filter=
handset.22.ldap.host=
handset.22.ldap.port=
handset.22.ldap.base=
handset.22.ldap.user=
handset.22.ldap.password=
handset.22.ldap.max_hits=
handset.22.ldap.name_attr=
handset.22.ldap.numb_attr=
handset.22.ldap.display_name=
handset.22.ldap.version=
handset.22.ldap.call_in_lookup=
handset.22.ldap.ldap_sort=
handset.22.ldap.tls_mode=
handset.22.ldap.call_out_lookup=
handset.22.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account23 Settings
##
#####
#####

```

```

account.23.enable=%BWLIN-BINARY-23%
account.23.label=%BWEXTENSION-23%
account.23.display_name=%BWCLID-23%
account.23.auth_name=%BWAUTHUSER-23%
account.23.user_name=%BWLINPORT-23%
account.23.password=%BWAUTHPASSWORD-23%

#W80B ADD
account.23.sip_server.template =
account.23.media_transmit.enable =

account.23.alarm.template =
account.23.alarm.server =
account.23.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.23.sip_server.1.failback_mode =
account.23.sip_server.1.failback_timeout =
account.23.sip_server.1.register_on_enable =
account.23.sip_server.1.failback_subscribe.enable =
account.23.sip_server.1.invite_retry_counts =
account.23.sip_server.1.only_signal_with_registered =

account.23.sip_server.2.failback_mode =
account.23.sip_server.2.failback_timeout =
account.23.sip_server.2.register_on_enable =
account.23.sip_server.2.failback_subscribe.enable =
account.23.sip_server.2.invite_retry_counts =
account.23.sip_server.2.only_signal_with_registered =

account.23.naptr_build =
account.23.fallback.redundancy_type =
account.23.fallback.timeout =

account.23.dns_cache_type =
account.23.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.23.anonymous_call =
account.23.reject_anonymous_call =
account.23.send_anonymous_code =
account.23.anonymous_call_oncode =
account.23.anonymous_call_offcode =
account.23.send_anonymous_rejection_code =
account.23.anonymous_reject_oncode =
account.23.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.23.codec.g722.enable =
account.23.codec.g722.priority =

account.23.codec.g729.enable =
account.23.codec.g729.priority =

account.23.codec.g726_16.enable =
account.23.codec.g726_16.priority =

account.23.codec.g726_24.enable =
account.23.codec.g726_24.priority =

account.23.codec.g726_32.enable =
account.23.codec.g726_32.priority =

account.23.codec.g726_40.enable =
account.23.codec.g726_40.priority =

account.23.codec.ilbc.enable =
account.23.codec.ilbc.priority =

account.23.codec.pcmu.enable =
account.23.codec.pcmu.priority =

account.23.codec.pcma.enable =
account.23.codec.pcma.priority =

account.23.codec.opus.enable =
account.23.codec.opus.priority =

#####
#####
##                                NAT Settings
##
#####
#####

account.23.nat.nat_traversal =
account.23.nat.udp_update_enable =
account.23.nat.udp_update_time =
account.23.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.23.blf.subscribe_period =
account.23.dtmf.type =
account.23.dtmf.dtmf_payload =
account.23.dtmf.info_type =
account.23.100rel_enable =
account.23.subscribe_register =
account.23.subscribe_mwi =
account.23.subscribe_mwi_expires =
account.23.subscribe_mwi_to_vm =
voice_mail.number.23 = %BWVOICE-PORTAL-NUMBER-23%
account.23.display_mwi.enable =
account.23.cid_source =
```

```

account.23.cid_source_privacy =
account.23.cid_source_ppi =
account.23.session_timer.enable =
account.23.session_timer.expires =
account.23.session_timer.refresher =
account.23.enable_user_equal_phone =
account.23.srtp_encryption =
account.23.ptime =
account.23.shared_line = %BWSHAREDLINE-BINARY-23%
account.23.register_mac =
account.23.register_line =
account.23.reg_fail_retry_interval =
account.23.reg_failed_retry_min_time =
account.23.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.23.conf_type =
account.23.conf_uri = %BWNWORK-CONFERENCE-SIPURI-23%

account.23.sip_server_type =
account.23.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.23.register_expires_overlap =
account.23.subscribe_expires_overlap =
account.23.auto_dial_enable =
account.23.auto_dial_num =
account.23.cp_source =
account.23.transfer_refer_to_contact_header.enable =
#V80 Add
account.23.custom_ua =
account.23.callpark_enable =
account.23.check_cseq.enable =
account.23.check_to_tag.enable =
account.23.hold_use_inactive =
account.23.line_seize.expires =
account.23.update_ack_while_dialing =
account.23.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.23.always_fwd.enable =
account.23.always_fwd.target =
account.23.always_fwd.off_code =
account.23.always_fwd.on_code =
account.23.busy_fwd.enable =

```



```

account.23.busy_fwd.target =
account.23.busy_fwd.off_code =
account.23.busy_fwd.on_code =
account.23.timeout_fwd.enable =
account.23.timeout_fwd.target =
account.23.timeout_fwd.timeout =
account.23.timeout_fwd.off_code =
account.23.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.23.dnd.enable =
account.23.dnd.on_code =
account.23.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.23.reg.enable =
handset.23.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.23.xsi.user =%BWLOGIN-ID-23%
account.23.xsi.password =%XSIPASSWORD-23%
account.23.xsi.host =%XSP_ADDRESS%
account.23.xsi.server_type =
account.23.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.23.ldap.enable =
handset.23.ldap.name_filter=
handset.23.ldap.number_filter=
handset.23.ldap.host=
handset.23.ldap.port=
handset.23.ldap.base=
handset.23.ldap.user=
handset.23.ldap.password=
handset.23.ldap.max_hits=
handset.23.ldap.name_attr=
handset.23.ldap.numb_attr=
handset.23.ldap.display_name=
handset.23.ldap.version=
handset.23.ldap.call_in_lookup=

```

```

handset.23.ldap.ldap_sort=
handset.23.ldap.tls_mode=
handset.23.ldap.call_out_lookup=
handset.23.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account24 Settings
##
#####
#####

account.24.enable=%BWLIN-BINARY-24%
account.24.label=%BWEXTENSION-24%
account.24.display_name=%BWCLID-24%
account.24.auth_name=%BWAUTHUSER-24%
account.24.user_name=%BWLINPORT-24%
account.24.password=%BWAUTHPASSWORD-24%

#W80B ADD
account.24.sip_server.template =
account.24.media_transmit.enable =

account.24.alarm.template =
account.24.alarm.server =
account.24.alarm.number =

#####
#####
##                                     Failback
##
##
#####
#####
account.24.sip_server.1.failback_mode =
account.24.sip_server.1.failback_timeout =
account.24.sip_server.1.register_on_enable =
account.24.sip_server.1.failback_subscribe.enable =
account.24.sip_server.1.invite_retry_counts =
account.24.sip_server.1.only_signal_with_registered =

account.24.sip_server.2.failback_mode =
account.24.sip_server.2.failback_timeout =
account.24.sip_server.2.register_on_enable =
account.24.sip_server.2.failback_subscribe.enable =
account.24.sip_server.2.invite_retry_counts =
account.24.sip_server.2.only_signal_with_registered =

account.24.naptr_build =
account.24.fallback.redundancy_type =
account.24.fallback.timeout =

account.24.dns_cache_type =
account.24.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
##
#####
#####

```

```

account.24.anonymous_call =
account.24.reject_anonymous_call =
account.24.send_anonymous_code =
account.24.anonymous_call_oncode =
account.24.anonymous_call_offcode =
account.24.send_anonymous_rejection_code =
account.24.anonymous_reject_oncode =
account.24.anonymous_reject_offcode =

#####
#####
##
##                               Codec
##
#####
#####
account.24.codec.g722.enable =
account.24.codec.g722.priority =

account.24.codec.g729.enable =
account.24.codec.g729.priority =

account.24.codec.g726_16.enable =
account.24.codec.g726_16.priority =

account.24.codec.g726_24.enable =
account.24.codec.g726_24.priority =

account.24.codec.g726_32.enable =
account.24.codec.g726_32.priority =

account.24.codec.g726_40.enable =
account.24.codec.g726_40.priority =

account.24.codec.ilbc.enable =
account.24.codec.ilbc.priority =

account.24.codec.pcmu.enable =
account.24.codec.pcmu.priority =

account.24.codec.pcma.enable =
account.24.codec.pcma.priority =

account.24.codec.opus.enable =
account.24.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.24.nat.nat_traversal =
account.24.nat.udp_update_enable =
account.24.nat.udp_update_time =
account.24.nat.rport =

#####
#####
##
##                               Register Advanced
##

```

```
#####
#####

account.24.blf.subscribe_period =
account.24.dtmf.type =
account.24.dtmf.dtmf_payload =
account.24.dtmf.info_type =
account.24.100rel_enable =
account.24.subscribe_register =
account.24.subscribe_mwi =
account.24.subscribe_mwi_expires =
account.24.subscribe_mwi_to_vm =
voice_mail.number.24 = %BWVOICE-PORTAL-NUMBER-24%
account.24.display_mwi.enable =
account.24.cid_source =
account.24.cid_source_privacy =
account.24.cid_source_ppi =
account.24.session_timer.enable =
account.24.session_timer.expires =
account.24.session_timer.refresher =
account.24.enable_user_equal_phone =
account.24.srtp_encryption =
account.24.ptime =
account.24.shared_line = %BWSHAREDLINE-BINARY-24%
account.24.register_mac =
account.24.register_line =
account.24.reg_fail_retry_interval =
account.24.reg_failed_retry_min_time =
account.24.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.24.conf_type =
account.24.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-24%

account.24.sip_server_type =
account.24.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.24.register_expires_overlap =
account.24.subscribe_expires_overlap =
account.24.auto_dial_enable =
account.24.auto_dial_num =
account.24.cp_source =
account.24.transfer_refer_to_contact_header.enable =
#V80 Add
account.24.custom_ua =
account.24.callpark_enable =
account.24.check_cseq.enable =
account.24.check_to_tag.enable =
account.24.hold_use_inactive =
```

```

account.24.line_seize.expires =
account.24.update_ack_while_dialing =
account.24.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.24.always_fwd.enable =
account.24.always_fwd.target =
account.24.always_fwd.off_code =
account.24.always_fwd.on_code =
account.24.busy_fwd.enable =
account.24.busy_fwd.target =
account.24.busy_fwd.off_code =
account.24.busy_fwd.on_code =
account.24.timeout_fwd.enable =
account.24.timeout_fwd.target =
account.24.timeout_fwd.timeout =
account.24.timeout_fwd.off_code =
account.24.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.24.dnd.enable =
account.24.dnd.on_code =
account.24.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.24.reg.enable =
handset.24.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####
account.24.xsi.user =%BWLOGIN-ID-24%
account.24.xsi.password =%XSIPASSWORD-24%
account.24.xsi.host =%XSP_ADDRESS%
account.24.xsi.server_type =
account.24.xsi.port =

#####
#####
##                                LADP
##

```

```
#####
#####
handset.24.ldap.enable =
handset.24.ldap.name_filter=
handset.24.ldap.number_filter=
handset.24.ldap.host=
handset.24.ldap.port=
handset.24.ldap.base=
handset.24.ldap.user=
handset.24.ldap.password=
handset.24.ldap.max_hits=
handset.24.ldap.name_attr=
handset.24.ldap.numb_attr=
handset.24.ldap.display_name=
handset.24.ldap.version=
handset.24.ldap.call_in_lookup=
handset.24.ldap.ldap_sort=
handset.24.ldap.tls_mode=
handset.24.ldap.call_out_lookup=
handset.24.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account25 Settings
##
#####
#####

account.25.enable=%BWLIN-BINARY-25%
account.25.label=%BWEXTENSION-25%
account.25.display_name=%BWCLID-25%
account.25.auth_name=%BWAUTHUSER-25%
account.25.user_name=%BWLINPORT-25%
account.25.password=%BWAUTHPASSWORD-25%

#W80B ADD
account.25.sip_server.template =
account.25.media_transmit.enable =

account.25.alarm.template =
account.25.alarm.server =
account.25.alarm.number =

#####
#####
##                               Failback
##
#####
#####

account.25.sip_server.1.failback_mode =
account.25.sip_server.1.failback_timeout =
account.25.sip_server.1.register_on_enable =
account.25.sip_server.1.failback_subscribe.enable =
account.25.sip_server.1.invite_retry_counts =
account.25.sip_server.1.only_signal_with_registered =

account.25.sip_server.2.failback_mode =
account.25.sip_server.2.failback_timeout =
account.25.sip_server.2.register_on_enable =
account.25.sip_server.2.failback_subscribe.enable =
```

```

account.25.sip_server.2.invite_retry_counts =
account.25.sip_server.2.only_signal_with_registered =

account.25.naptr_build =
account.25.fallback.redundancy_type =
account.25.fallback.timeout =

account.25.dns_cache_type =
account.25.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.25.anonymous_call =
account.25.reject_anonymous_call =
account.25.send_anonymous_code =
account.25.anonymous_call_oncode =
account.25.anonymous_call_offcode =
account.25.send_anonymous_rejection_code =
account.25.anonymous_reject_oncode =
account.25.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.25.codec.g722.enable =
account.25.codec.g722.priority =

account.25.codec.g729.enable =
account.25.codec.g729.priority =

account.25.codec.g726_16.enable =
account.25.codec.g726_16.priority =

account.25.codec.g726_24.enable =
account.25.codec.g726_24.priority =

account.25.codec.g726_32.enable =
account.25.codec.g726_32.priority =

account.25.codec.g726_40.enable =
account.25.codec.g726_40.priority =

account.25.codec.ilbc.enable =
account.25.codec.ilbc.priority =

account.25.codec.pcmu.enable =
account.25.codec.pcmu.priority =

account.25.codec.pcma.enable =
account.25.codec.pcma.priority =

account.25.codec.opus.enable =
account.25.codec.opus.priority =

```

```
#####
#####
##                               NAT Settings
##
#####
#####

account.25.nat.nat_traversal =
account.25.nat.udp_update_enable =
account.25.nat.udp_update_time =
account.25.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.25.blf.subscribe_period =
account.25.dtmf.type =
account.25.dtmf.dtmf_payload =
account.25.dtmf.info_type =
account.25.100rel_enable =
account.25.subscribe_register =
account.25.subscribe_mwi =
account.25.subscribe_mwi_expires =
account.25.subscribe_mwi_to_vm =
voice_mail.number.25 = %BWVOICE-PORTAL-NUMBER-25%
account.25.display_mwi.enable =
account.25.cid_source =
account.25.cid_source_privacy =
account.25.cid_source_ppi =
account.25.session_timer.enable =
account.25.session_timer.expires =
account.25.session_timer.refreshes =
account.25.enable_user_equal_phone =
account.25.srtp_encryption =
account.25.ptime =
account.25.shared_line = %BWSHAREDLINE-BINARY-25%
account.25.register_mac =
account.25.register_line =
account.25.reg_fail_retry_interval =
account.25.reg_failed_retry_min_time =
account.25.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.25.conf_type =
account.25.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-25%

account.25.sip_server_type =
account.25.unregister_on_reboot =

#####
#####
##                               Register Other
##
##
```



```
#####
#####
##DECT V81 Add

account.25.register_expires_overlap =
account.25.subscribe_expires_overlap =
account.25.auto_dial_enable =
account.25.auto_dial_num =
account.25.cp_source =
account.25.transfer_refer_to_contact_header.enable =
#V80 Add
account.25.custom_ua =
account.25.callpark_enable =
account.25.check_cseq.enable =
account.25.check_to_tag.enable =
account.25.hold_use_inactive =
account.25.line_seize.expires =
account.25.update_ack_while_dialing =
account.25.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.25.always_fwd.enable =
account.25.always_fwd.target =
account.25.always_fwd.off_code =
account.25.always_fwd.on_code =
account.25.busy_fwd.enable =
account.25.busy_fwd.target =
account.25.busy_fwd.off_code =
account.25.busy_fwd.on_code =
account.25.timeout_fwd.enable =
account.25.timeout_fwd.target =
account.25.timeout_fwd.timeout =
account.25.timeout_fwd.off_code =
account.25.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.25.dnd.enable =
account.25.dnd.on_code =
account.25.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.25.reg.enable =
handset.25.ipui =

#####
#####
```

```
##          Broadsoft XSI
##
#####

account.25.xsi.user =%BWLOGIN-ID-25%
account.25.xsi.password =%XSIPASSWORD-25%
account.25.xsi.host =%XSP_ADDRESS%
account.25.xsi.server_type =
account.25.xsi.port =

#####
#####
##          LADP
##
#####
handset.25.ldap.enable =
handset.25.ldap.name_filter=
handset.25.ldap.number_filter=
handset.25.ldap.host=
handset.25.ldap.port=
handset.25.ldap.base=
handset.25.ldap.user=
handset.25.ldap.password=
handset.25.ldap.max_hits=
handset.25.ldap.name_attr=
handset.25.ldap.numb_attr=
handset.25.ldap.display_name=
handset.25.ldap.version=
handset.25.ldap.call_in_lookup=
handset.25.ldap.ldap_sort=
handset.25.ldap.tls_mode=
handset.25.ldap.call_out_lookup=
handset.25.ldap.incoming_call_special_search.enable=

#####
#####
##          Account26 Settings
##
#####

account.26.enable=%BWLINE-BINARY-26%
account.26.label=%BWEXTENSION-26%
account.26.display_name=%BWCLID-26%
account.26.auth_name=%BWAUTHUSER-26%
account.26.user_name=%BWLINEPORT-26%
account.26.password=%BWAUTHPASSWORD-26%

#W80B ADD
account.26.sip_server.template =
account.26.media_transmit.enable =

account.26.alarm.template =
account.26.alarm.server =
account.26.alarm.number =
```

```
#####
#####
##                               Failback
##
#####
#####
account.26.sip_server.1.failback_mode =
account.26.sip_server.1.failback_timeout =
account.26.sip_server.1.register_on_enable =
account.26.sip_server.1.failback_subscribe.enable =
account.26.sip_server.1.invite_retry_counts =
account.26.sip_server.1.only_signal_with_registered =

account.26.sip_server.2.failback_mode =
account.26.sip_server.2.failback_timeout =
account.26.sip_server.2.register_on_enable =
account.26.sip_server.2.failback_subscribe.enable =
account.26.sip_server.2.invite_retry_counts =
account.26.sip_server.2.only_signal_with_registered =

account.26.naptr_build =
account.26.fallback.redundancy_type =
account.26.fallback.timeout =

account.26.dns_cache_type =
account.26.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.26.anonymous_call =
account.26.reject_anonymous_call =
account.26.send_anonymous_code =
account.26.anonymous_call_oncode =
account.26.anonymous_call_offcode =
account.26.send_anonymous_rejection_code =
account.26.anonymous_reject_oncode =
account.26.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.26.codec.g722.enable =
account.26.codec.g722.priority =

account.26.codec.g729.enable =
account.26.codec.g729.priority =

account.26.codec.g726_16.enable =
account.26.codec.g726_16.priority =

account.26.codec.g726_24.enable =
account.26.codec.g726_24.priority =

account.26.codec.g726_32.enable =
account.26.codec.g726_32.priority =
```

```

account.26.codec.g726_40.enable =
account.26.codec.g726_40.priority =

account.26.codec.ilbc.enable =
account.26.codec.ilbc.priority =

account.26.codec.pcmu.enable =
account.26.codec.pcmu.priority =

account.26.codec.pcma.enable =
account.26.codec.pcma.priority =

account.26.codec.opus.enable =
account.26.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.26.nat.nat_traversal =
account.26.nat.udp_update_enable =
account.26.nat.udp_update_time =
account.26.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.26.blf.subscribe_period =
account.26.dtmf.type =
account.26.dtmf.dtmf_payload =
account.26.dtmf.info_type =
account.26.100rel_enable =
account.26.subscribe_register =
account.26.subscribe_mwi =
account.26.subscribe_mwi_expires =
account.26.subscribe_mwi_to_vm =
voice_mail.number.26 = %BWVOICE-PORTAL-NUMBER-26%
account.26.display_mwi.enable =
account.26.cid_source =
account.26.cid_source_privacy =
account.26.cid_source_ppi =
account.26.session_timer.enable =
account.26.session_timer.expires =
account.26.session_timer.refresher =
account.26.enable_user_equal_phone =
account.26.srtp_encryption =
account.26.ptime =
account.26.shared_line = %BWSHAREDLINE-BINARY-26%
account.26.register_mac =
account.26.register_line =
account.26.reg_fail_retry_interval =
account.26.reg_failed_retry_min_time =
account.26.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.26.conf_type =
account.26.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-26%

account.26.sip_server_type =
account.26.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.26.register_expires_overlap =
account.26.subscribe_expires_overlap =
account.26.auto_dial_enable =
account.26.auto_dial_num =
account.26.cp_source =
account.26.transfer_refer_to_contact_header.enable =
#V80 Add
account.26.custom_ua =
account.26.callpark_enable =
account.26.check_cseq.enable =
account.26.check_to_tag.enable =
account.26.hold_use_inactive =
account.26.line_seize.expires =
account.26.update_ack_while_dialing =
account.26.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.26.always_fwd.enable =
account.26.always_fwd.target =
account.26.always_fwd.off_code =
account.26.always_fwd.on_code =
account.26.busy_fwd.enable =
account.26.busy_fwd.target =
account.26.busy_fwd.off_code =
account.26.busy_fwd.on_code =
account.26.timeout_fwd.enable =
account.26.timeout_fwd.target =
account.26.timeout_fwd.timeout =
account.26.timeout_fwd.off_code =
account.26.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```

account.26.dnd.enable =
account.26.dnd.on_code =
account.26.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.26.reg.enable =
handset.26.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.26.xsi.user =%BWLOGIN-ID-26%
account.26.xsi.password =%XSIPASSWORD-26%
account.26.xsi.host =%XSP_ADDRESS%
account.26.xsi.server_type =
account.26.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.26.ldap.enable =
handset.26.ldap.name_filter=
handset.26.ldap.number_filter=
handset.26.ldap.host=
handset.26.ldap.port=
handset.26.ldap.base=
handset.26.ldap.user=
handset.26.ldap.password=
handset.26.ldap.max_hits=
handset.26.ldap.name_attr=
handset.26.ldap.numb_attr=
handset.26.ldap.display_name=
handset.26.ldap.version=
handset.26.ldap.call_in_lookup=
handset.26.ldap.ldap_sort=
handset.26.ldap.tls_mode=
handset.26.ldap.call_out_lookup=
handset.26.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account27 Settings
##
#####
#####

```

```

account.27.enable=%BWLIN-BINARY-27%
account.27.label=%BWEXTENSION-27%
account.27.display_name=%BWCLID-27%
account.27.auth_name=%BWAUTHUSER-27%
account.27.user_name=%BWLINPORT-27%
account.27.password=%BWAUTHPASSWORD-27%

#W80B ADD
account.27.sip_server.template =
account.27.media_transmit.enable =

account.27.alarm.template =
account.27.alarm.server =
account.27.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.27.sip_server.1.failback_mode =
account.27.sip_server.1.failback_timeout =
account.27.sip_server.1.register_on_enable =
account.27.sip_server.1.failback_subscribe.enable =
account.27.sip_server.1.invite_retry_counts =
account.27.sip_server.1.only_signal_with_registered =

account.27.sip_server.2.failback_mode =
account.27.sip_server.2.failback_timeout =
account.27.sip_server.2.register_on_enable =
account.27.sip_server.2.failback_subscribe.enable =
account.27.sip_server.2.invite_retry_counts =
account.27.sip_server.2.only_signal_with_registered =

account.27.naptr_build =
account.27.fallback.redundancy_type =
account.27.fallback.timeout =

account.27.dns_cache_type =
account.27.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.27.anonymous_call =
account.27.reject_anonymous_call =
account.27.send_anonymous_code =
account.27.anonymous_call_oncode =
account.27.anonymous_call_offcode =
account.27.send_anonymous_rejection_code =
account.27.anonymous_reject_oncode =
account.27.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.27.codec.g722.enable =
account.27.codec.g722.priority =

account.27.codec.g729.enable =
account.27.codec.g729.priority =

account.27.codec.g726_16.enable =
account.27.codec.g726_16.priority =

account.27.codec.g726_24.enable =
account.27.codec.g726_24.priority =

account.27.codec.g726_32.enable =
account.27.codec.g726_32.priority =

account.27.codec.g726_40.enable =
account.27.codec.g726_40.priority =

account.27.codec.ilbc.enable =
account.27.codec.ilbc.priority =

account.27.codec.pcmu.enable =
account.27.codec.pcmu.priority =

account.27.codec.pcma.enable =
account.27.codec.pcma.priority =

account.27.codec.opus.enable =
account.27.codec.opus.priority =

#####
#####
##                                NAT Settings
##
#####
#####

account.27.nat.nat_traversal =
account.27.nat.udp_update_enable =
account.27.nat.udp_update_time =
account.27.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.27.blf.subscribe_period =
account.27.dtmf.type =
account.27.dtmf.dtmf_payload =
account.27.dtmf.info_type =
account.27.100rel_enable =
account.27.subscribe_register =
account.27.subscribe_mwi =
account.27.subscribe_mwi_expires =
account.27.subscribe_mwi_to_vm =
voice_mail.number.27 = %BWVOICE-PORTAL-NUMBER-27%
account.27.display_mwi.enable =
account.27.cid_source =
```



```

account.27.cid_source_privacy =
account.27.cid_source_ppi =
account.27.session_timer.enable =
account.27.session_timer.expires =
account.27.session_timer.refresher =
account.27.enable_user_equal_phone =
account.27.srtp_encryption =
account.27.ptime =
account.27.shared_line = %BWSHAREDLINE-BINARY-27%
account.27.register_mac =
account.27.register_line =
account.27.reg_fail_retry_interval =
account.27.reg_failed_retry_min_time =
account.27.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.27.conf_type =
account.27.conf_uri = %BWNWORK-CONFERENCE-SIPURI-27%

account.27.sip_server_type =
account.27.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.27.register_expires_overlap =
account.27.subscribe_expires_overlap =
account.27.auto_dial_enable =
account.27.auto_dial_num =
account.27.cp_source =
account.27.transfer_refer_to_contact_header.enable =
#V80 Add
account.27.custom_ua =
account.27.callpark_enable =
account.27.check_cseq.enable =
account.27.check_to_tag.enable =
account.27.hold_use_inactive =
account.27.line_seize.expires =
account.27.update_ack_while_dialing =
account.27.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.27.always_fwd.enable =
account.27.always_fwd.target =
account.27.always_fwd.off_code =
account.27.always_fwd.on_code =
account.27.busy_fwd.enable =

```

```

account.27.busy_fwd.target =
account.27.busy_fwd.off_code =
account.27.busy_fwd.on_code =
account.27.timeout_fwd.enable =
account.27.timeout_fwd.target =
account.27.timeout_fwd.timeout =
account.27.timeout_fwd.off_code =
account.27.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.27.dnd.enable =
account.27.dnd.on_code =
account.27.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.27.reg.enable =
handset.27.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.27.xsi.user =%BWLOGIN-ID-27%
account.27.xsi.password =%XSIPASSWORD-27%
account.27.xsi.host =%XSP_ADDRESS%
account.27.xsi.server_type =
account.27.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.27.ldap.enable =
handset.27.ldap.name_filter=
handset.27.ldap.number_filter=
handset.27.ldap.host=
handset.27.ldap.port=
handset.27.ldap.base=
handset.27.ldap.user=
handset.27.ldap.password=
handset.27.ldap.max_hits=
handset.27.ldap.name_attr=
handset.27.ldap.numb_attr=
handset.27.ldap.display_name=
handset.27.ldap.version=
handset.27.ldap.call_in_lookup=

```

```

handset.27.ldap.ldap_sort=
handset.27.ldap.tls_mode=
handset.27.ldap.call_out_lookup=
handset.27.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account28 Settings
##
#####
#####

account.28.enable=%BWLIN-BINARY-28%
account.28.label=%BWEXTENSION-28%
account.28.display_name=%BWCLID-28%
account.28.auth_name=%BWAUTHUSER-28%
account.28.user_name=%BWLINPORT-28%
account.28.password=%BWAUTHPASSWORD-28%

#W80B ADD
account.28.sip_server.template =
account.28.media_transmit.enable =

account.28.alarm.template =
account.28.alarm.server =
account.28.alarm.number =

#####
#####
##                                     Failback
##
##
#####
#####

account.28.sip_server.1.failback_mode =
account.28.sip_server.1.failback_timeout =
account.28.sip_server.1.register_on_enable =
account.28.sip_server.1.failback_subscribe.enable =
account.28.sip_server.1.invite_retry_counts =
account.28.sip_server.1.only_signal_with_registered =

account.28.sip_server.2.failback_mode =
account.28.sip_server.2.failback_timeout =
account.28.sip_server.2.register_on_enable =
account.28.sip_server.2.failback_subscribe.enable =
account.28.sip_server.2.invite_retry_counts =
account.28.sip_server.2.only_signal_with_registered =

account.28.naptr_build =
account.28.fallback.redundancy_type =
account.28.fallback.timeout =

account.28.dns_cache_type =
account.28.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
##
#####
#####

```

```
account.28.anonymous_call =
account.28.reject_anonymous_call =
account.28.send_anonymous_code =
account.28.anonymous_call_oncode =
account.28.anonymous_call_offcode =
account.28.send_anonymous_rejection_code =
account.28.anonymous_reject_oncode =
account.28.anonymous_reject_offcode =

#####
#####
##
##                               Codec
##
#####
#####
account.28.codec.g722.enable =
account.28.codec.g722.priority =

account.28.codec.g729.enable =
account.28.codec.g729.priority =

account.28.codec.g726_16.enable =
account.28.codec.g726_16.priority =

account.28.codec.g726_24.enable =
account.28.codec.g726_24.priority =

account.28.codec.g726_32.enable =
account.28.codec.g726_32.priority =

account.28.codec.g726_40.enable =
account.28.codec.g726_40.priority =

account.28.codec.ilbc.enable =
account.28.codec.ilbc.priority =

account.28.codec.pcmu.enable =
account.28.codec.pcmu.priority =

account.28.codec.pcma.enable =
account.28.codec.pcma.priority =

account.28.codec.opus.enable =
account.28.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####
account.28.nat.nat_traversal =
account.28.nat.udp_update_enable =
account.28.nat.udp_update_time =
account.28.nat.rport =

#####
#####
##
##                               Register Advanced
##
```

```
#####
#####

account.28.blf.subscribe_period =
account.28.dtmf.type =
account.28.dtmf.dtmf_payload =
account.28.dtmf.info_type =
account.28.100rel_enable =
account.28.subscribe_register =
account.28.subscribe_mwi =
account.28.subscribe_mwi_expires =
account.28.subscribe_mwi_to_vm =
voice_mail.number.28 = %BWVOICE-PORTAL-NUMBER-28%
account.28.display_mwi.enable =
account.28.cid_source =
account.28.cid_source_privacy =
account.28.cid_source_ppi =
account.28.session_timer.enable =
account.28.session_timer.expires =
account.28.session_timer.refresher =
account.28.enable_user_equal_phone =
account.28.srtp_encryption =
account.28.ptime =
account.28.shared_line = %BWSHAREDLINE-BINARY-28%
account.28.register_mac =
account.28.register_line =
account.28.reg_fail_retry_interval =
account.28.reg_failed_retry_min_time =
account.28.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.28.conf_type =
account.28.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-28%

account.28.sip_server_type =
account.28.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.28.register_expires_overlap =
account.28.subscribe_expires_overlap =
account.28.auto_dial_enable =
account.28.auto_dial_num =
account.28.cp_source =
account.28.transfer_refer_to_contact_header.enable =
#V80 Add
account.28.custom_ua =
account.28.callpark_enable =
account.28.check_cseq.enable =
account.28.check_to_tag.enable =
account.28.hold_use_inactive =
```

```

account.28.line_seize.expires =
account.28.update_ack_while_dialing =
account.28.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.28.always_fwd.enable =
account.28.always_fwd.target =
account.28.always_fwd.off_code =
account.28.always_fwd.on_code =
account.28.busy_fwd.enable =
account.28.busy_fwd.target =
account.28.busy_fwd.off_code =
account.28.busy_fwd.on_code =
account.28.timeout_fwd.enable =
account.28.timeout_fwd.target =
account.28.timeout_fwd.timeout =
account.28.timeout_fwd.off_code =
account.28.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.28.dnd.enable =
account.28.dnd.on_code =
account.28.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.28.reg.enable =
handset.28.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.28.xsi.user =%BWLOGIN-ID-28%
account.28.xsi.password =%XSIPASSWORD-28%
account.28.xsi.host =%XSP_ADDRESS%
account.28.xsi.server_type =
account.28.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.28.ldap.enable =
handset.28.ldap.name_filter=
handset.28.ldap.number_filter=
handset.28.ldap.host=
handset.28.ldap.port=
handset.28.ldap.base=
handset.28.ldap.user=
handset.28.ldap.password=
handset.28.ldap.max_hits=
handset.28.ldap.name_attr=
handset.28.ldap.numb_attr=
handset.28.ldap.display_name=
handset.28.ldap.version=
handset.28.ldap.call_in_lookup=
handset.28.ldap.ldap_sort=
handset.28.ldap.tls_mode=
handset.28.ldap.call_out_lookup=
handset.28.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account29 Settings
##
#####
#####

account.29.enable=%BWLIN-BINARY-29%
account.29.label=%BWEXTENSION-29%
account.29.display_name=%BWCLID-29%
account.29.auth_name=%BWAUTHUSER-29%
account.29.user_name=%BWLINPORT-29%
account.29.password=%BWAUTHPASSWORD-29%

#W80B ADD
account.29.sip_server.template =
account.29.media_transmit.enable =

account.29.alarm.template =
account.29.alarm.server =
account.29.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.29.sip_server.1.failback_mode =
account.29.sip_server.1.failback_timeout =
account.29.sip_server.1.register_on_enable =
account.29.sip_server.1.failback_subscribe.enable =
account.29.sip_server.1.invite_retry_counts =
account.29.sip_server.1.only_signal_with_registered =

account.29.sip_server.2.failback_mode =
account.29.sip_server.2.failback_timeout =
account.29.sip_server.2.register_on_enable =
account.29.sip_server.2.failback_subscribe.enable =
```

```
account.29.sip_server.2.invite_retry_counts =
account.29.sip_server.2.only_signal_with_registered =

account.29.naptr_build =
account.29.fallback.redundancy_type =
account.29.fallback.timeout =

account.29.dns_cache_type =
account.29.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.29.anonymous_call =
account.29.reject_anonymous_call =
account.29.send_anonymous_code =
account.29.anonymous_call_oncode =
account.29.anonymous_call_offcode =
account.29.send_anonymous_rejection_code =
account.29.anonymous_reject_oncode =
account.29.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.29.codec.g722.enable =
account.29.codec.g722.priority =

account.29.codec.g729.enable =
account.29.codec.g729.priority =

account.29.codec.g726_16.enable =
account.29.codec.g726_16.priority =

account.29.codec.g726_24.enable =
account.29.codec.g726_24.priority =

account.29.codec.g726_32.enable =
account.29.codec.g726_32.priority =

account.29.codec.g726_40.enable =
account.29.codec.g726_40.priority =

account.29.codec.ilbc.enable =
account.29.codec.ilbc.priority =

account.29.codec.pcmu.enable =
account.29.codec.pcmu.priority =

account.29.codec.pcma.enable =
account.29.codec.pcma.priority =

account.29.codec.opus.enable =
account.29.codec.opus.priority =
```



```
#####
#####
##                                NAT Settings
##
#####
#####

account.29.nat.nat_traversal =
account.29.nat.udp_update_enable =
account.29.nat.udp_update_time =
account.29.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.29.blf.subscribe_period =
account.29.dtmf.type =
account.29.dtmf.dtmf_payload =
account.29.dtmf.info_type =
account.29.100rel_enable =
account.29.subscribe_register =
account.29.subscribe_mwi =
account.29.subscribe_mwi_expires =
account.29.subscribe_mwi_to_vm =
voice_mail.number.29 = %BWVOICE-PORTAL-NUMBER-29%
account.29.display_mwi.enable =
account.29.cid_source =
account.29.cid_source_privacy =
account.29.cid_source_ppi =
account.29.session_timer.enable =
account.29.session_timer.expires =
account.29.session_timer.refresher =
account.29.enable_user_equal_phone =
account.29.srtp_encryption =
account.29.ptime =
account.29.shared_line = %BWSHAREDLINE-BINARY-29%
account.29.register_mac =
account.29.register_line =
account.29.reg_fail_retry_interval =
account.29.reg_failed_retry_min_time =
account.29.reg_failed_retry_max_time =

#####
#####
##                                Network Conference
##
#####
#####

account.29.conf_type =
account.29.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-29%

account.29.sip_server_type =
account.29.unregister_on_reboot =

#####
#####
##                                Register Other
##
```

```
#####
#####
##DECT V81 Add

account.29.register_expires_overlap =
account.29.subscribe_expires_overlap =
account.29.auto_dial_enable =
account.29.auto_dial_num =
account.29.cp_source =
account.29.transfer_refer_to_contact_header.enable =
#V80 Add
account.29.custom_ua =
account.29.callpark_enable =
account.29.check_cseq.enable =
account.29.check_to_tag.enable =
account.29.hold_use_inactive =
account.29.line_seize.expires =
account.29.update_ack_while_dialing =
account.29.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.29.always_fwd.enable =
account.29.always_fwd.target =
account.29.always_fwd.off_code =
account.29.always_fwd.on_code =
account.29.busy_fwd.enable =
account.29.busy_fwd.target =
account.29.busy_fwd.off_code =
account.29.busy_fwd.on_code =
account.29.timeout_fwd.enable =
account.29.timeout_fwd.target =
account.29.timeout_fwd.timeout =
account.29.timeout_fwd.off_code =
account.29.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.29.dnd.enable =
account.29.dnd.on_code =
account.29.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.29.reg.enable =
handset.29.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.29.xsi.user =%BWLOGIN-ID-29%
account.29.xsi.password =%XSIPASSWORD-29%
account.29.xsi.host =%XSP_ADDRESS%
account.29.xsi.server_type =
account.29.xsi.port =

#####
#####
##          LADP
##
#####
handset.29.ldap.enable =
handset.29.ldap.name_filter=
handset.29.ldap.number_filter=
handset.29.ldap.host=
handset.29.ldap.port=
handset.29.ldap.base=
handset.29.ldap.user=
handset.29.ldap.password=
handset.29.ldap.max_hits=
handset.29.ldap.name_attr=
handset.29.ldap.numb_attr=
handset.29.ldap.display_name=
handset.29.ldap.version=
handset.29.ldap.call_in_lookup=
handset.29.ldap.ldap_sort=
handset.29.ldap.tls_mode=
handset.29.ldap.call_out_lookup=
handset.29.ldap.incoming_call_special_search.enable=

#####
#####
##          Account30 Settings
##
#####

account.30.enable=%BWLINE-BINARY-30%
account.30.label=%BWEXTENSION-30%
account.30.display_name=%BWCLID-30%
account.30.auth_name=%BWAUTHUSER-30%
account.30.user_name=%BWLINEPORT-30%
account.30.password=%BWAUTHPASSWORD-30%

#W80B ADD
account.30.sip_server.template =
account.30.media_transmit.enable =

account.30.alarm.template =
account.30.alarm.server =
account.30.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.30.sip_server.1.failback_mode =
account.30.sip_server.1.failback_timeout =
account.30.sip_server.1.register_on_enable =
account.30.sip_server.1.failback_subscribe.enable =
account.30.sip_server.1.invite_retry_counts =
account.30.sip_server.1.only_signal_with_registered =

account.30.sip_server.2.failback_mode =
account.30.sip_server.2.failback_timeout =
account.30.sip_server.2.register_on_enable =
account.30.sip_server.2.failback_subscribe.enable =
account.30.sip_server.2.invite_retry_counts =
account.30.sip_server.2.only_signal_with_registered =

account.30.naptr_build =
account.30.failback.redundancy_type =
account.30.failback.timeout =

account.30.dns_cache_type =
account.30.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.30.anonymous_call =
account.30.reject_anonymous_call =
account.30.send_anonymous_code =
account.30.anonymous_call_oncode =
account.30.anonymous_call_offcode =
account.30.send_anonymous_rejection_code =
account.30.anonymous_reject_oncode =
account.30.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.30.codec.g722.enable =
account.30.codec.g722.priority =

account.30.codec.g729.enable =
account.30.codec.g729.priority =

account.30.codec.g726_16.enable =
account.30.codec.g726_16.priority =

account.30.codec.g726_24.enable =
account.30.codec.g726_24.priority =

account.30.codec.g726_32.enable =
account.30.codec.g726_32.priority =
```

```

account.30.codec.g726_40.enable =
account.30.codec.g726_40.priority =

account.30.codec.ilbc.enable =
account.30.codec.ilbc.priority =

account.30.codec.pcmu.enable =
account.30.codec.pcmu.priority =

account.30.codec.pcma.enable =
account.30.codec.pcma.priority =

account.30.codec.opus.enable =
account.30.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.30.nat.nat_traversal =
account.30.nat.udp_update_enable =
account.30.nat.udp_update_time =
account.30.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.30.blf.subscribe_period =
account.30.dtmf.type =
account.30.dtmf.dtmf_payload =
account.30.dtmf.info_type =
account.30.100rel_enable =
account.30.subscribe_register =
account.30.subscribe_mwi =
account.30.subscribe_mwi_expires =
account.30.subscribe_mwi_to_vm =
voice_mail.number.30 = %BWVOICE-PORTAL-NUMBER-30%
account.30.display_mwi.enable =
account.30.cid_source =
account.30.cid_source_privacy =
account.30.cid_source_ppi =
account.30.session_timer.enable =
account.30.session_timer.expires =
account.30.session_timer.refresher =
account.30.enable_user_equal_phone =
account.30.srtp_encryption =
account.30.ptime =
account.30.shared_line = %BWSHAREDLINE-BINARY-30%
account.30.register_mac =
account.30.register_line =
account.30.reg_fail_retry_interval =
account.30.reg_failed_retry_min_time =
account.30.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.30.conf_type =
account.30.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-30%

account.30.sip_server_type =
account.30.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.30.register_expires_overlap =
account.30.subscribe_expires_overlap =
account.30.auto_dial_enable =
account.30.auto_dial_num =
account.30.cp_source =
account.30.transfer_refer_to_contact_header.enable =
#V80 Add
account.30.custom_ua =
account.30.callpark_enable =
account.30.check_cseq.enable =
account.30.check_to_tag.enable =
account.30.hold_use_inactive =
account.30.line_seize.expires =
account.30.update_ack_while_dialing =
account.30.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.30.always_fwd.enable =
account.30.always_fwd.target =
account.30.always_fwd.off_code =
account.30.always_fwd.on_code =
account.30.busy_fwd.enable =
account.30.busy_fwd.target =
account.30.busy_fwd.off_code =
account.30.busy_fwd.on_code =
account.30.timeout_fwd.enable =
account.30.timeout_fwd.target =
account.30.timeout_fwd.timeout =
account.30.timeout_fwd.off_code =
account.30.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```

account.30.dnd.enable =
account.30.dnd.on_code =
account.30.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.30.reg.enable =
handset.30.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.30.xsi.user =%BWLOGIN-ID-30%
account.30.xsi.password =%XSIPASSWORD-30%
account.30.xsi.host =%XSP_ADDRESS%
account.30.xsi.server_type =
account.30.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.30.ldap.enable =
handset.30.ldap.name_filter=
handset.30.ldap.number_filter=
handset.30.ldap.host=
handset.30.ldap.port=
handset.30.ldap.base=
handset.30.ldap.user=
handset.30.ldap.password=
handset.30.ldap.max_hits=
handset.30.ldap.name_attr=
handset.30.ldap.numb_attr=
handset.30.ldap.display_name=
handset.30.ldap.version=
handset.30.ldap.call_in_lookup=
handset.30.ldap.ldap_sort=
handset.30.ldap.tls_mode=
handset.30.ldap.call_out_lookup=
handset.30.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account31 Settings
##
#####
#####

```

```

account.31.enable=%BWLIN-BINARY-31%
account.31.label=%BWEXTENSION-31%
account.31.display_name=%BWCLID-31%
account.31.auth_name=%BWAUTHUSER-31%
account.31.user_name=%BWLINPORT-31%
account.31.password=%BWAUTHPASSWORD-31%

#W80B ADD
account.31.sip_server.template =
account.31.media_transmit.enable =

account.31.alarm.template =
account.31.alarm.server =
account.31.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.31.sip_server.1.failback_mode =
account.31.sip_server.1.failback_timeout =
account.31.sip_server.1.register_on_enable =
account.31.sip_server.1.failback_subscribe.enable =
account.31.sip_server.1.invite_retry_counts =
account.31.sip_server.1.only_signal_with_registered =

account.31.sip_server.2.failback_mode =
account.31.sip_server.2.failback_timeout =
account.31.sip_server.2.register_on_enable =
account.31.sip_server.2.failback_subscribe.enable =
account.31.sip_server.2.invite_retry_counts =
account.31.sip_server.2.only_signal_with_registered =

account.31.naptr_build =
account.31.fallback.redundancy_type =
account.31.fallback.timeout =

account.31.dns_cache_type =
account.31.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.31.anonymous_call =
account.31.reject_anonymous_call =
account.31.send_anonymous_code =
account.31.anonymous_call_oncode =
account.31.anonymous_call_offcode =
account.31.send_anonymous_rejection_code =
account.31.anonymous_reject_oncode =
account.31.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```



```
#####
#####
account.31.codec.g722.enable =
account.31.codec.g722.priority =

account.31.codec.g729.enable =
account.31.codec.g729.priority =

account.31.codec.g726_16.enable =
account.31.codec.g726_16.priority =

account.31.codec.g726_24.enable =
account.31.codec.g726_24.priority =

account.31.codec.g726_32.enable =
account.31.codec.g726_32.priority =

account.31.codec.g726_40.enable =
account.31.codec.g726_40.priority =

account.31.codec.ilbc.enable =
account.31.codec.ilbc.priority =

account.31.codec.pcmu.enable =
account.31.codec.pcmu.priority =

account.31.codec.pcma.enable =
account.31.codec.pcma.priority =

account.31.codec.opus.enable =
account.31.codec.opus.priority =

#####
#####
##                                NAT Settings
##
#####
#####

account.31.nat.nat_traversal =
account.31.nat.udp_update_enable =
account.31.nat.udp_update_time =
account.31.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.31.blf.subscribe_period =
account.31.dtmf.type =
account.31.dtmf.dtmf_payload =
account.31.dtmf.info_type =
account.31.100rel_enable =
account.31.subscribe_register =
account.31.subscribe_mwi =
account.31.subscribe_mwi_expires =
account.31.subscribe_mwi_to_vm =
voice_mail.number.31 = %BWVOICE-PORTAL-NUMBER-31%
account.31.display_mwi.enable =
account.31.cid_source =
```

```

account.31.cid_source_privacy =
account.31.cid_source_ppi =
account.31.session_timer.enable =
account.31.session_timer.expires =
account.31.session_timer.refresher =
account.31.enable_user_equal_phone =
account.31.srtp_encryption =
account.31.ptime =
account.31.shared_line = %BWSHAREDLINE-BINARY-31%
account.31.register_mac =
account.31.register_line =
account.31.reg_fail_retry_interval =
account.31.reg_failed_retry_min_time =
account.31.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.31.conf_type =
account.31.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-31%

account.31.sip_server_type =
account.31.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.31.register_expires_overlap =
account.31.subscribe_expires_overlap =
account.31.auto_dial_enable =
account.31.auto_dial_num =
account.31.cp_source =
account.31.transfer_refer_to_contact_header.enable =
#V80 Add
account.31.custom_ua =
account.31.callpark_enable =
account.31.check_cseq.enable =
account.31.check_to_tag.enable =
account.31.hold_use_inactive =
account.31.line_seize.expires =
account.31.update_ack_while_dialing =
account.31.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.31.always_fwd.enable =
account.31.always_fwd.target =
account.31.always_fwd.off_code =
account.31.always_fwd.on_code =
account.31.busy_fwd.enable =

```

```

account.31.busy_fwd.target =
account.31.busy_fwd.off_code =
account.31.busy_fwd.on_code =
account.31.timeout_fwd.enable =
account.31.timeout_fwd.target =
account.31.timeout_fwd.timeout =
account.31.timeout_fwd.off_code =
account.31.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.31.dnd.enable =
account.31.dnd.on_code =
account.31.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.31.reg.enable =
handset.31.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.31.xsi.user =%BWLOGIN-ID-31%
account.31.xsi.password =%XSIPASSWORD-31%
account.31.xsi.host =%XSP_ADDRESS%
account.31.xsi.server_type =
account.31.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.31 ldap.enable =
handset.31 ldap.name_filter=
handset.31 ldap.number_filter=
handset.31 ldap.host=
handset.31 ldap.port=
handset.31 ldap.base=
handset.31 ldap.user=
handset.31 ldap.password=
handset.31 ldap.max_hits=
handset.31 ldap.name_attr=
handset.31 ldap.numb_attr=
handset.31 ldap.display_name=
handset.31 ldap.version=
handset.31 ldap.call_in_lookup=

```

```

handset.31.ldap.ldap_sort=
handset.31.ldap.tls_mode=
handset.31.ldap.call_out_lookup=
handset.31.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account32 Settings
##
#####
#####

account.32.enable=%BWLIN-BINARY-32%
account.32.label=%BWEXTENSION-32%
account.32.display_name=%BWCLID-32%
account.32.auth_name=%BWAUTHUSER-32%
account.32.user_name=%BWLINPORT-32%
account.32.password=%BWAUTHPASSWORD-32%

#W80B ADD
account.32.sip_server.template =
account.32.media_transmit.enable =

account.32.alarm.template =
account.32.alarm.server =
account.32.alarm.number =

#####
#####
##                                     Failback
##
##
#####
#####
account.32.sip_server.1.failback_mode =
account.32.sip_server.1.failback_timeout =
account.32.sip_server.1.register_on_enable =
account.32.sip_server.1.failback_subscribe.enable =
account.32.sip_server.1.invite_retry_counts =
account.32.sip_server.1.only_signal_with_registered =

account.32.sip_server.2.failback_mode =
account.32.sip_server.2.failback_timeout =
account.32.sip_server.2.register_on_enable =
account.32.sip_server.2.failback_subscribe.enable =
account.32.sip_server.2.invite_retry_counts =
account.32.sip_server.2.only_signal_with_registered =

account.32.naptr_build =
account.32.fallback.redundancy_type =
account.32.fallback.timeout =

account.32.dns_cache_type =
account.32.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
##
#####
#####

```

```

account.32.anonymous_call =
account.32.reject_anonymous_call =
account.32.send_anonymous_code =
account.32.anonymous_call_oncode =
account.32.anonymous_call_offcode =
account.32.send_anonymous_rejection_code =
account.32.anonymous_reject_oncode =
account.32.anonymous_reject_offcode =

#####
#####
##
##                                Codec
##
#####
#####
account.32.codec.g722.enable =
account.32.codec.g722.priority =

account.32.codec.g729.enable =
account.32.codec.g729.priority =

account.32.codec.g726_16.enable =
account.32.codec.g726_16.priority =

account.32.codec.g726_24.enable =
account.32.codec.g726_24.priority =

account.32.codec.g726_32.enable =
account.32.codec.g726_32.priority =

account.32.codec.g726_40.enable =
account.32.codec.g726_40.priority =

account.32.codec.ilbc.enable =
account.32.codec.ilbc.priority =

account.32.codec.pcmu.enable =
account.32.codec.pcmu.priority =

account.32.codec.pcma.enable =
account.32.codec.pcma.priority =

account.32.codec.opus.enable =
account.32.codec.opus.priority =

#####
#####
##
##                                NAT Settings
##
#####
#####

account.32.nat.nat_traversal =
account.32.nat.udp_update_enable =
account.32.nat.udp_update_time =
account.32.nat.rport =

#####
#####
##
##                                Register Advanced
##

```

```
#####
#####

account.32.blf.subscribe_period =
account.32.dtmf.type =
account.32.dtmf.dtmf_payload =
account.32.dtmf.info_type =
account.32.100rel_enable =
account.32.subscribe_register =
account.32.subscribe_mwi =
account.32.subscribe_mwi_expires =
account.32.subscribe_mwi_to_vm =
voice_mail.number.32 = %BWVOICE-PORTAL-NUMBER-32%
account.32.display_mwi.enable =
account.32.cid_source =
account.32.cid_source_privacy =
account.32.cid_source_ppi =
account.32.session_timer.enable =
account.32.session_timer.expires =
account.32.session_timer.refresher =
account.32.enable_user_equal_phone =
account.32.srtp_encryption =
account.32.ptime =
account.32.shared_line = %BWSHAREDLINE-BINARY-32%
account.32.register_mac =
account.32.register_line =
account.32.reg_fail_retry_interval =
account.32.reg_failed_retry_min_time =
account.32.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.32.conf_type =
account.32.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-32%

account.32.sip_server_type =
account.32.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.32.register_expires_overlap =
account.32.subscribe_expires_overlap =
account.32.auto_dial_enable =
account.32.auto_dial_num =
account.32.cp_source =
account.32.transfer_refer_to_contact_header.enable =
#V80 Add
account.32.custom_ua =
account.32.callpark_enable =
account.32.check_cseq.enable =
account.32.check_to_tag.enable =
account.32.hold_use_inactive =
```

```

account.32.line_seize.expires =
account.32.update_ack_while_dialing =
account.32.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.32.always_fwd.enable =
account.32.always_fwd.target =
account.32.always_fwd.off_code =
account.32.always_fwd.on_code =
account.32.busy_fwd.enable =
account.32.busy_fwd.target =
account.32.busy_fwd.off_code =
account.32.busy_fwd.on_code =
account.32.timeout_fwd.enable =
account.32.timeout_fwd.target =
account.32.timeout_fwd.timeout =
account.32.timeout_fwd.off_code =
account.32.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.32.dnd.enable =
account.32.dnd.on_code =
account.32.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.32.reg.enable =
handset.32.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.32.xsi.user =%BWLOGIN-ID-32%
account.32.xsi.password =%XSIPASSWORD-32%
account.32.xsi.host =%XSP_ADDRESS%
account.32.xsi.server_type =
account.32.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.32.ldap.enable =
handset.32.ldap.name_filter=
handset.32.ldap.number_filter=
handset.32.ldap.host=
handset.32.ldap.port=
handset.32.ldap.base=
handset.32.ldap.user=
handset.32.ldap.password=
handset.32.ldap.max_hits=
handset.32.ldap.name_attr=
handset.32.ldap.numb_attr=
handset.32.ldap.display_name=
handset.32.ldap.version=
handset.32.ldap.call_in_lookup=
handset.32.ldap.ldap_sort=
handset.32.ldap.tls_mode=
handset.32.ldap.call_out_lookup=
handset.32.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account33 Settings
##
#####
#####

account.33.enable=%BWLIN-BINARY-33%
account.33.label=%BWEXTENSION-33%
account.33.display_name=%BWCLID-33%
account.33.auth_name=%BWAUTHUSER-33%
account.33.user_name=%BWLINPORT-33%
account.33.password=%BWAUTHPASSWORD-33%

#W80B ADD
account.33.sip_server.template =
account.33.media_transmit.enable =

account.33.alarm.template =
account.33.alarm.server =
account.33.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.33.sip_server.1.failback_mode =
account.33.sip_server.1.failback_timeout =
account.33.sip_server.1.register_on_enable =
account.33.sip_server.1.failback_subscribe.enable =
account.33.sip_server.1.invite_retry_counts =
account.33.sip_server.1.only_signal_with_registered =

account.33.sip_server.2.failback_mode =
account.33.sip_server.2.failback_timeout =
account.33.sip_server.2.register_on_enable =
account.33.sip_server.2.failback_subscribe.enable =
```



```
account.33.sip_server.2.invite_retry_counts =
account.33.sip_server.2.only_signal_with_registered =

account.33.naptr_build =
account.33.fallback.redundancy_type =
account.33.fallback.timeout =

account.33.dns_cache_type =
account.33.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.33.anonymous_call =
account.33.reject_anonymous_call =
account.33.send_anonymous_code =
account.33.anonymous_call_oncode =
account.33.anonymous_call_offcode =
account.33.send_anonymous_rejection_code =
account.33.anonymous_reject_oncode =
account.33.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.33.codec.g722.enable =
account.33.codec.g722.priority =

account.33.codec.g729.enable =
account.33.codec.g729.priority =

account.33.codec.g726_16.enable =
account.33.codec.g726_16.priority =

account.33.codec.g726_24.enable =
account.33.codec.g726_24.priority =

account.33.codec.g726_32.enable =
account.33.codec.g726_32.priority =

account.33.codec.g726_40.enable =
account.33.codec.g726_40.priority =

account.33.codec.ilbc.enable =
account.33.codec.ilbc.priority =

account.33.codec.pcmu.enable =
account.33.codec.pcmu.priority =

account.33.codec.pcma.enable =
account.33.codec.pcma.priority =

account.33.codec.opus.enable =
account.33.codec.opus.priority =
```

```
#####
#####
##                               NAT Settings
##
#####
#####

account.33.nat.nat_traversal =
account.33.nat.udp_update_enable =
account.33.nat.udp_update_time =
account.33.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.33.blf.subscribe_period =
account.33.dtmf.type =
account.33.dtmf.dtmf_payload =
account.33.dtmf.info_type =
account.33.100rel_enable =
account.33.subscribe_register =
account.33.subscribe_mwi =
account.33.subscribe_mwi_expires =
account.33.subscribe_mwi_to_vm =
voice_mail.number.33 = %BWVOICE-PORTAL-NUMBER-33%
account.33.display_mwi.enable =
account.33.cid_source =
account.33.cid_source_privacy =
account.33.cid_source_ppi =
account.33.session_timer.enable =
account.33.session_timer.expires =
account.33.session_timer.refreshes =
account.33.enable_user_equal_phone =
account.33.srtp_encryption =
account.33.ptime =
account.33.shared_line = %BWSHAREDLINE-BINARY-33%
account.33.register_mac =
account.33.register_line =
account.33.reg_fail_retry_interval =
account.33.reg_failed_retry_min_time =
account.33.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.33.conf_type =
account.33.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-33%

account.33.sip_server_type =
account.33.unregister_on_reboot =

#####
#####
##                               Register Other
##
```

```
#####
#####
##DECT V81 Add

account.33.register_expires_overlap =
account.33.subscribe_expires_overlap =
account.33.auto_dial_enable =
account.33.auto_dial_num =
account.33.cp_source =
account.33.transfer_refer_to_contact_header.enable =
#V80 Add
account.33.custom_ua =
account.33.callpark_enable =
account.33.check_cseq.enable =
account.33.check_to_tag.enable =
account.33.hold_use_inactive =
account.33.line_seize.expires =
account.33.update_ack_while_dialing =
account.33.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.33.always_fwd.enable =
account.33.always_fwd.target =
account.33.always_fwd.off_code =
account.33.always_fwd.on_code =
account.33.busy_fwd.enable =
account.33.busy_fwd.target =
account.33.busy_fwd.off_code =
account.33.busy_fwd.on_code =
account.33.timeout_fwd.enable =
account.33.timeout_fwd.target =
account.33.timeout_fwd.timeout =
account.33.timeout_fwd.off_code =
account.33.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.33.dnd.enable =
account.33.dnd.on_code =
account.33.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.33.reg.enable =
handset.33.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.33.xsi.user =%BWLOGIN-ID-33%
account.33.xsi.password =%XSIPASSWORD-33%
account.33.xsi.host =%XSP_ADDRESS%
account.33.xsi.server_type =
account.33.xsi.port =

#####
#####
##          LADP
##
#####
handset.33.ldap.enable =
handset.33.ldap.name_filter=
handset.33.ldap.number_filter=
handset.33.ldap.host=
handset.33.ldap.port=
handset.33.ldap.base=
handset.33.ldap.user=
handset.33.ldap.password=
handset.33.ldap.max_hits=
handset.33.ldap.name_attr=
handset.33.ldap.numb_attr=
handset.33.ldap.display_name=
handset.33.ldap.version=
handset.33.ldap.call_in_lookup=
handset.33.ldap.ldap_sort=
handset.33.ldap.tls_mode=
handset.33.ldap.call_out_lookup=
handset.33.ldap.incoming_call_special_search.enable=

#####
#####
##          Account34 Settings
##
#####

account.34.enable=%BWLINE-BINARY-34%
account.34.label=%BWEXTENSION-34%
account.34.display_name=%BWCLID-34%
account.34.auth_name=%BWAUTHUSER-34%
account.34.user_name=%BWLINEPORT-34%
account.34.password=%BWAUTHPASSWORD-34%

#W80B ADD
account.34.sip_server.template =
account.34.media_transmit.enable =

account.34.alarm.template =
account.34.alarm.server =
account.34.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.34.sip_server.1.failback_mode =
account.34.sip_server.1.failback_timeout =
account.34.sip_server.1.register_on_enable =
account.34.sip_server.1.failback_subscribe.enable =
account.34.sip_server.1.invite_retry_counts =
account.34.sip_server.1.only_signal_with_registered =

account.34.sip_server.2.failback_mode =
account.34.sip_server.2.failback_timeout =
account.34.sip_server.2.register_on_enable =
account.34.sip_server.2.failback_subscribe.enable =
account.34.sip_server.2.invite_retry_counts =
account.34.sip_server.2.only_signal_with_registered =

account.34.naptr_build =
account.34.fallback.redundancy_type =
account.34.fallback.timeout =

account.34.dns_cache_type =
account.34.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.34.anonymous_call =
account.34.reject_anonymous_call =
account.34.send_anonymous_code =
account.34.anonymous_call_oncode =
account.34.anonymous_call_offcode =
account.34.send_anonymous_rejection_code =
account.34.anonymous_reject_oncode =
account.34.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.34.codec.g722.enable =
account.34.codec.g722.priority =

account.34.codec.g729.enable =
account.34.codec.g729.priority =

account.34.codec.g726_16.enable =
account.34.codec.g726_16.priority =

account.34.codec.g726_24.enable =
account.34.codec.g726_24.priority =

account.34.codec.g726_32.enable =
account.34.codec.g726_32.priority =
```

```

account.34.codec.g726_40.enable =
account.34.codec.g726_40.priority =

account.34.codec.ilbc.enable =
account.34.codec.ilbc.priority =

account.34.codec.pcmu.enable =
account.34.codec.pcmu.priority =

account.34.codec.pcma.enable =
account.34.codec.pcma.priority =

account.34.codec.opus.enable =
account.34.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.34.nat.nat_traversal =
account.34.nat.udp_update_enable =
account.34.nat.udp_update_time =
account.34.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.34.blf.subscribe_period =
account.34.dtmf.type =
account.34.dtmf.dtmf_payload =
account.34.dtmf.info_type =
account.34.100rel_enable =
account.34.subscribe_register =
account.34.subscribe_mwi =
account.34.subscribe_mwi_expires =
account.34.subscribe_mwi_to_vm =
voice_mail.number.34 = %BWVOICE-PORTAL-NUMBER-34%
account.34.display_mwi.enable =
account.34.cid_source =
account.34.cid_source_privacy =
account.34.cid_source_ppi =
account.34.session_timer.enable =
account.34.session_timer.expires =
account.34.session_timer.refresher =
account.34.enable_user_equal_phone =
account.34.srtp_encryption =
account.34.ptime =
account.34.shared_line = %BWSHAREDLINE-BINARY-34%
account.34.register_mac =
account.34.register_line =
account.34.reg_fail_retry_interval =
account.34.reg_failed_retry_min_time =
account.34.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.34.conf_type =
account.34.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-34%

account.34.sip_server_type =
account.34.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.34.register_expires_overlap =
account.34.subscribe_expires_overlap =
account.34.auto_dial_enable =
account.34.auto_dial_num =
account.34.cp_source =
account.34.transfer_refer_to_contact_header.enable =
#V80 Add
account.34.custom_ua =
account.34.callpark_enable =
account.34.check_cseq.enable =
account.34.check_to_tag.enable =
account.34.hold_use_inactive =
account.34.line_seize.expires =
account.34.update_ack_while_dialing =
account.34.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.34.always_fwd.enable =
account.34.always_fwd.target =
account.34.always_fwd.off_code =
account.34.always_fwd.on_code =
account.34.busy_fwd.enable =
account.34.busy_fwd.target =
account.34.busy_fwd.off_code =
account.34.busy_fwd.on_code =
account.34.timeout_fwd.enable =
account.34.timeout_fwd.target =
account.34.timeout_fwd.timeout =
account.34.timeout_fwd.off_code =
account.34.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```

account.34.dnd.enable =
account.34.dnd.on_code =
account.34.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.34.reg.enable =
handset.34.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.34.xsi.user =%BWLOGIN-ID-34%
account.34.xsi.password =%XSIPASSWORD-34%
account.34.xsi.host =%XSP_ADDRESS%
account.34.xsi.server_type =
account.34.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.34.ldap.enable =
handset.34.ldap.name_filter=
handset.34.ldap.number_filter=
handset.34.ldap.host=
handset.34.ldap.port=
handset.34.ldap.base=
handset.34.ldap.user=
handset.34.ldap.password=
handset.34.ldap.max_hits=
handset.34.ldap.name_attr=
handset.34.ldap.numb_attr=
handset.34.ldap.display_name=
handset.34.ldap.version=
handset.34.ldap.call_in_lookup=
handset.34.ldap.ldap_sort=
handset.34.ldap.tls_mode=
handset.34.ldap.call_out_lookup=
handset.34.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account35 Settings
##
#####
#####

```



```

account.35.enable=%BWLIN-BINARY-35%
account.35.label=%BWEXTENSION-35%
account.35.display_name=%BWCLID-35%
account.35.auth_name=%BWAUTHUSER-35%
account.35.user_name=%BWLINPORT-35%
account.35.password=%BWAUTHPASSWORD-35%

#W80B ADD
account.35.sip_server.template =
account.35.media_transmit.enable =

account.35.alarm.template =
account.35.alarm.server =
account.35.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.35.sip_server.1.failback_mode =
account.35.sip_server.1.failback_timeout =
account.35.sip_server.1.register_on_enable =
account.35.sip_server.1.failback_subscribe.enable =
account.35.sip_server.1.invite_retry_counts =
account.35.sip_server.1.only_signal_with_registered =

account.35.sip_server.2.failback_mode =
account.35.sip_server.2.failback_timeout =
account.35.sip_server.2.register_on_enable =
account.35.sip_server.2.failback_subscribe.enable =
account.35.sip_server.2.invite_retry_counts =
account.35.sip_server.2.only_signal_with_registered =

account.35.naptr_build =
account.35.fallback.redundancy_type =
account.35.fallback.timeout =

account.35.dns_cache_type =
account.35.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.35.anonymous_call =
account.35.reject_anonymous_call =
account.35.send_anonymous_code =
account.35.anonymous_call_oncode =
account.35.anonymous_call_offcode =
account.35.send_anonymous_rejection_code =
account.35.anonymous_reject_oncode =
account.35.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.35.codec.g722.enable =
account.35.codec.g722.priority =

account.35.codec.g729.enable =
account.35.codec.g729.priority =

account.35.codec.g726_16.enable =
account.35.codec.g726_16.priority =

account.35.codec.g726_24.enable =
account.35.codec.g726_24.priority =

account.35.codec.g726_32.enable =
account.35.codec.g726_32.priority =

account.35.codec.g726_40.enable =
account.35.codec.g726_40.priority =

account.35.codec.ilbc.enable =
account.35.codec.ilbc.priority =

account.35.codec.pcmu.enable =
account.35.codec.pcmu.priority =

account.35.codec.pcma.enable =
account.35.codec.pcma.priority =

account.35.codec.opus.enable =
account.35.codec.opus.priority =

#####
#####
##                                NAT Settings
##
#####
#####

account.35.nat.nat_traversal =
account.35.nat.udp_update_enable =
account.35.nat.udp_update_time =
account.35.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.35.blf.subscribe_period =
account.35.dtmf.type =
account.35.dtmf.dtmf_payload =
account.35.dtmf.info_type =
account.35.100rel_enable =
account.35.subscribe_register =
account.35.subscribe_mwi =
account.35.subscribe_mwi_expires =
account.35.subscribe_mwi_to_vm =
voice_mail.number.35 = %BWVOICE-PORTAL-NUMBER-35%
account.35.display_mwi.enable =
account.35.cid_source =
```

```

account.35.cid_source_privacy =
account.35.cid_source_ppi =
account.35.session_timer.enable =
account.35.session_timer.expires =
account.35.session_timer.refresher =
account.35.enable_user_equal_phone =
account.35.srtp_encryption =
account.35.ptime =
account.35.shared_line = %BWSHAREDLINE-BINARY-35%
account.35.register_mac =
account.35.register_line =
account.35.reg_fail_retry_interval =
account.35.reg_failed_retry_min_time =
account.35.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.35.conf_type =
account.35.conf_uri = %BWNWORK-CONFERENCE-SIPURI-35%

account.35.sip_server_type =
account.35.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.35.register_expires_overlap =
account.35.subscribe_expires_overlap =
account.35.auto_dial_enable =
account.35.auto_dial_num =
account.35.cp_source =
account.35.transfer_refer_to_contact_header.enable =
#V80 Add
account.35.custom_ua =
account.35.callpark_enable =
account.35.check_cseq.enable =
account.35.check_to_tag.enable =
account.35.hold_use_inactive =
account.35.line_seize.expires =
account.35.update_ack_while_dialing =
account.35.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.35.always_fwd.enable =
account.35.always_fwd.target =
account.35.always_fwd.off_code =
account.35.always_fwd.on_code =
account.35.busy_fwd.enable =

```

```
account.35.busy_fwd.target =
account.35.busy_fwd.off_code =
account.35.busy_fwd.on_code =
account.35.timeout_fwd.enable =
account.35.timeout_fwd.target =
account.35.timeout_fwd.timeout =
account.35.timeout_fwd.off_code =
account.35.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.35.dnd.enable =
account.35.dnd.on_code =
account.35.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.35.reg.enable =
handset.35.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.35.xsi.user =%BWLOGIN-ID-35%
account.35.xsi.password =%XSIPASSWORD-35%
account.35.xsi.host =%XSP_ADDRESS%
account.35.xsi.server_type =
account.35.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.35 ldap.enable =
handset.35 ldap.name_filter=
handset.35 ldap.number_filter=
handset.35 ldap.host=
handset.35 ldap.port=
handset.35 ldap.base=
handset.35 ldap.user=
handset.35 ldap.password=
handset.35 ldap.max_hits=
handset.35 ldap.name_attr=
handset.35 ldap.numb_attr=
handset.35 ldap.display_name=
handset.35 ldap.version=
handset.35 ldap.call_in_lookup=
```

```

handset.35.ldap.ldap_sort=
handset.35.ldap.tls_mode=
handset.35.ldap.call_out_lookup=
handset.35.ldap.incoming_call_special_search.enable=

#####
#####
##
##                               Account36 Settings
##
#####
#####

account.36.enable=%BWLIN-BINARY-36%
account.36.label=%BWEXTENSION-36%
account.36.display_name=%BWCLID-36%
account.36.auth_name=%BWAUTHUSER-36%
account.36.user_name=%BWLINPORT-36%
account.36.password=%BWAUTHPASSWORD-36%

#W80B ADD
account.36.sip_server.template =
account.36.media_transmit.enable =

account.36.alarm.template =
account.36.alarm.server =
account.36.alarm.number =

#####
#####
##
##                               Failback
##
#####
#####

account.36.sip_server.1.failback_mode =
account.36.sip_server.1.failback_timeout =
account.36.sip_server.1.register_on_enable =
account.36.sip_server.1.failback_subscribe.enable =
account.36.sip_server.1.invite_retry_counts =
account.36.sip_server.1.only_signal_with_registered =

account.36.sip_server.2.failback_mode =
account.36.sip_server.2.failback_timeout =
account.36.sip_server.2.register_on_enable =
account.36.sip_server.2.failback_subscribe.enable =
account.36.sip_server.2.invite_retry_counts =
account.36.sip_server.2.only_signal_with_registered =

account.36.naptr_build =
account.36.fallback.redundancy_type =
account.36.fallback.timeout =

account.36.dns_cache_type =
account.36.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##
##                               Basic
##
#####
#####

```

```
account.36.anonymous_call =
account.36.reject_anonymous_call =
account.36.send_anonymous_code =
account.36.anonymous_call_oncode =
account.36.anonymous_call_offcode =
account.36.send_anonymous_rejection_code =
account.36.anonymous_reject_oncode =
account.36.anonymous_reject_offcode =

#####
#####
##
##                               Codec
##
#####
#####
account.36.codec.g722.enable =
account.36.codec.g722.priority =

account.36.codec.g729.enable =
account.36.codec.g729.priority =

account.36.codec.g726_16.enable =
account.36.codec.g726_16.priority =

account.36.codec.g726_24.enable =
account.36.codec.g726_24.priority =

account.36.codec.g726_32.enable =
account.36.codec.g726_32.priority =

account.36.codec.g726_40.enable =
account.36.codec.g726_40.priority =

account.36.codec.ilbc.enable =
account.36.codec.ilbc.priority =

account.36.codec.pcmu.enable =
account.36.codec.pcmu.priority =

account.36.codec.pcma.enable =
account.36.codec.pcma.priority =

account.36.codec.opus.enable =
account.36.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####
account.36.nat.nat_traversal =
account.36.nat.udp_update_enable =
account.36.nat.udp_update_time =
account.36.nat.rport =

#####
#####
##
##                               Register Advanced
##
```

```
#####
#####

account.36.blf.subscribe_period =
account.36.dtmf.type =
account.36.dtmf.dtmf_payload =
account.36.dtmf.info_type =
account.36.100rel_enable =
account.36.subscribe_register =
account.36.subscribe_mwi =
account.36.subscribe_mwi_expires =
account.36.subscribe_mwi_to_vm =
voice_mail.number.36 = %BWVOICE-PORTAL-NUMBER-36%
account.36.display_mwi.enable =
account.36.cid_source =
account.36.cid_source_privacy =
account.36.cid_source_ppi =
account.36.session_timer.enable =
account.36.session_timer.expires =
account.36.session_timer.refresher =
account.36.enable_user_equal_phone =
account.36.srtp_encryption =
account.36.ptime =
account.36.shared_line = %BWSHAREDLINE-BINARY-36%
account.36.register_mac =
account.36.register_line =
account.36.reg_fail_retry_interval =
account.36.reg_failed_retry_min_time =
account.36.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.36.conf_type =
account.36.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-36%

account.36.sip_server_type =
account.36.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.36.register_expires_overlap =
account.36.subscribe_expires_overlap =
account.36.auto_dial_enable =
account.36.auto_dial_num =
account.36.cp_source =
account.36.transfer_refer_to_contact_header.enable =
#V80 Add
account.36.custom_ua =
account.36.callpark_enable =
account.36.check_cseq.enable =
account.36.check_to_tag.enable =
account.36.hold_use_inactive =
```

```

account.36.line_seize.expires =
account.36.update_ack_while_dialing =
account.36.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.36.always_fwd.enable =
account.36.always_fwd.target =
account.36.always_fwd.off_code =
account.36.always_fwd.on_code =
account.36.busy_fwd.enable =
account.36.busy_fwd.target =
account.36.busy_fwd.off_code =
account.36.busy_fwd.on_code =
account.36.timeout_fwd.enable =
account.36.timeout_fwd.target =
account.36.timeout_fwd.timeout =
account.36.timeout_fwd.off_code =
account.36.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.36.dnd.enable =
account.36.dnd.on_code =
account.36.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.36.reg.enable =
handset.36.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.36.xsi.user =%BWLOGIN-ID-36%
account.36.xsi.password =%XSIPASSWORD-36%
account.36.xsi.host =%XSP_ADDRESS%
account.36.xsi.server_type =
account.36.xsi.port =

#####
#####
##                               LADP
##

```



```
#####
#####
handset.36.ldap.enable =
handset.36.ldap.name_filter=
handset.36.ldap.number_filter=
handset.36.ldap.host=
handset.36.ldap.port=
handset.36.ldap.base=
handset.36.ldap.user=
handset.36.ldap.password=
handset.36.ldap.max_hits=
handset.36.ldap.name_attr=
handset.36.ldap.numb_attr=
handset.36.ldap.display_name=
handset.36.ldap.version=
handset.36.ldap.call_in_lookup=
handset.36.ldap.ldap_sort=
handset.36.ldap.tls_mode=
handset.36.ldap.call_out_lookup=
handset.36.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account37 Settings
##
#####
#####

account.37.enable=%BWLIN-BINARY-37%
account.37.label=%BWEXTENSION-37%
account.37.display_name=%BWCLID-37%
account.37.auth_name=%BWAUTHUSER-37%
account.37.user_name=%BWLINPORT-37%
account.37.password=%BWAUTHPASSWORD-37%

#W80B ADD
account.37.sip_server.template =
account.37.media_transmit.enable =

account.37.alarm.template =
account.37.alarm.server =
account.37.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.37.sip_server.1.failback_mode =
account.37.sip_server.1.failback_timeout =
account.37.sip_server.1.register_on_enable =
account.37.sip_server.1.failback_subscribe.enable =
account.37.sip_server.1.invite_retry_counts =
account.37.sip_server.1.only_signal_with_registered =

account.37.sip_server.2.failback_mode =
account.37.sip_server.2.failback_timeout =
account.37.sip_server.2.register_on_enable =
account.37.sip_server.2.failback_subscribe.enable =
```

```
account.37.sip_server.2.invite_retry_counts =
account.37.sip_server.2.only_signal_with_registered =

account.37.naptr_build =
account.37.fallback.redundancy_type =
account.37.fallback.timeout =

account.37.dns_cache_type =
account.37.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.37.anonymous_call =
account.37.reject_anonymous_call =
account.37.send_anonymous_code =
account.37.anonymous_call_oncode =
account.37.anonymous_call_offcode =
account.37.send_anonymous_rejection_code =
account.37.anonymous_reject_oncode =
account.37.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.37.codec.g722.enable =
account.37.codec.g722.priority =

account.37.codec.g729.enable =
account.37.codec.g729.priority =

account.37.codec.g726_16.enable =
account.37.codec.g726_16.priority =

account.37.codec.g726_24.enable =
account.37.codec.g726_24.priority =

account.37.codec.g726_32.enable =
account.37.codec.g726_32.priority =

account.37.codec.g726_40.enable =
account.37.codec.g726_40.priority =

account.37.codec.ilbc.enable =
account.37.codec.ilbc.priority =

account.37.codec.pcmu.enable =
account.37.codec.pcmu.priority =

account.37.codec.pcma.enable =
account.37.codec.pcma.priority =

account.37.codec.opus.enable =
account.37.codec.opus.priority =
```

```
#####
#####
##                                NAT Settings
##
#####
#####

account.37.nat.nat_traversal =
account.37.nat.udp_update_enable =
account.37.nat.udp_update_time =
account.37.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.37.blf.subscribe_period =
account.37.dtmf.type =
account.37.dtmf.dtmf_payload =
account.37.dtmf.info_type =
account.37.100rel_enable =
account.37.subscribe_register =
account.37.subscribe_mwi =
account.37.subscribe_mwi_expires =
account.37.subscribe_mwi_to_vm =
voice_mail.number.37 = %BWVOICE-PORTAL-NUMBER-37%
account.37.display_mwi.enable =
account.37.cid_source =
account.37.cid_source_privacy =
account.37.cid_source_ppi =
account.37.session_timer.enable =
account.37.session_timer.expires =
account.37.session_timer.refresher =
account.37.enable_user_equal_phone =
account.37.srtp_encryption =
account.37.ptime =
account.37.shared_line = %BWSHAREDLINE-BINARY-37%
account.37.register_mac =
account.37.register_line =
account.37.reg_fail_retry_interval =
account.37.reg_failed_retry_min_time =
account.37.reg_failed_retry_max_time =

#####
#####
##                                Network Conference
##
#####
#####

account.37.conf_type =
account.37.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-37%

account.37.sip_server_type =
account.37.unregister_on_reboot =

#####
#####
##                                Register Other
##
```

```
#####
#####
##DECT V81 Add

account.37.register_expires_overlap =
account.37.subscribe_expires_overlap =
account.37.auto_dial_enable =
account.37.auto_dial_num =
account.37.cp_source =
account.37.transfer_refer_to_contact_header.enable =
#V80 Add
account.37.custom_ua =
account.37.callpark_enable =
account.37.check_cseq.enable =
account.37.check_to_tag.enable =
account.37.hold_use_inactive =
account.37.line_seize.expires =
account.37.update_ack_while_dialing =
account.37.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.37.always_fwd.enable =
account.37.always_fwd.target =
account.37.always_fwd.off_code =
account.37.always_fwd.on_code =
account.37.busy_fwd.enable =
account.37.busy_fwd.target =
account.37.busy_fwd.off_code =
account.37.busy_fwd.on_code =
account.37.timeout_fwd.enable =
account.37.timeout_fwd.target =
account.37.timeout_fwd.timeout =
account.37.timeout_fwd.off_code =
account.37.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.37.dnd.enable =
account.37.dnd.on_code =
account.37.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.37.reg.enable =
handset.37.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.37.xsi.user =%BWLOGIN-ID-37%
account.37.xsi.password =%XSIPASSWORD-37%
account.37.xsi.host =%XSP_ADDRESS%
account.37.xsi.server_type =
account.37.xsi.port =

#####
#####
##          LADP
##
#####
handset.37.ldap.enable =
handset.37.ldap.name_filter=
handset.37.ldap.number_filter=
handset.37.ldap.host=
handset.37.ldap.port=
handset.37.ldap.base=
handset.37.ldap.user=
handset.37.ldap.password=
handset.37.ldap.max_hits=
handset.37.ldap.name_attr=
handset.37.ldap.numb_attr=
handset.37.ldap.display_name=
handset.37.ldap.version=
handset.37.ldap.call_in_lookup=
handset.37.ldap.ldap_sort=
handset.37.ldap.tls_mode=
handset.37.ldap.call_out_lookup=
handset.37.ldap.incoming_call_special_search.enable=

#####
#####
##          Account38 Settings
##
#####

account.38.enable=%BWLINE-BINARY-38%
account.38.label=%BWEXTENSION-38%
account.38.display_name=%BWCLID-38%
account.38.auth_name=%BWAUTHUSER-38%
account.38.user_name=%BWLINEPORT-38%
account.38.password=%BWAUTHPASSWORD-38%

#W80B ADD
account.38.sip_server.template =
account.38.media_transmit.enable =

account.38.alarm.template =
account.38.alarm.server =
account.38.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.38.sip_server.1.failback_mode =
account.38.sip_server.1.failback_timeout =
account.38.sip_server.1.register_on_enable =
account.38.sip_server.1.failback_subscribe.enable =
account.38.sip_server.1.invite_retry_counts =
account.38.sip_server.1.only_signal_with_registered =

account.38.sip_server.2.failback_mode =
account.38.sip_server.2.failback_timeout =
account.38.sip_server.2.register_on_enable =
account.38.sip_server.2.failback_subscribe.enable =
account.38.sip_server.2.invite_retry_counts =
account.38.sip_server.2.only_signal_with_registered =

account.38.naptr_build =
account.38.failback.redundancy_type =
account.38.failback.timeout =

account.38.dns_cache_type =
account.38.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.38.anonymous_call =
account.38.reject_anonymous_call =
account.38.send_anonymous_code =
account.38.anonymous_call_oncode =
account.38.anonymous_call_offcode =
account.38.send_anonymous_rejection_code =
account.38.anonymous_reject_oncode =
account.38.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.38.codec.g722.enable =
account.38.codec.g722.priority =

account.38.codec.g729.enable =
account.38.codec.g729.priority =

account.38.codec.g726_16.enable =
account.38.codec.g726_16.priority =

account.38.codec.g726_24.enable =
account.38.codec.g726_24.priority =

account.38.codec.g726_32.enable =
account.38.codec.g726_32.priority =
```

```

account.38.codec.g726_40.enable =
account.38.codec.g726_40.priority =

account.38.codec.ilbc.enable =
account.38.codec.ilbc.priority =

account.38.codec.pcmu.enable =
account.38.codec.pcmu.priority =

account.38.codec.pcma.enable =
account.38.codec.pcma.priority =

account.38.codec.opus.enable =
account.38.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.38.nat.nat_traversal =
account.38.nat.udp_update_enable =
account.38.nat.udp_update_time =
account.38.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.38.blf.subscribe_period =
account.38.dtmf.type =
account.38.dtmf.dtmf_payload =
account.38.dtmf.info_type =
account.38.100rel_enable =
account.38.subscribe_register =
account.38.subscribe_mwi =
account.38.subscribe_mwi_expires =
account.38.subscribe_mwi_to_vm =
voice_mail.number.38 = %BWVOICE-PORTAL-NUMBER-38%
account.38.display_mwi.enable =
account.38.cid_source =
account.38.cid_source_privacy =
account.38.cid_source_ppi =
account.38.session_timer.enable =
account.38.session_timer.expires =
account.38.session_timer.refresher =
account.38.enable_user_equal_phone =
account.38.srtp_encryption =
account.38.ptime =
account.38.shared_line = %BWSHAREDLINE-BINARY-38%
account.38.register_mac =
account.38.register_line =
account.38.reg_fail_retry_interval =
account.38.reg_failed_retry_min_time =
account.38.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.38.conf_type =
account.38.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-38%

account.38.sip_server_type =
account.38.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.38.register_expires_overlap =
account.38.subscribe_expires_overlap =
account.38.auto_dial_enable =
account.38.auto_dial_num =
account.38.cp_source =
account.38.transfer_refer_to_contact_header.enable =
#V80 Add
account.38.custom_ua =
account.38.callpark_enable =
account.38.check_cseq.enable =
account.38.check_to_tag.enable =
account.38.hold_use_inactive =
account.38.line_seize.expires =
account.38.update_ack_while_dialing =
account.38.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.38.always_fwd.enable =
account.38.always_fwd.target =
account.38.always_fwd.off_code =
account.38.always_fwd.on_code =
account.38.busy_fwd.enable =
account.38.busy_fwd.target =
account.38.busy_fwd.off_code =
account.38.busy_fwd.on_code =
account.38.timeout_fwd.enable =
account.38.timeout_fwd.target =
account.38.timeout_fwd.timeout =
account.38.timeout_fwd.off_code =
account.38.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```



```

account.38.dnd.enable =
account.38.dnd.on_code =
account.38.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.38.reg.enable =
handset.38.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.38.xsi.user =%BWLOGIN-ID-38%
account.38.xsi.password =%XSIPASSWORD-38%
account.38.xsi.host =%XSP_ADDRESS%
account.38.xsi.server_type =
account.38.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.38.ldap.enable =
handset.38.ldap.name_filter=
handset.38.ldap.number_filter=
handset.38.ldap.host=
handset.38.ldap.port=
handset.38.ldap.base=
handset.38.ldap.user=
handset.38.ldap.password=
handset.38.ldap.max_hits=
handset.38.ldap.name_attr=
handset.38.ldap.numb_attr=
handset.38.ldap.display_name=
handset.38.ldap.version=
handset.38.ldap.call_in_lookup=
handset.38.ldap.ldap_sort=
handset.38.ldap.tls_mode=
handset.38.ldap.call_out_lookup=
handset.38.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account39 Settings
##
#####
#####

```

```

account.39.enable=%BWLIN-BINARY-39%
account.39.label=%BWEXTENSION-39%
account.39.display_name=%BWCLID-39%
account.39.auth_name=%BWAUTHUSER-39%
account.39.user_name=%BWLINPORT-39%
account.39.password=%BWAUTHPASSWORD-39%

#W80B ADD
account.39.sip_server.template =
account.39.media_transmit.enable =

account.39.alarm.template =
account.39.alarm.server =
account.39.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.39.sip_server.1.failback_mode =
account.39.sip_server.1.failback_timeout =
account.39.sip_server.1.register_on_enable =
account.39.sip_server.1.failback_subscribe.enable =
account.39.sip_server.1.invite_retry_counts =
account.39.sip_server.1.only_signal_with_registered =

account.39.sip_server.2.failback_mode =
account.39.sip_server.2.failback_timeout =
account.39.sip_server.2.register_on_enable =
account.39.sip_server.2.failback_subscribe.enable =
account.39.sip_server.2.invite_retry_counts =
account.39.sip_server.2.only_signal_with_registered =

account.39.naptr_build =
account.39.fallback.redundancy_type =
account.39.fallback.timeout =

account.39.dns_cache_type =
account.39.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.39.anonymous_call =
account.39.reject_anonymous_call =
account.39.send_anonymous_code =
account.39.anonymous_call_oncode =
account.39.anonymous_call_offcode =
account.39.send_anonymous_rejection_code =
account.39.anonymous_reject_oncode =
account.39.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.39.codec.g722.enable =
account.39.codec.g722.priority =

account.39.codec.g729.enable =
account.39.codec.g729.priority =

account.39.codec.g726_16.enable =
account.39.codec.g726_16.priority =

account.39.codec.g726_24.enable =
account.39.codec.g726_24.priority =

account.39.codec.g726_32.enable =
account.39.codec.g726_32.priority =

account.39.codec.g726_40.enable =
account.39.codec.g726_40.priority =

account.39.codec.ilbc.enable =
account.39.codec.ilbc.priority =

account.39.codec.pcmu.enable =
account.39.codec.pcmu.priority =

account.39.codec.pcma.enable =
account.39.codec.pcma.priority =

account.39.codec.opus.enable =
account.39.codec.opus.priority =

#####
#####
##                                NAT Settings
##
#####
#####

account.39.nat.nat_traversal =
account.39.nat.udp_update_enable =
account.39.nat.udp_update_time =
account.39.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.39.blf.subscribe_period =
account.39.dtmf.type =
account.39.dtmf.dtmf_payload =
account.39.dtmf.info_type =
account.39.100rel_enable =
account.39.subscribe_register =
account.39.subscribe_mwi =
account.39.subscribe_mwi_expires =
account.39.subscribe_mwi_to_vm =
voice_mail.number.39 = %BWVOICE-PORTAL-NUMBER-39%
account.39.display_mwi.enable =
account.39.cid_source =
```

```

account.39.cid_source_privacy =
account.39.cid_source_ppi =
account.39.session_timer.enable =
account.39.session_timer.expires =
account.39.session_timer.refresher =
account.39.enable_user_equal_phone =
account.39.srtp_encryption =
account.39.ptime =
account.39.shared_line = %BWSHAREDLINE-BINARY-39%
account.39.register_mac =
account.39.register_line =
account.39.reg_fail_retry_interval =
account.39.reg_failed_retry_min_time =
account.39.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.39.conf_type =
account.39.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-39%

account.39.sip_server_type =
account.39.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.39.register_expires_overlap =
account.39.subscribe_expires_overlap =
account.39.auto_dial_enable =
account.39.auto_dial_num =
account.39.cp_source =
account.39.transfer_refer_to_contact_header.enable =
#V80 Add
account.39.custom_ua =
account.39.callpark_enable =
account.39.check_cseq.enable =
account.39.check_to_tag.enable =
account.39.hold_use_inactive =
account.39.line_seize.expires =
account.39.update_ack_while_dialing =
account.39.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.39.always_fwd.enable =
account.39.always_fwd.target =
account.39.always_fwd.off_code =
account.39.always_fwd.on_code =
account.39.busy_fwd.enable =

```

```
account.39.busy_fwd.target =
account.39.busy_fwd.off_code =
account.39.busy_fwd.on_code =
account.39.timeout_fwd.enable =
account.39.timeout_fwd.target =
account.39.timeout_fwd.timeout =
account.39.timeout_fwd.off_code =
account.39.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.39.dnd.enable =
account.39.dnd.on_code =
account.39.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.39.reg.enable =
handset.39.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.39.xsi.user =%BWLOGIN-ID-39%
account.39.xsi.password =%XSIPASSWORD-39%
account.39.xsi.host =%XSP_ADDRESS%
account.39.xsi.server_type =
account.39.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.39.ldap.enable =
handset.39.ldap.name_filter=
handset.39.ldap.number_filter=
handset.39.ldap.host=
handset.39.ldap.port=
handset.39.ldap.base=
handset.39.ldap.user=
handset.39.ldap.password=
handset.39.ldap.max_hits=
handset.39.ldap.name_attr=
handset.39.ldap.numb_attr=
handset.39.ldap.display_name=
handset.39.ldap.version=
handset.39.ldap.call_in_lookup=
```

```

handset.39.ldap.ldap_sort=
handset.39.ldap.tls_mode=
handset.39.ldap.call_out_lookup=
handset.39.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account40 Settings
##
#####
#####

account.40.enable=%BWLIN-BINARY-40%
account.40.label=%BWEXTENSION-40%
account.40.display_name=%BWCLID-40%
account.40.auth_name=%BWAUTHUSER-40%
account.40.user_name=%BWLINPORT-40%
account.40.password=%BWAUTHPASSWORD-40%

#W80B ADD
account.40.sip_server.template =
account.40.media_transmit.enable =

account.40.alarm.template =
account.40.alarm.server =
account.40.alarm.number =

#####
#####
##                                     Failback
##
##
#####
#####
account.40.sip_server.1.failback_mode =
account.40.sip_server.1.failback_timeout =
account.40.sip_server.1.register_on_enable =
account.40.sip_server.1.failback_subscribe.enable =
account.40.sip_server.1.invite_retry_counts =
account.40.sip_server.1.only_signal_with_registered =

account.40.sip_server.2.failback_mode =
account.40.sip_server.2.failback_timeout =
account.40.sip_server.2.register_on_enable =
account.40.sip_server.2.failback_subscribe.enable =
account.40.sip_server.2.invite_retry_counts =
account.40.sip_server.2.only_signal_with_registered =

account.40.naptr_build =
account.40.fallback.redundancy_type =
account.40.fallback.timeout =

account.40.dns_cache_type =
account.40.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
##
#####
#####

```

```
account.40.anonymous_call =
account.40.reject_anonymous_call =
account.40.send_anonymous_code =
account.40.anonymous_call_oncode =
account.40.anonymous_call_offcode =
account.40.send_anonymous_rejection_code =
account.40.anonymous_reject_oncode =
account.40.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.40.codec.g722.enable =
account.40.codec.g722.priority =

account.40.codec.g729.enable =
account.40.codec.g729.priority =

account.40.codec.g726_16.enable =
account.40.codec.g726_16.priority =

account.40.codec.g726_24.enable =
account.40.codec.g726_24.priority =

account.40.codec.g726_32.enable =
account.40.codec.g726_32.priority =

account.40.codec.g726_40.enable =
account.40.codec.g726_40.priority =

account.40.codec.ilbc.enable =
account.40.codec.ilbc.priority =

account.40.codec.pcmu.enable =
account.40.codec.pcmu.priority =

account.40.codec.pcma.enable =
account.40.codec.pcma.priority =

account.40.codec.opus.enable =
account.40.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
##
#####
#####

account.40.nat.nat_traversal =
account.40.nat.udp_update_enable =
account.40.nat.udp_update_time =
account.40.nat.rport =

#####
#####
##                                     Register Advanced
##
##
```

```
#####
#####

account.40.blf.subscribe_period =
account.40.dtmf.type =
account.40.dtmf.dtmf_payload =
account.40.dtmf.info_type =
account.40.100rel_enable =
account.40.subscribe_register =
account.40.subscribe_mwi =
account.40.subscribe_mwi_expires =
account.40.subscribe_mwi_to_vm =
voice_mail.number.40 = %BWVOICE-PORTAL-NUMBER-40%
account.40.display_mwi.enable =
account.40.cid_source =
account.40.cid_source_privacy =
account.40.cid_source_ppi =
account.40.session_timer.enable =
account.40.session_timer.expires =
account.40.session_timer.refresher =
account.40.enable_user_equal_phone =
account.40.srtp_encryption =
account.40.ptime =
account.40.shared_line = %BWSHAREDLINE-BINARY-40%
account.40.register_mac =
account.40.register_line =
account.40.reg_fail_retry_interval =
account.40.reg_failed_retry_min_time =
account.40.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.40.conf_type =
account.40.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-40%

account.40.sip_server_type =
account.40.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.40.register_expires_overlap =
account.40.subscribe_expires_overlap =
account.40.auto_dial_enable =
account.40.auto_dial_num =
account.40.cp_source =
account.40.transfer_refer_to_contact_header.enable =
#V80 Add
account.40.custom_ua =
account.40.callpark_enable =
account.40.check_cseq.enable =
account.40.check_to_tag.enable =
account.40.hold_use_inactive =
```



```
account.40.line_seize.expires =
account.40.update_ack_while_dialing =
account.40.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.40.always_fwd.enable =
account.40.always_fwd.target =
account.40.always_fwd.off_code =
account.40.always_fwd.on_code =
account.40.busy_fwd.enable =
account.40.busy_fwd.target =
account.40.busy_fwd.off_code =
account.40.busy_fwd.on_code =
account.40.timeout_fwd.enable =
account.40.timeout_fwd.target =
account.40.timeout_fwd.timeout =
account.40.timeout_fwd.off_code =
account.40.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.40.dnd.enable =
account.40.dnd.on_code =
account.40.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.40.reg.enable =
handset.40.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.40.xsi.user =%BWLOGIN-ID-40%
account.40.xsi.password =%XSIPASSWORD-40%
account.40.xsi.host =%XSP_ADDRESS%
account.40.xsi.server_type =
account.40.xsi.port =

#####
#####
##                               LADP
##
```

```
#####
#####
handset.40.ldap.enable =
handset.40.ldap.name_filter=
handset.40.ldap.number_filter=
handset.40.ldap.host=
handset.40.ldap.port=
handset.40.ldap.base=
handset.40.ldap.user=
handset.40.ldap.password=
handset.40.ldap.max_hits=
handset.40.ldap.name_attr=
handset.40.ldap.numb_attr=
handset.40.ldap.display_name=
handset.40.ldap.version=
handset.40.ldap.call_in_lookup=
handset.40.ldap.ldap_sort=
handset.40.ldap.tls_mode=
handset.40.ldap.call_out_lookup=
handset.40.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account41 Settings
##
#####
#####

account.41.enable=%BWLIN-BINARY-41%
account.41.label=%BWEXTENSION-41%
account.41.display_name=%BWCLID-41%
account.41.auth_name=%BWAUTHUSER-41%
account.41.user_name=%BWLINPORT-41%
account.41.password=%BWAUTHPASSWORD-41%

#W80B ADD
account.41.sip_server.template =
account.41.media_transmit.enable =

account.41.alarm.template =
account.41.alarm.server =
account.41.alarm.number =

#####
#####
##                               Failback
##
#####
#####

account.41.sip_server.1.failback_mode =
account.41.sip_server.1.failback_timeout =
account.41.sip_server.1.register_on_enable =
account.41.sip_server.1.failback_subscribe.enable =
account.41.sip_server.1.invite_retry_counts =
account.41.sip_server.1.only_signal_with_registered =

account.41.sip_server.2.failback_mode =
account.41.sip_server.2.failback_timeout =
account.41.sip_server.2.register_on_enable =
account.41.sip_server.2.failback_subscribe.enable =
```

```
account.41.sip_server.2.invite_retry_counts =
account.41.sip_server.2.only_signal_with_registered =

account.41.naptr_build =
account.41.fallback.redundancy_type =
account.41.fallback.timeout =

account.41.dns_cache_type =
account.41.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.41.anonymous_call =
account.41.reject_anonymous_call =
account.41.send_anonymous_code =
account.41.anonymous_call_oncode =
account.41.anonymous_call_offcode =
account.41.send_anonymous_rejection_code =
account.41.anonymous_reject_oncode =
account.41.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.41.codec.g722.enable =
account.41.codec.g722.priority =

account.41.codec.g729.enable =
account.41.codec.g729.priority =

account.41.codec.g726_16.enable =
account.41.codec.g726_16.priority =

account.41.codec.g726_24.enable =
account.41.codec.g726_24.priority =

account.41.codec.g726_32.enable =
account.41.codec.g726_32.priority =

account.41.codec.g726_40.enable =
account.41.codec.g726_40.priority =

account.41.codec.ilbc.enable =
account.41.codec.ilbc.priority =

account.41.codec.pcmu.enable =
account.41.codec.pcmu.priority =

account.41.codec.pcma.enable =
account.41.codec.pcma.priority =

account.41.codec.opus.enable =
account.41.codec.opus.priority =
```

```
#####
#####
##                                NAT Settings
##
#####
#####

account.41.nat.nat_traversal =
account.41.nat.udp_update_enable =
account.41.nat.udp_update_time =
account.41.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.41.blf.subscribe_period =
account.41.dtmf.type =
account.41.dtmf.dtmf_payload =
account.41.dtmf.info_type =
account.41.100rel_enable =
account.41.subscribe_register =
account.41.subscribe_mwi =
account.41.subscribe_mwi_expires =
account.41.subscribe_mwi_to_vm =
voice_mail.number.41 = %BWVOICE-PORTAL-NUMBER-41%
account.41.display_mwi.enable =
account.41.cid_source =
account.41.cid_source_privacy =
account.41.cid_source_ppi =
account.41.session_timer.enable =
account.41.session_timer.expires =
account.41.session_timer.refresher =
account.41.enable_user_equal_phone =
account.41.srtp_encryption =
account.41.ptime =
account.41.shared_line = %BWSHAREDLINE-BINARY-41%
account.41.register_mac =
account.41.register_line =
account.41.reg_fail_retry_interval =
account.41.reg_failed_retry_min_time =
account.41.reg_failed_retry_max_time =

#####
#####
##                                Network Conference
##
#####
#####

account.41.conf_type =
account.41.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-41%

account.41.sip_server_type =
account.41.unregister_on_reboot =

#####
#####
##                                Register Other
##
```

```
#####
#####
##DECT V81 Add

account.41.register_expires_overlap =
account.41.subscribe_expires_overlap =
account.41.auto_dial_enable =
account.41.auto_dial_num =
account.41.cp_source =
account.41.transfer_refer_to_contact_header.enable =
#V80 Add
account.41.custom_ua =
account.41.callpark_enable =
account.41.check_cseq.enable =
account.41.check_to_tag.enable =
account.41.hold_use_inactive =
account.41.line_seize.expires =
account.41.update_ack_while_dialing =
account.41.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.41.always_fwd.enable =
account.41.always_fwd.target =
account.41.always_fwd.off_code =
account.41.always_fwd.on_code =
account.41.busy_fwd.enable =
account.41.busy_fwd.target =
account.41.busy_fwd.off_code =
account.41.busy_fwd.on_code =
account.41.timeout_fwd.enable =
account.41.timeout_fwd.target =
account.41.timeout_fwd.timeout =
account.41.timeout_fwd.off_code =
account.41.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.41.dnd.enable =
account.41.dnd.on_code =
account.41.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.41.reg.enable =
handset.41.ipui =

#####
#####
```

```
##          Broadsoft XSI
##
#####

account.41.xsi.user =%BWLOGIN-ID-41%
account.41.xsi.password =%XSIPASSWORD-41%
account.41.xsi.host =%XSP_ADDRESS%
account.41.xsi.server_type =
account.41.xsi.port =

#####
#####
##          LADP
##
#####
handset.41.ldap.enable =
handset.41.ldap.name_filter=
handset.41.ldap.number_filter=
handset.41.ldap.host=
handset.41.ldap.port=
handset.41.ldap.base=
handset.41.ldap.user=
handset.41.ldap.password=
handset.41.ldap.max_hits=
handset.41.ldap.name_attr=
handset.41.ldap.numb_attr=
handset.41.ldap.display_name=
handset.41.ldap.version=
handset.41.ldap.call_in_lookup=
handset.41.ldap.ldap_sort=
handset.41.ldap.tls_mode=
handset.41.ldap.call_out_lookup=
handset.41.ldap.incoming_call_special_search.enable=

#####
#####
##          Account42 Settings
##
#####

account.42.enable=%BWLINE-BINARY-42%
account.42.label=%BWEXTENSION-42%
account.42.display_name=%BWCLID-42%
account.42.auth_name=%BWAUTHUSER-42%
account.42.user_name=%BWLINEPORT-42%
account.42.password=%BWAUTHPASSWORD-42%

#W80B ADD
account.42.sip_server.template =
account.42.media_transmit.enable =

account.42.alarm.template =
account.42.alarm.server =
account.42.alarm.number =
```

```
#####
#####
##                               Failback
##
#####
#####
account.42.sip_server.1.failback_mode =
account.42.sip_server.1.failback_timeout =
account.42.sip_server.1.register_on_enable =
account.42.sip_server.1.failback_subscribe.enable =
account.42.sip_server.1.invite_retry_counts =
account.42.sip_server.1.only_signal_with_registered =

account.42.sip_server.2.failback_mode =
account.42.sip_server.2.failback_timeout =
account.42.sip_server.2.register_on_enable =
account.42.sip_server.2.failback_subscribe.enable =
account.42.sip_server.2.invite_retry_counts =
account.42.sip_server.2.only_signal_with_registered =

account.42.naptr_build =
account.42.fallback.redundancy_type =
account.42.fallback.timeout =

account.42.dns_cache_type =
account.42.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.42.anonymous_call =
account.42.reject_anonymous_call =
account.42.send_anonymous_code =
account.42.anonymous_call_oncode =
account.42.anonymous_call_offcode =
account.42.send_anonymous_rejection_code =
account.42.anonymous_reject_oncode =
account.42.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.42.codec.g722.enable =
account.42.codec.g722.priority =

account.42.codec.g729.enable =
account.42.codec.g729.priority =

account.42.codec.g726_16.enable =
account.42.codec.g726_16.priority =

account.42.codec.g726_24.enable =
account.42.codec.g726_24.priority =

account.42.codec.g726_32.enable =
account.42.codec.g726_32.priority =
```

```

account.42.codec.g726_40.enable =
account.42.codec.g726_40.priority =

account.42.codec.ilbc.enable =
account.42.codec.ilbc.priority =

account.42.codec.pcmu.enable =
account.42.codec.pcmu.priority =

account.42.codec.pcma.enable =
account.42.codec.pcma.priority =

account.42.codec.opus.enable =
account.42.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.42.nat.nat_traversal =
account.42.nat.udp_update_enable =
account.42.nat.udp_update_time =
account.42.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.42.blf.subscribe_period =
account.42.dtmf.type =
account.42.dtmf.dtmf_payload =
account.42.dtmf.info_type =
account.42.100rel_enable =
account.42.subscribe_register =
account.42.subscribe_mwi =
account.42.subscribe_mwi_expires =
account.42.subscribe_mwi_to_vm =
voice_mail.number.42 = %BWVOICE-PORTAL-NUMBER-42%
account.42.display_mwi.enable =
account.42.cid_source =
account.42.cid_source_privacy =
account.42.cid_source_ppi =
account.42.session_timer.enable =
account.42.session_timer.expires =
account.42.session_timer.refresher =
account.42.enable_user_equal_phone =
account.42.srtp_encryption =
account.42.ptime =
account.42.shared_line = %BWSHAREDLINE-BINARY-42%
account.42.register_mac =
account.42.register_line =
account.42.reg_fail_retry_interval =
account.42.reg_failed_retry_min_time =
account.42.reg_failed_retry_max_time =

```



```
#####
#####
##                               Network Conference
##
#####
#####
account.42.conf_type =
account.42.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-42%

account.42.sip_server_type =
account.42.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.42.register_expires_overlap =
account.42.subscribe_expires_overlap =
account.42.auto_dial_enable =
account.42.auto_dial_num =
account.42.cp_source =
account.42.transfer_refer_to_contact_header.enable =
#V80 Add
account.42.custom_ua =
account.42.callpark_enable =
account.42.check_cseq.enable =
account.42.check_to_tag.enable =
account.42.hold_use_inactive =
account.42.line_seize.expires =
account.42.update_ack_while_dialing =
account.42.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.42.always_fwd.enable =
account.42.always_fwd.target =
account.42.always_fwd.off_code =
account.42.always_fwd.on_code =
account.42.busy_fwd.enable =
account.42.busy_fwd.target =
account.42.busy_fwd.off_code =
account.42.busy_fwd.on_code =
account.42.timeout_fwd.enable =
account.42.timeout_fwd.target =
account.42.timeout_fwd.timeout =
account.42.timeout_fwd.off_code =
account.42.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```

account.42.dnd.enable =
account.42.dnd.on_code =
account.42.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.42.reg.enable =
handset.42.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.42.xsi.user =%BWLOGIN-ID-42%
account.42.xsi.password =%XSIPASSWORD-42%
account.42.xsi.host =%XSP_ADDRESS%
account.42.xsi.server_type =
account.42.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.42.ldap.enable =
handset.42.ldap.name_filter=
handset.42.ldap.number_filter=
handset.42.ldap.host=
handset.42.ldap.port=
handset.42.ldap.base=
handset.42.ldap.user=
handset.42.ldap.password=
handset.42.ldap.max_hits=
handset.42.ldap.name_attr=
handset.42.ldap.numb_attr=
handset.42.ldap.display_name=
handset.42.ldap.version=
handset.42.ldap.call_in_lookup=
handset.42.ldap.ldap_sort=
handset.42.ldap.tls_mode=
handset.42.ldap.call_out_lookup=
handset.42.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account43 Settings
##
#####
#####

```

```

account.43.enable=%BWLIN-BINARY-43%
account.43.label=%BWEXTENSION-43%
account.43.display_name=%BWCLID-43%
account.43.auth_name=%BWAUTHUSER-43%
account.43.user_name=%BWLINPORT-43%
account.43.password=%BWAUTHPASSWORD-43%

#W80B ADD
account.43.sip_server.template =
account.43.media_transmit.enable =

account.43.alarm.template =
account.43.alarm.server =
account.43.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.43.sip_server.1.failback_mode =
account.43.sip_server.1.failback_timeout =
account.43.sip_server.1.register_on_enable =
account.43.sip_server.1.failback_subscribe.enable =
account.43.sip_server.1.invite_retry_counts =
account.43.sip_server.1.only_signal_with_registered =

account.43.sip_server.2.failback_mode =
account.43.sip_server.2.failback_timeout =
account.43.sip_server.2.register_on_enable =
account.43.sip_server.2.failback_subscribe.enable =
account.43.sip_server.2.invite_retry_counts =
account.43.sip_server.2.only_signal_with_registered =

account.43.naptr_build =
account.43.fallback.redundancy_type =
account.43.fallback.timeout =

account.43.dns_cache_type =
account.43.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.43.anonymous_call =
account.43.reject_anonymous_call =
account.43.send_anonymous_code =
account.43.anonymous_call_oncode =
account.43.anonymous_call_offcode =
account.43.send_anonymous_rejection_code =
account.43.anonymous_reject_oncode =
account.43.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.43.codec.g722.enable =
account.43.codec.g722.priority =

account.43.codec.g729.enable =
account.43.codec.g729.priority =

account.43.codec.g726_16.enable =
account.43.codec.g726_16.priority =

account.43.codec.g726_24.enable =
account.43.codec.g726_24.priority =

account.43.codec.g726_32.enable =
account.43.codec.g726_32.priority =

account.43.codec.g726_40.enable =
account.43.codec.g726_40.priority =

account.43.codec.ilbc.enable =
account.43.codec.ilbc.priority =

account.43.codec.pcmu.enable =
account.43.codec.pcmu.priority =

account.43.codec.pcma.enable =
account.43.codec.pcma.priority =

account.43.codec.opus.enable =
account.43.codec.opus.priority =

#####
#####
##                                NAT Settings
##
#####
#####

account.43.nat.nat_traversal =
account.43.nat.udp_update_enable =
account.43.nat.udp_update_time =
account.43.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.43.blf.subscribe_period =
account.43.dtmf.type =
account.43.dtmf.dtmf_payload =
account.43.dtmf.info_type =
account.43.100rel_enable =
account.43.subscribe_register =
account.43.subscribe_mwi =
account.43.subscribe_mwi_expires =
account.43.subscribe_mwi_to_vm =
voice_mail.number.43 = %BWVOICE-PORTAL-NUMBER-43%
account.43.display_mwi.enable =
account.43.cid_source =
```

```

account.43.cid_source_privacy =
account.43.cid_source_ppi =
account.43.session_timer.enable =
account.43.session_timer.expires =
account.43.session_timer.refresher =
account.43.enable_user_equal_phone =
account.43.srtp_encryption =
account.43.ptime =
account.43.shared_line = %BWSHAREDLINE-BINARY-43%
account.43.register_mac =
account.43.register_line =
account.43.reg_fail_retry_interval =
account.43.reg_failed_retry_min_time =
account.43.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.43.conf_type =
account.43.conf_uri = %BWNWORK-CONFERENCE-SIPURI-43%

account.43.sip_server_type =
account.43.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.43.register_expires_overlap =
account.43.subscribe_expires_overlap =
account.43.auto_dial_enable =
account.43.auto_dial_num =
account.43.cp_source =
account.43.transfer_refer_to_contact_header.enable =
#V80 Add
account.43.custom_ua =
account.43.callpark_enable =
account.43.check_cseq.enable =
account.43.check_to_tag.enable =
account.43.hold_use_inactive =
account.43.line_seize.expires =
account.43.update_ack_while_dialing =
account.43.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.43.always_fwd.enable =
account.43.always_fwd.target =
account.43.always_fwd.off_code =
account.43.always_fwd.on_code =
account.43.busy_fwd.enable =

```

```
account.43.busy_fwd.target =
account.43.busy_fwd.off_code =
account.43.busy_fwd.on_code =
account.43.timeout_fwd.enable =
account.43.timeout_fwd.target =
account.43.timeout_fwd.timeout =
account.43.timeout_fwd.off_code =
account.43.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.43.dnd.enable =
account.43.dnd.on_code =
account.43.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.43.reg.enable =
handset.43.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.43.xsi.user =%BWLOGIN-ID-43%
account.43.xsi.password =%XSIPASSWORD-43%
account.43.xsi.host =%XSP_ADDRESS%
account.43.xsi.server_type =
account.43.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.43 ldap.enable =
handset.43 ldap.name_filter=
handset.43 ldap.number_filter=
handset.43 ldap.host=
handset.43 ldap.port=
handset.43 ldap.base=
handset.43 ldap.user=
handset.43 ldap.password=
handset.43 ldap.max_hits=
handset.43 ldap.name_attr=
handset.43 ldap.numb_attr=
handset.43 ldap.display_name=
handset.43 ldap.version=
handset.43 ldap.call_in_lookup=
```

```

handset.43.ldap.ldap_sort=
handset.43.ldap.tls_mode=
handset.43.ldap.call_out_lookup=
handset.43.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account44 Settings
##
#####
#####

account.44.enable=%BWLIN-BINARY-44%
account.44.label=%BWEXTENSION-44%
account.44.display_name=%BWCLID-44%
account.44.auth_name=%BWAUTHUSER-44%
account.44.user_name=%BWLINPORT-44%
account.44.password=%BWAUTHPASSWORD-44%

#W80B ADD
account.44.sip_server.template =
account.44.media_transmit.enable =

account.44.alarm.template =
account.44.alarm.server =
account.44.alarm.number =

#####
#####
##                                     Failback
##
##
#####
#####
account.44.sip_server.1.failback_mode =
account.44.sip_server.1.failback_timeout =
account.44.sip_server.1.register_on_enable =
account.44.sip_server.1.failback_subscribe.enable =
account.44.sip_server.1.invite_retry_counts =
account.44.sip_server.1.only_signal_with_registered =

account.44.sip_server.2.failback_mode =
account.44.sip_server.2.failback_timeout =
account.44.sip_server.2.register_on_enable =
account.44.sip_server.2.failback_subscribe.enable =
account.44.sip_server.2.invite_retry_counts =
account.44.sip_server.2.only_signal_with_registered =

account.44.naptr_build =
account.44.fallback.redundancy_type =
account.44.fallback.timeout =

account.44.dns_cache_type =
account.44.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
##
#####
#####

```

```

account.44.anonymous_call =
account.44.reject_anonymous_call =
account.44.send_anonymous_code =
account.44.anonymous_call_oncode =
account.44.anonymous_call_offcode =
account.44.send_anonymous_rejection_code =
account.44.anonymous_reject_oncode =
account.44.anonymous_reject_offcode =

#####
#####
##
##                               Codec
##
#####
#####
account.44.codec.g722.enable =
account.44.codec.g722.priority =

account.44.codec.g729.enable =
account.44.codec.g729.priority =

account.44.codec.g726_16.enable =
account.44.codec.g726_16.priority =

account.44.codec.g726_24.enable =
account.44.codec.g726_24.priority =

account.44.codec.g726_32.enable =
account.44.codec.g726_32.priority =

account.44.codec.g726_40.enable =
account.44.codec.g726_40.priority =

account.44.codec.ilbc.enable =
account.44.codec.ilbc.priority =

account.44.codec.pcmu.enable =
account.44.codec.pcmu.priority =

account.44.codec.pcma.enable =
account.44.codec.pcma.priority =

account.44.codec.opus.enable =
account.44.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####
account.44.nat.nat_traversal =
account.44.nat.udp_update_enable =
account.44.nat.udp_update_time =
account.44.nat.rport =

#####
#####
##
##                               Register Advanced
##

```



```
#####
#####

account.44.blf.subscribe_period =
account.44.dtmf.type =
account.44.dtmf.dtmf_payload =
account.44.dtmf.info_type =
account.44.100rel_enable =
account.44.subscribe_register =
account.44.subscribe_mwi =
account.44.subscribe_mwi_expires =
account.44.subscribe_mwi_to_vm =
voice_mail.number.44 = %BWVOICE-PORTAL-NUMBER-44%
account.44.display_mwi.enable =
account.44.cid_source =
account.44.cid_source_privacy =
account.44.cid_source_ppi =
account.44.session_timer.enable =
account.44.session_timer.expires =
account.44.session_timer.refresher =
account.44.enable_user_equal_phone =
account.44.srtp_encryption =
account.44.ptime =
account.44.shared_line = %BWSHAREDLINE-BINARY-44%
account.44.register_mac =
account.44.register_line =
account.44.reg_fail_retry_interval =
account.44.reg_failed_retry_min_time =
account.44.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.44.conf_type =
account.44.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-44%

account.44.sip_server_type =
account.44.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.44.register_expires_overlap =
account.44.subscribe_expires_overlap =
account.44.auto_dial_enable =
account.44.auto_dial_num =
account.44.cp_source =
account.44.transfer_refer_to_contact_header.enable =
#V80 Add
account.44.custom_ua =
account.44.callpark_enable =
account.44.check_cseq.enable =
account.44.check_to_tag.enable =
account.44.hold_use_inactive =
```

```

account.44.line_seize.expires =
account.44.update_ack_while_dialing =
account.44.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.44.always_fwd.enable =
account.44.always_fwd.target =
account.44.always_fwd.off_code =
account.44.always_fwd.on_code =
account.44.busy_fwd.enable =
account.44.busy_fwd.target =
account.44.busy_fwd.off_code =
account.44.busy_fwd.on_code =
account.44.timeout_fwd.enable =
account.44.timeout_fwd.target =
account.44.timeout_fwd.timeout =
account.44.timeout_fwd.off_code =
account.44.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.44.dnd.enable =
account.44.dnd.on_code =
account.44.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.44.reg.enable =
handset.44.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.44.xsi.user =%BWLOGIN-ID-44%
account.44.xsi.password =%XSIPASSWORD-44%
account.44.xsi.host =%XSP_ADDRESS%
account.44.xsi.server_type =
account.44.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.44.ldap.enable =
handset.44.ldap.name_filter=
handset.44.ldap.number_filter=
handset.44.ldap.host=
handset.44.ldap.port=
handset.44.ldap.base=
handset.44.ldap.user=
handset.44.ldap.password=
handset.44.ldap.max_hits=
handset.44.ldap.name_attr=
handset.44.ldap.numb_attr=
handset.44.ldap.display_name=
handset.44.ldap.version=
handset.44.ldap.call_in_lookup=
handset.44.ldap.ldap_sort=
handset.44.ldap.tls_mode=
handset.44.ldap.call_out_lookup=
handset.44.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account45 Settings
##
#####
#####

account.45.enable=%BWLIN-BINARY-45%
account.45.label=%BWEXTENSION-45%
account.45.display_name=%BWCLID-45%
account.45.auth_name=%BWAUTHUSER-45%
account.45.user_name=%BWLINPORT-45%
account.45.password=%BWAUTHPASSWORD-45%

#W80B ADD
account.45.sip_server.template =
account.45.media_transmit.enable =

account.45.alarm.template =
account.45.alarm.server =
account.45.alarm.number =

#####
#####
##                               Failback
##
#####
#####

account.45.sip_server.1.failback_mode =
account.45.sip_server.1.failback_timeout =
account.45.sip_server.1.register_on_enable =
account.45.sip_server.1.failback_subscribe.enable =
account.45.sip_server.1.invite_retry_counts =
account.45.sip_server.1.only_signal_with_registered =

account.45.sip_server.2.failback_mode =
account.45.sip_server.2.failback_timeout =
account.45.sip_server.2.register_on_enable =
account.45.sip_server.2.failback_subscribe.enable =
```

```

account.45.sip_server.2.invite_retry_counts =
account.45.sip_server.2.only_signal_with_registered =

account.45.naptr_build =
account.45.fallback.redundancy_type =
account.45.fallback.timeout =

account.45.dns_cache_type =
account.45.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.45.anonymous_call =
account.45.reject_anonymous_call =
account.45.send_anonymous_code =
account.45.anonymous_call_oncode =
account.45.anonymous_call_offcode =
account.45.send_anonymous_rejection_code =
account.45.anonymous_reject_oncode =
account.45.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.45.codec.g722.enable =
account.45.codec.g722.priority =

account.45.codec.g729.enable =
account.45.codec.g729.priority =

account.45.codec.g726_16.enable =
account.45.codec.g726_16.priority =

account.45.codec.g726_24.enable =
account.45.codec.g726_24.priority =

account.45.codec.g726_32.enable =
account.45.codec.g726_32.priority =

account.45.codec.g726_40.enable =
account.45.codec.g726_40.priority =

account.45.codec.ilbc.enable =
account.45.codec.ilbc.priority =

account.45.codec.pcmu.enable =
account.45.codec.pcmu.priority =

account.45.codec.pcma.enable =
account.45.codec.pcma.priority =

account.45.codec.opus.enable =
account.45.codec.opus.priority =

```

```
#####
#####
##                                NAT Settings
##
#####
#####

account.45.nat.nat_traversal =
account.45.nat.udp_update_enable =
account.45.nat.udp_update_time =
account.45.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.45.blf.subscribe_period =
account.45.dtmf.type =
account.45.dtmf.dtmf_payload =
account.45.dtmf.info_type =
account.45.100rel_enable =
account.45.subscribe_register =
account.45.subscribe_mwi =
account.45.subscribe_mwi_expires =
account.45.subscribe_mwi_to_vm =
voice_mail.number.45 = %BWVOICE-PORTAL-NUMBER-45%
account.45.display_mwi.enable =
account.45.cid_source =
account.45.cid_source_privacy =
account.45.cid_source_ppi =
account.45.session_timer.enable =
account.45.session_timer.expires =
account.45.session_timer.refreshes =
account.45.enable_user_equal_phone =
account.45.srtp_encryption =
account.45.ptime =
account.45.shared_line = %BWSHAREDLINE-BINARY-45%
account.45.register_mac =
account.45.register_line =
account.45.reg_fail_retry_interval =
account.45.reg_failed_retry_min_time =
account.45.reg_failed_retry_max_time =

#####
#####
##                                Network Conference
##
#####
#####

account.45.conf_type =
account.45.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-45%

account.45.sip_server_type =
account.45.unregister_on_reboot =

#####
#####
##                                Register Other
##
##
```

```
#####
#####
##DECT V81 Add

account.45.register_expires_overlap =
account.45.subscribe_expires_overlap =
account.45.auto_dial_enable =
account.45.auto_dial_num =
account.45.cp_source =
account.45.transfer_refer_to_contact_header.enable =
#V80 Add
account.45.custom_ua =
account.45.callpark_enable =
account.45.check_cseq.enable =
account.45.check_to_tag.enable =
account.45.hold_use_inactive =
account.45.line_seize.expires =
account.45.update_ack_while_dialing =
account.45.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.45.always_fwd.enable =
account.45.always_fwd.target =
account.45.always_fwd.off_code =
account.45.always_fwd.on_code =
account.45.busy_fwd.enable =
account.45.busy_fwd.target =
account.45.busy_fwd.off_code =
account.45.busy_fwd.on_code =
account.45.timeout_fwd.enable =
account.45.timeout_fwd.target =
account.45.timeout_fwd.timeout =
account.45.timeout_fwd.off_code =
account.45.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.45.dnd.enable =
account.45.dnd.on_code =
account.45.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.45.reg.enable =
handset.45.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.45.xsi.user =%BWLOGIN-ID-45%
account.45.xsi.password =%XSIPASSWORD-45%
account.45.xsi.host =%XSP_ADDRESS%
account.45.xsi.server_type =
account.45.xsi.port =

#####
#####
##          LADP
##
#####
handset.45.ldap.enable =
handset.45.ldap.name_filter=
handset.45.ldap.number_filter=
handset.45.ldap.host=
handset.45.ldap.port=
handset.45.ldap.base=
handset.45.ldap.user=
handset.45.ldap.password=
handset.45.ldap.max_hits=
handset.45.ldap.name_attr=
handset.45.ldap.numb_attr=
handset.45.ldap.display_name=
handset.45.ldap.version=
handset.45.ldap.call_in_lookup=
handset.45.ldap.ldap_sort=
handset.45.ldap.tls_mode=
handset.45.ldap.call_out_lookup=
handset.45.ldap.incoming_call_special_search.enable=

#####
#####
##          Account46 Settings
##
#####

account.46.enable=%BWLINE-BINARY-46%
account.46.label=%BWEXTENSION-46%
account.46.display_name=%BWCLID-46%
account.46.auth_name=%BWAUTHUSER-46%
account.46.user_name=%BWLINEPORT-46%
account.46.password=%BWAUTHPASSWORD-46%

#W80B ADD
account.46.sip_server.template =
account.46.media_transmit.enable =

account.46.alarm.template =
account.46.alarm.server =
account.46.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.46.sip_server.1.failback_mode =
account.46.sip_server.1.failback_timeout =
account.46.sip_server.1.register_on_enable =
account.46.sip_server.1.failback_subscribe.enable =
account.46.sip_server.1.invite_retry_counts =
account.46.sip_server.1.only_signal_with_registered =

account.46.sip_server.2.failback_mode =
account.46.sip_server.2.failback_timeout =
account.46.sip_server.2.register_on_enable =
account.46.sip_server.2.failback_subscribe.enable =
account.46.sip_server.2.invite_retry_counts =
account.46.sip_server.2.only_signal_with_registered =

account.46.naptr_build =
account.46.fallback.redundancy_type =
account.46.fallback.timeout =

account.46.dns_cache_type =
account.46.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.46.anonymous_call =
account.46.reject_anonymous_call =
account.46.send_anonymous_code =
account.46.anonymous_call_oncode =
account.46.anonymous_call_offcode =
account.46.send_anonymous_rejection_code =
account.46.anonymous_reject_oncode =
account.46.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.46.codec.g722.enable =
account.46.codec.g722.priority =

account.46.codec.g729.enable =
account.46.codec.g729.priority =

account.46.codec.g726_16.enable =
account.46.codec.g726_16.priority =

account.46.codec.g726_24.enable =
account.46.codec.g726_24.priority =

account.46.codec.g726_32.enable =
account.46.codec.g726_32.priority =
```



```

account.46.codec.g726_40.enable =
account.46.codec.g726_40.priority =

account.46.codec.ilbc.enable =
account.46.codec.ilbc.priority =

account.46.codec.pcmu.enable =
account.46.codec.pcmu.priority =

account.46.codec.pcma.enable =
account.46.codec.pcma.priority =

account.46.codec.opus.enable =
account.46.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.46.nat.nat_traversal =
account.46.nat.udp_update_enable =
account.46.nat.udp_update_time =
account.46.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.46.blf.subscribe_period =
account.46.dtmf.type =
account.46.dtmf.dtmf_payload =
account.46.dtmf.info_type =
account.46.100rel_enable =
account.46.subscribe_register =
account.46.subscribe_mwi =
account.46.subscribe_mwi_expires =
account.46.subscribe_mwi_to_vm =
voice_mail.number.46 = %BWVOICE-PORTAL-NUMBER-46%
account.46.display_mwi.enable =
account.46.cid_source =
account.46.cid_source_privacy =
account.46.cid_source_ppi =
account.46.session_timer.enable =
account.46.session_timer.expires =
account.46.session_timer.refresher =
account.46.enable_user_equal_phone =
account.46.srtp_encryption =
account.46.ptime =
account.46.shared_line = %BWSHAREDLINE-BINARY-46%
account.46.register_mac =
account.46.register_line =
account.46.reg_fail_retry_interval =
account.46.reg_failed_retry_min_time =
account.46.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.46.conf_type =
account.46.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-46%

account.46.sip_server_type =
account.46.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.46.register_expires_overlap =
account.46.subscribe_expires_overlap =
account.46.auto_dial_enable =
account.46.auto_dial_num =
account.46.cp_source =
account.46.transfer_refer_to_contact_header.enable =
#V80 Add
account.46.custom_ua =
account.46.callpark_enable =
account.46.check_cseq.enable =
account.46.check_to_tag.enable =
account.46.hold_use_inactive =
account.46.line_seize.expires =
account.46.update_ack_while_dialing =
account.46.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.46.always_fwd.enable =
account.46.always_fwd.target =
account.46.always_fwd.off_code =
account.46.always_fwd.on_code =
account.46.busy_fwd.enable =
account.46.busy_fwd.target =
account.46.busy_fwd.off_code =
account.46.busy_fwd.on_code =
account.46.timeout_fwd.enable =
account.46.timeout_fwd.target =
account.46.timeout_fwd.timeout =
account.46.timeout_fwd.off_code =
account.46.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```
account.46.dnd.enable =
account.46.dnd.on_code =
account.46.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.46.reg.enable =
handset.46.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.46.xsi.user =%BWLOGIN-ID-46%
account.46.xsi.password =%XSIPASSWORD-46%
account.46.xsi.host =%XSP_ADDRESS%
account.46.xsi.server_type =
account.46.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.46.ldap.enable =
handset.46.ldap.name_filter=
handset.46.ldap.number_filter=
handset.46.ldap.host=
handset.46.ldap.port=
handset.46.ldap.base=
handset.46.ldap.user=
handset.46.ldap.password=
handset.46.ldap.max_hits=
handset.46.ldap.name_attr=
handset.46.ldap.numb_attr=
handset.46.ldap.display_name=
handset.46.ldap.version=
handset.46.ldap.call_in_lookup=
handset.46.ldap.ldap_sort=
handset.46.ldap.tls_mode=
handset.46.ldap.call_out_lookup=
handset.46.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account47 Settings
##
#####
#####
```

```

account.47.enable=%BWLIN-BINARY-47%
account.47.label=%BWEXTENSION-47%
account.47.display_name=%BWCLID-47%
account.47.auth_name=%BWAUTHUSER-47%
account.47.user_name=%BWLINPORT-47%
account.47.password=%BWAUTHPASSWORD-47%

#W80B ADD
account.47.sip_server.template =
account.47.media_transmit.enable =

account.47.alarm.template =
account.47.alarm.server =
account.47.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.47.sip_server.1.failback_mode =
account.47.sip_server.1.failback_timeout =
account.47.sip_server.1.register_on_enable =
account.47.sip_server.1.failback_subscribe.enable =
account.47.sip_server.1.invite_retry_counts =
account.47.sip_server.1.only_signal_with_registered =

account.47.sip_server.2.failback_mode =
account.47.sip_server.2.failback_timeout =
account.47.sip_server.2.register_on_enable =
account.47.sip_server.2.failback_subscribe.enable =
account.47.sip_server.2.invite_retry_counts =
account.47.sip_server.2.only_signal_with_registered =

account.47.naptr_build =
account.47.fallback.redundancy_type =
account.47.fallback.timeout =

account.47.dns_cache_type =
account.47.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.47.anonymous_call =
account.47.reject_anonymous_call =
account.47.send_anonymous_code =
account.47.anonymous_call_oncode =
account.47.anonymous_call_offcode =
account.47.send_anonymous_rejection_code =
account.47.anonymous_reject_oncode =
account.47.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.47.codec.g722.enable =
account.47.codec.g722.priority =

account.47.codec.g729.enable =
account.47.codec.g729.priority =

account.47.codec.g726_16.enable =
account.47.codec.g726_16.priority =

account.47.codec.g726_24.enable =
account.47.codec.g726_24.priority =

account.47.codec.g726_32.enable =
account.47.codec.g726_32.priority =

account.47.codec.g726_40.enable =
account.47.codec.g726_40.priority =

account.47.codec.ilbc.enable =
account.47.codec.ilbc.priority =

account.47.codec.pcmu.enable =
account.47.codec.pcmu.priority =

account.47.codec.pcma.enable =
account.47.codec.pcma.priority =

account.47.codec.opus.enable =
account.47.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.47.nat.nat_traversal =
account.47.nat.udp_update_enable =
account.47.nat.udp_update_time =
account.47.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.47.blf.subscribe_period =
account.47.dtmf.type =
account.47.dtmf.dtmf_payload =
account.47.dtmf.info_type =
account.47.100rel_enable =
account.47.subscribe_register =
account.47.subscribe_mwi =
account.47.subscribe_mwi_expires =
account.47.subscribe_mwi_to_vm =
voice_mail.number.47 = %BWVOICE-PORTAL-NUMBER-47%
account.47.display_mwi.enable =
account.47.cid_source =
```

```

account.47.cid_source_privacy =
account.47.cid_source_ppi =
account.47.session_timer.enable =
account.47.session_timer.expires =
account.47.session_timer.refresher =
account.47.enable_user_equal_phone =
account.47.srtp_encryption =
account.47.ptime =
account.47.shared_line = %BWSHAREDLINE-BINARY-47%
account.47.register_mac =
account.47.register_line =
account.47.reg_fail_retry_interval =
account.47.reg_failed_retry_min_time =
account.47.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.47.conf_type =
account.47.conf_uri = %BWNWORK-CONFERENCE-SIPURI-47%

account.47.sip_server_type =
account.47.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.47.register_expires_overlap =
account.47.subscribe_expires_overlap =
account.47.auto_dial_enable =
account.47.auto_dial_num =
account.47.cp_source =
account.47.transfer_refer_to_contact_header.enable =
#V80 Add
account.47.custom_ua =
account.47.callpark_enable =
account.47.check_cseq.enable =
account.47.check_to_tag.enable =
account.47.hold_use_inactive =
account.47.line_seize.expires =
account.47.update_ack_while_dialing =
account.47.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.47.always_fwd.enable =
account.47.always_fwd.target =
account.47.always_fwd.off_code =
account.47.always_fwd.on_code =
account.47.busy_fwd.enable =

```

```

account.47.busy_fwd.target =
account.47.busy_fwd.off_code =
account.47.busy_fwd.on_code =
account.47.timeout_fwd.enable =
account.47.timeout_fwd.target =
account.47.timeout_fwd.timeout =
account.47.timeout_fwd.off_code =
account.47.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.47.dnd.enable =
account.47.dnd.on_code =
account.47.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.47.reg.enable =
handset.47.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.47.xsi.user =%BWLOGIN-ID-47%
account.47.xsi.password =%XSIPASSWORD-47%
account.47.xsi.host =%XSP_ADDRESS%
account.47.xsi.server_type =
account.47.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.47.ldap.enable =
handset.47.ldap.name_filter=
handset.47.ldap.number_filter=
handset.47.ldap.host=
handset.47.ldap.port=
handset.47.ldap.base=
handset.47.ldap.user=
handset.47.ldap.password=
handset.47.ldap.max_hits=
handset.47.ldap.name_attr=
handset.47.ldap.numb_attr=
handset.47.ldap.display_name=
handset.47.ldap.version=
handset.47.ldap.call_in_lookup=

```

```

handset.47.ldap.ldap_sort=
handset.47.ldap.tls_mode=
handset.47.ldap.call_out_lookup=
handset.47.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account48 Settings
##
#####
#####

account.48.enable=%BWLIN-BINARY-48%
account.48.label=%BWEXTENSION-48%
account.48.display_name=%BWCLID-48%
account.48.auth_name=%BWAUTHUSER-48%
account.48.user_name=%BWLINPORT-48%
account.48.password=%BWAUTHPASSWORD-48%

#W80B ADD
account.48.sip_server.template =
account.48.media_transmit.enable =

account.48.alarm.template =
account.48.alarm.server =
account.48.alarm.number =

#####
#####
##                                     Failback
##
##
#####
#####

account.48.sip_server.1.failback_mode =
account.48.sip_server.1.failback_timeout =
account.48.sip_server.1.register_on_enable =
account.48.sip_server.1.failback_subscribe.enable =
account.48.sip_server.1.invite_retry_counts =
account.48.sip_server.1.only_signal_with_registered =

account.48.sip_server.2.failback_mode =
account.48.sip_server.2.failback_timeout =
account.48.sip_server.2.register_on_enable =
account.48.sip_server.2.failback_subscribe.enable =
account.48.sip_server.2.invite_retry_counts =
account.48.sip_server.2.only_signal_with_registered =

account.48.naptr_build =
account.48.fallback.redundancy_type =
account.48.fallback.timeout =

account.48.dns_cache_type =
account.48.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
##
#####
#####

```



```

account.48.anonymous_call =
account.48.reject_anonymous_call =
account.48.send_anonymous_code =
account.48.anonymous_call_oncode =
account.48.anonymous_call_offcode =
account.48.send_anonymous_rejection_code =
account.48.anonymous_reject_oncode =
account.48.anonymous_reject_offcode =

#####
#####
##
##                                Codec
##
#####
#####
account.48.codec.g722.enable =
account.48.codec.g722.priority =

account.48.codec.g729.enable =
account.48.codec.g729.priority =

account.48.codec.g726_16.enable =
account.48.codec.g726_16.priority =

account.48.codec.g726_24.enable =
account.48.codec.g726_24.priority =

account.48.codec.g726_32.enable =
account.48.codec.g726_32.priority =

account.48.codec.g726_40.enable =
account.48.codec.g726_40.priority =

account.48.codec.ilbc.enable =
account.48.codec.ilbc.priority =

account.48.codec.pcmu.enable =
account.48.codec.pcmu.priority =

account.48.codec.pcma.enable =
account.48.codec.pcma.priority =

account.48.codec.opus.enable =
account.48.codec.opus.priority =

#####
#####
##
##                                NAT Settings
##
#####
#####

account.48.nat.nat_traversal =
account.48.nat.udp_update_enable =
account.48.nat.udp_update_time =
account.48.nat.rport =

#####
#####
##
##                                Register Advanced
##

```

```
#####
#####

account.48.blf.subscribe_period =
account.48.dtmf.type =
account.48.dtmf.dtmf_payload =
account.48.dtmf.info_type =
account.48.100rel_enable =
account.48.subscribe_register =
account.48.subscribe_mwi =
account.48.subscribe_mwi_expires =
account.48.subscribe_mwi_to_vm =
voice_mail.number.48 = %BWVOICE-PORTAL-NUMBER-48%
account.48.display_mwi.enable =
account.48.cid_source =
account.48.cid_source_privacy =
account.48.cid_source_ppi =
account.48.session_timer.enable =
account.48.session_timer.expires =
account.48.session_timer.refresher =
account.48.enable_user_equal_phone =
account.48.srtp_encryption =
account.48.ptime =
account.48.shared_line = %BWSHAREDLINE-BINARY-48%
account.48.register_mac =
account.48.register_line =
account.48.reg_fail_retry_interval =
account.48.reg_failed_retry_min_time =
account.48.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.48.conf_type =
account.48.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-48%

account.48.sip_server_type =
account.48.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.48.register_expires_overlap =
account.48.subscribe_expires_overlap =
account.48.auto_dial_enable =
account.48.auto_dial_num =
account.48.cp_source =
account.48.transfer_refer_to_contact_header.enable =
#V80 Add
account.48.custom_ua =
account.48.callpark_enable =
account.48.check_cseq.enable =
account.48.check_to_tag.enable =
account.48.hold_use_inactive =
```

```

account.48.line_seize.expires =
account.48.update_ack_while_dialing =
account.48.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.48.always_fwd.enable =
account.48.always_fwd.target =
account.48.always_fwd.off_code =
account.48.always_fwd.on_code =
account.48.busy_fwd.enable =
account.48.busy_fwd.target =
account.48.busy_fwd.off_code =
account.48.busy_fwd.on_code =
account.48.timeout_fwd.enable =
account.48.timeout_fwd.target =
account.48.timeout_fwd.timeout =
account.48.timeout_fwd.off_code =
account.48.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.48.dnd.enable =
account.48.dnd.on_code =
account.48.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.48.reg.enable =
handset.48.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.48.xsi.user =%BWLOGIN-ID-48%
account.48.xsi.password =%XSIPASSWORD-48%
account.48.xsi.host =%XSP_ADDRESS%
account.48.xsi.server_type =
account.48.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.48.ldap.enable =
handset.48.ldap.name_filter=
handset.48.ldap.number_filter=
handset.48.ldap.host=
handset.48.ldap.port=
handset.48.ldap.base=
handset.48.ldap.user=
handset.48.ldap.password=
handset.48.ldap.max_hits=
handset.48.ldap.name_attr=
handset.48.ldap.numb_attr=
handset.48.ldap.display_name=
handset.48.ldap.version=
handset.48.ldap.call_in_lookup=
handset.48.ldap.ldap_sort=
handset.48.ldap.tls_mode=
handset.48.ldap.call_out_lookup=
handset.48.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account49 Settings
##
#####
#####

account.49.enable=%BWLIN-BINARY-49%
account.49.label=%BWEXTENSION-49%
account.49.display_name=%BWCLID-49%
account.49.auth_name=%BWAUTHUSER-49%
account.49.user_name=%BWLINPORT-49%
account.49.password=%BWAUTHPASSWORD-49%

#W80B ADD
account.49.sip_server.template =
account.49.media_transmit.enable =

account.49.alarm.template =
account.49.alarm.server =
account.49.alarm.number =

#####
#####
##                               Failback
##
#####
#####

account.49.sip_server.1.failback_mode =
account.49.sip_server.1.failback_timeout =
account.49.sip_server.1.register_on_enable =
account.49.sip_server.1.failback_subscribe.enable =
account.49.sip_server.1.invite_retry_counts =
account.49.sip_server.1.only_signal_with_registered =

account.49.sip_server.2.failback_mode =
account.49.sip_server.2.failback_timeout =
account.49.sip_server.2.register_on_enable =
account.49.sip_server.2.failback_subscribe.enable =
```

```
account.49.sip_server.2.invite_retry_counts =
account.49.sip_server.2.only_signal_with_registered =

account.49.naptr_build =
account.49.fallback.redundancy_type =
account.49.fallback.timeout =

account.49.dns_cache_type =
account.49.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.49.anonymous_call =
account.49.reject_anonymous_call =
account.49.send_anonymous_code =
account.49.anonymous_call_oncode =
account.49.anonymous_call_offcode =
account.49.send_anonymous_rejection_code =
account.49.anonymous_reject_oncode =
account.49.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.49.codec.g722.enable =
account.49.codec.g722.priority =

account.49.codec.g729.enable =
account.49.codec.g729.priority =

account.49.codec.g726_16.enable =
account.49.codec.g726_16.priority =

account.49.codec.g726_24.enable =
account.49.codec.g726_24.priority =

account.49.codec.g726_32.enable =
account.49.codec.g726_32.priority =

account.49.codec.g726_40.enable =
account.49.codec.g726_40.priority =

account.49.codec.ilbc.enable =
account.49.codec.ilbc.priority =

account.49.codec.pcmu.enable =
account.49.codec.pcmu.priority =

account.49.codec.pcma.enable =
account.49.codec.pcma.priority =

account.49.codec.opus.enable =
account.49.codec.opus.priority =
```

```
#####
#####
##                                NAT Settings
##
#####
#####

account.49.nat.nat_traversal =
account.49.nat.udp_update_enable =
account.49.nat.udp_update_time =
account.49.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.49.blf.subscribe_period =
account.49.dtmf.type =
account.49.dtmf.dtmf_payload =
account.49.dtmf.info_type =
account.49.100rel_enable =
account.49.subscribe_register =
account.49.subscribe_mwi =
account.49.subscribe_mwi_expires =
account.49.subscribe_mwi_to_vm =
voice_mail.number.49 = %BWVOICE-PORTAL-NUMBER-49%
account.49.display_mwi.enable =
account.49.cid_source =
account.49.cid_source_privacy =
account.49.cid_source_ppi =
account.49.session_timer.enable =
account.49.session_timer.expires =
account.49.session_timer.refreshes =
account.49.enable_user_equal_phone =
account.49.srtp_encryption =
account.49.ptime =
account.49.shared_line = %BWSHAREDLINE-BINARY-49%
account.49.register_mac =
account.49.register_line =
account.49.reg_fail_retry_interval =
account.49.reg_failed_retry_min_time =
account.49.reg_failed_retry_max_time =

#####
#####
##                                Network Conference
##
#####
#####

account.49.conf_type =
account.49.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-49%

account.49.sip_server_type =
account.49.unregister_on_reboot =

#####
#####
##                                Register Other
##
```

```
#####
#####
##DECT V81 Add

account.49.register_expires_overlap =
account.49.subscribe_expires_overlap =
account.49.auto_dial_enable =
account.49.auto_dial_num =
account.49.cp_source =
account.49.transfer_refer_to_contact_header.enable =
#V80 Add
account.49.custom_ua =
account.49.callpark_enable =
account.49.check_cseq.enable =
account.49.check_to_tag.enable =
account.49.hold_use_inactive =
account.49.line_seize.expires =
account.49.update_ack_while_dialing =
account.49.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.49.always_fwd.enable =
account.49.always_fwd.target =
account.49.always_fwd.off_code =
account.49.always_fwd.on_code =
account.49.busy_fwd.enable =
account.49.busy_fwd.target =
account.49.busy_fwd.off_code =
account.49.busy_fwd.on_code =
account.49.timeout_fwd.enable =
account.49.timeout_fwd.target =
account.49.timeout_fwd.timeout =
account.49.timeout_fwd.off_code =
account.49.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.49.dnd.enable =
account.49.dnd.on_code =
account.49.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.49.reg.enable =
handset.49.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.49.xsi.user =%BWLOGIN-ID-49%
account.49.xsi.password =%XSIPASSWORD-49%
account.49.xsi.host =%XSP_ADDRESS%
account.49.xsi.server_type =
account.49.xsi.port =

#####
#####
##          LADP
##
#####
handset.49.ldap.enable =
handset.49.ldap.name_filter=
handset.49.ldap.number_filter=
handset.49.ldap.host=
handset.49.ldap.port=
handset.49.ldap.base=
handset.49.ldap.user=
handset.49.ldap.password=
handset.49.ldap.max_hits=
handset.49.ldap.name_attr=
handset.49.ldap.numb_attr=
handset.49.ldap.display_name=
handset.49.ldap.version=
handset.49.ldap.call_in_lookup=
handset.49.ldap.ldap_sort=
handset.49.ldap.tls_mode=
handset.49.ldap.call_out_lookup=
handset.49.ldap.incoming_call_special_search.enable=

#####
#####
##          Account50 Settings
##
#####

account.50.enable=%BWLINE-BINARY-50%
account.50.label=%BWEXTENSION-50%
account.50.display_name=%BWCLID-50%
account.50.auth_name=%BWAUTHUSER-50%
account.50.user_name=%BWLINEPORT-50%
account.50.password=%BWAUTHPASSWORD-50%

#W80B ADD
account.50.sip_server.template =
account.50.media_transmit.enable =

account.50.alarm.template =
account.50.alarm.server =
account.50.alarm.number =

```



```
#####
#####
##                               Failback
##
#####
#####
account.50.sip_server.1.failback_mode =
account.50.sip_server.1.failback_timeout =
account.50.sip_server.1.register_on_enable =
account.50.sip_server.1.failback_subscribe.enable =
account.50.sip_server.1.invite_retry_counts =
account.50.sip_server.1.only_signal_with_registered =

account.50.sip_server.2.failback_mode =
account.50.sip_server.2.failback_timeout =
account.50.sip_server.2.register_on_enable =
account.50.sip_server.2.failback_subscribe.enable =
account.50.sip_server.2.invite_retry_counts =
account.50.sip_server.2.only_signal_with_registered =

account.50.naptr_build =
account.50.fallback.redundancy_type =
account.50.fallback.timeout =

account.50.dns_cache_type =
account.50.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.50.anonymous_call =
account.50.reject_anonymous_call =
account.50.send_anonymous_code =
account.50.anonymous_call_oncode =
account.50.anonymous_call_offcode =
account.50.send_anonymous_rejection_code =
account.50.anonymous_reject_oncode =
account.50.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.50.codec.g722.enable =
account.50.codec.g722.priority =

account.50.codec.g729.enable =
account.50.codec.g729.priority =

account.50.codec.g726_16.enable =
account.50.codec.g726_16.priority =

account.50.codec.g726_24.enable =
account.50.codec.g726_24.priority =

account.50.codec.g726_32.enable =
account.50.codec.g726_32.priority =
```

```

account.50.codec.g726_40.enable =
account.50.codec.g726_40.priority =

account.50.codec.ilbc.enable =
account.50.codec.ilbc.priority =

account.50.codec.pcmu.enable =
account.50.codec.pcmu.priority =

account.50.codec.pcma.enable =
account.50.codec.pcma.priority =

account.50.codec.opus.enable =
account.50.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.50.nat.nat_traversal =
account.50.nat.udp_update_enable =
account.50.nat.udp_update_time =
account.50.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.50.blf.subscribe_period =
account.50.dtmf.type =
account.50.dtmf.dtmf_payload =
account.50.dtmf.info_type =
account.50.100rel_enable =
account.50.subscribe_register =
account.50.subscribe_mwi =
account.50.subscribe_mwi_expires =
account.50.subscribe_mwi_to_vm =
voice_mail.number.50 = %BWVOICE-PORTAL-NUMBER-50%
account.50.display_mwi.enable =
account.50.cid_source =
account.50.cid_source_privacy =
account.50.cid_source_ppi =
account.50.session_timer.enable =
account.50.session_timer.expires =
account.50.session_timer.refresher =
account.50.enable_user_equal_phone =
account.50.srtp_encryption =
account.50.ptime =
account.50.shared_line = %BWSHAREDLINE-BINARY-50%
account.50.register_mac =
account.50.register_line =
account.50.reg_fail_retry_interval =
account.50.reg_failed_retry_min_time =
account.50.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.50.conf_type =
account.50.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-50%

account.50.sip_server_type =
account.50.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.50.register_expires_overlap =
account.50.subscribe_expires_overlap =
account.50.auto_dial_enable =
account.50.auto_dial_num =
account.50.cp_source =
account.50.transfer_refer_to_contact_header.enable =
#V80 Add
account.50.custom_ua =
account.50.callpark_enable =
account.50.check_cseq.enable =
account.50.check_to_tag.enable =
account.50.hold_use_inactive =
account.50.line_seize.expires =
account.50.update_ack_while_dialing =
account.50.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.50.always_fwd.enable =
account.50.always_fwd.target =
account.50.always_fwd.off_code =
account.50.always_fwd.on_code =
account.50.busy_fwd.enable =
account.50.busy_fwd.target =
account.50.busy_fwd.off_code =
account.50.busy_fwd.on_code =
account.50.timeout_fwd.enable =
account.50.timeout_fwd.target =
account.50.timeout_fwd.timeout =
account.50.timeout_fwd.off_code =
account.50.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```

account.50.dnd.enable =
account.50.dnd.on_code =
account.50.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.50.reg.enable =
handset.50.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.50.xsi.user =%BWLOGIN-ID-50%
account.50.xsi.password =%XSIPASSWORD-50%
account.50.xsi.host =%XSP_ADDRESS%
account.50.xsi.server_type =
account.50.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.50.ldap.enable =
handset.50.ldap.name_filter=
handset.50.ldap.number_filter=
handset.50.ldap.host=
handset.50.ldap.port=
handset.50.ldap.base=
handset.50.ldap.user=
handset.50.ldap.password=
handset.50.ldap.max_hits=
handset.50.ldap.name_attr=
handset.50.ldap.numb_attr=
handset.50.ldap.display_name=
handset.50.ldap.version=
handset.50.ldap.call_in_lookup=
handset.50.ldap.ldap_sort=
handset.50.ldap.tls_mode=
handset.50.ldap.call_out_lookup=
handset.50.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account51 Settings
##
#####
#####

```

```

account.51.enable=%BWLIN-BINARY-51%
account.51.label=%BWEXTENSION-51%
account.51.display_name=%BWCLID-51%
account.51.auth_name=%BWAUTHUSER-51%
account.51.user_name=%BWLINPORT-51%
account.51.password=%BWAUTHPASSWORD-51%

#W80B ADD
account.51.sip_server.template =
account.51.media_transmit.enable =

account.51.alarm.template =
account.51.alarm.server =
account.51.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.51.sip_server.1.failback_mode =
account.51.sip_server.1.failback_timeout =
account.51.sip_server.1.register_on_enable =
account.51.sip_server.1.failback_subscribe.enable =
account.51.sip_server.1.invite_retry_counts =
account.51.sip_server.1.only_signal_with_registered =

account.51.sip_server.2.failback_mode =
account.51.sip_server.2.failback_timeout =
account.51.sip_server.2.register_on_enable =
account.51.sip_server.2.failback_subscribe.enable =
account.51.sip_server.2.invite_retry_counts =
account.51.sip_server.2.only_signal_with_registered =

account.51.naptr_build =
account.51.fallback.redundancy_type =
account.51.fallback.timeout =

account.51.dns_cache_type =
account.51.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.51.anonymous_call =
account.51.reject_anonymous_call =
account.51.send_anonymous_code =
account.51.anonymous_call_oncode =
account.51.anonymous_call_offcode =
account.51.send_anonymous_rejection_code =
account.51.anonymous_reject_oncode =
account.51.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.51.codec.g722.enable =
account.51.codec.g722.priority =

account.51.codec.g729.enable =
account.51.codec.g729.priority =

account.51.codec.g726_16.enable =
account.51.codec.g726_16.priority =

account.51.codec.g726_24.enable =
account.51.codec.g726_24.priority =

account.51.codec.g726_32.enable =
account.51.codec.g726_32.priority =

account.51.codec.g726_40.enable =
account.51.codec.g726_40.priority =

account.51.codec.ilbc.enable =
account.51.codec.ilbc.priority =

account.51.codec.pcmu.enable =
account.51.codec.pcmu.priority =

account.51.codec.pcma.enable =
account.51.codec.pcma.priority =

account.51.codec.opus.enable =
account.51.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.51.nat.nat_traversal =
account.51.nat.udp_update_enable =
account.51.nat.udp_update_time =
account.51.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.51.blf.subscribe_period =
account.51.dtmf.type =
account.51.dtmf.dtmf_payload =
account.51.dtmf.info_type =
account.51.100rel_enable =
account.51.subscribe_register =
account.51.subscribe_mwi =
account.51.subscribe_mwi_expires =
account.51.subscribe_mwi_to_vm =
voice_mail.number.51 = %BWVOICE-PORTAL-NUMBER-51%
account.51.display_mwi.enable =
account.51.cid_source =
```

```

account.51.cid_source_privacy =
account.51.cid_source_ppi =
account.51.session_timer.enable =
account.51.session_timer.expires =
account.51.session_timer.refresher =
account.51.enable_user_equal_phone =
account.51.srtp_encryption =
account.51.ptime =
account.51.shared_line = %BWSHAREDLINE-BINARY-51%
account.51.register_mac =
account.51.register_line =
account.51.reg_fail_retry_interval =
account.51.reg_failed_retry_min_time =
account.51.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.51.conf_type =
account.51.conf_uri = %BWNWORK-CONFERENCE-SIPURI-51%

account.51.sip_server_type =
account.51.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.51.register_expires_overlap =
account.51.subscribe_expires_overlap =
account.51.auto_dial_enable =
account.51.auto_dial_num =
account.51.cp_source =
account.51.transfer_refer_to_contact_header.enable =
#V80 Add
account.51.custom_ua =
account.51.callpark_enable =
account.51.check_cseq.enable =
account.51.check_to_tag.enable =
account.51.hold_use_inactive =
account.51.line_seize.expires =
account.51.update_ack_while_dialing =
account.51.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.51.always_fwd.enable =
account.51.always_fwd.target =
account.51.always_fwd.off_code =
account.51.always_fwd.on_code =
account.51.busy_fwd.enable =

```

```

account.51.busy_fwd.target =
account.51.busy_fwd.off_code =
account.51.busy_fwd.on_code =
account.51.timeout_fwd.enable =
account.51.timeout_fwd.target =
account.51.timeout_fwd.timeout =
account.51.timeout_fwd.off_code =
account.51.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.51.dnd.enable =
account.51.dnd.on_code =
account.51.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.51.reg.enable =
handset.51.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.51.xsi.user =%BWLOGIN-ID-51%
account.51.xsi.password =%XSIPASSWORD-51%
account.51.xsi.host =%XSP_ADDRESS%
account.51.xsi.server_type =
account.51.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.51.ldap.enable =
handset.51.ldap.name_filter=
handset.51.ldap.number_filter=
handset.51.ldap.host=
handset.51.ldap.port=
handset.51.ldap.base=
handset.51.ldap.user=
handset.51.ldap.password=
handset.51.ldap.max_hits=
handset.51.ldap.name_attr=
handset.51.ldap.numb_attr=
handset.51.ldap.display_name=
handset.51.ldap.version=
handset.51.ldap.call_in_lookup=

```



```

handset.51.ldap.ldap_sort=
handset.51.ldap.tls_mode=
handset.51.ldap.call_out_lookup=
handset.51.ldap.incoming_call_special_search.enable=

#####
#####
##
##                               Account52 Settings
##
#####
#####

account.52.enable=%BWLIN-BINARY-52%
account.52.label=%BWEXTENSION-52%
account.52.display_name=%BWCLID-52%
account.52.auth_name=%BWAUTHUSER-52%
account.52.user_name=%BWLINPORT-52%
account.52.password=%BWAUTHPASSWORD-52%

#W80B ADD
account.52.sip_server.template =
account.52.media_transmit.enable =

account.52.alarm.template =
account.52.alarm.server =
account.52.alarm.number =

#####
#####
##
##                               Failback
##
#####
#####

account.52.sip_server.1.failback_mode =
account.52.sip_server.1.failback_timeout =
account.52.sip_server.1.register_on_enable =
account.52.sip_server.1.failback_subscribe.enable =
account.52.sip_server.1.invite_retry_counts =
account.52.sip_server.1.only_signal_with_registered =

account.52.sip_server.2.failback_mode =
account.52.sip_server.2.failback_timeout =
account.52.sip_server.2.register_on_enable =
account.52.sip_server.2.failback_subscribe.enable =
account.52.sip_server.2.invite_retry_counts =
account.52.sip_server.2.only_signal_with_registered =

account.52.naptr_build =
account.52.fallback.redundancy_type =
account.52.fallback.timeout =

account.52.dns_cache_type =
account.52.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##
##                               Basic
##
#####
#####

```

```

account.52.anonymous_call =
account.52.reject_anonymous_call =
account.52.send_anonymous_code =
account.52.anonymous_call_oncode =
account.52.anonymous_call_offcode =
account.52.send_anonymous_rejection_code =
account.52.anonymous_reject_oncode =
account.52.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.52.codec.g722.enable =
account.52.codec.g722.priority =

account.52.codec.g729.enable =
account.52.codec.g729.priority =

account.52.codec.g726_16.enable =
account.52.codec.g726_16.priority =

account.52.codec.g726_24.enable =
account.52.codec.g726_24.priority =

account.52.codec.g726_32.enable =
account.52.codec.g726_32.priority =

account.52.codec.g726_40.enable =
account.52.codec.g726_40.priority =

account.52.codec.ilbc.enable =
account.52.codec.ilbc.priority =

account.52.codec.pcmu.enable =
account.52.codec.pcmu.priority =

account.52.codec.pcma.enable =
account.52.codec.pcma.priority =

account.52.codec.opus.enable =
account.52.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
##
#####
#####

account.52.nat.nat_traversal =
account.52.nat.udp_update_enable =
account.52.nat.udp_update_time =
account.52.nat.rport =

#####
#####
##                                     Register Advanced
##
##

```

```
#####
#####

account.52.blf.subscribe_period =
account.52.dtmf.type =
account.52.dtmf.dtmf_payload =
account.52.dtmf.info_type =
account.52.100rel_enable =
account.52.subscribe_register =
account.52.subscribe_mwi =
account.52.subscribe_mwi_expires =
account.52.subscribe_mwi_to_vm =
voice_mail.number.52 = %BWVOICE-PORTAL-NUMBER-52%
account.52.display_mwi.enable =
account.52.cid_source =
account.52.cid_source_privacy =
account.52.cid_source_ppi =
account.52.session_timer.enable =
account.52.session_timer.expires =
account.52.session_timer.refresher =
account.52.enable_user_equal_phone =
account.52.srtp_encryption =
account.52.ptime =
account.52.shared_line = %BWSHAREDLINE-BINARY-52%
account.52.register_mac =
account.52.register_line =
account.52.reg_fail_retry_interval =
account.52.reg_failed_retry_min_time =
account.52.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.52.conf_type =
account.52.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-52%

account.52.sip_server_type =
account.52.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.52.register_expires_overlap =
account.52.subscribe_expires_overlap =
account.52.auto_dial_enable =
account.52.auto_dial_num =
account.52.cp_source =
account.52.transfer_refer_to_contact_header.enable =
#V80 Add
account.52.custom_ua =
account.52.callpark_enable =
account.52.check_cseq.enable =
account.52.check_to_tag.enable =
account.52.hold_use_inactive =
```

```

account.52.line_seize.expires =
account.52.update_ack_while_dialing =
account.52.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.52.always_fwd.enable =
account.52.always_fwd.target =
account.52.always_fwd.off_code =
account.52.always_fwd.on_code =
account.52.busy_fwd.enable =
account.52.busy_fwd.target =
account.52.busy_fwd.off_code =
account.52.busy_fwd.on_code =
account.52.timeout_fwd.enable =
account.52.timeout_fwd.target =
account.52.timeout_fwd.timeout =
account.52.timeout_fwd.off_code =
account.52.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.52.dnd.enable =
account.52.dnd.on_code =
account.52.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.52.reg.enable =
handset.52.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.52.xsi.user =%BWLOGIN-ID-52%
account.52.xsi.password =%XSIPASSWORD-52%
account.52.xsi.host =%XSP_ADDRESS%
account.52.xsi.server_type =
account.52.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.52.ldap.enable =
handset.52.ldap.name_filter=
handset.52.ldap.number_filter=
handset.52.ldap.host=
handset.52.ldap.port=
handset.52.ldap.base=
handset.52.ldap.user=
handset.52.ldap.password=
handset.52.ldap.max_hits=
handset.52.ldap.name_attr=
handset.52.ldap.numb_attr=
handset.52.ldap.display_name=
handset.52.ldap.version=
handset.52.ldap.call_in_lookup=
handset.52.ldap.ldap_sort=
handset.52.ldap.tls_mode=
handset.52.ldap.call_out_lookup=
handset.52.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account53 Settings
##
#####
#####

account.53.enable=%BWLIN-BINARY-53%
account.53.label=%BWEXTENSION-53%
account.53.display_name=%BWCLID-53%
account.53.auth_name=%BWAUTHUSER-53%
account.53.user_name=%BWLINPORT-53%
account.53.password=%BWAUTHPASSWORD-53%

#W80B ADD
account.53.sip_server.template =
account.53.media_transmit.enable =

account.53.alarm.template =
account.53.alarm.server =
account.53.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.53.sip_server.1.failback_mode =
account.53.sip_server.1.failback_timeout =
account.53.sip_server.1.register_on_enable =
account.53.sip_server.1.failback_subscribe.enable =
account.53.sip_server.1.invite_retry_counts =
account.53.sip_server.1.only_signal_with_registered =

account.53.sip_server.2.failback_mode =
account.53.sip_server.2.failback_timeout =
account.53.sip_server.2.register_on_enable =
account.53.sip_server.2.failback_subscribe.enable =
```

```

account.53.sip_server.2.invite_retry_counts =
account.53.sip_server.2.only_signal_with_registered =

account.53.naptr_build =
account.53.fallback.redundancy_type =
account.53.fallback.timeout =

account.53.dns_cache_type =
account.53.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.53.anonymous_call =
account.53.reject_anonymous_call =
account.53.send_anonymous_code =
account.53.anonymous_call_oncode =
account.53.anonymous_call_offcode =
account.53.send_anonymous_rejection_code =
account.53.anonymous_reject_oncode =
account.53.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.53.codec.g722.enable =
account.53.codec.g722.priority =

account.53.codec.g729.enable =
account.53.codec.g729.priority =

account.53.codec.g726_16.enable =
account.53.codec.g726_16.priority =

account.53.codec.g726_24.enable =
account.53.codec.g726_24.priority =

account.53.codec.g726_32.enable =
account.53.codec.g726_32.priority =

account.53.codec.g726_40.enable =
account.53.codec.g726_40.priority =

account.53.codec.ilbc.enable =
account.53.codec.ilbc.priority =

account.53.codec.pcmu.enable =
account.53.codec.pcmu.priority =

account.53.codec.pcma.enable =
account.53.codec.pcma.priority =

account.53.codec.opus.enable =
account.53.codec.opus.priority =

```

```
#####
#####
##                                NAT Settings
##
#####
#####

account.53.nat.nat_traversal =
account.53.nat.udp_update_enable =
account.53.nat.udp_update_time =
account.53.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.53.blf.subscribe_period =
account.53.dtmf.type =
account.53.dtmf.dtmf_payload =
account.53.dtmf.info_type =
account.53.100rel_enable =
account.53.subscribe_register =
account.53.subscribe_mwi =
account.53.subscribe_mwi_expires =
account.53.subscribe_mwi_to_vm =
voice_mail.number.53 = %BWVOICE-PORTAL-NUMBER-53%
account.53.display_mwi.enable =
account.53.cid_source =
account.53.cid_source_privacy =
account.53.cid_source_ppi =
account.53.session_timer.enable =
account.53.session_timer.expires =
account.53.session_timer.refresher =
account.53.enable_user_equal_phone =
account.53.srtp_encryption =
account.53.ptime =
account.53.shared_line = %BWSHAREDLINE-BINARY-53%
account.53.register_mac =
account.53.register_line =
account.53.reg_fail_retry_interval =
account.53.reg_failed_retry_min_time =
account.53.reg_failed_retry_max_time =

#####
#####
##                                Network Conference
##
#####
#####

account.53.conf_type =
account.53.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-53%

account.53.sip_server_type =
account.53.unregister_on_reboot =

#####
#####
##                                Register Other
##
```

```
#####
#####
##DECT V81 Add

account.53.register_expires_overlap =
account.53.subscribe_expires_overlap =
account.53.auto_dial_enable =
account.53.auto_dial_num =
account.53.cp_source =
account.53.transfer_refer_to_contact_header.enable =
#V80 Add
account.53.custom_ua =
account.53.callpark_enable =
account.53.check_cseq.enable =
account.53.check_to_tag.enable =
account.53.hold_use_inactive =
account.53.line_seize.expires =
account.53.update_ack_while_dialing =
account.53.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.53.always_fwd.enable =
account.53.always_fwd.target =
account.53.always_fwd.off_code =
account.53.always_fwd.on_code =
account.53.busy_fwd.enable =
account.53.busy_fwd.target =
account.53.busy_fwd.off_code =
account.53.busy_fwd.on_code =
account.53.timeout_fwd.enable =
account.53.timeout_fwd.target =
account.53.timeout_fwd.timeout =
account.53.timeout_fwd.off_code =
account.53.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.53.dnd.enable =
account.53.dnd.on_code =
account.53.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.53.reg.enable =
handset.53.ipui =

#####
#####
```



```
##          Broadsoft XSI
##
#####

account.53.xsi.user =%BWLOGIN-ID-53%
account.53.xsi.password =%XSIPASSWORD-53%
account.53.xsi.host =%XSP_ADDRESS%
account.53.xsi.server_type =
account.53.xsi.port =

#####
#####
##          LADP
##
#####
handset.53.ldap.enable =
handset.53.ldap.name_filter=
handset.53.ldap.number_filter=
handset.53.ldap.host=
handset.53.ldap.port=
handset.53.ldap.base=
handset.53.ldap.user=
handset.53.ldap.password=
handset.53.ldap.max_hits=
handset.53.ldap.name_attr=
handset.53.ldap.numb_attr=
handset.53.ldap.display_name=
handset.53.ldap.version=
handset.53.ldap.call_in_lookup=
handset.53.ldap.ldap_sort=
handset.53.ldap.tls_mode=
handset.53.ldap.call_out_lookup=
handset.53.ldap.incoming_call_special_search.enable=

#####
#####
##          Account54 Settings
##
#####

account.54.enable=%BWLINE-BINARY-54%
account.54.label=%BWEXTENSION-54%
account.54.display_name=%BWCLID-54%
account.54.auth_name=%BWAUTHUSER-54%
account.54.user_name=%BWLINEPORT-54%
account.54.password=%BWAUTHPASSWORD-54%

#W80B ADD
account.54.sip_server.template =
account.54.media_transmit.enable =

account.54.alarm.template =
account.54.alarm.server =
account.54.alarm.number =
```

```
#####
#####
##                               Failback
##
#####
#####
account.54.sip_server.1.failback_mode =
account.54.sip_server.1.failback_timeout =
account.54.sip_server.1.register_on_enable =
account.54.sip_server.1.failback_subscribe.enable =
account.54.sip_server.1.invite_retry_counts =
account.54.sip_server.1.only_signal_with_registered =

account.54.sip_server.2.failback_mode =
account.54.sip_server.2.failback_timeout =
account.54.sip_server.2.register_on_enable =
account.54.sip_server.2.failback_subscribe.enable =
account.54.sip_server.2.invite_retry_counts =
account.54.sip_server.2.only_signal_with_registered =

account.54.naptr_build =
account.54.fallback.redundancy_type =
account.54.fallback.timeout =

account.54.dns_cache_type =
account.54.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.54.anonymous_call =
account.54.reject_anonymous_call =
account.54.send_anonymous_code =
account.54.anonymous_call_oncode =
account.54.anonymous_call_offcode =
account.54.send_anonymous_rejection_code =
account.54.anonymous_reject_oncode =
account.54.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.54.codec.g722.enable =
account.54.codec.g722.priority =

account.54.codec.g729.enable =
account.54.codec.g729.priority =

account.54.codec.g726_16.enable =
account.54.codec.g726_16.priority =

account.54.codec.g726_24.enable =
account.54.codec.g726_24.priority =

account.54.codec.g726_32.enable =
account.54.codec.g726_32.priority =
```

```

account.54.codec.g726_40.enable =
account.54.codec.g726_40.priority =

account.54.codec.ilbc.enable =
account.54.codec.ilbc.priority =

account.54.codec.pcmu.enable =
account.54.codec.pcmu.priority =

account.54.codec.pcma.enable =
account.54.codec.pcma.priority =

account.54.codec.opus.enable =
account.54.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.54.nat.nat_traversal =
account.54.nat.udp_update_enable =
account.54.nat.udp_update_time =
account.54.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.54.blf.subscribe_period =
account.54.dtmf.type =
account.54.dtmf.dtmf_payload =
account.54.dtmf.info_type =
account.54.100rel_enable =
account.54.subscribe_register =
account.54.subscribe_mwi =
account.54.subscribe_mwi_expires =
account.54.subscribe_mwi_to_vm =
voice_mail.number.54 = %BWVOICE-PORTAL-NUMBER-54%
account.54.display_mwi.enable =
account.54.cid_source =
account.54.cid_source_privacy =
account.54.cid_source_ppi =
account.54.session_timer.enable =
account.54.session_timer.expires =
account.54.session_timer.refresher =
account.54.enable_user_equal_phone =
account.54.srtp_encryption =
account.54.ptime =
account.54.shared_line = %BWSHAREDLINE-BINARY-54%
account.54.register_mac =
account.54.register_line =
account.54.reg_fail_retry_interval =
account.54.reg_failed_retry_min_time =
account.54.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.54.conf_type =
account.54.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-54%

account.54.sip_server_type =
account.54.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.54.register_expires_overlap =
account.54.subscribe_expires_overlap =
account.54.auto_dial_enable =
account.54.auto_dial_num =
account.54.cp_source =
account.54.transfer_refer_to_contact_header.enable =
#V80 Add
account.54.custom_ua =
account.54.callpark_enable =
account.54.check_cseq.enable =
account.54.check_to_tag.enable =
account.54.hold_use_inactive =
account.54.line_seize.expires =
account.54.update_ack_while_dialing =
account.54.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.54.always_fwd.enable =
account.54.always_fwd.target =
account.54.always_fwd.off_code =
account.54.always_fwd.on_code =
account.54.busy_fwd.enable =
account.54.busy_fwd.target =
account.54.busy_fwd.off_code =
account.54.busy_fwd.on_code =
account.54.timeout_fwd.enable =
account.54.timeout_fwd.target =
account.54.timeout_fwd.timeout =
account.54.timeout_fwd.off_code =
account.54.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```

account.54.dnd.enable =
account.54.dnd.on_code =
account.54.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.54.reg.enable =
handset.54.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.54.xsi.user =%BWLOGIN-ID-54%
account.54.xsi.password =%XSIPASSWORD-54%
account.54.xsi.host =%XSP_ADDRESS%
account.54.xsi.server_type =
account.54.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.54.ldap.enable =
handset.54.ldap.name_filter=
handset.54.ldap.number_filter=
handset.54.ldap.host=
handset.54.ldap.port=
handset.54.ldap.base=
handset.54.ldap.user=
handset.54.ldap.password=
handset.54.ldap.max_hits=
handset.54.ldap.name_attr=
handset.54.ldap.numb_attr=
handset.54.ldap.display_name=
handset.54.ldap.version=
handset.54.ldap.call_in_lookup=
handset.54.ldap.ldap_sort=
handset.54.ldap.tls_mode=
handset.54.ldap.call_out_lookup=
handset.54.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account55 Settings
##
#####
#####

```

```

account.55.enable=%BWLIN-BINARY-55%
account.55.label=%BWEXTENSION-55%
account.55.display_name=%BWCLID-55%
account.55.auth_name=%BWAUTHUSER-55%
account.55.user_name=%BWLINPORT-55%
account.55.password=%BWAUTHPASSWORD-55%

#W80B ADD
account.55.sip_server.template =
account.55.media_transmit.enable =

account.55.alarm.template =
account.55.alarm.server =
account.55.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.55.sip_server.1.failback_mode =
account.55.sip_server.1.failback_timeout =
account.55.sip_server.1.register_on_enable =
account.55.sip_server.1.failback_subscribe.enable =
account.55.sip_server.1.invite_retry_counts =
account.55.sip_server.1.only_signal_with_registered =

account.55.sip_server.2.failback_mode =
account.55.sip_server.2.failback_timeout =
account.55.sip_server.2.register_on_enable =
account.55.sip_server.2.failback_subscribe.enable =
account.55.sip_server.2.invite_retry_counts =
account.55.sip_server.2.only_signal_with_registered =

account.55.naptr_build =
account.55.fallback.redundancy_type =
account.55.fallback.timeout =

account.55.dns_cache_type =
account.55.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.55.anonymous_call =
account.55.reject_anonymous_call =
account.55.send_anonymous_code =
account.55.anonymous_call_oncode =
account.55.anonymous_call_offcode =
account.55.send_anonymous_rejection_code =
account.55.anonymous_reject_oncode =
account.55.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.55.codec.g722.enable =
account.55.codec.g722.priority =

account.55.codec.g729.enable =
account.55.codec.g729.priority =

account.55.codec.g726_16.enable =
account.55.codec.g726_16.priority =

account.55.codec.g726_24.enable =
account.55.codec.g726_24.priority =

account.55.codec.g726_32.enable =
account.55.codec.g726_32.priority =

account.55.codec.g726_40.enable =
account.55.codec.g726_40.priority =

account.55.codec.ilbc.enable =
account.55.codec.ilbc.priority =

account.55.codec.pcmu.enable =
account.55.codec.pcmu.priority =

account.55.codec.pcma.enable =
account.55.codec.pcma.priority =

account.55.codec.opus.enable =
account.55.codec.opus.priority =

#####
#####
##                                NAT Settings
##
#####
#####

account.55.nat.nat_traversal =
account.55.nat.udp_update_enable =
account.55.nat.udp_update_time =
account.55.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.55.blf.subscribe_period =
account.55.dtmf.type =
account.55.dtmf.dtmf_payload =
account.55.dtmf.info_type =
account.55.100rel_enable =
account.55.subscribe_register =
account.55.subscribe_mwi =
account.55.subscribe_mwi_expires =
account.55.subscribe_mwi_to_vm =
voice_mail.number.55 = %BWVOICE-PORTAL-NUMBER-55%
account.55.display_mwi.enable =
account.55.cid_source =
```

```

account.55.cid_source_privacy =
account.55.cid_source_ppi =
account.55.session_timer.enable =
account.55.session_timer.expires =
account.55.session_timer.refresher =
account.55.enable_user_equal_phone =
account.55.srtp_encryption =
account.55.ptime =
account.55.shared_line = %BWSHAREDLINE-BINARY-55%
account.55.register_mac =
account.55.register_line =
account.55.reg_fail_retry_interval =
account.55.reg_failed_retry_min_time =
account.55.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.55.conf_type =
account.55.conf_uri = %BWNWORK-CONFERENCE-SIPURI-55%

account.55.sip_server_type =
account.55.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.55.register_expires_overlap =
account.55.subscribe_expires_overlap =
account.55.auto_dial_enable =
account.55.auto_dial_num =
account.55.cp_source =
account.55.transfer_refer_to_contact_header.enable =
#V80 Add
account.55.custom_ua =
account.55.callpark_enable =
account.55.check_cseq.enable =
account.55.check_to_tag.enable =
account.55.hold_use_inactive =
account.55.line_seize.expires =
account.55.update_ack_while_dialing =
account.55.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.55.always_fwd.enable =
account.55.always_fwd.target =
account.55.always_fwd.off_code =
account.55.always_fwd.on_code =
account.55.busy_fwd.enable =

```



```

account.55.busy_fwd.target =
account.55.busy_fwd.off_code =
account.55.busy_fwd.on_code =
account.55.timeout_fwd.enable =
account.55.timeout_fwd.target =
account.55.timeout_fwd.timeout =
account.55.timeout_fwd.off_code =
account.55.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.55.dnd.enable =
account.55.dnd.on_code =
account.55.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.55.reg.enable =
handset.55.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.55.xsi.user =%BWLOGIN-ID-55%
account.55.xsi.password =%XSIPASSWORD-55%
account.55.xsi.host =%XSP_ADDRESS%
account.55.xsi.server_type =
account.55.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.55.ldap.enable =
handset.55.ldap.name_filter=
handset.55.ldap.number_filter=
handset.55.ldap.host=
handset.55.ldap.port=
handset.55.ldap.base=
handset.55.ldap.user=
handset.55.ldap.password=
handset.55.ldap.max_hits=
handset.55.ldap.name_attr=
handset.55.ldap.numb_attr=
handset.55.ldap.display_name=
handset.55.ldap.version=
handset.55.ldap.call_in_lookup=

```

```

handset.55.ldap.ldap_sort=
handset.55.ldap.tls_mode=
handset.55.ldap.call_out_lookup=
handset.55.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account56 Settings
##
#####
#####

account.56.enable=%BWLIN-BINARY-56%
account.56.label=%BWEXTENSION-56%
account.56.display_name=%BWCLID-56%
account.56.auth_name=%BWAUTHUSER-56%
account.56.user_name=%BWLINPORT-56%
account.56.password=%BWAUTHPASSWORD-56%

#W80B ADD
account.56.sip_server.template =
account.56.media_transmit.enable =

account.56.alarm.template =
account.56.alarm.server =
account.56.alarm.number =

#####
#####
##                                     Failback
##
##
#####
#####
account.56.sip_server.1.failback_mode =
account.56.sip_server.1.failback_timeout =
account.56.sip_server.1.register_on_enable =
account.56.sip_server.1.failback_subscribe.enable =
account.56.sip_server.1.invite_retry_counts =
account.56.sip_server.1.only_signal_with_registered =

account.56.sip_server.2.failback_mode =
account.56.sip_server.2.failback_timeout =
account.56.sip_server.2.register_on_enable =
account.56.sip_server.2.failback_subscribe.enable =
account.56.sip_server.2.invite_retry_counts =
account.56.sip_server.2.only_signal_with_registered =

account.56.naptr_build =
account.56.fallback.redundancy_type =
account.56.fallback.timeout =

account.56.dns_cache_type =
account.56.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
##
#####
#####

```

```

account.56.anonymous_call =
account.56.reject_anonymous_call =
account.56.send_anonymous_code =
account.56.anonymous_call_oncode =
account.56.anonymous_call_offcode =
account.56.send_anonymous_rejection_code =
account.56.anonymous_reject_oncode =
account.56.anonymous_reject_offcode =

#####
#####
##
##                               Codec
##
#####
#####
account.56.codec.g722.enable =
account.56.codec.g722.priority =

account.56.codec.g729.enable =
account.56.codec.g729.priority =

account.56.codec.g726_16.enable =
account.56.codec.g726_16.priority =

account.56.codec.g726_24.enable =
account.56.codec.g726_24.priority =

account.56.codec.g726_32.enable =
account.56.codec.g726_32.priority =

account.56.codec.g726_40.enable =
account.56.codec.g726_40.priority =

account.56.codec.ilbc.enable =
account.56.codec.ilbc.priority =

account.56.codec.pcmu.enable =
account.56.codec.pcmu.priority =

account.56.codec.pcma.enable =
account.56.codec.pcma.priority =

account.56.codec.opus.enable =
account.56.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.56.nat.nat_traversal =
account.56.nat.udp_update_enable =
account.56.nat.udp_update_time =
account.56.nat.rport =

#####
#####
##
##                               Register Advanced
##

```

```
#####
#####

account.56.blf.subscribe_period =
account.56.dtmf.type =
account.56.dtmf.dtmf_payload =
account.56.dtmf.info_type =
account.56.100rel_enable =
account.56.subscribe_register =
account.56.subscribe_mwi =
account.56.subscribe_mwi_expires =
account.56.subscribe_mwi_to_vm =
voice_mail.number.56 = %BWVOICE-PORTAL-NUMBER-56%
account.56.display_mwi.enable =
account.56.cid_source =
account.56.cid_source_privacy =
account.56.cid_source_ppi =
account.56.session_timer.enable =
account.56.session_timer.expires =
account.56.session_timer.refresher =
account.56.enable_user_equal_phone =
account.56.srtp_encryption =
account.56.ptime =
account.56.shared_line = %BWSHAREDLINE-BINARY-56%
account.56.register_mac =
account.56.register_line =
account.56.reg_fail_retry_interval =
account.56.reg_failed_retry_min_time =
account.56.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.56.conf_type =
account.56.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-56%

account.56.sip_server_type =
account.56.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.56.register_expires_overlap =
account.56.subscribe_expires_overlap =
account.56.auto_dial_enable =
account.56.auto_dial_num =
account.56.cp_source =
account.56.transfer_refer_to_contact_header.enable =
#V80 Add
account.56.custom_ua =
account.56.callpark_enable =
account.56.check_cseq.enable =
account.56.check_to_tag.enable =
account.56.hold_use_inactive =
```

```

account.56.line_seize.expires =
account.56.update_ack_while_dialing =
account.56.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.56.always_fwd.enable =
account.56.always_fwd.target =
account.56.always_fwd.off_code =
account.56.always_fwd.on_code =
account.56.busy_fwd.enable =
account.56.busy_fwd.target =
account.56.busy_fwd.off_code =
account.56.busy_fwd.on_code =
account.56.timeout_fwd.enable =
account.56.timeout_fwd.target =
account.56.timeout_fwd.timeout =
account.56.timeout_fwd.off_code =
account.56.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.56.dnd.enable =
account.56.dnd.on_code =
account.56.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.56.reg.enable =
handset.56.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.56.xsi.user =%BWLOGIN-ID-56%
account.56.xsi.password =%XSIPASSWORD-56%
account.56.xsi.host =%XSP_ADDRESS%
account.56.xsi.server_type =
account.56.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.56.ldap.enable =
handset.56.ldap.name_filter=
handset.56.ldap.number_filter=
handset.56.ldap.host=
handset.56.ldap.port=
handset.56.ldap.base=
handset.56.ldap.user=
handset.56.ldap.password=
handset.56.ldap.max_hits=
handset.56.ldap.name_attr=
handset.56.ldap.numb_attr=
handset.56.ldap.display_name=
handset.56.ldap.version=
handset.56.ldap.call_in_lookup=
handset.56.ldap.ldap_sort=
handset.56.ldap.tls_mode=
handset.56.ldap.call_out_lookup=
handset.56.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account57 Settings
##
#####
#####

account.57.enable=%BWLIN-BINARY-57%
account.57.label=%BWEXTENSION-57%
account.57.display_name=%BWCLID-57%
account.57.auth_name=%BWAUTHUSER-57%
account.57.user_name=%BWLINPORT-57%
account.57.password=%BWAUTHPASSWORD-57%

#W80B ADD
account.57.sip_server.template =
account.57.media_transmit.enable =

account.57.alarm.template =
account.57.alarm.server =
account.57.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.57.sip_server.1.failback_mode =
account.57.sip_server.1.failback_timeout =
account.57.sip_server.1.register_on_enable =
account.57.sip_server.1.failback_subscribe.enable =
account.57.sip_server.1.invite_retry_counts =
account.57.sip_server.1.only_signal_with_registered =

account.57.sip_server.2.failback_mode =
account.57.sip_server.2.failback_timeout =
account.57.sip_server.2.register_on_enable =
account.57.sip_server.2.failback_subscribe.enable =
```

```

account.57.sip_server.2.invite_retry_counts =
account.57.sip_server.2.only_signal_with_registered =

account.57.naptr_build =
account.57.fallback.redundancy_type =
account.57.fallback.timeout =

account.57.dns_cache_type =
account.57.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.57.anonymous_call =
account.57.reject_anonymous_call =
account.57.send_anonymous_code =
account.57.anonymous_call_oncode =
account.57.anonymous_call_offcode =
account.57.send_anonymous_rejection_code =
account.57.anonymous_reject_oncode =
account.57.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.57.codec.g722.enable =
account.57.codec.g722.priority =

account.57.codec.g729.enable =
account.57.codec.g729.priority =

account.57.codec.g726_16.enable =
account.57.codec.g726_16.priority =

account.57.codec.g726_24.enable =
account.57.codec.g726_24.priority =

account.57.codec.g726_32.enable =
account.57.codec.g726_32.priority =

account.57.codec.g726_40.enable =
account.57.codec.g726_40.priority =

account.57.codec.ilbc.enable =
account.57.codec.ilbc.priority =

account.57.codec.pcmu.enable =
account.57.codec.pcmu.priority =

account.57.codec.pcma.enable =
account.57.codec.pcma.priority =

account.57.codec.opus.enable =
account.57.codec.opus.priority =

```

```
#####
#####
##                                NAT Settings
##
#####
#####

account.57.nat.nat_traversal =
account.57.nat.udp_update_enable =
account.57.nat.udp_update_time =
account.57.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.57.blf.subscribe_period =
account.57.dtmf.type =
account.57.dtmf.dtmf_payload =
account.57.dtmf.info_type =
account.57.100rel_enable =
account.57.subscribe_register =
account.57.subscribe_mwi =
account.57.subscribe_mwi_expires =
account.57.subscribe_mwi_to_vm =
voice_mail.number.57 = %BWVOICE-PORTAL-NUMBER-57%
account.57.display_mwi.enable =
account.57.cid_source =
account.57.cid_source_privacy =
account.57.cid_source_ppi =
account.57.session_timer.enable =
account.57.session_timer.expires =
account.57.session_timer.refresher =
account.57.enable_user_equal_phone =
account.57.srtp_encryption =
account.57.ptime =
account.57.shared_line = %BWSHAREDLINE-BINARY-57%
account.57.register_mac =
account.57.register_line =
account.57.reg_fail_retry_interval =
account.57.reg_failed_retry_min_time =
account.57.reg_failed_retry_max_time =

#####
#####
##                                Network Conference
##
#####
#####

account.57.conf_type =
account.57.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-57%

account.57.sip_server_type =
account.57.unregister_on_reboot =

#####
#####
##                                Register Other
##
```



```
#####
#####
##DECT V81 Add

account.57.register_expires_overlap =
account.57.subscribe_expires_overlap =
account.57.auto_dial_enable =
account.57.auto_dial_num =
account.57.cp_source =
account.57.transfer_refer_to_contact_header.enable =
#V80 Add
account.57.custom_ua =
account.57.callpark_enable =
account.57.check_cseq.enable =
account.57.check_to_tag.enable =
account.57.hold_use_inactive =
account.57.line_seize.expires =
account.57.update_ack_while_dialing =
account.57.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.57.always_fwd.enable =
account.57.always_fwd.target =
account.57.always_fwd.off_code =
account.57.always_fwd.on_code =
account.57.busy_fwd.enable =
account.57.busy_fwd.target =
account.57.busy_fwd.off_code =
account.57.busy_fwd.on_code =
account.57.timeout_fwd.enable =
account.57.timeout_fwd.target =
account.57.timeout_fwd.timeout =
account.57.timeout_fwd.off_code =
account.57.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.57.dnd.enable =
account.57.dnd.on_code =
account.57.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.57.reg.enable =
handset.57.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.57.xsi.user =%BWLOGIN-ID-57%
account.57.xsi.password =%XSIPASSWORD-57%
account.57.xsi.host =%XSP_ADDRESS%
account.57.xsi.server_type =
account.57.xsi.port =

#####
#####
##          LADP
##
#####
handset.57.ldap.enable =
handset.57.ldap.name_filter=
handset.57.ldap.number_filter=
handset.57.ldap.host=
handset.57.ldap.port=
handset.57.ldap.base=
handset.57.ldap.user=
handset.57.ldap.password=
handset.57.ldap.max_hits=
handset.57.ldap.name_attr=
handset.57.ldap.numb_attr=
handset.57.ldap.display_name=
handset.57.ldap.version=
handset.57.ldap.call_in_lookup=
handset.57.ldap.ldap_sort=
handset.57.ldap.tls_mode=
handset.57.ldap.call_out_lookup=
handset.57.ldap.incoming_call_special_search.enable=

#####
#####
##          Account58 Settings
##
#####

account.58.enable=%BWLINE-BINARY-58%
account.58.label=%BWEXTENSION-58%
account.58.display_name=%BWCLID-58%
account.58.auth_name=%BWAUTHUSER-58%
account.58.user_name=%BWLINEPORT-58%
account.58.password=%BWAUTHPASSWORD-58%

#W80B ADD
account.58.sip_server.template =
account.58.media_transmit.enable =

account.58.alarm.template =
account.58.alarm.server =
account.58.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.58.sip_server.1.failback_mode =
account.58.sip_server.1.failback_timeout =
account.58.sip_server.1.register_on_enable =
account.58.sip_server.1.failback_subscribe.enable =
account.58.sip_server.1.invite_retry_counts =
account.58.sip_server.1.only_signal_with_registered =

account.58.sip_server.2.failback_mode =
account.58.sip_server.2.failback_timeout =
account.58.sip_server.2.register_on_enable =
account.58.sip_server.2.failback_subscribe.enable =
account.58.sip_server.2.invite_retry_counts =
account.58.sip_server.2.only_signal_with_registered =

account.58.naptr_build =
account.58.fallback.redundancy_type =
account.58.fallback.timeout =

account.58.dns_cache_type =
account.58.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.58.anonymous_call =
account.58.reject_anonymous_call =
account.58.send_anonymous_code =
account.58.anonymous_call_oncode =
account.58.anonymous_call_offcode =
account.58.send_anonymous_rejection_code =
account.58.anonymous_reject_oncode =
account.58.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.58.codec.g722.enable =
account.58.codec.g722.priority =

account.58.codec.g729.enable =
account.58.codec.g729.priority =

account.58.codec.g726_16.enable =
account.58.codec.g726_16.priority =

account.58.codec.g726_24.enable =
account.58.codec.g726_24.priority =

account.58.codec.g726_32.enable =
account.58.codec.g726_32.priority =
```

```

account.58.codec.g726_40.enable =
account.58.codec.g726_40.priority =

account.58.codec.ilbc.enable =
account.58.codec.ilbc.priority =

account.58.codec.pcmu.enable =
account.58.codec.pcmu.priority =

account.58.codec.pcma.enable =
account.58.codec.pcma.priority =

account.58.codec.opus.enable =
account.58.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.58.nat.nat_traversal =
account.58.nat.udp_update_enable =
account.58.nat.udp_update_time =
account.58.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.58.blf.subscribe_period =
account.58.dtmf.type =
account.58.dtmf.dtmf_payload =
account.58.dtmf.info_type =
account.58.100rel_enable =
account.58.subscribe_register =
account.58.subscribe_mwi =
account.58.subscribe_mwi_expires =
account.58.subscribe_mwi_to_vm =
voice_mail.number.58 = %BWVOICE-PORTAL-NUMBER-58%
account.58.display_mwi.enable =
account.58.cid_source =
account.58.cid_source_privacy =
account.58.cid_source_ppi =
account.58.session_timer.enable =
account.58.session_timer.expires =
account.58.session_timer.refresher =
account.58.enable_user_equal_phone =
account.58.srtp_encryption =
account.58.ptime =
account.58.shared_line = %BWSHAREDLINE-BINARY-58%
account.58.register_mac =
account.58.register_line =
account.58.reg_fail_retry_interval =
account.58.reg_failed_retry_min_time =
account.58.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.58.conf_type =
account.58.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-58%

account.58.sip_server_type =
account.58.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.58.register_expires_overlap =
account.58.subscribe_expires_overlap =
account.58.auto_dial_enable =
account.58.auto_dial_num =
account.58.cp_source =
account.58.transfer_refer_to_contact_header.enable =
#V80 Add
account.58.custom_ua =
account.58.callpark_enable =
account.58.check_cseq.enable =
account.58.check_to_tag.enable =
account.58.hold_use_inactive =
account.58.line_seize.expires =
account.58.update_ack_while_dialing =
account.58.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.58.always_fwd.enable =
account.58.always_fwd.target =
account.58.always_fwd.off_code =
account.58.always_fwd.on_code =
account.58.busy_fwd.enable =
account.58.busy_fwd.target =
account.58.busy_fwd.off_code =
account.58.busy_fwd.on_code =
account.58.timeout_fwd.enable =
account.58.timeout_fwd.target =
account.58.timeout_fwd.timeout =
account.58.timeout_fwd.off_code =
account.58.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```

account.58.dnd.enable =
account.58.dnd.on_code =
account.58.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.58.reg.enable =
handset.58.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.58.xsi.user =%BWLOGIN-ID-58%
account.58.xsi.password =%XSIPASSWORD-58%
account.58.xsi.host =%XSP_ADDRESS%
account.58.xsi.server_type =
account.58.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.58.ldap.enable =
handset.58.ldap.name_filter=
handset.58.ldap.number_filter=
handset.58.ldap.host=
handset.58.ldap.port=
handset.58.ldap.base=
handset.58.ldap.user=
handset.58.ldap.password=
handset.58.ldap.max_hits=
handset.58.ldap.name_attr=
handset.58.ldap.numb_attr=
handset.58.ldap.display_name=
handset.58.ldap.version=
handset.58.ldap.call_in_lookup=
handset.58.ldap.ldap_sort=
handset.58.ldap.tls_mode=
handset.58.ldap.call_out_lookup=
handset.58.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account59 Settings
##
#####
#####

```

```

account.59.enable=%BWLIN-BINARY-59%
account.59.label=%BWEXTENSION-59%
account.59.display_name=%BWCLID-59%
account.59.auth_name=%BWAUTHUSER-59%
account.59.user_name=%BWLINPORT-59%
account.59.password=%BWAUTHPASSWORD-59%

#W80B ADD
account.59.sip_server.template =
account.59.media_transmit.enable =

account.59.alarm.template =
account.59.alarm.server =
account.59.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.59.sip_server.1.failback_mode =
account.59.sip_server.1.failback_timeout =
account.59.sip_server.1.register_on_enable =
account.59.sip_server.1.failback_subscribe.enable =
account.59.sip_server.1.invite_retry_counts =
account.59.sip_server.1.only_signal_with_registered =

account.59.sip_server.2.failback_mode =
account.59.sip_server.2.failback_timeout =
account.59.sip_server.2.register_on_enable =
account.59.sip_server.2.failback_subscribe.enable =
account.59.sip_server.2.invite_retry_counts =
account.59.sip_server.2.only_signal_with_registered =

account.59.naptr_build =
account.59.fallback.redundancy_type =
account.59.fallback.timeout =

account.59.dns_cache_type =
account.59.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.59.anonymous_call =
account.59.reject_anonymous_call =
account.59.send_anonymous_code =
account.59.anonymous_call_oncode =
account.59.anonymous_call_offcode =
account.59.send_anonymous_rejection_code =
account.59.anonymous_reject_oncode =
account.59.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.59.codec.g722.enable =
account.59.codec.g722.priority =

account.59.codec.g729.enable =
account.59.codec.g729.priority =

account.59.codec.g726_16.enable =
account.59.codec.g726_16.priority =

account.59.codec.g726_24.enable =
account.59.codec.g726_24.priority =

account.59.codec.g726_32.enable =
account.59.codec.g726_32.priority =

account.59.codec.g726_40.enable =
account.59.codec.g726_40.priority =

account.59.codec.ilbc.enable =
account.59.codec.ilbc.priority =

account.59.codec.pcmu.enable =
account.59.codec.pcmu.priority =

account.59.codec.pcma.enable =
account.59.codec.pcma.priority =

account.59.codec.opus.enable =
account.59.codec.opus.priority =

#####
#####
##                                NAT Settings
##
#####
#####

account.59.nat.nat_traversal =
account.59.nat.udp_update_enable =
account.59.nat.udp_update_time =
account.59.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.59.blf.subscribe_period =
account.59.dtmf.type =
account.59.dtmf.dtmf_payload =
account.59.dtmf.info_type =
account.59.100rel_enable =
account.59.subscribe_register =
account.59.subscribe_mwi =
account.59.subscribe_mwi_expires =
account.59.subscribe_mwi_to_vm =
voice_mail.number.59 = %BWVOICE-PORTAL-NUMBER-59%
account.59.display_mwi.enable =
account.59.cid_source =
```



```

account.59.cid_source_privacy =
account.59.cid_source_ppi =
account.59.session_timer.enable =
account.59.session_timer.expires =
account.59.session_timer.refresher =
account.59.enable_user_equal_phone =
account.59.srtp_encryption =
account.59.ptime =
account.59.shared_line = %BWSHAREDLINE-BINARY-59%
account.59.register_mac =
account.59.register_line =
account.59.reg_fail_retry_interval =
account.59.reg_failed_retry_min_time =
account.59.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.59.conf_type =
account.59.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-59%

account.59.sip_server_type =
account.59.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.59.register_expires_overlap =
account.59.subscribe_expires_overlap =
account.59.auto_dial_enable =
account.59.auto_dial_num =
account.59.cp_source =
account.59.transfer_refer_to_contact_header.enable =
#V80 Add
account.59.custom_ua =
account.59.callpark_enable =
account.59.check_cseq.enable =
account.59.check_to_tag.enable =
account.59.hold_use_inactive =
account.59.line_seize.expires =
account.59.update_ack_while_dialing =
account.59.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.59.always_fwd.enable =
account.59.always_fwd.target =
account.59.always_fwd.off_code =
account.59.always_fwd.on_code =
account.59.busy_fwd.enable =

```

```

account.59.busy_fwd.target =
account.59.busy_fwd.off_code =
account.59.busy_fwd.on_code =
account.59.timeout_fwd.enable =
account.59.timeout_fwd.target =
account.59.timeout_fwd.timeout =
account.59.timeout_fwd.off_code =
account.59.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.59.dnd.enable =
account.59.dnd.on_code =
account.59.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.59.reg.enable =
handset.59.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.59.xsi.user =%BWLOGIN-ID-59%
account.59.xsi.password =%XSIPASSWORD-59%
account.59.xsi.host =%XSP_ADDRESS%
account.59.xsi.server_type =
account.59.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.59.ldap.enable =
handset.59.ldap.name_filter=
handset.59.ldap.number_filter=
handset.59.ldap.host=
handset.59.ldap.port=
handset.59.ldap.base=
handset.59.ldap.user=
handset.59.ldap.password=
handset.59.ldap.max_hits=
handset.59.ldap.name_attr=
handset.59.ldap.numb_attr=
handset.59.ldap.display_name=
handset.59.ldap.version=
handset.59.ldap.call_in_lookup=

```

```

handset.59.ldap.ldap_sort=
handset.59.ldap.tls_mode=
handset.59.ldap.call_out_lookup=
handset.59.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account60 Settings
##
#####
#####

account.60.enable=%BWLIN-BINARY-60%
account.60.label=%BWEXTENSION-60%
account.60.display_name=%BWCLID-60%
account.60.auth_name=%BWAUTHUSER-60%
account.60.user_name=%BWLINPORT-60%
account.60.password=%BWAUTHPASSWORD-60%

#W80B ADD
account.60.sip_server.template =
account.60.media_transmit.enable =

account.60.alarm.template =
account.60.alarm.server =
account.60.alarm.number =

#####
#####
##                                     Failback
##
##
#####
#####
account.60.sip_server.1.failback_mode =
account.60.sip_server.1.failback_timeout =
account.60.sip_server.1.register_on_enable =
account.60.sip_server.1.failback_subscribe.enable =
account.60.sip_server.1.invite_retry_counts =
account.60.sip_server.1.only_signal_with_registered =

account.60.sip_server.2.failback_mode =
account.60.sip_server.2.failback_timeout =
account.60.sip_server.2.register_on_enable =
account.60.sip_server.2.failback_subscribe.enable =
account.60.sip_server.2.invite_retry_counts =
account.60.sip_server.2.only_signal_with_registered =

account.60.naptr_build =
account.60.fallback.redundancy_type =
account.60.fallback.timeout =

account.60.dns_cache_type =
account.60.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
##
#####
#####

```

```

account.60.anonymous_call =
account.60.reject_anonymous_call =
account.60.send_anonymous_code =
account.60.anonymous_call_oncode =
account.60.anonymous_call_offcode =
account.60.send_anonymous_rejection_code =
account.60.anonymous_reject_oncode =
account.60.anonymous_reject_offcode =

#####
#####
##
##                                     Codec
##
#####
#####
account.60.codec.g722.enable =
account.60.codec.g722.priority =

account.60.codec.g729.enable =
account.60.codec.g729.priority =

account.60.codec.g726_16.enable =
account.60.codec.g726_16.priority =

account.60.codec.g726_24.enable =
account.60.codec.g726_24.priority =

account.60.codec.g726_32.enable =
account.60.codec.g726_32.priority =

account.60.codec.g726_40.enable =
account.60.codec.g726_40.priority =

account.60.codec.ilbc.enable =
account.60.codec.ilbc.priority =

account.60.codec.pcmu.enable =
account.60.codec.pcmu.priority =

account.60.codec.pcma.enable =
account.60.codec.pcma.priority =

account.60.codec.opus.enable =
account.60.codec.opus.priority =

#####
#####
##
##                                     NAT Settings
##
#####
#####

account.60.nat.nat_traversal =
account.60.nat.udp_update_enable =
account.60.nat.udp_update_time =
account.60.nat.rport =

#####
#####
##
##                                     Register Advanced
##

```

```
#####
#####

account.60.blf.subscribe_period =
account.60.dtmf.type =
account.60.dtmf.dtmf_payload =
account.60.dtmf.info_type =
account.60.100rel_enable =
account.60.subscribe_register =
account.60.subscribe_mwi =
account.60.subscribe_mwi_expires =
account.60.subscribe_mwi_to_vm =
voice_mail.number.60 = %BWVOICE-PORTAL-NUMBER-60%
account.60.display_mwi.enable =
account.60.cid_source =
account.60.cid_source_privacy =
account.60.cid_source_ppi =
account.60.session_timer.enable =
account.60.session_timer.expires =
account.60.session_timer.refresher =
account.60.enable_user_equal_phone =
account.60.srtp_encryption =
account.60.ptime =
account.60.shared_line = %BWSHAREDLINE-BINARY-60%
account.60.register_mac =
account.60.register_line =
account.60.reg_fail_retry_interval =
account.60.reg_failed_retry_min_time =
account.60.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.60.conf_type =
account.60.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-60%

account.60.sip_server_type =
account.60.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.60.register_expires_overlap =
account.60.subscribe_expires_overlap =
account.60.auto_dial_enable =
account.60.auto_dial_num =
account.60.cp_source =
account.60.transfer_refer_to_contact_header.enable =
#V80 Add
account.60.custom_ua =
account.60.callpark_enable =
account.60.check_cseq.enable =
account.60.check_to_tag.enable =
account.60.hold_use_inactive =
```

```

account.60.line_seize.expires =
account.60.update_ack_while_dialing =
account.60.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.60.always_fwd.enable =
account.60.always_fwd.target =
account.60.always_fwd.off_code =
account.60.always_fwd.on_code =
account.60.busy_fwd.enable =
account.60.busy_fwd.target =
account.60.busy_fwd.off_code =
account.60.busy_fwd.on_code =
account.60.timeout_fwd.enable =
account.60.timeout_fwd.target =
account.60.timeout_fwd.timeout =
account.60.timeout_fwd.off_code =
account.60.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.60.dnd.enable =
account.60.dnd.on_code =
account.60.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.60.reg.enable =
handset.60.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####
account.60.xsi.user =%BWLOGIN-ID-60%
account.60.xsi.password =%XSIPASSWORD-60%
account.60.xsi.host =%XSP_ADDRESS%
account.60.xsi.server_type =
account.60.xsi.port =

#####
#####
##                                LADP
##

```

```
#####
#####
handset.60.ldap.enable =
handset.60.ldap.name_filter=
handset.60.ldap.number_filter=
handset.60.ldap.host=
handset.60.ldap.port=
handset.60.ldap.base=
handset.60.ldap.user=
handset.60.ldap.password=
handset.60.ldap.max_hits=
handset.60.ldap.name_attr=
handset.60.ldap.numb_attr=
handset.60.ldap.display_name=
handset.60.ldap.version=
handset.60.ldap.call_in_lookup=
handset.60.ldap.ldap_sort=
handset.60.ldap.tls_mode=
handset.60.ldap.call_out_lookup=
handset.60.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account61 Settings
##
#####
#####

account.61.enable=%BWLIN-BINARY-61%
account.61.label=%BWEXTENSION-61%
account.61.display_name=%BWCLID-61%
account.61.auth_name=%BWAUTHUSER-61%
account.61.user_name=%BWLINPORT-61%
account.61.password=%BWAUTHPASSWORD-61%

#W80B ADD
account.61.sip_server.template =
account.61.media_transmit.enable =

account.61.alarm.template =
account.61.alarm.server =
account.61.alarm.number =

#####
#####
##                               Failback
##
#####
#####

account.61.sip_server.1.failback_mode =
account.61.sip_server.1.failback_timeout =
account.61.sip_server.1.register_on_enable =
account.61.sip_server.1.failback_subscribe.enable =
account.61.sip_server.1.invite_retry_counts =
account.61.sip_server.1.only_signal_with_registered =

account.61.sip_server.2.failback_mode =
account.61.sip_server.2.failback_timeout =
account.61.sip_server.2.register_on_enable =
account.61.sip_server.2.failback_subscribe.enable =
```

```
account.61.sip_server.2.invite_retry_counts =
account.61.sip_server.2.only_signal_with_registered =

account.61.naptr_build =
account.61.fallback.redundancy_type =
account.61.fallback.timeout =

account.61.dns_cache_type =
account.61.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.61.anonymous_call =
account.61.reject_anonymous_call =
account.61.send_anonymous_code =
account.61.anonymous_call_oncode =
account.61.anonymous_call_offcode =
account.61.send_anonymous_rejection_code =
account.61.anonymous_reject_oncode =
account.61.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.61.codec.g722.enable =
account.61.codec.g722.priority =

account.61.codec.g729.enable =
account.61.codec.g729.priority =

account.61.codec.g726_16.enable =
account.61.codec.g726_16.priority =

account.61.codec.g726_24.enable =
account.61.codec.g726_24.priority =

account.61.codec.g726_32.enable =
account.61.codec.g726_32.priority =

account.61.codec.g726_40.enable =
account.61.codec.g726_40.priority =

account.61.codec.ilbc.enable =
account.61.codec.ilbc.priority =

account.61.codec.pcmu.enable =
account.61.codec.pcmu.priority =

account.61.codec.pcma.enable =
account.61.codec.pcma.priority =

account.61.codec.opus.enable =
account.61.codec.opus.priority =
```



```
#####
#####
##                               NAT Settings
##
#####
#####

account.61.nat.nat_traversal =
account.61.nat.udp_update_enable =
account.61.nat.udp_update_time =
account.61.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.61.blf.subscribe_period =
account.61.dtmf.type =
account.61.dtmf.dtmf_payload =
account.61.dtmf.info_type =
account.61.100rel_enable =
account.61.subscribe_register =
account.61.subscribe_mwi =
account.61.subscribe_mwi_expires =
account.61.subscribe_mwi_to_vm =
voice_mail.number.61 = %BWVOICE-PORTAL-NUMBER-61%
account.61.display_mwi.enable =
account.61.cid_source =
account.61.cid_source_privacy =
account.61.cid_source_ppi =
account.61.session_timer.enable =
account.61.session_timer.expires =
account.61.session_timer.refreshes =
account.61.enable_user_equal_phone =
account.61.srtp_encryption =
account.61.ptime =
account.61.shared_line = %BWSHAREDLINE-BINARY-61%
account.61.register_mac =
account.61.register_line =
account.61.reg_fail_retry_interval =
account.61.reg_failed_retry_min_time =
account.61.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.61.conf_type =
account.61.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-61%

account.61.sip_server_type =
account.61.unregister_on_reboot =

#####
#####
##                               Register Other
##
```

```
#####
#####
##DECT V81 Add

account.61.register_expires_overlap =
account.61.subscribe_expires_overlap =
account.61.auto_dial_enable =
account.61.auto_dial_num =
account.61.cp_source =
account.61.transfer_refer_to_contact_header.enable =
#V80 Add
account.61.custom_ua =
account.61.callpark_enable =
account.61.check_cseq.enable =
account.61.check_to_tag.enable =
account.61.hold_use_inactive =
account.61.line_seize.expires =
account.61.update_ack_while_dialing =
account.61.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.61.always_fwd.enable =
account.61.always_fwd.target =
account.61.always_fwd.off_code =
account.61.always_fwd.on_code =
account.61.busy_fwd.enable =
account.61.busy_fwd.target =
account.61.busy_fwd.off_code =
account.61.busy_fwd.on_code =
account.61.timeout_fwd.enable =
account.61.timeout_fwd.target =
account.61.timeout_fwd.timeout =
account.61.timeout_fwd.off_code =
account.61.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.61.dnd.enable =
account.61.dnd.on_code =
account.61.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.61.reg.enable =
handset.61.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.61.xsi.user =%BWLOGIN-ID-61%
account.61.xsi.password =%XSIPASSWORD-61%
account.61.xsi.host =%XSP_ADDRESS%
account.61.xsi.server_type =
account.61.xsi.port =

#####
#####
##          LADP
##
#####
handset.61.ldap.enable =
handset.61.ldap.name_filter=
handset.61.ldap.number_filter=
handset.61.ldap.host=
handset.61.ldap.port=
handset.61.ldap.base=
handset.61.ldap.user=
handset.61.ldap.password=
handset.61.ldap.max_hits=
handset.61.ldap.name_attr=
handset.61.ldap.numb_attr=
handset.61.ldap.display_name=
handset.61.ldap.version=
handset.61.ldap.call_in_lookup=
handset.61.ldap.ldap_sort=
handset.61.ldap.tls_mode=
handset.61.ldap.call_out_lookup=
handset.61.ldap.incoming_call_special_search.enable=

#####
#####
##          Account62 Settings
##
#####

account.62.enable=%BWLINE-BINARY-62%
account.62.label=%BWEXTENSION-62%
account.62.display_name=%BWCLID-62%
account.62.auth_name=%BWAUTHUSER-62%
account.62.user_name=%BWLINEPORT-62%
account.62.password=%BWAUTHPASSWORD-62%

#W80B ADD
account.62.sip_server.template =
account.62.media_transmit.enable =

account.62.alarm.template =
account.62.alarm.server =
account.62.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.62.sip_server.1.failback_mode =
account.62.sip_server.1.failback_timeout =
account.62.sip_server.1.register_on_enable =
account.62.sip_server.1.failback_subscribe.enable =
account.62.sip_server.1.invite_retry_counts =
account.62.sip_server.1.only_signal_with_registered =

account.62.sip_server.2.failback_mode =
account.62.sip_server.2.failback_timeout =
account.62.sip_server.2.register_on_enable =
account.62.sip_server.2.failback_subscribe.enable =
account.62.sip_server.2.invite_retry_counts =
account.62.sip_server.2.only_signal_with_registered =

account.62.naptr_build =
account.62.fallback.redundancy_type =
account.62.fallback.timeout =

account.62.dns_cache_type =
account.62.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.62.anonymous_call =
account.62.reject_anonymous_call =
account.62.send_anonymous_code =
account.62.anonymous_call_oncode =
account.62.anonymous_call_offcode =
account.62.send_anonymous_rejection_code =
account.62.anonymous_reject_oncode =
account.62.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.62.codec.g722.enable =
account.62.codec.g722.priority =

account.62.codec.g729.enable =
account.62.codec.g729.priority =

account.62.codec.g726_16.enable =
account.62.codec.g726_16.priority =

account.62.codec.g726_24.enable =
account.62.codec.g726_24.priority =

account.62.codec.g726_32.enable =
account.62.codec.g726_32.priority =
```

```

account.62.codec.g726_40.enable =
account.62.codec.g726_40.priority =

account.62.codec.ilbc.enable =
account.62.codec.ilbc.priority =

account.62.codec.pcmu.enable =
account.62.codec.pcmu.priority =

account.62.codec.pcma.enable =
account.62.codec.pcma.priority =

account.62.codec.opus.enable =
account.62.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.62.nat.nat_traversal =
account.62.nat.udp_update_enable =
account.62.nat.udp_update_time =
account.62.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.62.blf.subscribe_period =
account.62.dtmf.type =
account.62.dtmf.dtmf_payload =
account.62.dtmf.info_type =
account.62.100rel_enable =
account.62.subscribe_register =
account.62.subscribe_mwi =
account.62.subscribe_mwi_expires =
account.62.subscribe_mwi_to_vm =
voice_mail.number.62 = %BWVOICE-PORTAL-NUMBER-62%
account.62.display_mwi.enable =
account.62.cid_source =
account.62.cid_source_privacy =
account.62.cid_source_ppi =
account.62.session_timer.enable =
account.62.session_timer.expires =
account.62.session_timer.refresher =
account.62.enable_user_equal_phone =
account.62.srtp_encryption =
account.62.ptime =
account.62.shared_line = %BWSHAREDLINE-BINARY-62%
account.62.register_mac =
account.62.register_line =
account.62.reg_fail_retry_interval =
account.62.reg_failed_retry_min_time =
account.62.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.62.conf_type =
account.62.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-62%

account.62.sip_server_type =
account.62.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.62.register_expires_overlap =
account.62.subscribe_expires_overlap =
account.62.auto_dial_enable =
account.62.auto_dial_num =
account.62.cp_source =
account.62.transfer_refer_to_contact_header.enable =
#V80 Add
account.62.custom_ua =
account.62.callpark_enable =
account.62.check_cseq.enable =
account.62.check_to_tag.enable =
account.62.hold_use_inactive =
account.62.line_seize.expires =
account.62.update_ack_while_dialing =
account.62.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.62.always_fwd.enable =
account.62.always_fwd.target =
account.62.always_fwd.off_code =
account.62.always_fwd.on_code =
account.62.busy_fwd.enable =
account.62.busy_fwd.target =
account.62.busy_fwd.off_code =
account.62.busy_fwd.on_code =
account.62.timeout_fwd.enable =
account.62.timeout_fwd.target =
account.62.timeout_fwd.timeout =
account.62.timeout_fwd.off_code =
account.62.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```

account.62.dnd.enable =
account.62.dnd.on_code =
account.62.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.62.reg.enable =
handset.62.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.62.xsi.user =%BWLOGIN-ID-62%
account.62.xsi.password =%XSIPASSWORD-62%
account.62.xsi.host =%XSP_ADDRESS%
account.62.xsi.server_type =
account.62.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.62.ldap.enable =
handset.62.ldap.name_filter=
handset.62.ldap.number_filter=
handset.62.ldap.host=
handset.62.ldap.port=
handset.62.ldap.base=
handset.62.ldap.user=
handset.62.ldap.password=
handset.62.ldap.max_hits=
handset.62.ldap.name_attr=
handset.62.ldap.numb_attr=
handset.62.ldap.display_name=
handset.62.ldap.version=
handset.62.ldap.call_in_lookup=
handset.62.ldap.ldap_sort=
handset.62.ldap.tls_mode=
handset.62.ldap.call_out_lookup=
handset.62.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account63 Settings
##
#####
#####

```

```

account.63.enable=%BWLIN-BINARY-63%
account.63.label=%BWEXTENSION-63%
account.63.display_name=%BWCLID-63%
account.63.auth_name=%BWAUTHUSER-63%
account.63.user_name=%BWLINPORT-63%
account.63.password=%BWAUTHPASSWORD-63%

#W80B ADD
account.63.sip_server.template =
account.63.media_transmit.enable =

account.63.alarm.template =
account.63.alarm.server =
account.63.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.63.sip_server.1.failback_mode =
account.63.sip_server.1.failback_timeout =
account.63.sip_server.1.register_on_enable =
account.63.sip_server.1.failback_subscribe.enable =
account.63.sip_server.1.invite_retry_counts =
account.63.sip_server.1.only_signal_with_registered =

account.63.sip_server.2.failback_mode =
account.63.sip_server.2.failback_timeout =
account.63.sip_server.2.register_on_enable =
account.63.sip_server.2.failback_subscribe.enable =
account.63.sip_server.2.invite_retry_counts =
account.63.sip_server.2.only_signal_with_registered =

account.63.naptr_build =
account.63.fallback.redundancy_type =
account.63.fallback.timeout =

account.63.dns_cache_type =
account.63.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.63.anonymous_call =
account.63.reject_anonymous_call =
account.63.send_anonymous_code =
account.63.anonymous_call_oncode =
account.63.anonymous_call_offcode =
account.63.send_anonymous_rejection_code =
account.63.anonymous_reject_oncode =
account.63.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```



```
#####
#####
account.63.codec.g722.enable =
account.63.codec.g722.priority =

account.63.codec.g729.enable =
account.63.codec.g729.priority =

account.63.codec.g726_16.enable =
account.63.codec.g726_16.priority =

account.63.codec.g726_24.enable =
account.63.codec.g726_24.priority =

account.63.codec.g726_32.enable =
account.63.codec.g726_32.priority =

account.63.codec.g726_40.enable =
account.63.codec.g726_40.priority =

account.63.codec.ilbc.enable =
account.63.codec.ilbc.priority =

account.63.codec.pcmu.enable =
account.63.codec.pcmu.priority =

account.63.codec.pcma.enable =
account.63.codec.pcma.priority =

account.63.codec.opus.enable =
account.63.codec.opus.priority =

#####
#####
##                                NAT Settings
##
#####
#####

account.63.nat.nat_traversal =
account.63.nat.udp_update_enable =
account.63.nat.udp_update_time =
account.63.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.63.blf.subscribe_period =
account.63.dtmf.type =
account.63.dtmf.dtmf_payload =
account.63.dtmf.info_type =
account.63.100rel_enable =
account.63.subscribe_register =
account.63.subscribe_mwi =
account.63.subscribe_mwi_expires =
account.63.subscribe_mwi_to_vm =
voice_mail.number.63 = %BWVOICE-PORTAL-NUMBER-63%
account.63.display_mwi.enable =
account.63.cid_source =
```

```

account.63.cid_source_privacy =
account.63.cid_source_ppi =
account.63.session_timer.enable =
account.63.session_timer.expires =
account.63.session_timer.refresher =
account.63.enable_user_equal_phone =
account.63.srtp_encryption =
account.63.ptime =
account.63.shared_line = %BWSHAREDLINE-BINARY-63%
account.63.register_mac =
account.63.register_line =
account.63.reg_fail_retry_interval =
account.63.reg_failed_retry_min_time =
account.63.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.63.conf_type =
account.63.conf_uri = %BWNWORK-CONFERENCE-SIPURI-63%

account.63.sip_server_type =
account.63.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.63.register_expires_overlap =
account.63.subscribe_expires_overlap =
account.63.auto_dial_enable =
account.63.auto_dial_num =
account.63.cp_source =
account.63.transfer_refer_to_contact_header.enable =
#V80 Add
account.63.custom_ua =
account.63.callpark_enable =
account.63.check_cseq.enable =
account.63.check_to_tag.enable =
account.63.hold_use_inactive =
account.63.line_seize.expires =
account.63.update_ack_while_dialing =
account.63.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.63.always_fwd.enable =
account.63.always_fwd.target =
account.63.always_fwd.off_code =
account.63.always_fwd.on_code =
account.63.busy_fwd.enable =

```

```
account.63.busy_fwd.target =
account.63.busy_fwd.off_code =
account.63.busy_fwd.on_code =
account.63.timeout_fwd.enable =
account.63.timeout_fwd.target =
account.63.timeout_fwd.timeout =
account.63.timeout_fwd.off_code =
account.63.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.63.dnd.enable =
account.63.dnd.on_code =
account.63.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.63.reg.enable =
handset.63.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.63.xsi.user =%BWLOGIN-ID-63%
account.63.xsi.password =%XSIPASSWORD-63%
account.63.xsi.host =%XSP_ADDRESS%
account.63.xsi.server_type =
account.63.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.63.ldap.enable =
handset.63.ldap.name_filter=
handset.63.ldap.number_filter=
handset.63.ldap.host=
handset.63.ldap.port=
handset.63.ldap.base=
handset.63.ldap.user=
handset.63.ldap.password=
handset.63.ldap.max_hits=
handset.63.ldap.name_attr=
handset.63.ldap.numb_attr=
handset.63.ldap.display_name=
handset.63.ldap.version=
handset.63.ldap.call_in_lookup=
```

```

handset.63.ldap.ldap_sort=
handset.63.ldap.tls_mode=
handset.63.ldap.call_out_lookup=
handset.63.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account64 Settings
##
#####
#####

account.64.enable=%BWLIN-BINARY-64%
account.64.label=%BWEXTENSION-64%
account.64.display_name=%BWCLID-64%
account.64.auth_name=%BWAUTHUSER-64%
account.64.user_name=%BWLINPORT-64%
account.64.password=%BWAUTHPASSWORD-64%

#W80B ADD
account.64.sip_server.template =
account.64.media_transmit.enable =

account.64.alarm.template =
account.64.alarm.server =
account.64.alarm.number =

#####
#####
##                                     Failback
##
##
#####
#####
account.64.sip_server.1.failback_mode =
account.64.sip_server.1.failback_timeout =
account.64.sip_server.1.register_on_enable =
account.64.sip_server.1.failback_subscribe.enable =
account.64.sip_server.1.invite_retry_counts =
account.64.sip_server.1.only_signal_with_registered =

account.64.sip_server.2.failback_mode =
account.64.sip_server.2.failback_timeout =
account.64.sip_server.2.register_on_enable =
account.64.sip_server.2.failback_subscribe.enable =
account.64.sip_server.2.invite_retry_counts =
account.64.sip_server.2.only_signal_with_registered =

account.64.naptr_build =
account.64.fallback.redundancy_type =
account.64.fallback.timeout =

account.64.dns_cache_type =
account.64.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
##
#####
#####

```

```
account.64.anonymous_call =
account.64.reject_anonymous_call =
account.64.send_anonymous_code =
account.64.anonymous_call_oncode =
account.64.anonymous_call_offcode =
account.64.send_anonymous_rejection_code =
account.64.anonymous_reject_oncode =
account.64.anonymous_reject_offcode =

#####
#####
##
##                               Codec
##
#####
#####
account.64.codec.g722.enable =
account.64.codec.g722.priority =

account.64.codec.g729.enable =
account.64.codec.g729.priority =

account.64.codec.g726_16.enable =
account.64.codec.g726_16.priority =

account.64.codec.g726_24.enable =
account.64.codec.g726_24.priority =

account.64.codec.g726_32.enable =
account.64.codec.g726_32.priority =

account.64.codec.g726_40.enable =
account.64.codec.g726_40.priority =

account.64.codec.ilbc.enable =
account.64.codec.ilbc.priority =

account.64.codec.pcmu.enable =
account.64.codec.pcmu.priority =

account.64.codec.pcma.enable =
account.64.codec.pcma.priority =

account.64.codec.opus.enable =
account.64.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####
account.64.nat.nat_traversal =
account.64.nat.udp_update_enable =
account.64.nat.udp_update_time =
account.64.nat.rport =

#####
#####
##
##                               Register Advanced
##
```

```
#####
#####

account.64.blf.subscribe_period =
account.64.dtmf.type =
account.64.dtmf.dtmf_payload =
account.64.dtmf.info_type =
account.64.100rel_enable =
account.64.subscribe_register =
account.64.subscribe_mwi =
account.64.subscribe_mwi_expires =
account.64.subscribe_mwi_to_vm =
voice_mail.number.64 = %BWVOICE-PORTAL-NUMBER-64%
account.64.display_mwi.enable =
account.64.cid_source =
account.64.cid_source_privacy =
account.64.cid_source_ppi =
account.64.session_timer.enable =
account.64.session_timer.expires =
account.64.session_timer.refresher =
account.64.enable_user_equal_phone =
account.64.srtp_encryption =
account.64.ptime =
account.64.shared_line = %BWSHAREDLINE-BINARY-64%
account.64.register_mac =
account.64.register_line =
account.64.reg_fail_retry_interval =
account.64.reg_failed_retry_min_time =
account.64.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.64.conf_type =
account.64.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-64%

account.64.sip_server_type =
account.64.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.64.register_expires_overlap =
account.64.subscribe_expires_overlap =
account.64.auto_dial_enable =
account.64.auto_dial_num =
account.64.cp_source =
account.64.transfer_refer_to_contact_header.enable =
#V80 Add
account.64.custom_ua =
account.64.callpark_enable =
account.64.check_cseq.enable =
account.64.check_to_tag.enable =
account.64.hold_use_inactive =
```

```

account.64.line_seize.expires =
account.64.update_ack_while_dialing =
account.64.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.64.always_fwd.enable =
account.64.always_fwd.target =
account.64.always_fwd.off_code =
account.64.always_fwd.on_code =
account.64.busy_fwd.enable =
account.64.busy_fwd.target =
account.64.busy_fwd.off_code =
account.64.busy_fwd.on_code =
account.64.timeout_fwd.enable =
account.64.timeout_fwd.target =
account.64.timeout_fwd.timeout =
account.64.timeout_fwd.off_code =
account.64.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.64.dnd.enable =
account.64.dnd.on_code =
account.64.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.64.reg.enable =
handset.64.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.64.xsi.user =%BWLOGIN-ID-64%
account.64.xsi.password =%XSIPASSWORD-64%
account.64.xsi.host =%XSP_ADDRESS%
account.64.xsi.server_type =
account.64.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.64.ldap.enable =
handset.64.ldap.name_filter=
handset.64.ldap.number_filter=
handset.64.ldap.host=
handset.64.ldap.port=
handset.64.ldap.base=
handset.64.ldap.user=
handset.64.ldap.password=
handset.64.ldap.max_hits=
handset.64.ldap.name_attr=
handset.64.ldap.numb_attr=
handset.64.ldap.display_name=
handset.64.ldap.version=
handset.64.ldap.call_in_lookup=
handset.64.ldap.ldap_sort=
handset.64.ldap.tls_mode=
handset.64.ldap.call_out_lookup=
handset.64.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account65 Settings
##
#####
#####

account.65.enable=%BWLIN-BINARY-65%
account.65.label=%BWEXTENSION-65%
account.65.display_name=%BWCLID-65%
account.65.auth_name=%BWAUTHUSER-65%
account.65.user_name=%BWLINPORT-65%
account.65.password=%BWAUTHPASSWORD-65%

#W80B ADD
account.65.sip_server.template =
account.65.media_transmit.enable =

account.65.alarm.template =
account.65.alarm.server =
account.65.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.65.sip_server.1.failback_mode =
account.65.sip_server.1.failback_timeout =
account.65.sip_server.1.register_on_enable =
account.65.sip_server.1.failback_subscribe.enable =
account.65.sip_server.1.invite_retry_counts =
account.65.sip_server.1.only_signal_with_registered =

account.65.sip_server.2.failback_mode =
account.65.sip_server.2.failback_timeout =
account.65.sip_server.2.register_on_enable =
account.65.sip_server.2.failback_subscribe.enable =
```



```
account.65.sip_server.2.invite_retry_counts =
account.65.sip_server.2.only_signal_with_registered =

account.65.naptr_build =
account.65.fallback.redundancy_type =
account.65.fallback.timeout =

account.65.dns_cache_type =
account.65.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.65.anonymous_call =
account.65.reject_anonymous_call =
account.65.send_anonymous_code =
account.65.anonymous_call_oncode =
account.65.anonymous_call_offcode =
account.65.send_anonymous_rejection_code =
account.65.anonymous_reject_oncode =
account.65.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.65.codec.g722.enable =
account.65.codec.g722.priority =

account.65.codec.g729.enable =
account.65.codec.g729.priority =

account.65.codec.g726_16.enable =
account.65.codec.g726_16.priority =

account.65.codec.g726_24.enable =
account.65.codec.g726_24.priority =

account.65.codec.g726_32.enable =
account.65.codec.g726_32.priority =

account.65.codec.g726_40.enable =
account.65.codec.g726_40.priority =

account.65.codec.ilbc.enable =
account.65.codec.ilbc.priority =

account.65.codec.pcmu.enable =
account.65.codec.pcmu.priority =

account.65.codec.pcma.enable =
account.65.codec.pcma.priority =

account.65.codec.opus.enable =
account.65.codec.opus.priority =
```

```
#####
#####
##                                NAT Settings
##
#####
#####

account.65.nat.nat_traversal =
account.65.nat.udp_update_enable =
account.65.nat.udp_update_time =
account.65.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.65.blf.subscribe_period =
account.65.dtmf.type =
account.65.dtmf.dtmf_payload =
account.65.dtmf.info_type =
account.65.100rel_enable =
account.65.subscribe_register =
account.65.subscribe_mwi =
account.65.subscribe_mwi_expires =
account.65.subscribe_mwi_to_vm =
voice_mail.number.65 = %BWVOICE-PORTAL-NUMBER-65%
account.65.display_mwi.enable =
account.65.cid_source =
account.65.cid_source_privacy =
account.65.cid_source_ppi =
account.65.session_timer.enable =
account.65.session_timer.expires =
account.65.session_timer.refreshes =
account.65.enable_user_equal_phone =
account.65.srtp_encryption =
account.65.ptime =
account.65.shared_line = %BWSHAREDLINE-BINARY-65%
account.65.register_mac =
account.65.register_line =
account.65.reg_fail_retry_interval =
account.65.reg_failed_retry_min_time =
account.65.reg_failed_retry_max_time =

#####
#####
##                                Network Conference
##
#####
#####

account.65.conf_type =
account.65.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-65%

account.65.sip_server_type =
account.65.unregister_on_reboot =

#####
#####
##                                Register Other
##
```

```
#####
#####
##DECT V81 Add

account.65.register_expires_overlap =
account.65.subscribe_expires_overlap =
account.65.auto_dial_enable =
account.65.auto_dial_num =
account.65.cp_source =
account.65.transfer_refer_to_contact_header.enable =
#V80 Add
account.65.custom_ua =
account.65.callpark_enable =
account.65.check_cseq.enable =
account.65.check_to_tag.enable =
account.65.hold_use_inactive =
account.65.line_seize.expires =
account.65.update_ack_while_dialing =
account.65.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.65.always_fwd.enable =
account.65.always_fwd.target =
account.65.always_fwd.off_code =
account.65.always_fwd.on_code =
account.65.busy_fwd.enable =
account.65.busy_fwd.target =
account.65.busy_fwd.off_code =
account.65.busy_fwd.on_code =
account.65.timeout_fwd.enable =
account.65.timeout_fwd.target =
account.65.timeout_fwd.timeout =
account.65.timeout_fwd.off_code =
account.65.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.65.dnd.enable =
account.65.dnd.on_code =
account.65.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.65.reg.enable =
handset.65.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.65.xsi.user =%BWLOGIN-ID-65%
account.65.xsi.password =%XSIPASSWORD-65%
account.65.xsi.host =%XSP_ADDRESS%
account.65.xsi.server_type =
account.65.xsi.port =

#####
#####
##          LADP
##
#####
handset.65.ldap.enable =
handset.65.ldap.name_filter=
handset.65.ldap.number_filter=
handset.65.ldap.host=
handset.65.ldap.port=
handset.65.ldap.base=
handset.65.ldap.user=
handset.65.ldap.password=
handset.65.ldap.max_hits=
handset.65.ldap.name_attr=
handset.65.ldap.numb_attr=
handset.65.ldap.display_name=
handset.65.ldap.version=
handset.65.ldap.call_in_lookup=
handset.65.ldap.ldap_sort=
handset.65.ldap.tls_mode=
handset.65.ldap.call_out_lookup=
handset.65.ldap.incoming_call_special_search.enable=

#####
#####
##          Account66 Settings
##
#####

account.66.enable=%BWLINE-BINARY-66%
account.66.label=%BWEXTENSION-66%
account.66.display_name=%BWCLID-66%
account.66.auth_name=%BWAUTHUSER-66%
account.66.user_name=%BWLINEPORT-66%
account.66.password=%BWAUTHPASSWORD-66%

#W80B ADD
account.66.sip_server.template =
account.66.media_transmit.enable =

account.66.alarm.template =
account.66.alarm.server =
account.66.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.66.sip_server.1.failback_mode =
account.66.sip_server.1.failback_timeout =
account.66.sip_server.1.register_on_enable =
account.66.sip_server.1.failback_subscribe.enable =
account.66.sip_server.1.invite_retry_counts =
account.66.sip_server.1.only_signal_with_registered =

account.66.sip_server.2.failback_mode =
account.66.sip_server.2.failback_timeout =
account.66.sip_server.2.register_on_enable =
account.66.sip_server.2.failback_subscribe.enable =
account.66.sip_server.2.invite_retry_counts =
account.66.sip_server.2.only_signal_with_registered =

account.66.naptr_build =
account.66.fallback.redundancy_type =
account.66.fallback.timeout =

account.66.dns_cache_type =
account.66.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.66.anonymous_call =
account.66.reject_anonymous_call =
account.66.send_anonymous_code =
account.66.anonymous_call_oncode =
account.66.anonymous_call_offcode =
account.66.send_anonymous_rejection_code =
account.66.anonymous_reject_oncode =
account.66.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.66.codec.g722.enable =
account.66.codec.g722.priority =

account.66.codec.g729.enable =
account.66.codec.g729.priority =

account.66.codec.g726_16.enable =
account.66.codec.g726_16.priority =

account.66.codec.g726_24.enable =
account.66.codec.g726_24.priority =

account.66.codec.g726_32.enable =
account.66.codec.g726_32.priority =
```

```

account.66.codec.g726_40.enable =
account.66.codec.g726_40.priority =

account.66.codec.ilbc.enable =
account.66.codec.ilbc.priority =

account.66.codec.pcmu.enable =
account.66.codec.pcmu.priority =

account.66.codec.pcma.enable =
account.66.codec.pcma.priority =

account.66.codec.opus.enable =
account.66.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.66.nat.nat_traversal =
account.66.nat.udp_update_enable =
account.66.nat.udp_update_time =
account.66.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.66.blf.subscribe_period =
account.66.dtmf.type =
account.66.dtmf.dtmf_payload =
account.66.dtmf.info_type =
account.66.100rel_enable =
account.66.subscribe_register =
account.66.subscribe_mwi =
account.66.subscribe_mwi_expires =
account.66.subscribe_mwi_to_vm =
voice_mail.number.66 = %BWVOICE-PORTAL-NUMBER-66%
account.66.display_mwi.enable =
account.66.cid_source =
account.66.cid_source_privacy =
account.66.cid_source_ppi =
account.66.session_timer.enable =
account.66.session_timer.expires =
account.66.session_timer.refresher =
account.66.enable_user_equal_phone =
account.66.srtp_encryption =
account.66.ptime =
account.66.shared_line = %BWSHAREDLINE-BINARY-66%
account.66.register_mac =
account.66.register_line =
account.66.reg_fail_retry_interval =
account.66.reg_failed_retry_min_time =
account.66.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.66.conf_type =
account.66.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-66%

account.66.sip_server_type =
account.66.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.66.register_expires_overlap =
account.66.subscribe_expires_overlap =
account.66.auto_dial_enable =
account.66.auto_dial_num =
account.66.cp_source =
account.66.transfer_refer_to_contact_header.enable =
#V80 Add
account.66.custom_ua =
account.66.callpark_enable =
account.66.check_cseq.enable =
account.66.check_to_tag.enable =
account.66.hold_use_inactive =
account.66.line_seize.expires =
account.66.update_ack_while_dialing =
account.66.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.66.always_fwd.enable =
account.66.always_fwd.target =
account.66.always_fwd.off_code =
account.66.always_fwd.on_code =
account.66.busy_fwd.enable =
account.66.busy_fwd.target =
account.66.busy_fwd.off_code =
account.66.busy_fwd.on_code =
account.66.timeout_fwd.enable =
account.66.timeout_fwd.target =
account.66.timeout_fwd.timeout =
account.66.timeout_fwd.off_code =
account.66.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```

account.66.dnd.enable =
account.66.dnd.on_code =
account.66.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.66.reg.enable =
handset.66.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.66.xsi.user =%BWLOGIN-ID-66%
account.66.xsi.password =%XSIPASSWORD-66%
account.66.xsi.host =%XSP_ADDRESS%
account.66.xsi.server_type =
account.66.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.66.ldap.enable =
handset.66.ldap.name_filter=
handset.66.ldap.number_filter=
handset.66.ldap.host=
handset.66.ldap.port=
handset.66.ldap.base=
handset.66.ldap.user=
handset.66.ldap.password=
handset.66.ldap.max_hits=
handset.66.ldap.name_attr=
handset.66.ldap.numb_attr=
handset.66.ldap.display_name=
handset.66.ldap.version=
handset.66.ldap.call_in_lookup=
handset.66.ldap.ldap_sort=
handset.66.ldap.tls_mode=
handset.66.ldap.call_out_lookup=
handset.66.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account67 Settings
##
#####
#####

```



```

account.67.enable=%BWLIN-BINARY-67%
account.67.label=%BWEXTENSION-67%
account.67.display_name=%BWCLID-67%
account.67.auth_name=%BWAUTHUSER-67%
account.67.user_name=%BWLINPORT-67%
account.67.password=%BWAUTHPASSWORD-67%

#W80B ADD
account.67.sip_server.template =
account.67.media_transmit.enable =

account.67.alarm.template =
account.67.alarm.server =
account.67.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.67.sip_server.1.failback_mode =
account.67.sip_server.1.failback_timeout =
account.67.sip_server.1.register_on_enable =
account.67.sip_server.1.failback_subscribe.enable =
account.67.sip_server.1.invite_retry_counts =
account.67.sip_server.1.only_signal_with_registered =

account.67.sip_server.2.failback_mode =
account.67.sip_server.2.failback_timeout =
account.67.sip_server.2.register_on_enable =
account.67.sip_server.2.failback_subscribe.enable =
account.67.sip_server.2.invite_retry_counts =
account.67.sip_server.2.only_signal_with_registered =

account.67.naptr_build =
account.67.fallback.redundancy_type =
account.67.fallback.timeout =

account.67.dns_cache_type =
account.67.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.67.anonymous_call =
account.67.reject_anonymous_call =
account.67.send_anonymous_code =
account.67.anonymous_call_oncode =
account.67.anonymous_call_offcode =
account.67.send_anonymous_rejection_code =
account.67.anonymous_reject_oncode =
account.67.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.67.codec.g722.enable =
account.67.codec.g722.priority =

account.67.codec.g729.enable =
account.67.codec.g729.priority =

account.67.codec.g726_16.enable =
account.67.codec.g726_16.priority =

account.67.codec.g726_24.enable =
account.67.codec.g726_24.priority =

account.67.codec.g726_32.enable =
account.67.codec.g726_32.priority =

account.67.codec.g726_40.enable =
account.67.codec.g726_40.priority =

account.67.codec.ilbc.enable =
account.67.codec.ilbc.priority =

account.67.codec.pcmu.enable =
account.67.codec.pcmu.priority =

account.67.codec.pcma.enable =
account.67.codec.pcma.priority =

account.67.codec.opus.enable =
account.67.codec.opus.priority =

#####
#####
##                                NAT Settings
##
#####
#####

account.67.nat.nat_traversal =
account.67.nat.udp_update_enable =
account.67.nat.udp_update_time =
account.67.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.67.blf.subscribe_period =
account.67.dtmf.type =
account.67.dtmf.dtmf_payload =
account.67.dtmf.info_type =
account.67.100rel_enable =
account.67.subscribe_register =
account.67.subscribe_mwi =
account.67.subscribe_mwi_expires =
account.67.subscribe_mwi_to_vm =
voice_mail.number.67 = %BWVOICE-PORTAL-NUMBER-67%
account.67.display_mwi.enable =
account.67.cid_source =
```

```

account.67.cid_source_privacy =
account.67.cid_source_ppi =
account.67.session_timer.enable =
account.67.session_timer.expires =
account.67.session_timer.refresher =
account.67.enable_user_equal_phone =
account.67.srtp_encryption =
account.67.ptime =
account.67.shared_line = %BWSHAREDLINE-BINARY-67%
account.67.register_mac =
account.67.register_line =
account.67.reg_fail_retry_interval =
account.67.reg_failed_retry_min_time =
account.67.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.67.conf_type =
account.67.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-67%

account.67.sip_server_type =
account.67.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.67.register_expires_overlap =
account.67.subscribe_expires_overlap =
account.67.auto_dial_enable =
account.67.auto_dial_num =
account.67.cp_source =
account.67.transfer_refer_to_contact_header.enable =
#V80 Add
account.67.custom_ua =
account.67.callpark_enable =
account.67.check_cseq.enable =
account.67.check_to_tag.enable =
account.67.hold_use_inactive =
account.67.line_seize.expires =
account.67.update_ack_while_dialing =
account.67.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.67.always_fwd.enable =
account.67.always_fwd.target =
account.67.always_fwd.off_code =
account.67.always_fwd.on_code =
account.67.busy_fwd.enable =

```

```

account.67.busy_fwd.target =
account.67.busy_fwd.off_code =
account.67.busy_fwd.on_code =
account.67.timeout_fwd.enable =
account.67.timeout_fwd.target =
account.67.timeout_fwd.timeout =
account.67.timeout_fwd.off_code =
account.67.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.67.dnd.enable =
account.67.dnd.on_code =
account.67.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.67.reg.enable =
handset.67.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.67.xsi.user =%BWLOGIN-ID-67%
account.67.xsi.password =%XSIPASSWORD-67%
account.67.xsi.host =%XSP_ADDRESS%
account.67.xsi.server_type =
account.67.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.67.ldap.enable =
handset.67.ldap.name_filter=
handset.67.ldap.number_filter=
handset.67.ldap.host=
handset.67.ldap.port=
handset.67.ldap.base=
handset.67.ldap.user=
handset.67.ldap.password=
handset.67.ldap.max_hits=
handset.67.ldap.name_attr=
handset.67.ldap.numb_attr=
handset.67.ldap.display_name=
handset.67.ldap.version=
handset.67.ldap.call_in_lookup=

```

```
handset.67.ldap.ldap_sort=
handset.67.ldap.tls_mode=
handset.67.ldap.call_out_lookup=
handset.67.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account68 Settings
##
#####
#####

account.68.enable=%BWLIN-BINARY-68%
account.68.label=%BWEXTENSION-68%
account.68.display_name=%BWCLID-68%
account.68.auth_name=%BWAUTHUSER-68%
account.68.user_name=%BWLINPORT-68%
account.68.password=%BWAUTHPASSWORD-68%

#W80B ADD
account.68.sip_server.template =
account.68.media_transmit.enable =

account.68.alarm.template =
account.68.alarm.server =
account.68.alarm.number =

#####
#####
##                                     Failback
##
##
#####
#####
account.68.sip_server.1.failback_mode =
account.68.sip_server.1.failback_timeout =
account.68.sip_server.1.register_on_enable =
account.68.sip_server.1.failback_subscribe.enable =
account.68.sip_server.1.invite_retry_counts =
account.68.sip_server.1.only_signal_with_registered =

account.68.sip_server.2.failback_mode =
account.68.sip_server.2.failback_timeout =
account.68.sip_server.2.register_on_enable =
account.68.sip_server.2.failback_subscribe.enable =
account.68.sip_server.2.invite_retry_counts =
account.68.sip_server.2.only_signal_with_registered =

account.68.naptr_build =
account.68.fallback.redundancy_type =
account.68.fallback.timeout =

account.68.dns_cache_type =
account.68.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
##
#####
#####
```

```

account.68.anonymous_call =
account.68.reject_anonymous_call =
account.68.send_anonymous_code =
account.68.anonymous_call_oncode =
account.68.anonymous_call_offcode =
account.68.send_anonymous_rejection_code =
account.68.anonymous_reject_oncode =
account.68.anonymous_reject_offcode =

#####
#####
##
##                               Codec
##
#####
#####
account.68.codec.g722.enable =
account.68.codec.g722.priority =

account.68.codec.g729.enable =
account.68.codec.g729.priority =

account.68.codec.g726_16.enable =
account.68.codec.g726_16.priority =

account.68.codec.g726_24.enable =
account.68.codec.g726_24.priority =

account.68.codec.g726_32.enable =
account.68.codec.g726_32.priority =

account.68.codec.g726_40.enable =
account.68.codec.g726_40.priority =

account.68.codec.ilbc.enable =
account.68.codec.ilbc.priority =

account.68.codec.pcmu.enable =
account.68.codec.pcmu.priority =

account.68.codec.pcma.enable =
account.68.codec.pcma.priority =

account.68.codec.opus.enable =
account.68.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####
account.68.nat.nat_traversal =
account.68.nat.udp_update_enable =
account.68.nat.udp_update_time =
account.68.nat.rport =

#####
#####
##
##                               Register Advanced
##

```

```
#####
#####

account.68.blf.subscribe_period =
account.68.dtmf.type =
account.68.dtmf.dtmf_payload =
account.68.dtmf.info_type =
account.68.100rel_enable =
account.68.subscribe_register =
account.68.subscribe_mwi =
account.68.subscribe_mwi_expires =
account.68.subscribe_mwi_to_vm =
voice_mail.number.68 = %BWVOICE-PORTAL-NUMBER-68%
account.68.display_mwi.enable =
account.68.cid_source =
account.68.cid_source_privacy =
account.68.cid_source_ppi =
account.68.session_timer.enable =
account.68.session_timer.expires =
account.68.session_timer.refresher =
account.68.enable_user_equal_phone =
account.68.srtp_encryption =
account.68.ptime =
account.68.shared_line = %BWSHAREDLINE-BINARY-68%
account.68.register_mac =
account.68.register_line =
account.68.reg_fail_retry_interval =
account.68.reg_failed_retry_min_time =
account.68.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.68.conf_type =
account.68.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-68%

account.68.sip_server_type =
account.68.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.68.register_expires_overlap =
account.68.subscribe_expires_overlap =
account.68.auto_dial_enable =
account.68.auto_dial_num =
account.68.cp_source =
account.68.transfer_refer_to_contact_header.enable =
#V80 Add
account.68.custom_ua =
account.68.callpark_enable =
account.68.check_cseq.enable =
account.68.check_to_tag.enable =
account.68.hold_use_inactive =
```

```

account.68.line_seize.expires =
account.68.update_ack_while_dialing =
account.68.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.68.always_fwd.enable =
account.68.always_fwd.target =
account.68.always_fwd.off_code =
account.68.always_fwd.on_code =
account.68.busy_fwd.enable =
account.68.busy_fwd.target =
account.68.busy_fwd.off_code =
account.68.busy_fwd.on_code =
account.68.timeout_fwd.enable =
account.68.timeout_fwd.target =
account.68.timeout_fwd.timeout =
account.68.timeout_fwd.off_code =
account.68.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.68.dnd.enable =
account.68.dnd.on_code =
account.68.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.68.reg.enable =
handset.68.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####
account.68.xsi.user =%BWLOGIN-ID-68%
account.68.xsi.password =%XSIPASSWORD-68%
account.68.xsi.host =%XSP_ADDRESS%
account.68.xsi.server_type =
account.68.xsi.port =

#####
#####
##                                LADP
##

```



```
#####
#####
handset.68.ldap.enable =
handset.68.ldap.name_filter=
handset.68.ldap.number_filter=
handset.68.ldap.host=
handset.68.ldap.port=
handset.68.ldap.base=
handset.68.ldap.user=
handset.68.ldap.password=
handset.68.ldap.max_hits=
handset.68.ldap.name_attr=
handset.68.ldap.numb_attr=
handset.68.ldap.display_name=
handset.68.ldap.version=
handset.68.ldap.call_in_lookup=
handset.68.ldap.ldap_sort=
handset.68.ldap.tls_mode=
handset.68.ldap.call_out_lookup=
handset.68.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account69 Settings
##
#####
#####

account.69.enable=%BWLIN-BINARY-69%
account.69.label=%BWEXTENSION-69%
account.69.display_name=%BWCLID-69%
account.69.auth_name=%BWAUTHUSER-69%
account.69.user_name=%BWLINPORT-69%
account.69.password=%BWAUTHPASSWORD-69%

#W80B ADD
account.69.sip_server.template =
account.69.media_transmit.enable =

account.69.alarm.template =
account.69.alarm.server =
account.69.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.69.sip_server.1.failback_mode =
account.69.sip_server.1.failback_timeout =
account.69.sip_server.1.register_on_enable =
account.69.sip_server.1.failback_subscribe.enable =
account.69.sip_server.1.invite_retry_counts =
account.69.sip_server.1.only_signal_with_registered =

account.69.sip_server.2.failback_mode =
account.69.sip_server.2.failback_timeout =
account.69.sip_server.2.register_on_enable =
account.69.sip_server.2.failback_subscribe.enable =
```

```

account.69.sip_server.2.invite_retry_counts =
account.69.sip_server.2.only_signal_with_registered =

account.69.naptr_build =
account.69.fallback.redundancy_type =
account.69.fallback.timeout =

account.69.dns_cache_type =
account.69.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.69.anonymous_call =
account.69.reject_anonymous_call =
account.69.send_anonymous_code =
account.69.anonymous_call_oncode =
account.69.anonymous_call_offcode =
account.69.send_anonymous_rejection_code =
account.69.anonymous_reject_oncode =
account.69.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.69.codec.g722.enable =
account.69.codec.g722.priority =

account.69.codec.g729.enable =
account.69.codec.g729.priority =

account.69.codec.g726_16.enable =
account.69.codec.g726_16.priority =

account.69.codec.g726_24.enable =
account.69.codec.g726_24.priority =

account.69.codec.g726_32.enable =
account.69.codec.g726_32.priority =

account.69.codec.g726_40.enable =
account.69.codec.g726_40.priority =

account.69.codec.ilbc.enable =
account.69.codec.ilbc.priority =

account.69.codec.pcmu.enable =
account.69.codec.pcmu.priority =

account.69.codec.pcma.enable =
account.69.codec.pcma.priority =

account.69.codec.opus.enable =
account.69.codec.opus.priority =

```

```
#####
#####
##                                NAT Settings
##
#####
#####

account.69.nat.nat_traversal =
account.69.nat.udp_update_enable =
account.69.nat.udp_update_time =
account.69.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.69.blf.subscribe_period =
account.69.dtmf.type =
account.69.dtmf.dtmf_payload =
account.69.dtmf.info_type =
account.69.100rel_enable =
account.69.subscribe_register =
account.69.subscribe_mwi =
account.69.subscribe_mwi_expires =
account.69.subscribe_mwi_to_vm =
voice_mail.number.69 = %BWVOICE-PORTAL-NUMBER-69%
account.69.display_mwi.enable =
account.69.cid_source =
account.69.cid_source_privacy =
account.69.cid_source_ppi =
account.69.session_timer.enable =
account.69.session_timer.expires =
account.69.session_timer.refresher =
account.69.enable_user_equal_phone =
account.69.srtp_encryption =
account.69.ptime =
account.69.shared_line = %BWSHAREDLINE-BINARY-69%
account.69.register_mac =
account.69.register_line =
account.69.reg_fail_retry_interval =
account.69.reg_failed_retry_min_time =
account.69.reg_failed_retry_max_time =

#####
#####
##                                Network Conference
##
#####
#####

account.69.conf_type =
account.69.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-69%

account.69.sip_server_type =
account.69.unregister_on_reboot =

#####
#####
##                                Register Other
##
##
```

```
#####
#####
##DECT V81 Add

account.69.register_expires_overlap =
account.69.subscribe_expires_overlap =
account.69.auto_dial_enable =
account.69.auto_dial_num =
account.69.cp_source =
account.69.transfer_refer_to_contact_header.enable =
#V80 Add
account.69.custom_ua =
account.69.callpark_enable =
account.69.check_cseq.enable =
account.69.check_to_tag.enable =
account.69.hold_use_inactive =
account.69.line_seize.expires =
account.69.update_ack_while_dialing =
account.69.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.69.always_fwd.enable =
account.69.always_fwd.target =
account.69.always_fwd.off_code =
account.69.always_fwd.on_code =
account.69.busy_fwd.enable =
account.69.busy_fwd.target =
account.69.busy_fwd.off_code =
account.69.busy_fwd.on_code =
account.69.timeout_fwd.enable =
account.69.timeout_fwd.target =
account.69.timeout_fwd.timeout =
account.69.timeout_fwd.off_code =
account.69.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.69.dnd.enable =
account.69.dnd.on_code =
account.69.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.69.reg.enable =
handset.69.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.69.xsi.user =%BWLOGIN-ID-69%
account.69.xsi.password =%XSIPASSWORD-69%
account.69.xsi.host =%XSP_ADDRESS%
account.69.xsi.server_type =
account.69.xsi.port =

#####
#####
##          LADP
##
#####
handset.69.ldap.enable =
handset.69.ldap.name_filter=
handset.69.ldap.number_filter=
handset.69.ldap.host=
handset.69.ldap.port=
handset.69.ldap.base=
handset.69.ldap.user=
handset.69.ldap.password=
handset.69.ldap.max_hits=
handset.69.ldap.name_attr=
handset.69.ldap.numb_attr=
handset.69.ldap.display_name=
handset.69.ldap.version=
handset.69.ldap.call_in_lookup=
handset.69.ldap.ldap_sort=
handset.69.ldap.tls_mode=
handset.69.ldap.call_out_lookup=
handset.69.ldap.incoming_call_special_search.enable=

#####
#####
##          Account70 Settings
##
#####

account.70.enable=%BWLINE-BINARY-70%
account.70.label=%BWEXTENSION-70%
account.70.display_name=%BWCLID-70%
account.70.auth_name=%BWAUTHUSER-70%
account.70.user_name=%BWLINEPORT-70%
account.70.password=%BWAUTHPASSWORD-70%

#W80B ADD
account.70.sip_server.template =
account.70.media_transmit.enable =

account.70.alarm.template =
account.70.alarm.server =
account.70.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.70.sip_server.1.failback_mode =
account.70.sip_server.1.failback_timeout =
account.70.sip_server.1.register_on_enable =
account.70.sip_server.1.failback_subscribe.enable =
account.70.sip_server.1.invite_retry_counts =
account.70.sip_server.1.only_signal_with_registered =

account.70.sip_server.2.failback_mode =
account.70.sip_server.2.failback_timeout =
account.70.sip_server.2.register_on_enable =
account.70.sip_server.2.failback_subscribe.enable =
account.70.sip_server.2.invite_retry_counts =
account.70.sip_server.2.only_signal_with_registered =

account.70.naptr_build =
account.70.fallback.redundancy_type =
account.70.fallback.timeout =

account.70.dns_cache_type =
account.70.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.70.anonymous_call =
account.70.reject_anonymous_call =
account.70.send_anonymous_code =
account.70.anonymous_call_oncode =
account.70.anonymous_call_offcode =
account.70.send_anonymous_rejection_code =
account.70.anonymous_reject_oncode =
account.70.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.70.codec.g722.enable =
account.70.codec.g722.priority =

account.70.codec.g729.enable =
account.70.codec.g729.priority =

account.70.codec.g726_16.enable =
account.70.codec.g726_16.priority =

account.70.codec.g726_24.enable =
account.70.codec.g726_24.priority =

account.70.codec.g726_32.enable =
account.70.codec.g726_32.priority =
```

```

account.70.codec.g726_40.enable =
account.70.codec.g726_40.priority =

account.70.codec.ilbc.enable =
account.70.codec.ilbc.priority =

account.70.codec.pcmu.enable =
account.70.codec.pcmu.priority =

account.70.codec.pcma.enable =
account.70.codec.pcma.priority =

account.70.codec.opus.enable =
account.70.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.70.nat.nat_traversal =
account.70.nat.udp_update_enable =
account.70.nat.udp_update_time =
account.70.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.70.blf.subscribe_period =
account.70.dtmf.type =
account.70.dtmf.dtmf_payload =
account.70.dtmf.info_type =
account.70.100rel_enable =
account.70.subscribe_register =
account.70.subscribe_mwi =
account.70.subscribe_mwi_expires =
account.70.subscribe_mwi_to_vm =
voice_mail.number.70 = %BWVOICE-PORTAL-NUMBER-70%
account.70.display_mwi.enable =
account.70.cid_source =
account.70.cid_source_privacy =
account.70.cid_source_ppi =
account.70.session_timer.enable =
account.70.session_timer.expires =
account.70.session_timer.refresher =
account.70.enable_user_equal_phone =
account.70.srtp_encryption =
account.70.ptime =
account.70.shared_line = %BWSHAREDLINE-BINARY-70%
account.70.register_mac =
account.70.register_line =
account.70.reg_fail_retry_interval =
account.70.reg_failed_retry_min_time =
account.70.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.70.conf_type =
account.70.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-70%

account.70.sip_server_type =
account.70.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.70.register_expires_overlap =
account.70.subscribe_expires_overlap =
account.70.auto_dial_enable =
account.70.auto_dial_num =
account.70.cp_source =
account.70.transfer_refer_to_contact_header.enable =
#V80 Add
account.70.custom_ua =
account.70.callpark_enable =
account.70.check_cseq.enable =
account.70.check_to_tag.enable =
account.70.hold_use_inactive =
account.70.line_seize.expires =
account.70.update_ack_while_dialing =
account.70.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.70.always_fwd.enable =
account.70.always_fwd.target =
account.70.always_fwd.off_code =
account.70.always_fwd.on_code =
account.70.busy_fwd.enable =
account.70.busy_fwd.target =
account.70.busy_fwd.off_code =
account.70.busy_fwd.on_code =
account.70.timeout_fwd.enable =
account.70.timeout_fwd.target =
account.70.timeout_fwd.timeout =
account.70.timeout_fwd.off_code =
account.70.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```



```
account.70.dnd.enable =
account.70.dnd.on_code =
account.70.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.70.reg.enable =
handset.70.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.70.xsi.user =%BWLOGIN-ID-70%
account.70.xsi.password =%XSIPASSWORD-70%
account.70.xsi.host =%XSP_ADDRESS%
account.70.xsi.server_type =
account.70.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.70.ldap.enable =
handset.70.ldap.name_filter=
handset.70.ldap.number_filter=
handset.70.ldap.host=
handset.70.ldap.port=
handset.70.ldap.base=
handset.70.ldap.user=
handset.70.ldap.password=
handset.70.ldap.max_hits=
handset.70.ldap.name_attr=
handset.70.ldap.numb_attr=
handset.70.ldap.display_name=
handset.70.ldap.version=
handset.70.ldap.call_in_lookup=
handset.70.ldap.ldap_sort=
handset.70.ldap.tls_mode=
handset.70.ldap.call_out_lookup=
handset.70.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account71 Settings
##
#####
#####
```

```

account.71.enable=%BWLIN-BINARY-71%
account.71.label=%BWEXTENSION-71%
account.71.display_name=%BWCLID-71%
account.71.auth_name=%BWAUTHUSER-71%
account.71.user_name=%BWLINPORT-71%
account.71.password=%BWAUTHPASSWORD-71%

#W80B ADD
account.71.sip_server.template =
account.71.media_transmit.enable =

account.71.alarm.template =
account.71.alarm.server =
account.71.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.71.sip_server.1.failback_mode =
account.71.sip_server.1.failback_timeout =
account.71.sip_server.1.register_on_enable =
account.71.sip_server.1.failback_subscribe.enable =
account.71.sip_server.1.invite_retry_counts =
account.71.sip_server.1.only_signal_with_registered =

account.71.sip_server.2.failback_mode =
account.71.sip_server.2.failback_timeout =
account.71.sip_server.2.register_on_enable =
account.71.sip_server.2.failback_subscribe.enable =
account.71.sip_server.2.invite_retry_counts =
account.71.sip_server.2.only_signal_with_registered =

account.71.naptr_build =
account.71.fallback.redundancy_type =
account.71.fallback.timeout =

account.71.dns_cache_type =
account.71.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.71.anonymous_call =
account.71.reject_anonymous_call =
account.71.send_anonymous_code =
account.71.anonymous_call_oncode =
account.71.anonymous_call_offcode =
account.71.send_anonymous_rejection_code =
account.71.anonymous_reject_oncode =
account.71.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.71.codec.g722.enable =
account.71.codec.g722.priority =

account.71.codec.g729.enable =
account.71.codec.g729.priority =

account.71.codec.g726_16.enable =
account.71.codec.g726_16.priority =

account.71.codec.g726_24.enable =
account.71.codec.g726_24.priority =

account.71.codec.g726_32.enable =
account.71.codec.g726_32.priority =

account.71.codec.g726_40.enable =
account.71.codec.g726_40.priority =

account.71.codec.ilbc.enable =
account.71.codec.ilbc.priority =

account.71.codec.pcmu.enable =
account.71.codec.pcmu.priority =

account.71.codec.pcma.enable =
account.71.codec.pcma.priority =

account.71.codec.opus.enable =
account.71.codec.opus.priority =

#####
#####
##                                NAT Settings
##
#####
#####

account.71.nat.nat_traversal =
account.71.nat.udp_update_enable =
account.71.nat.udp_update_time =
account.71.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.71.blf.subscribe_period =
account.71.dtmf.type =
account.71.dtmf.dtmf_payload =
account.71.dtmf.info_type =
account.71.100rel_enable =
account.71.subscribe_register =
account.71.subscribe_mwi =
account.71.subscribe_mwi_expires =
account.71.subscribe_mwi_to_vm =
voice_mail.number.71 = %BWVOICE-PORTAL-NUMBER-71%
account.71.display_mwi.enable =
account.71.cid_source =
```

```

account.71.cid_source_privacy =
account.71.cid_source_ppi =
account.71.session_timer.enable =
account.71.session_timer.expires =
account.71.session_timer.refresher =
account.71.enable_user_equal_phone =
account.71.srtp_encryption =
account.71.ptime =
account.71.shared_line = %BWSHAREDLINE-BINARY-71%
account.71.register_mac =
account.71.register_line =
account.71.reg_fail_retry_interval =
account.71.reg_failed_retry_min_time =
account.71.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.71.conf_type =
account.71.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-71%

account.71.sip_server_type =
account.71.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.71.register_expires_overlap =
account.71.subscribe_expires_overlap =
account.71.auto_dial_enable =
account.71.auto_dial_num =
account.71.cp_source =
account.71.transfer_refer_to_contact_header.enable =
#V80 Add
account.71.custom_ua =
account.71.callpark_enable =
account.71.check_cseq.enable =
account.71.check_to_tag.enable =
account.71.hold_use_inactive =
account.71.line_seize.expires =
account.71.update_ack_while_dialing =
account.71.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.71.always_fwd.enable =
account.71.always_fwd.target =
account.71.always_fwd.off_code =
account.71.always_fwd.on_code =
account.71.busy_fwd.enable =

```

```

account.71.busy_fwd.target =
account.71.busy_fwd.off_code =
account.71.busy_fwd.on_code =
account.71.timeout_fwd.enable =
account.71.timeout_fwd.target =
account.71.timeout_fwd.timeout =
account.71.timeout_fwd.off_code =
account.71.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.71.dnd.enable =
account.71.dnd.on_code =
account.71.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.71.reg.enable =
handset.71.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.71.xsi.user =%BWLOGIN-ID-71%
account.71.xsi.password =%XSIPASSWORD-71%
account.71.xsi.host =%XSP_ADDRESS%
account.71.xsi.server_type =
account.71.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.71 ldap.enable =
handset.71 ldap.name_filter=
handset.71 ldap.number_filter=
handset.71 ldap.host=
handset.71 ldap.port=
handset.71 ldap.base=
handset.71 ldap.user=
handset.71 ldap.password=
handset.71 ldap.max_hits=
handset.71 ldap.name_attr=
handset.71 ldap.numb_attr=
handset.71 ldap.display_name=
handset.71 ldap.version=
handset.71 ldap.call_in_lookup=

```

```

handset.71.ldap.ldap_sort=
handset.71.ldap.tls_mode=
handset.71.ldap.call_out_lookup=
handset.71.ldap.incoming_call_special_search.enable=

#####
#####
##
##                               Account72 Settings
##
#####
#####

account.72.enable=%BWLIN-BINARY-72%
account.72.label=%BWEXTENSION-72%
account.72.display_name=%BWCLID-72%
account.72.auth_name=%BWAUTHUSER-72%
account.72.user_name=%BWLINPORT-72%
account.72.password=%BWAUTHPASSWORD-72%

#W80B ADD
account.72.sip_server.template =
account.72.media_transmit.enable =

account.72.alarm.template =
account.72.alarm.server =
account.72.alarm.number =

#####
#####
##
##                               Failback
##
#####
#####

account.72.sip_server.1.failback_mode =
account.72.sip_server.1.failback_timeout =
account.72.sip_server.1.register_on_enable =
account.72.sip_server.1.failback_subscribe.enable =
account.72.sip_server.1.invite_retry_counts =
account.72.sip_server.1.only_signal_with_registered =

account.72.sip_server.2.failback_mode =
account.72.sip_server.2.failback_timeout =
account.72.sip_server.2.register_on_enable =
account.72.sip_server.2.failback_subscribe.enable =
account.72.sip_server.2.invite_retry_counts =
account.72.sip_server.2.only_signal_with_registered =

account.72.naptr_build =
account.72.fallback.redundancy_type =
account.72.fallback.timeout =

account.72.dns_cache_type =
account.72.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##
##                               Basic
##
#####
#####

```

```

account.72.anonymous_call =
account.72.reject_anonymous_call =
account.72.send_anonymous_code =
account.72.anonymous_call_oncode =
account.72.anonymous_call_offcode =
account.72.send_anonymous_rejection_code =
account.72.anonymous_reject_oncode =
account.72.anonymous_reject_offcode =

#####
#####
##
##                                Codec
##
#####
#####
account.72.codec.g722.enable =
account.72.codec.g722.priority =

account.72.codec.g729.enable =
account.72.codec.g729.priority =

account.72.codec.g726_16.enable =
account.72.codec.g726_16.priority =

account.72.codec.g726_24.enable =
account.72.codec.g726_24.priority =

account.72.codec.g726_32.enable =
account.72.codec.g726_32.priority =

account.72.codec.g726_40.enable =
account.72.codec.g726_40.priority =

account.72.codec.ilbc.enable =
account.72.codec.ilbc.priority =

account.72.codec.pcmu.enable =
account.72.codec.pcmu.priority =

account.72.codec.pcma.enable =
account.72.codec.pcma.priority =

account.72.codec.opus.enable =
account.72.codec.opus.priority =

#####
#####
##
##                                NAT Settings
##
#####
#####

account.72.nat.nat_traversal =
account.72.nat.udp_update_enable =
account.72.nat.udp_update_time =
account.72.nat.rport =

#####
#####
##
##                                Register Advanced
##

```

```
#####
#####

account.72.blf.subscribe_period =
account.72.dtmf.type =
account.72.dtmf.dtmf_payload =
account.72.dtmf.info_type =
account.72.100rel_enable =
account.72.subscribe_register =
account.72.subscribe_mwi =
account.72.subscribe_mwi_expires =
account.72.subscribe_mwi_to_vm =
voice_mail.number.72 = %BWVOICE-PORTAL-NUMBER-72%
account.72.display_mwi.enable =
account.72.cid_source =
account.72.cid_source_privacy =
account.72.cid_source_ppi =
account.72.session_timer.enable =
account.72.session_timer.expires =
account.72.session_timer.refresher =
account.72.enable_user_equal_phone =
account.72.srtp_encryption =
account.72.ptime =
account.72.shared_line = %BWSHAREDLINE-BINARY-72%
account.72.register_mac =
account.72.register_line =
account.72.reg_fail_retry_interval =
account.72.reg_failed_retry_min_time =
account.72.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.72.conf_type =
account.72.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-72%

account.72.sip_server_type =
account.72.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.72.register_expires_overlap =
account.72.subscribe_expires_overlap =
account.72.auto_dial_enable =
account.72.auto_dial_num =
account.72.cp_source =
account.72.transfer_refer_to_contact_header.enable =
#V80 Add
account.72.custom_ua =
account.72.callpark_enable =
account.72.check_cseq.enable =
account.72.check_to_tag.enable =
account.72.hold_use_inactive =
```



```

account.72.line_seize.expires =
account.72.update_ack_while_dialing =
account.72.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.72.always_fwd.enable =
account.72.always_fwd.target =
account.72.always_fwd.off_code =
account.72.always_fwd.on_code =
account.72.busy_fwd.enable =
account.72.busy_fwd.target =
account.72.busy_fwd.off_code =
account.72.busy_fwd.on_code =
account.72.timeout_fwd.enable =
account.72.timeout_fwd.target =
account.72.timeout_fwd.timeout =
account.72.timeout_fwd.off_code =
account.72.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.72.dnd.enable =
account.72.dnd.on_code =
account.72.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.72.reg.enable =
handset.72.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.72.xsi.user =%BWLOGIN-ID-72%
account.72.xsi.password =%XSIPASSWORD-72%
account.72.xsi.host =%XSP_ADDRESS%
account.72.xsi.server_type =
account.72.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.72.ldap.enable =
handset.72.ldap.name_filter=
handset.72.ldap.number_filter=
handset.72.ldap.host=
handset.72.ldap.port=
handset.72.ldap.base=
handset.72.ldap.user=
handset.72.ldap.password=
handset.72.ldap.max_hits=
handset.72.ldap.name_attr=
handset.72.ldap.numb_attr=
handset.72.ldap.display_name=
handset.72.ldap.version=
handset.72.ldap.call_in_lookup=
handset.72.ldap.ldap_sort=
handset.72.ldap.tls_mode=
handset.72.ldap.call_out_lookup=
handset.72.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account73 Settings
##
#####
#####

account.73.enable=%BWLIN-BINARY-73%
account.73.label=%BWEXTENSION-73%
account.73.display_name=%BWCLID-73%
account.73.auth_name=%BWAUTHUSER-73%
account.73.user_name=%BWLINPORT-73%
account.73.password=%BWAUTHPASSWORD-73%

#W80B ADD
account.73.sip_server.template =
account.73.media_transmit.enable =

account.73.alarm.template =
account.73.alarm.server =
account.73.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.73.sip_server.1.failback_mode =
account.73.sip_server.1.failback_timeout =
account.73.sip_server.1.register_on_enable =
account.73.sip_server.1.failback_subscribe.enable =
account.73.sip_server.1.invite_retry_counts =
account.73.sip_server.1.only_signal_with_registered =

account.73.sip_server.2.failback_mode =
account.73.sip_server.2.failback_timeout =
account.73.sip_server.2.register_on_enable =
account.73.sip_server.2.failback_subscribe.enable =
```

```

account.73.sip_server.2.invite_retry_counts =
account.73.sip_server.2.only_signal_with_registered =

account.73.naptr_build =
account.73.fallback.redundancy_type =
account.73.fallback.timeout =

account.73.dns_cache_type =
account.73.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.73.anonymous_call =
account.73.reject_anonymous_call =
account.73.send_anonymous_code =
account.73.anonymous_call_oncode =
account.73.anonymous_call_offcode =
account.73.send_anonymous_rejection_code =
account.73.anonymous_reject_oncode =
account.73.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.73.codec.g722.enable =
account.73.codec.g722.priority =

account.73.codec.g729.enable =
account.73.codec.g729.priority =

account.73.codec.g726_16.enable =
account.73.codec.g726_16.priority =

account.73.codec.g726_24.enable =
account.73.codec.g726_24.priority =

account.73.codec.g726_32.enable =
account.73.codec.g726_32.priority =

account.73.codec.g726_40.enable =
account.73.codec.g726_40.priority =

account.73.codec.ilbc.enable =
account.73.codec.ilbc.priority =

account.73.codec.pcmu.enable =
account.73.codec.pcmu.priority =

account.73.codec.pcma.enable =
account.73.codec.pcma.priority =

account.73.codec.opus.enable =
account.73.codec.opus.priority =

```

```
#####
#####
##                               NAT Settings
##
#####
#####

account.73.nat.nat_traversal =
account.73.nat.udp_update_enable =
account.73.nat.udp_update_time =
account.73.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.73.blf.subscribe_period =
account.73.dtmf.type =
account.73.dtmf.dtmf_payload =
account.73.dtmf.info_type =
account.73.100rel_enable =
account.73.subscribe_register =
account.73.subscribe_mwi =
account.73.subscribe_mwi_expires =
account.73.subscribe_mwi_to_vm =
voice_mail.number.73 = %BWVOICE-PORTAL-NUMBER-73%
account.73.display_mwi.enable =
account.73.cid_source =
account.73.cid_source_privacy =
account.73.cid_source_ppi =
account.73.session_timer.enable =
account.73.session_timer.expires =
account.73.session_timer.refreshes =
account.73.enable_user_equal_phone =
account.73.srtp_encryption =
account.73.ptime =
account.73.shared_line = %BWSHAREDLINE-BINARY-73%
account.73.register_mac =
account.73.register_line =
account.73.reg_fail_retry_interval =
account.73.reg_failed_retry_min_time =
account.73.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.73.conf_type =
account.73.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-73%

account.73.sip_server_type =
account.73.unregister_on_reboot =

#####
#####
##                               Register Other
##
```

```
#####
#####
##DECT V81 Add

account.73.register_expires_overlap =
account.73.subscribe_expires_overlap =
account.73.auto_dial_enable =
account.73.auto_dial_num =
account.73.cp_source =
account.73.transfer_refer_to_contact_header.enable =
#V80 Add
account.73.custom_ua =
account.73.callpark_enable =
account.73.check_cseq.enable =
account.73.check_to_tag.enable =
account.73.hold_use_inactive =
account.73.line_seize.expires =
account.73.update_ack_while_dialing =
account.73.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.73.always_fwd.enable =
account.73.always_fwd.target =
account.73.always_fwd.off_code =
account.73.always_fwd.on_code =
account.73.busy_fwd.enable =
account.73.busy_fwd.target =
account.73.busy_fwd.off_code =
account.73.busy_fwd.on_code =
account.73.timeout_fwd.enable =
account.73.timeout_fwd.target =
account.73.timeout_fwd.timeout =
account.73.timeout_fwd.off_code =
account.73.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.73.dnd.enable =
account.73.dnd.on_code =
account.73.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.73.reg.enable =
handset.73.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.73.xsi.user =%BWLOGIN-ID-73%
account.73.xsi.password =%XSIPASSWORD-73%
account.73.xsi.host =%XSP_ADDRESS%
account.73.xsi.server_type =
account.73.xsi.port =

#####
#####
##          LADP
##
#####
handset.73.ldap.enable =
handset.73.ldap.name_filter=
handset.73.ldap.number_filter=
handset.73.ldap.host=
handset.73.ldap.port=
handset.73.ldap.base=
handset.73.ldap.user=
handset.73.ldap.password=
handset.73.ldap.max_hits=
handset.73.ldap.name_attr=
handset.73.ldap.numb_attr=
handset.73.ldap.display_name=
handset.73.ldap.version=
handset.73.ldap.call_in_lookup=
handset.73.ldap.ldap_sort=
handset.73.ldap.tls_mode=
handset.73.ldap.call_out_lookup=
handset.73.ldap.incoming_call_special_search.enable=

#####
#####
##          Account74 Settings
##
#####

account.74.enable=%BWLINE-BINARY-74%
account.74.label=%BWEXTENSION-74%
account.74.display_name=%BWCLID-74%
account.74.auth_name=%BWAUTHUSER-74%
account.74.user_name=%BWLINEPORT-74%
account.74.password=%BWAUTHPASSWORD-74%

#W80B ADD
account.74.sip_server.template =
account.74.media_transmit.enable =

account.74.alarm.template =
account.74.alarm.server =
account.74.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.74.sip_server.1.failback_mode =
account.74.sip_server.1.failback_timeout =
account.74.sip_server.1.register_on_enable =
account.74.sip_server.1.failback_subscribe.enable =
account.74.sip_server.1.invite_retry_counts =
account.74.sip_server.1.only_signal_with_registered =

account.74.sip_server.2.failback_mode =
account.74.sip_server.2.failback_timeout =
account.74.sip_server.2.register_on_enable =
account.74.sip_server.2.failback_subscribe.enable =
account.74.sip_server.2.invite_retry_counts =
account.74.sip_server.2.only_signal_with_registered =

account.74.naptr_build =
account.74.fallback.redundancy_type =
account.74.fallback.timeout =

account.74.dns_cache_type =
account.74.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.74.anonymous_call =
account.74.reject_anonymous_call =
account.74.send_anonymous_code =
account.74.anonymous_call_oncode =
account.74.anonymous_call_offcode =
account.74.send_anonymous_rejection_code =
account.74.anonymous_reject_oncode =
account.74.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.74.codec.g722.enable =
account.74.codec.g722.priority =

account.74.codec.g729.enable =
account.74.codec.g729.priority =

account.74.codec.g726_16.enable =
account.74.codec.g726_16.priority =

account.74.codec.g726_24.enable =
account.74.codec.g726_24.priority =

account.74.codec.g726_32.enable =
account.74.codec.g726_32.priority =
```

```
account.74.codec.g726_40.enable =
account.74.codec.g726_40.priority =

account.74.codec.ilbc.enable =
account.74.codec.ilbc.priority =

account.74.codec.pcmu.enable =
account.74.codec.pcmu.priority =

account.74.codec.pcma.enable =
account.74.codec.pcma.priority =

account.74.codec.opus.enable =
account.74.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.74.nat.nat_traversal =
account.74.nat.udp_update_enable =
account.74.nat.udp_update_time =
account.74.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.74.blf.subscribe_period =
account.74.dtmf.type =
account.74.dtmf.dtmf_payload =
account.74.dtmf.info_type =
account.74.100rel_enable =
account.74.subscribe_register =
account.74.subscribe_mwi =
account.74.subscribe_mwi_expires =
account.74.subscribe_mwi_to_vm =
voice_mail.number.74 = %BWVOICE-PORTAL-NUMBER-74%
account.74.display_mwi.enable =
account.74.cid_source =
account.74.cid_source_privacy =
account.74.cid_source_ppi =
account.74.session_timer.enable =
account.74.session_timer.expires =
account.74.session_timer.refresher =
account.74.enable_user_equal_phone =
account.74.srtp_encryption =
account.74.ptime =
account.74.shared_line = %BWSHAREDLINE-BINARY-74%
account.74.register_mac =
account.74.register_line =
account.74.reg_fail_retry_interval =
account.74.reg_failed_retry_min_time =
account.74.reg_failed_retry_max_time =
```



```
#####
#####
##                               Network Conference
##
#####
#####
account.74.conf_type =
account.74.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-74%

account.74.sip_server_type =
account.74.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.74.register_expires_overlap =
account.74.subscribe_expires_overlap =
account.74.auto_dial_enable =
account.74.auto_dial_num =
account.74.cp_source =
account.74.transfer_refer_to_contact_header.enable =
#V80 Add
account.74.custom_ua =
account.74.callpark_enable =
account.74.check_cseq.enable =
account.74.check_to_tag.enable =
account.74.hold_use_inactive =
account.74.line_seize.expires =
account.74.update_ack_while_dialing =
account.74.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.74.always_fwd.enable =
account.74.always_fwd.target =
account.74.always_fwd.off_code =
account.74.always_fwd.on_code =
account.74.busy_fwd.enable =
account.74.busy_fwd.target =
account.74.busy_fwd.off_code =
account.74.busy_fwd.on_code =
account.74.timeout_fwd.enable =
account.74.timeout_fwd.target =
account.74.timeout_fwd.timeout =
account.74.timeout_fwd.off_code =
account.74.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```

account.74.dnd.enable =
account.74.dnd.on_code =
account.74.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.74.reg.enable =
handset.74.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.74.xsi.user =%BWLOGIN-ID-74%
account.74.xsi.password =%XSIPASSWORD-74%
account.74.xsi.host =%XSP_ADDRESS%
account.74.xsi.server_type =
account.74.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.74.ldap.enable =
handset.74.ldap.name_filter=
handset.74.ldap.number_filter=
handset.74.ldap.host=
handset.74.ldap.port=
handset.74.ldap.base=
handset.74.ldap.user=
handset.74.ldap.password=
handset.74.ldap.max_hits=
handset.74.ldap.name_attr=
handset.74.ldap.numb_attr=
handset.74.ldap.display_name=
handset.74.ldap.version=
handset.74.ldap.call_in_lookup=
handset.74.ldap.ldap_sort=
handset.74.ldap.tls_mode=
handset.74.ldap.call_out_lookup=
handset.74.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account75 Settings
##
#####
#####

```

```

account.75.enable=%BWLIN-BINARY-75%
account.75.label=%BWEXTENSION-75%
account.75.display_name=%BWCLID-75%
account.75.auth_name=%BWAUTHUSER-75%
account.75.user_name=%BWLINPORT-75%
account.75.password=%BWAUTHPASSWORD-75%

#W80B ADD
account.75.sip_server.template =
account.75.media_transmit.enable =

account.75.alarm.template =
account.75.alarm.server =
account.75.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.75.sip_server.1.failback_mode =
account.75.sip_server.1.failback_timeout =
account.75.sip_server.1.register_on_enable =
account.75.sip_server.1.failback_subscribe.enable =
account.75.sip_server.1.invite_retry_counts =
account.75.sip_server.1.only_signal_with_registered =

account.75.sip_server.2.failback_mode =
account.75.sip_server.2.failback_timeout =
account.75.sip_server.2.register_on_enable =
account.75.sip_server.2.failback_subscribe.enable =
account.75.sip_server.2.invite_retry_counts =
account.75.sip_server.2.only_signal_with_registered =

account.75.naptr_build =
account.75.fallback.redundancy_type =
account.75.fallback.timeout =

account.75.dns_cache_type =
account.75.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.75.anonymous_call =
account.75.reject_anonymous_call =
account.75.send_anonymous_code =
account.75.anonymous_call_oncode =
account.75.anonymous_call_offcode =
account.75.send_anonymous_rejection_code =
account.75.anonymous_reject_oncode =
account.75.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.75.codec.g722.enable =
account.75.codec.g722.priority =

account.75.codec.g729.enable =
account.75.codec.g729.priority =

account.75.codec.g726_16.enable =
account.75.codec.g726_16.priority =

account.75.codec.g726_24.enable =
account.75.codec.g726_24.priority =

account.75.codec.g726_32.enable =
account.75.codec.g726_32.priority =

account.75.codec.g726_40.enable =
account.75.codec.g726_40.priority =

account.75.codec.ilbc.enable =
account.75.codec.ilbc.priority =

account.75.codec.pcmu.enable =
account.75.codec.pcmu.priority =

account.75.codec.pcma.enable =
account.75.codec.pcma.priority =

account.75.codec.opus.enable =
account.75.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.75.nat.nat_traversal =
account.75.nat.udp_update_enable =
account.75.nat.udp_update_time =
account.75.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.75.blf.subscribe_period =
account.75.dtmf.type =
account.75.dtmf.dtmf_payload =
account.75.dtmf.info_type =
account.75.100rel_enable =
account.75.subscribe_register =
account.75.subscribe_mwi =
account.75.subscribe_mwi_expires =
account.75.subscribe_mwi_to_vm =
voice_mail.number.75 = %BWVOICE-PORTAL-NUMBER-75%
account.75.display_mwi.enable =
account.75.cid_source =
```

```

account.75.cid_source_privacy =
account.75.cid_source_ppi =
account.75.session_timer.enable =
account.75.session_timer.expires =
account.75.session_timer.refresher =
account.75.enable_user_equal_phone =
account.75.srtp_encryption =
account.75.ptime =
account.75.shared_line = %BWSHAREDLINE-BINARY-75%
account.75.register_mac =
account.75.register_line =
account.75.reg_fail_retry_interval =
account.75.reg_failed_retry_min_time =
account.75.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.75.conf_type =
account.75.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-75%

account.75.sip_server_type =
account.75.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.75.register_expires_overlap =
account.75.subscribe_expires_overlap =
account.75.auto_dial_enable =
account.75.auto_dial_num =
account.75.cp_source =
account.75.transfer_refer_to_contact_header.enable =
#V80 Add
account.75.custom_ua =
account.75.callpark_enable =
account.75.check_cseq.enable =
account.75.check_to_tag.enable =
account.75.hold_use_inactive =
account.75.line_seize.expires =
account.75.update_ack_while_dialing =
account.75.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.75.always_fwd.enable =
account.75.always_fwd.target =
account.75.always_fwd.off_code =
account.75.always_fwd.on_code =
account.75.busy_fwd.enable =

```

```
account.75.busy_fwd.target =
account.75.busy_fwd.off_code =
account.75.busy_fwd.on_code =
account.75.timeout_fwd.enable =
account.75.timeout_fwd.target =
account.75.timeout_fwd.timeout =
account.75.timeout_fwd.off_code =
account.75.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.75.dnd.enable =
account.75.dnd.on_code =
account.75.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.75.reg.enable =
handset.75.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.75.xsi.user =%BWLOGIN-ID-75%
account.75.xsi.password =%XSIPASSWORD-75%
account.75.xsi.host =%XSP_ADDRESS%
account.75.xsi.server_type =
account.75.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.75.ldap.enable =
handset.75.ldap.name_filter=
handset.75.ldap.number_filter=
handset.75.ldap.host=
handset.75.ldap.port=
handset.75.ldap.base=
handset.75.ldap.user=
handset.75.ldap.password=
handset.75.ldap.max_hits=
handset.75.ldap.name_attr=
handset.75.ldap.numb_attr=
handset.75.ldap.display_name=
handset.75.ldap.version=
handset.75.ldap.call_in_lookup=
```

```
handset.75.ldap.ldap_sort=
handset.75.ldap.tls_mode=
handset.75.ldap.call_out_lookup=
handset.75.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account76 Settings
##
#####
#####

account.76.enable=%BWLIN-BINARY-76%
account.76.label=%BWEXTENSION-76%
account.76.display_name=%BWCLID-76%
account.76.auth_name=%BWAUTHUSER-76%
account.76.user_name=%BWLINPORT-76%
account.76.password=%BWAUTHPASSWORD-76%

#W80B ADD
account.76.sip_server.template =
account.76.media_transmit.enable =

account.76.alarm.template =
account.76.alarm.server =
account.76.alarm.number =

#####
#####
##                                     Failback
##
##
#####
#####

account.76.sip_server.1.failback_mode =
account.76.sip_server.1.failback_timeout =
account.76.sip_server.1.register_on_enable =
account.76.sip_server.1.failback_subscribe.enable =
account.76.sip_server.1.invite_retry_counts =
account.76.sip_server.1.only_signal_with_registered =

account.76.sip_server.2.failback_mode =
account.76.sip_server.2.failback_timeout =
account.76.sip_server.2.register_on_enable =
account.76.sip_server.2.failback_subscribe.enable =
account.76.sip_server.2.invite_retry_counts =
account.76.sip_server.2.only_signal_with_registered =

account.76.naptr_build =
account.76.fallback.redundancy_type =
account.76.fallback.timeout =

account.76.dns_cache_type =
account.76.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
##
#####
#####
```

```

account.76.anonymous_call =
account.76.reject_anonymous_call =
account.76.send_anonymous_code =
account.76.anonymous_call_oncode =
account.76.anonymous_call_offcode =
account.76.send_anonymous_rejection_code =
account.76.anonymous_reject_oncode =
account.76.anonymous_reject_offcode =

#####
#####
##
##                                Codec
##
#####
#####
account.76.codec.g722.enable =
account.76.codec.g722.priority =

account.76.codec.g729.enable =
account.76.codec.g729.priority =

account.76.codec.g726_16.enable =
account.76.codec.g726_16.priority =

account.76.codec.g726_24.enable =
account.76.codec.g726_24.priority =

account.76.codec.g726_32.enable =
account.76.codec.g726_32.priority =

account.76.codec.g726_40.enable =
account.76.codec.g726_40.priority =

account.76.codec.ilbc.enable =
account.76.codec.ilbc.priority =

account.76.codec.pcmu.enable =
account.76.codec.pcmu.priority =

account.76.codec.pcma.enable =
account.76.codec.pcma.priority =

account.76.codec.opus.enable =
account.76.codec.opus.priority =

#####
#####
##
##                                NAT Settings
##
#####
#####

account.76.nat.nat_traversal =
account.76.nat.udp_update_enable =
account.76.nat.udp_update_time =
account.76.nat.rport =

#####
#####
##
##                                Register Advanced
##

```



```
#####
#####

account.76.blf.subscribe_period =
account.76.dtmf.type =
account.76.dtmf.dtmf_payload =
account.76.dtmf.info_type =
account.76.100rel_enable =
account.76.subscribe_register =
account.76.subscribe_mwi =
account.76.subscribe_mwi_expires =
account.76.subscribe_mwi_to_vm =
voice_mail.number.76 = %BWVOICE-PORTAL-NUMBER-76%
account.76.display_mwi.enable =
account.76.cid_source =
account.76.cid_source_privacy =
account.76.cid_source_ppi =
account.76.session_timer.enable =
account.76.session_timer.expires =
account.76.session_timer.refresher =
account.76.enable_user_equal_phone =
account.76.srtp_encryption =
account.76.ptime =
account.76.shared_line = %BWSHAREDLINE-BINARY-76%
account.76.register_mac =
account.76.register_line =
account.76.reg_fail_retry_interval =
account.76.reg_failed_retry_min_time =
account.76.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.76.conf_type =
account.76.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-76%

account.76.sip_server_type =
account.76.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.76.register_expires_overlap =
account.76.subscribe_expires_overlap =
account.76.auto_dial_enable =
account.76.auto_dial_num =
account.76.cp_source =
account.76.transfer_refer_to_contact_header.enable =
#V80 Add
account.76.custom_ua =
account.76.callpark_enable =
account.76.check_cseq.enable =
account.76.check_to_tag.enable =
account.76.hold_use_inactive =
```

```

account.76.line_seize.expires =
account.76.update_ack_while_dialing =
account.76.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.76.always_fwd.enable =
account.76.always_fwd.target =
account.76.always_fwd.off_code =
account.76.always_fwd.on_code =
account.76.busy_fwd.enable =
account.76.busy_fwd.target =
account.76.busy_fwd.off_code =
account.76.busy_fwd.on_code =
account.76.timeout_fwd.enable =
account.76.timeout_fwd.target =
account.76.timeout_fwd.timeout =
account.76.timeout_fwd.off_code =
account.76.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.76.dnd.enable =
account.76.dnd.on_code =
account.76.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.76.reg.enable =
handset.76.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.76.xsi.user =%BWLOGIN-ID-76%
account.76.xsi.password =%XSIPASSWORD-76%
account.76.xsi.host =%XSP_ADDRESS%
account.76.xsi.server_type =
account.76.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.76.ldap.enable =
handset.76.ldap.name_filter=
handset.76.ldap.number_filter=
handset.76.ldap.host=
handset.76.ldap.port=
handset.76.ldap.base=
handset.76.ldap.user=
handset.76.ldap.password=
handset.76.ldap.max_hits=
handset.76.ldap.name_attr=
handset.76.ldap.numb_attr=
handset.76.ldap.display_name=
handset.76.ldap.version=
handset.76.ldap.call_in_lookup=
handset.76.ldap.ldap_sort=
handset.76.ldap.tls_mode=
handset.76.ldap.call_out_lookup=
handset.76.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account77 Settings
##
#####
#####

account.77.enable=%BWLIN-BINARY-77%
account.77.label=%BWEXTENSION-77%
account.77.display_name=%BWCLID-77%
account.77.auth_name=%BWAUTHUSER-77%
account.77.user_name=%BWLINPORT-77%
account.77.password=%BWAUTHPASSWORD-77%

#W80B ADD
account.77.sip_server.template =
account.77.media_transmit.enable =

account.77.alarm.template =
account.77.alarm.server =
account.77.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.77.sip_server.1.failback_mode =
account.77.sip_server.1.failback_timeout =
account.77.sip_server.1.register_on_enable =
account.77.sip_server.1.failback_subscribe.enable =
account.77.sip_server.1.invite_retry_counts =
account.77.sip_server.1.only_signal_with_registered =

account.77.sip_server.2.failback_mode =
account.77.sip_server.2.failback_timeout =
account.77.sip_server.2.register_on_enable =
account.77.sip_server.2.failback_subscribe.enable =
```

```

account.77.sip_server.2.invite_retry_counts =
account.77.sip_server.2.only_signal_with_registered =

account.77.naptr_build =
account.77.fallback.redundancy_type =
account.77.fallback.timeout =

account.77.dns_cache_type =
account.77.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.77.anonymous_call =
account.77.reject_anonymous_call =
account.77.send_anonymous_code =
account.77.anonymous_call_oncode =
account.77.anonymous_call_offcode =
account.77.send_anonymous_rejection_code =
account.77.anonymous_reject_oncode =
account.77.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.77.codec.g722.enable =
account.77.codec.g722.priority =

account.77.codec.g729.enable =
account.77.codec.g729.priority =

account.77.codec.g726_16.enable =
account.77.codec.g726_16.priority =

account.77.codec.g726_24.enable =
account.77.codec.g726_24.priority =

account.77.codec.g726_32.enable =
account.77.codec.g726_32.priority =

account.77.codec.g726_40.enable =
account.77.codec.g726_40.priority =

account.77.codec.ilbc.enable =
account.77.codec.ilbc.priority =

account.77.codec.pcmu.enable =
account.77.codec.pcmu.priority =

account.77.codec.pcma.enable =
account.77.codec.pcma.priority =

account.77.codec.opus.enable =
account.77.codec.opus.priority =

```

```
#####
#####
##                                     NAT Settings
##
#####
#####

account.77.nat.nat_traversal =
account.77.nat.udp_update_enable =
account.77.nat.udp_update_time =
account.77.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.77.blf.subscribe_period =
account.77.dtmf.type =
account.77.dtmf.dtmf_payload =
account.77.dtmf.info_type =
account.77.100rel_enable =
account.77.subscribe_register =
account.77.subscribe_mwi =
account.77.subscribe_mwi_expires =
account.77.subscribe_mwi_to_vm =
voice_mail.number.77 = %BWVOICE-PORTAL-NUMBER-77%
account.77.display_mwi.enable =
account.77.cid_source =
account.77.cid_source_privacy =
account.77.cid_source_ppi =
account.77.session_timer.enable =
account.77.session_timer.expires =
account.77.session_timer.refreshes =
account.77.enable_user_equal_phone =
account.77.srtp_encryption =
account.77.ptime =
account.77.shared_line = %BWSHAREDLINE-BINARY-77%
account.77.register_mac =
account.77.register_line =
account.77.reg_fail_retry_interval =
account.77.reg_failed_retry_min_time =
account.77.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####

account.77.conf_type =
account.77.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-77%

account.77.sip_server_type =
account.77.unregister_on_reboot =

#####
#####
##                                     Register Other
##
```

```
#####
#####
##DECT V81 Add

account.77.register_expires_overlap =
account.77.subscribe_expires_overlap =
account.77.auto_dial_enable =
account.77.auto_dial_num =
account.77.cp_source =
account.77.transfer_refer_to_contact_header.enable =
#V80 Add
account.77.custom_ua =
account.77.callpark_enable =
account.77.check_cseq.enable =
account.77.check_to_tag.enable =
account.77.hold_use_inactive =
account.77.line_seize.expires =
account.77.update_ack_while_dialing =
account.77.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.77.always_fwd.enable =
account.77.always_fwd.target =
account.77.always_fwd.off_code =
account.77.always_fwd.on_code =
account.77.busy_fwd.enable =
account.77.busy_fwd.target =
account.77.busy_fwd.off_code =
account.77.busy_fwd.on_code =
account.77.timeout_fwd.enable =
account.77.timeout_fwd.target =
account.77.timeout_fwd.timeout =
account.77.timeout_fwd.off_code =
account.77.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.77.dnd.enable =
account.77.dnd.on_code =
account.77.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.77.reg.enable =
handset.77.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.77.xsi.user =%BWLOGIN-ID-77%
account.77.xsi.password =%XSIPASSWORD-77%
account.77.xsi.host =%XSP_ADDRESS%
account.77.xsi.server_type =
account.77.xsi.port =

#####
#####
##          LADP
##
#####
handset.77.ldap.enable =
handset.77.ldap.name_filter=
handset.77.ldap.number_filter=
handset.77.ldap.host=
handset.77.ldap.port=
handset.77.ldap.base=
handset.77.ldap.user=
handset.77.ldap.password=
handset.77.ldap.max_hits=
handset.77.ldap.name_attr=
handset.77.ldap.numb_attr=
handset.77.ldap.display_name=
handset.77.ldap.version=
handset.77.ldap.call_in_lookup=
handset.77.ldap.ldap_sort=
handset.77.ldap.tls_mode=
handset.77.ldap.call_out_lookup=
handset.77.ldap.incoming_call_special_search.enable=

#####
#####
##          Account78 Settings
##
#####

account.78.enable=%BWLINE-BINARY-78%
account.78.label=%BWEXTENSION-78%
account.78.display_name=%BWCLID-78%
account.78.auth_name=%BWAUTHUSER-78%
account.78.user_name=%BWLINEPORT-78%
account.78.password=%BWAUTHPASSWORD-78%

#W80B ADD
account.78.sip_server.template =
account.78.media_transmit.enable =

account.78.alarm.template =
account.78.alarm.server =
account.78.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.78.sip_server.1.failback_mode =
account.78.sip_server.1.failback_timeout =
account.78.sip_server.1.register_on_enable =
account.78.sip_server.1.failback_subscribe.enable =
account.78.sip_server.1.invite_retry_counts =
account.78.sip_server.1.only_signal_with_registered =

account.78.sip_server.2.failback_mode =
account.78.sip_server.2.failback_timeout =
account.78.sip_server.2.register_on_enable =
account.78.sip_server.2.failback_subscribe.enable =
account.78.sip_server.2.invite_retry_counts =
account.78.sip_server.2.only_signal_with_registered =

account.78.naptr_build =
account.78.failback.redundancy_type =
account.78.failback.timeout =

account.78.dns_cache_type =
account.78.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.78.anonymous_call =
account.78.reject_anonymous_call =
account.78.send_anonymous_code =
account.78.anonymous_call_oncode =
account.78.anonymous_call_offcode =
account.78.send_anonymous_rejection_code =
account.78.anonymous_reject_oncode =
account.78.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.78.codec.g722.enable =
account.78.codec.g722.priority =

account.78.codec.g729.enable =
account.78.codec.g729.priority =

account.78.codec.g726_16.enable =
account.78.codec.g726_16.priority =

account.78.codec.g726_24.enable =
account.78.codec.g726_24.priority =

account.78.codec.g726_32.enable =
account.78.codec.g726_32.priority =
```



```

account.78.codec.g726_40.enable =
account.78.codec.g726_40.priority =

account.78.codec.ilbc.enable =
account.78.codec.ilbc.priority =

account.78.codec.pcmu.enable =
account.78.codec.pcmu.priority =

account.78.codec.pcma.enable =
account.78.codec.pcma.priority =

account.78.codec.opus.enable =
account.78.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.78.nat.nat_traversal =
account.78.nat.udp_update_enable =
account.78.nat.udp_update_time =
account.78.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.78.blf.subscribe_period =
account.78.dtmf.type =
account.78.dtmf.dtmf_payload =
account.78.dtmf.info_type =
account.78.100rel_enable =
account.78.subscribe_register =
account.78.subscribe_mwi =
account.78.subscribe_mwi_expires =
account.78.subscribe_mwi_to_vm =
voice_mail.number.78 = %BWVOICE-PORTAL-NUMBER-78%
account.78.display_mwi.enable =
account.78.cid_source =
account.78.cid_source_privacy =
account.78.cid_source_ppi =
account.78.session_timer.enable =
account.78.session_timer.expires =
account.78.session_timer.refresher =
account.78.enable_user_equal_phone =
account.78.srtp_encryption =
account.78.ptime =
account.78.shared_line = %BWSHAREDLINE-BINARY-78%
account.78.register_mac =
account.78.register_line =
account.78.reg_fail_retry_interval =
account.78.reg_failed_retry_min_time =
account.78.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.78.conf_type =
account.78.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-78%

account.78.sip_server_type =
account.78.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.78.register_expires_overlap =
account.78.subscribe_expires_overlap =
account.78.auto_dial_enable =
account.78.auto_dial_num =
account.78.cp_source =
account.78.transfer_refer_to_contact_header.enable =
#V80 Add
account.78.custom_ua =
account.78.callpark_enable =
account.78.check_cseq.enable =
account.78.check_to_tag.enable =
account.78.hold_use_inactive =
account.78.line_seize.expires =
account.78.update_ack_while_dialing =
account.78.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.78.always_fwd.enable =
account.78.always_fwd.target =
account.78.always_fwd.off_code =
account.78.always_fwd.on_code =
account.78.busy_fwd.enable =
account.78.busy_fwd.target =
account.78.busy_fwd.off_code =
account.78.busy_fwd.on_code =
account.78.timeout_fwd.enable =
account.78.timeout_fwd.target =
account.78.timeout_fwd.timeout =
account.78.timeout_fwd.off_code =
account.78.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```
account.78.dnd.enable =
account.78.dnd.on_code =
account.78.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.78.reg.enable =
handset.78.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.78.xsi.user =%BWLOGIN-ID-78%
account.78.xsi.password =%XSIPASSWORD-78%
account.78.xsi.host =%XSP_ADDRESS%
account.78.xsi.server_type =
account.78.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.78.ldap.enable =
handset.78.ldap.name_filter=
handset.78.ldap.number_filter=
handset.78.ldap.host=
handset.78.ldap.port=
handset.78.ldap.base=
handset.78.ldap.user=
handset.78.ldap.password=
handset.78.ldap.max_hits=
handset.78.ldap.name_attr=
handset.78.ldap.numb_attr=
handset.78.ldap.display_name=
handset.78.ldap.version=
handset.78.ldap.call_in_lookup=
handset.78.ldap.ldap_sort=
handset.78.ldap.tls_mode=
handset.78.ldap.call_out_lookup=
handset.78.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account79 Settings
##
#####
#####
```

```

account.79.enable=%BWLIN-BINARY-79%
account.79.label=%BWEXTENSION-79%
account.79.display_name=%BWCLID-79%
account.79.auth_name=%BWAUTHUSER-79%
account.79.user_name=%BWLINPORT-79%
account.79.password=%BWAUTHPASSWORD-79%

#W80B ADD
account.79.sip_server.template =
account.79.media_transmit.enable =

account.79.alarm.template =
account.79.alarm.server =
account.79.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.79.sip_server.1.failback_mode =
account.79.sip_server.1.failback_timeout =
account.79.sip_server.1.register_on_enable =
account.79.sip_server.1.failback_subscribe.enable =
account.79.sip_server.1.invite_retry_counts =
account.79.sip_server.1.only_signal_with_registered =

account.79.sip_server.2.failback_mode =
account.79.sip_server.2.failback_timeout =
account.79.sip_server.2.register_on_enable =
account.79.sip_server.2.failback_subscribe.enable =
account.79.sip_server.2.invite_retry_counts =
account.79.sip_server.2.only_signal_with_registered =

account.79.naptr_build =
account.79.fallback.redundancy_type =
account.79.fallback.timeout =

account.79.dns_cache_type =
account.79.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.79.anonymous_call =
account.79.reject_anonymous_call =
account.79.send_anonymous_code =
account.79.anonymous_call_oncode =
account.79.anonymous_call_offcode =
account.79.send_anonymous_rejection_code =
account.79.anonymous_reject_oncode =
account.79.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.79.codec.g722.enable =
account.79.codec.g722.priority =

account.79.codec.g729.enable =
account.79.codec.g729.priority =

account.79.codec.g726_16.enable =
account.79.codec.g726_16.priority =

account.79.codec.g726_24.enable =
account.79.codec.g726_24.priority =

account.79.codec.g726_32.enable =
account.79.codec.g726_32.priority =

account.79.codec.g726_40.enable =
account.79.codec.g726_40.priority =

account.79.codec.ilbc.enable =
account.79.codec.ilbc.priority =

account.79.codec.pcmu.enable =
account.79.codec.pcmu.priority =

account.79.codec.pcma.enable =
account.79.codec.pcma.priority =

account.79.codec.opus.enable =
account.79.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.79.nat.nat_traversal =
account.79.nat.udp_update_enable =
account.79.nat.udp_update_time =
account.79.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.79.blf.subscribe_period =
account.79.dtmf.type =
account.79.dtmf.dtmf_payload =
account.79.dtmf.info_type =
account.79.100rel_enable =
account.79.subscribe_register =
account.79.subscribe_mwi =
account.79.subscribe_mwi_expires =
account.79.subscribe_mwi_to_vm =
voice_mail.number.79 = %BWVOICE-PORTAL-NUMBER-79%
account.79.display_mwi.enable =
account.79.cid_source =
```

```

account.79.cid_source_privacy =
account.79.cid_source_ppi =
account.79.session_timer.enable =
account.79.session_timer.expires =
account.79.session_timer.refresher =
account.79.enable_user_equal_phone =
account.79.srtp_encryption =
account.79.ptime =
account.79.shared_line = %BWSHAREDLINE-BINARY-79%
account.79.register_mac =
account.79.register_line =
account.79.reg_fail_retry_interval =
account.79.reg_failed_retry_min_time =
account.79.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.79.conf_type =
account.79.conf_uri = %BWNWORK-CONFERENCE-SIPURI-79%

account.79.sip_server_type =
account.79.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.79.register_expires_overlap =
account.79.subscribe_expires_overlap =
account.79.auto_dial_enable =
account.79.auto_dial_num =
account.79.cp_source =
account.79.transfer_refer_to_contact_header.enable =
#V80 Add
account.79.custom_ua =
account.79.callpark_enable =
account.79.check_cseq.enable =
account.79.check_to_tag.enable =
account.79.hold_use_inactive =
account.79.line_seize.expires =
account.79.update_ack_while_dialing =
account.79.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.79.always_fwd.enable =
account.79.always_fwd.target =
account.79.always_fwd.off_code =
account.79.always_fwd.on_code =
account.79.busy_fwd.enable =

```

```

account.79.busy_fwd.target =
account.79.busy_fwd.off_code =
account.79.busy_fwd.on_code =
account.79.timeout_fwd.enable =
account.79.timeout_fwd.target =
account.79.timeout_fwd.timeout =
account.79.timeout_fwd.off_code =
account.79.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.79.dnd.enable =
account.79.dnd.on_code =
account.79.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.79.reg.enable =
handset.79.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.79.xsi.user =%BWLOGIN-ID-79%
account.79.xsi.password =%XSIPASSWORD-79%
account.79.xsi.host =%XSP_ADDRESS%
account.79.xsi.server_type =
account.79.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.79.ldap.enable =
handset.79.ldap.name_filter=
handset.79.ldap.number_filter=
handset.79.ldap.host=
handset.79.ldap.port=
handset.79.ldap.base=
handset.79.ldap.user=
handset.79.ldap.password=
handset.79.ldap.max_hits=
handset.79.ldap.name_attr=
handset.79.ldap.numb_attr=
handset.79.ldap.display_name=
handset.79.ldap.version=
handset.79.ldap.call_in_lookup=

```

```

handset.79.ldap.ldap_sort=
handset.79.ldap.tls_mode=
handset.79.ldap.call_out_lookup=
handset.79.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account80 Settings
##
#####
#####

account.80.enable=%BWLIN-BINARY-80%
account.80.label=%BWEXTENSION-80%
account.80.display_name=%BWCLID-80%
account.80.auth_name=%BWAUTHUSER-80%
account.80.user_name=%BWLINPORT-80%
account.80.password=%BWAUTHPASSWORD-80%

#W80B ADD
account.80.sip_server.template =
account.80.media_transmit.enable =

account.80.alarm.template =
account.80.alarm.server =
account.80.alarm.number =

#####
#####
##                                     Failback
##
##
#####
#####

account.80.sip_server.1.failback_mode =
account.80.sip_server.1.failback_timeout =
account.80.sip_server.1.register_on_enable =
account.80.sip_server.1.failback_subscribe.enable =
account.80.sip_server.1.invite_retry_counts =
account.80.sip_server.1.only_signal_with_registered =

account.80.sip_server.2.failback_mode =
account.80.sip_server.2.failback_timeout =
account.80.sip_server.2.register_on_enable =
account.80.sip_server.2.failback_subscribe.enable =
account.80.sip_server.2.invite_retry_counts =
account.80.sip_server.2.only_signal_with_registered =

account.80.naptr_build =
account.80.fallback.redundancy_type =
account.80.fallback.timeout =

account.80.dns_cache_type =
account.80.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
##
#####
#####

```



```
account.80.anonymous_call =
account.80.reject_anonymous_call =
account.80.send_anonymous_code =
account.80.anonymous_call_oncode =
account.80.anonymous_call_offcode =
account.80.send_anonymous_rejection_code =
account.80.anonymous_reject_oncode =
account.80.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.80.codec.g722.enable =
account.80.codec.g722.priority =

account.80.codec.g729.enable =
account.80.codec.g729.priority =

account.80.codec.g726_16.enable =
account.80.codec.g726_16.priority =

account.80.codec.g726_24.enable =
account.80.codec.g726_24.priority =

account.80.codec.g726_32.enable =
account.80.codec.g726_32.priority =

account.80.codec.g726_40.enable =
account.80.codec.g726_40.priority =

account.80.codec.ilbc.enable =
account.80.codec.ilbc.priority =

account.80.codec.pcmu.enable =
account.80.codec.pcmu.priority =

account.80.codec.pcma.enable =
account.80.codec.pcma.priority =

account.80.codec.opus.enable =
account.80.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
##
#####
#####

account.80.nat.nat_traversal =
account.80.nat.udp_update_enable =
account.80.nat.udp_update_time =
account.80.nat.rport =

#####
#####
##                                     Register Advanced
##
##
```

```
#####
#####

account.80.blf.subscribe_period =
account.80.dtmf.type =
account.80.dtmf.dtmf_payload =
account.80.dtmf.info_type =
account.80.100rel_enable =
account.80.subscribe_register =
account.80.subscribe_mwi =
account.80.subscribe_mwi_expires =
account.80.subscribe_mwi_to_vm =
voice_mail.number.80 = %BWVOICE-PORTAL-NUMBER-80%
account.80.display_mwi.enable =
account.80.cid_source =
account.80.cid_source_privacy =
account.80.cid_source_ppi =
account.80.session_timer.enable =
account.80.session_timer.expires =
account.80.session_timer.refresher =
account.80.enable_user_equal_phone =
account.80.srtp_encryption =
account.80.ptime =
account.80.shared_line = %BWSHAREDLINE-BINARY-80%
account.80.register_mac =
account.80.register_line =
account.80.reg_fail_retry_interval =
account.80.reg_failed_retry_min_time =
account.80.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.80.conf_type =
account.80.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-80%

account.80.sip_server_type =
account.80.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.80.register_expires_overlap =
account.80.subscribe_expires_overlap =
account.80.auto_dial_enable =
account.80.auto_dial_num =
account.80.cp_source =
account.80.transfer_refer_to_contact_header.enable =
#V80 Add
account.80.custom_ua =
account.80.callpark_enable =
account.80.check_cseq.enable =
account.80.check_to_tag.enable =
account.80.hold_use_inactive =
```

```

account.80.line_seize.expires =
account.80.update_ack_while_dialing =
account.80.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.80.always_fwd.enable =
account.80.always_fwd.target =
account.80.always_fwd.off_code =
account.80.always_fwd.on_code =
account.80.busy_fwd.enable =
account.80.busy_fwd.target =
account.80.busy_fwd.off_code =
account.80.busy_fwd.on_code =
account.80.timeout_fwd.enable =
account.80.timeout_fwd.target =
account.80.timeout_fwd.timeout =
account.80.timeout_fwd.off_code =
account.80.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.80.dnd.enable =
account.80.dnd.on_code =
account.80.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.80.reg.enable =
handset.80.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.80.xsi.user =%BWLOGIN-ID-80%
account.80.xsi.password =%XSIPASSWORD-80%
account.80.xsi.host =%XSP_ADDRESS%
account.80.xsi.server_type =
account.80.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.80.ldap.enable =
handset.80.ldap.name_filter=
handset.80.ldap.number_filter=
handset.80.ldap.host=
handset.80.ldap.port=
handset.80.ldap.base=
handset.80.ldap.user=
handset.80.ldap.password=
handset.80.ldap.max_hits=
handset.80.ldap.name_attr=
handset.80.ldap.numb_attr=
handset.80.ldap.display_name=
handset.80.ldap.version=
handset.80.ldap.call_in_lookup=
handset.80.ldap.ldap_sort=
handset.80.ldap.tls_mode=
handset.80.ldap.call_out_lookup=
handset.80.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account81 Settings
##
#####
#####

account.81.enable=%BWLIN-BINARY-81%
account.81.label=%BWEXTENSION-81%
account.81.display_name=%BWCLID-81%
account.81.auth_name=%BWAUTHUSER-81%
account.81.user_name=%BWLINPORT-81%
account.81.password=%BWAUTHPASSWORD-81%

#W80B ADD
account.81.sip_server.template =
account.81.media_transmit.enable =

account.81.alarm.template =
account.81.alarm.server =
account.81.alarm.number =

#####
#####
##                               Failback
##
#####
#####

account.81.sip_server.1.failback_mode =
account.81.sip_server.1.failback_timeout =
account.81.sip_server.1.register_on_enable =
account.81.sip_server.1.failback_subscribe.enable =
account.81.sip_server.1.invite_retry_counts =
account.81.sip_server.1.only_signal_with_registered =

account.81.sip_server.2.failback_mode =
account.81.sip_server.2.failback_timeout =
account.81.sip_server.2.register_on_enable =
account.81.sip_server.2.failback_subscribe.enable =
```

```
account.81.sip_server.2.invite_retry_counts =
account.81.sip_server.2.only_signal_with_registered =

account.81.naptr_build =
account.81.fallback.redundancy_type =
account.81.fallback.timeout =

account.81.dns_cache_type =
account.81.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.81.anonymous_call =
account.81.reject_anonymous_call =
account.81.send_anonymous_code =
account.81.anonymous_call_oncode =
account.81.anonymous_call_offcode =
account.81.send_anonymous_rejection_code =
account.81.anonymous_reject_oncode =
account.81.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.81.codec.g722.enable =
account.81.codec.g722.priority =

account.81.codec.g729.enable =
account.81.codec.g729.priority =

account.81.codec.g726_16.enable =
account.81.codec.g726_16.priority =

account.81.codec.g726_24.enable =
account.81.codec.g726_24.priority =

account.81.codec.g726_32.enable =
account.81.codec.g726_32.priority =

account.81.codec.g726_40.enable =
account.81.codec.g726_40.priority =

account.81.codec.ilbc.enable =
account.81.codec.ilbc.priority =

account.81.codec.pcmu.enable =
account.81.codec.pcmu.priority =

account.81.codec.pcma.enable =
account.81.codec.pcma.priority =

account.81.codec.opus.enable =
account.81.codec.opus.priority =
```

```
#####
#####
##                                NAT Settings
##
#####
#####

account.81.nat.nat_traversal =
account.81.nat.udp_update_enable =
account.81.nat.udp_update_time =
account.81.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.81.blf.subscribe_period =
account.81.dtmf.type =
account.81.dtmf.dtmf_payload =
account.81.dtmf.info_type =
account.81.100rel_enable =
account.81.subscribe_register =
account.81.subscribe_mwi =
account.81.subscribe_mwi_expires =
account.81.subscribe_mwi_to_vm =
voice_mail.number.81 = %BWVOICE-PORTAL-NUMBER-81%
account.81.display_mwi.enable =
account.81.cid_source =
account.81.cid_source_privacy =
account.81.cid_source_ppi =
account.81.session_timer.enable =
account.81.session_timer.expires =
account.81.session_timer.refresher =
account.81.enable_user_equal_phone =
account.81.srtp_encryption =
account.81.ptime =
account.81.shared_line = %BWSHAREDLINE-BINARY-81%
account.81.register_mac =
account.81.register_line =
account.81.reg_fail_retry_interval =
account.81.reg_failed_retry_min_time =
account.81.reg_failed_retry_max_time =

#####
#####
##                                Network Conference
##
#####
#####

account.81.conf_type =
account.81.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-81%

account.81.sip_server_type =
account.81.unregister_on_reboot =

#####
#####
##                                Register Other
##
##
```

```
#####
#####
##DECT V81 Add

account.81.register_expires_overlap =
account.81.subscribe_expires_overlap =
account.81.auto_dial_enable =
account.81.auto_dial_num =
account.81.cp_source =
account.81.transfer_refer_to_contact_header.enable =
#V80 Add
account.81.custom_ua =
account.81.callpark_enable =
account.81.check_cseq.enable =
account.81.check_to_tag.enable =
account.81.hold_use_inactive =
account.81.line_seize.expires =
account.81.update_ack_while_dialing =
account.81.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.81.always_fwd.enable =
account.81.always_fwd.target =
account.81.always_fwd.off_code =
account.81.always_fwd.on_code =
account.81.busy_fwd.enable =
account.81.busy_fwd.target =
account.81.busy_fwd.off_code =
account.81.busy_fwd.on_code =
account.81.timeout_fwd.enable =
account.81.timeout_fwd.target =
account.81.timeout_fwd.timeout =
account.81.timeout_fwd.off_code =
account.81.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.81.dnd.enable =
account.81.dnd.on_code =
account.81.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.81.reg.enable =
handset.81.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.81.xsi.user =%BWLOGIN-ID-81%
account.81.xsi.password =%XSIPASSWORD-81%
account.81.xsi.host =%XSP_ADDRESS%
account.81.xsi.server_type =
account.81.xsi.port =

#####
#####
##          LADP
##
#####
handset.81.ldap.enable =
handset.81.ldap.name_filter=
handset.81.ldap.number_filter=
handset.81.ldap.host=
handset.81.ldap.port=
handset.81.ldap.base=
handset.81.ldap.user=
handset.81.ldap.password=
handset.81.ldap.max_hits=
handset.81.ldap.name_attr=
handset.81.ldap.numb_attr=
handset.81.ldap.display_name=
handset.81.ldap.version=
handset.81.ldap.call_in_lookup=
handset.81.ldap.ldap_sort=
handset.81.ldap.tls_mode=
handset.81.ldap.call_out_lookup=
handset.81.ldap.incoming_call_special_search.enable=

#####
#####
##          Account82 Settings
##
#####

account.82.enable=%BWLINE-BINARY-82%
account.82.label=%BWEXTENSION-82%
account.82.display_name=%BWCLID-82%
account.82.auth_name=%BWAUTHUSER-82%
account.82.user_name=%BWLINEPORT-82%
account.82.password=%BWAUTHPASSWORD-82%

#W80B ADD
account.82.sip_server.template =
account.82.media_transmit.enable =

account.82.alarm.template =
account.82.alarm.server =
account.82.alarm.number =

```



```
#####
#####
##                               Failback
##
#####
#####
account.82.sip_server.1.failback_mode =
account.82.sip_server.1.failback_timeout =
account.82.sip_server.1.register_on_enable =
account.82.sip_server.1.failback_subscribe.enable =
account.82.sip_server.1.invite_retry_counts =
account.82.sip_server.1.only_signal_with_registered =

account.82.sip_server.2.failback_mode =
account.82.sip_server.2.failback_timeout =
account.82.sip_server.2.register_on_enable =
account.82.sip_server.2.failback_subscribe.enable =
account.82.sip_server.2.invite_retry_counts =
account.82.sip_server.2.only_signal_with_registered =

account.82.naptr_build =
account.82.fallback.redundancy_type =
account.82.fallback.timeout =

account.82.dns_cache_type =
account.82.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.82.anonymous_call =
account.82.reject_anonymous_call =
account.82.send_anonymous_code =
account.82.anonymous_call_oncode =
account.82.anonymous_call_offcode =
account.82.send_anonymous_rejection_code =
account.82.anonymous_reject_oncode =
account.82.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.82.codec.g722.enable =
account.82.codec.g722.priority =

account.82.codec.g729.enable =
account.82.codec.g729.priority =

account.82.codec.g726_16.enable =
account.82.codec.g726_16.priority =

account.82.codec.g726_24.enable =
account.82.codec.g726_24.priority =

account.82.codec.g726_32.enable =
account.82.codec.g726_32.priority =
```

```

account.82.codec.g726_40.enable =
account.82.codec.g726_40.priority =

account.82.codec.ilbc.enable =
account.82.codec.ilbc.priority =

account.82.codec.pcmu.enable =
account.82.codec.pcmu.priority =

account.82.codec.pcma.enable =
account.82.codec.pcma.priority =

account.82.codec.opus.enable =
account.82.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.82.nat.nat_traversal =
account.82.nat.udp_update_enable =
account.82.nat.udp_update_time =
account.82.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.82.blf.subscribe_period =
account.82.dtmf.type =
account.82.dtmf.dtmf_payload =
account.82.dtmf.info_type =
account.82.100rel_enable =
account.82.subscribe_register =
account.82.subscribe_mwi =
account.82.subscribe_mwi_expires =
account.82.subscribe_mwi_to_vm =
voice_mail.number.82 = %BWVOICE-PORTAL-NUMBER-82%
account.82.display_mwi.enable =
account.82.cid_source =
account.82.cid_source_privacy =
account.82.cid_source_ppi =
account.82.session_timer.enable =
account.82.session_timer.expires =
account.82.session_timer.refresher =
account.82.enable_user_equal_phone =
account.82.srtp_encryption =
account.82.ptime =
account.82.shared_line = %BWSHAREDLINE-BINARY-82%
account.82.register_mac =
account.82.register_line =
account.82.reg_fail_retry_interval =
account.82.reg_failed_retry_min_time =
account.82.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.82.conf_type =
account.82.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-82%

account.82.sip_server_type =
account.82.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.82.register_expires_overlap =
account.82.subscribe_expires_overlap =
account.82.auto_dial_enable =
account.82.auto_dial_num =
account.82.cp_source =
account.82.transfer_refer_to_contact_header.enable =
#V80 Add
account.82.custom_ua =
account.82.callpark_enable =
account.82.check_cseq.enable =
account.82.check_to_tag.enable =
account.82.hold_use_inactive =
account.82.line_seize.expires =
account.82.update_ack_while_dialing =
account.82.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.82.always_fwd.enable =
account.82.always_fwd.target =
account.82.always_fwd.off_code =
account.82.always_fwd.on_code =
account.82.busy_fwd.enable =
account.82.busy_fwd.target =
account.82.busy_fwd.off_code =
account.82.busy_fwd.on_code =
account.82.timeout_fwd.enable =
account.82.timeout_fwd.target =
account.82.timeout_fwd.timeout =
account.82.timeout_fwd.off_code =
account.82.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```

account.82.dnd.enable =
account.82.dnd.on_code =
account.82.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.82.reg.enable =
handset.82.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.82.xsi.user =%BWLOGIN-ID-82%
account.82.xsi.password =%XSIPASSWORD-82%
account.82.xsi.host =%XSP_ADDRESS%
account.82.xsi.server_type =
account.82.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.82.ldap.enable =
handset.82.ldap.name_filter=
handset.82.ldap.number_filter=
handset.82.ldap.host=
handset.82.ldap.port=
handset.82.ldap.base=
handset.82.ldap.user=
handset.82.ldap.password=
handset.82.ldap.max_hits=
handset.82.ldap.name_attr=
handset.82.ldap.numb_attr=
handset.82.ldap.display_name=
handset.82.ldap.version=
handset.82.ldap.call_in_lookup=
handset.82.ldap.ldap_sort=
handset.82.ldap.tls_mode=
handset.82.ldap.call_out_lookup=
handset.82.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account83 Settings
##
#####
#####

```

```

account.83.enable=%BWLIN-BINARY-83%
account.83.label=%BWEXTENSION-83%
account.83.display_name=%BWCLID-83%
account.83.auth_name=%BWAUTHUSER-83%
account.83.user_name=%BWLINPORT-83%
account.83.password=%BWAUTHPASSWORD-83%

#W80B ADD
account.83.sip_server.template =
account.83.media_transmit.enable =

account.83.alarm.template =
account.83.alarm.server =
account.83.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.83.sip_server.1.failback_mode =
account.83.sip_server.1.failback_timeout =
account.83.sip_server.1.register_on_enable =
account.83.sip_server.1.failback_subscribe.enable =
account.83.sip_server.1.invite_retry_counts =
account.83.sip_server.1.only_signal_with_registered =

account.83.sip_server.2.failback_mode =
account.83.sip_server.2.failback_timeout =
account.83.sip_server.2.register_on_enable =
account.83.sip_server.2.failback_subscribe.enable =
account.83.sip_server.2.invite_retry_counts =
account.83.sip_server.2.only_signal_with_registered =

account.83.naptr_build =
account.83.fallback.redundancy_type =
account.83.fallback.timeout =

account.83.dns_cache_type =
account.83.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.83.anonymous_call =
account.83.reject_anonymous_call =
account.83.send_anonymous_code =
account.83.anonymous_call_oncode =
account.83.anonymous_call_offcode =
account.83.send_anonymous_rejection_code =
account.83.anonymous_reject_oncode =
account.83.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.83.codec.g722.enable =
account.83.codec.g722.priority =

account.83.codec.g729.enable =
account.83.codec.g729.priority =

account.83.codec.g726_16.enable =
account.83.codec.g726_16.priority =

account.83.codec.g726_24.enable =
account.83.codec.g726_24.priority =

account.83.codec.g726_32.enable =
account.83.codec.g726_32.priority =

account.83.codec.g726_40.enable =
account.83.codec.g726_40.priority =

account.83.codec.ilbc.enable =
account.83.codec.ilbc.priority =

account.83.codec.pcmu.enable =
account.83.codec.pcmu.priority =

account.83.codec.pcma.enable =
account.83.codec.pcma.priority =

account.83.codec.opus.enable =
account.83.codec.opus.priority =

#####
#####
##                                NAT Settings
##
#####
#####

account.83.nat.nat_traversal =
account.83.nat.udp_update_enable =
account.83.nat.udp_update_time =
account.83.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.83.blf.subscribe_period =
account.83.dtmf.type =
account.83.dtmf.dtmf_payload =
account.83.dtmf.info_type =
account.83.100rel_enable =
account.83.subscribe_register =
account.83.subscribe_mwi =
account.83.subscribe_mwi_expires =
account.83.subscribe_mwi_to_vm =
voice_mail.number.83 = %BWVOICE-PORTAL-NUMBER-83%
account.83.display_mwi.enable =
account.83.cid_source =
```

```

account.83.cid_source_privacy =
account.83.cid_source_ppi =
account.83.session_timer.enable =
account.83.session_timer.expires =
account.83.session_timer.refresher =
account.83.enable_user_equal_phone =
account.83.srtp_encryption =
account.83.ptime =
account.83.shared_line = %BWSHAREDLINE-BINARY-83%
account.83.register_mac =
account.83.register_line =
account.83.reg_fail_retry_interval =
account.83.reg_failed_retry_min_time =
account.83.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.83.conf_type =
account.83.conf_uri = %BWNWORK-CONFERENCE-SIPURI-83%

account.83.sip_server_type =
account.83.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.83.register_expires_overlap =
account.83.subscribe_expires_overlap =
account.83.auto_dial_enable =
account.83.auto_dial_num =
account.83.cp_source =
account.83.transfer_refer_to_contact_header.enable =
#V80 Add
account.83.custom_ua =
account.83.callpark_enable =
account.83.check_cseq.enable =
account.83.check_to_tag.enable =
account.83.hold_use_inactive =
account.83.line_seize.expires =
account.83.update_ack_while_dialing =
account.83.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.83.always_fwd.enable =
account.83.always_fwd.target =
account.83.always_fwd.off_code =
account.83.always_fwd.on_code =
account.83.busy_fwd.enable =

```

```
account.83.busy_fwd.target =
account.83.busy_fwd.off_code =
account.83.busy_fwd.on_code =
account.83.timeout_fwd.enable =
account.83.timeout_fwd.target =
account.83.timeout_fwd.timeout =
account.83.timeout_fwd.off_code =
account.83.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.83.dnd.enable =
account.83.dnd.on_code =
account.83.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.83.reg.enable =
handset.83.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.83.xsi.user =%BWLOGIN-ID-83%
account.83.xsi.password =%XSIPASSWORD-83%
account.83.xsi.host =%XSP_ADDRESS%
account.83.xsi.server_type =
account.83.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.83.ldap.enable =
handset.83.ldap.name_filter=
handset.83.ldap.number_filter=
handset.83.ldap.host=
handset.83.ldap.port=
handset.83.ldap.base=
handset.83.ldap.user=
handset.83.ldap.password=
handset.83.ldap.max_hits=
handset.83.ldap.name_attr=
handset.83.ldap.numb_attr=
handset.83.ldap.display_name=
handset.83.ldap.version=
handset.83.ldap.call_in_lookup=
```



```

handset.83.ldap.ldap_sort=
handset.83.ldap.tls_mode=
handset.83.ldap.call_out_lookup=
handset.83.ldap.incoming_call_special_search.enable=

#####
#####
##
##                               Account84 Settings
##
#####
#####

account.84.enable=%BWLIN-BINARY-84%
account.84.label=%BWEXTENSION-84%
account.84.display_name=%BWCLID-84%
account.84.auth_name=%BWAUTHUSER-84%
account.84.user_name=%BWLINPORT-84%
account.84.password=%BWAUTHPASSWORD-84%

#W80B ADD
account.84.sip_server.template =
account.84.media_transmit.enable =

account.84.alarm.template =
account.84.alarm.server =
account.84.alarm.number =

#####
#####
##
##                               Failback
##
#####
#####

account.84.sip_server.1.failback_mode =
account.84.sip_server.1.failback_timeout =
account.84.sip_server.1.register_on_enable =
account.84.sip_server.1.failback_subscribe.enable =
account.84.sip_server.1.invite_retry_counts =
account.84.sip_server.1.only_signal_with_registered =

account.84.sip_server.2.failback_mode =
account.84.sip_server.2.failback_timeout =
account.84.sip_server.2.register_on_enable =
account.84.sip_server.2.failback_subscribe.enable =
account.84.sip_server.2.invite_retry_counts =
account.84.sip_server.2.only_signal_with_registered =

account.84.naptr_build =
account.84.fallback.redundancy_type =
account.84.fallback.timeout =

account.84.dns_cache_type =
account.84.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##
##                               Basic
##
#####
#####

```

```
account.84.anonymous_call =
account.84.reject_anonymous_call =
account.84.send_anonymous_code =
account.84.anonymous_call_oncode =
account.84.anonymous_call_offcode =
account.84.send_anonymous_rejection_code =
account.84.anonymous_reject_oncode =
account.84.anonymous_reject_offcode =

#####
#####
##
##                               Codec
##
#####
#####
account.84.codec.g722.enable =
account.84.codec.g722.priority =

account.84.codec.g729.enable =
account.84.codec.g729.priority =

account.84.codec.g726_16.enable =
account.84.codec.g726_16.priority =

account.84.codec.g726_24.enable =
account.84.codec.g726_24.priority =

account.84.codec.g726_32.enable =
account.84.codec.g726_32.priority =

account.84.codec.g726_40.enable =
account.84.codec.g726_40.priority =

account.84.codec.ilbc.enable =
account.84.codec.ilbc.priority =

account.84.codec.pcmu.enable =
account.84.codec.pcmu.priority =

account.84.codec.pcma.enable =
account.84.codec.pcma.priority =

account.84.codec.opus.enable =
account.84.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####
account.84.nat.nat_traversal =
account.84.nat.udp_update_enable =
account.84.nat.udp_update_time =
account.84.nat.rport =

#####
#####
##
##                               Register Advanced
##
```

```
#####
#####

account.84.blf.subscribe_period =
account.84.dtmf.type =
account.84.dtmf.dtmf_payload =
account.84.dtmf.info_type =
account.84.100rel_enable =
account.84.subscribe_register =
account.84.subscribe_mwi =
account.84.subscribe_mwi_expires =
account.84.subscribe_mwi_to_vm =
voice_mail.number.84 = %BWVOICE-PORTAL-NUMBER-84%
account.84.display_mwi.enable =
account.84.cid_source =
account.84.cid_source_privacy =
account.84.cid_source_ppi =
account.84.session_timer.enable =
account.84.session_timer.expires =
account.84.session_timer.refresher =
account.84.enable_user_equal_phone =
account.84.srtp_encryption =
account.84.ptime =
account.84.shared_line = %BWSHAREDLINE-BINARY-84%
account.84.register_mac =
account.84.register_line =
account.84.reg_fail_retry_interval =
account.84.reg_failed_retry_min_time =
account.84.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.84.conf_type =
account.84.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-84%

account.84.sip_server_type =
account.84.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
##DECT V81 Add

account.84.register_expires_overlap =
account.84.subscribe_expires_overlap =
account.84.auto_dial_enable =
account.84.auto_dial_num =
account.84.cp_source =
account.84.transfer_refer_to_contact_header.enable =
#V80 Add
account.84.custom_ua =
account.84.callpark_enable =
account.84.check_cseq.enable =
account.84.check_to_tag.enable =
account.84.hold_use_inactive =
```

```

account.84.line_seize.expires =
account.84.update_ack_while_dialing =
account.84.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.84.always_fwd.enable =
account.84.always_fwd.target =
account.84.always_fwd.off_code =
account.84.always_fwd.on_code =
account.84.busy_fwd.enable =
account.84.busy_fwd.target =
account.84.busy_fwd.off_code =
account.84.busy_fwd.on_code =
account.84.timeout_fwd.enable =
account.84.timeout_fwd.target =
account.84.timeout_fwd.timeout =
account.84.timeout_fwd.off_code =
account.84.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.84.dnd.enable =
account.84.dnd.on_code =
account.84.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.84.reg.enable =
handset.84.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.84.xsi.user =%BWLOGIN-ID-84%
account.84.xsi.password =%XSIPASSWORD-84%
account.84.xsi.host =%XSP_ADDRESS%
account.84.xsi.server_type =
account.84.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.84.ldap.enable =
handset.84.ldap.name_filter=
handset.84.ldap.number_filter=
handset.84.ldap.host=
handset.84.ldap.port=
handset.84.ldap.base=
handset.84.ldap.user=
handset.84.ldap.password=
handset.84.ldap.max_hits=
handset.84.ldap.name_attr=
handset.84.ldap.numb_attr=
handset.84.ldap.display_name=
handset.84.ldap.version=
handset.84.ldap.call_in_lookup=
handset.84.ldap.ldap_sort=
handset.84.ldap.tls_mode=
handset.84.ldap.call_out_lookup=
handset.84.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account85 Settings
##
#####
#####

account.85.enable=%BWLIN-BINARY-85%
account.85.label=%BWEXTENSION-85%
account.85.display_name=%BWCLID-85%
account.85.auth_name=%BWAUTHUSER-85%
account.85.user_name=%BWLINPORT-85%
account.85.password=%BWAUTHPASSWORD-85%

#W80B ADD
account.85.sip_server.template =
account.85.media_transmit.enable =

account.85.alarm.template =
account.85.alarm.server =
account.85.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.85.sip_server.1.failback_mode =
account.85.sip_server.1.failback_timeout =
account.85.sip_server.1.register_on_enable =
account.85.sip_server.1.failback_subscribe.enable =
account.85.sip_server.1.invite_retry_counts =
account.85.sip_server.1.only_signal_with_registered =

account.85.sip_server.2.failback_mode =
account.85.sip_server.2.failback_timeout =
account.85.sip_server.2.register_on_enable =
account.85.sip_server.2.failback_subscribe.enable =
```

```

account.85.sip_server.2.invite_retry_counts =
account.85.sip_server.2.only_signal_with_registered =

account.85.naptr_build =
account.85.fallback.redundancy_type =
account.85.fallback.timeout =

account.85.dns_cache_type =
account.85.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.85.anonymous_call =
account.85.reject_anonymous_call =
account.85.send_anonymous_code =
account.85.anonymous_call_oncode =
account.85.anonymous_call_offcode =
account.85.send_anonymous_rejection_code =
account.85.anonymous_reject_oncode =
account.85.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.85.codec.g722.enable =
account.85.codec.g722.priority =

account.85.codec.g729.enable =
account.85.codec.g729.priority =

account.85.codec.g726_16.enable =
account.85.codec.g726_16.priority =

account.85.codec.g726_24.enable =
account.85.codec.g726_24.priority =

account.85.codec.g726_32.enable =
account.85.codec.g726_32.priority =

account.85.codec.g726_40.enable =
account.85.codec.g726_40.priority =

account.85.codec.ilbc.enable =
account.85.codec.ilbc.priority =

account.85.codec.pcmu.enable =
account.85.codec.pcmu.priority =

account.85.codec.pcma.enable =
account.85.codec.pcma.priority =

account.85.codec.opus.enable =
account.85.codec.opus.priority =

```

```
#####
#####
##                                NAT Settings
##
#####
#####

account.85.nat.nat_traversal =
account.85.nat.udp_update_enable =
account.85.nat.udp_update_time =
account.85.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.85.blf.subscribe_period =
account.85.dtmf.type =
account.85.dtmf.dtmf_payload =
account.85.dtmf.info_type =
account.85.100rel_enable =
account.85.subscribe_register =
account.85.subscribe_mwi =
account.85.subscribe_mwi_expires =
account.85.subscribe_mwi_to_vm =
voice_mail.number.85 = %BWVOICE-PORTAL-NUMBER-85%
account.85.display_mwi.enable =
account.85.cid_source =
account.85.cid_source_privacy =
account.85.cid_source_ppi =
account.85.session_timer.enable =
account.85.session_timer.expires =
account.85.session_timer.refreshes =
account.85.enable_user_equal_phone =
account.85.srtp_encryption =
account.85.ptime =
account.85.shared_line = %BWSHAREDLINE-BINARY-85%
account.85.register_mac =
account.85.register_line =
account.85.reg_fail_retry_interval =
account.85.reg_failed_retry_min_time =
account.85.reg_failed_retry_max_time =

#####
#####
##                                Network Conference
##
#####
#####

account.85.conf_type =
account.85.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-85%

account.85.sip_server_type =
account.85.unregister_on_reboot =

#####
#####
##                                Register Other
##
##
```

```
#####
#####
##DECT V81 Add

account.85.register_expires_overlap =
account.85.subscribe_expires_overlap =
account.85.auto_dial_enable =
account.85.auto_dial_num =
account.85.cp_source =
account.85.transfer_refer_to_contact_header.enable =
#V80 Add
account.85.custom_ua =
account.85.callpark_enable =
account.85.check_cseq.enable =
account.85.check_to_tag.enable =
account.85.hold_use_inactive =
account.85.line_seize.expires =
account.85.update_ack_while_dialing =
account.85.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.85.always_fwd.enable =
account.85.always_fwd.target =
account.85.always_fwd.off_code =
account.85.always_fwd.on_code =
account.85.busy_fwd.enable =
account.85.busy_fwd.target =
account.85.busy_fwd.off_code =
account.85.busy_fwd.on_code =
account.85.timeout_fwd.enable =
account.85.timeout_fwd.target =
account.85.timeout_fwd.timeout =
account.85.timeout_fwd.off_code =
account.85.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.85.dnd.enable =
account.85.dnd.on_code =
account.85.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.85.reg.enable =
handset.85.ipui =

#####
#####
```



```

##          Broadsoft XSI
##
#####

account.85.xsi.user =%BWLOGIN-ID-85%
account.85.xsi.password =%XSIPASSWORD-85%
account.85.xsi.host =%XSP_ADDRESS%
account.85.xsi.server_type =
account.85.xsi.port =

#####
#####
##          LADP
##
#####
handset.85.ldap.enable =
handset.85.ldap.name_filter=
handset.85.ldap.number_filter=
handset.85.ldap.host=
handset.85.ldap.port=
handset.85.ldap.base=
handset.85.ldap.user=
handset.85.ldap.password=
handset.85.ldap.max_hits=
handset.85.ldap.name_attr=
handset.85.ldap.numb_attr=
handset.85.ldap.display_name=
handset.85.ldap.version=
handset.85.ldap.call_in_lookup=
handset.85.ldap.ldap_sort=
handset.85.ldap.tls_mode=
handset.85.ldap.call_out_lookup=
handset.85.ldap.incoming_call_special_search.enable=

#####
#####
##          Account86 Settings
##
#####

account.86.enable=%BWLINE-BINARY-86%
account.86.label=%BWEXTENSION-86%
account.86.display_name=%BWCLID-86%
account.86.auth_name=%BWAUTHUSER-86%
account.86.user_name=%BWLINEPORT-86%
account.86.password=%BWAUTHPASSWORD-86%

#W80B ADD
account.86.sip_server.template =
account.86.media_transmit.enable =

account.86.alarm.template =
account.86.alarm.server =
account.86.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.86.sip_server.1.failback_mode =
account.86.sip_server.1.failback_timeout =
account.86.sip_server.1.register_on_enable =
account.86.sip_server.1.failback_subscribe.enable =
account.86.sip_server.1.invite_retry_counts =
account.86.sip_server.1.only_signal_with_registered =

account.86.sip_server.2.failback_mode =
account.86.sip_server.2.failback_timeout =
account.86.sip_server.2.register_on_enable =
account.86.sip_server.2.failback_subscribe.enable =
account.86.sip_server.2.invite_retry_counts =
account.86.sip_server.2.only_signal_with_registered =

account.86.naptr_build =
account.86.fallback.redundancy_type =
account.86.fallback.timeout =

account.86.dns_cache_type =
account.86.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.86.anonymous_call =
account.86.reject_anonymous_call =
account.86.send_anonymous_code =
account.86.anonymous_call_oncode =
account.86.anonymous_call_offcode =
account.86.send_anonymous_rejection_code =
account.86.anonymous_reject_oncode =
account.86.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.86.codec.g722.enable =
account.86.codec.g722.priority =

account.86.codec.g729.enable =
account.86.codec.g729.priority =

account.86.codec.g726_16.enable =
account.86.codec.g726_16.priority =

account.86.codec.g726_24.enable =
account.86.codec.g726_24.priority =

account.86.codec.g726_32.enable =
account.86.codec.g726_32.priority =
```

```

account.86.codec.g726_40.enable =
account.86.codec.g726_40.priority =

account.86.codec.ilbc.enable =
account.86.codec.ilbc.priority =

account.86.codec.pcmu.enable =
account.86.codec.pcmu.priority =

account.86.codec.pcma.enable =
account.86.codec.pcma.priority =

account.86.codec.opus.enable =
account.86.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.86.nat.nat_traversal =
account.86.nat.udp_update_enable =
account.86.nat.udp_update_time =
account.86.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.86.blf.subscribe_period =
account.86.dtmf.type =
account.86.dtmf.dtmf_payload =
account.86.dtmf.info_type =
account.86.100rel_enable =
account.86.subscribe_register =
account.86.subscribe_mwi =
account.86.subscribe_mwi_expires =
account.86.subscribe_mwi_to_vm =
voice_mail.number.86 = %BWVOICE-PORTAL-NUMBER-86%
account.86.display_mwi.enable =
account.86.cid_source =
account.86.cid_source_privacy =
account.86.cid_source_ppi =
account.86.session_timer.enable =
account.86.session_timer.expires =
account.86.session_timer.refresher =
account.86.enable_user_equal_phone =
account.86.srtp_encryption =
account.86.ptime =
account.86.shared_line = %BWSHAREDLINE-BINARY-86%
account.86.register_mac =
account.86.register_line =
account.86.reg_fail_retry_interval =
account.86.reg_failed_retry_min_time =
account.86.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.86.conf_type =
account.86.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-86%

account.86.sip_server_type =
account.86.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.86.register_expires_overlap =
account.86.subscribe_expires_overlap =
account.86.auto_dial_enable =
account.86.auto_dial_num =
account.86.cp_source =
account.86.transfer_refer_to_contact_header.enable =
#V80 Add
account.86.custom_ua =
account.86.callpark_enable =
account.86.check_cseq.enable =
account.86.check_to_tag.enable =
account.86.hold_use_inactive =
account.86.line_seize.expires =
account.86.update_ack_while_dialing =
account.86.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.86.always_fwd.enable =
account.86.always_fwd.target =
account.86.always_fwd.off_code =
account.86.always_fwd.on_code =
account.86.busy_fwd.enable =
account.86.busy_fwd.target =
account.86.busy_fwd.off_code =
account.86.busy_fwd.on_code =
account.86.timeout_fwd.enable =
account.86.timeout_fwd.target =
account.86.timeout_fwd.timeout =
account.86.timeout_fwd.off_code =
account.86.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```
account.86.dnd.enable =
account.86.dnd.on_code =
account.86.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.86.reg.enable =
handset.86.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.86.xsi.user =%BWLOGIN-ID-86%
account.86.xsi.password =%XSIPASSWORD-86%
account.86.xsi.host =%XSP_ADDRESS%
account.86.xsi.server_type =
account.86.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.86.ldap.enable =
handset.86.ldap.name_filter=
handset.86.ldap.number_filter=
handset.86.ldap.host=
handset.86.ldap.port=
handset.86.ldap.base=
handset.86.ldap.user=
handset.86.ldap.password=
handset.86.ldap.max_hits=
handset.86.ldap.name_attr=
handset.86.ldap.numb_attr=
handset.86.ldap.display_name=
handset.86.ldap.version=
handset.86.ldap.call_in_lookup=
handset.86.ldap.ldap_sort=
handset.86.ldap.tls_mode=
handset.86.ldap.call_out_lookup=
handset.86.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account87 Settings
##
#####
#####
```

```

account.87.enable=%BWLIN-BINARY-87%
account.87.label=%BWEXTENSION-87%
account.87.display_name=%BWCLID-87%
account.87.auth_name=%BWAUTHUSER-87%
account.87.user_name=%BWLINPORT-87%
account.87.password=%BWAUTHPASSWORD-87%

#W80B ADD
account.87.sip_server.template =
account.87.media_transmit.enable =

account.87.alarm.template =
account.87.alarm.server =
account.87.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.87.sip_server.1.failback_mode =
account.87.sip_server.1.failback_timeout =
account.87.sip_server.1.register_on_enable =
account.87.sip_server.1.failback_subscribe.enable =
account.87.sip_server.1.invite_retry_counts =
account.87.sip_server.1.only_signal_with_registered =

account.87.sip_server.2.failback_mode =
account.87.sip_server.2.failback_timeout =
account.87.sip_server.2.register_on_enable =
account.87.sip_server.2.failback_subscribe.enable =
account.87.sip_server.2.invite_retry_counts =
account.87.sip_server.2.only_signal_with_registered =

account.87.naptr_build =
account.87.fallback.redundancy_type =
account.87.fallback.timeout =

account.87.dns_cache_type =
account.87.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.87.anonymous_call =
account.87.reject_anonymous_call =
account.87.send_anonymous_code =
account.87.anonymous_call_oncode =
account.87.anonymous_call_offcode =
account.87.send_anonymous_rejection_code =
account.87.anonymous_reject_oncode =
account.87.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.87.codec.g722.enable =
account.87.codec.g722.priority =

account.87.codec.g729.enable =
account.87.codec.g729.priority =

account.87.codec.g726_16.enable =
account.87.codec.g726_16.priority =

account.87.codec.g726_24.enable =
account.87.codec.g726_24.priority =

account.87.codec.g726_32.enable =
account.87.codec.g726_32.priority =

account.87.codec.g726_40.enable =
account.87.codec.g726_40.priority =

account.87.codec.ilbc.enable =
account.87.codec.ilbc.priority =

account.87.codec.pcmu.enable =
account.87.codec.pcmu.priority =

account.87.codec.pcma.enable =
account.87.codec.pcma.priority =

account.87.codec.opus.enable =
account.87.codec.opus.priority =

#####
#####
##                                NAT Settings
##
#####
#####

account.87.nat.nat_traversal =
account.87.nat.udp_update_enable =
account.87.nat.udp_update_time =
account.87.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.87.blf.subscribe_period =
account.87.dtmf.type =
account.87.dtmf.dtmf_payload =
account.87.dtmf.info_type =
account.87.100rel_enable =
account.87.subscribe_register =
account.87.subscribe_mwi =
account.87.subscribe_mwi_expires =
account.87.subscribe_mwi_to_vm =
voice_mail.number.87 = %BWVOICE-PORTAL-NUMBER-87%
account.87.display_mwi.enable =
account.87.cid_source =
```

```

account.87.cid_source_privacy =
account.87.cid_source_ppi =
account.87.session_timer.enable =
account.87.session_timer.expires =
account.87.session_timer.refresher =
account.87.enable_user_equal_phone =
account.87.srtp_encryption =
account.87.ptime =
account.87.shared_line = %BWSHAREDLINE-BINARY-87%
account.87.register_mac =
account.87.register_line =
account.87.reg_fail_retry_interval =
account.87.reg_failed_retry_min_time =
account.87.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.87.conf_type =
account.87.conf_uri = %BWNWORK-CONFERENCE-SIPURI-87%

account.87.sip_server_type =
account.87.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.87.register_expires_overlap =
account.87.subscribe_expires_overlap =
account.87.auto_dial_enable =
account.87.auto_dial_num =
account.87.cp_source =
account.87.transfer_refer_to_contact_header.enable =
#V80 Add
account.87.custom_ua =
account.87.callpark_enable =
account.87.check_cseq.enable =
account.87.check_to_tag.enable =
account.87.hold_use_inactive =
account.87.line_seize.expires =
account.87.update_ack_while_dialing =
account.87.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.87.always_fwd.enable =
account.87.always_fwd.target =
account.87.always_fwd.off_code =
account.87.always_fwd.on_code =
account.87.busy_fwd.enable =

```



```

account.87.busy_fwd.target =
account.87.busy_fwd.off_code =
account.87.busy_fwd.on_code =
account.87.timeout_fwd.enable =
account.87.timeout_fwd.target =
account.87.timeout_fwd.timeout =
account.87.timeout_fwd.off_code =
account.87.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.87.dnd.enable =
account.87.dnd.on_code =
account.87.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.87.reg.enable =
handset.87.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.87.xsi.user =%BWLOGIN-ID-87%
account.87.xsi.password =%XSIPASSWORD-87%
account.87.xsi.host =%XSP_ADDRESS%
account.87.xsi.server_type =
account.87.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.87.ldap.enable =
handset.87.ldap.name_filter=
handset.87.ldap.number_filter=
handset.87.ldap.host=
handset.87.ldap.port=
handset.87.ldap.base=
handset.87.ldap.user=
handset.87.ldap.password=
handset.87.ldap.max_hits=
handset.87.ldap.name_attr=
handset.87.ldap.numb_attr=
handset.87.ldap.display_name=
handset.87.ldap.version=
handset.87.ldap.call_in_lookup=

```

```
handset.87.ldap.ldap_sort=
handset.87.ldap.tls_mode=
handset.87.ldap.call_out_lookup=
handset.87.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account88 Settings
##
#####
#####

account.88.enable=%BWLIN-BINARY-88%
account.88.label=%BWEXTENSION-88%
account.88.display_name=%BWCLID-88%
account.88.auth_name=%BWAUTHUSER-88%
account.88.user_name=%BWLINPORT-88%
account.88.password=%BWAUTHPASSWORD-88%

#W80B ADD
account.88.sip_server.template =
account.88.media_transmit.enable =

account.88.alarm.template =
account.88.alarm.server =
account.88.alarm.number =

#####
#####
##                                     Failback
##
##
#####
#####

account.88.sip_server.1.failback_mode =
account.88.sip_server.1.failback_timeout =
account.88.sip_server.1.register_on_enable =
account.88.sip_server.1.failback_subscribe.enable =
account.88.sip_server.1.invite_retry_counts =
account.88.sip_server.1.only_signal_with_registered =

account.88.sip_server.2.failback_mode =
account.88.sip_server.2.failback_timeout =
account.88.sip_server.2.register_on_enable =
account.88.sip_server.2.failback_subscribe.enable =
account.88.sip_server.2.invite_retry_counts =
account.88.sip_server.2.only_signal_with_registered =

account.88.naptr_build =
account.88.fallback.redundancy_type =
account.88.fallback.timeout =

account.88.dns_cache_type =
account.88.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
##
#####
#####
```

```
account.88.anonymous_call =
account.88.reject_anonymous_call =
account.88.send_anonymous_code =
account.88.anonymous_call_oncode =
account.88.anonymous_call_offcode =
account.88.send_anonymous_rejection_code =
account.88.anonymous_reject_oncode =
account.88.anonymous_reject_offcode =

#####
#####
##
##                               Codec
##
#####
#####
account.88.codec.g722.enable =
account.88.codec.g722.priority =

account.88.codec.g729.enable =
account.88.codec.g729.priority =

account.88.codec.g726_16.enable =
account.88.codec.g726_16.priority =

account.88.codec.g726_24.enable =
account.88.codec.g726_24.priority =

account.88.codec.g726_32.enable =
account.88.codec.g726_32.priority =

account.88.codec.g726_40.enable =
account.88.codec.g726_40.priority =

account.88.codec.ilbc.enable =
account.88.codec.ilbc.priority =

account.88.codec.pcmu.enable =
account.88.codec.pcmu.priority =

account.88.codec.pcma.enable =
account.88.codec.pcma.priority =

account.88.codec.opus.enable =
account.88.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####
account.88.nat.nat_traversal =
account.88.nat.udp_update_enable =
account.88.nat.udp_update_time =
account.88.nat.rport =

#####
#####
##
##                               Register Advanced
##
```

```
#####
#####

account.88.blf.subscribe_period =
account.88.dtmf.type =
account.88.dtmf.dtmf_payload =
account.88.dtmf.info_type =
account.88.100rel_enable =
account.88.subscribe_register =
account.88.subscribe_mwi =
account.88.subscribe_mwi_expires =
account.88.subscribe_mwi_to_vm =
voice_mail.number.88 = %BWVOICE-PORTAL-NUMBER-88%
account.88.display_mwi.enable =
account.88.cid_source =
account.88.cid_source_privacy =
account.88.cid_source_ppi =
account.88.session_timer.enable =
account.88.session_timer.expires =
account.88.session_timer.refresher =
account.88.enable_user_equal_phone =
account.88.srtp_encryption =
account.88.ptime =
account.88.shared_line = %BWSHAREDLINE-BINARY-88%
account.88.register_mac =
account.88.register_line =
account.88.reg_fail_retry_interval =
account.88.reg_failed_retry_min_time =
account.88.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.88.conf_type =
account.88.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-88%

account.88.sip_server_type =
account.88.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.88.register_expires_overlap =
account.88.subscribe_expires_overlap =
account.88.auto_dial_enable =
account.88.auto_dial_num =
account.88.cp_source =
account.88.transfer_refer_to_contact_header.enable =
#V80 Add
account.88.custom_ua =
account.88.callpark_enable =
account.88.check_cseq.enable =
account.88.check_to_tag.enable =
account.88.hold_use_inactive =
```

```

account.88.line_seize.expires =
account.88.update_ack_while_dialing =
account.88.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.88.always_fwd.enable =
account.88.always_fwd.target =
account.88.always_fwd.off_code =
account.88.always_fwd.on_code =
account.88.busy_fwd.enable =
account.88.busy_fwd.target =
account.88.busy_fwd.off_code =
account.88.busy_fwd.on_code =
account.88.timeout_fwd.enable =
account.88.timeout_fwd.target =
account.88.timeout_fwd.timeout =
account.88.timeout_fwd.off_code =
account.88.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.88.dnd.enable =
account.88.dnd.on_code =
account.88.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.88.reg.enable =
handset.88.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.88.xsi.user =%BWLOGIN-ID-88%
account.88.xsi.password =%XSIPASSWORD-88%
account.88.xsi.host =%XSP_ADDRESS%
account.88.xsi.server_type =
account.88.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.88.ldap.enable =
handset.88.ldap.name_filter=
handset.88.ldap.number_filter=
handset.88.ldap.host=
handset.88.ldap.port=
handset.88.ldap.base=
handset.88.ldap.user=
handset.88.ldap.password=
handset.88.ldap.max_hits=
handset.88.ldap.name_attr=
handset.88.ldap.numb_attr=
handset.88.ldap.display_name=
handset.88.ldap.version=
handset.88.ldap.call_in_lookup=
handset.88.ldap.ldap_sort=
handset.88.ldap.tls_mode=
handset.88.ldap.call_out_lookup=
handset.88.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account89 Settings
##
#####
#####

account.89.enable=%BWLIN-BINARY-89%
account.89.label=%BWEXTENSION-89%
account.89.display_name=%BWCLID-89%
account.89.auth_name=%BWAUTHUSER-89%
account.89.user_name=%BWLINPORT-89%
account.89.password=%BWAUTHPASSWORD-89%

#W80B ADD
account.89.sip_server.template =
account.89.media_transmit.enable =

account.89.alarm.template =
account.89.alarm.server =
account.89.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.89.sip_server.1.failback_mode =
account.89.sip_server.1.failback_timeout =
account.89.sip_server.1.register_on_enable =
account.89.sip_server.1.failback_subscribe.enable =
account.89.sip_server.1.invite_retry_counts =
account.89.sip_server.1.only_signal_with_registered =

account.89.sip_server.2.failback_mode =
account.89.sip_server.2.failback_timeout =
account.89.sip_server.2.register_on_enable =
account.89.sip_server.2.failback_subscribe.enable =
```

```
account.89.sip_server.2.invite_retry_counts =
account.89.sip_server.2.only_signal_with_registered =

account.89.naptr_build =
account.89.fallback.redundancy_type =
account.89.fallback.timeout =

account.89.dns_cache_type =
account.89.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.89.anonymous_call =
account.89.reject_anonymous_call =
account.89.send_anonymous_code =
account.89.anonymous_call_oncode =
account.89.anonymous_call_offcode =
account.89.send_anonymous_rejection_code =
account.89.anonymous_reject_oncode =
account.89.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.89.codec.g722.enable =
account.89.codec.g722.priority =

account.89.codec.g729.enable =
account.89.codec.g729.priority =

account.89.codec.g726_16.enable =
account.89.codec.g726_16.priority =

account.89.codec.g726_24.enable =
account.89.codec.g726_24.priority =

account.89.codec.g726_32.enable =
account.89.codec.g726_32.priority =

account.89.codec.g726_40.enable =
account.89.codec.g726_40.priority =

account.89.codec.ilbc.enable =
account.89.codec.ilbc.priority =

account.89.codec.pcmu.enable =
account.89.codec.pcmu.priority =

account.89.codec.pcma.enable =
account.89.codec.pcma.priority =

account.89.codec.opus.enable =
account.89.codec.opus.priority =
```

```
#####
#####
##                                NAT Settings
##
#####
#####

account.89.nat.nat_traversal =
account.89.nat.udp_update_enable =
account.89.nat.udp_update_time =
account.89.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.89.blf.subscribe_period =
account.89.dtmf.type =
account.89.dtmf.dtmf_payload =
account.89.dtmf.info_type =
account.89.100rel_enable =
account.89.subscribe_register =
account.89.subscribe_mwi =
account.89.subscribe_mwi_expires =
account.89.subscribe_mwi_to_vm =
voice_mail.number.89 = %BWVOICE-PORTAL-NUMBER-89%
account.89.display_mwi.enable =
account.89.cid_source =
account.89.cid_source_privacy =
account.89.cid_source_ppi =
account.89.session_timer.enable =
account.89.session_timer.expires =
account.89.session_timer.refresher =
account.89.enable_user_equal_phone =
account.89.srtp_encryption =
account.89.ptime =
account.89.shared_line = %BWSHAREDLINE-BINARY-89%
account.89.register_mac =
account.89.register_line =
account.89.reg_fail_retry_interval =
account.89.reg_failed_retry_min_time =
account.89.reg_failed_retry_max_time =

#####
#####
##                                Network Conference
##
#####
#####

account.89.conf_type =
account.89.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-89%

account.89.sip_server_type =
account.89.unregister_on_reboot =

#####
#####
##                                Register Other
##
##
```



```
#####
#####
##DECT V81 Add

account.89.register_expires_overlap =
account.89.subscribe_expires_overlap =
account.89.auto_dial_enable =
account.89.auto_dial_num =
account.89.cp_source =
account.89.transfer_refer_to_contact_header.enable =
#V80 Add
account.89.custom_ua =
account.89.callpark_enable =
account.89.check_cseq.enable =
account.89.check_to_tag.enable =
account.89.hold_use_inactive =
account.89.line_seize.expires =
account.89.update_ack_while_dialing =
account.89.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.89.always_fwd.enable =
account.89.always_fwd.target =
account.89.always_fwd.off_code =
account.89.always_fwd.on_code =
account.89.busy_fwd.enable =
account.89.busy_fwd.target =
account.89.busy_fwd.off_code =
account.89.busy_fwd.on_code =
account.89.timeout_fwd.enable =
account.89.timeout_fwd.target =
account.89.timeout_fwd.timeout =
account.89.timeout_fwd.off_code =
account.89.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.89.dnd.enable =
account.89.dnd.on_code =
account.89.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.89.reg.enable =
handset.89.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.89.xsi.user =%BWLOGIN-ID-89%
account.89.xsi.password =%XSIPASSWORD-89%
account.89.xsi.host =%XSP_ADDRESS%
account.89.xsi.server_type =
account.89.xsi.port =

#####
#####
##          LADP
##
#####
handset.89.ldap.enable =
handset.89.ldap.name_filter=
handset.89.ldap.number_filter=
handset.89.ldap.host=
handset.89.ldap.port=
handset.89.ldap.base=
handset.89.ldap.user=
handset.89.ldap.password=
handset.89.ldap.max_hits=
handset.89.ldap.name_attr=
handset.89.ldap.numb_attr=
handset.89.ldap.display_name=
handset.89.ldap.version=
handset.89.ldap.call_in_lookup=
handset.89.ldap.ldap_sort=
handset.89.ldap.tls_mode=
handset.89.ldap.call_out_lookup=
handset.89.ldap.incoming_call_special_search.enable=

#####
#####
##          Account90 Settings
##
#####

account.90.enable=%BWLINE-BINARY-90%
account.90.label=%BWEXTENSION-90%
account.90.display_name=%BWCLID-90%
account.90.auth_name=%BWAUTHUSER-90%
account.90.user_name=%BWLINEPORT-90%
account.90.password=%BWAUTHPASSWORD-90%

#W80B ADD
account.90.sip_server.template =
account.90.media_transmit.enable =

account.90.alarm.template =
account.90.alarm.server =
account.90.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.90.sip_server.1.failback_mode =
account.90.sip_server.1.failback_timeout =
account.90.sip_server.1.register_on_enable =
account.90.sip_server.1.failback_subscribe.enable =
account.90.sip_server.1.invite_retry_counts =
account.90.sip_server.1.only_signal_with_registered =

account.90.sip_server.2.failback_mode =
account.90.sip_server.2.failback_timeout =
account.90.sip_server.2.register_on_enable =
account.90.sip_server.2.failback_subscribe.enable =
account.90.sip_server.2.invite_retry_counts =
account.90.sip_server.2.only_signal_with_registered =

account.90.naptr_build =
account.90.fallback.redundancy_type =
account.90.fallback.timeout =

account.90.dns_cache_type =
account.90.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.90.anonymous_call =
account.90.reject_anonymous_call =
account.90.send_anonymous_code =
account.90.anonymous_call_oncode =
account.90.anonymous_call_offcode =
account.90.send_anonymous_rejection_code =
account.90.anonymous_reject_oncode =
account.90.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.90.codec.g722.enable =
account.90.codec.g722.priority =

account.90.codec.g729.enable =
account.90.codec.g729.priority =

account.90.codec.g726_16.enable =
account.90.codec.g726_16.priority =

account.90.codec.g726_24.enable =
account.90.codec.g726_24.priority =

account.90.codec.g726_32.enable =
account.90.codec.g726_32.priority =
```

```
account.90.codec.g726_40.enable =
account.90.codec.g726_40.priority =

account.90.codec.ilbc.enable =
account.90.codec.ilbc.priority =

account.90.codec.pcmu.enable =
account.90.codec.pcmu.priority =

account.90.codec.pcma.enable =
account.90.codec.pcma.priority =

account.90.codec.opus.enable =
account.90.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.90.nat.nat_traversal =
account.90.nat.udp_update_enable =
account.90.nat.udp_update_time =
account.90.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.90.blf.subscribe_period =
account.90.dtmf.type =
account.90.dtmf.dtmf_payload =
account.90.dtmf.info_type =
account.90.100rel_enable =
account.90.subscribe_register =
account.90.subscribe_mwi =
account.90.subscribe_mwi_expires =
account.90.subscribe_mwi_to_vm =
voice_mail.number.90 = %BWVOICE-PORTAL-NUMBER-90%
account.90.display_mwi.enable =
account.90.cid_source =
account.90.cid_source_privacy =
account.90.cid_source_ppi =
account.90.session_timer.enable =
account.90.session_timer.expires =
account.90.session_timer.refresher =
account.90.enable_user_equal_phone =
account.90.srtp_encryption =
account.90.ptime =
account.90.shared_line = %BWSHAREDLINE-BINARY-90%
account.90.register_mac =
account.90.register_line =
account.90.reg_fail_retry_interval =
account.90.reg_failed_retry_min_time =
account.90.reg_failed_retry_max_time =
```

```
#####
#####
##                               Network Conference
##
#####
#####
account.90.conf_type =
account.90.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-90%

account.90.sip_server_type =
account.90.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.90.register_expires_overlap =
account.90.subscribe_expires_overlap =
account.90.auto_dial_enable =
account.90.auto_dial_num =
account.90.cp_source =
account.90.transfer_refer_to_contact_header.enable =
#V80 Add
account.90.custom_ua =
account.90.callpark_enable =
account.90.check_cseq.enable =
account.90.check_to_tag.enable =
account.90.hold_use_inactive =
account.90.line_seize.expires =
account.90.update_ack_while_dialing =
account.90.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.90.always_fwd.enable =
account.90.always_fwd.target =
account.90.always_fwd.off_code =
account.90.always_fwd.on_code =
account.90.busy_fwd.enable =
account.90.busy_fwd.target =
account.90.busy_fwd.off_code =
account.90.busy_fwd.on_code =
account.90.timeout_fwd.enable =
account.90.timeout_fwd.target =
account.90.timeout_fwd.timeout =
account.90.timeout_fwd.off_code =
account.90.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```

account.90.dnd.enable =
account.90.dnd.on_code =
account.90.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.90.reg.enable =
handset.90.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.90.xsi.user =%BWLOGIN-ID-90%
account.90.xsi.password =%XSIPASSWORD-90%
account.90.xsi.host =%XSP_ADDRESS%
account.90.xsi.server_type =
account.90.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.90.ldap.enable =
handset.90.ldap.name_filter=
handset.90.ldap.number_filter=
handset.90.ldap.host=
handset.90.ldap.port=
handset.90.ldap.base=
handset.90.ldap.user=
handset.90.ldap.password=
handset.90.ldap.max_hits=
handset.90.ldap.name_attr=
handset.90.ldap.numb_attr=
handset.90.ldap.display_name=
handset.90.ldap.version=
handset.90.ldap.call_in_lookup=
handset.90.ldap.ldap_sort=
handset.90.ldap.tls_mode=
handset.90.ldap.call_out_lookup=
handset.90.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account91 Settings
##
#####
#####

```

```

account.91.enable=%BWLIN-BINARY-91%
account.91.label=%BWEXTENSION-91%
account.91.display_name=%BWCLID-91%
account.91.auth_name=%BWAUTHUSER-91%
account.91.user_name=%BWLINPORT-91%
account.91.password=%BWAUTHPASSWORD-91%

#W80B ADD
account.91.sip_server.template =
account.91.media_transmit.enable =

account.91.alarm.template =
account.91.alarm.server =
account.91.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.91.sip_server.1.failback_mode =
account.91.sip_server.1.failback_timeout =
account.91.sip_server.1.register_on_enable =
account.91.sip_server.1.failback_subscribe.enable =
account.91.sip_server.1.invite_retry_counts =
account.91.sip_server.1.only_signal_with_registered =

account.91.sip_server.2.failback_mode =
account.91.sip_server.2.failback_timeout =
account.91.sip_server.2.register_on_enable =
account.91.sip_server.2.failback_subscribe.enable =
account.91.sip_server.2.invite_retry_counts =
account.91.sip_server.2.only_signal_with_registered =

account.91.naptr_build =
account.91.fallback.redundancy_type =
account.91.fallback.timeout =

account.91.dns_cache_type =
account.91.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.91.anonymous_call =
account.91.reject_anonymous_call =
account.91.send_anonymous_code =
account.91.anonymous_call_oncode =
account.91.anonymous_call_offcode =
account.91.send_anonymous_rejection_code =
account.91.anonymous_reject_oncode =
account.91.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.91.codec.g722.enable =
account.91.codec.g722.priority =

account.91.codec.g729.enable =
account.91.codec.g729.priority =

account.91.codec.g726_16.enable =
account.91.codec.g726_16.priority =

account.91.codec.g726_24.enable =
account.91.codec.g726_24.priority =

account.91.codec.g726_32.enable =
account.91.codec.g726_32.priority =

account.91.codec.g726_40.enable =
account.91.codec.g726_40.priority =

account.91.codec.ilbc.enable =
account.91.codec.ilbc.priority =

account.91.codec.pcmu.enable =
account.91.codec.pcmu.priority =

account.91.codec.pcma.enable =
account.91.codec.pcma.priority =

account.91.codec.opus.enable =
account.91.codec.opus.priority =

#####
#####
##                                NAT Settings
##
#####
#####

account.91.nat.nat_traversal =
account.91.nat.udp_update_enable =
account.91.nat.udp_update_time =
account.91.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.91.blf.subscribe_period =
account.91.dtmf.type =
account.91.dtmf.dtmf_payload =
account.91.dtmf.info_type =
account.91.100rel_enable =
account.91.subscribe_register =
account.91.subscribe_mwi =
account.91.subscribe_mwi_expires =
account.91.subscribe_mwi_to_vm =
voice_mail.number.91 = %BWVOICE-PORTAL-NUMBER-91%
account.91.display_mwi.enable =
account.91.cid_source =
```



```

account.91.cid_source_privacy =
account.91.cid_source_ppi =
account.91.session_timer.enable =
account.91.session_timer.expires =
account.91.session_timer.refresher =
account.91.enable_user_equal_phone =
account.91.srtp_encryption =
account.91.ptime =
account.91.shared_line = %BWSHAREDLINE-BINARY-91%
account.91.register_mac =
account.91.register_line =
account.91.reg_fail_retry_interval =
account.91.reg_failed_retry_min_time =
account.91.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.91.conf_type =
account.91.conf_uri = %BWNWORK-CONFERENCE-SIPURI-91%

account.91.sip_server_type =
account.91.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.91.register_expires_overlap =
account.91.subscribe_expires_overlap =
account.91.auto_dial_enable =
account.91.auto_dial_num =
account.91.cp_source =
account.91.transfer_refer_to_contact_header.enable =
#V80 Add
account.91.custom_ua =
account.91.callpark_enable =
account.91.check_cseq.enable =
account.91.check_to_tag.enable =
account.91.hold_use_inactive =
account.91.line_seize.expires =
account.91.update_ack_while_dialing =
account.91.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.91.always_fwd.enable =
account.91.always_fwd.target =
account.91.always_fwd.off_code =
account.91.always_fwd.on_code =
account.91.busy_fwd.enable =

```

```

account.91.busy_fwd.target =
account.91.busy_fwd.off_code =
account.91.busy_fwd.on_code =
account.91.timeout_fwd.enable =
account.91.timeout_fwd.target =
account.91.timeout_fwd.timeout =
account.91.timeout_fwd.off_code =
account.91.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.91.dnd.enable =
account.91.dnd.on_code =
account.91.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.91.reg.enable =
handset.91.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.91.xsi.user =%BWLOGIN-ID-91%
account.91.xsi.password =%XSIPASSWORD-91%
account.91.xsi.host =%XSP_ADDRESS%
account.91.xsi.server_type =
account.91.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.91.ldap.enable =
handset.91.ldap.name_filter=
handset.91.ldap.number_filter=
handset.91.ldap.host=
handset.91.ldap.port=
handset.91.ldap.base=
handset.91.ldap.user=
handset.91.ldap.password=
handset.91.ldap.max_hits=
handset.91.ldap.name_attr=
handset.91.ldap.numb_attr=
handset.91.ldap.display_name=
handset.91.ldap.version=
handset.91.ldap.call_in_lookup=

```

```

handset.91.ldap.ldap_sort=
handset.91.ldap.tls_mode=
handset.91.ldap.call_out_lookup=
handset.91.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account92 Settings
##
#####
#####

account.92.enable=%BWLIN-BINARY-92%
account.92.label=%BWEXTENSION-92%
account.92.display_name=%BWCLID-92%
account.92.auth_name=%BWAUTHUSER-92%
account.92.user_name=%BWLINPORT-92%
account.92.password=%BWAUTHPASSWORD-92%

#W80B ADD
account.92.sip_server.template =
account.92.media_transmit.enable =

account.92.alarm.template =
account.92.alarm.server =
account.92.alarm.number =

#####
#####
##                                     Failback
##
##
#####
#####
account.92.sip_server.1.failback_mode =
account.92.sip_server.1.failback_timeout =
account.92.sip_server.1.register_on_enable =
account.92.sip_server.1.failback_subscribe.enable =
account.92.sip_server.1.invite_retry_counts =
account.92.sip_server.1.only_signal_with_registered =

account.92.sip_server.2.failback_mode =
account.92.sip_server.2.failback_timeout =
account.92.sip_server.2.register_on_enable =
account.92.sip_server.2.failback_subscribe.enable =
account.92.sip_server.2.invite_retry_counts =
account.92.sip_server.2.only_signal_with_registered =

account.92.naptr_build =
account.92.fallback.redundancy_type =
account.92.fallback.timeout =

account.92.dns_cache_type =
account.92.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
##
#####
#####

```

```

account.92.anonymous_call =
account.92.reject_anonymous_call =
account.92.send_anonymous_code =
account.92.anonymous_call_oncode =
account.92.anonymous_call_offcode =
account.92.send_anonymous_rejection_code =
account.92.anonymous_reject_oncode =
account.92.anonymous_reject_offcode =

#####
#####
##
##                                Codec
##
#####
#####
account.92.codec.g722.enable =
account.92.codec.g722.priority =

account.92.codec.g729.enable =
account.92.codec.g729.priority =

account.92.codec.g726_16.enable =
account.92.codec.g726_16.priority =

account.92.codec.g726_24.enable =
account.92.codec.g726_24.priority =

account.92.codec.g726_32.enable =
account.92.codec.g726_32.priority =

account.92.codec.g726_40.enable =
account.92.codec.g726_40.priority =

account.92.codec.ilbc.enable =
account.92.codec.ilbc.priority =

account.92.codec.pcmu.enable =
account.92.codec.pcmu.priority =

account.92.codec.pcma.enable =
account.92.codec.pcma.priority =

account.92.codec.opus.enable =
account.92.codec.opus.priority =

#####
#####
##
##                                NAT Settings
##
#####
#####

account.92.nat.nat_traversal =
account.92.nat.udp_update_enable =
account.92.nat.udp_update_time =
account.92.nat.rport =

#####
#####
##
##                                Register Advanced
##

```

```
#####
#####

account.92.blf.subscribe_period =
account.92.dtmf.type =
account.92.dtmf.dtmf_payload =
account.92.dtmf.info_type =
account.92.100rel_enable =
account.92.subscribe_register =
account.92.subscribe_mwi =
account.92.subscribe_mwi_expires =
account.92.subscribe_mwi_to_vm =
voice_mail.number.92 = %BWVOICE-PORTAL-NUMBER-92%
account.92.display_mwi.enable =
account.92.cid_source =
account.92.cid_source_privacy =
account.92.cid_source_ppi =
account.92.session_timer.enable =
account.92.session_timer.expires =
account.92.session_timer.refresher =
account.92.enable_user_equal_phone =
account.92.srtp_encryption =
account.92.ptime =
account.92.shared_line = %BWSHAREDLINE-BINARY-92%
account.92.register_mac =
account.92.register_line =
account.92.reg_fail_retry_interval =
account.92.reg_failed_retry_min_time =
account.92.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.92.conf_type =
account.92.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-92%

account.92.sip_server_type =
account.92.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.92.register_expires_overlap =
account.92.subscribe_expires_overlap =
account.92.auto_dial_enable =
account.92.auto_dial_num =
account.92.cp_source =
account.92.transfer_refer_to_contact_header.enable =
#V80 Add
account.92.custom_ua =
account.92.callpark_enable =
account.92.check_cseq.enable =
account.92.check_to_tag.enable =
account.92.hold_use_inactive =
```

```

account.92.line_seize.expires =
account.92.update_ack_while_dialing =
account.92.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.92.always_fwd.enable =
account.92.always_fwd.target =
account.92.always_fwd.off_code =
account.92.always_fwd.on_code =
account.92.busy_fwd.enable =
account.92.busy_fwd.target =
account.92.busy_fwd.off_code =
account.92.busy_fwd.on_code =
account.92.timeout_fwd.enable =
account.92.timeout_fwd.target =
account.92.timeout_fwd.timeout =
account.92.timeout_fwd.off_code =
account.92.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.92.dnd.enable =
account.92.dnd.on_code =
account.92.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.92.reg.enable =
handset.92.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####
account.92.xsi.user =%BWLOGIN-ID-92%
account.92.xsi.password =%XSIPASSWORD-92%
account.92.xsi.host =%XSP_ADDRESS%
account.92.xsi.server_type =
account.92.xsi.port =

#####
#####
##                                LADP
##

```

```
#####
#####
handset.92.ldap.enable =
handset.92.ldap.name_filter=
handset.92.ldap.number_filter=
handset.92.ldap.host=
handset.92.ldap.port=
handset.92.ldap.base=
handset.92.ldap.user=
handset.92.ldap.password=
handset.92.ldap.max_hits=
handset.92.ldap.name_attr=
handset.92.ldap.numb_attr=
handset.92.ldap.display_name=
handset.92.ldap.version=
handset.92.ldap.call_in_lookup=
handset.92.ldap.ldap_sort=
handset.92.ldap.tls_mode=
handset.92.ldap.call_out_lookup=
handset.92.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account93 Settings
##
#####
#####

account.93.enable=%BWLIN-BINARY-93%
account.93.label=%BWEXTENSION-93%
account.93.display_name=%BWCLID-93%
account.93.auth_name=%BWAUTHUSER-93%
account.93.user_name=%BWLINPORT-93%
account.93.password=%BWAUTHPASSWORD-93%

#W80B ADD
account.93.sip_server.template =
account.93.media_transmit.enable =

account.93.alarm.template =
account.93.alarm.server =
account.93.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.93.sip_server.1.failback_mode =
account.93.sip_server.1.failback_timeout =
account.93.sip_server.1.register_on_enable =
account.93.sip_server.1.failback_subscribe.enable =
account.93.sip_server.1.invite_retry_counts =
account.93.sip_server.1.only_signal_with_registered =

account.93.sip_server.2.failback_mode =
account.93.sip_server.2.failback_timeout =
account.93.sip_server.2.register_on_enable =
account.93.sip_server.2.failback_subscribe.enable =
```

```

account.93.sip_server.2.invite_retry_counts =
account.93.sip_server.2.only_signal_with_registered =

account.93.naptr_build =
account.93.fallback.redundancy_type =
account.93.fallback.timeout =

account.93.dns_cache_type =
account.93.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.93.anonymous_call =
account.93.reject_anonymous_call =
account.93.send_anonymous_code =
account.93.anonymous_call_oncode =
account.93.anonymous_call_offcode =
account.93.send_anonymous_rejection_code =
account.93.anonymous_reject_oncode =
account.93.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.93.codec.g722.enable =
account.93.codec.g722.priority =

account.93.codec.g729.enable =
account.93.codec.g729.priority =

account.93.codec.g726_16.enable =
account.93.codec.g726_16.priority =

account.93.codec.g726_24.enable =
account.93.codec.g726_24.priority =

account.93.codec.g726_32.enable =
account.93.codec.g726_32.priority =

account.93.codec.g726_40.enable =
account.93.codec.g726_40.priority =

account.93.codec.ilbc.enable =
account.93.codec.ilbc.priority =

account.93.codec.pcmu.enable =
account.93.codec.pcmu.priority =

account.93.codec.pcma.enable =
account.93.codec.pcma.priority =

account.93.codec.opus.enable =
account.93.codec.opus.priority =

```



```
#####
#####
##                               NAT Settings
##
#####
#####

account.93.nat.nat_traversal =
account.93.nat.udp_update_enable =
account.93.nat.udp_update_time =
account.93.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.93.blf.subscribe_period =
account.93.dtmf.type =
account.93.dtmf.dtmf_payload =
account.93.dtmf.info_type =
account.93.100rel_enable =
account.93.subscribe_register =
account.93.subscribe_mwi =
account.93.subscribe_mwi_expires =
account.93.subscribe_mwi_to_vm =
voice_mail.number.93 = %BWVOICE-PORTAL-NUMBER-93%
account.93.display_mwi.enable =
account.93.cid_source =
account.93.cid_source_privacy =
account.93.cid_source_ppi =
account.93.session_timer.enable =
account.93.session_timer.expires =
account.93.session_timer.refreshes =
account.93.enable_user_equal_phone =
account.93.srtp_encryption =
account.93.ptime =
account.93.shared_line = %BWSHAREDLINE-BINARY-93%
account.93.register_mac =
account.93.register_line =
account.93.reg_fail_retry_interval =
account.93.reg_failed_retry_min_time =
account.93.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.93.conf_type =
account.93.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-93%

account.93.sip_server_type =
account.93.unregister_on_reboot =

#####
#####
##                               Register Other
##
```

```
#####
#####
##DECT V81 Add

account.93.register_expires_overlap =
account.93.subscribe_expires_overlap =
account.93.auto_dial_enable =
account.93.auto_dial_num =
account.93.cp_source =
account.93.transfer_refer_to_contact_header.enable =
#V80 Add
account.93.custom_ua =
account.93.callpark_enable =
account.93.check_cseq.enable =
account.93.check_to_tag.enable =
account.93.hold_use_inactive =
account.93.line_seize.expires =
account.93.update_ack_while_dialing =
account.93.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.93.always_fwd.enable =
account.93.always_fwd.target =
account.93.always_fwd.off_code =
account.93.always_fwd.on_code =
account.93.busy_fwd.enable =
account.93.busy_fwd.target =
account.93.busy_fwd.off_code =
account.93.busy_fwd.on_code =
account.93.timeout_fwd.enable =
account.93.timeout_fwd.target =
account.93.timeout_fwd.timeout =
account.93.timeout_fwd.off_code =
account.93.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.93.dnd.enable =
account.93.dnd.on_code =
account.93.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.93.reg.enable =
handset.93.ipui =

#####
#####
```

```
##          Broadsoft XSI
##
#####

account.93.xsi.user =%BWLOGIN-ID-93%
account.93.xsi.password =%XSIPASSWORD-93%
account.93.xsi.host =%XSP_ADDRESS%
account.93.xsi.server_type =
account.93.xsi.port =

#####
#####
##          LADP
##
#####
handset.93.ldap.enable =
handset.93.ldap.name_filter=
handset.93.ldap.number_filter=
handset.93.ldap.host=
handset.93.ldap.port=
handset.93.ldap.base=
handset.93.ldap.user=
handset.93.ldap.password=
handset.93.ldap.max_hits=
handset.93.ldap.name_attr=
handset.93.ldap.numb_attr=
handset.93.ldap.display_name=
handset.93.ldap.version=
handset.93.ldap.call_in_lookup=
handset.93.ldap.ldap_sort=
handset.93.ldap.tls_mode=
handset.93.ldap.call_out_lookup=
handset.93.ldap.incoming_call_special_search.enable=

#####
#####
##          Account94 Settings
##
#####

account.94.enable=%BWLINE-BINARY-94%
account.94.label=%BWEXTENSION-94%
account.94.display_name=%BWCLID-94%
account.94.auth_name=%BWAUTHUSER-94%
account.94.user_name=%BWLINEPORT-94%
account.94.password=%BWAUTHPASSWORD-94%

#W80B ADD
account.94.sip_server.template =
account.94.media_transmit.enable =

account.94.alarm.template =
account.94.alarm.server =
account.94.alarm.number =
```

```
#####
#####
##                               Failback
##
#####
#####
account.94.sip_server.1.failback_mode =
account.94.sip_server.1.failback_timeout =
account.94.sip_server.1.register_on_enable =
account.94.sip_server.1.failback_subscribe.enable =
account.94.sip_server.1.invite_retry_counts =
account.94.sip_server.1.only_signal_with_registered =

account.94.sip_server.2.failback_mode =
account.94.sip_server.2.failback_timeout =
account.94.sip_server.2.register_on_enable =
account.94.sip_server.2.failback_subscribe.enable =
account.94.sip_server.2.invite_retry_counts =
account.94.sip_server.2.only_signal_with_registered =

account.94.naptr_build =
account.94.fallback.redundancy_type =
account.94.fallback.timeout =

account.94.dns_cache_type =
account.94.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.94.anonymous_call =
account.94.reject_anonymous_call =
account.94.send_anonymous_code =
account.94.anonymous_call_oncode =
account.94.anonymous_call_offcode =
account.94.send_anonymous_rejection_code =
account.94.anonymous_reject_oncode =
account.94.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.94.codec.g722.enable =
account.94.codec.g722.priority =

account.94.codec.g729.enable =
account.94.codec.g729.priority =

account.94.codec.g726_16.enable =
account.94.codec.g726_16.priority =

account.94.codec.g726_24.enable =
account.94.codec.g726_24.priority =

account.94.codec.g726_32.enable =
account.94.codec.g726_32.priority =
```

```
account.94.codec.g726_40.enable =
account.94.codec.g726_40.priority =

account.94.codec.ilbc.enable =
account.94.codec.ilbc.priority =

account.94.codec.pcmu.enable =
account.94.codec.pcmu.priority =

account.94.codec.pcma.enable =
account.94.codec.pcma.priority =

account.94.codec.opus.enable =
account.94.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.94.nat.nat_traversal =
account.94.nat.udp_update_enable =
account.94.nat.udp_update_time =
account.94.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.94.blf.subscribe_period =
account.94.dtmf.type =
account.94.dtmf.dtmf_payload =
account.94.dtmf.info_type =
account.94.100rel_enable =
account.94.subscribe_register =
account.94.subscribe_mwi =
account.94.subscribe_mwi_expires =
account.94.subscribe_mwi_to_vm =
voice_mail.number.94 = %BWVOICE-PORTAL-NUMBER-94%
account.94.display_mwi.enable =
account.94.cid_source =
account.94.cid_source_privacy =
account.94.cid_source_ppi =
account.94.session_timer.enable =
account.94.session_timer.expires =
account.94.session_timer.refresher =
account.94.enable_user_equal_phone =
account.94.srtp_encryption =
account.94.ptime =
account.94.shared_line = %BWSHAREDLINE-BINARY-94%
account.94.register_mac =
account.94.register_line =
account.94.reg_fail_retry_interval =
account.94.reg_failed_retry_min_time =
account.94.reg_failed_retry_max_time =
```

```
#####
#####
##                               Network Conference
##
#####
#####
account.94.conf_type =
account.94.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-94%

account.94.sip_server_type =
account.94.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.94.register_expires_overlap =
account.94.subscribe_expires_overlap =
account.94.auto_dial_enable =
account.94.auto_dial_num =
account.94.cp_source =
account.94.transfer_refer_to_contact_header.enable =
#V80 Add
account.94.custom_ua =
account.94.callpark_enable =
account.94.check_cseq.enable =
account.94.check_to_tag.enable =
account.94.hold_use_inactive =
account.94.line_seize.expires =
account.94.update_ack_while_dialing =
account.94.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.94.always_fwd.enable =
account.94.always_fwd.target =
account.94.always_fwd.off_code =
account.94.always_fwd.on_code =
account.94.busy_fwd.enable =
account.94.busy_fwd.target =
account.94.busy_fwd.off_code =
account.94.busy_fwd.on_code =
account.94.timeout_fwd.enable =
account.94.timeout_fwd.target =
account.94.timeout_fwd.timeout =
account.94.timeout_fwd.off_code =
account.94.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```

account.94.dnd.enable =
account.94.dnd.on_code =
account.94.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.94.reg.enable =
handset.94.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.94.xsi.user =%BWLOGIN-ID-94%
account.94.xsi.password =%XSIPASSWORD-94%
account.94.xsi.host =%XSP_ADDRESS%
account.94.xsi.server_type =
account.94.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.94.ldap.enable =
handset.94.ldap.name_filter=
handset.94.ldap.number_filter=
handset.94.ldap.host=
handset.94.ldap.port=
handset.94.ldap.base=
handset.94.ldap.user=
handset.94.ldap.password=
handset.94.ldap.max_hits=
handset.94.ldap.name_attr=
handset.94.ldap.numb_attr=
handset.94.ldap.display_name=
handset.94.ldap.version=
handset.94.ldap.call_in_lookup=
handset.94.ldap.ldap_sort=
handset.94.ldap.tls_mode=
handset.94.ldap.call_out_lookup=
handset.94.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account95 Settings
##
#####
#####

```

```

account.95.enable=%BWLIN-BINARY-95%
account.95.label=%BWEXTENSION-95%
account.95.display_name=%BWCLID-95%
account.95.auth_name=%BWAUTHUSER-95%
account.95.user_name=%BWLINPORT-95%
account.95.password=%BWAUTHPASSWORD-95%

#W80B ADD
account.95.sip_server.template =
account.95.media_transmit.enable =

account.95.alarm.template =
account.95.alarm.server =
account.95.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.95.sip_server.1.failback_mode =
account.95.sip_server.1.failback_timeout =
account.95.sip_server.1.register_on_enable =
account.95.sip_server.1.failback_subscribe.enable =
account.95.sip_server.1.invite_retry_counts =
account.95.sip_server.1.only_signal_with_registered =

account.95.sip_server.2.failback_mode =
account.95.sip_server.2.failback_timeout =
account.95.sip_server.2.register_on_enable =
account.95.sip_server.2.failback_subscribe.enable =
account.95.sip_server.2.invite_retry_counts =
account.95.sip_server.2.only_signal_with_registered =

account.95.naptr_build =
account.95.fallback.redundancy_type =
account.95.fallback.timeout =

account.95.dns_cache_type =
account.95.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.95.anonymous_call =
account.95.reject_anonymous_call =
account.95.send_anonymous_code =
account.95.anonymous_call_oncode =
account.95.anonymous_call_offcode =
account.95.send_anonymous_rejection_code =
account.95.anonymous_reject_oncode =
account.95.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```



```
#####
#####
account.95.codec.g722.enable =
account.95.codec.g722.priority =

account.95.codec.g729.enable =
account.95.codec.g729.priority =

account.95.codec.g726_16.enable =
account.95.codec.g726_16.priority =

account.95.codec.g726_24.enable =
account.95.codec.g726_24.priority =

account.95.codec.g726_32.enable =
account.95.codec.g726_32.priority =

account.95.codec.g726_40.enable =
account.95.codec.g726_40.priority =

account.95.codec.ilbc.enable =
account.95.codec.ilbc.priority =

account.95.codec.pcmu.enable =
account.95.codec.pcmu.priority =

account.95.codec.pcma.enable =
account.95.codec.pcma.priority =

account.95.codec.opus.enable =
account.95.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.95.nat.nat_traversal =
account.95.nat.udp_update_enable =
account.95.nat.udp_update_time =
account.95.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.95.blf.subscribe_period =
account.95.dtmf.type =
account.95.dtmf.dtmf_payload =
account.95.dtmf.info_type =
account.95.100rel_enable =
account.95.subscribe_register =
account.95.subscribe_mwi =
account.95.subscribe_mwi_expires =
account.95.subscribe_mwi_to_vm =
voice_mail.number.95 = %BWVOICE-PORTAL-NUMBER-95%
account.95.display_mwi.enable =
account.95.cid_source =
```

```

account.95.cid_source_privacy =
account.95.cid_source_ppi =
account.95.session_timer.enable =
account.95.session_timer.expires =
account.95.session_timer.refresher =
account.95.enable_user_equal_phone =
account.95.srtp_encryption =
account.95.ptime =
account.95.shared_line = %BWSHAREDLINE-BINARY-95%
account.95.register_mac =
account.95.register_line =
account.95.reg_fail_retry_interval =
account.95.reg_failed_retry_min_time =
account.95.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.95.conf_type =
account.95.conf_uri = %BWNWORK-CONFERENCE-SIPURI-95%

account.95.sip_server_type =
account.95.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.95.register_expires_overlap =
account.95.subscribe_expires_overlap =
account.95.auto_dial_enable =
account.95.auto_dial_num =
account.95.cp_source =
account.95.transfer_refer_to_contact_header.enable =
#V80 Add
account.95.custom_ua =
account.95.callpark_enable =
account.95.check_cseq.enable =
account.95.check_to_tag.enable =
account.95.hold_use_inactive =
account.95.line_seize.expires =
account.95.update_ack_while_dialing =
account.95.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.95.always_fwd.enable =
account.95.always_fwd.target =
account.95.always_fwd.off_code =
account.95.always_fwd.on_code =
account.95.busy_fwd.enable =

```

```
account.95.busy_fwd.target =
account.95.busy_fwd.off_code =
account.95.busy_fwd.on_code =
account.95.timeout_fwd.enable =
account.95.timeout_fwd.target =
account.95.timeout_fwd.timeout =
account.95.timeout_fwd.off_code =
account.95.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.95.dnd.enable =
account.95.dnd.on_code =
account.95.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.95.reg.enable =
handset.95.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.95.xsi.user =%BWLOGIN-ID-95%
account.95.xsi.password =%XSIPASSWORD-95%
account.95.xsi.host =%XSP_ADDRESS%
account.95.xsi.server_type =
account.95.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.95.ldap.enable =
handset.95.ldap.name_filter=
handset.95.ldap.number_filter=
handset.95.ldap.host=
handset.95.ldap.port=
handset.95.ldap.base=
handset.95.ldap.user=
handset.95.ldap.password=
handset.95.ldap.max_hits=
handset.95.ldap.name_attr=
handset.95.ldap.numb_attr=
handset.95.ldap.display_name=
handset.95.ldap.version=
handset.95.ldap.call_in_lookup=
```

```
handset.95.ldap.ldap_sort=
handset.95.ldap.tls_mode=
handset.95.ldap.call_out_lookup=
handset.95.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account96 Settings
##
#####
#####

account.96.enable=%BWLIN-BINARY-96%
account.96.label=%BWEXTENSION-96%
account.96.display_name=%BWCLID-96%
account.96.auth_name=%BWAUTHUSER-96%
account.96.user_name=%BWLINPORT-96%
account.96.password=%BWAUTHPASSWORD-96%

#W80B ADD
account.96.sip_server.template =
account.96.media_transmit.enable =

account.96.alarm.template =
account.96.alarm.server =
account.96.alarm.number =

#####
#####
##                                     Failback
##
##
#####
#####

account.96.sip_server.1.failback_mode =
account.96.sip_server.1.failback_timeout =
account.96.sip_server.1.register_on_enable =
account.96.sip_server.1.failback_subscribe.enable =
account.96.sip_server.1.invite_retry_counts =
account.96.sip_server.1.only_signal_with_registered =

account.96.sip_server.2.failback_mode =
account.96.sip_server.2.failback_timeout =
account.96.sip_server.2.register_on_enable =
account.96.sip_server.2.failback_subscribe.enable =
account.96.sip_server.2.invite_retry_counts =
account.96.sip_server.2.only_signal_with_registered =

account.96.naptr_build =
account.96.fallback.redundancy_type =
account.96.fallback.timeout =

account.96.dns_cache_type =
account.96.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
##
#####
#####
```

```

account.96.anonymous_call =
account.96.reject_anonymous_call =
account.96.send_anonymous_code =
account.96.anonymous_call_oncode =
account.96.anonymous_call_offcode =
account.96.send_anonymous_rejection_code =
account.96.anonymous_reject_oncode =
account.96.anonymous_reject_offcode =

#####
#####
##
##                                Codec
##
#####
#####
account.96.codec.g722.enable =
account.96.codec.g722.priority =

account.96.codec.g729.enable =
account.96.codec.g729.priority =

account.96.codec.g726_16.enable =
account.96.codec.g726_16.priority =

account.96.codec.g726_24.enable =
account.96.codec.g726_24.priority =

account.96.codec.g726_32.enable =
account.96.codec.g726_32.priority =

account.96.codec.g726_40.enable =
account.96.codec.g726_40.priority =

account.96.codec.ilbc.enable =
account.96.codec.ilbc.priority =

account.96.codec.pcmu.enable =
account.96.codec.pcmu.priority =

account.96.codec.pcma.enable =
account.96.codec.pcma.priority =

account.96.codec.opus.enable =
account.96.codec.opus.priority =

#####
#####
##
##                                NAT Settings
##
#####
#####

account.96.nat.nat_traversal =
account.96.nat.udp_update_enable =
account.96.nat.udp_update_time =
account.96.nat.rport =

#####
#####
##
##                                Register Advanced
##

```

```
#####
#####

account.96.blf.subscribe_period =
account.96.dtmf.type =
account.96.dtmf.dtmf_payload =
account.96.dtmf.info_type =
account.96.100rel_enable =
account.96.subscribe_register =
account.96.subscribe_mwi =
account.96.subscribe_mwi_expires =
account.96.subscribe_mwi_to_vm =
voice_mail.number.96 = %BWVOICE-PORTAL-NUMBER-96%
account.96.display_mwi.enable =
account.96.cid_source =
account.96.cid_source_privacy =
account.96.cid_source_ppi =
account.96.session_timer.enable =
account.96.session_timer.expires =
account.96.session_timer.refresher =
account.96.enable_user_equal_phone =
account.96.srtp_encryption =
account.96.ptime =
account.96.shared_line = %BWSHAREDLINE-BINARY-96%
account.96.register_mac =
account.96.register_line =
account.96.reg_fail_retry_interval =
account.96.reg_failed_retry_min_time =
account.96.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.96.conf_type =
account.96.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-96%

account.96.sip_server_type =
account.96.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.96.register_expires_overlap =
account.96.subscribe_expires_overlap =
account.96.auto_dial_enable =
account.96.auto_dial_num =
account.96.cp_source =
account.96.transfer_refer_to_contact_header.enable =
#V80 Add
account.96.custom_ua =
account.96.callpark_enable =
account.96.check_cseq.enable =
account.96.check_to_tag.enable =
account.96.hold_use_inactive =
```

```

account.96.line_seize.expires =
account.96.update_ack_while_dialing =
account.96.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.96.always_fwd.enable =
account.96.always_fwd.target =
account.96.always_fwd.off_code =
account.96.always_fwd.on_code =
account.96.busy_fwd.enable =
account.96.busy_fwd.target =
account.96.busy_fwd.off_code =
account.96.busy_fwd.on_code =
account.96.timeout_fwd.enable =
account.96.timeout_fwd.target =
account.96.timeout_fwd.timeout =
account.96.timeout_fwd.off_code =
account.96.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.96.dnd.enable =
account.96.dnd.on_code =
account.96.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.96.reg.enable =
handset.96.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.96.xsi.user =%BWLOGIN-ID-96%
account.96.xsi.password =%XSIPASSWORD-96%
account.96.xsi.host =%XSP_ADDRESS%
account.96.xsi.server_type =
account.96.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.96.ldap.enable =
handset.96.ldap.name_filter=
handset.96.ldap.number_filter=
handset.96.ldap.host=
handset.96.ldap.port=
handset.96.ldap.base=
handset.96.ldap.user=
handset.96.ldap.password=
handset.96.ldap.max_hits=
handset.96.ldap.name_attr=
handset.96.ldap.numb_attr=
handset.96.ldap.display_name=
handset.96.ldap.version=
handset.96.ldap.call_in_lookup=
handset.96.ldap.ldap_sort=
handset.96.ldap.tls_mode=
handset.96.ldap.call_out_lookup=
handset.96.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account97 Settings
##
#####
#####

account.97.enable=%BWLIN-BINARY-97%
account.97.label=%BWEXTENSION-97%
account.97.display_name=%BWCLID-97%
account.97.auth_name=%BWAUTHUSER-97%
account.97.user_name=%BWLINPORT-97%
account.97.password=%BWAUTHPASSWORD-97%

#W80B ADD
account.97.sip_server.template =
account.97.media_transmit.enable =

account.97.alarm.template =
account.97.alarm.server =
account.97.alarm.number =

#####
#####
##                               Failback
##
#####
#####

account.97.sip_server.1.failback_mode =
account.97.sip_server.1.failback_timeout =
account.97.sip_server.1.register_on_enable =
account.97.sip_server.1.failback_subscribe.enable =
account.97.sip_server.1.invite_retry_counts =
account.97.sip_server.1.only_signal_with_registered =

account.97.sip_server.2.failback_mode =
account.97.sip_server.2.failback_timeout =
account.97.sip_server.2.register_on_enable =
account.97.sip_server.2.failback_subscribe.enable =
```



```
account.97.sip_server.2.invite_retry_counts =
account.97.sip_server.2.only_signal_with_registered =

account.97.naptr_build =
account.97.fallback.redundancy_type =
account.97.fallback.timeout =

account.97.dns_cache_type =
account.97.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.97.anonymous_call =
account.97.reject_anonymous_call =
account.97.send_anonymous_code =
account.97.anonymous_call_oncode =
account.97.anonymous_call_offcode =
account.97.send_anonymous_rejection_code =
account.97.anonymous_reject_oncode =
account.97.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.97.codec.g722.enable =
account.97.codec.g722.priority =

account.97.codec.g729.enable =
account.97.codec.g729.priority =

account.97.codec.g726_16.enable =
account.97.codec.g726_16.priority =

account.97.codec.g726_24.enable =
account.97.codec.g726_24.priority =

account.97.codec.g726_32.enable =
account.97.codec.g726_32.priority =

account.97.codec.g726_40.enable =
account.97.codec.g726_40.priority =

account.97.codec.ilbc.enable =
account.97.codec.ilbc.priority =

account.97.codec.pcmu.enable =
account.97.codec.pcmu.priority =

account.97.codec.pcma.enable =
account.97.codec.pcma.priority =

account.97.codec.opus.enable =
account.97.codec.opus.priority =
```

```
#####
#####
##                                NAT Settings
##
#####
#####

account.97.nat.nat_traversal =
account.97.nat.udp_update_enable =
account.97.nat.udp_update_time =
account.97.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.97.blf.subscribe_period =
account.97.dtmf.type =
account.97.dtmf.dtmf_payload =
account.97.dtmf.info_type =
account.97.100rel_enable =
account.97.subscribe_register =
account.97.subscribe_mwi =
account.97.subscribe_mwi_expires =
account.97.subscribe_mwi_to_vm =
voice_mail.number.97 = %BWVOICE-PORTAL-NUMBER-97%
account.97.display_mwi.enable =
account.97.cid_source =
account.97.cid_source_privacy =
account.97.cid_source_ppi =
account.97.session_timer.enable =
account.97.session_timer.expires =
account.97.session_timer.refresher =
account.97.enable_user_equal_phone =
account.97.srtp_encryption =
account.97.ptime =
account.97.shared_line = %BWSHAREDLINE-BINARY-97%
account.97.register_mac =
account.97.register_line =
account.97.reg_fail_retry_interval =
account.97.reg_failed_retry_min_time =
account.97.reg_failed_retry_max_time =

#####
#####
##                                Network Conference
##
#####
#####

account.97.conf_type =
account.97.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-97%

account.97.sip_server_type =
account.97.unregister_on_reboot =

#####
#####
##                                Register Other
##
```

```
#####
#####
##DECT V81 Add

account.97.register_expires_overlap =
account.97.subscribe_expires_overlap =
account.97.auto_dial_enable =
account.97.auto_dial_num =
account.97.cp_source =
account.97.transfer_refer_to_contact_header.enable =
#V80 Add
account.97.custom_ua =
account.97.callpark_enable =
account.97.check_cseq.enable =
account.97.check_to_tag.enable =
account.97.hold_use_inactive =
account.97.line_seize.expires =
account.97.update_ack_while_dialing =
account.97.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.97.always_fwd.enable =
account.97.always_fwd.target =
account.97.always_fwd.off_code =
account.97.always_fwd.on_code =
account.97.busy_fwd.enable =
account.97.busy_fwd.target =
account.97.busy_fwd.off_code =
account.97.busy_fwd.on_code =
account.97.timeout_fwd.enable =
account.97.timeout_fwd.target =
account.97.timeout_fwd.timeout =
account.97.timeout_fwd.off_code =
account.97.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.97.dnd.enable =
account.97.dnd.on_code =
account.97.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.97.reg.enable =
handset.97.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.97.xsi.user =%BWLOGIN-ID-97%
account.97.xsi.password =%XSIPASSWORD-97%
account.97.xsi.host =%XSP_ADDRESS%
account.97.xsi.server_type =
account.97.xsi.port =

#####
#####
##          LADP
##
#####
handset.97.ldap.enable =
handset.97.ldap.name_filter=
handset.97.ldap.number_filter=
handset.97.ldap.host=
handset.97.ldap.port=
handset.97.ldap.base=
handset.97.ldap.user=
handset.97.ldap.password=
handset.97.ldap.max_hits=
handset.97.ldap.name_attr=
handset.97.ldap.numb_attr=
handset.97.ldap.display_name=
handset.97.ldap.version=
handset.97.ldap.call_in_lookup=
handset.97.ldap.ldap_sort=
handset.97.ldap.tls_mode=
handset.97.ldap.call_out_lookup=
handset.97.ldap.incoming_call_special_search.enable=

#####
#####
##          Account98 Settings
##
#####

account.98.enable=%BWLINE-BINARY-98%
account.98.label=%BWEXTENSION-98%
account.98.display_name=%BWCLID-98%
account.98.auth_name=%BWAUTHUSER-98%
account.98.user_name=%BWLINEPORT-98%
account.98.password=%BWAUTHPASSWORD-98%

#W80B ADD
account.98.sip_server.template =
account.98.media_transmit.enable =

account.98.alarm.template =
account.98.alarm.server =
account.98.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.98.sip_server.1.failback_mode =
account.98.sip_server.1.failback_timeout =
account.98.sip_server.1.register_on_enable =
account.98.sip_server.1.failback_subscribe.enable =
account.98.sip_server.1.invite_retry_counts =
account.98.sip_server.1.only_signal_with_registered =

account.98.sip_server.2.failback_mode =
account.98.sip_server.2.failback_timeout =
account.98.sip_server.2.register_on_enable =
account.98.sip_server.2.failback_subscribe.enable =
account.98.sip_server.2.invite_retry_counts =
account.98.sip_server.2.only_signal_with_registered =

account.98.naptr_build =
account.98.fallback.redundancy_type =
account.98.fallback.timeout =

account.98.dns_cache_type =
account.98.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.98.anonymous_call =
account.98.reject_anonymous_call =
account.98.send_anonymous_code =
account.98.anonymous_call_oncode =
account.98.anonymous_call_offcode =
account.98.send_anonymous_rejection_code =
account.98.anonymous_reject_oncode =
account.98.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.98.codec.g722.enable =
account.98.codec.g722.priority =

account.98.codec.g729.enable =
account.98.codec.g729.priority =

account.98.codec.g726_16.enable =
account.98.codec.g726_16.priority =

account.98.codec.g726_24.enable =
account.98.codec.g726_24.priority =

account.98.codec.g726_32.enable =
account.98.codec.g726_32.priority =
```

```

account.98.codec.g726_40.enable =
account.98.codec.g726_40.priority =

account.98.codec.ilbc.enable =
account.98.codec.ilbc.priority =

account.98.codec.pcmu.enable =
account.98.codec.pcmu.priority =

account.98.codec.pcma.enable =
account.98.codec.pcma.priority =

account.98.codec.opus.enable =
account.98.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.98.nat.nat_traversal =
account.98.nat.udp_update_enable =
account.98.nat.udp_update_time =
account.98.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.98.blf.subscribe_period =
account.98.dtmf.type =
account.98.dtmf.dtmf_payload =
account.98.dtmf.info_type =
account.98.100rel_enable =
account.98.subscribe_register =
account.98.subscribe_mwi =
account.98.subscribe_mwi_expires =
account.98.subscribe_mwi_to_vm =
voice_mail.number.98 = %BWVOICE-PORTAL-NUMBER-98%
account.98.display_mwi.enable =
account.98.cid_source =
account.98.cid_source_privacy =
account.98.cid_source_ppi =
account.98.session_timer.enable =
account.98.session_timer.expires =
account.98.session_timer.refresher =
account.98.enable_user_equal_phone =
account.98.srtp_encryption =
account.98.ptime =
account.98.shared_line = %BWSHAREDLINE-BINARY-98%
account.98.register_mac =
account.98.register_line =
account.98.reg_fail_retry_interval =
account.98.reg_failed_retry_min_time =
account.98.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.98.conf_type =
account.98.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-98%

account.98.sip_server_type =
account.98.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.98.register_expires_overlap =
account.98.subscribe_expires_overlap =
account.98.auto_dial_enable =
account.98.auto_dial_num =
account.98.cp_source =
account.98.transfer_refer_to_contact_header.enable =
#V80 Add
account.98.custom_ua =
account.98.callpark_enable =
account.98.check_cseq.enable =
account.98.check_to_tag.enable =
account.98.hold_use_inactive =
account.98.line_seize.expires =
account.98.update_ack_while_dialing =
account.98.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.98.always_fwd.enable =
account.98.always_fwd.target =
account.98.always_fwd.off_code =
account.98.always_fwd.on_code =
account.98.busy_fwd.enable =
account.98.busy_fwd.target =
account.98.busy_fwd.off_code =
account.98.busy_fwd.on_code =
account.98.timeout_fwd.enable =
account.98.timeout_fwd.target =
account.98.timeout_fwd.timeout =
account.98.timeout_fwd.off_code =
account.98.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```

account.98.dnd.enable =
account.98.dnd.on_code =
account.98.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.98.reg.enable =
handset.98.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.98.xsi.user =%BWLOGIN-ID-98%
account.98.xsi.password =%XSIPASSWORD-98%
account.98.xsi.host =%XSP_ADDRESS%
account.98.xsi.server_type =
account.98.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.98.ldap.enable =
handset.98.ldap.name_filter=
handset.98.ldap.number_filter=
handset.98.ldap.host=
handset.98.ldap.port=
handset.98.ldap.base=
handset.98.ldap.user=
handset.98.ldap.password=
handset.98.ldap.max_hits=
handset.98.ldap.name_attr=
handset.98.ldap.numb_attr=
handset.98.ldap.display_name=
handset.98.ldap.version=
handset.98.ldap.call_in_lookup=
handset.98.ldap.ldap_sort=
handset.98.ldap.tls_mode=
handset.98.ldap.call_out_lookup=
handset.98.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account99 Settings
##
#####
#####

```



```

account.99.enable=%BWLIN-BINARY-99%
account.99.label=%BWEXTENSION-99%
account.99.display_name=%BWCLID-99%
account.99.auth_name=%BWAUTHUSER-99%
account.99.user_name=%BWLINPORT-99%
account.99.password=%BWAUTHPASSWORD-99%

#W80B ADD
account.99.sip_server.template =
account.99.media_transmit.enable =

account.99.alarm.template =
account.99.alarm.server =
account.99.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.99.sip_server.1.failback_mode =
account.99.sip_server.1.failback_timeout =
account.99.sip_server.1.register_on_enable =
account.99.sip_server.1.failback_subscribe.enable =
account.99.sip_server.1.invite_retry_counts =
account.99.sip_server.1.only_signal_with_registered =

account.99.sip_server.2.failback_mode =
account.99.sip_server.2.failback_timeout =
account.99.sip_server.2.register_on_enable =
account.99.sip_server.2.failback_subscribe.enable =
account.99.sip_server.2.invite_retry_counts =
account.99.sip_server.2.only_signal_with_registered =

account.99.naptr_build =
account.99.fallback.redundancy_type =
account.99.fallback.timeout =

account.99.dns_cache_type =
account.99.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.99.anonymous_call =
account.99.reject_anonymous_call =
account.99.send_anonymous_code =
account.99.anonymous_call_oncode =
account.99.anonymous_call_offcode =
account.99.send_anonymous_rejection_code =
account.99.anonymous_reject_oncode =
account.99.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.99.codec.g722.enable =
account.99.codec.g722.priority =

account.99.codec.g729.enable =
account.99.codec.g729.priority =

account.99.codec.g726_16.enable =
account.99.codec.g726_16.priority =

account.99.codec.g726_24.enable =
account.99.codec.g726_24.priority =

account.99.codec.g726_32.enable =
account.99.codec.g726_32.priority =

account.99.codec.g726_40.enable =
account.99.codec.g726_40.priority =

account.99.codec.ilbc.enable =
account.99.codec.ilbc.priority =

account.99.codec.pcmu.enable =
account.99.codec.pcmu.priority =

account.99.codec.pcma.enable =
account.99.codec.pcma.priority =

account.99.codec.opus.enable =
account.99.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.99.nat.nat_traversal =
account.99.nat.udp_update_enable =
account.99.nat.udp_update_time =
account.99.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.99.blf.subscribe_period =
account.99.dtmf.type =
account.99.dtmf.dtmf_payload =
account.99.dtmf.info_type =
account.99.100rel_enable =
account.99.subscribe_register =
account.99.subscribe_mwi =
account.99.subscribe_mwi_expires =
account.99.subscribe_mwi_to_vm =
voice_mail.number.99 = %BWVOICE-PORTAL-NUMBER-99%
account.99.display_mwi.enable =
account.99.cid_source =
```

```

account.99.cid_source_privacy =
account.99.cid_source_ppi =
account.99.session_timer.enable =
account.99.session_timer.expires =
account.99.session_timer.refresher =
account.99.enable_user_equal_phone =
account.99.srtp_encryption =
account.99.ptime =
account.99.shared_line = %BWSHAREDLINE-BINARY-99%
account.99.register_mac =
account.99.register_line =
account.99.reg_fail_retry_interval =
account.99.reg_failed_retry_min_time =
account.99.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.99.conf_type =
account.99.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-99%

account.99.sip_server_type =
account.99.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.99.register_expires_overlap =
account.99.subscribe_expires_overlap =
account.99.auto_dial_enable =
account.99.auto_dial_num =
account.99.cp_source =
account.99.transfer_refer_to_contact_header.enable =
#V80 Add
account.99.custom_ua =
account.99.callpark_enable =
account.99.check_cseq.enable =
account.99.check_to_tag.enable =
account.99.hold_use_inactive =
account.99.line_seize.expires =
account.99.update_ack_while_dialing =
account.99.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.99.always_fwd.enable =
account.99.always_fwd.target =
account.99.always_fwd.off_code =
account.99.always_fwd.on_code =
account.99.busy_fwd.enable =

```

```

account.99.busy_fwd.target =
account.99.busy_fwd.off_code =
account.99.busy_fwd.on_code =
account.99.timeout_fwd.enable =
account.99.timeout_fwd.target =
account.99.timeout_fwd.timeout =
account.99.timeout_fwd.off_code =
account.99.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.99.dnd.enable =
account.99.dnd.on_code =
account.99.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.99.reg.enable =
handset.99.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.99.xsi.user =%BWLOGIN-ID-99%
account.99.xsi.password =%XSIPASSWORD-99%
account.99.xsi.host =%XSP_ADDRESS%
account.99.xsi.server_type =
account.99.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.99.ldap.enable =
handset.99.ldap.name_filter=
handset.99.ldap.number_filter=
handset.99.ldap.host=
handset.99.ldap.port=
handset.99.ldap.base=
handset.99.ldap.user=
handset.99.ldap.password=
handset.99.ldap.max_hits=
handset.99.ldap.name_attr=
handset.99.ldap.numb_attr=
handset.99.ldap.display_name=
handset.99.ldap.version=
handset.99.ldap.call_in_lookup=

```

```
handset.99.ldap.ldap_sort=
handset.99.ldap.tls_mode=
handset.99.ldap.call_out_lookup=
handset.99.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account100 Settings
##
#####
#####

account.100.enable=%BWLIN-BINARY-100%
account.100.label=%BWEXTENSION-100%
account.100.display_name=%BWCLID-100%
account.100.auth_name=%BWAUTHUSER-100%
account.100.user_name=%BWLINPORT-100%
account.100.password=%BWAUTHPASSWORD-100%

#W80B ADD
account.100.sip_server.template =
account.100.media_transmit.enable =

account.100.alarm.template =
account.100.alarm.server =
account.100.alarm.number =

#####
#####
##                                     Failback
##
##
#####
#####

account.100.sip_server.1.failback_mode =
account.100.sip_server.1.failback_timeout =
account.100.sip_server.1.register_on_enable =
account.100.sip_server.1.failback_subscribe.enable =
account.100.sip_server.1.invite_retry_counts =
account.100.sip_server.1.only_signal_with_registered =

account.100.sip_server.2.failback_mode =
account.100.sip_server.2.failback_timeout =
account.100.sip_server.2.register_on_enable =
account.100.sip_server.2.failback_subscribe.enable =
account.100.sip_server.2.invite_retry_counts =
account.100.sip_server.2.only_signal_with_registered =

account.100.naptr_build =
account.100.fallback.redundancy_type =
account.100.fallback.timeout =

account.100.dns_cache_type =
account.100.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
##
#####
#####
```

```

account.100.anonymous_call =
account.100.reject_anonymous_call =
account.100.send_anonymous_code =
account.100.anonymous_call_oncode =
account.100.anonymous_call_offcode =
account.100.send_anonymous_rejection_code =
account.100.anonymous_reject_oncode =
account.100.anonymous_reject_offcode =

#####
#####
##
##                                Codec
##
#####
#####
account.100.codec.g722.enable =
account.100.codec.g722.priority =

account.100.codec.g729.enable =
account.100.codec.g729.priority =

account.100.codec.g726_16.enable =
account.100.codec.g726_16.priority =

account.100.codec.g726_24.enable =
account.100.codec.g726_24.priority =

account.100.codec.g726_32.enable =
account.100.codec.g726_32.priority =

account.100.codec.g726_40.enable =
account.100.codec.g726_40.priority =

account.100.codec.ilbc.enable =
account.100.codec.ilbc.priority =

account.100.codec.pcmu.enable =
account.100.codec.pcmu.priority =

account.100.codec.pcma.enable =
account.100.codec.pcma.priority =

account.100.codec.opus.enable =
account.100.codec.opus.priority =

#####
#####
##
##                                NAT Settings
##
#####
#####

account.100.nat.nat_traversal =
account.100.nat.udp_update_enable =
account.100.nat.udp_update_time =
account.100.nat.rport =

#####
#####
##
##                                Register Advanced
##

```

```
#####
#####

account.100.blf.subscribe_period =
account.100.dtmf.type =
account.100.dtmf.dtmf_payload =
account.100.dtmf.info_type =
account.100.100rel_enable =
account.100.subscribe_register =
account.100.subscribe_mwi =
account.100.subscribe_mwi_expires =
account.100.subscribe_mwi_to_vm =
voice_mail.number.100 = %BWVOICE-PORTAL-NUMBER-100%
account.100.display_mwi.enable =
account.100.cid_source =
account.100.cid_source_privacy =
account.100.cid_source_ppi =
account.100.session_timer.enable =
account.100.session_timer.expires =
account.100.session_timer.refresher =
account.100.enable_user_equal_phone =
account.100.srtp_encryption =
account.100.ptime =
account.100.shared_line = %BWSHAREDLINE-BINARY-100%
account.100.register_mac =
account.100.register_line =
account.100.reg_fail_retry_interval =
account.100.reg_failed_retry_min_time =
account.100.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.100.conf_type =
account.100.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-100%

account.100.sip_server_type =
account.100.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.100.register_expires_overlap =
account.100.subscribe_expires_overlap =
account.100.auto_dial_enable =
account.100.auto_dial_num =
account.100.cp_source =
account.100.transfer_refer_to_contact_header.enable =
#V80 Add
account.100.custom_ua =
account.100.callpark_enable =
account.100.check_cseq.enable =
account.100.check_to_tag.enable =
account.100.hold_use_inactive =
```

```

account.100.line_seize.expires =
account.100.update_ack_while_dialing =
account.100.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.100.always_fwd.enable =
account.100.always_fwd.target =
account.100.always_fwd.off_code =
account.100.always_fwd.on_code =
account.100.busy_fwd.enable =
account.100.busy_fwd.target =
account.100.busy_fwd.off_code =
account.100.busy_fwd.on_code =
account.100.timeout_fwd.enable =
account.100.timeout_fwd.target =
account.100.timeout_fwd.timeout =
account.100.timeout_fwd.off_code =
account.100.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.100.dnd.enable =
account.100.dnd.on_code =
account.100.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.100.reg.enable =
handset.100.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.100.xsi.user =%BWLOGIN-ID-100%
account.100.xsi.password =%XSIPASSWORD-100%
account.100.xsi.host =%XSP_ADDRESS%
account.100.xsi.server_type =
account.100.xsi.port =

#####
#####
##                               LADP
##

```



```
#####
#####
handset.100.ldap.enable =
handset.100.ldap.name_filter=
handset.100.ldap.number_filter=
handset.100.ldap.host=
handset.100.ldap.port=
handset.100.ldap.base=
handset.100.ldap.user=
handset.100.ldap.password=
handset.100.ldap.max_hits=
handset.100.ldap.name_attr=
handset.100.ldap.numb_attr=
handset.100.ldap.display_name=
handset.100.ldap.version=
handset.100.ldap.call_in_lookup=
handset.100.ldap.ldap_sort=
handset.100.ldap.tls_mode=
handset.100.ldap.call_out_lookup=
handset.100.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account101 Settings
##
#####
#####

account.101.enable=%BWLIN-BINARY-101%
account.101.label=%BWEXTENSION-101%
account.101.display_name=%BWCLID-101%
account.101.auth_name=%BWAUTHUSER-101%
account.101.user_name=%BWLINPORT-101%
account.101.password=%BWAUTHPASSWORD-101%

#W80B ADD
account.101.sip_server.template =
account.101.media_transmit.enable =

account.101.alarm.template =
account.101.alarm.server =
account.101.alarm.number =

#####
#####
##                                     Failback
##
#####
#####
account.101.sip_server.1.failback_mode =
account.101.sip_server.1.failback_timeout =
account.101.sip_server.1.register_on_enable =
account.101.sip_server.1.failback_subscribe.enable =
account.101.sip_server.1.invite_retry_counts =
account.101.sip_server.1.only_signal_with_registered =

account.101.sip_server.2.failback_mode =
account.101.sip_server.2.failback_timeout =
account.101.sip_server.2.register_on_enable =
account.101.sip_server.2.failback_subscribe.enable =
```

```
account.101.sip_server.2.invite_retry_counts =
account.101.sip_server.2.only_signal_with_registered =

account.101.naptr_build =
account.101.fallback.redundancy_type =
account.101.fallback.timeout =

account.101.dns_cache_type =
account.101.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.101.anonymous_call =
account.101.reject_anonymous_call =
account.101.send_anonymous_code =
account.101.anonymous_call_oncode =
account.101.anonymous_call_offcode =
account.101.send_anonymous_rejection_code =
account.101.anonymous_reject_oncode =
account.101.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.101.codec.g722.enable =
account.101.codec.g722.priority =

account.101.codec.g729.enable =
account.101.codec.g729.priority =

account.101.codec.g726_16.enable =
account.101.codec.g726_16.priority =

account.101.codec.g726_24.enable =
account.101.codec.g726_24.priority =

account.101.codec.g726_32.enable =
account.101.codec.g726_32.priority =

account.101.codec.g726_40.enable =
account.101.codec.g726_40.priority =

account.101.codec.ilbc.enable =
account.101.codec.ilbc.priority =

account.101.codec.pcmu.enable =
account.101.codec.pcmu.priority =

account.101.codec.pcma.enable =
account.101.codec.pcma.priority =

account.101.codec.opus.enable =
account.101.codec.opus.priority =
```

```
#####
#####
##                               NAT Settings
##
#####
#####

account.101.nat.nat_traversal =
account.101.nat.udp_update_enable =
account.101.nat.udp_update_time =
account.101.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.101.blf.subscribe_period =
account.101.dtmf.type =
account.101.dtmf.dtmf_payload =
account.101.dtmf.info_type =
account.101.100rel_enable =
account.101.subscribe_register =
account.101.subscribe_mwi =
account.101.subscribe_mwi_expires =
account.101.subscribe_mwi_to_vm =
voice_mail.number.101 = %BWVOICE-PORTAL-NUMBER-101%
account.101.display_mwi.enable =
account.101.cid_source =
account.101.cid_source_privacy =
account.101.cid_source_ppi =
account.101.session_timer.enable =
account.101.session_timer.expires =
account.101.session_timer.refresher =
account.101.enable_user_equal_phone =
account.101.srtp_encryption =
account.101.ptime =
account.101.shared_line = %BWSHAREDLINE-BINARY-101%
account.101.register_mac =
account.101.register_line =
account.101.reg_fail_retry_interval =
account.101.reg_failed_retry_min_time =
account.101.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.101.conf_type =
account.101.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-101%

account.101.sip_server_type =
account.101.unregister_on_reboot =

#####
#####
##                               Register Other
##
```

```
#####
#####
##DECT V81 Add

account.101.register_expires_overlap =
account.101.subscribe_expires_overlap =
account.101.auto_dial_enable =
account.101.auto_dial_num =
account.101.cp_source =
account.101.transfer_refer_to_contact_header.enable =
#V80 Add
account.101.custom_ua =
account.101.callpark_enable =
account.101.check_cseq.enable =
account.101.check_to_tag.enable =
account.101.hold_use_inactive =
account.101.line_seize.expires =
account.101.update_ack_while_dialing =
account.101.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.101.always_fwd.enable =
account.101.always_fwd.target =
account.101.always_fwd.off_code =
account.101.always_fwd.on_code =
account.101.busy_fwd.enable =
account.101.busy_fwd.target =
account.101.busy_fwd.off_code =
account.101.busy_fwd.on_code =
account.101.timeout_fwd.enable =
account.101.timeout_fwd.target =
account.101.timeout_fwd.timeout =
account.101.timeout_fwd.off_code =
account.101.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.101.dnd.enable =
account.101.dnd.on_code =
account.101.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.101.reg.enable =
handset.101.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.101.xsi.user =%BWLOGIN-ID-101%
account.101.xsi.password =%XSIPASSWORD-101%
account.101.xsi.host =%XSP_ADDRESS%
account.101.xsi.server_type =
account.101.xsi.port =

#####
#####
##          LADP
##
#####
handset.101.ldap.enable =
handset.101.ldap.name_filter=
handset.101.ldap.number_filter=
handset.101.ldap.host=
handset.101.ldap.port=
handset.101.ldap.base=
handset.101.ldap.user=
handset.101.ldap.password=
handset.101.ldap.max_hits=
handset.101.ldap.name_attr=
handset.101.ldap.numb_attr=
handset.101.ldap.display_name=
handset.101.ldap.version=
handset.101.ldap.call_in_lookup=
handset.101.ldap.ldap_sort=
handset.101.ldap.tls_mode=
handset.101.ldap.call_out_lookup=
handset.101.ldap.incoming_call_special_search.enable=

#####
#####
##          Account102 Settings
##
#####

account.102.enable=%BWLINE-BINARY-102%
account.102.label=%BWEXTENSION-102%
account.102.display_name=%BWCLID-102%
account.102.auth_name=%BWAUTHUSER-102%
account.102.user_name=%BWLINERPORT-102%
account.102.password=%BWAUTHPASSWORD-102%

#W80B ADD
account.102.sip_server.template =
account.102.media_transmit.enable =

account.102.alarm.template =
account.102.alarm.server =
account.102.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.102.sip_server.1.failback_mode =
account.102.sip_server.1.failback_timeout =
account.102.sip_server.1.register_on_enable =
account.102.sip_server.1.failback_subscribe.enable =
account.102.sip_server.1.invite_retry_counts =
account.102.sip_server.1.only_signal_with_registered =

account.102.sip_server.2.failback_mode =
account.102.sip_server.2.failback_timeout =
account.102.sip_server.2.register_on_enable =
account.102.sip_server.2.failback_subscribe.enable =
account.102.sip_server.2.invite_retry_counts =
account.102.sip_server.2.only_signal_with_registered =

account.102.naptr_build =
account.102.fallback.redundancy_type =
account.102.fallback.timeout =

account.102.dns_cache_type =
account.102.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.102.anonymous_call =
account.102.reject_anonymous_call =
account.102.send_anonymous_code =
account.102.anonymous_call_oncode =
account.102.anonymous_call_offcode =
account.102.send_anonymous_rejection_code =
account.102.anonymous_reject_oncode =
account.102.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.102.codec.g722.enable =
account.102.codec.g722.priority =

account.102.codec.g729.enable =
account.102.codec.g729.priority =

account.102.codec.g726_16.enable =
account.102.codec.g726_16.priority =

account.102.codec.g726_24.enable =
account.102.codec.g726_24.priority =

account.102.codec.g726_32.enable =
account.102.codec.g726_32.priority =
```

```

account.102.codec.g726_40.enable =
account.102.codec.g726_40.priority =

account.102.codec.ilbc.enable =
account.102.codec.ilbc.priority =

account.102.codec.pcmu.enable =
account.102.codec.pcmu.priority =

account.102.codec.pcma.enable =
account.102.codec.pcma.priority =

account.102.codec.opus.enable =
account.102.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.102.nat.nat_traversal =
account.102.nat.udp_update_enable =
account.102.nat.udp_update_time =
account.102.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.102.blf.subscribe_period =
account.102.dtmf.type =
account.102.dtmf.dtmf_payload =
account.102.dtmf.info_type =
account.102.100rel_enable =
account.102.subscribe_register =
account.102.subscribe_mwi =
account.102.subscribe_mwi_expires =
account.102.subscribe_mwi_to_vm =
voice_mail.number.102 = %BWVOICE-PORTAL-NUMBER-102%
account.102.display_mwi.enable =
account.102.cid_source =
account.102.cid_source_privacy =
account.102.cid_source_ppi =
account.102.session_timer.enable =
account.102.session_timer.expires =
account.102.session_timer.refresher =
account.102.enable_user_equal_phone =
account.102.srtp_encryption =
account.102.ptime =
account.102.shared_line = %BWSHAREDLINE-BINARY-102%
account.102.register_mac =
account.102.register_line =
account.102.reg_fail_retry_interval =
account.102.reg_failed_retry_min_time =
account.102.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.102.conf_type =
account.102.conf_uri = %BWNWORK-CONFERENCE-SIPURI-102%

account.102.sip_server_type =
account.102.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.102.register_expires_overlap =
account.102.subscribe_expires_overlap =
account.102.auto_dial_enable =
account.102.auto_dial_num =
account.102.cp_source =
account.102.transfer_refer_to_contact_header.enable =
#V80 Add
account.102.custom_ua =
account.102.callpark_enable =
account.102.check_cseq.enable =
account.102.check_to_tag.enable =
account.102.hold_use_inactive =
account.102.line_seize.expires =
account.102.update_ack_while_dialing =
account.102.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.102.always_fwd.enable =
account.102.always_fwd.target =
account.102.always_fwd.off_code =
account.102.always_fwd.on_code =
account.102.busy_fwd.enable =
account.102.busy_fwd.target =
account.102.busy_fwd.off_code =
account.102.busy_fwd.on_code =
account.102.timeout_fwd.enable =
account.102.timeout_fwd.target =
account.102.timeout_fwd.timeout =
account.102.timeout_fwd.off_code =
account.102.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```



```
account.102.dnd.enable =
account.102.dnd.on_code =
account.102.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.102.reg.enable =
handset.102.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.102.xsi.user =%BWLOGIN-ID-102%
account.102.xsi.password =%XSIPASSWORD-102%
account.102.xsi.host =%XSP_ADDRESS%
account.102.xsi.server_type =
account.102.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.102.ldap.enable =
handset.102.ldap.name_filter=
handset.102.ldap.number_filter=
handset.102.ldap.host=
handset.102.ldap.port=
handset.102.ldap.base=
handset.102.ldap.user=
handset.102.ldap.password=
handset.102.ldap.max_hits=
handset.102.ldap.name_attr=
handset.102.ldap.numb_attr=
handset.102.ldap.display_name=
handset.102.ldap.version=
handset.102.ldap.call_in_lookup=
handset.102.ldap.ldap_sort=
handset.102.ldap.tls_mode=
handset.102.ldap.call_out_lookup=
handset.102.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account103 Settings
##
#####
#####
```

```

account.103.enable=%BWLIN-BINARY-103%
account.103.label=%BWEXTENSION-103%
account.103.display_name=%BWCLID-103%
account.103.auth_name=%BWAUTHUSER-103%
account.103.user_name=%BWLINPORT-103%
account.103.password=%BWAUTHPASSWORD-103%

#W80B ADD
account.103.sip_server.template =
account.103.media_transmit.enable =

account.103.alarm.template =
account.103.alarm.server =
account.103.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.103.sip_server.1.failback_mode =
account.103.sip_server.1.failback_timeout =
account.103.sip_server.1.register_on_enable =
account.103.sip_server.1.failback_subscribe.enable =
account.103.sip_server.1.invite_retry_counts =
account.103.sip_server.1.only_signal_with_registered =

account.103.sip_server.2.failback_mode =
account.103.sip_server.2.failback_timeout =
account.103.sip_server.2.register_on_enable =
account.103.sip_server.2.failback_subscribe.enable =
account.103.sip_server.2.invite_retry_counts =
account.103.sip_server.2.only_signal_with_registered =

account.103.naptr_build =
account.103.fallback.redundancy_type =
account.103.fallback.timeout =

account.103.dns_cache_type =
account.103.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.103.anonymous_call =
account.103.reject_anonymous_call =
account.103.send_anonymous_code =
account.103.anonymous_call_oncode =
account.103.anonymous_call_offcode =
account.103.send_anonymous_rejection_code =
account.103.anonymous_reject_oncode =
account.103.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.103.codec.g722.enable =
account.103.codec.g722.priority =

account.103.codec.g729.enable =
account.103.codec.g729.priority =

account.103.codec.g726_16.enable =
account.103.codec.g726_16.priority =

account.103.codec.g726_24.enable =
account.103.codec.g726_24.priority =

account.103.codec.g726_32.enable =
account.103.codec.g726_32.priority =

account.103.codec.g726_40.enable =
account.103.codec.g726_40.priority =

account.103.codec.ilbc.enable =
account.103.codec.ilbc.priority =

account.103.codec.pcmu.enable =
account.103.codec.pcmu.priority =

account.103.codec.pcma.enable =
account.103.codec.pcma.priority =

account.103.codec.opus.enable =
account.103.codec.opus.priority =

#####
#####
##                                NAT Settings
##
#####
#####

account.103.nat.nat_traversal =
account.103.nat.udp_update_enable =
account.103.nat.udp_update_time =
account.103.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.103.blf.subscribe_period =
account.103.dtmf.type =
account.103.dtmf.dtmf_payload =
account.103.dtmf.info_type =
account.103.100rel_enable =
account.103.subscribe_register =
account.103.subscribe_mwi =
account.103.subscribe_mwi_expires =
account.103.subscribe_mwi_to_vm =
voice_mail.number.103 = %BWVOICE-PORTAL-NUMBER-103%
account.103.display_mwi.enable =
account.103.cid_source =
```

```

account.103.cid_source_privacy =
account.103.cid_source_ppi =
account.103.session_timer.enable =
account.103.session_timer.expires =
account.103.session_timer.refresher =
account.103.enable_user_equal_phone =
account.103.srtp_encryption =
account.103.ptime =
account.103.shared_line = %BWSHAREDLINE-BINARY-103%
account.103.register_mac =
account.103.register_line =
account.103.reg_fail_retry_interval =
account.103.reg_failed_retry_min_time =
account.103.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.103.conf_type =
account.103.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-103%

account.103.sip_server_type =
account.103.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.103.register_expires_overlap =
account.103.subscribe_expires_overlap =
account.103.auto_dial_enable =
account.103.auto_dial_num =
account.103.cp_source =
account.103.transfer_refer_to_contact_header.enable =
#V80 Add
account.103.custom_ua =
account.103.callpark_enable =
account.103.check_cseq.enable =
account.103.check_to_tag.enable =
account.103.hold_use_inactive =
account.103.line_seize.expires =
account.103.update_ack_while_dialing =
account.103.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.103.always_fwd.enable =
account.103.always_fwd.target =
account.103.always_fwd.off_code =
account.103.always_fwd.on_code =
account.103.busy_fwd.enable =

```

```
account.103.busy_fwd.target =
account.103.busy_fwd.off_code =
account.103.busy_fwd.on_code =
account.103.timeout_fwd.enable =
account.103.timeout_fwd.target =
account.103.timeout_fwd.timeout =
account.103.timeout_fwd.off_code =
account.103.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.103.dnd.enable =
account.103.dnd.on_code =
account.103.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.103.reg.enable =
handset.103.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####
account.103.xsi.user =%BWLOGIN-ID-103%
account.103.xsi.password =%XSIPASSWORD-103%
account.103.xsi.host =%XSP_ADDRESS%
account.103.xsi.server_type =
account.103.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.103.ldap.enable =
handset.103.ldap.name_filter=
handset.103.ldap.number_filter=
handset.103.ldap.host=
handset.103.ldap.port=
handset.103.ldap.base=
handset.103.ldap.user=
handset.103.ldap.password=
handset.103.ldap.max_hits=
handset.103.ldap.name_attr=
handset.103.ldap.numb_attr=
handset.103.ldap.display_name=
handset.103.ldap.version=
handset.103.ldap.call_in_lookup=
```

```
handset.103.ldap.ldap_sort=
handset.103.ldap.tls_mode=
handset.103.ldap.call_out_lookup=
handset.103.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account104 Settings
##
#####
#####

account.104.enable=%BWLIN-BINARY-104%
account.104.label=%BWEXTENSION-104%
account.104.display_name=%BWCLID-104%
account.104.auth_name=%BWAUTHUSER-104%
account.104.user_name=%BWLINPORT-104%
account.104.password=%BWAUTHPASSWORD-104%

#W80B ADD
account.104.sip_server.template =
account.104.media_transmit.enable =

account.104.alarm.template =
account.104.alarm.server =
account.104.alarm.number =

#####
#####
##                               Failback
##
#####
#####

account.104.sip_server.1.failback_mode =
account.104.sip_server.1.failback_timeout =
account.104.sip_server.1.register_on_enable =
account.104.sip_server.1.failback_subscribe.enable =
account.104.sip_server.1.invite_retry_counts =
account.104.sip_server.1.only_signal_with_registered =

account.104.sip_server.2.failback_mode =
account.104.sip_server.2.failback_timeout =
account.104.sip_server.2.register_on_enable =
account.104.sip_server.2.failback_subscribe.enable =
account.104.sip_server.2.invite_retry_counts =
account.104.sip_server.2.only_signal_with_registered =

account.104.naptr_build =
account.104.fallback.redundancy_type =
account.104.fallback.timeout =

account.104.dns_cache_type =
account.104.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
```

```

account.104.anonymous_call =
account.104.reject_anonymous_call =
account.104.send_anonymous_code =
account.104.anonymous_call_oncode =
account.104.anonymous_call_offcode =
account.104.send_anonymous_rejection_code =
account.104.anonymous_reject_oncode =
account.104.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.104.codec.g722.enable =
account.104.codec.g722.priority =

account.104.codec.g729.enable =
account.104.codec.g729.priority =

account.104.codec.g726_16.enable =
account.104.codec.g726_16.priority =

account.104.codec.g726_24.enable =
account.104.codec.g726_24.priority =

account.104.codec.g726_32.enable =
account.104.codec.g726_32.priority =

account.104.codec.g726_40.enable =
account.104.codec.g726_40.priority =

account.104.codec.ilbc.enable =
account.104.codec.ilbc.priority =

account.104.codec.pcmu.enable =
account.104.codec.pcmu.priority =

account.104.codec.pcma.enable =
account.104.codec.pcma.priority =

account.104.codec.opus.enable =
account.104.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
##
#####
#####

account.104.nat.nat_traversal =
account.104.nat.udp_update_enable =
account.104.nat.udp_update_time =
account.104.nat.rport =

#####
#####
##                                     Register Advanced
##

```

```
#####
#####

account.104.blf.subscribe_period =
account.104.dtmf.type =
account.104.dtmf.dtmf_payload =
account.104.dtmf.info_type =
account.104.100rel_enable =
account.104.subscribe_register =
account.104.subscribe_mwi =
account.104.subscribe_mwi_expires =
account.104.subscribe_mwi_to_vm =
voice_mail.number.104 = %BWVOICE-PORTAL-NUMBER-104%
account.104.display_mwi.enable =
account.104.cid_source =
account.104.cid_source_privacy =
account.104.cid_source_ppi =
account.104.session_timer.enable =
account.104.session_timer.expires =
account.104.session_timer.refresher =
account.104.enable_user_equal_phone =
account.104.srtp_encryption =
account.104.ptime =
account.104.shared_line = %BWSHAREDLINE-BINARY-104%
account.104.register_mac =
account.104.register_line =
account.104.reg_fail_retry_interval =
account.104.reg_failed_retry_min_time =
account.104.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.104.conf_type =
account.104.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-104%

account.104.sip_server_type =
account.104.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.104.register_expires_overlap =
account.104.subscribe_expires_overlap =
account.104.auto_dial_enable =
account.104.auto_dial_num =
account.104.cp_source =
account.104.transfer_refer_to_contact_header.enable =
#V80 Add
account.104.custom_ua =
account.104.callpark_enable =
account.104.check_cseq.enable =
account.104.check_to_tag.enable =
account.104.hold_use_inactive =
```



```

account.104.line_seize.expires =
account.104.update_ack_while_dialing =
account.104.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.104.always_fwd.enable =
account.104.always_fwd.target =
account.104.always_fwd.off_code =
account.104.always_fwd.on_code =
account.104.busy_fwd.enable =
account.104.busy_fwd.target =
account.104.busy_fwd.off_code =
account.104.busy_fwd.on_code =
account.104.timeout_fwd.enable =
account.104.timeout_fwd.target =
account.104.timeout_fwd.timeout =
account.104.timeout_fwd.off_code =
account.104.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.104.dnd.enable =
account.104.dnd.on_code =
account.104.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.104.reg.enable =
handset.104.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.104.xsi.user =%BWLOGIN-ID-104%
account.104.xsi.password =%XSIPASSWORD-104%
account.104.xsi.host =%XSP_ADDRESS%
account.104.xsi.server_type =
account.104.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.104.ldap.enable =
handset.104.ldap.name_filter=
handset.104.ldap.number_filter=
handset.104.ldap.host=
handset.104.ldap.port=
handset.104.ldap.base=
handset.104.ldap.user=
handset.104.ldap.password=
handset.104.ldap.max_hits=
handset.104.ldap.name_attr=
handset.104.ldap.numb_attr=
handset.104.ldap.display_name=
handset.104.ldap.version=
handset.104.ldap.call_in_lookup=
handset.104.ldap.ldap_sort=
handset.104.ldap.tls_mode=
handset.104.ldap.call_out_lookup=
handset.104.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account105 Settings
##
#####
#####

account.105.enable=%BWLIN-BINARY-105%
account.105.label=%BWEXTENSION-105%
account.105.display_name=%BWCLID-105%
account.105.auth_name=%BWAUTHUSER-105%
account.105.user_name=%BWLINPORT-105%
account.105.password=%BWAUTHPASSWORD-105%

#W80B ADD
account.105.sip_server.template =
account.105.media_transmit.enable =

account.105.alarm.template =
account.105.alarm.server =
account.105.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.105.sip_server.1.failback_mode =
account.105.sip_server.1.failback_timeout =
account.105.sip_server.1.register_on_enable =
account.105.sip_server.1.failback_subscribe.enable =
account.105.sip_server.1.invite_retry_counts =
account.105.sip_server.1.only_signal_with_registered =

account.105.sip_server.2.failback_mode =
account.105.sip_server.2.failback_timeout =
account.105.sip_server.2.register_on_enable =
account.105.sip_server.2.failback_subscribe.enable =
```

```
account.105.sip_server.2.invite_retry_counts =
account.105.sip_server.2.only_signal_with_registered =

account.105.naptr_build =
account.105.fallback.redundancy_type =
account.105.fallback.timeout =

account.105.dns_cache_type =
account.105.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.105.anonymous_call =
account.105.reject_anonymous_call =
account.105.send_anonymous_code =
account.105.anonymous_call_oncode =
account.105.anonymous_call_offcode =
account.105.send_anonymous_rejection_code =
account.105.anonymous_reject_oncode =
account.105.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.105.codec.g722.enable =
account.105.codec.g722.priority =

account.105.codec.g729.enable =
account.105.codec.g729.priority =

account.105.codec.g726_16.enable =
account.105.codec.g726_16.priority =

account.105.codec.g726_24.enable =
account.105.codec.g726_24.priority =

account.105.codec.g726_32.enable =
account.105.codec.g726_32.priority =

account.105.codec.g726_40.enable =
account.105.codec.g726_40.priority =

account.105.codec.ilbc.enable =
account.105.codec.ilbc.priority =

account.105.codec.pcmu.enable =
account.105.codec.pcmu.priority =

account.105.codec.pcma.enable =
account.105.codec.pcma.priority =

account.105.codec.opus.enable =
account.105.codec.opus.priority =
```

```
#####
#####
##                               NAT Settings
##
#####
#####

account.105.nat.nat_traversal =
account.105.nat.udp_update_enable =
account.105.nat.udp_update_time =
account.105.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.105.blf.subscribe_period =
account.105.dtmf.type =
account.105.dtmf.dtmf_payload =
account.105.dtmf.info_type =
account.105.100rel_enable =
account.105.subscribe_register =
account.105.subscribe_mwi =
account.105.subscribe_mwi_expires =
account.105.subscribe_mwi_to_vm =
voice_mail.number.105 = %BWVOICE-PORTAL-NUMBER-105%
account.105.display_mwi.enable =
account.105.cid_source =
account.105.cid_source_privacy =
account.105.cid_source_ppi =
account.105.session_timer.enable =
account.105.session_timer.expires =
account.105.session_timer.refresher =
account.105.enable_user_equal_phone =
account.105.srtp_encryption =
account.105.ptime =
account.105.shared_line = %BWSHAREDLINE-BINARY-105%
account.105.register_mac =
account.105.register_line =
account.105.reg_fail_retry_interval =
account.105.reg_failed_retry_min_time =
account.105.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.105.conf_type =
account.105.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-105%

account.105.sip_server_type =
account.105.unregister_on_reboot =

#####
#####
##                               Register Other
##
```

```
#####
#####
##DECT V81 Add

account.105.register_expires_overlap =
account.105.subscribe_expires_overlap =
account.105.auto_dial_enable =
account.105.auto_dial_num =
account.105.cp_source =
account.105.transfer_refer_to_contact_header.enable =
#V80 Add
account.105.custom_ua =
account.105.callpark_enable =
account.105.check_cseq.enable =
account.105.check_to_tag.enable =
account.105.hold_use_inactive =
account.105.line_seize.expires =
account.105.update_ack_while_dialing =
account.105.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.105.always_fwd.enable =
account.105.always_fwd.target =
account.105.always_fwd.off_code =
account.105.always_fwd.on_code =
account.105.busy_fwd.enable =
account.105.busy_fwd.target =
account.105.busy_fwd.off_code =
account.105.busy_fwd.on_code =
account.105.timeout_fwd.enable =
account.105.timeout_fwd.target =
account.105.timeout_fwd.timeout =
account.105.timeout_fwd.off_code =
account.105.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.105.dnd.enable =
account.105.dnd.on_code =
account.105.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.105.reg.enable =
handset.105.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.105.xsi.user =%BWLOGIN-ID-105%
account.105.xsi.password =%XSIPASSWORD-105%
account.105.xsi.host =%XSP_ADDRESS%
account.105.xsi.server_type =
account.105.xsi.port =

#####
#####
##          LADP
##
#####
handset.105.ldap.enable =
handset.105.ldap.name_filter=
handset.105.ldap.number_filter=
handset.105.ldap.host=
handset.105.ldap.port=
handset.105.ldap.base=
handset.105.ldap.user=
handset.105.ldap.password=
handset.105.ldap.max_hits=
handset.105.ldap.name_attr=
handset.105.ldap.numb_attr=
handset.105.ldap.display_name=
handset.105.ldap.version=
handset.105.ldap.call_in_lookup=
handset.105.ldap.ldap_sort=
handset.105.ldap.tls_mode=
handset.105.ldap.call_out_lookup=
handset.105.ldap.incoming_call_special_search.enable=

#####
#####
##          Account106 Settings
##
#####

account.106.enable=%BWLINE-BINARY-106%
account.106.label=%BWEXTENSION-106%
account.106.display_name=%BWCLID-106%
account.106.auth_name=%BWAUTHUSER-106%
account.106.user_name=%BWLINEPORT-106%
account.106.password=%BWAUTHPASSWORD-106%

#W80B ADD
account.106.sip_server.template =
account.106.media_transmit.enable =

account.106.alarm.template =
account.106.alarm.server =
account.106.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.106.sip_server.1.failback_mode =
account.106.sip_server.1.failback_timeout =
account.106.sip_server.1.register_on_enable =
account.106.sip_server.1.failback_subscribe.enable =
account.106.sip_server.1.invite_retry_counts =
account.106.sip_server.1.only_signal_with_registered =

account.106.sip_server.2.failback_mode =
account.106.sip_server.2.failback_timeout =
account.106.sip_server.2.register_on_enable =
account.106.sip_server.2.failback_subscribe.enable =
account.106.sip_server.2.invite_retry_counts =
account.106.sip_server.2.only_signal_with_registered =

account.106.naptr_build =
account.106.fallback.redundancy_type =
account.106.fallback.timeout =

account.106.dns_cache_type =
account.106.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.106.anonymous_call =
account.106.reject_anonymous_call =
account.106.send_anonymous_code =
account.106.anonymous_call_oncode =
account.106.anonymous_call_offcode =
account.106.send_anonymous_rejection_code =
account.106.anonymous_reject_oncode =
account.106.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.106.codec.g722.enable =
account.106.codec.g722.priority =

account.106.codec.g729.enable =
account.106.codec.g729.priority =

account.106.codec.g726_16.enable =
account.106.codec.g726_16.priority =

account.106.codec.g726_24.enable =
account.106.codec.g726_24.priority =

account.106.codec.g726_32.enable =
account.106.codec.g726_32.priority =
```

```

account.106.codec.g726_40.enable =
account.106.codec.g726_40.priority =

account.106.codec.ilbc.enable =
account.106.codec.ilbc.priority =

account.106.codec.pcmu.enable =
account.106.codec.pcmu.priority =

account.106.codec.pcma.enable =
account.106.codec.pcma.priority =

account.106.codec.opus.enable =
account.106.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.106.nat.nat_traversal =
account.106.nat.udp_update_enable =
account.106.nat.udp_update_time =
account.106.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.106.blf.subscribe_period =
account.106.dtmf.type =
account.106.dtmf.dtmf_payload =
account.106.dtmf.info_type =
account.106.100rel_enable =
account.106.subscribe_register =
account.106.subscribe_mwi =
account.106.subscribe_mwi_expires =
account.106.subscribe_mwi_to_vm =
voice_mail.number.106 = %BWVOICE-PORTAL-NUMBER-106%
account.106.display_mwi.enable =
account.106.cid_source =
account.106.cid_source_privacy =
account.106.cid_source_ppi =
account.106.session_timer.enable =
account.106.session_timer.expires =
account.106.session_timer.refresher =
account.106.enable_user_equal_phone =
account.106.srtp_encryption =
account.106.ptime =
account.106.shared_line = %BWSHAREDLINE-BINARY-106%
account.106.register_mac =
account.106.register_line =
account.106.reg_fail_retry_interval =
account.106.reg_failed_retry_min_time =
account.106.reg_failed_retry_max_time =

```



```
#####
#####
##                               Network Conference
##
#####
#####
account.106.conf_type =
account.106.conf_uri = %BWNWORK-CONFERENCE-SIPURI-106%

account.106.sip_server_type =
account.106.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.106.register_expires_overlap =
account.106.subscribe_expires_overlap =
account.106.auto_dial_enable =
account.106.auto_dial_num =
account.106.cp_source =
account.106.transfer_refer_to_contact_header.enable =
#V80 Add
account.106.custom_ua =
account.106.callpark_enable =
account.106.check_cseq.enable =
account.106.check_to_tag.enable =
account.106.hold_use_inactive =
account.106.line_seize.expires =
account.106.update_ack_while_dialing =
account.106.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.106.always_fwd.enable =
account.106.always_fwd.target =
account.106.always_fwd.off_code =
account.106.always_fwd.on_code =
account.106.busy_fwd.enable =
account.106.busy_fwd.target =
account.106.busy_fwd.off_code =
account.106.busy_fwd.on_code =
account.106.timeout_fwd.enable =
account.106.timeout_fwd.target =
account.106.timeout_fwd.timeout =
account.106.timeout_fwd.off_code =
account.106.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```

account.106.dnd.enable =
account.106.dnd.on_code =
account.106.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.106.reg.enable =
handset.106.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.106.xsi.user =%BWLOGIN-ID-106%
account.106.xsi.password =%XSIPASSWORD-106%
account.106.xsi.host =%XSP_ADDRESS%
account.106.xsi.server_type =
account.106.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.106.ldap.enable =
handset.106.ldap.name_filter=
handset.106.ldap.number_filter=
handset.106.ldap.host=
handset.106.ldap.port=
handset.106.ldap.base=
handset.106.ldap.user=
handset.106.ldap.password=
handset.106.ldap.max_hits=
handset.106.ldap.name_attr=
handset.106.ldap.numb_attr=
handset.106.ldap.display_name=
handset.106.ldap.version=
handset.106.ldap.call_in_lookup=
handset.106.ldap.ldap_sort=
handset.106.ldap.tls_mode=
handset.106.ldap.call_out_lookup=
handset.106.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account107 Settings
##
#####
#####

```

```

account.107.enable=%BWLIN-BINARY-107%
account.107.label=%BWEXTENSION-107%
account.107.display_name=%BWCLID-107%
account.107.auth_name=%BWAUTHUSER-107%
account.107.user_name=%BWLINPORT-107%
account.107.password=%BWAUTHPASSWORD-107%

#W80B ADD
account.107.sip_server.template =
account.107.media_transmit.enable =

account.107.alarm.template =
account.107.alarm.server =
account.107.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.107.sip_server.1.failback_mode =
account.107.sip_server.1.failback_timeout =
account.107.sip_server.1.register_on_enable =
account.107.sip_server.1.failback_subscribe.enable =
account.107.sip_server.1.invite_retry_counts =
account.107.sip_server.1.only_signal_with_registered =

account.107.sip_server.2.failback_mode =
account.107.sip_server.2.failback_timeout =
account.107.sip_server.2.register_on_enable =
account.107.sip_server.2.failback_subscribe.enable =
account.107.sip_server.2.invite_retry_counts =
account.107.sip_server.2.only_signal_with_registered =

account.107.naptr_build =
account.107.fallback.redundancy_type =
account.107.fallback.timeout =

account.107.dns_cache_type =
account.107.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.107.anonymous_call =
account.107.reject_anonymous_call =
account.107.send_anonymous_code =
account.107.anonymous_call_oncode =
account.107.anonymous_call_offcode =
account.107.send_anonymous_rejection_code =
account.107.anonymous_reject_oncode =
account.107.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.107.codec.g722.enable =
account.107.codec.g722.priority =

account.107.codec.g729.enable =
account.107.codec.g729.priority =

account.107.codec.g726_16.enable =
account.107.codec.g726_16.priority =

account.107.codec.g726_24.enable =
account.107.codec.g726_24.priority =

account.107.codec.g726_32.enable =
account.107.codec.g726_32.priority =

account.107.codec.g726_40.enable =
account.107.codec.g726_40.priority =

account.107.codec.ilbc.enable =
account.107.codec.ilbc.priority =

account.107.codec.pcmu.enable =
account.107.codec.pcmu.priority =

account.107.codec.pcma.enable =
account.107.codec.pcma.priority =

account.107.codec.opus.enable =
account.107.codec.opus.priority =

#####
#####
##                                NAT Settings
##
#####
#####

account.107.nat.nat_traversal =
account.107.nat.udp_update_enable =
account.107.nat.udp_update_time =
account.107.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.107.blf.subscribe_period =
account.107.dtmf.type =
account.107.dtmf.dtmf_payload =
account.107.dtmf.info_type =
account.107.100rel_enable =
account.107.subscribe_register =
account.107.subscribe_mwi =
account.107.subscribe_mwi_expires =
account.107.subscribe_mwi_to_vm =
voice_mail.number.107 = %BWVOICE-PORTAL-NUMBER-107%
account.107.display_mwi.enable =
account.107.cid_source =
```

```

account.107.cid_source_privacy =
account.107.cid_source_ppi =
account.107.session_timer.enable =
account.107.session_timer.expires =
account.107.session_timer.refresher =
account.107.enable_user_equal_phone =
account.107.srtp_encryption =
account.107.ptime =
account.107.shared_line = %BWSHAREDLINE-BINARY-107%
account.107.register_mac =
account.107.register_line =
account.107.reg_fail_retry_interval =
account.107.reg_failed_retry_min_time =
account.107.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.107.conf_type =
account.107.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-107%

account.107.sip_server_type =
account.107.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.107.register_expires_overlap =
account.107.subscribe_expires_overlap =
account.107.auto_dial_enable =
account.107.auto_dial_num =
account.107.cp_source =
account.107.transfer_refer_to_contact_header.enable =
#V80 Add
account.107.custom_ua =
account.107.callpark_enable =
account.107.check_cseq.enable =
account.107.check_to_tag.enable =
account.107.hold_use_inactive =
account.107.line_seize.expires =
account.107.update_ack_while_dialing =
account.107.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.107.always_fwd.enable =
account.107.always_fwd.target =
account.107.always_fwd.off_code =
account.107.always_fwd.on_code =
account.107.busy_fwd.enable =

```

```

account.107.busy_fwd.target =
account.107.busy_fwd.off_code =
account.107.busy_fwd.on_code =
account.107.timeout_fwd.enable =
account.107.timeout_fwd.target =
account.107.timeout_fwd.timeout =
account.107.timeout_fwd.off_code =
account.107.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.107.dnd.enable =
account.107.dnd.on_code =
account.107.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.107.reg.enable =
handset.107.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.107.xsi.user =%BWLOGIN-ID-107%
account.107.xsi.password =%XSIPASSWORD-107%
account.107.xsi.host =%XSP_ADDRESS%
account.107.xsi.server_type =
account.107.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.107.ldap.enable =
handset.107.ldap.name_filter=
handset.107.ldap.number_filter=
handset.107.ldap.host=
handset.107.ldap.port=
handset.107.ldap.base=
handset.107.ldap.user=
handset.107.ldap.password=
handset.107.ldap.max_hits=
handset.107.ldap.name_attr=
handset.107.ldap.numb_attr=
handset.107.ldap.display_name=
handset.107.ldap.version=
handset.107.ldap.call_in_lookup=

```

```

handset.107.ldap.ldap_sort=
handset.107.ldap.tls_mode=
handset.107.ldap.call_out_lookup=
handset.107.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account108 Settings
##
#####
#####

account.108.enable=%BWLIN-BINARY-108%
account.108.label=%BWEXTENSION-108%
account.108.display_name=%BWCLID-108%
account.108.auth_name=%BWAUTHUSER-108%
account.108.user_name=%BWLINPORT-108%
account.108.password=%BWAUTHPASSWORD-108%

#W80B ADD
account.108.sip_server.template =
account.108.media_transmit.enable =

account.108.alarm.template =
account.108.alarm.server =
account.108.alarm.number =

#####
#####
##                                     Failback
##
##
#####
#####

account.108.sip_server.1.failback_mode =
account.108.sip_server.1.failback_timeout =
account.108.sip_server.1.register_on_enable =
account.108.sip_server.1.failback_subscribe.enable =
account.108.sip_server.1.invite_retry_counts =
account.108.sip_server.1.only_signal_with_registered =

account.108.sip_server.2.failback_mode =
account.108.sip_server.2.failback_timeout =
account.108.sip_server.2.register_on_enable =
account.108.sip_server.2.failback_subscribe.enable =
account.108.sip_server.2.invite_retry_counts =
account.108.sip_server.2.only_signal_with_registered =

account.108.naptr_build =
account.108.fallback.redundancy_type =
account.108.fallback.timeout =

account.108.dns_cache_type =
account.108.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
##
#####
#####

```

```

account.108.anonymous_call =
account.108.reject_anonymous_call =
account.108.send_anonymous_code =
account.108.anonymous_call_oncode =
account.108.anonymous_call_offcode =
account.108.send_anonymous_rejection_code =
account.108.anonymous_reject_oncode =
account.108.anonymous_reject_offcode =

#####
#####
##
##                                Codec
##
#####
#####
account.108.codec.g722.enable =
account.108.codec.g722.priority =

account.108.codec.g729.enable =
account.108.codec.g729.priority =

account.108.codec.g726_16.enable =
account.108.codec.g726_16.priority =

account.108.codec.g726_24.enable =
account.108.codec.g726_24.priority =

account.108.codec.g726_32.enable =
account.108.codec.g726_32.priority =

account.108.codec.g726_40.enable =
account.108.codec.g726_40.priority =

account.108.codec.ilbc.enable =
account.108.codec.ilbc.priority =

account.108.codec.pcmu.enable =
account.108.codec.pcmu.priority =

account.108.codec.pcma.enable =
account.108.codec.pcma.priority =

account.108.codec.opus.enable =
account.108.codec.opus.priority =

#####
#####
##
##                                NAT Settings
##
#####
#####

account.108.nat.nat_traversal =
account.108.nat.udp_update_enable =
account.108.nat.udp_update_time =
account.108.nat.rport =

#####
#####
##
##                                Register Advanced
##

```



```
#####
#####

account.108.blf.subscribe_period =
account.108.dtmf.type =
account.108.dtmf.dtmf_payload =
account.108.dtmf.info_type =
account.108.100rel_enable =
account.108.subscribe_register =
account.108.subscribe_mwi =
account.108.subscribe_mwi_expires =
account.108.subscribe_mwi_to_vm =
voice_mail.number.108 = %BWVOICE-PORTAL-NUMBER-108%
account.108.display_mwi.enable =
account.108.cid_source =
account.108.cid_source_privacy =
account.108.cid_source_ppi =
account.108.session_timer.enable =
account.108.session_timer.expires =
account.108.session_timer.refresher =
account.108.enable_user_equal_phone =
account.108.srtp_encryption =
account.108.ptime =
account.108.shared_line = %BWSHAREDLINE-BINARY-108%
account.108.register_mac =
account.108.register_line =
account.108.reg_fail_retry_interval =
account.108.reg_failed_retry_min_time =
account.108.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.108.conf_type =
account.108.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-108%

account.108.sip_server_type =
account.108.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.108.register_expires_overlap =
account.108.subscribe_expires_overlap =
account.108.auto_dial_enable =
account.108.auto_dial_num =
account.108.cp_source =
account.108.transfer_refer_to_contact_header.enable =
#V80 Add
account.108.custom_ua =
account.108.callpark_enable =
account.108.check_cseq.enable =
account.108.check_to_tag.enable =
account.108.hold_use_inactive =
```

```

account.108.line_seize.expires =
account.108.update_ack_while_dialing =
account.108.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.108.always_fwd.enable =
account.108.always_fwd.target =
account.108.always_fwd.off_code =
account.108.always_fwd.on_code =
account.108.busy_fwd.enable =
account.108.busy_fwd.target =
account.108.busy_fwd.off_code =
account.108.busy_fwd.on_code =
account.108.timeout_fwd.enable =
account.108.timeout_fwd.target =
account.108.timeout_fwd.timeout =
account.108.timeout_fwd.off_code =
account.108.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.108.dnd.enable =
account.108.dnd.on_code =
account.108.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.108.reg.enable =
handset.108.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.108.xsi.user =%BWLOGIN-ID-108%
account.108.xsi.password =%XSIPASSWORD-108%
account.108.xsi.host =%XSP_ADDRESS%
account.108.xsi.server_type =
account.108.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.108.ldap.enable =
handset.108.ldap.name_filter=
handset.108.ldap.number_filter=
handset.108.ldap.host=
handset.108.ldap.port=
handset.108.ldap.base=
handset.108.ldap.user=
handset.108.ldap.password=
handset.108.ldap.max_hits=
handset.108.ldap.name_attr=
handset.108.ldap.numb_attr=
handset.108.ldap.display_name=
handset.108.ldap.version=
handset.108.ldap.call_in_lookup=
handset.108.ldap.ldap_sort=
handset.108.ldap.tls_mode=
handset.108.ldap.call_out_lookup=
handset.108.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account109 Settings
##
#####
#####

account.109.enable=%BWLIN-BINARY-109%
account.109.label=%BWEXTENSION-109%
account.109.display_name=%BWCLID-109%
account.109.auth_name=%BWAUTHUSER-109%
account.109.user_name=%BWLINPORT-109%
account.109.password=%BWAUTHPASSWORD-109%

#W80B ADD
account.109.sip_server.template =
account.109.media_transmit.enable =

account.109.alarm.template =
account.109.alarm.server =
account.109.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.109.sip_server.1.failback_mode =
account.109.sip_server.1.failback_timeout =
account.109.sip_server.1.register_on_enable =
account.109.sip_server.1.failback_subscribe.enable =
account.109.sip_server.1.invite_retry_counts =
account.109.sip_server.1.only_signal_with_registered =

account.109.sip_server.2.failback_mode =
account.109.sip_server.2.failback_timeout =
account.109.sip_server.2.register_on_enable =
account.109.sip_server.2.failback_subscribe.enable =
```

```
account.109.sip_server.2.invite_retry_counts =
account.109.sip_server.2.only_signal_with_registered =

account.109.naptr_build =
account.109.fallback.redundancy_type =
account.109.fallback.timeout =

account.109.dns_cache_type =
account.109.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.109.anonymous_call =
account.109.reject_anonymous_call =
account.109.send_anonymous_code =
account.109.anonymous_call_oncode =
account.109.anonymous_call_offcode =
account.109.send_anonymous_rejection_code =
account.109.anonymous_reject_oncode =
account.109.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.109.codec.g722.enable =
account.109.codec.g722.priority =

account.109.codec.g729.enable =
account.109.codec.g729.priority =

account.109.codec.g726_16.enable =
account.109.codec.g726_16.priority =

account.109.codec.g726_24.enable =
account.109.codec.g726_24.priority =

account.109.codec.g726_32.enable =
account.109.codec.g726_32.priority =

account.109.codec.g726_40.enable =
account.109.codec.g726_40.priority =

account.109.codec.ilbc.enable =
account.109.codec.ilbc.priority =

account.109.codec.pcmu.enable =
account.109.codec.pcmu.priority =

account.109.codec.pcma.enable =
account.109.codec.pcma.priority =

account.109.codec.opus.enable =
account.109.codec.opus.priority =
```

```
#####
#####
##                                     NAT Settings
##
#####
#####

account.109.nat.nat_traversal =
account.109.nat.udp_update_enable =
account.109.nat.udp_update_time =
account.109.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.109.blf.subscribe_period =
account.109.dtmf.type =
account.109.dtmf.dtmf_payload =
account.109.dtmf.info_type =
account.109.100rel_enable =
account.109.subscribe_register =
account.109.subscribe_mwi =
account.109.subscribe_mwi_expires =
account.109.subscribe_mwi_to_vm =
voice_mail.number.109 = %BWVOICE-PORTAL-NUMBER-109%
account.109.display_mwi.enable =
account.109.cid_source =
account.109.cid_source_privacy =
account.109.cid_source_ppi =
account.109.session_timer.enable =
account.109.session_timer.expires =
account.109.session_timer.refresher =
account.109.enable_user_equal_phone =
account.109.srtp_encryption =
account.109.ptime =
account.109.shared_line = %BWSHAREDLINE-BINARY-109%
account.109.register_mac =
account.109.register_line =
account.109.reg_fail_retry_interval =
account.109.reg_failed_retry_min_time =
account.109.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####

account.109.conf_type =
account.109.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-109%

account.109.sip_server_type =
account.109.unregister_on_reboot =

#####
#####
##                                     Register Other
##
##
```

```
#####
#####
##DECT V81 Add

account.109.register_expires_overlap =
account.109.subscribe_expires_overlap =
account.109.auto_dial_enable =
account.109.auto_dial_num =
account.109.cp_source =
account.109.transfer_refer_to_contact_header.enable =
#V80 Add
account.109.custom_ua =
account.109.callpark_enable =
account.109.check_cseq.enable =
account.109.check_to_tag.enable =
account.109.hold_use_inactive =
account.109.line_seize.expires =
account.109.update_ack_while_dialing =
account.109.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.109.always_fwd.enable =
account.109.always_fwd.target =
account.109.always_fwd.off_code =
account.109.always_fwd.on_code =
account.109.busy_fwd.enable =
account.109.busy_fwd.target =
account.109.busy_fwd.off_code =
account.109.busy_fwd.on_code =
account.109.timeout_fwd.enable =
account.109.timeout_fwd.target =
account.109.timeout_fwd.timeout =
account.109.timeout_fwd.off_code =
account.109.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.109.dnd.enable =
account.109.dnd.on_code =
account.109.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.109.reg.enable =
handset.109.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.109.xsi.user =%BWLOGIN-ID-109%
account.109.xsi.password =%XSIPASSWORD-109%
account.109.xsi.host =%XSP_ADDRESS%
account.109.xsi.server_type =
account.109.xsi.port =

#####
#####
##          LADP
##
#####
handset.109.ldap.enable =
handset.109.ldap.name_filter=
handset.109.ldap.number_filter=
handset.109.ldap.host=
handset.109.ldap.port=
handset.109.ldap.base=
handset.109.ldap.user=
handset.109.ldap.password=
handset.109.ldap.max_hits=
handset.109.ldap.name_attr=
handset.109.ldap.numb_attr=
handset.109.ldap.display_name=
handset.109.ldap.version=
handset.109.ldap.call_in_lookup=
handset.109.ldap.ldap_sort=
handset.109.ldap.tls_mode=
handset.109.ldap.call_out_lookup=
handset.109.ldap.incoming_call_special_search.enable=

#####
#####
##          Account110 Settings
##
#####

account.110.enable=%BWLINE-BINARY-110%
account.110.label=%BWEXTENSION-110%
account.110.display_name=%BWCLID-110%
account.110.auth_name=%BWAUTHUSER-110%
account.110.user_name=%BWLINEPORT-110%
account.110.password=%BWAUTHPASSWORD-110%

#W80B ADD
account.110.sip_server.template =
account.110.media_transmit.enable =

account.110.alarm.template =
account.110.alarm.server =
account.110.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.110.sip_server.1.failback_mode =
account.110.sip_server.1.failback_timeout =
account.110.sip_server.1.register_on_enable =
account.110.sip_server.1.failback_subscribe.enable =
account.110.sip_server.1.invite_retry_counts =
account.110.sip_server.1.only_signal_with_registered =

account.110.sip_server.2.failback_mode =
account.110.sip_server.2.failback_timeout =
account.110.sip_server.2.register_on_enable =
account.110.sip_server.2.failback_subscribe.enable =
account.110.sip_server.2.invite_retry_counts =
account.110.sip_server.2.only_signal_with_registered =

account.110.naptr_build =
account.110.failback.redundancy_type =
account.110.failback.timeout =

account.110.dns_cache_type =
account.110.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.110.anonymous_call =
account.110.reject_anonymous_call =
account.110.send_anonymous_code =
account.110.anonymous_call_oncode =
account.110.anonymous_call_offcode =
account.110.send_anonymous_rejection_code =
account.110.anonymous_reject_oncode =
account.110.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.110.codec.g722.enable =
account.110.codec.g722.priority =

account.110.codec.g729.enable =
account.110.codec.g729.priority =

account.110.codec.g726_16.enable =
account.110.codec.g726_16.priority =

account.110.codec.g726_24.enable =
account.110.codec.g726_24.priority =

account.110.codec.g726_32.enable =
account.110.codec.g726_32.priority =
```



```

account.110.codec.g726_40.enable =
account.110.codec.g726_40.priority =

account.110.codec.ilbc.enable =
account.110.codec.ilbc.priority =

account.110.codec.pcmu.enable =
account.110.codec.pcmu.priority =

account.110.codec.pcma.enable =
account.110.codec.pcma.priority =

account.110.codec.opus.enable =
account.110.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.110.nat.nat_traversal =
account.110.nat.udp_update_enable =
account.110.nat.udp_update_time =
account.110.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.110.blf.subscribe_period =
account.110.dtmf.type =
account.110.dtmf.dtmf_payload =
account.110.dtmf.info_type =
account.110.100rel_enable =
account.110.subscribe_register =
account.110.subscribe_mwi =
account.110.subscribe_mwi_expires =
account.110.subscribe_mwi_to_vm =
voice_mail.number.110 = %BWVOICE-PORTAL-NUMBER-110%
account.110.display_mwi.enable =
account.110.cid_source =
account.110.cid_source_privacy =
account.110.cid_source_ppi =
account.110.session_timer.enable =
account.110.session_timer.expires =
account.110.session_timer.refresher =
account.110.enable_user_equal_phone =
account.110.srtp_encryption =
account.110.ptime =
account.110.shared_line = %BWSHAREDLINE-BINARY-110%
account.110.register_mac =
account.110.register_line =
account.110.reg_fail_retry_interval =
account.110.reg_failed_retry_min_time =
account.110.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.110.conf_type =
account.110.conf_uri = %BWNWORK-CONFERENCE-SIPURI-110%

account.110.sip_server_type =
account.110.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.110.register_expires_overlap =
account.110.subscribe_expires_overlap =
account.110.auto_dial_enable =
account.110.auto_dial_num =
account.110.cp_source =
account.110.transfer_refer_to_contact_header.enable =
#V80 Add
account.110.custom_ua =
account.110.callpark_enable =
account.110.check_cseq.enable =
account.110.check_to_tag.enable =
account.110.hold_use_inactive =
account.110.line_seize.expires =
account.110.update_ack_while_dialing =
account.110.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.110.always_fwd.enable =
account.110.always_fwd.target =
account.110.always_fwd.off_code =
account.110.always_fwd.on_code =
account.110.busy_fwd.enable =
account.110.busy_fwd.target =
account.110.busy_fwd.off_code =
account.110.busy_fwd.on_code =
account.110.timeout_fwd.enable =
account.110.timeout_fwd.target =
account.110.timeout_fwd.timeout =
account.110.timeout_fwd.off_code =
account.110.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```
account.110.dnd.enable =
account.110.dnd.on_code =
account.110.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.110.reg.enable =
handset.110.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####

account.110.xsi.user =%BWLOGIN-ID-110%
account.110.xsi.password =%XSIPASSWORD-110%
account.110.xsi.host =%XSP_ADDRESS%
account.110.xsi.server_type =
account.110.xsi.port =

#####
#####
##                               LADP
##
#####
#####
handset.110.ldap.enable =
handset.110.ldap.name_filter=
handset.110.ldap.number_filter=
handset.110.ldap.host=
handset.110.ldap.port=
handset.110.ldap.base=
handset.110.ldap.user=
handset.110.ldap.password=
handset.110.ldap.max_hits=
handset.110.ldap.name_attr=
handset.110.ldap.numb_attr=
handset.110.ldap.display_name=
handset.110.ldap.version=
handset.110.ldap.call_in_lookup=
handset.110.ldap.ldap_sort=
handset.110.ldap.tls_mode=
handset.110.ldap.call_out_lookup=
handset.110.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account111 Settings
##
#####
#####
```

```

account.111.enable=%BWLIN-BINARY-111%
account.111.label=%BWEXTENSION-111%
account.111.display_name=%BWCLID-111%
account.111.auth_name=%BWAUTHUSER-111%
account.111.user_name=%BWLINPORT-111%
account.111.password=%BWAUTHPASSWORD-111%

#W80B ADD
account.111.sip_server.template =
account.111.media_transmit.enable =

account.111.alarm.template =
account.111.alarm.server =
account.111.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.111.sip_server.1.failback_mode =
account.111.sip_server.1.failback_timeout =
account.111.sip_server.1.register_on_enable =
account.111.sip_server.1.failback_subscribe.enable =
account.111.sip_server.1.invite_retry_counts =
account.111.sip_server.1.only_signal_with_registered =

account.111.sip_server.2.failback_mode =
account.111.sip_server.2.failback_timeout =
account.111.sip_server.2.register_on_enable =
account.111.sip_server.2.failback_subscribe.enable =
account.111.sip_server.2.invite_retry_counts =
account.111.sip_server.2.only_signal_with_registered =

account.111.naptr_build =
account.111.fallback.redundancy_type =
account.111.fallback.timeout =

account.111.dns_cache_type =
account.111.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.111.anonymous_call =
account.111.reject_anonymous_call =
account.111.send_anonymous_code =
account.111.anonymous_call_oncode =
account.111.anonymous_call_offcode =
account.111.send_anonymous_rejection_code =
account.111.anonymous_reject_oncode =
account.111.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.111.codec.g722.enable =
account.111.codec.g722.priority =

account.111.codec.g729.enable =
account.111.codec.g729.priority =

account.111.codec.g726_16.enable =
account.111.codec.g726_16.priority =

account.111.codec.g726_24.enable =
account.111.codec.g726_24.priority =

account.111.codec.g726_32.enable =
account.111.codec.g726_32.priority =

account.111.codec.g726_40.enable =
account.111.codec.g726_40.priority =

account.111.codec.ilbc.enable =
account.111.codec.ilbc.priority =

account.111.codec.pcmu.enable =
account.111.codec.pcmu.priority =

account.111.codec.pcma.enable =
account.111.codec.pcma.priority =

account.111.codec.opus.enable =
account.111.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.111.nat.nat_traversal =
account.111.nat.udp_update_enable =
account.111.nat.udp_update_time =
account.111.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.111.blf.subscribe_period =
account.111.dtmf.type =
account.111.dtmf.dtmf_payload =
account.111.dtmf.info_type =
account.111.100rel_enable =
account.111.subscribe_register =
account.111.subscribe_mwi =
account.111.subscribe_mwi_expires =
account.111.subscribe_mwi_to_vm =
voice_mail.number.111 = %BWVOICE-PORTAL-NUMBER-111%
account.111.display_mwi.enable =
account.111.cid_source =
```

```

account.111.cid_source_privacy =
account.111.cid_source_ppi =
account.111.session_timer.enable =
account.111.session_timer.expires =
account.111.session_timer.refresher =
account.111.enable_user_equal_phone =
account.111.srtp_encryption =
account.111.ptime =
account.111.shared_line = %BWSHAREDLINE-BINARY-111%
account.111.register_mac =
account.111.register_line =
account.111.reg_fail_retry_interval =
account.111.reg_failed_retry_min_time =
account.111.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.111.conf_type =
account.111.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-111%

account.111.sip_server_type =
account.111.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.111.register_expires_overlap =
account.111.subscribe_expires_overlap =
account.111.auto_dial_enable =
account.111.auto_dial_num =
account.111.cp_source =
account.111.transfer_refer_to_contact_header.enable =
#V80 Add
account.111.custom_ua =
account.111.callpark_enable =
account.111.check_cseq.enable =
account.111.check_to_tag.enable =
account.111.hold_use_inactive =
account.111.line_seize.expires =
account.111.update_ack_while_dialing =
account.111.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.111.always_fwd.enable =
account.111.always_fwd.target =
account.111.always_fwd.off_code =
account.111.always_fwd.on_code =
account.111.busy_fwd.enable =

```

```

account.111.busy_fwd.target =
account.111.busy_fwd.off_code =
account.111.busy_fwd.on_code =
account.111.timeout_fwd.enable =
account.111.timeout_fwd.target =
account.111.timeout_fwd.timeout =
account.111.timeout_fwd.off_code =
account.111.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.111.dnd.enable =
account.111.dnd.on_code =
account.111.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.111.reg.enable =
handset.111.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.111.xsi.user =%BWLOGIN-ID-111%
account.111.xsi.password =%XSIPASSWORD-111%
account.111.xsi.host =%XSP_ADDRESS%
account.111.xsi.server_type =
account.111.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.111.ldap.enable =
handset.111.ldap.name_filter=
handset.111.ldap.number_filter=
handset.111.ldap.host=
handset.111.ldap.port=
handset.111.ldap.base=
handset.111.ldap.user=
handset.111.ldap.password=
handset.111.ldap.max_hits=
handset.111.ldap.name_attr=
handset.111.ldap.numb_attr=
handset.111.ldap.display_name=
handset.111.ldap.version=
handset.111.ldap.call_in_lookup=

```

```
handset.111.ldap.ldap_sort=
handset.111.ldap.tls_mode=
handset.111.ldap.call_out_lookup=
handset.111.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account112 Settings
##
#####
#####

account.112.enable=%BWLIN-BINARY-112%
account.112.label=%BWEXTENSION-112%
account.112.display_name=%BWCLID-112%
account.112.auth_name=%BWAUTHUSER-112%
account.112.user_name=%BWLINPORT-112%
account.112.password=%BWAUTHPASSWORD-112%

#W80B ADD
account.112.sip_server.template =
account.112.media_transmit.enable =

account.112.alarm.template =
account.112.alarm.server =
account.112.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.112.sip_server.1.failback_mode =
account.112.sip_server.1.failback_timeout =
account.112.sip_server.1.register_on_enable =
account.112.sip_server.1.failback_subscribe.enable =
account.112.sip_server.1.invite_retry_counts =
account.112.sip_server.1.only_signal_with_registered =

account.112.sip_server.2.failback_mode =
account.112.sip_server.2.failback_timeout =
account.112.sip_server.2.register_on_enable =
account.112.sip_server.2.failback_subscribe.enable =
account.112.sip_server.2.invite_retry_counts =
account.112.sip_server.2.only_signal_with_registered =

account.112.naptr_build =
account.112.fallback.redundancy_type =
account.112.fallback.timeout =

account.112.dns_cache_type =
account.112.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
```



```
account.112.anonymous_call =
account.112.reject_anonymous_call =
account.112.send_anonymous_code =
account.112.anonymous_call_oncode =
account.112.anonymous_call_offcode =
account.112.send_anonymous_rejection_code =
account.112.anonymous_reject_oncode =
account.112.anonymous_reject_offcode =

#####
#####
##
##                                Codec
##
#####
#####
account.112.codec.g722.enable =
account.112.codec.g722.priority =

account.112.codec.g729.enable =
account.112.codec.g729.priority =

account.112.codec.g726_16.enable =
account.112.codec.g726_16.priority =

account.112.codec.g726_24.enable =
account.112.codec.g726_24.priority =

account.112.codec.g726_32.enable =
account.112.codec.g726_32.priority =

account.112.codec.g726_40.enable =
account.112.codec.g726_40.priority =

account.112.codec.ilbc.enable =
account.112.codec.ilbc.priority =

account.112.codec.pcmu.enable =
account.112.codec.pcmu.priority =

account.112.codec.pcma.enable =
account.112.codec.pcma.priority =

account.112.codec.opus.enable =
account.112.codec.opus.priority =

#####
#####
##
##                                NAT Settings
##
#####
#####

account.112.nat.nat_traversal =
account.112.nat.udp_update_enable =
account.112.nat.udp_update_time =
account.112.nat.rport =

#####
#####
##
##                                Register Advanced
##
```

```
#####
#####

account.112.blf.subscribe_period =
account.112.dtmf.type =
account.112.dtmf.dtmf_payload =
account.112.dtmf.info_type =
account.112.100rel_enable =
account.112.subscribe_register =
account.112.subscribe_mwi =
account.112.subscribe_mwi_expires =
account.112.subscribe_mwi_to_vm =
voice_mail.number.112 = %BWVOICE-PORTAL-NUMBER-112%
account.112.display_mwi.enable =
account.112.cid_source =
account.112.cid_source_privacy =
account.112.cid_source_ppi =
account.112.session_timer.enable =
account.112.session_timer.expires =
account.112.session_timer.refresher =
account.112.enable_user_equal_phone =
account.112.srtp_encryption =
account.112.ptime =
account.112.shared_line = %BWSHAREDLINE-BINARY-112%
account.112.register_mac =
account.112.register_line =
account.112.reg_fail_retry_interval =
account.112.reg_failed_retry_min_time =
account.112.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.112.conf_type =
account.112.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-112%

account.112.sip_server_type =
account.112.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.112.register_expires_overlap =
account.112.subscribe_expires_overlap =
account.112.auto_dial_enable =
account.112.auto_dial_num =
account.112.cp_source =
account.112.transfer_refer_to_contact_header.enable =
#V80 Add
account.112.custom_ua =
account.112.callpark_enable =
account.112.check_cseq.enable =
account.112.check_to_tag.enable =
account.112.hold_use_inactive =
```

```

account.112.line_seize.expires =
account.112.update_ack_while_dialing =
account.112.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.112.always_fwd.enable =
account.112.always_fwd.target =
account.112.always_fwd.off_code =
account.112.always_fwd.on_code =
account.112.busy_fwd.enable =
account.112.busy_fwd.target =
account.112.busy_fwd.off_code =
account.112.busy_fwd.on_code =
account.112.timeout_fwd.enable =
account.112.timeout_fwd.target =
account.112.timeout_fwd.timeout =
account.112.timeout_fwd.off_code =
account.112.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.112.dnd.enable =
account.112.dnd.on_code =
account.112.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.112.reg.enable =
handset.112.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.112.xsi.user =%BWLOGIN-ID-112%
account.112.xsi.password =%XSIPASSWORD-112%
account.112.xsi.host =%XSP_ADDRESS%
account.112.xsi.server_type =
account.112.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.112.ldap.enable =
handset.112.ldap.name_filter=
handset.112.ldap.number_filter=
handset.112.ldap.host=
handset.112.ldap.port=
handset.112.ldap.base=
handset.112.ldap.user=
handset.112.ldap.password=
handset.112.ldap.max_hits=
handset.112.ldap.name_attr=
handset.112.ldap.numb_attr=
handset.112.ldap.display_name=
handset.112.ldap.version=
handset.112.ldap.call_in_lookup=
handset.112.ldap.ldap_sort=
handset.112.ldap.tls_mode=
handset.112.ldap.call_out_lookup=
handset.112.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account113 Settings
##
#####
#####

account.113.enable=%BWLIN-BINARY-113%
account.113.label=%BWEXTENSION-113%
account.113.display_name=%BWCLID-113%
account.113.auth_name=%BWAUTHUSER-113%
account.113.user_name=%BWLINPORT-113%
account.113.password=%BWAUTHPASSWORD-113%

#W80B ADD
account.113.sip_server.template =
account.113.media_transmit.enable =

account.113.alarm.template =
account.113.alarm.server =
account.113.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.113.sip_server.1.failback_mode =
account.113.sip_server.1.failback_timeout =
account.113.sip_server.1.register_on_enable =
account.113.sip_server.1.failback_subscribe.enable =
account.113.sip_server.1.invite_retry_counts =
account.113.sip_server.1.only_signal_with_registered =

account.113.sip_server.2.failback_mode =
account.113.sip_server.2.failback_timeout =
account.113.sip_server.2.register_on_enable =
account.113.sip_server.2.failback_subscribe.enable =
```

```
account.113.sip_server.2.invite_retry_counts =
account.113.sip_server.2.only_signal_with_registered =

account.113.naptr_build =
account.113.fallback.redundancy_type =
account.113.fallback.timeout =

account.113.dns_cache_type =
account.113.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.113.anonymous_call =
account.113.reject_anonymous_call =
account.113.send_anonymous_code =
account.113.anonymous_call_oncode =
account.113.anonymous_call_offcode =
account.113.send_anonymous_rejection_code =
account.113.anonymous_reject_oncode =
account.113.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.113.codec.g722.enable =
account.113.codec.g722.priority =

account.113.codec.g729.enable =
account.113.codec.g729.priority =

account.113.codec.g726_16.enable =
account.113.codec.g726_16.priority =

account.113.codec.g726_24.enable =
account.113.codec.g726_24.priority =

account.113.codec.g726_32.enable =
account.113.codec.g726_32.priority =

account.113.codec.g726_40.enable =
account.113.codec.g726_40.priority =

account.113.codec.ilbc.enable =
account.113.codec.ilbc.priority =

account.113.codec.pcmu.enable =
account.113.codec.pcmu.priority =

account.113.codec.pcma.enable =
account.113.codec.pcma.priority =

account.113.codec.opus.enable =
account.113.codec.opus.priority =
```

```
#####
#####
##                               NAT Settings
##
#####
#####

account.113.nat.nat_traversal =
account.113.nat.udp_update_enable =
account.113.nat.udp_update_time =
account.113.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.113.blf.subscribe_period =
account.113.dtmf.type =
account.113.dtmf.dtmf_payload =
account.113.dtmf.info_type =
account.113.100rel_enable =
account.113.subscribe_register =
account.113.subscribe_mwi =
account.113.subscribe_mwi_expires =
account.113.subscribe_mwi_to_vm =
voice_mail.number.113 = %BWVOICE-PORTAL-NUMBER-113%
account.113.display_mwi.enable =
account.113.cid_source =
account.113.cid_source_privacy =
account.113.cid_source_ppi =
account.113.session_timer.enable =
account.113.session_timer.expires =
account.113.session_timer.refresher =
account.113.enable_user_equal_phone =
account.113.srtp_encryption =
account.113.ptime =
account.113.shared_line = %BWSHAREDLINE-BINARY-113%
account.113.register_mac =
account.113.register_line =
account.113.reg_fail_retry_interval =
account.113.reg_failed_retry_min_time =
account.113.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.113.conf_type =
account.113.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-113%

account.113.sip_server_type =
account.113.unregister_on_reboot =

#####
#####
##                               Register Other
##
```

```
#####
#####
##DECT V81 Add

account.113.register_expires_overlap =
account.113.subscribe_expires_overlap =
account.113.auto_dial_enable =
account.113.auto_dial_num =
account.113.cp_source =
account.113.transfer_refer_to_contact_header.enable =
#V80 Add
account.113.custom_ua =
account.113.callpark_enable =
account.113.check_cseq.enable =
account.113.check_to_tag.enable =
account.113.hold_use_inactive =
account.113.line_seize.expires =
account.113.update_ack_while_dialing =
account.113.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.113.always_fwd.enable =
account.113.always_fwd.target =
account.113.always_fwd.off_code =
account.113.always_fwd.on_code =
account.113.busy_fwd.enable =
account.113.busy_fwd.target =
account.113.busy_fwd.off_code =
account.113.busy_fwd.on_code =
account.113.timeout_fwd.enable =
account.113.timeout_fwd.target =
account.113.timeout_fwd.timeout =
account.113.timeout_fwd.off_code =
account.113.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.113.dnd.enable =
account.113.dnd.on_code =
account.113.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.113.reg.enable =
handset.113.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.113.xsi.user =%BWLOGIN-ID-113%
account.113.xsi.password =%XSIPASSWORD-113%
account.113.xsi.host =%XSP_ADDRESS%
account.113.xsi.server_type =
account.113.xsi.port =

#####
#####
##          LADP
##
#####
handset.113.ldap.enable =
handset.113.ldap.name_filter=
handset.113.ldap.number_filter=
handset.113.ldap.host=
handset.113.ldap.port=
handset.113.ldap.base=
handset.113.ldap.user=
handset.113.ldap.password=
handset.113.ldap.max_hits=
handset.113.ldap.name_attr=
handset.113.ldap.numb_attr=
handset.113.ldap.display_name=
handset.113.ldap.version=
handset.113.ldap.call_in_lookup=
handset.113.ldap.ldap_sort=
handset.113.ldap.tls_mode=
handset.113.ldap.call_out_lookup=
handset.113.ldap.incoming_call_special_search.enable=

#####
#####
##          Account114 Settings
##
#####

account.114.enable=%BWLINE-BINARY-114%
account.114.label=%BWEXTENSION-114%
account.114.display_name=%BWCLID-114%
account.114.auth_name=%BWAUTHUSER-114%
account.114.user_name=%BWLINPORT-114%
account.114.password=%BWAUTHPASSWORD-114%

#W80B ADD
account.114.sip_server.template =
account.114.media_transmit.enable =

account.114.alarm.template =
account.114.alarm.server =
account.114.alarm.number =

```



```
#####
#####
##                               Failback
##
#####
#####
account.114.sip_server.1.failback_mode =
account.114.sip_server.1.failback_timeout =
account.114.sip_server.1.register_on_enable =
account.114.sip_server.1.failback_subscribe.enable =
account.114.sip_server.1.invite_retry_counts =
account.114.sip_server.1.only_signal_with_registered =

account.114.sip_server.2.failback_mode =
account.114.sip_server.2.failback_timeout =
account.114.sip_server.2.register_on_enable =
account.114.sip_server.2.failback_subscribe.enable =
account.114.sip_server.2.invite_retry_counts =
account.114.sip_server.2.only_signal_with_registered =

account.114.naptr_build =
account.114.fallback.redundancy_type =
account.114.fallback.timeout =

account.114.dns_cache_type =
account.114.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.114.anonymous_call =
account.114.reject_anonymous_call =
account.114.send_anonymous_code =
account.114.anonymous_call_oncode =
account.114.anonymous_call_offcode =
account.114.send_anonymous_rejection_code =
account.114.anonymous_reject_oncode =
account.114.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.114.codec.g722.enable =
account.114.codec.g722.priority =

account.114.codec.g729.enable =
account.114.codec.g729.priority =

account.114.codec.g726_16.enable =
account.114.codec.g726_16.priority =

account.114.codec.g726_24.enable =
account.114.codec.g726_24.priority =

account.114.codec.g726_32.enable =
account.114.codec.g726_32.priority =
```

```

account.114.codec.g726_40.enable =
account.114.codec.g726_40.priority =

account.114.codec.ilbc.enable =
account.114.codec.ilbc.priority =

account.114.codec.pcmu.enable =
account.114.codec.pcmu.priority =

account.114.codec.pcma.enable =
account.114.codec.pcma.priority =

account.114.codec.opus.enable =
account.114.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.114.nat.nat_traversal =
account.114.nat.udp_update_enable =
account.114.nat.udp_update_time =
account.114.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.114.blf.subscribe_period =
account.114.dtmf.type =
account.114.dtmf.dtmf_payload =
account.114.dtmf.info_type =
account.114.100rel_enable =
account.114.subscribe_register =
account.114.subscribe_mwi =
account.114.subscribe_mwi_expires =
account.114.subscribe_mwi_to_vm =
voice_mail.number.114 = %BWVOICE-PORTAL-NUMBER-114%
account.114.display_mwi.enable =
account.114.cid_source =
account.114.cid_source_privacy =
account.114.cid_source_ppi =
account.114.session_timer.enable =
account.114.session_timer.expires =
account.114.session_timer.refresher =
account.114.enable_user_equal_phone =
account.114.srtp_encryption =
account.114.ptime =
account.114.shared_line = %BWSHAREDLINE-BINARY-114%
account.114.register_mac =
account.114.register_line =
account.114.reg_fail_retry_interval =
account.114.reg_failed_retry_min_time =
account.114.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.114.conf_type =
account.114.conf_uri = %BWNWORK-CONFERENCE-SIPURI-114%

account.114.sip_server_type =
account.114.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.114.register_expires_overlap =
account.114.subscribe_expires_overlap =
account.114.auto_dial_enable =
account.114.auto_dial_num =
account.114.cp_source =
account.114.transfer_refer_to_contact_header.enable =
#V80 Add
account.114.custom_ua =
account.114.callpark_enable =
account.114.check_cseq.enable =
account.114.check_to_tag.enable =
account.114.hold_use_inactive =
account.114.line_seize.expires =
account.114.update_ack_while_dialing =
account.114.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.114.always_fwd.enable =
account.114.always_fwd.target =
account.114.always_fwd.off_code =
account.114.always_fwd.on_code =
account.114.busy_fwd.enable =
account.114.busy_fwd.target =
account.114.busy_fwd.off_code =
account.114.busy_fwd.on_code =
account.114.timeout_fwd.enable =
account.114.timeout_fwd.target =
account.114.timeout_fwd.timeout =
account.114.timeout_fwd.off_code =
account.114.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```

account.114.dnd.enable =
account.114.dnd.on_code =
account.114.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.114.reg.enable =
handset.114.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.114.xsi.user =%BWLOGIN-ID-114%
account.114.xsi.password =%XSIPASSWORD-114%
account.114.xsi.host =%XSP_ADDRESS%
account.114.xsi.server_type =
account.114.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.114.ldap.enable =
handset.114.ldap.name_filter=
handset.114.ldap.number_filter=
handset.114.ldap.host=
handset.114.ldap.port=
handset.114.ldap.base=
handset.114.ldap.user=
handset.114.ldap.password=
handset.114.ldap.max_hits=
handset.114.ldap.name_attr=
handset.114.ldap.numb_attr=
handset.114.ldap.display_name=
handset.114.ldap.version=
handset.114.ldap.call_in_lookup=
handset.114.ldap.ldap_sort=
handset.114.ldap.tls_mode=
handset.114.ldap.call_out_lookup=
handset.114.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account115 Settings
##
#####
#####

```

```

account.115.enable=%BWLIN-BINARY-115%
account.115.label=%BWEXTENSION-115%
account.115.display_name=%BWCLID-115%
account.115.auth_name=%BWAUTHUSER-115%
account.115.user_name=%BWLINPORT-115%
account.115.password=%BWAUTHPASSWORD-115%

#W80B ADD
account.115.sip_server.template =
account.115.media_transmit.enable =

account.115.alarm.template =
account.115.alarm.server =
account.115.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.115.sip_server.1.failback_mode =
account.115.sip_server.1.failback_timeout =
account.115.sip_server.1.register_on_enable =
account.115.sip_server.1.failback_subscribe.enable =
account.115.sip_server.1.invite_retry_counts =
account.115.sip_server.1.only_signal_with_registered =

account.115.sip_server.2.failback_mode =
account.115.sip_server.2.failback_timeout =
account.115.sip_server.2.register_on_enable =
account.115.sip_server.2.failback_subscribe.enable =
account.115.sip_server.2.invite_retry_counts =
account.115.sip_server.2.only_signal_with_registered =

account.115.naptr_build =
account.115.fallback.redundancy_type =
account.115.fallback.timeout =

account.115.dns_cache_type =
account.115.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.115.anonymous_call =
account.115.reject_anonymous_call =
account.115.send_anonymous_code =
account.115.anonymous_call_oncode =
account.115.anonymous_call_offcode =
account.115.send_anonymous_rejection_code =
account.115.anonymous_reject_oncode =
account.115.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.115.codec.g722.enable =
account.115.codec.g722.priority =

account.115.codec.g729.enable =
account.115.codec.g729.priority =

account.115.codec.g726_16.enable =
account.115.codec.g726_16.priority =

account.115.codec.g726_24.enable =
account.115.codec.g726_24.priority =

account.115.codec.g726_32.enable =
account.115.codec.g726_32.priority =

account.115.codec.g726_40.enable =
account.115.codec.g726_40.priority =

account.115.codec.ilbc.enable =
account.115.codec.ilbc.priority =

account.115.codec.pcmu.enable =
account.115.codec.pcmu.priority =

account.115.codec.pcma.enable =
account.115.codec.pcma.priority =

account.115.codec.opus.enable =
account.115.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.115.nat.nat_traversal =
account.115.nat.udp_update_enable =
account.115.nat.udp_update_time =
account.115.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.115.blf.subscribe_period =
account.115.dtmf.type =
account.115.dtmf.dtmf_payload =
account.115.dtmf.info_type =
account.115.100rel_enable =
account.115.subscribe_register =
account.115.subscribe_mwi =
account.115.subscribe_mwi_expires =
account.115.subscribe_mwi_to_vm =
voice_mail.number.115 = %BWVOICE-PORTAL-NUMBER-115%
account.115.display_mwi.enable =
account.115.cid_source =
```

```

account.115.cid_source_privacy =
account.115.cid_source_ppi =
account.115.session_timer.enable =
account.115.session_timer.expires =
account.115.session_timer.refresher =
account.115.enable_user_equal_phone =
account.115.srtp_encryption =
account.115.ptime =
account.115.shared_line = %BWSHAREDLINE-BINARY-115%
account.115.register_mac =
account.115.register_line =
account.115.reg_fail_retry_interval =
account.115.reg_failed_retry_min_time =
account.115.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.115.conf_type =
account.115.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-115%

account.115.sip_server_type =
account.115.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.115.register_expires_overlap =
account.115.subscribe_expires_overlap =
account.115.auto_dial_enable =
account.115.auto_dial_num =
account.115.cp_source =
account.115.transfer_refer_to_contact_header.enable =
#V80 Add
account.115.custom_ua =
account.115.callpark_enable =
account.115.check_cseq.enable =
account.115.check_to_tag.enable =
account.115.hold_use_inactive =
account.115.line_seize.expires =
account.115.update_ack_while_dialing =
account.115.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.115.always_fwd.enable =
account.115.always_fwd.target =
account.115.always_fwd.off_code =
account.115.always_fwd.on_code =
account.115.busy_fwd.enable =

```

```

account.115.busy_fwd.target =
account.115.busy_fwd.off_code =
account.115.busy_fwd.on_code =
account.115.timeout_fwd.enable =
account.115.timeout_fwd.target =
account.115.timeout_fwd.timeout =
account.115.timeout_fwd.off_code =
account.115.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.115.dnd.enable =
account.115.dnd.on_code =
account.115.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.115.reg.enable =
handset.115.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.115.xsi.user =%BWLOGIN-ID-115%
account.115.xsi.password =%XSIPASSWORD-115%
account.115.xsi.host =%XSP_ADDRESS%
account.115.xsi.server_type =
account.115.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.115.ldap.enable =
handset.115.ldap.name_filter=
handset.115.ldap.number_filter=
handset.115.ldap.host=
handset.115.ldap.port=
handset.115.ldap.base=
handset.115.ldap.user=
handset.115.ldap.password=
handset.115.ldap.max_hits=
handset.115.ldap.name_attr=
handset.115.ldap.numb_attr=
handset.115.ldap.display_name=
handset.115.ldap.version=
handset.115.ldap.call_in_lookup=

```



```
handset.115.ldap.ldap_sort=
handset.115.ldap.tls_mode=
handset.115.ldap.call_out_lookup=
handset.115.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account116 Settings
##
#####
#####

account.116.enable=%BWLIN-BINARY-116%
account.116.label=%BWEXTENSION-116%
account.116.display_name=%BWCLID-116%
account.116.auth_name=%BWAUTHUSER-116%
account.116.user_name=%BWLINPORT-116%
account.116.password=%BWAUTHPASSWORD-116%

#W80B ADD
account.116.sip_server.template =
account.116.media_transmit.enable =

account.116.alarm.template =
account.116.alarm.server =
account.116.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.116.sip_server.1.failback_mode =
account.116.sip_server.1.failback_timeout =
account.116.sip_server.1.register_on_enable =
account.116.sip_server.1.failback_subscribe.enable =
account.116.sip_server.1.invite_retry_counts =
account.116.sip_server.1.only_signal_with_registered =

account.116.sip_server.2.failback_mode =
account.116.sip_server.2.failback_timeout =
account.116.sip_server.2.register_on_enable =
account.116.sip_server.2.failback_subscribe.enable =
account.116.sip_server.2.invite_retry_counts =
account.116.sip_server.2.only_signal_with_registered =

account.116.naptr_build =
account.116.fallback.redundancy_type =
account.116.fallback.timeout =

account.116.dns_cache_type =
account.116.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
```

```

account.116.anonymous_call =
account.116.reject_anonymous_call =
account.116.send_anonymous_code =
account.116.anonymous_call_oncode =
account.116.anonymous_call_offcode =
account.116.send_anonymous_rejection_code =
account.116.anonymous_reject_oncode =
account.116.anonymous_reject_offcode =

#####
#####
##
##                                Codec
##
#####
#####
account.116.codec.g722.enable =
account.116.codec.g722.priority =

account.116.codec.g729.enable =
account.116.codec.g729.priority =

account.116.codec.g726_16.enable =
account.116.codec.g726_16.priority =

account.116.codec.g726_24.enable =
account.116.codec.g726_24.priority =

account.116.codec.g726_32.enable =
account.116.codec.g726_32.priority =

account.116.codec.g726_40.enable =
account.116.codec.g726_40.priority =

account.116.codec.ilbc.enable =
account.116.codec.ilbc.priority =

account.116.codec.pcmu.enable =
account.116.codec.pcmu.priority =

account.116.codec.pcma.enable =
account.116.codec.pcma.priority =

account.116.codec.opus.enable =
account.116.codec.opus.priority =

#####
#####
##
##                                NAT Settings
##
#####
#####

account.116.nat.nat_traversal =
account.116.nat.udp_update_enable =
account.116.nat.udp_update_time =
account.116.nat.rport =

#####
#####
##
##                                Register Advanced
##

```

```
#####
#####

account.116.blf.subscribe_period =
account.116.dtmf.type =
account.116.dtmf.dtmf_payload =
account.116.dtmf.info_type =
account.116.100rel_enable =
account.116.subscribe_register =
account.116.subscribe_mwi =
account.116.subscribe_mwi_expires =
account.116.subscribe_mwi_to_vm =
voice_mail.number.116 = %BWVOICE-PORTAL-NUMBER-116%
account.116.display_mwi.enable =
account.116.cid_source =
account.116.cid_source_privacy =
account.116.cid_source_ppi =
account.116.session_timer.enable =
account.116.session_timer.expires =
account.116.session_timer.refresher =
account.116.enable_user_equal_phone =
account.116.srtp_encryption =
account.116.ptime =
account.116.shared_line = %BWSHAREDLINE-BINARY-116%
account.116.register_mac =
account.116.register_line =
account.116.reg_fail_retry_interval =
account.116.reg_failed_retry_min_time =
account.116.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.116.conf_type =
account.116.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-116%

account.116.sip_server_type =
account.116.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.116.register_expires_overlap =
account.116.subscribe_expires_overlap =
account.116.auto_dial_enable =
account.116.auto_dial_num =
account.116.cp_source =
account.116.transfer_refer_to_contact_header.enable =
#V80 Add
account.116.custom_ua =
account.116.callpark_enable =
account.116.check_cseq.enable =
account.116.check_to_tag.enable =
account.116.hold_use_inactive =
```

```

account.116.line_seize.expires =
account.116.update_ack_while_dialing =
account.116.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.116.always_fwd.enable =
account.116.always_fwd.target =
account.116.always_fwd.off_code =
account.116.always_fwd.on_code =
account.116.busy_fwd.enable =
account.116.busy_fwd.target =
account.116.busy_fwd.off_code =
account.116.busy_fwd.on_code =
account.116.timeout_fwd.enable =
account.116.timeout_fwd.target =
account.116.timeout_fwd.timeout =
account.116.timeout_fwd.off_code =
account.116.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.116.dnd.enable =
account.116.dnd.on_code =
account.116.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.116.reg.enable =
handset.116.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.116.xsi.user =%BWLOGIN-ID-116%
account.116.xsi.password =%XSIPASSWORD-116%
account.116.xsi.host =%XSP_ADDRESS%
account.116.xsi.server_type =
account.116.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.116.ldap.enable =
handset.116.ldap.name_filter=
handset.116.ldap.number_filter=
handset.116.ldap.host=
handset.116.ldap.port=
handset.116.ldap.base=
handset.116.ldap.user=
handset.116.ldap.password=
handset.116.ldap.max_hits=
handset.116.ldap.name_attr=
handset.116.ldap.numb_attr=
handset.116.ldap.display_name=
handset.116.ldap.version=
handset.116.ldap.call_in_lookup=
handset.116.ldap.ldap_sort=
handset.116.ldap.tls_mode=
handset.116.ldap.call_out_lookup=
handset.116.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account117 Settings
##
#####
#####

account.117.enable=%BWLIN-BINARY-117%
account.117.label=%BWEXTENSION-117%
account.117.display_name=%BWCLID-117%
account.117.auth_name=%BWAUTHUSER-117%
account.117.user_name=%BWLINPORT-117%
account.117.password=%BWAUTHPASSWORD-117%

#W80B ADD
account.117.sip_server.template =
account.117.media_transmit.enable =

account.117.alarm.template =
account.117.alarm.server =
account.117.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.117.sip_server.1.failback_mode =
account.117.sip_server.1.failback_timeout =
account.117.sip_server.1.register_on_enable =
account.117.sip_server.1.failback_subscribe.enable =
account.117.sip_server.1.invite_retry_counts =
account.117.sip_server.1.only_signal_with_registered =

account.117.sip_server.2.failback_mode =
account.117.sip_server.2.failback_timeout =
account.117.sip_server.2.register_on_enable =
account.117.sip_server.2.failback_subscribe.enable =
```

```
account.117.sip_server.2.invite_retry_counts =
account.117.sip_server.2.only_signal_with_registered =

account.117.naptr_build =
account.117.fallback.redundancy_type =
account.117.fallback.timeout =

account.117.dns_cache_type =
account.117.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.117.anonymous_call =
account.117.reject_anonymous_call =
account.117.send_anonymous_code =
account.117.anonymous_call_oncode =
account.117.anonymous_call_offcode =
account.117.send_anonymous_rejection_code =
account.117.anonymous_reject_oncode =
account.117.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.117.codec.g722.enable =
account.117.codec.g722.priority =

account.117.codec.g729.enable =
account.117.codec.g729.priority =

account.117.codec.g726_16.enable =
account.117.codec.g726_16.priority =

account.117.codec.g726_24.enable =
account.117.codec.g726_24.priority =

account.117.codec.g726_32.enable =
account.117.codec.g726_32.priority =

account.117.codec.g726_40.enable =
account.117.codec.g726_40.priority =

account.117.codec.ilbc.enable =
account.117.codec.ilbc.priority =

account.117.codec.pcmu.enable =
account.117.codec.pcmu.priority =

account.117.codec.pcma.enable =
account.117.codec.pcma.priority =

account.117.codec.opus.enable =
account.117.codec.opus.priority =
```

```
#####
#####
##                               NAT Settings
##
#####
#####

account.117.nat.nat_traversal =
account.117.nat.udp_update_enable =
account.117.nat.udp_update_time =
account.117.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.117.blf.subscribe_period =
account.117.dtmf.type =
account.117.dtmf.dtmf_payload =
account.117.dtmf.info_type =
account.117.100rel_enable =
account.117.subscribe_register =
account.117.subscribe_mwi =
account.117.subscribe_mwi_expires =
account.117.subscribe_mwi_to_vm =
voice_mail.number.117 = %BWVOICE-PORTAL-NUMBER-117%
account.117.display_mwi.enable =
account.117.cid_source =
account.117.cid_source_privacy =
account.117.cid_source_ppi =
account.117.session_timer.enable =
account.117.session_timer.expires =
account.117.session_timer.refresher =
account.117.enable_user_equal_phone =
account.117.srtp_encryption =
account.117.ptime =
account.117.shared_line = %BWSHAREDLINE-BINARY-117%
account.117.register_mac =
account.117.register_line =
account.117.reg_fail_retry_interval =
account.117.reg_failed_retry_min_time =
account.117.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.117.conf_type =
account.117.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-117%

account.117.sip_server_type =
account.117.unregister_on_reboot =

#####
#####
##                               Register Other
##
##
```

```
#####
#####
##DECT V81 Add

account.117.register_expires_overlap =
account.117.subscribe_expires_overlap =
account.117.auto_dial_enable =
account.117.auto_dial_num =
account.117.cp_source =
account.117.transfer_refer_to_contact_header.enable =
#V80 Add
account.117.custom_ua =
account.117.callpark_enable =
account.117.check_cseq.enable =
account.117.check_to_tag.enable =
account.117.hold_use_inactive =
account.117.line_seize.expires =
account.117.update_ack_while_dialing =
account.117.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.117.always_fwd.enable =
account.117.always_fwd.target =
account.117.always_fwd.off_code =
account.117.always_fwd.on_code =
account.117.busy_fwd.enable =
account.117.busy_fwd.target =
account.117.busy_fwd.off_code =
account.117.busy_fwd.on_code =
account.117.timeout_fwd.enable =
account.117.timeout_fwd.target =
account.117.timeout_fwd.timeout =
account.117.timeout_fwd.off_code =
account.117.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.117.dnd.enable =
account.117.dnd.on_code =
account.117.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.117.reg.enable =
handset.117.ipui =

#####
#####
```



```
##          Broadsoft XSI
##
#####

account.117.xsi.user =%BWLOGIN-ID-117%
account.117.xsi.password =%XSIPASSWORD-117%
account.117.xsi.host =%XSP_ADDRESS%
account.117.xsi.server_type =
account.117.xsi.port =

#####
#####
##          LADP
##
#####
handset.117.ldap.enable =
handset.117.ldap.name_filter=
handset.117.ldap.number_filter=
handset.117.ldap.host=
handset.117.ldap.port=
handset.117.ldap.base=
handset.117.ldap.user=
handset.117.ldap.password=
handset.117.ldap.max_hits=
handset.117.ldap.name_attr=
handset.117.ldap.numb_attr=
handset.117.ldap.display_name=
handset.117.ldap.version=
handset.117.ldap.call_in_lookup=
handset.117.ldap.ldap_sort=
handset.117.ldap.tls_mode=
handset.117.ldap.call_out_lookup=
handset.117.ldap.incoming_call_special_search.enable=

#####
#####
##          Account118 Settings
##
#####

account.118.enable=%BWLINE-BINARY-118%
account.118.label=%BWEXTENSION-118%
account.118.display_name=%BWCLID-118%
account.118.auth_name=%BWAUTHUSER-118%
account.118.user_name=%BWLINEPORT-118%
account.118.password=%BWAUTHPASSWORD-118%

#W80B ADD
account.118.sip_server.template =
account.118.media_transmit.enable =

account.118.alarm.template =
account.118.alarm.server =
account.118.alarm.number =
```

```
#####
#####
##                               Failback
##
#####
#####
account.118.sip_server.1.failback_mode =
account.118.sip_server.1.failback_timeout =
account.118.sip_server.1.register_on_enable =
account.118.sip_server.1.failback_subscribe.enable =
account.118.sip_server.1.invite_retry_counts =
account.118.sip_server.1.only_signal_with_registered =

account.118.sip_server.2.failback_mode =
account.118.sip_server.2.failback_timeout =
account.118.sip_server.2.register_on_enable =
account.118.sip_server.2.failback_subscribe.enable =
account.118.sip_server.2.invite_retry_counts =
account.118.sip_server.2.only_signal_with_registered =

account.118.naptr_build =
account.118.fallback.redundancy_type =
account.118.fallback.timeout =

account.118.dns_cache_type =
account.118.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.118.anonymous_call =
account.118.reject_anonymous_call =
account.118.send_anonymous_code =
account.118.anonymous_call_oncode =
account.118.anonymous_call_offcode =
account.118.send_anonymous_rejection_code =
account.118.anonymous_reject_oncode =
account.118.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.118.codec.g722.enable =
account.118.codec.g722.priority =

account.118.codec.g729.enable =
account.118.codec.g729.priority =

account.118.codec.g726_16.enable =
account.118.codec.g726_16.priority =

account.118.codec.g726_24.enable =
account.118.codec.g726_24.priority =

account.118.codec.g726_32.enable =
account.118.codec.g726_32.priority =
```

```

account.118.codec.g726_40.enable =
account.118.codec.g726_40.priority =

account.118.codec.ilbc.enable =
account.118.codec.ilbc.priority =

account.118.codec.pcmu.enable =
account.118.codec.pcmu.priority =

account.118.codec.pcma.enable =
account.118.codec.pcma.priority =

account.118.codec.opus.enable =
account.118.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.118.nat.nat_traversal =
account.118.nat.udp_update_enable =
account.118.nat.udp_update_time =
account.118.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.118.blf.subscribe_period =
account.118.dtmf.type =
account.118.dtmf.dtmf_payload =
account.118.dtmf.info_type =
account.118.100rel_enable =
account.118.subscribe_register =
account.118.subscribe_mwi =
account.118.subscribe_mwi_expires =
account.118.subscribe_mwi_to_vm =
voice_mail.number.118 = %BWVOICE-PORTAL-NUMBER-118%
account.118.display_mwi.enable =
account.118.cid_source =
account.118.cid_source_privacy =
account.118.cid_source_ppi =
account.118.session_timer.enable =
account.118.session_timer.expires =
account.118.session_timer.refresher =
account.118.enable_user_equal_phone =
account.118.srtp_encryption =
account.118.ptime =
account.118.shared_line = %BWSHAREDLINE-BINARY-118%
account.118.register_mac =
account.118.register_line =
account.118.reg_fail_retry_interval =
account.118.reg_failed_retry_min_time =
account.118.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.118.conf_type =
account.118.conf_uri = %BWNWORK-CONFERENCE-SIPURI-118%

account.118.sip_server_type =
account.118.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.118.register_expires_overlap =
account.118.subscribe_expires_overlap =
account.118.auto_dial_enable =
account.118.auto_dial_num =
account.118.cp_source =
account.118.transfer_refer_to_contact_header.enable =
#V80 Add
account.118.custom_ua =
account.118.callpark_enable =
account.118.check_cseq.enable =
account.118.check_to_tag.enable =
account.118.hold_use_inactive =
account.118.line_seize.expires =
account.118.update_ack_while_dialing =
account.118.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.118.always_fwd.enable =
account.118.always_fwd.target =
account.118.always_fwd.off_code =
account.118.always_fwd.on_code =
account.118.busy_fwd.enable =
account.118.busy_fwd.target =
account.118.busy_fwd.off_code =
account.118.busy_fwd.on_code =
account.118.timeout_fwd.enable =
account.118.timeout_fwd.target =
account.118.timeout_fwd.timeout =
account.118.timeout_fwd.off_code =
account.118.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```

account.118.dnd.enable =
account.118.dnd.on_code =
account.118.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.118.reg.enable =
handset.118.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.118.xsi.user =%BWLOGIN-ID-118%
account.118.xsi.password =%XSIPASSWORD-118%
account.118.xsi.host =%XSP_ADDRESS%
account.118.xsi.server_type =
account.118.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.118.ldap.enable =
handset.118.ldap.name_filter=
handset.118.ldap.number_filter=
handset.118.ldap.host=
handset.118.ldap.port=
handset.118.ldap.base=
handset.118.ldap.user=
handset.118.ldap.password=
handset.118.ldap.max_hits=
handset.118.ldap.name_attr=
handset.118.ldap.numb_attr=
handset.118.ldap.display_name=
handset.118.ldap.version=
handset.118.ldap.call_in_lookup=
handset.118.ldap.ldap_sort=
handset.118.ldap.tls_mode=
handset.118.ldap.call_out_lookup=
handset.118.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account119 Settings
##
#####
#####

```

```

account.119.enable=%BWLIN-BINARY-119%
account.119.label=%BWEXTENSION-119%
account.119.display_name=%BWCLID-119%
account.119.auth_name=%BWAUTHUSER-119%
account.119.user_name=%BWLINPORT-119%
account.119.password=%BWAUTHPASSWORD-119%

#W80B ADD
account.119.sip_server.template =
account.119.media_transmit.enable =

account.119.alarm.template =
account.119.alarm.server =
account.119.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.119.sip_server.1.failback_mode =
account.119.sip_server.1.failback_timeout =
account.119.sip_server.1.register_on_enable =
account.119.sip_server.1.failback_subscribe.enable =
account.119.sip_server.1.invite_retry_counts =
account.119.sip_server.1.only_signal_with_registered =

account.119.sip_server.2.failback_mode =
account.119.sip_server.2.failback_timeout =
account.119.sip_server.2.register_on_enable =
account.119.sip_server.2.failback_subscribe.enable =
account.119.sip_server.2.invite_retry_counts =
account.119.sip_server.2.only_signal_with_registered =

account.119.naptr_build =
account.119.fallback.redundancy_type =
account.119.fallback.timeout =

account.119.dns_cache_type =
account.119.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.119.anonymous_call =
account.119.reject_anonymous_call =
account.119.send_anonymous_code =
account.119.anonymous_call_oncode =
account.119.anonymous_call_offcode =
account.119.send_anonymous_rejection_code =
account.119.anonymous_reject_oncode =
account.119.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.119.codec.g722.enable =
account.119.codec.g722.priority =

account.119.codec.g729.enable =
account.119.codec.g729.priority =

account.119.codec.g726_16.enable =
account.119.codec.g726_16.priority =

account.119.codec.g726_24.enable =
account.119.codec.g726_24.priority =

account.119.codec.g726_32.enable =
account.119.codec.g726_32.priority =

account.119.codec.g726_40.enable =
account.119.codec.g726_40.priority =

account.119.codec.ilbc.enable =
account.119.codec.ilbc.priority =

account.119.codec.pcmu.enable =
account.119.codec.pcmu.priority =

account.119.codec.pcma.enable =
account.119.codec.pcma.priority =

account.119.codec.opus.enable =
account.119.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.119.nat.nat_traversal =
account.119.nat.udp_update_enable =
account.119.nat.udp_update_time =
account.119.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.119.blf.subscribe_period =
account.119.dtmf.type =
account.119.dtmf.dtmf_payload =
account.119.dtmf.info_type =
account.119.100rel_enable =
account.119.subscribe_register =
account.119.subscribe_mwi =
account.119.subscribe_mwi_expires =
account.119.subscribe_mwi_to_vm =
voice_mail.number.119 = %BWVOICE-PORTAL-NUMBER-119%
account.119.display_mwi.enable =
account.119.cid_source =
```

```

account.119.cid_source_privacy =
account.119.cid_source_ppi =
account.119.session_timer.enable =
account.119.session_timer.expires =
account.119.session_timer.refresher =
account.119.enable_user_equal_phone =
account.119.srtp_encryption =
account.119.ptime =
account.119.shared_line = %BWSHAREDLINE-BINARY-119%
account.119.register_mac =
account.119.register_line =
account.119.reg_fail_retry_interval =
account.119.reg_failed_retry_min_time =
account.119.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.119.conf_type =
account.119.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-119%

account.119.sip_server_type =
account.119.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.119.register_expires_overlap =
account.119.subscribe_expires_overlap =
account.119.auto_dial_enable =
account.119.auto_dial_num =
account.119.cp_source =
account.119.transfer_refer_to_contact_header.enable =
#V80 Add
account.119.custom_ua =
account.119.callpark_enable =
account.119.check_cseq.enable =
account.119.check_to_tag.enable =
account.119.hold_use_inactive =
account.119.line_seize.expires =
account.119.update_ack_while_dialing =
account.119.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.119.always_fwd.enable =
account.119.always_fwd.target =
account.119.always_fwd.off_code =
account.119.always_fwd.on_code =
account.119.busy_fwd.enable =

```



```

account.119.busy_fwd.target =
account.119.busy_fwd.off_code =
account.119.busy_fwd.on_code =
account.119.timeout_fwd.enable =
account.119.timeout_fwd.target =
account.119.timeout_fwd.timeout =
account.119.timeout_fwd.off_code =
account.119.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.119.dnd.enable =
account.119.dnd.on_code =
account.119.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.119.reg.enable =
handset.119.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####
account.119.xsi.user =%BWLOGIN-ID-119%
account.119.xsi.password =%XSIPASSWORD-119%
account.119.xsi.host =%XSP_ADDRESS%
account.119.xsi.server_type =
account.119.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.119.ldap.enable =
handset.119.ldap.name_filter=
handset.119.ldap.number_filter=
handset.119.ldap.host=
handset.119.ldap.port=
handset.119.ldap.base=
handset.119.ldap.user=
handset.119.ldap.password=
handset.119.ldap.max_hits=
handset.119.ldap.name_attr=
handset.119.ldap.numb_attr=
handset.119.ldap.display_name=
handset.119.ldap.version=
handset.119.ldap.call_in_lookup=

```

```
handset.119.ldap.ldap_sort=
handset.119.ldap.tls_mode=
handset.119.ldap.call_out_lookup=
handset.119.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account120 Settings
##
#####
#####

account.120.enable=%BWLIN-BINARY-120%
account.120.label=%BWEXTENSION-120%
account.120.display_name=%BWCLID-120%
account.120.auth_name=%BWAUTHUSER-120%
account.120.user_name=%BWLINPORT-120%
account.120.password=%BWAUTHPASSWORD-120%

#W80B ADD
account.120.sip_server.template =
account.120.media_transmit.enable =

account.120.alarm.template =
account.120.alarm.server =
account.120.alarm.number =

#####
#####
##                                     Failback
##
##
#####
#####

account.120.sip_server.1.failback_mode =
account.120.sip_server.1.failback_timeout =
account.120.sip_server.1.register_on_enable =
account.120.sip_server.1.failback_subscribe.enable =
account.120.sip_server.1.invite_retry_counts =
account.120.sip_server.1.only_signal_with_registered =

account.120.sip_server.2.failback_mode =
account.120.sip_server.2.failback_timeout =
account.120.sip_server.2.register_on_enable =
account.120.sip_server.2.failback_subscribe.enable =
account.120.sip_server.2.invite_retry_counts =
account.120.sip_server.2.only_signal_with_registered =

account.120.naptr_build =
account.120.fallback.redundancy_type =
account.120.fallback.timeout =

account.120.dns_cache_type =
account.120.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
##
#####
#####
```

```

account.120.anonymous_call =
account.120.reject_anonymous_call =
account.120.send_anonymous_code =
account.120.anonymous_call_oncode =
account.120.anonymous_call_offcode =
account.120.send_anonymous_rejection_code =
account.120.anonymous_reject_oncode =
account.120.anonymous_reject_offcode =

#####
#####
##
##                                Codec
##
#####
#####
account.120.codec.g722.enable =
account.120.codec.g722.priority =

account.120.codec.g729.enable =
account.120.codec.g729.priority =

account.120.codec.g726_16.enable =
account.120.codec.g726_16.priority =

account.120.codec.g726_24.enable =
account.120.codec.g726_24.priority =

account.120.codec.g726_32.enable =
account.120.codec.g726_32.priority =

account.120.codec.g726_40.enable =
account.120.codec.g726_40.priority =

account.120.codec.ilbc.enable =
account.120.codec.ilbc.priority =

account.120.codec.pcmu.enable =
account.120.codec.pcmu.priority =

account.120.codec.pcma.enable =
account.120.codec.pcma.priority =

account.120.codec.opus.enable =
account.120.codec.opus.priority =

#####
#####
##
##                                NAT Settings
##
#####
#####

account.120.nat.nat_traversal =
account.120.nat.udp_update_enable =
account.120.nat.udp_update_time =
account.120.nat.rport =

#####
#####
##
##                                Register Advanced
##

```

```
#####
#####

account.120.blf.subscribe_period =
account.120.dtmf.type =
account.120.dtmf.dtmf_payload =
account.120.dtmf.info_type =
account.120.100rel_enable =
account.120.subscribe_register =
account.120.subscribe_mwi =
account.120.subscribe_mwi_expires =
account.120.subscribe_mwi_to_vm =
voice_mail.number.120 = %BWVOICE-PORTAL-NUMBER-120%
account.120.display_mwi.enable =
account.120.cid_source =
account.120.cid_source_privacy =
account.120.cid_source_ppi =
account.120.session_timer.enable =
account.120.session_timer.expires =
account.120.session_timer.refresher =
account.120.enable_user_equal_phone =
account.120.srtp_encryption =
account.120.ptime =
account.120.shared_line = %BWSHAREDLINE-BINARY-120%
account.120.register_mac =
account.120.register_line =
account.120.reg_fail_retry_interval =
account.120.reg_failed_retry_min_time =
account.120.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.120.conf_type =
account.120.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-120%

account.120.sip_server_type =
account.120.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.120.register_expires_overlap =
account.120.subscribe_expires_overlap =
account.120.auto_dial_enable =
account.120.auto_dial_num =
account.120.cp_source =
account.120.transfer_refer_to_contact_header.enable =
#V80 Add
account.120.custom_ua =
account.120.callpark_enable =
account.120.check_cseq.enable =
account.120.check_to_tag.enable =
account.120.hold_use_inactive =
```

```

account.120.line_seize.expires =
account.120.update_ack_while_dialing =
account.120.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.120.always_fwd.enable =
account.120.always_fwd.target =
account.120.always_fwd.off_code =
account.120.always_fwd.on_code =
account.120.busy_fwd.enable =
account.120.busy_fwd.target =
account.120.busy_fwd.off_code =
account.120.busy_fwd.on_code =
account.120.timeout_fwd.enable =
account.120.timeout_fwd.target =
account.120.timeout_fwd.timeout =
account.120.timeout_fwd.off_code =
account.120.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.120.dnd.enable =
account.120.dnd.on_code =
account.120.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.120.reg.enable =
handset.120.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.120.xsi.user =%BWLOGIN-ID-120%
account.120.xsi.password =%XSIPASSWORD-120%
account.120.xsi.host =%XSP_ADDRESS%
account.120.xsi.server_type =
account.120.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.120.ldap.enable =
handset.120.ldap.name_filter=
handset.120.ldap.number_filter=
handset.120.ldap.host=
handset.120.ldap.port=
handset.120.ldap.base=
handset.120.ldap.user=
handset.120.ldap.password=
handset.120.ldap.max_hits=
handset.120.ldap.name_attr=
handset.120.ldap.numb_attr=
handset.120.ldap.display_name=
handset.120.ldap.version=
handset.120.ldap.call_in_lookup=
handset.120.ldap.ldap_sort=
handset.120.ldap.tls_mode=
handset.120.ldap.call_out_lookup=
handset.120.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account121 Settings
##
#####
#####

account.121.enable=%BWLIN-BINARY-121%
account.121.label=%BWEXTENSION-121%
account.121.display_name=%BWCLID-121%
account.121.auth_name=%BWAUTHUSER-121%
account.121.user_name=%BWLINPORT-121%
account.121.password=%BWAUTHPASSWORD-121%

#W80B ADD
account.121.sip_server.template =
account.121.media_transmit.enable =

account.121.alarm.template =
account.121.alarm.server =
account.121.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.121.sip_server.1.failback_mode =
account.121.sip_server.1.failback_timeout =
account.121.sip_server.1.register_on_enable =
account.121.sip_server.1.failback_subscribe.enable =
account.121.sip_server.1.invite_retry_counts =
account.121.sip_server.1.only_signal_with_registered =

account.121.sip_server.2.failback_mode =
account.121.sip_server.2.failback_timeout =
account.121.sip_server.2.register_on_enable =
account.121.sip_server.2.failback_subscribe.enable =
```

```
account.121.sip_server.2.invite_retry_counts =
account.121.sip_server.2.only_signal_with_registered =

account.121.naptr_build =
account.121.fallback.redundancy_type =
account.121.fallback.timeout =

account.121.dns_cache_type =
account.121.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.121.anonymous_call =
account.121.reject_anonymous_call =
account.121.send_anonymous_code =
account.121.anonymous_call_oncode =
account.121.anonymous_call_offcode =
account.121.send_anonymous_rejection_code =
account.121.anonymous_reject_oncode =
account.121.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.121.codec.g722.enable =
account.121.codec.g722.priority =

account.121.codec.g729.enable =
account.121.codec.g729.priority =

account.121.codec.g726_16.enable =
account.121.codec.g726_16.priority =

account.121.codec.g726_24.enable =
account.121.codec.g726_24.priority =

account.121.codec.g726_32.enable =
account.121.codec.g726_32.priority =

account.121.codec.g726_40.enable =
account.121.codec.g726_40.priority =

account.121.codec.ilbc.enable =
account.121.codec.ilbc.priority =

account.121.codec.pcmu.enable =
account.121.codec.pcmu.priority =

account.121.codec.pcma.enable =
account.121.codec.pcma.priority =

account.121.codec.opus.enable =
account.121.codec.opus.priority =
```

```
#####
#####
##                               NAT Settings
##
#####
#####

account.121.nat.nat_traversal =
account.121.nat.udp_update_enable =
account.121.nat.udp_update_time =
account.121.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.121.blf.subscribe_period =
account.121.dtmf.type =
account.121.dtmf.dtmf_payload =
account.121.dtmf.info_type =
account.121.100rel_enable =
account.121.subscribe_register =
account.121.subscribe_mwi =
account.121.subscribe_mwi_expires =
account.121.subscribe_mwi_to_vm =
voice_mail.number.121 = %BWVOICE-PORTAL-NUMBER-121%
account.121.display_mwi.enable =
account.121.cid_source =
account.121.cid_source_privacy =
account.121.cid_source_ppi =
account.121.session_timer.enable =
account.121.session_timer.expires =
account.121.session_timer.refresher =
account.121.enable_user_equal_phone =
account.121.srtp_encryption =
account.121.ptime =
account.121.shared_line = %BWSHAREDLINE-BINARY-121%
account.121.register_mac =
account.121.register_line =
account.121.reg_fail_retry_interval =
account.121.reg_failed_retry_min_time =
account.121.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.121.conf_type =
account.121.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-121%

account.121.sip_server_type =
account.121.unregister_on_reboot =

#####
#####
##                               Register Other
##
```



```
#####
#####
##DECT V81 Add

account.121.register_expires_overlap =
account.121.subscribe_expires_overlap =
account.121.auto_dial_enable =
account.121.auto_dial_num =
account.121.cp_source =
account.121.transfer_refer_to_contact_header.enable =
#V80 Add
account.121.custom_ua =
account.121.callpark_enable =
account.121.check_cseq.enable =
account.121.check_to_tag.enable =
account.121.hold_use_inactive =
account.121.line_seize.expires =
account.121.update_ack_while_dialing =
account.121.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.121.always_fwd.enable =
account.121.always_fwd.target =
account.121.always_fwd.off_code =
account.121.always_fwd.on_code =
account.121.busy_fwd.enable =
account.121.busy_fwd.target =
account.121.busy_fwd.off_code =
account.121.busy_fwd.on_code =
account.121.timeout_fwd.enable =
account.121.timeout_fwd.target =
account.121.timeout_fwd.timeout =
account.121.timeout_fwd.off_code =
account.121.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.121.dnd.enable =
account.121.dnd.on_code =
account.121.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.121.reg.enable =
handset.121.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.121.xsi.user =%BWLOGIN-ID-121%
account.121.xsi.password =%XSIPASSWORD-121%
account.121.xsi.host =%XSP_ADDRESS%
account.121.xsi.server_type =
account.121.xsi.port =

#####
#####
##          LADP
##
#####
handset.121.ldap.enable =
handset.121.ldap.name_filter=
handset.121.ldap.number_filter=
handset.121.ldap.host=
handset.121.ldap.port=
handset.121.ldap.base=
handset.121.ldap.user=
handset.121.ldap.password=
handset.121.ldap.max_hits=
handset.121.ldap.name_attr=
handset.121.ldap.numb_attr=
handset.121.ldap.display_name=
handset.121.ldap.version=
handset.121.ldap.call_in_lookup=
handset.121.ldap.ldap_sort=
handset.121.ldap.tls_mode=
handset.121.ldap.call_out_lookup=
handset.121.ldap.incoming_call_special_search.enable=

#####
#####
##          Account122 Settings
##
#####

account.122.enable=%BWLINE-BINARY-122%
account.122.label=%BWEXTENSION-122%
account.122.display_name=%BWCLID-122%
account.122.auth_name=%BWAUTHUSER-122%
account.122.user_name=%BWLINEPORT-122%
account.122.password=%BWAUTHPASSWORD-122%

#W80B ADD
account.122.sip_server.template =
account.122.media_transmit.enable =

account.122.alarm.template =
account.122.alarm.server =
account.122.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.122.sip_server.1.failback_mode =
account.122.sip_server.1.failback_timeout =
account.122.sip_server.1.register_on_enable =
account.122.sip_server.1.failback_subscribe.enable =
account.122.sip_server.1.invite_retry_counts =
account.122.sip_server.1.only_signal_with_registered =

account.122.sip_server.2.failback_mode =
account.122.sip_server.2.failback_timeout =
account.122.sip_server.2.register_on_enable =
account.122.sip_server.2.failback_subscribe.enable =
account.122.sip_server.2.invite_retry_counts =
account.122.sip_server.2.only_signal_with_registered =

account.122.naptr_build =
account.122.fallback.redundancy_type =
account.122.fallback.timeout =

account.122.dns_cache_type =
account.122.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.122.anonymous_call =
account.122.reject_anonymous_call =
account.122.send_anonymous_code =
account.122.anonymous_call_oncode =
account.122.anonymous_call_offcode =
account.122.send_anonymous_rejection_code =
account.122.anonymous_reject_oncode =
account.122.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.122.codec.g722.enable =
account.122.codec.g722.priority =

account.122.codec.g729.enable =
account.122.codec.g729.priority =

account.122.codec.g726_16.enable =
account.122.codec.g726_16.priority =

account.122.codec.g726_24.enable =
account.122.codec.g726_24.priority =

account.122.codec.g726_32.enable =
account.122.codec.g726_32.priority =
```

```

account.122.codec.g726_40.enable =
account.122.codec.g726_40.priority =

account.122.codec.ilbc.enable =
account.122.codec.ilbc.priority =

account.122.codec.pcmu.enable =
account.122.codec.pcmu.priority =

account.122.codec.pcma.enable =
account.122.codec.pcma.priority =

account.122.codec.opus.enable =
account.122.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.122.nat.nat_traversal =
account.122.nat.udp_update_enable =
account.122.nat.udp_update_time =
account.122.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.122.blf.subscribe_period =
account.122.dtmf.type =
account.122.dtmf.dtmf_payload =
account.122.dtmf.info_type =
account.122.100rel_enable =
account.122.subscribe_register =
account.122.subscribe_mwi =
account.122.subscribe_mwi_expires =
account.122.subscribe_mwi_to_vm =
voice_mail.number.122 = %BWVOICE-PORTAL-NUMBER-122%
account.122.display_mwi.enable =
account.122.cid_source =
account.122.cid_source_privacy =
account.122.cid_source_ppi =
account.122.session_timer.enable =
account.122.session_timer.expires =
account.122.session_timer.refresher =
account.122.enable_user_equal_phone =
account.122.srtp_encryption =
account.122.ptime =
account.122.shared_line = %BWSHAREDLINE-BINARY-122%
account.122.register_mac =
account.122.register_line =
account.122.reg_fail_retry_interval =
account.122.reg_failed_retry_min_time =
account.122.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.122.conf_type =
account.122.conf_uri = %BWNWORK-CONFERENCE-SIPURI-122%

account.122.sip_server_type =
account.122.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.122.register_expires_overlap =
account.122.subscribe_expires_overlap =
account.122.auto_dial_enable =
account.122.auto_dial_num =
account.122.cp_source =
account.122.transfer_refer_to_contact_header.enable =
#V80 Add
account.122.custom_ua =
account.122.callpark_enable =
account.122.check_cseq.enable =
account.122.check_to_tag.enable =
account.122.hold_use_inactive =
account.122.line_seize.expires =
account.122.update_ack_while_dialing =
account.122.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.122.always_fwd.enable =
account.122.always_fwd.target =
account.122.always_fwd.off_code =
account.122.always_fwd.on_code =
account.122.busy_fwd.enable =
account.122.busy_fwd.target =
account.122.busy_fwd.off_code =
account.122.busy_fwd.on_code =
account.122.timeout_fwd.enable =
account.122.timeout_fwd.target =
account.122.timeout_fwd.timeout =
account.122.timeout_fwd.off_code =
account.122.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```
account.122.dnd.enable =
account.122.dnd.on_code =
account.122.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.122.reg.enable =
handset.122.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.122.xsi.user =%BWLOGIN-ID-122%
account.122.xsi.password =%XSIPASSWORD-122%
account.122.xsi.host =%XSP_ADDRESS%
account.122.xsi.server_type =
account.122.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.122.ldap.enable =
handset.122.ldap.name_filter=
handset.122.ldap.number_filter=
handset.122.ldap.host=
handset.122.ldap.port=
handset.122.ldap.base=
handset.122.ldap.user=
handset.122.ldap.password=
handset.122.ldap.max_hits=
handset.122.ldap.name_attr=
handset.122.ldap.numb_attr=
handset.122.ldap.display_name=
handset.122.ldap.version=
handset.122.ldap.call_in_lookup=
handset.122.ldap.ldap_sort=
handset.122.ldap.tls_mode=
handset.122.ldap.call_out_lookup=
handset.122.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account123 Settings
##
#####
#####
```

```

account.123.enable=%BWLIN-BINARY-123%
account.123.label=%BWEXTENSION-123%
account.123.display_name=%BWCLID-123%
account.123.auth_name=%BWAUTHUSER-123%
account.123.user_name=%BWLINPORT-123%
account.123.password=%BWAUTHPASSWORD-123%

#W80B ADD
account.123.sip_server.template =
account.123.media_transmit.enable =

account.123.alarm.template =
account.123.alarm.server =
account.123.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.123.sip_server.1.failback_mode =
account.123.sip_server.1.failback_timeout =
account.123.sip_server.1.register_on_enable =
account.123.sip_server.1.failback_subscribe.enable =
account.123.sip_server.1.invite_retry_counts =
account.123.sip_server.1.only_signal_with_registered =

account.123.sip_server.2.failback_mode =
account.123.sip_server.2.failback_timeout =
account.123.sip_server.2.register_on_enable =
account.123.sip_server.2.failback_subscribe.enable =
account.123.sip_server.2.invite_retry_counts =
account.123.sip_server.2.only_signal_with_registered =

account.123.naptr_build =
account.123.fallback.redundancy_type =
account.123.fallback.timeout =

account.123.dns_cache_type =
account.123.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.123.anonymous_call =
account.123.reject_anonymous_call =
account.123.send_anonymous_code =
account.123.anonymous_call_oncode =
account.123.anonymous_call_offcode =
account.123.send_anonymous_rejection_code =
account.123.anonymous_reject_oncode =
account.123.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.123.codec.g722.enable =
account.123.codec.g722.priority =

account.123.codec.g729.enable =
account.123.codec.g729.priority =

account.123.codec.g726_16.enable =
account.123.codec.g726_16.priority =

account.123.codec.g726_24.enable =
account.123.codec.g726_24.priority =

account.123.codec.g726_32.enable =
account.123.codec.g726_32.priority =

account.123.codec.g726_40.enable =
account.123.codec.g726_40.priority =

account.123.codec.ilbc.enable =
account.123.codec.ilbc.priority =

account.123.codec.pcmu.enable =
account.123.codec.pcmu.priority =

account.123.codec.pcma.enable =
account.123.codec.pcma.priority =

account.123.codec.opus.enable =
account.123.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.123.nat.nat_traversal =
account.123.nat.udp_update_enable =
account.123.nat.udp_update_time =
account.123.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.123.blf.subscribe_period =
account.123.dtmf.type =
account.123.dtmf.dtmf_payload =
account.123.dtmf.info_type =
account.123.100rel_enable =
account.123.subscribe_register =
account.123.subscribe_mwi =
account.123.subscribe_mwi_expires =
account.123.subscribe_mwi_to_vm =
voice_mail.number.123 = %BWVOICE-PORTAL-NUMBER-123%
account.123.display_mwi.enable =
account.123.cid_source =
```



```

account.123.cid_source_privacy =
account.123.cid_source_ppi =
account.123.session_timer.enable =
account.123.session_timer.expires =
account.123.session_timer.refreshes =
account.123.enable_user_equal_phone =
account.123.srtp_encryption =
account.123.ptime =
account.123.shared_line = %BWSHAREDLINE-BINARY-123%
account.123.register_mac =
account.123.register_line =
account.123.reg_fail_retry_interval =
account.123.reg_failed_retry_min_time =
account.123.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.123.conf_type =
account.123.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-123%

account.123.sip_server_type =
account.123.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.123.register_expires_overlap =
account.123.subscribe_expires_overlap =
account.123.auto_dial_enable =
account.123.auto_dial_num =
account.123.cp_source =
account.123.transfer_refer_to_contact_header.enable =
#V80 Add
account.123.custom_ua =
account.123.callpark_enable =
account.123.check_cseq.enable =
account.123.check_to_tag.enable =
account.123.hold_use_inactive =
account.123.line_seize.expires =
account.123.update_ack_while_dialing =
account.123.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.123.always_fwd.enable =
account.123.always_fwd.target =
account.123.always_fwd.off_code =
account.123.always_fwd.on_code =
account.123.busy_fwd.enable =

```

```

account.123.busy_fwd.target =
account.123.busy_fwd.off_code =
account.123.busy_fwd.on_code =
account.123.timeout_fwd.enable =
account.123.timeout_fwd.target =
account.123.timeout_fwd.timeout =
account.123.timeout_fwd.off_code =
account.123.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.123.dnd.enable =
account.123.dnd.on_code =
account.123.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.123.reg.enable =
handset.123.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.123.xsi.user =%BWLOGIN-ID-123%
account.123.xsi.password =%XSIPASSWORD-123%
account.123.xsi.host =%XSP_ADDRESS%
account.123.xsi.server_type =
account.123.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.123.ldap.enable =
handset.123.ldap.name_filter=
handset.123.ldap.number_filter=
handset.123.ldap.host=
handset.123.ldap.port=
handset.123.ldap.base=
handset.123.ldap.user=
handset.123.ldap.password=
handset.123.ldap.max_hits=
handset.123.ldap.name_attr=
handset.123.ldap.numb_attr=
handset.123.ldap.display_name=
handset.123.ldap.version=
handset.123.ldap.call_in_lookup=

```

```
handset.123.ldap.ldap_sort=
handset.123.ldap.tls_mode=
handset.123.ldap.call_out_lookup=
handset.123.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account124 Settings
##
#####
#####

account.124.enable=%BWLIN-BINARY-124%
account.124.label=%BWEXTENSION-124%
account.124.display_name=%BWCLID-124%
account.124.auth_name=%BWAUTHUSER-124%
account.124.user_name=%BWLINPORT-124%
account.124.password=%BWAUTHPASSWORD-124%

#W80B ADD
account.124.sip_server.template =
account.124.media_transmit.enable =

account.124.alarm.template =
account.124.alarm.server =
account.124.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.124.sip_server.1.failback_mode =
account.124.sip_server.1.failback_timeout =
account.124.sip_server.1.register_on_enable =
account.124.sip_server.1.failback_subscribe.enable =
account.124.sip_server.1.invite_retry_counts =
account.124.sip_server.1.only_signal_with_registered =

account.124.sip_server.2.failback_mode =
account.124.sip_server.2.failback_timeout =
account.124.sip_server.2.register_on_enable =
account.124.sip_server.2.failback_subscribe.enable =
account.124.sip_server.2.invite_retry_counts =
account.124.sip_server.2.only_signal_with_registered =

account.124.naptr_build =
account.124.fallback.redundancy_type =
account.124.fallback.timeout =

account.124.dns_cache_type =
account.124.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
```

```
account.124.anonymous_call =
account.124.reject_anonymous_call =
account.124.send_anonymous_code =
account.124.anonymous_call_oncode =
account.124.anonymous_call_offcode =
account.124.send_anonymous_rejection_code =
account.124.anonymous_reject_oncode =
account.124.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.124.codec.g722.enable =
account.124.codec.g722.priority =

account.124.codec.g729.enable =
account.124.codec.g729.priority =

account.124.codec.g726_16.enable =
account.124.codec.g726_16.priority =

account.124.codec.g726_24.enable =
account.124.codec.g726_24.priority =

account.124.codec.g726_32.enable =
account.124.codec.g726_32.priority =

account.124.codec.g726_40.enable =
account.124.codec.g726_40.priority =

account.124.codec.ilbc.enable =
account.124.codec.ilbc.priority =

account.124.codec.pcmu.enable =
account.124.codec.pcmu.priority =

account.124.codec.pcma.enable =
account.124.codec.pcma.priority =

account.124.codec.opus.enable =
account.124.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
##
#####
#####

account.124.nat.nat_traversal =
account.124.nat.udp_update_enable =
account.124.nat.udp_update_time =
account.124.nat.rport =

#####
#####
##                                     Register Advanced
##
##
```

```
#####
#####

account.124.blf.subscribe_period =
account.124.dtmf.type =
account.124.dtmf.dtmf_payload =
account.124.dtmf.info_type =
account.124.100rel_enable =
account.124.subscribe_register =
account.124.subscribe_mwi =
account.124.subscribe_mwi_expires =
account.124.subscribe_mwi_to_vm =
voice_mail.number.124 = %BWVOICE-PORTAL-NUMBER-124%
account.124.display_mwi.enable =
account.124.cid_source =
account.124.cid_source_privacy =
account.124.cid_source_ppi =
account.124.session_timer.enable =
account.124.session_timer.expires =
account.124.session_timer.refreshes =
account.124.enable_user_equal_phone =
account.124.srtp_encryption =
account.124.ptime =
account.124.shared_line = %BWSHAREDLINE-BINARY-124%
account.124.register_mac =
account.124.register_line =
account.124.reg_fail_retry_interval =
account.124.reg_failed_retry_min_time =
account.124.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.124.conf_type =
account.124.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-124%

account.124.sip_server_type =
account.124.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.124.register_expires_overlap =
account.124.subscribe_expires_overlap =
account.124.auto_dial_enable =
account.124.auto_dial_num =
account.124.cp_source =
account.124.transfer_refer_to_contact_header.enable =
#V80 Add
account.124.custom_ua =
account.124.callpark_enable =
account.124.check_cseq.enable =
account.124.check_to_tag.enable =
account.124.hold_use_inactive =
```

```

account.124.line_seize.expires =
account.124.update_ack_while_dialing =
account.124.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.124.always_fwd.enable =
account.124.always_fwd.target =
account.124.always_fwd.off_code =
account.124.always_fwd.on_code =
account.124.busy_fwd.enable =
account.124.busy_fwd.target =
account.124.busy_fwd.off_code =
account.124.busy_fwd.on_code =
account.124.timeout_fwd.enable =
account.124.timeout_fwd.target =
account.124.timeout_fwd.timeout =
account.124.timeout_fwd.off_code =
account.124.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.124.dnd.enable =
account.124.dnd.on_code =
account.124.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.124.reg.enable =
handset.124.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.124.xsi.user =%BWLOGIN-ID-124%
account.124.xsi.password =%XSIPASSWORD-124%
account.124.xsi.host =%XSP_ADDRESS%
account.124.xsi.server_type =
account.124.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.124.ldap.enable =
handset.124.ldap.name_filter=
handset.124.ldap.number_filter=
handset.124.ldap.host=
handset.124.ldap.port=
handset.124.ldap.base=
handset.124.ldap.user=
handset.124.ldap.password=
handset.124.ldap.max_hits=
handset.124.ldap.name_attr=
handset.124.ldap.numb_attr=
handset.124.ldap.display_name=
handset.124.ldap.version=
handset.124.ldap.call_in_lookup=
handset.124.ldap.ldap_sort=
handset.124.ldap.tls_mode=
handset.124.ldap.call_out_lookup=
handset.124.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account125 Settings
##
#####
#####

account.125.enable=%BWLIN-BINARY-125%
account.125.label=%BWEXTENSION-125%
account.125.display_name=%BWCLID-125%
account.125.auth_name=%BWAUTHUSER-125%
account.125.user_name=%BWLINPORT-125%
account.125.password=%BWAUTHPASSWORD-125%

#W80B ADD
account.125.sip_server.template =
account.125.media_transmit.enable =

account.125.alarm.template =
account.125.alarm.server =
account.125.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.125.sip_server.1.failback_mode =
account.125.sip_server.1.failback_timeout =
account.125.sip_server.1.register_on_enable =
account.125.sip_server.1.failback_subscribe.enable =
account.125.sip_server.1.invite_retry_counts =
account.125.sip_server.1.only_signal_with_registered =

account.125.sip_server.2.failback_mode =
account.125.sip_server.2.failback_timeout =
account.125.sip_server.2.register_on_enable =
account.125.sip_server.2.failback_subscribe.enable =
```

```
account.125.sip_server.2.invite_retry_counts =
account.125.sip_server.2.only_signal_with_registered =

account.125.naptr_build =
account.125.fallback.redundancy_type =
account.125.fallback.timeout =

account.125.dns_cache_type =
account.125.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.125.anonymous_call =
account.125.reject_anonymous_call =
account.125.send_anonymous_code =
account.125.anonymous_call_oncode =
account.125.anonymous_call_offcode =
account.125.send_anonymous_rejection_code =
account.125.anonymous_reject_oncode =
account.125.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.125.codec.g722.enable =
account.125.codec.g722.priority =

account.125.codec.g729.enable =
account.125.codec.g729.priority =

account.125.codec.g726_16.enable =
account.125.codec.g726_16.priority =

account.125.codec.g726_24.enable =
account.125.codec.g726_24.priority =

account.125.codec.g726_32.enable =
account.125.codec.g726_32.priority =

account.125.codec.g726_40.enable =
account.125.codec.g726_40.priority =

account.125.codec.ilbc.enable =
account.125.codec.ilbc.priority =

account.125.codec.pcmu.enable =
account.125.codec.pcmu.priority =

account.125.codec.pcma.enable =
account.125.codec.pcma.priority =

account.125.codec.opus.enable =
account.125.codec.opus.priority =
```



```
#####
#####
##                               NAT Settings
##
#####
#####

account.125.nat.nat_traversal =
account.125.nat.udp_update_enable =
account.125.nat.udp_update_time =
account.125.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.125.blf.subscribe_period =
account.125.dtmf.type =
account.125.dtmf.dtmf_payload =
account.125.dtmf.info_type =
account.125.100rel_enable =
account.125.subscribe_register =
account.125.subscribe_mwi =
account.125.subscribe_mwi_expires =
account.125.subscribe_mwi_to_vm =
voice_mail.number.125 = %BWVOICE-PORTAL-NUMBER-125%
account.125.display_mwi.enable =
account.125.cid_source =
account.125.cid_source_privacy =
account.125.cid_source_ppi =
account.125.session_timer.enable =
account.125.session_timer.expires =
account.125.session_timer.refresher =
account.125.enable_user_equal_phone =
account.125.srtp_encryption =
account.125.ptime =
account.125.shared_line = %BWSHAREDLINE-BINARY-125%
account.125.register_mac =
account.125.register_line =
account.125.reg_fail_retry_interval =
account.125.reg_failed_retry_min_time =
account.125.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.125.conf_type =
account.125.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-125%

account.125.sip_server_type =
account.125.unregister_on_reboot =

#####
#####
##                               Register Other
##
##
```

```
#####
#####
##DECT V81 Add

account.125.register_expires_overlap =
account.125.subscribe_expires_overlap =
account.125.auto_dial_enable =
account.125.auto_dial_num =
account.125.cp_source =
account.125.transfer_refer_to_contact_header.enable =
#V80 Add
account.125.custom_ua =
account.125.callpark_enable =
account.125.check_cseq.enable =
account.125.check_to_tag.enable =
account.125.hold_use_inactive =
account.125.line_seize.expires =
account.125.update_ack_while_dialing =
account.125.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.125.always_fwd.enable =
account.125.always_fwd.target =
account.125.always_fwd.off_code =
account.125.always_fwd.on_code =
account.125.busy_fwd.enable =
account.125.busy_fwd.target =
account.125.busy_fwd.off_code =
account.125.busy_fwd.on_code =
account.125.timeout_fwd.enable =
account.125.timeout_fwd.target =
account.125.timeout_fwd.timeout =
account.125.timeout_fwd.off_code =
account.125.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.125.dnd.enable =
account.125.dnd.on_code =
account.125.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.125.reg.enable =
handset.125.ipui =

#####
#####
```

```
##          Broadsoft XSI
##
#####

account.125.xsi.user =%BWLOGIN-ID-125%
account.125.xsi.password =%XSIPASSWORD-125%
account.125.xsi.host =%XSP_ADDRESS%
account.125.xsi.server_type =
account.125.xsi.port =

#####
#####
##          LADP
##
#####
handset.125.ldap.enable =
handset.125.ldap.name_filter=
handset.125.ldap.number_filter=
handset.125.ldap.host=
handset.125.ldap.port=
handset.125.ldap.base=
handset.125.ldap.user=
handset.125.ldap.password=
handset.125.ldap.max_hits=
handset.125.ldap.name_attr=
handset.125.ldap.numb_attr=
handset.125.ldap.display_name=
handset.125.ldap.version=
handset.125.ldap.call_in_lookup=
handset.125.ldap.ldap_sort=
handset.125.ldap.tls_mode=
handset.125.ldap.call_out_lookup=
handset.125.ldap.incoming_call_special_search.enable=

#####
#####
##          Account126 Settings
##
#####

account.126.enable=%BWLINE-BINARY-126%
account.126.label=%BWEXTENSION-126%
account.126.display_name=%BWCLID-126%
account.126.auth_name=%BWAUTHUSER-126%
account.126.user_name=%BWLINEPORT-126%
account.126.password=%BWAUTHPASSWORD-126%

#W80B ADD
account.126.sip_server.template =
account.126.media_transmit.enable =

account.126.alarm.template =
account.126.alarm.server =
account.126.alarm.number =
```

```
#####
#####
##                               Failback
##
#####
#####
account.126.sip_server.1.failback_mode =
account.126.sip_server.1.failback_timeout =
account.126.sip_server.1.register_on_enable =
account.126.sip_server.1.failback_subscribe.enable =
account.126.sip_server.1.invite_retry_counts =
account.126.sip_server.1.only_signal_with_registered =

account.126.sip_server.2.failback_mode =
account.126.sip_server.2.failback_timeout =
account.126.sip_server.2.register_on_enable =
account.126.sip_server.2.failback_subscribe.enable =
account.126.sip_server.2.invite_retry_counts =
account.126.sip_server.2.only_signal_with_registered =

account.126.naptr_build =
account.126.fallback.redundancy_type =
account.126.fallback.timeout =

account.126.dns_cache_type =
account.126.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.126.anonymous_call =
account.126.reject_anonymous_call =
account.126.send_anonymous_code =
account.126.anonymous_call_oncode =
account.126.anonymous_call_offcode =
account.126.send_anonymous_rejection_code =
account.126.anonymous_reject_oncode =
account.126.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.126.codec.g722.enable =
account.126.codec.g722.priority =

account.126.codec.g729.enable =
account.126.codec.g729.priority =

account.126.codec.g726_16.enable =
account.126.codec.g726_16.priority =

account.126.codec.g726_24.enable =
account.126.codec.g726_24.priority =

account.126.codec.g726_32.enable =
account.126.codec.g726_32.priority =
```

```

account.126.codec.g726_40.enable =
account.126.codec.g726_40.priority =

account.126.codec.ilbc.enable =
account.126.codec.ilbc.priority =

account.126.codec.pcmu.enable =
account.126.codec.pcmu.priority =

account.126.codec.pcma.enable =
account.126.codec.pcma.priority =

account.126.codec.opus.enable =
account.126.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.126.nat.nat_traversal =
account.126.nat.udp_update_enable =
account.126.nat.udp_update_time =
account.126.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.126.blf.subscribe_period =
account.126.dtmf.type =
account.126.dtmf.dtmf_payload =
account.126.dtmf.info_type =
account.126.100rel_enable =
account.126.subscribe_register =
account.126.subscribe_mwi =
account.126.subscribe_mwi_expires =
account.126.subscribe_mwi_to_vm =
voice_mail.number.126 = %BWVOICE-PORTAL-NUMBER-126%
account.126.display_mwi.enable =
account.126.cid_source =
account.126.cid_source_privacy =
account.126.cid_source_ppi =
account.126.session_timer.enable =
account.126.session_timer.expires =
account.126.session_timer.refresher =
account.126.enable_user_equal_phone =
account.126.srtp_encryption =
account.126.ptime =
account.126.shared_line = %BWSHAREDLINE-BINARY-126%
account.126.register_mac =
account.126.register_line =
account.126.reg_fail_retry_interval =
account.126.reg_failed_retry_min_time =
account.126.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.126.conf_type =
account.126.conf_uri = %BWNWORK-CONFERENCE-SIPURI-126%

account.126.sip_server_type =
account.126.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.126.register_expires_overlap =
account.126.subscribe_expires_overlap =
account.126.auto_dial_enable =
account.126.auto_dial_num =
account.126.cp_source =
account.126.transfer_refer_to_contact_header.enable =
#V80 Add
account.126.custom_ua =
account.126.callpark_enable =
account.126.check_cseq.enable =
account.126.check_to_tag.enable =
account.126.hold_use_inactive =
account.126.line_seize.expires =
account.126.update_ack_while_dialing =
account.126.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.126.always_fwd.enable =
account.126.always_fwd.target =
account.126.always_fwd.off_code =
account.126.always_fwd.on_code =
account.126.busy_fwd.enable =
account.126.busy_fwd.target =
account.126.busy_fwd.off_code =
account.126.busy_fwd.on_code =
account.126.timeout_fwd.enable =
account.126.timeout_fwd.target =
account.126.timeout_fwd.timeout =
account.126.timeout_fwd.off_code =
account.126.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```

account.126.dnd.enable =
account.126.dnd.on_code =
account.126.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.126.reg.enable =
handset.126.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.126.xsi.user =%BWLOGIN-ID-126%
account.126.xsi.password =%XSIPASSWORD-126%
account.126.xsi.host =%XSP_ADDRESS%
account.126.xsi.server_type =
account.126.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.126.ldap.enable =
handset.126.ldap.name_filter=
handset.126.ldap.number_filter=
handset.126.ldap.host=
handset.126.ldap.port=
handset.126.ldap.base=
handset.126.ldap.user=
handset.126.ldap.password=
handset.126.ldap.max_hits=
handset.126.ldap.name_attr=
handset.126.ldap.numb_attr=
handset.126.ldap.display_name=
handset.126.ldap.version=
handset.126.ldap.call_in_lookup=
handset.126.ldap.ldap_sort=
handset.126.ldap.tls_mode=
handset.126.ldap.call_out_lookup=
handset.126.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account127 Settings
##
#####
#####

```

```

account.127.enable=%BWLIN-BINARY-127%
account.127.label=%BWEXTENSION-127%
account.127.display_name=%BWCLID-127%
account.127.auth_name=%BWAUTHUSER-127%
account.127.user_name=%BWLINPORT-127%
account.127.password=%BWAUTHPASSWORD-127%

#W80B ADD
account.127.sip_server.template =
account.127.media_transmit.enable =

account.127.alarm.template =
account.127.alarm.server =
account.127.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.127.sip_server.1.failback_mode =
account.127.sip_server.1.failback_timeout =
account.127.sip_server.1.register_on_enable =
account.127.sip_server.1.failback_subscribe.enable =
account.127.sip_server.1.invite_retry_counts =
account.127.sip_server.1.only_signal_with_registered =

account.127.sip_server.2.failback_mode =
account.127.sip_server.2.failback_timeout =
account.127.sip_server.2.register_on_enable =
account.127.sip_server.2.failback_subscribe.enable =
account.127.sip_server.2.invite_retry_counts =
account.127.sip_server.2.only_signal_with_registered =

account.127.naptr_build =
account.127.fallback.redundancy_type =
account.127.fallback.timeout =

account.127.dns_cache_type =
account.127.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.127.anonymous_call =
account.127.reject_anonymous_call =
account.127.send_anonymous_code =
account.127.anonymous_call_oncode =
account.127.anonymous_call_offcode =
account.127.send_anonymous_rejection_code =
account.127.anonymous_reject_oncode =
account.127.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```



```
#####
#####
account.127.codec.g722.enable =
account.127.codec.g722.priority =

account.127.codec.g729.enable =
account.127.codec.g729.priority =

account.127.codec.g726_16.enable =
account.127.codec.g726_16.priority =

account.127.codec.g726_24.enable =
account.127.codec.g726_24.priority =

account.127.codec.g726_32.enable =
account.127.codec.g726_32.priority =

account.127.codec.g726_40.enable =
account.127.codec.g726_40.priority =

account.127.codec.ilbc.enable =
account.127.codec.ilbc.priority =

account.127.codec.pcmu.enable =
account.127.codec.pcmu.priority =

account.127.codec.pcma.enable =
account.127.codec.pcma.priority =

account.127.codec.opus.enable =
account.127.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.127.nat.nat_traversal =
account.127.nat.udp_update_enable =
account.127.nat.udp_update_time =
account.127.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.127.blf.subscribe_period =
account.127.dtmf.type =
account.127.dtmf.dtmf_payload =
account.127.dtmf.info_type =
account.127.100rel_enable =
account.127.subscribe_register =
account.127.subscribe_mwi =
account.127.subscribe_mwi_expires =
account.127.subscribe_mwi_to_vm =
voice_mail.number.127 = %BWVOICE-PORTAL-NUMBER-127%
account.127.display_mwi.enable =
account.127.cid_source =
```

```

account.127.cid_source_privacy =
account.127.cid_source_ppi =
account.127.session_timer.enable =
account.127.session_timer.expires =
account.127.session_timer.refresher =
account.127.enable_user_equal_phone =
account.127.srtp_encryption =
account.127.ptime =
account.127.shared_line = %BWSHAREDLINE-BINARY-127%
account.127.register_mac =
account.127.register_line =
account.127.reg_fail_retry_interval =
account.127.reg_failed_retry_min_time =
account.127.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.127.conf_type =
account.127.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-127%

account.127.sip_server_type =
account.127.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.127.register_expires_overlap =
account.127.subscribe_expires_overlap =
account.127.auto_dial_enable =
account.127.auto_dial_num =
account.127.cp_source =
account.127.transfer_refer_to_contact_header.enable =
#V80 Add
account.127.custom_ua =
account.127.callpark_enable =
account.127.check_cseq.enable =
account.127.check_to_tag.enable =
account.127.hold_use_inactive =
account.127.line_seize.expires =
account.127.update_ack_while_dialing =
account.127.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.127.always_fwd.enable =
account.127.always_fwd.target =
account.127.always_fwd.off_code =
account.127.always_fwd.on_code =
account.127.busy_fwd.enable =

```

```
account.127.busy_fwd.target =
account.127.busy_fwd.off_code =
account.127.busy_fwd.on_code =
account.127.timeout_fwd.enable =
account.127.timeout_fwd.target =
account.127.timeout_fwd.timeout =
account.127.timeout_fwd.off_code =
account.127.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.127.dnd.enable =
account.127.dnd.on_code =
account.127.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.127.reg.enable =
handset.127.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####
account.127.xsi.user =%BWLOGIN-ID-127%
account.127.xsi.password =%XSIPASSWORD-127%
account.127.xsi.host =%XSP_ADDRESS%
account.127.xsi.server_type =
account.127.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.127.ldap.enable =
handset.127.ldap.name_filter=
handset.127.ldap.number_filter=
handset.127.ldap.host=
handset.127.ldap.port=
handset.127.ldap.base=
handset.127.ldap.user=
handset.127.ldap.password=
handset.127.ldap.max_hits=
handset.127.ldap.name_attr=
handset.127.ldap.numb_attr=
handset.127.ldap.display_name=
handset.127.ldap.version=
handset.127.ldap.call_in_lookup=
```

```
handset.127.ldap.ldap_sort=
handset.127.ldap.tls_mode=
handset.127.ldap.call_out_lookup=
handset.127.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account128 Settings
##
#####
#####

account.128.enable=%BWLIN-BINARY-128%
account.128.label=%BWEXTENSION-128%
account.128.display_name=%BWCLID-128%
account.128.auth_name=%BWAUTHUSER-128%
account.128.user_name=%BWLINPORT-128%
account.128.password=%BWAUTHPASSWORD-128%

#W80B ADD
account.128.sip_server.template =
account.128.media_transmit.enable =

account.128.alarm.template =
account.128.alarm.server =
account.128.alarm.number =

#####
#####
##                               Failback
##
#####
#####

account.128.sip_server.1.failback_mode =
account.128.sip_server.1.failback_timeout =
account.128.sip_server.1.register_on_enable =
account.128.sip_server.1.failback_subscribe.enable =
account.128.sip_server.1.invite_retry_counts =
account.128.sip_server.1.only_signal_with_registered =

account.128.sip_server.2.failback_mode =
account.128.sip_server.2.failback_timeout =
account.128.sip_server.2.register_on_enable =
account.128.sip_server.2.failback_subscribe.enable =
account.128.sip_server.2.invite_retry_counts =
account.128.sip_server.2.only_signal_with_registered =

account.128.naptr_build =
account.128.fallback.redundancy_type =
account.128.fallback.timeout =

account.128.dns_cache_type =
account.128.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
```

```
account.128.anonymous_call =
account.128.reject_anonymous_call =
account.128.send_anonymous_code =
account.128.anonymous_call_oncode =
account.128.anonymous_call_offcode =
account.128.send_anonymous_rejection_code =
account.128.anonymous_reject_oncode =
account.128.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.128.codec.g722.enable =
account.128.codec.g722.priority =

account.128.codec.g729.enable =
account.128.codec.g729.priority =

account.128.codec.g726_16.enable =
account.128.codec.g726_16.priority =

account.128.codec.g726_24.enable =
account.128.codec.g726_24.priority =

account.128.codec.g726_32.enable =
account.128.codec.g726_32.priority =

account.128.codec.g726_40.enable =
account.128.codec.g726_40.priority =

account.128.codec.ilbc.enable =
account.128.codec.ilbc.priority =

account.128.codec.pcmu.enable =
account.128.codec.pcmu.priority =

account.128.codec.pcma.enable =
account.128.codec.pcma.priority =

account.128.codec.opus.enable =
account.128.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
##
#####
#####

account.128.nat.nat_traversal =
account.128.nat.udp_update_enable =
account.128.nat.udp_update_time =
account.128.nat.rport =

#####
#####
##                                     Register Advanced
##
##
```

```
#####
#####

account.128.blf.subscribe_period =
account.128.dtmf.type =
account.128.dtmf.dtmf_payload =
account.128.dtmf.info_type =
account.128.100rel_enable =
account.128.subscribe_register =
account.128.subscribe_mwi =
account.128.subscribe_mwi_expires =
account.128.subscribe_mwi_to_vm =
voice_mail.number.128 = %BWVOICE-PORTAL-NUMBER-128%
account.128.display_mwi.enable =
account.128.cid_source =
account.128.cid_source_privacy =
account.128.cid_source_ppi =
account.128.session_timer.enable =
account.128.session_timer.expires =
account.128.session_timer.refresher =
account.128.enable_user_equal_phone =
account.128.srtp_encryption =
account.128.ptime =
account.128.shared_line = %BWSHAREDLINE-BINARY-128%
account.128.register_mac =
account.128.register_line =
account.128.reg_fail_retry_interval =
account.128.reg_failed_retry_min_time =
account.128.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.128.conf_type =
account.128.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-128%

account.128.sip_server_type =
account.128.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.128.register_expires_overlap =
account.128.subscribe_expires_overlap =
account.128.auto_dial_enable =
account.128.auto_dial_num =
account.128.cp_source =
account.128.transfer_refer_to_contact_header.enable =
#V80 Add
account.128.custom_ua =
account.128.callpark_enable =
account.128.check_cseq.enable =
account.128.check_to_tag.enable =
account.128.hold_use_inactive =
```

```

account.128.line_seize.expires =
account.128.update_ack_while_dialing =
account.128.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.128.always_fwd.enable =
account.128.always_fwd.target =
account.128.always_fwd.off_code =
account.128.always_fwd.on_code =
account.128.busy_fwd.enable =
account.128.busy_fwd.target =
account.128.busy_fwd.off_code =
account.128.busy_fwd.on_code =
account.128.timeout_fwd.enable =
account.128.timeout_fwd.target =
account.128.timeout_fwd.timeout =
account.128.timeout_fwd.off_code =
account.128.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.128.dnd.enable =
account.128.dnd.on_code =
account.128.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.128.reg.enable =
handset.128.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.128.xsi.user =%BWLOGIN-ID-128%
account.128.xsi.password =%XSIPASSWORD-128%
account.128.xsi.host =%XSP_ADDRESS%
account.128.xsi.server_type =
account.128.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.128.ldap.enable =
handset.128.ldap.name_filter=
handset.128.ldap.number_filter=
handset.128.ldap.host=
handset.128.ldap.port=
handset.128.ldap.base=
handset.128.ldap.user=
handset.128.ldap.password=
handset.128.ldap.max_hits=
handset.128.ldap.name_attr=
handset.128.ldap.numb_attr=
handset.128.ldap.display_name=
handset.128.ldap.version=
handset.128.ldap.call_in_lookup=
handset.128.ldap.ldap_sort=
handset.128.ldap.tls_mode=
handset.128.ldap.call_out_lookup=
handset.128.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account129 Settings
##
#####
#####

account.129.enable=%BWLIN-BINARY-129%
account.129.label=%BWEXTENSION-129%
account.129.display_name=%BWCLID-129%
account.129.auth_name=%BWAUTHUSER-129%
account.129.user_name=%BWLINPORT-129%
account.129.password=%BWAUTHPASSWORD-129%

#W80B ADD
account.129.sip_server.template =
account.129.media_transmit.enable =

account.129.alarm.template =
account.129.alarm.server =
account.129.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.129.sip_server.1.failback_mode =
account.129.sip_server.1.failback_timeout =
account.129.sip_server.1.register_on_enable =
account.129.sip_server.1.failback_subscribe.enable =
account.129.sip_server.1.invite_retry_counts =
account.129.sip_server.1.only_signal_with_registered =

account.129.sip_server.2.failback_mode =
account.129.sip_server.2.failback_timeout =
account.129.sip_server.2.register_on_enable =
account.129.sip_server.2.failback_subscribe.enable =
```



```
account.129.sip_server.2.invite_retry_counts =
account.129.sip_server.2.only_signal_with_registered =

account.129.naptr_build =
account.129.fallback.redundancy_type =
account.129.fallback.timeout =

account.129.dns_cache_type =
account.129.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.129.anonymous_call =
account.129.reject_anonymous_call =
account.129.send_anonymous_code =
account.129.anonymous_call_oncode =
account.129.anonymous_call_offcode =
account.129.send_anonymous_rejection_code =
account.129.anonymous_reject_oncode =
account.129.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.129.codec.g722.enable =
account.129.codec.g722.priority =

account.129.codec.g729.enable =
account.129.codec.g729.priority =

account.129.codec.g726_16.enable =
account.129.codec.g726_16.priority =

account.129.codec.g726_24.enable =
account.129.codec.g726_24.priority =

account.129.codec.g726_32.enable =
account.129.codec.g726_32.priority =

account.129.codec.g726_40.enable =
account.129.codec.g726_40.priority =

account.129.codec.ilbc.enable =
account.129.codec.ilbc.priority =

account.129.codec.pcmu.enable =
account.129.codec.pcmu.priority =

account.129.codec.pcma.enable =
account.129.codec.pcma.priority =

account.129.codec.opus.enable =
account.129.codec.opus.priority =
```

```
#####
#####
##                               NAT Settings
##
#####
#####

account.129.nat.nat_traversal =
account.129.nat.udp_update_enable =
account.129.nat.udp_update_time =
account.129.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.129.blf.subscribe_period =
account.129.dtmf.type =
account.129.dtmf.dtmf_payload =
account.129.dtmf.info_type =
account.129.100rel_enable =
account.129.subscribe_register =
account.129.subscribe_mwi =
account.129.subscribe_mwi_expires =
account.129.subscribe_mwi_to_vm =
voice_mail.number.129 = %BWVOICE-PORTAL-NUMBER-129%
account.129.display_mwi.enable =
account.129.cid_source =
account.129.cid_source_privacy =
account.129.cid_source_ppi =
account.129.session_timer.enable =
account.129.session_timer.expires =
account.129.session_timer.refresher =
account.129.enable_user_equal_phone =
account.129.srtp_encryption =
account.129.ptime =
account.129.shared_line = %BWSHAREDLINE-BINARY-129%
account.129.register_mac =
account.129.register_line =
account.129.reg_fail_retry_interval =
account.129.reg_failed_retry_min_time =
account.129.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.129.conf_type =
account.129.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-129%

account.129.sip_server_type =
account.129.unregister_on_reboot =

#####
#####
##                               Register Other
##
```

```
#####
#####
##DECT V81 Add

account.129.register_expires_overlap =
account.129.subscribe_expires_overlap =
account.129.auto_dial_enable =
account.129.auto_dial_num =
account.129.cp_source =
account.129.transfer_refer_to_contact_header.enable =
#V80 Add
account.129.custom_ua =
account.129.callpark_enable =
account.129.check_cseq.enable =
account.129.check_to_tag.enable =
account.129.hold_use_inactive =
account.129.line_seize.expires =
account.129.update_ack_while_dialing =
account.129.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.129.always_fwd.enable =
account.129.always_fwd.target =
account.129.always_fwd.off_code =
account.129.always_fwd.on_code =
account.129.busy_fwd.enable =
account.129.busy_fwd.target =
account.129.busy_fwd.off_code =
account.129.busy_fwd.on_code =
account.129.timeout_fwd.enable =
account.129.timeout_fwd.target =
account.129.timeout_fwd.timeout =
account.129.timeout_fwd.off_code =
account.129.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.129.dnd.enable =
account.129.dnd.on_code =
account.129.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.129.reg.enable =
handset.129.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.129.xsi.user =%BWLOGIN-ID-129%
account.129.xsi.password =%XSIPASSWORD-129%
account.129.xsi.host =%XSP_ADDRESS%
account.129.xsi.server_type =
account.129.xsi.port =

#####
#####
##          LADP
##
#####
handset.129.ldap.enable =
handset.129.ldap.name_filter=
handset.129.ldap.number_filter=
handset.129.ldap.host=
handset.129.ldap.port=
handset.129.ldap.base=
handset.129.ldap.user=
handset.129.ldap.password=
handset.129.ldap.max_hits=
handset.129.ldap.name_attr=
handset.129.ldap.numb_attr=
handset.129.ldap.display_name=
handset.129.ldap.version=
handset.129.ldap.call_in_lookup=
handset.129.ldap.ldap_sort=
handset.129.ldap.tls_mode=
handset.129.ldap.call_out_lookup=
handset.129.ldap.incoming_call_special_search.enable=

#####
#####
##          Account130 Settings
##
#####

account.130.enable=%BWLINE-BINARY-130%
account.130.label=%BWEXTENSION-130%
account.130.display_name=%BWCLID-130%
account.130.auth_name=%BWAUTHUSER-130%
account.130.user_name=%BWLINEPORT-130%
account.130.password=%BWAUTHPASSWORD-130%

#W80B ADD
account.130.sip_server.template =
account.130.media_transmit.enable =

account.130.alarm.template =
account.130.alarm.server =
account.130.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.130.sip_server.1.failback_mode =
account.130.sip_server.1.failback_timeout =
account.130.sip_server.1.register_on_enable =
account.130.sip_server.1.failback_subscribe.enable =
account.130.sip_server.1.invite_retry_counts =
account.130.sip_server.1.only_signal_with_registered =

account.130.sip_server.2.failback_mode =
account.130.sip_server.2.failback_timeout =
account.130.sip_server.2.register_on_enable =
account.130.sip_server.2.failback_subscribe.enable =
account.130.sip_server.2.invite_retry_counts =
account.130.sip_server.2.only_signal_with_registered =

account.130.naptr_build =
account.130.fallback.redundancy_type =
account.130.fallback.timeout =

account.130.dns_cache_type =
account.130.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.130.anonymous_call =
account.130.reject_anonymous_call =
account.130.send_anonymous_code =
account.130.anonymous_call_oncode =
account.130.anonymous_call_offcode =
account.130.send_anonymous_rejection_code =
account.130.anonymous_reject_oncode =
account.130.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.130.codec.g722.enable =
account.130.codec.g722.priority =

account.130.codec.g729.enable =
account.130.codec.g729.priority =

account.130.codec.g726_16.enable =
account.130.codec.g726_16.priority =

account.130.codec.g726_24.enable =
account.130.codec.g726_24.priority =

account.130.codec.g726_32.enable =
account.130.codec.g726_32.priority =
```

```

account.130.codec.g726_40.enable =
account.130.codec.g726_40.priority =

account.130.codec.ilbc.enable =
account.130.codec.ilbc.priority =

account.130.codec.pcmu.enable =
account.130.codec.pcmu.priority =

account.130.codec.pcma.enable =
account.130.codec.pcma.priority =

account.130.codec.opus.enable =
account.130.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.130.nat.nat_traversal =
account.130.nat.udp_update_enable =
account.130.nat.udp_update_time =
account.130.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.130.blf.subscribe_period =
account.130.dtmf.type =
account.130.dtmf.dtmf_payload =
account.130.dtmf.info_type =
account.130.100rel_enable =
account.130.subscribe_register =
account.130.subscribe_mwi =
account.130.subscribe_mwi_expires =
account.130.subscribe_mwi_to_vm =
voice_mail.number.130 = %BWVOICE-PORTAL-NUMBER-130%
account.130.display_mwi.enable =
account.130.cid_source =
account.130.cid_source_privacy =
account.130.cid_source_ppi =
account.130.session_timer.enable =
account.130.session_timer.expires =
account.130.session_timer.refresher =
account.130.enable_user_equal_phone =
account.130.srtp_encryption =
account.130.ptime =
account.130.shared_line = %BWSHAREDLINE-BINARY-130%
account.130.register_mac =
account.130.register_line =
account.130.reg_fail_retry_interval =
account.130.reg_failed_retry_min_time =
account.130.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.130.conf_type =
account.130.conf_uri = %BWNWORK-CONFERENCE-SIPURI-130%

account.130.sip_server_type =
account.130.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.130.register_expires_overlap =
account.130.subscribe_expires_overlap =
account.130.auto_dial_enable =
account.130.auto_dial_num =
account.130.cp_source =
account.130.transfer_refer_to_contact_header.enable =
#V80 Add
account.130.custom_ua =
account.130.callpark_enable =
account.130.check_cseq.enable =
account.130.check_to_tag.enable =
account.130.hold_use_inactive =
account.130.line_seize.expires =
account.130.update_ack_while_dialing =
account.130.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.130.always_fwd.enable =
account.130.always_fwd.target =
account.130.always_fwd.off_code =
account.130.always_fwd.on_code =
account.130.busy_fwd.enable =
account.130.busy_fwd.target =
account.130.busy_fwd.off_code =
account.130.busy_fwd.on_code =
account.130.timeout_fwd.enable =
account.130.timeout_fwd.target =
account.130.timeout_fwd.timeout =
account.130.timeout_fwd.off_code =
account.130.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```

account.130.dnd.enable =
account.130.dnd.on_code =
account.130.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.130.reg.enable =
handset.130.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.130.xsi.user =%BWLOGIN-ID-130%
account.130.xsi.password =%XSIPASSWORD-130%
account.130.xsi.host =%XSP_ADDRESS%
account.130.xsi.server_type =
account.130.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.130.ldap.enable =
handset.130.ldap.name_filter=
handset.130.ldap.number_filter=
handset.130.ldap.host=
handset.130.ldap.port=
handset.130.ldap.base=
handset.130.ldap.user=
handset.130.ldap.password=
handset.130.ldap.max_hits=
handset.130.ldap.name_attr=
handset.130.ldap.numb_attr=
handset.130.ldap.display_name=
handset.130.ldap.version=
handset.130.ldap.call_in_lookup=
handset.130.ldap.ldap_sort=
handset.130.ldap.tls_mode=
handset.130.ldap.call_out_lookup=
handset.130.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account131 Settings
##
#####
#####

```



```

account.131.enable=%BWLIN-BINARY-131%
account.131.label=%BWEXTENSION-131%
account.131.display_name=%BWCLID-131%
account.131.auth_name=%BWAUTHUSER-131%
account.131.user_name=%BWLINPORT-131%
account.131.password=%BWAUTHPASSWORD-131%

#W80B ADD
account.131.sip_server.template =
account.131.media_transmit.enable =

account.131.alarm.template =
account.131.alarm.server =
account.131.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.131.sip_server.1.failback_mode =
account.131.sip_server.1.failback_timeout =
account.131.sip_server.1.register_on_enable =
account.131.sip_server.1.failback_subscribe.enable =
account.131.sip_server.1.invite_retry_counts =
account.131.sip_server.1.only_signal_with_registered =

account.131.sip_server.2.failback_mode =
account.131.sip_server.2.failback_timeout =
account.131.sip_server.2.register_on_enable =
account.131.sip_server.2.failback_subscribe.enable =
account.131.sip_server.2.invite_retry_counts =
account.131.sip_server.2.only_signal_with_registered =

account.131.naptr_build =
account.131.fallback.redundancy_type =
account.131.fallback.timeout =

account.131.dns_cache_type =
account.131.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.131.anonymous_call =
account.131.reject_anonymous_call =
account.131.send_anonymous_code =
account.131.anonymous_call_oncode =
account.131.anonymous_call_offcode =
account.131.send_anonymous_rejection_code =
account.131.anonymous_reject_oncode =
account.131.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.131.codec.g722.enable =
account.131.codec.g722.priority =

account.131.codec.g729.enable =
account.131.codec.g729.priority =

account.131.codec.g726_16.enable =
account.131.codec.g726_16.priority =

account.131.codec.g726_24.enable =
account.131.codec.g726_24.priority =

account.131.codec.g726_32.enable =
account.131.codec.g726_32.priority =

account.131.codec.g726_40.enable =
account.131.codec.g726_40.priority =

account.131.codec.ilbc.enable =
account.131.codec.ilbc.priority =

account.131.codec.pcmu.enable =
account.131.codec.pcmu.priority =

account.131.codec.pcma.enable =
account.131.codec.pcma.priority =

account.131.codec.opus.enable =
account.131.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.131.nat.nat_traversal =
account.131.nat.udp_update_enable =
account.131.nat.udp_update_time =
account.131.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.131.blf.subscribe_period =
account.131.dtmf.type =
account.131.dtmf.dtmf_payload =
account.131.dtmf.info_type =
account.131.100rel_enable =
account.131.subscribe_register =
account.131.subscribe_mwi =
account.131.subscribe_mwi_expires =
account.131.subscribe_mwi_to_vm =
voice_mail.number.131 = %BWVOICE-PORTAL-NUMBER-131%
account.131.display_mwi.enable =
account.131.cid_source =
```

```

account.131.cid_source_privacy =
account.131.cid_source_ppi =
account.131.session_timer.enable =
account.131.session_timer.expires =
account.131.session_timer.refresher =
account.131.enable_user_equal_phone =
account.131.srtp_encryption =
account.131.ptime =
account.131.shared_line = %BWSHAREDLINE-BINARY-131%
account.131.register_mac =
account.131.register_line =
account.131.reg_fail_retry_interval =
account.131.reg_failed_retry_min_time =
account.131.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.131.conf_type =
account.131.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-131%

account.131.sip_server_type =
account.131.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.131.register_expires_overlap =
account.131.subscribe_expires_overlap =
account.131.auto_dial_enable =
account.131.auto_dial_num =
account.131.cp_source =
account.131.transfer_refer_to_contact_header.enable =
#V80 Add
account.131.custom_ua =
account.131.callpark_enable =
account.131.check_cseq.enable =
account.131.check_to_tag.enable =
account.131.hold_use_inactive =
account.131.line_seize.expires =
account.131.update_ack_while_dialing =
account.131.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.131.always_fwd.enable =
account.131.always_fwd.target =
account.131.always_fwd.off_code =
account.131.always_fwd.on_code =
account.131.busy_fwd.enable =

```

```
account.131.busy_fwd.target =
account.131.busy_fwd.off_code =
account.131.busy_fwd.on_code =
account.131.timeout_fwd.enable =
account.131.timeout_fwd.target =
account.131.timeout_fwd.timeout =
account.131.timeout_fwd.off_code =
account.131.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.131.dnd.enable =
account.131.dnd.on_code =
account.131.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.131.reg.enable =
handset.131.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####
account.131.xsi.user =%BWLOGIN-ID-131%
account.131.xsi.password =%XSIPASSWORD-131%
account.131.xsi.host =%XSP_ADDRESS%
account.131.xsi.server_type =
account.131.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.131.ldap.enable =
handset.131.ldap.name_filter=
handset.131.ldap.number_filter=
handset.131.ldap.host=
handset.131.ldap.port=
handset.131.ldap.base=
handset.131.ldap.user=
handset.131.ldap.password=
handset.131.ldap.max_hits=
handset.131.ldap.name_attr=
handset.131.ldap.numb_attr=
handset.131.ldap.display_name=
handset.131.ldap.version=
handset.131.ldap.call_in_lookup=
```

```

handset.131.ldap.ldap_sort=
handset.131.ldap.tls_mode=
handset.131.ldap.call_out_lookup=
handset.131.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account132 Settings
##
#####
#####

account.132.enable=%BWLIN-BINARY-132%
account.132.label=%BWEXTENSION-132%
account.132.display_name=%BWCLID-132%
account.132.auth_name=%BWAUTHUSER-132%
account.132.user_name=%BWLINPORT-132%
account.132.password=%BWAUTHPASSWORD-132%

#W80B ADD
account.132.sip_server.template =
account.132.media_transmit.enable =

account.132.alarm.template =
account.132.alarm.server =
account.132.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.132.sip_server.1.failback_mode =
account.132.sip_server.1.failback_timeout =
account.132.sip_server.1.register_on_enable =
account.132.sip_server.1.failback_subscribe.enable =
account.132.sip_server.1.invite_retry_counts =
account.132.sip_server.1.only_signal_with_registered =

account.132.sip_server.2.failback_mode =
account.132.sip_server.2.failback_timeout =
account.132.sip_server.2.register_on_enable =
account.132.sip_server.2.failback_subscribe.enable =
account.132.sip_server.2.invite_retry_counts =
account.132.sip_server.2.only_signal_with_registered =

account.132.naptr_build =
account.132.fallback.redundancy_type =
account.132.fallback.timeout =

account.132.dns_cache_type =
account.132.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####

```

```

account.132.anonymous_call =
account.132.reject_anonymous_call =
account.132.send_anonymous_code =
account.132.anonymous_call_oncode =
account.132.anonymous_call_offcode =
account.132.send_anonymous_rejection_code =
account.132.anonymous_reject_oncode =
account.132.anonymous_reject_offcode =

#####
#####
##
##                               Codec
##
#####
#####
account.132.codec.g722.enable =
account.132.codec.g722.priority =

account.132.codec.g729.enable =
account.132.codec.g729.priority =

account.132.codec.g726_16.enable =
account.132.codec.g726_16.priority =

account.132.codec.g726_24.enable =
account.132.codec.g726_24.priority =

account.132.codec.g726_32.enable =
account.132.codec.g726_32.priority =

account.132.codec.g726_40.enable =
account.132.codec.g726_40.priority =

account.132.codec.ilbc.enable =
account.132.codec.ilbc.priority =

account.132.codec.pcmu.enable =
account.132.codec.pcmu.priority =

account.132.codec.pcma.enable =
account.132.codec.pcma.priority =

account.132.codec.opus.enable =
account.132.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.132.nat.nat_traversal =
account.132.nat.udp_update_enable =
account.132.nat.udp_update_time =
account.132.nat.rport =

#####
#####
##
##                               Register Advanced
##

```

```
#####
#####

account.132.blf.subscribe_period =
account.132.dtmf.type =
account.132.dtmf.dtmf_payload =
account.132.dtmf.info_type =
account.132.100rel_enable =
account.132.subscribe_register =
account.132.subscribe_mwi =
account.132.subscribe_mwi_expires =
account.132.subscribe_mwi_to_vm =
voice_mail.number.132 = %BWVOICE-PORTAL-NUMBER-132%
account.132.display_mwi.enable =
account.132.cid_source =
account.132.cid_source_privacy =
account.132.cid_source_ppi =
account.132.session_timer.enable =
account.132.session_timer.expires =
account.132.session_timer.refreshes =
account.132.enable_user_equal_phone =
account.132.srtp_encryption =
account.132.ptime =
account.132.shared_line = %BWSHAREDLINE-BINARY-132%
account.132.register_mac =
account.132.register_line =
account.132.reg_fail_retry_interval =
account.132.reg_failed_retry_min_time =
account.132.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.132.conf_type =
account.132.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-132%

account.132.sip_server_type =
account.132.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.132.register_expires_overlap =
account.132.subscribe_expires_overlap =
account.132.auto_dial_enable =
account.132.auto_dial_num =
account.132.cp_source =
account.132.transfer_refer_to_contact_header.enable =
#V80 Add
account.132.custom_ua =
account.132.callpark_enable =
account.132.check_cseq.enable =
account.132.check_to_tag.enable =
account.132.hold_use_inactive =
```

```

account.132.line_seize.expires =
account.132.update_ack_while_dialing =
account.132.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.132.always_fwd.enable =
account.132.always_fwd.target =
account.132.always_fwd.off_code =
account.132.always_fwd.on_code =
account.132.busy_fwd.enable =
account.132.busy_fwd.target =
account.132.busy_fwd.off_code =
account.132.busy_fwd.on_code =
account.132.timeout_fwd.enable =
account.132.timeout_fwd.target =
account.132.timeout_fwd.timeout =
account.132.timeout_fwd.off_code =
account.132.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.132.dnd.enable =
account.132.dnd.on_code =
account.132.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.132.reg.enable =
handset.132.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.132.xsi.user =%BWLOGIN-ID-132%
account.132.xsi.password =%XSIPASSWORD-132%
account.132.xsi.host =%XSP_ADDRESS%
account.132.xsi.server_type =
account.132.xsi.port =

#####
#####
##                               LADP
##

```



```
#####
#####
handset.132.ldap.enable =
handset.132.ldap.name_filter=
handset.132.ldap.number_filter=
handset.132.ldap.host=
handset.132.ldap.port=
handset.132.ldap.base=
handset.132.ldap.user=
handset.132.ldap.password=
handset.132.ldap.max_hits=
handset.132.ldap.name_attr=
handset.132.ldap.numb_attr=
handset.132.ldap.display_name=
handset.132.ldap.version=
handset.132.ldap.call_in_lookup=
handset.132.ldap.ldap_sort=
handset.132.ldap.tls_mode=
handset.132.ldap.call_out_lookup=
handset.132.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account133 Settings
##
#####
#####

account.133.enable=%BWLIN-BINARY-133%
account.133.label=%BWEXTENSION-133%
account.133.display_name=%BWCLID-133%
account.133.auth_name=%BWAUTHUSER-133%
account.133.user_name=%BWLINPORT-133%
account.133.password=%BWAUTHPASSWORD-133%

#W80B ADD
account.133.sip_server.template =
account.133.media_transmit.enable =

account.133.alarm.template =
account.133.alarm.server =
account.133.alarm.number =

#####
#####
##                                     Failback
##
#####
#####
account.133.sip_server.1.failback_mode =
account.133.sip_server.1.failback_timeout =
account.133.sip_server.1.register_on_enable =
account.133.sip_server.1.failback_subscribe.enable =
account.133.sip_server.1.invite_retry_counts =
account.133.sip_server.1.only_signal_with_registered =

account.133.sip_server.2.failback_mode =
account.133.sip_server.2.failback_timeout =
account.133.sip_server.2.register_on_enable =
account.133.sip_server.2.failback_subscribe.enable =
```

```

account.133.sip_server.2.invite_retry_counts =
account.133.sip_server.2.only_signal_with_registered =

account.133.naptr_build =
account.133.fallback.redundancy_type =
account.133.fallback.timeout =

account.133.dns_cache_type =
account.133.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.133.anonymous_call =
account.133.reject_anonymous_call =
account.133.send_anonymous_code =
account.133.anonymous_call_oncode =
account.133.anonymous_call_offcode =
account.133.send_anonymous_rejection_code =
account.133.anonymous_reject_oncode =
account.133.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.133.codec.g722.enable =
account.133.codec.g722.priority =

account.133.codec.g729.enable =
account.133.codec.g729.priority =

account.133.codec.g726_16.enable =
account.133.codec.g726_16.priority =

account.133.codec.g726_24.enable =
account.133.codec.g726_24.priority =

account.133.codec.g726_32.enable =
account.133.codec.g726_32.priority =

account.133.codec.g726_40.enable =
account.133.codec.g726_40.priority =

account.133.codec.ilbc.enable =
account.133.codec.ilbc.priority =

account.133.codec.pcmu.enable =
account.133.codec.pcmu.priority =

account.133.codec.pcma.enable =
account.133.codec.pcma.priority =

account.133.codec.opus.enable =
account.133.codec.opus.priority =

```

```
#####
#####
##                               NAT Settings
##
#####
#####

account.133.nat.nat_traversal =
account.133.nat.udp_update_enable =
account.133.nat.udp_update_time =
account.133.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.133.blf.subscribe_period =
account.133.dtmf.type =
account.133.dtmf.dtmf_payload =
account.133.dtmf.info_type =
account.133.100rel_enable =
account.133.subscribe_register =
account.133.subscribe_mwi =
account.133.subscribe_mwi_expires =
account.133.subscribe_mwi_to_vm =
voice_mail.number.133 = %BWVOICE-PORTAL-NUMBER-133%
account.133.display_mwi.enable =
account.133.cid_source =
account.133.cid_source_privacy =
account.133.cid_source_ppi =
account.133.session_timer.enable =
account.133.session_timer.expires =
account.133.session_timer.refresher =
account.133.enable_user_equal_phone =
account.133.srtp_encryption =
account.133.ptime =
account.133.shared_line = %BWSHAREDLINE-BINARY-133%
account.133.register_mac =
account.133.register_line =
account.133.reg_fail_retry_interval =
account.133.reg_failed_retry_min_time =
account.133.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.133.conf_type =
account.133.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-133%

account.133.sip_server_type =
account.133.unregister_on_reboot =

#####
#####
##                               Register Other
##
```

```
#####
#####
##DECT V81 Add

account.133.register_expires_overlap =
account.133.subscribe_expires_overlap =
account.133.auto_dial_enable =
account.133.auto_dial_num =
account.133.cp_source =
account.133.transfer_refer_to_contact_header.enable =
#V80 Add
account.133.custom_ua =
account.133.callpark_enable =
account.133.check_cseq.enable =
account.133.check_to_tag.enable =
account.133.hold_use_inactive =
account.133.line_seize.expires =
account.133.update_ack_while_dialing =
account.133.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.133.always_fwd.enable =
account.133.always_fwd.target =
account.133.always_fwd.off_code =
account.133.always_fwd.on_code =
account.133.busy_fwd.enable =
account.133.busy_fwd.target =
account.133.busy_fwd.off_code =
account.133.busy_fwd.on_code =
account.133.timeout_fwd.enable =
account.133.timeout_fwd.target =
account.133.timeout_fwd.timeout =
account.133.timeout_fwd.off_code =
account.133.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.133.dnd.enable =
account.133.dnd.on_code =
account.133.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.133.reg.enable =
handset.133.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.133.xsi.user =%BWLOGIN-ID-133%
account.133.xsi.password =%XSIPASSWORD-133%
account.133.xsi.host =%XSP_ADDRESS%
account.133.xsi.server_type =
account.133.xsi.port =

#####
#####
##          LADP
##
#####
handset.133.ldap.enable =
handset.133.ldap.name_filter=
handset.133.ldap.number_filter=
handset.133.ldap.host=
handset.133.ldap.port=
handset.133.ldap.base=
handset.133.ldap.user=
handset.133.ldap.password=
handset.133.ldap.max_hits=
handset.133.ldap.name_attr=
handset.133.ldap.numb_attr=
handset.133.ldap.display_name=
handset.133.ldap.version=
handset.133.ldap.call_in_lookup=
handset.133.ldap.ldap_sort=
handset.133.ldap.tls_mode=
handset.133.ldap.call_out_lookup=
handset.133.ldap.incoming_call_special_search.enable=

#####
#####
##          Account134 Settings
##
#####

account.134.enable=%BWLINE-BINARY-134%
account.134.label=%BWEXTENSION-134%
account.134.display_name=%BWCLID-134%
account.134.auth_name=%BWAUTHUSER-134%
account.134.user_name=%BWLINEPORT-134%
account.134.password=%BWAUTHPASSWORD-134%

#W80B ADD
account.134.sip_server.template =
account.134.media_transmit.enable =

account.134.alarm.template =
account.134.alarm.server =
account.134.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.134.sip_server.1.failback_mode =
account.134.sip_server.1.failback_timeout =
account.134.sip_server.1.register_on_enable =
account.134.sip_server.1.failback_subscribe.enable =
account.134.sip_server.1.invite_retry_counts =
account.134.sip_server.1.only_signal_with_registered =

account.134.sip_server.2.failback_mode =
account.134.sip_server.2.failback_timeout =
account.134.sip_server.2.register_on_enable =
account.134.sip_server.2.failback_subscribe.enable =
account.134.sip_server.2.invite_retry_counts =
account.134.sip_server.2.only_signal_with_registered =

account.134.naptr_build =
account.134.fallback.redundancy_type =
account.134.fallback.timeout =

account.134.dns_cache_type =
account.134.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.134.anonymous_call =
account.134.reject_anonymous_call =
account.134.send_anonymous_code =
account.134.anonymous_call_oncode =
account.134.anonymous_call_offcode =
account.134.send_anonymous_rejection_code =
account.134.anonymous_reject_oncode =
account.134.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.134.codec.g722.enable =
account.134.codec.g722.priority =

account.134.codec.g729.enable =
account.134.codec.g729.priority =

account.134.codec.g726_16.enable =
account.134.codec.g726_16.priority =

account.134.codec.g726_24.enable =
account.134.codec.g726_24.priority =

account.134.codec.g726_32.enable =
account.134.codec.g726_32.priority =
```

```

account.134.codec.g726_40.enable =
account.134.codec.g726_40.priority =

account.134.codec.ilbc.enable =
account.134.codec.ilbc.priority =

account.134.codec.pcmu.enable =
account.134.codec.pcmu.priority =

account.134.codec.pcma.enable =
account.134.codec.pcma.priority =

account.134.codec.opus.enable =
account.134.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.134.nat.nat_traversal =
account.134.nat.udp_update_enable =
account.134.nat.udp_update_time =
account.134.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.134.blf.subscribe_period =
account.134.dtmf.type =
account.134.dtmf.dtmf_payload =
account.134.dtmf.info_type =
account.134.100rel_enable =
account.134.subscribe_register =
account.134.subscribe_mwi =
account.134.subscribe_mwi_expires =
account.134.subscribe_mwi_to_vm =
voice_mail.number.134 = %BWVOICE-PORTAL-NUMBER-134%
account.134.display_mwi.enable =
account.134.cid_source =
account.134.cid_source_privacy =
account.134.cid_source_ppi =
account.134.session_timer.enable =
account.134.session_timer.expires =
account.134.session_timer.refresher =
account.134.enable_user_equal_phone =
account.134.srtp_encryption =
account.134.ptime =
account.134.shared_line = %BWSHAREDLINE-BINARY-134%
account.134.register_mac =
account.134.register_line =
account.134.reg_fail_retry_interval =
account.134.reg_failed_retry_min_time =
account.134.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.134.conf_type =
account.134.conf_uri = %BWNWORK-CONFERENCE-SIPURI-134%

account.134.sip_server_type =
account.134.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.134.register_expires_overlap =
account.134.subscribe_expires_overlap =
account.134.auto_dial_enable =
account.134.auto_dial_num =
account.134.cp_source =
account.134.transfer_refer_to_contact_header.enable =
#V80 Add
account.134.custom_ua =
account.134.callpark_enable =
account.134.check_cseq.enable =
account.134.check_to_tag.enable =
account.134.hold_use_inactive =
account.134.line_seize.expires =
account.134.update_ack_while_dialing =
account.134.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.134.always_fwd.enable =
account.134.always_fwd.target =
account.134.always_fwd.off_code =
account.134.always_fwd.on_code =
account.134.busy_fwd.enable =
account.134.busy_fwd.target =
account.134.busy_fwd.off_code =
account.134.busy_fwd.on_code =
account.134.timeout_fwd.enable =
account.134.timeout_fwd.target =
account.134.timeout_fwd.timeout =
account.134.timeout_fwd.off_code =
account.134.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```



```

account.134.dnd.enable =
account.134.dnd.on_code =
account.134.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.134.reg.enable =
handset.134.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.134.xsi.user =%BWLOGIN-ID-134%
account.134.xsi.password =%XSIPASSWORD-134%
account.134.xsi.host =%XSP_ADDRESS%
account.134.xsi.server_type =
account.134.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.134.ldap.enable =
handset.134.ldap.name_filter=
handset.134.ldap.number_filter=
handset.134.ldap.host=
handset.134.ldap.port=
handset.134.ldap.base=
handset.134.ldap.user=
handset.134.ldap.password=
handset.134.ldap.max_hits=
handset.134.ldap.name_attr=
handset.134.ldap.numb_attr=
handset.134.ldap.display_name=
handset.134.ldap.version=
handset.134.ldap.call_in_lookup=
handset.134.ldap.ldap_sort=
handset.134.ldap.tls_mode=
handset.134.ldap.call_out_lookup=
handset.134.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account135 Settings
##
#####
#####

```

```

account.135.enable=%BWLIN-BINARY-135%
account.135.label=%BWEXTENSION-135%
account.135.display_name=%BWCLID-135%
account.135.auth_name=%BWAUTHUSER-135%
account.135.user_name=%BWLINPORT-135%
account.135.password=%BWAUTHPASSWORD-135%

#W80B ADD
account.135.sip_server.template =
account.135.media_transmit.enable =

account.135.alarm.template =
account.135.alarm.server =
account.135.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.135.sip_server.1.failback_mode =
account.135.sip_server.1.failback_timeout =
account.135.sip_server.1.register_on_enable =
account.135.sip_server.1.failback_subscribe.enable =
account.135.sip_server.1.invite_retry_counts =
account.135.sip_server.1.only_signal_with_registered =

account.135.sip_server.2.failback_mode =
account.135.sip_server.2.failback_timeout =
account.135.sip_server.2.register_on_enable =
account.135.sip_server.2.failback_subscribe.enable =
account.135.sip_server.2.invite_retry_counts =
account.135.sip_server.2.only_signal_with_registered =

account.135.naptr_build =
account.135.fallback.redundancy_type =
account.135.fallback.timeout =

account.135.dns_cache_type =
account.135.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.135.anonymous_call =
account.135.reject_anonymous_call =
account.135.send_anonymous_code =
account.135.anonymous_call_oncode =
account.135.anonymous_call_offcode =
account.135.send_anonymous_rejection_code =
account.135.anonymous_reject_oncode =
account.135.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.135.codec.g722.enable =
account.135.codec.g722.priority =

account.135.codec.g729.enable =
account.135.codec.g729.priority =

account.135.codec.g726_16.enable =
account.135.codec.g726_16.priority =

account.135.codec.g726_24.enable =
account.135.codec.g726_24.priority =

account.135.codec.g726_32.enable =
account.135.codec.g726_32.priority =

account.135.codec.g726_40.enable =
account.135.codec.g726_40.priority =

account.135.codec.ilbc.enable =
account.135.codec.ilbc.priority =

account.135.codec.pcmu.enable =
account.135.codec.pcmu.priority =

account.135.codec.pcma.enable =
account.135.codec.pcma.priority =

account.135.codec.opus.enable =
account.135.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.135.nat.nat_traversal =
account.135.nat.udp_update_enable =
account.135.nat.udp_update_time =
account.135.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.135.blf.subscribe_period =
account.135.dtmf.type =
account.135.dtmf.dtmf_payload =
account.135.dtmf.info_type =
account.135.100rel_enable =
account.135.subscribe_register =
account.135.subscribe_mwi =
account.135.subscribe_mwi_expires =
account.135.subscribe_mwi_to_vm =
voice_mail.number.135 = %BWVOICE-PORTAL-NUMBER-135%
account.135.display_mwi.enable =
account.135.cid_source =
```

```

account.135.cid_source_privacy =
account.135.cid_source_ppi =
account.135.session_timer.enable =
account.135.session_timer.expires =
account.135.session_timer.refresher =
account.135.enable_user_equal_phone =
account.135.srtp_encryption =
account.135.ptime =
account.135.shared_line = %BWSHAREDLINE-BINARY-135%
account.135.register_mac =
account.135.register_line =
account.135.reg_fail_retry_interval =
account.135.reg_failed_retry_min_time =
account.135.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.135.conf_type =
account.135.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-135%

account.135.sip_server_type =
account.135.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.135.register_expires_overlap =
account.135.subscribe_expires_overlap =
account.135.auto_dial_enable =
account.135.auto_dial_num =
account.135.cp_source =
account.135.transfer_refer_to_contact_header.enable =
#V80 Add
account.135.custom_ua =
account.135.callpark_enable =
account.135.check_cseq.enable =
account.135.check_to_tag.enable =
account.135.hold_use_inactive =
account.135.line_seize.expires =
account.135.update_ack_while_dialing =
account.135.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.135.always_fwd.enable =
account.135.always_fwd.target =
account.135.always_fwd.off_code =
account.135.always_fwd.on_code =
account.135.busy_fwd.enable =

```

```

account.135.busy_fwd.target =
account.135.busy_fwd.off_code =
account.135.busy_fwd.on_code =
account.135.timeout_fwd.enable =
account.135.timeout_fwd.target =
account.135.timeout_fwd.timeout =
account.135.timeout_fwd.off_code =
account.135.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.135.dnd.enable =
account.135.dnd.on_code =
account.135.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.135.reg.enable =
handset.135.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.135.xsi.user =%BWLOGIN-ID-135%
account.135.xsi.password =%XSIPASSWORD-135%
account.135.xsi.host =%XSP_ADDRESS%
account.135.xsi.server_type =
account.135.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.135.ldap.enable =
handset.135.ldap.name_filter=
handset.135.ldap.number_filter=
handset.135.ldap.host=
handset.135.ldap.port=
handset.135.ldap.base=
handset.135.ldap.user=
handset.135.ldap.password=
handset.135.ldap.max_hits=
handset.135.ldap.name_attr=
handset.135.ldap.numb_attr=
handset.135.ldap.display_name=
handset.135.ldap.version=
handset.135.ldap.call_in_lookup=

```

```
handset.135.ldap.ldap_sort=
handset.135.ldap.tls_mode=
handset.135.ldap.call_out_lookup=
handset.135.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account136 Settings
##
#####
#####

account.136.enable=%BWLIN-BINARY-136%
account.136.label=%BWEXTENSION-136%
account.136.display_name=%BWCLID-136%
account.136.auth_name=%BWAUTHUSER-136%
account.136.user_name=%BWLINPORT-136%
account.136.password=%BWAUTHPASSWORD-136%

#W80B ADD
account.136.sip_server.template =
account.136.media_transmit.enable =

account.136.alarm.template =
account.136.alarm.server =
account.136.alarm.number =

#####
#####
##                               Failback
##
#####
#####

account.136.sip_server.1.failback_mode =
account.136.sip_server.1.failback_timeout =
account.136.sip_server.1.register_on_enable =
account.136.sip_server.1.failback_subscribe.enable =
account.136.sip_server.1.invite_retry_counts =
account.136.sip_server.1.only_signal_with_registered =

account.136.sip_server.2.failback_mode =
account.136.sip_server.2.failback_timeout =
account.136.sip_server.2.register_on_enable =
account.136.sip_server.2.failback_subscribe.enable =
account.136.sip_server.2.invite_retry_counts =
account.136.sip_server.2.only_signal_with_registered =

account.136.naptr_build =
account.136.fallback.redundancy_type =
account.136.fallback.timeout =

account.136.dns_cache_type =
account.136.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
```

```

account.136.anonymous_call =
account.136.reject_anonymous_call =
account.136.send_anonymous_code =
account.136.anonymous_call_oncode =
account.136.anonymous_call_offcode =
account.136.send_anonymous_rejection_code =
account.136.anonymous_reject_oncode =
account.136.anonymous_reject_offcode =

#####
#####
##
##                                Codec
##
#####
#####
account.136.codec.g722.enable =
account.136.codec.g722.priority =

account.136.codec.g729.enable =
account.136.codec.g729.priority =

account.136.codec.g726_16.enable =
account.136.codec.g726_16.priority =

account.136.codec.g726_24.enable =
account.136.codec.g726_24.priority =

account.136.codec.g726_32.enable =
account.136.codec.g726_32.priority =

account.136.codec.g726_40.enable =
account.136.codec.g726_40.priority =

account.136.codec.ilbc.enable =
account.136.codec.ilbc.priority =

account.136.codec.pcmu.enable =
account.136.codec.pcmu.priority =

account.136.codec.pcma.enable =
account.136.codec.pcma.priority =

account.136.codec.opus.enable =
account.136.codec.opus.priority =

#####
#####
##
##                                NAT Settings
##
#####
#####

account.136.nat.nat_traversal =
account.136.nat.udp_update_enable =
account.136.nat.udp_update_time =
account.136.nat.rport =

#####
#####
##
##                                Register Advanced
##

```

```
#####
#####

account.136.blf.subscribe_period =
account.136.dtmf.type =
account.136.dtmf.dtmf_payload =
account.136.dtmf.info_type =
account.136.100rel_enable =
account.136.subscribe_register =
account.136.subscribe_mwi =
account.136.subscribe_mwi_expires =
account.136.subscribe_mwi_to_vm =
voice_mail.number.136 = %BWVOICE-PORTAL-NUMBER-136%
account.136.display_mwi.enable =
account.136.cid_source =
account.136.cid_source_privacy =
account.136.cid_source_ppi =
account.136.session_timer.enable =
account.136.session_timer.expires =
account.136.session_timer.refresher =
account.136.enable_user_equal_phone =
account.136.srtp_encryption =
account.136.ptime =
account.136.shared_line = %BWSHAREDLINE-BINARY-136%
account.136.register_mac =
account.136.register_line =
account.136.reg_fail_retry_interval =
account.136.reg_failed_retry_min_time =
account.136.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.136.conf_type =
account.136.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-136%

account.136.sip_server_type =
account.136.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.136.register_expires_overlap =
account.136.subscribe_expires_overlap =
account.136.auto_dial_enable =
account.136.auto_dial_num =
account.136.cp_source =
account.136.transfer_refer_to_contact_header.enable =
#V80 Add
account.136.custom_ua =
account.136.callpark_enable =
account.136.check_cseq.enable =
account.136.check_to_tag.enable =
account.136.hold_use_inactive =
```



```

account.136.line_seize.expires =
account.136.update_ack_while_dialing =
account.136.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.136.always_fwd.enable =
account.136.always_fwd.target =
account.136.always_fwd.off_code =
account.136.always_fwd.on_code =
account.136.busy_fwd.enable =
account.136.busy_fwd.target =
account.136.busy_fwd.off_code =
account.136.busy_fwd.on_code =
account.136.timeout_fwd.enable =
account.136.timeout_fwd.target =
account.136.timeout_fwd.timeout =
account.136.timeout_fwd.off_code =
account.136.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.136.dnd.enable =
account.136.dnd.on_code =
account.136.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.136.reg.enable =
handset.136.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.136.xsi.user =%BWLOGIN-ID-136%
account.136.xsi.password =%XSIPASSWORD-136%
account.136.xsi.host =%XSP_ADDRESS%
account.136.xsi.server_type =
account.136.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.136.ldap.enable =
handset.136.ldap.name_filter=
handset.136.ldap.number_filter=
handset.136.ldap.host=
handset.136.ldap.port=
handset.136.ldap.base=
handset.136.ldap.user=
handset.136.ldap.password=
handset.136.ldap.max_hits=
handset.136.ldap.name_attr=
handset.136.ldap.numb_attr=
handset.136.ldap.display_name=
handset.136.ldap.version=
handset.136.ldap.call_in_lookup=
handset.136.ldap.ldap_sort=
handset.136.ldap.tls_mode=
handset.136.ldap.call_out_lookup=
handset.136.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account137 Settings
##
#####
#####

account.137.enable=%BWLIN-BINARY-137%
account.137.label=%BWEXTENSION-137%
account.137.display_name=%BWCLID-137%
account.137.auth_name=%BWAUTHUSER-137%
account.137.user_name=%BWLINPORT-137%
account.137.password=%BWAUTHPASSWORD-137%

#W80B ADD
account.137.sip_server.template =
account.137.media_transmit.enable =

account.137.alarm.template =
account.137.alarm.server =
account.137.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.137.sip_server.1.failback_mode =
account.137.sip_server.1.failback_timeout =
account.137.sip_server.1.register_on_enable =
account.137.sip_server.1.failback_subscribe.enable =
account.137.sip_server.1.invite_retry_counts =
account.137.sip_server.1.only_signal_with_registered =

account.137.sip_server.2.failback_mode =
account.137.sip_server.2.failback_timeout =
account.137.sip_server.2.register_on_enable =
account.137.sip_server.2.failback_subscribe.enable =
```

```

account.137.sip_server.2.invite_retry_counts =
account.137.sip_server.2.only_signal_with_registered =

account.137.naptr_build =
account.137.fallback.redundancy_type =
account.137.fallback.timeout =

account.137.dns_cache_type =
account.137.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.137.anonymous_call =
account.137.reject_anonymous_call =
account.137.send_anonymous_code =
account.137.anonymous_call_oncode =
account.137.anonymous_call_offcode =
account.137.send_anonymous_rejection_code =
account.137.anonymous_reject_oncode =
account.137.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.137.codec.g722.enable =
account.137.codec.g722.priority =

account.137.codec.g729.enable =
account.137.codec.g729.priority =

account.137.codec.g726_16.enable =
account.137.codec.g726_16.priority =

account.137.codec.g726_24.enable =
account.137.codec.g726_24.priority =

account.137.codec.g726_32.enable =
account.137.codec.g726_32.priority =

account.137.codec.g726_40.enable =
account.137.codec.g726_40.priority =

account.137.codec.ilbc.enable =
account.137.codec.ilbc.priority =

account.137.codec.pcmu.enable =
account.137.codec.pcmu.priority =

account.137.codec.pcma.enable =
account.137.codec.pcma.priority =

account.137.codec.opus.enable =
account.137.codec.opus.priority =

```

```
#####
#####
##                               NAT Settings
##
#####
#####

account.137.nat.nat_traversal =
account.137.nat.udp_update_enable =
account.137.nat.udp_update_time =
account.137.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.137.blf.subscribe_period =
account.137.dtmf.type =
account.137.dtmf.dtmf_payload =
account.137.dtmf.info_type =
account.137.100rel_enable =
account.137.subscribe_register =
account.137.subscribe_mwi =
account.137.subscribe_mwi_expires =
account.137.subscribe_mwi_to_vm =
voice_mail.number.137 = %BWVOICE-PORTAL-NUMBER-137%
account.137.display_mwi.enable =
account.137.cid_source =
account.137.cid_source_privacy =
account.137.cid_source_ppi =
account.137.session_timer.enable =
account.137.session_timer.expires =
account.137.session_timer.refresher =
account.137.enable_user_equal_phone =
account.137.srtp_encryption =
account.137.ptime =
account.137.shared_line = %BWSHAREDLINE-BINARY-137%
account.137.register_mac =
account.137.register_line =
account.137.reg_fail_retry_interval =
account.137.reg_failed_retry_min_time =
account.137.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.137.conf_type =
account.137.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-137%

account.137.sip_server_type =
account.137.unregister_on_reboot =

#####
#####
##                               Register Other
##
```

```
#####
#####
##DECT V81 Add

account.137.register_expires_overlap =
account.137.subscribe_expires_overlap =
account.137.auto_dial_enable =
account.137.auto_dial_num =
account.137.cp_source =
account.137.transfer_refer_to_contact_header.enable =
#V80 Add
account.137.custom_ua =
account.137.callpark_enable =
account.137.check_cseq.enable =
account.137.check_to_tag.enable =
account.137.hold_use_inactive =
account.137.line_seize.expires =
account.137.update_ack_while_dialing =
account.137.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.137.always_fwd.enable =
account.137.always_fwd.target =
account.137.always_fwd.off_code =
account.137.always_fwd.on_code =
account.137.busy_fwd.enable =
account.137.busy_fwd.target =
account.137.busy_fwd.off_code =
account.137.busy_fwd.on_code =
account.137.timeout_fwd.enable =
account.137.timeout_fwd.target =
account.137.timeout_fwd.timeout =
account.137.timeout_fwd.off_code =
account.137.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.137.dnd.enable =
account.137.dnd.on_code =
account.137.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.137.reg.enable =
handset.137.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.137.xsi.user =%BWLOGIN-ID-137%
account.137.xsi.password =%XSIPASSWORD-137%
account.137.xsi.host =%XSP_ADDRESS%
account.137.xsi.server_type =
account.137.xsi.port =

#####
#####
##          LADP
##
#####
handset.137.ldap.enable =
handset.137.ldap.name_filter=
handset.137.ldap.number_filter=
handset.137.ldap.host=
handset.137.ldap.port=
handset.137.ldap.base=
handset.137.ldap.user=
handset.137.ldap.password=
handset.137.ldap.max_hits=
handset.137.ldap.name_attr=
handset.137.ldap.numb_attr=
handset.137.ldap.display_name=
handset.137.ldap.version=
handset.137.ldap.call_in_lookup=
handset.137.ldap.ldap_sort=
handset.137.ldap.tls_mode=
handset.137.ldap.call_out_lookup=
handset.137.ldap.incoming_call_special_search.enable=

#####
#####
##          Account138 Settings
##
#####

account.138.enable=%BWLINE-BINARY-138%
account.138.label=%BWEXTENSION-138%
account.138.display_name=%BWCLID-138%
account.138.auth_name=%BWAUTHUSER-138%
account.138.user_name=%BWLINEPORT-138%
account.138.password=%BWAUTHPASSWORD-138%

#W80B ADD
account.138.sip_server.template =
account.138.media_transmit.enable =

account.138.alarm.template =
account.138.alarm.server =
account.138.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.138.sip_server.1.failback_mode =
account.138.sip_server.1.failback_timeout =
account.138.sip_server.1.register_on_enable =
account.138.sip_server.1.failback_subscribe.enable =
account.138.sip_server.1.invite_retry_counts =
account.138.sip_server.1.only_signal_with_registered =

account.138.sip_server.2.failback_mode =
account.138.sip_server.2.failback_timeout =
account.138.sip_server.2.register_on_enable =
account.138.sip_server.2.failback_subscribe.enable =
account.138.sip_server.2.invite_retry_counts =
account.138.sip_server.2.only_signal_with_registered =

account.138.naptr_build =
account.138.fallback.redundancy_type =
account.138.fallback.timeout =

account.138.dns_cache_type =
account.138.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.138.anonymous_call =
account.138.reject_anonymous_call =
account.138.send_anonymous_code =
account.138.anonymous_call_oncode =
account.138.anonymous_call_offcode =
account.138.send_anonymous_rejection_code =
account.138.anonymous_reject_oncode =
account.138.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.138.codec.g722.enable =
account.138.codec.g722.priority =

account.138.codec.g729.enable =
account.138.codec.g729.priority =

account.138.codec.g726_16.enable =
account.138.codec.g726_16.priority =

account.138.codec.g726_24.enable =
account.138.codec.g726_24.priority =

account.138.codec.g726_32.enable =
account.138.codec.g726_32.priority =
```

```

account.138.codec.g726_40.enable =
account.138.codec.g726_40.priority =

account.138.codec.ilbc.enable =
account.138.codec.ilbc.priority =

account.138.codec.pcmu.enable =
account.138.codec.pcmu.priority =

account.138.codec.pcma.enable =
account.138.codec.pcma.priority =

account.138.codec.opus.enable =
account.138.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.138.nat.nat_traversal =
account.138.nat.udp_update_enable =
account.138.nat.udp_update_time =
account.138.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.138.blf.subscribe_period =
account.138.dtmf.type =
account.138.dtmf.dtmf_payload =
account.138.dtmf.info_type =
account.138.100rel_enable =
account.138.subscribe_register =
account.138.subscribe_mwi =
account.138.subscribe_mwi_expires =
account.138.subscribe_mwi_to_vm =
voice_mail.number.138 = %BWVOICE-PORTAL-NUMBER-138%
account.138.display_mwi.enable =
account.138.cid_source =
account.138.cid_source_privacy =
account.138.cid_source_ppi =
account.138.session_timer.enable =
account.138.session_timer.expires =
account.138.session_timer.refresher =
account.138.enable_user_equal_phone =
account.138.srtp_encryption =
account.138.ptime =
account.138.shared_line = %BWSHAREDLINE-BINARY-138%
account.138.register_mac =
account.138.register_line =
account.138.reg_fail_retry_interval =
account.138.reg_failed_retry_min_time =
account.138.reg_failed_retry_max_time =

```



```
#####
#####
##                               Network Conference
##
#####
#####
account.138.conf_type =
account.138.conf_uri = %BWNWORK-CONFERENCE-SIPURI-138%

account.138.sip_server_type =
account.138.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.138.register_expires_overlap =
account.138.subscribe_expires_overlap =
account.138.auto_dial_enable =
account.138.auto_dial_num =
account.138.cp_source =
account.138.transfer_refer_to_contact_header.enable =
#V80 Add
account.138.custom_ua =
account.138.callpark_enable =
account.138.check_cseq.enable =
account.138.check_to_tag.enable =
account.138.hold_use_inactive =
account.138.line_seize.expires =
account.138.update_ack_while_dialing =
account.138.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.138.always_fwd.enable =
account.138.always_fwd.target =
account.138.always_fwd.off_code =
account.138.always_fwd.on_code =
account.138.busy_fwd.enable =
account.138.busy_fwd.target =
account.138.busy_fwd.off_code =
account.138.busy_fwd.on_code =
account.138.timeout_fwd.enable =
account.138.timeout_fwd.target =
account.138.timeout_fwd.timeout =
account.138.timeout_fwd.off_code =
account.138.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```

account.138.dnd.enable =
account.138.dnd.on_code =
account.138.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.138.reg.enable =
handset.138.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.138.xsi.user =%BWLOGIN-ID-138%
account.138.xsi.password =%XSIPASSWORD-138%
account.138.xsi.host =%XSP_ADDRESS%
account.138.xsi.server_type =
account.138.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.138.ldap.enable =
handset.138.ldap.name_filter=
handset.138.ldap.number_filter=
handset.138.ldap.host=
handset.138.ldap.port=
handset.138.ldap.base=
handset.138.ldap.user=
handset.138.ldap.password=
handset.138.ldap.max_hits=
handset.138.ldap.name_attr=
handset.138.ldap.numb_attr=
handset.138.ldap.display_name=
handset.138.ldap.version=
handset.138.ldap.call_in_lookup=
handset.138.ldap.ldap_sort=
handset.138.ldap.tls_mode=
handset.138.ldap.call_out_lookup=
handset.138.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account139 Settings
##
#####
#####

```

```

account.139.enable=%BWLIN-BINARY-139%
account.139.label=%BWEXTENSION-139%
account.139.display_name=%BWCLID-139%
account.139.auth_name=%BWAUTHUSER-139%
account.139.user_name=%BWLINPORT-139%
account.139.password=%BWAUTHPASSWORD-139%

#W80B ADD
account.139.sip_server.template =
account.139.media_transmit.enable =

account.139.alarm.template =
account.139.alarm.server =
account.139.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.139.sip_server.1.failback_mode =
account.139.sip_server.1.failback_timeout =
account.139.sip_server.1.register_on_enable =
account.139.sip_server.1.failback_subscribe.enable =
account.139.sip_server.1.invite_retry_counts =
account.139.sip_server.1.only_signal_with_registered =

account.139.sip_server.2.failback_mode =
account.139.sip_server.2.failback_timeout =
account.139.sip_server.2.register_on_enable =
account.139.sip_server.2.failback_subscribe.enable =
account.139.sip_server.2.invite_retry_counts =
account.139.sip_server.2.only_signal_with_registered =

account.139.naptr_build =
account.139.fallback.redundancy_type =
account.139.fallback.timeout =

account.139.dns_cache_type =
account.139.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.139.anonymous_call =
account.139.reject_anonymous_call =
account.139.send_anonymous_code =
account.139.anonymous_call_oncode =
account.139.anonymous_call_offcode =
account.139.send_anonymous_rejection_code =
account.139.anonymous_reject_oncode =
account.139.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.139.codec.g722.enable =
account.139.codec.g722.priority =

account.139.codec.g729.enable =
account.139.codec.g729.priority =

account.139.codec.g726_16.enable =
account.139.codec.g726_16.priority =

account.139.codec.g726_24.enable =
account.139.codec.g726_24.priority =

account.139.codec.g726_32.enable =
account.139.codec.g726_32.priority =

account.139.codec.g726_40.enable =
account.139.codec.g726_40.priority =

account.139.codec.ilbc.enable =
account.139.codec.ilbc.priority =

account.139.codec.pcmu.enable =
account.139.codec.pcmu.priority =

account.139.codec.pcma.enable =
account.139.codec.pcma.priority =

account.139.codec.opus.enable =
account.139.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.139.nat.nat_traversal =
account.139.nat.udp_update_enable =
account.139.nat.udp_update_time =
account.139.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.139.blf.subscribe_period =
account.139.dtmf.type =
account.139.dtmf.dtmf_payload =
account.139.dtmf.info_type =
account.139.100rel_enable =
account.139.subscribe_register =
account.139.subscribe_mwi =
account.139.subscribe_mwi_expires =
account.139.subscribe_mwi_to_vm =
voice_mail.number.139 = %BWVOICE-PORTAL-NUMBER-139%
account.139.display_mwi.enable =
account.139.cid_source =
```

```

account.139.cid_source_privacy =
account.139.cid_source_ppi =
account.139.session_timer.enable =
account.139.session_timer.expires =
account.139.session_timer.refresher =
account.139.enable_user_equal_phone =
account.139.srtp_encryption =
account.139.ptime =
account.139.shared_line = %BWSHAREDLINE-BINARY-139%
account.139.register_mac =
account.139.register_line =
account.139.reg_fail_retry_interval =
account.139.reg_failed_retry_min_time =
account.139.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.139.conf_type =
account.139.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-139%

account.139.sip_server_type =
account.139.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.139.register_expires_overlap =
account.139.subscribe_expires_overlap =
account.139.auto_dial_enable =
account.139.auto_dial_num =
account.139.cp_source =
account.139.transfer_refer_to_contact_header.enable =
#V80 Add
account.139.custom_ua =
account.139.callpark_enable =
account.139.check_cseq.enable =
account.139.check_to_tag.enable =
account.139.hold_use_inactive =
account.139.line_seize.expires =
account.139.update_ack_while_dialing =
account.139.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.139.always_fwd.enable =
account.139.always_fwd.target =
account.139.always_fwd.off_code =
account.139.always_fwd.on_code =
account.139.busy_fwd.enable =

```

```

account.139.busy_fwd.target =
account.139.busy_fwd.off_code =
account.139.busy_fwd.on_code =
account.139.timeout_fwd.enable =
account.139.timeout_fwd.target =
account.139.timeout_fwd.timeout =
account.139.timeout_fwd.off_code =
account.139.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.139.dnd.enable =
account.139.dnd.on_code =
account.139.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.139.reg.enable =
handset.139.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####
account.139.xsi.user =%BWLOGIN-ID-139%
account.139.xsi.password =%XSIPASSWORD-139%
account.139.xsi.host =%XSP_ADDRESS%
account.139.xsi.server_type =
account.139.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.139.ldap.enable =
handset.139.ldap.name_filter=
handset.139.ldap.number_filter=
handset.139.ldap.host=
handset.139.ldap.port=
handset.139.ldap.base=
handset.139.ldap.user=
handset.139.ldap.password=
handset.139.ldap.max_hits=
handset.139.ldap.name_attr=
handset.139.ldap.numb_attr=
handset.139.ldap.display_name=
handset.139.ldap.version=
handset.139.ldap.call_in_lookup=

```

```

handset.139.ldap.ldap_sort=
handset.139.ldap.tls_mode=
handset.139.ldap.call_out_lookup=
handset.139.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account140 Settings
##
#####
#####

account.140.enable=%BWLIN-BINARY-140%
account.140.label=%BWEXTENSION-140%
account.140.display_name=%BWCLID-140%
account.140.auth_name=%BWAUTHUSER-140%
account.140.user_name=%BWLINPORT-140%
account.140.password=%BWAUTHPASSWORD-140%

#W80B ADD
account.140.sip_server.template =
account.140.media_transmit.enable =

account.140.alarm.template =
account.140.alarm.server =
account.140.alarm.number =

#####
#####
##                                     Failback
##
##
#####
#####

account.140.sip_server.1.failback_mode =
account.140.sip_server.1.failback_timeout =
account.140.sip_server.1.register_on_enable =
account.140.sip_server.1.failback_subscribe.enable =
account.140.sip_server.1.invite_retry_counts =
account.140.sip_server.1.only_signal_with_registered =

account.140.sip_server.2.failback_mode =
account.140.sip_server.2.failback_timeout =
account.140.sip_server.2.register_on_enable =
account.140.sip_server.2.failback_subscribe.enable =
account.140.sip_server.2.invite_retry_counts =
account.140.sip_server.2.only_signal_with_registered =

account.140.naptr_build =
account.140.fallback.redundancy_type =
account.140.fallback.timeout =

account.140.dns_cache_type =
account.140.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
##
#####
#####

```

```

account.140.anonymous_call =
account.140.reject_anonymous_call =
account.140.send_anonymous_code =
account.140.anonymous_call_oncode =
account.140.anonymous_call_offcode =
account.140.send_anonymous_rejection_code =
account.140.anonymous_reject_oncode =
account.140.anonymous_reject_offcode =

#####
#####
##
##                               Codec
##
#####
#####
account.140.codec.g722.enable =
account.140.codec.g722.priority =

account.140.codec.g729.enable =
account.140.codec.g729.priority =

account.140.codec.g726_16.enable =
account.140.codec.g726_16.priority =

account.140.codec.g726_24.enable =
account.140.codec.g726_24.priority =

account.140.codec.g726_32.enable =
account.140.codec.g726_32.priority =

account.140.codec.g726_40.enable =
account.140.codec.g726_40.priority =

account.140.codec.ilbc.enable =
account.140.codec.ilbc.priority =

account.140.codec.pcmu.enable =
account.140.codec.pcmu.priority =

account.140.codec.pcma.enable =
account.140.codec.pcma.priority =

account.140.codec.opus.enable =
account.140.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####
account.140.nat.nat_traversal =
account.140.nat.udp_update_enable =
account.140.nat.udp_update_time =
account.140.nat.rport =

#####
#####
##
##                               Register Advanced
##

```



```
#####
#####

account.140.blf.subscribe_period =
account.140.dtmf.type =
account.140.dtmf.dtmf_payload =
account.140.dtmf.info_type =
account.140.100rel_enable =
account.140.subscribe_register =
account.140.subscribe_mwi =
account.140.subscribe_mwi_expires =
account.140.subscribe_mwi_to_vm =
voice_mail.number.140 = %BWVOICE-PORTAL-NUMBER-140%
account.140.display_mwi.enable =
account.140.cid_source =
account.140.cid_source_privacy =
account.140.cid_source_ppi =
account.140.session_timer.enable =
account.140.session_timer.expires =
account.140.session_timer.refresher =
account.140.enable_user_equal_phone =
account.140.srtp_encryption =
account.140.ptime =
account.140.shared_line = %BWSHAREDLINE-BINARY-140%
account.140.register_mac =
account.140.register_line =
account.140.reg_fail_retry_interval =
account.140.reg_failed_retry_min_time =
account.140.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.140.conf_type =
account.140.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-140%

account.140.sip_server_type =
account.140.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.140.register_expires_overlap =
account.140.subscribe_expires_overlap =
account.140.auto_dial_enable =
account.140.auto_dial_num =
account.140.cp_source =
account.140.transfer_refer_to_contact_header.enable =
#V80 Add
account.140.custom_ua =
account.140.callpark_enable =
account.140.check_cseq.enable =
account.140.check_to_tag.enable =
account.140.hold_use_inactive =
```

```

account.140.line_seize.expires =
account.140.update_ack_while_dialing =
account.140.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.140.always_fwd.enable =
account.140.always_fwd.target =
account.140.always_fwd.off_code =
account.140.always_fwd.on_code =
account.140.busy_fwd.enable =
account.140.busy_fwd.target =
account.140.busy_fwd.off_code =
account.140.busy_fwd.on_code =
account.140.timeout_fwd.enable =
account.140.timeout_fwd.target =
account.140.timeout_fwd.timeout =
account.140.timeout_fwd.off_code =
account.140.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.140.dnd.enable =
account.140.dnd.on_code =
account.140.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.140.reg.enable =
handset.140.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.140.xsi.user =%BWLOGIN-ID-140%
account.140.xsi.password =%XSIPASSWORD-140%
account.140.xsi.host =%XSP_ADDRESS%
account.140.xsi.server_type =
account.140.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.140.ldap.enable =
handset.140.ldap.name_filter=
handset.140.ldap.number_filter=
handset.140.ldap.host=
handset.140.ldap.port=
handset.140.ldap.base=
handset.140.ldap.user=
handset.140.ldap.password=
handset.140.ldap.max_hits=
handset.140.ldap.name_attr=
handset.140.ldap.numb_attr=
handset.140.ldap.display_name=
handset.140.ldap.version=
handset.140.ldap.call_in_lookup=
handset.140.ldap.ldap_sort=
handset.140.ldap.tls_mode=
handset.140.ldap.call_out_lookup=
handset.140.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account141 Settings
##
#####
#####

account.141.enable=%BWLIN-BINARY-141%
account.141.label=%BWEXTENSION-141%
account.141.display_name=%BWCLID-141%
account.141.auth_name=%BWAUTHUSER-141%
account.141.user_name=%BWLINPORT-141%
account.141.password=%BWAUTHPASSWORD-141%

#W80B ADD
account.141.sip_server.template =
account.141.media_transmit.enable =

account.141.alarm.template =
account.141.alarm.server =
account.141.alarm.number =

#####
#####
##                                     Failback
##
#####
#####
account.141.sip_server.1.failback_mode =
account.141.sip_server.1.failback_timeout =
account.141.sip_server.1.register_on_enable =
account.141.sip_server.1.failback_subscribe.enable =
account.141.sip_server.1.invite_retry_counts =
account.141.sip_server.1.only_signal_with_registered =

account.141.sip_server.2.failback_mode =
account.141.sip_server.2.failback_timeout =
account.141.sip_server.2.register_on_enable =
account.141.sip_server.2.failback_subscribe.enable =
```

```
account.141.sip_server.2.invite_retry_counts =
account.141.sip_server.2.only_signal_with_registered =

account.141.naptr_build =
account.141.fallback.redundancy_type =
account.141.fallback.timeout =

account.141.dns_cache_type =
account.141.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.141.anonymous_call =
account.141.reject_anonymous_call =
account.141.send_anonymous_code =
account.141.anonymous_call_oncode =
account.141.anonymous_call_offcode =
account.141.send_anonymous_rejection_code =
account.141.anonymous_reject_oncode =
account.141.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.141.codec.g722.enable =
account.141.codec.g722.priority =

account.141.codec.g729.enable =
account.141.codec.g729.priority =

account.141.codec.g726_16.enable =
account.141.codec.g726_16.priority =

account.141.codec.g726_24.enable =
account.141.codec.g726_24.priority =

account.141.codec.g726_32.enable =
account.141.codec.g726_32.priority =

account.141.codec.g726_40.enable =
account.141.codec.g726_40.priority =

account.141.codec.ilbc.enable =
account.141.codec.ilbc.priority =

account.141.codec.pcmu.enable =
account.141.codec.pcmu.priority =

account.141.codec.pcma.enable =
account.141.codec.pcma.priority =

account.141.codec.opus.enable =
account.141.codec.opus.priority =
```

```
#####
#####
##                               NAT Settings
##
#####
#####

account.141.nat.nat_traversal =
account.141.nat.udp_update_enable =
account.141.nat.udp_update_time =
account.141.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.141.blf.subscribe_period =
account.141.dtmf.type =
account.141.dtmf.dtmf_payload =
account.141.dtmf.info_type =
account.141.100rel_enable =
account.141.subscribe_register =
account.141.subscribe_mwi =
account.141.subscribe_mwi_expires =
account.141.subscribe_mwi_to_vm =
voice_mail.number.141 = %BWVOICE-PORTAL-NUMBER-141%
account.141.display_mwi.enable =
account.141.cid_source =
account.141.cid_source_privacy =
account.141.cid_source_ppi =
account.141.session_timer.enable =
account.141.session_timer.expires =
account.141.session_timer.refresher =
account.141.enable_user_equal_phone =
account.141.srtp_encryption =
account.141.ptime =
account.141.shared_line = %BWSHAREDLINE-BINARY-141%
account.141.register_mac =
account.141.register_line =
account.141.reg_fail_retry_interval =
account.141.reg_failed_retry_min_time =
account.141.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.141.conf_type =
account.141.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-141%

account.141.sip_server_type =
account.141.unregister_on_reboot =

#####
#####
##                               Register Other
##
```

```
#####
#####
##DECT V81 Add

account.141.register_expires_overlap =
account.141.subscribe_expires_overlap =
account.141.auto_dial_enable =
account.141.auto_dial_num =
account.141.cp_source =
account.141.transfer_refer_to_contact_header.enable =
#V80 Add
account.141.custom_ua =
account.141.callpark_enable =
account.141.check_cseq.enable =
account.141.check_to_tag.enable =
account.141.hold_use_inactive =
account.141.line_seize.expires =
account.141.update_ack_while_dialing =
account.141.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.141.always_fwd.enable =
account.141.always_fwd.target =
account.141.always_fwd.off_code =
account.141.always_fwd.on_code =
account.141.busy_fwd.enable =
account.141.busy_fwd.target =
account.141.busy_fwd.off_code =
account.141.busy_fwd.on_code =
account.141.timeout_fwd.enable =
account.141.timeout_fwd.target =
account.141.timeout_fwd.timeout =
account.141.timeout_fwd.off_code =
account.141.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.141.dnd.enable =
account.141.dnd.on_code =
account.141.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.141.reg.enable =
handset.141.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.141.xsi.user =%BWLOGIN-ID-141%
account.141.xsi.password =%XSIPASSWORD-141%
account.141.xsi.host =%XSP_ADDRESS%
account.141.xsi.server_type =
account.141.xsi.port =

#####
#####
##          LADP
##
#####
handset.141.ldap.enable =
handset.141.ldap.name_filter=
handset.141.ldap.number_filter=
handset.141.ldap.host=
handset.141.ldap.port=
handset.141.ldap.base=
handset.141.ldap.user=
handset.141.ldap.password=
handset.141.ldap.max_hits=
handset.141.ldap.name_attr=
handset.141.ldap.numb_attr=
handset.141.ldap.display_name=
handset.141.ldap.version=
handset.141.ldap.call_in_lookup=
handset.141.ldap.ldap_sort=
handset.141.ldap.tls_mode=
handset.141.ldap.call_out_lookup=
handset.141.ldap.incoming_call_special_search.enable=

#####
#####
##          Account142 Settings
##
#####

account.142.enable=%BWLINE-BINARY-142%
account.142.label=%BWEXTENSION-142%
account.142.display_name=%BWCLID-142%
account.142.auth_name=%BWAUTHUSER-142%
account.142.user_name=%BWLINEPORT-142%
account.142.password=%BWAUTHPASSWORD-142%

#W80B ADD
account.142.sip_server.template =
account.142.media_transmit.enable =

account.142.alarm.template =
account.142.alarm.server =
account.142.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.142.sip_server.1.failback_mode =
account.142.sip_server.1.failback_timeout =
account.142.sip_server.1.register_on_enable =
account.142.sip_server.1.failback_subscribe.enable =
account.142.sip_server.1.invite_retry_counts =
account.142.sip_server.1.only_signal_with_registered =

account.142.sip_server.2.failback_mode =
account.142.sip_server.2.failback_timeout =
account.142.sip_server.2.register_on_enable =
account.142.sip_server.2.failback_subscribe.enable =
account.142.sip_server.2.invite_retry_counts =
account.142.sip_server.2.only_signal_with_registered =

account.142.naptr_build =
account.142.fallback.redundancy_type =
account.142.fallback.timeout =

account.142.dns_cache_type =
account.142.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.142.anonymous_call =
account.142.reject_anonymous_call =
account.142.send_anonymous_code =
account.142.anonymous_call_oncode =
account.142.anonymous_call_offcode =
account.142.send_anonymous_rejection_code =
account.142.anonymous_reject_oncode =
account.142.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.142.codec.g722.enable =
account.142.codec.g722.priority =

account.142.codec.g729.enable =
account.142.codec.g729.priority =

account.142.codec.g726_16.enable =
account.142.codec.g726_16.priority =

account.142.codec.g726_24.enable =
account.142.codec.g726_24.priority =

account.142.codec.g726_32.enable =
account.142.codec.g726_32.priority =
```



```

account.142.codec.g726_40.enable =
account.142.codec.g726_40.priority =

account.142.codec.ilbc.enable =
account.142.codec.ilbc.priority =

account.142.codec.pcmu.enable =
account.142.codec.pcmu.priority =

account.142.codec.pcma.enable =
account.142.codec.pcma.priority =

account.142.codec.opus.enable =
account.142.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.142.nat.nat_traversal =
account.142.nat.udp_update_enable =
account.142.nat.udp_update_time =
account.142.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.142.blf.subscribe_period =
account.142.dtmf.type =
account.142.dtmf.dtmf_payload =
account.142.dtmf.info_type =
account.142.100rel_enable =
account.142.subscribe_register =
account.142.subscribe_mwi =
account.142.subscribe_mwi_expires =
account.142.subscribe_mwi_to_vm =
voice_mail.number.142 = %BWVOICE-PORTAL-NUMBER-142%
account.142.display_mwi.enable =
account.142.cid_source =
account.142.cid_source_privacy =
account.142.cid_source_ppi =
account.142.session_timer.enable =
account.142.session_timer.expires =
account.142.session_timer.refresher =
account.142.enable_user_equal_phone =
account.142.srtp_encryption =
account.142.ptime =
account.142.shared_line = %BWSHAREDLINE-BINARY-142%
account.142.register_mac =
account.142.register_line =
account.142.reg_fail_retry_interval =
account.142.reg_failed_retry_min_time =
account.142.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.142.conf_type =
account.142.conf_uri = %BWNWORK-CONFERENCE-SIPURI-142%

account.142.sip_server_type =
account.142.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.142.register_expires_overlap =
account.142.subscribe_expires_overlap =
account.142.auto_dial_enable =
account.142.auto_dial_num =
account.142.cp_source =
account.142.transfer_refer_to_contact_header.enable =
#V80 Add
account.142.custom_ua =
account.142.callpark_enable =
account.142.check_cseq.enable =
account.142.check_to_tag.enable =
account.142.hold_use_inactive =
account.142.line_seize.expires =
account.142.update_ack_while_dialing =
account.142.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.142.always_fwd.enable =
account.142.always_fwd.target =
account.142.always_fwd.off_code =
account.142.always_fwd.on_code =
account.142.busy_fwd.enable =
account.142.busy_fwd.target =
account.142.busy_fwd.off_code =
account.142.busy_fwd.on_code =
account.142.timeout_fwd.enable =
account.142.timeout_fwd.target =
account.142.timeout_fwd.timeout =
account.142.timeout_fwd.off_code =
account.142.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```

account.142.dnd.enable =
account.142.dnd.on_code =
account.142.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.142.reg.enable =
handset.142.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.142.xsi.user =%BWLOGIN-ID-142%
account.142.xsi.password =%XSIPASSWORD-142%
account.142.xsi.host =%XSP_ADDRESS%
account.142.xsi.server_type =
account.142.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.142.ldap.enable =
handset.142.ldap.name_filter=
handset.142.ldap.number_filter=
handset.142.ldap.host=
handset.142.ldap.port=
handset.142.ldap.base=
handset.142.ldap.user=
handset.142.ldap.password=
handset.142.ldap.max_hits=
handset.142.ldap.name_attr=
handset.142.ldap.numb_attr=
handset.142.ldap.display_name=
handset.142.ldap.version=
handset.142.ldap.call_in_lookup=
handset.142.ldap.ldap_sort=
handset.142.ldap.tls_mode=
handset.142.ldap.call_out_lookup=
handset.142.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account143 Settings
##
#####
#####

```

```

account.143.enable=%BWLIN-BINARY-143%
account.143.label=%BWEXTENSION-143%
account.143.display_name=%BWCLID-143%
account.143.auth_name=%BWAUTHUSER-143%
account.143.user_name=%BWLINPORT-143%
account.143.password=%BWAUTHPASSWORD-143%

#W80B ADD
account.143.sip_server.template =
account.143.media_transmit.enable =

account.143.alarm.template =
account.143.alarm.server =
account.143.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.143.sip_server.1.failback_mode =
account.143.sip_server.1.failback_timeout =
account.143.sip_server.1.register_on_enable =
account.143.sip_server.1.failback_subscribe.enable =
account.143.sip_server.1.invite_retry_counts =
account.143.sip_server.1.only_signal_with_registered =

account.143.sip_server.2.failback_mode =
account.143.sip_server.2.failback_timeout =
account.143.sip_server.2.register_on_enable =
account.143.sip_server.2.failback_subscribe.enable =
account.143.sip_server.2.invite_retry_counts =
account.143.sip_server.2.only_signal_with_registered =

account.143.naptr_build =
account.143.fallback.redundancy_type =
account.143.fallback.timeout =

account.143.dns_cache_type =
account.143.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.143.anonymous_call =
account.143.reject_anonymous_call =
account.143.send_anonymous_code =
account.143.anonymous_call_oncode =
account.143.anonymous_call_offcode =
account.143.send_anonymous_rejection_code =
account.143.anonymous_reject_oncode =
account.143.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.143.codec.g722.enable =
account.143.codec.g722.priority =

account.143.codec.g729.enable =
account.143.codec.g729.priority =

account.143.codec.g726_16.enable =
account.143.codec.g726_16.priority =

account.143.codec.g726_24.enable =
account.143.codec.g726_24.priority =

account.143.codec.g726_32.enable =
account.143.codec.g726_32.priority =

account.143.codec.g726_40.enable =
account.143.codec.g726_40.priority =

account.143.codec.ilbc.enable =
account.143.codec.ilbc.priority =

account.143.codec.pcmu.enable =
account.143.codec.pcmu.priority =

account.143.codec.pcma.enable =
account.143.codec.pcma.priority =

account.143.codec.opus.enable =
account.143.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.143.nat.nat_traversal =
account.143.nat.udp_update_enable =
account.143.nat.udp_update_time =
account.143.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.143.blf.subscribe_period =
account.143.dtmf.type =
account.143.dtmf.dtmf_payload =
account.143.dtmf.info_type =
account.143.100rel_enable =
account.143.subscribe_register =
account.143.subscribe_mwi =
account.143.subscribe_mwi_expires =
account.143.subscribe_mwi_to_vm =
voice_mail.number.143 = %BWVOICE-PORTAL-NUMBER-143%
account.143.display_mwi.enable =
account.143.cid_source =
```

```

account.143.cid_source_privacy =
account.143.cid_source_ppi =
account.143.session_timer.enable =
account.143.session_timer.expires =
account.143.session_timer.refresher =
account.143.enable_user_equal_phone =
account.143.srtp_encryption =
account.143.ptime =
account.143.shared_line = %BWSHAREDLINE-BINARY-143%
account.143.register_mac =
account.143.register_line =
account.143.reg_fail_retry_interval =
account.143.reg_failed_retry_min_time =
account.143.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.143.conf_type =
account.143.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-143%

account.143.sip_server_type =
account.143.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.143.register_expires_overlap =
account.143.subscribe_expires_overlap =
account.143.auto_dial_enable =
account.143.auto_dial_num =
account.143.cp_source =
account.143.transfer_refer_to_contact_header.enable =
#V80 Add
account.143.custom_ua =
account.143.callpark_enable =
account.143.check_cseq.enable =
account.143.check_to_tag.enable =
account.143.hold_use_inactive =
account.143.line_seize.expires =
account.143.update_ack_while_dialing =
account.143.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.143.always_fwd.enable =
account.143.always_fwd.target =
account.143.always_fwd.off_code =
account.143.always_fwd.on_code =
account.143.busy_fwd.enable =

```

```

account.143.busy_fwd.target =
account.143.busy_fwd.off_code =
account.143.busy_fwd.on_code =
account.143.timeout_fwd.enable =
account.143.timeout_fwd.target =
account.143.timeout_fwd.timeout =
account.143.timeout_fwd.off_code =
account.143.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.143.dnd.enable =
account.143.dnd.on_code =
account.143.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.143.reg.enable =
handset.143.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####
account.143.xsi.user =%BWLOGIN-ID-143%
account.143.xsi.password =%XSIPASSWORD-143%
account.143.xsi.host =%XSP_ADDRESS%
account.143.xsi.server_type =
account.143.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.143.ldap.enable =
handset.143.ldap.name_filter=
handset.143.ldap.number_filter=
handset.143.ldap.host=
handset.143.ldap.port=
handset.143.ldap.base=
handset.143.ldap.user=
handset.143.ldap.password=
handset.143.ldap.max_hits=
handset.143.ldap.name_attr=
handset.143.ldap.numb_attr=
handset.143.ldap.display_name=
handset.143.ldap.version=
handset.143.ldap.call_in_lookup=

```

```
handset.143.ldap.ldap_sort=
handset.143.ldap.tls_mode=
handset.143.ldap.call_out_lookup=
handset.143.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account144 Settings
##
#####
#####

account.144.enable=%BWLIN-BINARY-144%
account.144.label=%BWEXTENSION-144%
account.144.display_name=%BWCLID-144%
account.144.auth_name=%BWAUTHUSER-144%
account.144.user_name=%BWLINPORT-144%
account.144.password=%BWAUTHPASSWORD-144%

#W80B ADD
account.144.sip_server.template =
account.144.media_transmit.enable =

account.144.alarm.template =
account.144.alarm.server =
account.144.alarm.number =

#####
#####
##                               Failback
##
#####
#####

account.144.sip_server.1.failback_mode =
account.144.sip_server.1.failback_timeout =
account.144.sip_server.1.register_on_enable =
account.144.sip_server.1.failback_subscribe.enable =
account.144.sip_server.1.invite_retry_counts =
account.144.sip_server.1.only_signal_with_registered =

account.144.sip_server.2.failback_mode =
account.144.sip_server.2.failback_timeout =
account.144.sip_server.2.register_on_enable =
account.144.sip_server.2.failback_subscribe.enable =
account.144.sip_server.2.invite_retry_counts =
account.144.sip_server.2.only_signal_with_registered =

account.144.naptr_build =
account.144.fallback.redundancy_type =
account.144.fallback.timeout =

account.144.dns_cache_type =
account.144.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
```



```

account.144.anonymous_call =
account.144.reject_anonymous_call =
account.144.send_anonymous_code =
account.144.anonymous_call_oncode =
account.144.anonymous_call_offcode =
account.144.send_anonymous_rejection_code =
account.144.anonymous_reject_oncode =
account.144.anonymous_reject_offcode =

#####
#####
##
##                               Codec
##
#####
#####
account.144.codec.g722.enable =
account.144.codec.g722.priority =

account.144.codec.g729.enable =
account.144.codec.g729.priority =

account.144.codec.g726_16.enable =
account.144.codec.g726_16.priority =

account.144.codec.g726_24.enable =
account.144.codec.g726_24.priority =

account.144.codec.g726_32.enable =
account.144.codec.g726_32.priority =

account.144.codec.g726_40.enable =
account.144.codec.g726_40.priority =

account.144.codec.ilbc.enable =
account.144.codec.ilbc.priority =

account.144.codec.pcmu.enable =
account.144.codec.pcmu.priority =

account.144.codec.pcma.enable =
account.144.codec.pcma.priority =

account.144.codec.opus.enable =
account.144.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####
account.144.nat.nat_traversal =
account.144.nat.udp_update_enable =
account.144.nat.udp_update_time =
account.144.nat.rport =

#####
#####
##
##                               Register Advanced
##

```

```
#####
#####

account.144.blf.subscribe_period =
account.144.dtmf.type =
account.144.dtmf.dtmf_payload =
account.144.dtmf.info_type =
account.144.100rel_enable =
account.144.subscribe_register =
account.144.subscribe_mwi =
account.144.subscribe_mwi_expires =
account.144.subscribe_mwi_to_vm =
voice_mail.number.144 = %BWVOICE-PORTAL-NUMBER-144%
account.144.display_mwi.enable =
account.144.cid_source =
account.144.cid_source_privacy =
account.144.cid_source_ppi =
account.144.session_timer.enable =
account.144.session_timer.expires =
account.144.session_timer.refresher =
account.144.enable_user_equal_phone =
account.144.srtp_encryption =
account.144.ptime =
account.144.shared_line = %BWSHAREDLINE-BINARY-144%
account.144.register_mac =
account.144.register_line =
account.144.reg_fail_retry_interval =
account.144.reg_failed_retry_min_time =
account.144.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.144.conf_type =
account.144.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-144%

account.144.sip_server_type =
account.144.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.144.register_expires_overlap =
account.144.subscribe_expires_overlap =
account.144.auto_dial_enable =
account.144.auto_dial_num =
account.144.cp_source =
account.144.transfer_refer_to_contact_header.enable =
#V80 Add
account.144.custom_ua =
account.144.callpark_enable =
account.144.check_cseq.enable =
account.144.check_to_tag.enable =
account.144.hold_use_inactive =
```

```

account.144.line_seize.expires =
account.144.update_ack_while_dialing =
account.144.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.144.always_fwd.enable =
account.144.always_fwd.target =
account.144.always_fwd.off_code =
account.144.always_fwd.on_code =
account.144.busy_fwd.enable =
account.144.busy_fwd.target =
account.144.busy_fwd.off_code =
account.144.busy_fwd.on_code =
account.144.timeout_fwd.enable =
account.144.timeout_fwd.target =
account.144.timeout_fwd.timeout =
account.144.timeout_fwd.off_code =
account.144.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.144.dnd.enable =
account.144.dnd.on_code =
account.144.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.144.reg.enable =
handset.144.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.144.xsi.user =%BWLOGIN-ID-144%
account.144.xsi.password =%XSIPASSWORD-144%
account.144.xsi.host =%XSP_ADDRESS%
account.144.xsi.server_type =
account.144.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.144.ldap.enable =
handset.144.ldap.name_filter=
handset.144.ldap.number_filter=
handset.144.ldap.host=
handset.144.ldap.port=
handset.144.ldap.base=
handset.144.ldap.user=
handset.144.ldap.password=
handset.144.ldap.max_hits=
handset.144.ldap.name_attr=
handset.144.ldap.numb_attr=
handset.144.ldap.display_name=
handset.144.ldap.version=
handset.144.ldap.call_in_lookup=
handset.144.ldap.ldap_sort=
handset.144.ldap.tls_mode=
handset.144.ldap.call_out_lookup=
handset.144.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account145 Settings
##
#####
#####

account.145.enable=%BWLIN-BINARY-145%
account.145.label=%BWEXTENSION-145%
account.145.display_name=%BWCLID-145%
account.145.auth_name=%BWAUTHUSER-145%
account.145.user_name=%BWLINPORT-145%
account.145.password=%BWAUTHPASSWORD-145%

#W80B ADD
account.145.sip_server.template =
account.145.media_transmit.enable =

account.145.alarm.template =
account.145.alarm.server =
account.145.alarm.number =

#####
#####
##                                     Failback
##
#####
#####
account.145.sip_server.1.failback_mode =
account.145.sip_server.1.failback_timeout =
account.145.sip_server.1.register_on_enable =
account.145.sip_server.1.failback_subscribe.enable =
account.145.sip_server.1.invite_retry_counts =
account.145.sip_server.1.only_signal_with_registered =

account.145.sip_server.2.failback_mode =
account.145.sip_server.2.failback_timeout =
account.145.sip_server.2.register_on_enable =
account.145.sip_server.2.failback_subscribe.enable =
```

```
account.145.sip_server.2.invite_retry_counts =
account.145.sip_server.2.only_signal_with_registered =

account.145.naptr_build =
account.145.fallback.redundancy_type =
account.145.fallback.timeout =

account.145.dns_cache_type =
account.145.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.145.anonymous_call =
account.145.reject_anonymous_call =
account.145.send_anonymous_code =
account.145.anonymous_call_oncode =
account.145.anonymous_call_offcode =
account.145.send_anonymous_rejection_code =
account.145.anonymous_reject_oncode =
account.145.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.145.codec.g722.enable =
account.145.codec.g722.priority =

account.145.codec.g729.enable =
account.145.codec.g729.priority =

account.145.codec.g726_16.enable =
account.145.codec.g726_16.priority =

account.145.codec.g726_24.enable =
account.145.codec.g726_24.priority =

account.145.codec.g726_32.enable =
account.145.codec.g726_32.priority =

account.145.codec.g726_40.enable =
account.145.codec.g726_40.priority =

account.145.codec.ilbc.enable =
account.145.codec.ilbc.priority =

account.145.codec.pcmu.enable =
account.145.codec.pcmu.priority =

account.145.codec.pcma.enable =
account.145.codec.pcma.priority =

account.145.codec.opus.enable =
account.145.codec.opus.priority =
```

```
#####
#####
##                               NAT Settings
##
#####
#####

account.145.nat.nat_traversal =
account.145.nat.udp_update_enable =
account.145.nat.udp_update_time =
account.145.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.145.blf.subscribe_period =
account.145.dtmf.type =
account.145.dtmf.dtmf_payload =
account.145.dtmf.info_type =
account.145.100rel_enable =
account.145.subscribe_register =
account.145.subscribe_mwi =
account.145.subscribe_mwi_expires =
account.145.subscribe_mwi_to_vm =
voice_mail.number.145 = %BWVOICE-PORTAL-NUMBER-145%
account.145.display_mwi.enable =
account.145.cid_source =
account.145.cid_source_privacy =
account.145.cid_source_ppi =
account.145.session_timer.enable =
account.145.session_timer.expires =
account.145.session_timer.refresher =
account.145.enable_user_equal_phone =
account.145.srtp_encryption =
account.145.ptime =
account.145.shared_line = %BWSHAREDLINE-BINARY-145%
account.145.register_mac =
account.145.register_line =
account.145.reg_fail_retry_interval =
account.145.reg_failed_retry_min_time =
account.145.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.145.conf_type =
account.145.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-145%

account.145.sip_server_type =
account.145.unregister_on_reboot =

#####
#####
##                               Register Other
##
```

```
#####
#####
##DECT V81 Add

account.145.register_expires_overlap =
account.145.subscribe_expires_overlap =
account.145.auto_dial_enable =
account.145.auto_dial_num =
account.145.cp_source =
account.145.transfer_refer_to_contact_header.enable =
#V80 Add
account.145.custom_ua =
account.145.callpark_enable =
account.145.check_cseq.enable =
account.145.check_to_tag.enable =
account.145.hold_use_inactive =
account.145.line_seize.expires =
account.145.update_ack_while_dialing =
account.145.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.145.always_fwd.enable =
account.145.always_fwd.target =
account.145.always_fwd.off_code =
account.145.always_fwd.on_code =
account.145.busy_fwd.enable =
account.145.busy_fwd.target =
account.145.busy_fwd.off_code =
account.145.busy_fwd.on_code =
account.145.timeout_fwd.enable =
account.145.timeout_fwd.target =
account.145.timeout_fwd.timeout =
account.145.timeout_fwd.off_code =
account.145.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.145.dnd.enable =
account.145.dnd.on_code =
account.145.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.145.reg.enable =
handset.145.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.145.xsi.user =%BWLOGIN-ID-145%
account.145.xsi.password =%XSIPASSWORD-145%
account.145.xsi.host =%XSP_ADDRESS%
account.145.xsi.server_type =
account.145.xsi.port =

#####
#####
##          LADP
##
#####
handset.145.ldap.enable =
handset.145.ldap.name_filter=
handset.145.ldap.number_filter=
handset.145.ldap.host=
handset.145.ldap.port=
handset.145.ldap.base=
handset.145.ldap.user=
handset.145.ldap.password=
handset.145.ldap.max_hits=
handset.145.ldap.name_attr=
handset.145.ldap.numb_attr=
handset.145.ldap.display_name=
handset.145.ldap.version=
handset.145.ldap.call_in_lookup=
handset.145.ldap.ldap_sort=
handset.145.ldap.tls_mode=
handset.145.ldap.call_out_lookup=
handset.145.ldap.incoming_call_special_search.enable=

#####
#####
##          Account146 Settings
##
#####

account.146.enable=%BWLINE-BINARY-146%
account.146.label=%BWEXTENSION-146%
account.146.display_name=%BWCLID-146%
account.146.auth_name=%BWAUTHUSER-146%
account.146.user_name=%BWLINERPORT-146%
account.146.password=%BWAUTHPASSWORD-146%

#W80B ADD
account.146.sip_server.template =
account.146.media_transmit.enable =

account.146.alarm.template =
account.146.alarm.server =
account.146.alarm.number =

```



```
#####
#####
##                               Failback
##
#####
#####
account.146.sip_server.1.failback_mode =
account.146.sip_server.1.failback_timeout =
account.146.sip_server.1.register_on_enable =
account.146.sip_server.1.failback_subscribe.enable =
account.146.sip_server.1.invite_retry_counts =
account.146.sip_server.1.only_signal_with_registered =

account.146.sip_server.2.failback_mode =
account.146.sip_server.2.failback_timeout =
account.146.sip_server.2.register_on_enable =
account.146.sip_server.2.failback_subscribe.enable =
account.146.sip_server.2.invite_retry_counts =
account.146.sip_server.2.only_signal_with_registered =

account.146.naptr_build =
account.146.fallback.redundancy_type =
account.146.fallback.timeout =

account.146.dns_cache_type =
account.146.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.146.anonymous_call =
account.146.reject_anonymous_call =
account.146.send_anonymous_code =
account.146.anonymous_call_oncode =
account.146.anonymous_call_offcode =
account.146.send_anonymous_rejection_code =
account.146.anonymous_reject_oncode =
account.146.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.146.codec.g722.enable =
account.146.codec.g722.priority =

account.146.codec.g729.enable =
account.146.codec.g729.priority =

account.146.codec.g726_16.enable =
account.146.codec.g726_16.priority =

account.146.codec.g726_24.enable =
account.146.codec.g726_24.priority =

account.146.codec.g726_32.enable =
account.146.codec.g726_32.priority =
```

```

account.146.codec.g726_40.enable =
account.146.codec.g726_40.priority =

account.146.codec.ilbc.enable =
account.146.codec.ilbc.priority =

account.146.codec.pcmu.enable =
account.146.codec.pcmu.priority =

account.146.codec.pcma.enable =
account.146.codec.pcma.priority =

account.146.codec.opus.enable =
account.146.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.146.nat.nat_traversal =
account.146.nat.udp_update_enable =
account.146.nat.udp_update_time =
account.146.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.146.blf.subscribe_period =
account.146.dtmf.type =
account.146.dtmf.dtmf_payload =
account.146.dtmf.info_type =
account.146.100rel_enable =
account.146.subscribe_register =
account.146.subscribe_mwi =
account.146.subscribe_mwi_expires =
account.146.subscribe_mwi_to_vm =
voice_mail.number.146 = %BWVOICE-PORTAL-NUMBER-146%
account.146.display_mwi.enable =
account.146.cid_source =
account.146.cid_source_privacy =
account.146.cid_source_ppi =
account.146.session_timer.enable =
account.146.session_timer.expires =
account.146.session_timer.refresher =
account.146.enable_user_equal_phone =
account.146.srtp_encryption =
account.146.ptime =
account.146.shared_line = %BWSHAREDLINE-BINARY-146%
account.146.register_mac =
account.146.register_line =
account.146.reg_fail_retry_interval =
account.146.reg_failed_retry_min_time =
account.146.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.146.conf_type =
account.146.conf_uri = %BWNWORK-CONFERENCE-SIPURI-146%

account.146.sip_server_type =
account.146.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.146.register_expires_overlap =
account.146.subscribe_expires_overlap =
account.146.auto_dial_enable =
account.146.auto_dial_num =
account.146.cp_source =
account.146.transfer_refer_to_contact_header.enable =
#V80 Add
account.146.custom_ua =
account.146.callpark_enable =
account.146.check_cseq.enable =
account.146.check_to_tag.enable =
account.146.hold_use_inactive =
account.146.line_seize.expires =
account.146.update_ack_while_dialing =
account.146.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.146.always_fwd.enable =
account.146.always_fwd.target =
account.146.always_fwd.off_code =
account.146.always_fwd.on_code =
account.146.busy_fwd.enable =
account.146.busy_fwd.target =
account.146.busy_fwd.off_code =
account.146.busy_fwd.on_code =
account.146.timeout_fwd.enable =
account.146.timeout_fwd.target =
account.146.timeout_fwd.timeout =
account.146.timeout_fwd.off_code =
account.146.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```
account.146.dnd.enable =
account.146.dnd.on_code =
account.146.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.146.reg.enable =
handset.146.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.146.xsi.user =%BWLOGIN-ID-146%
account.146.xsi.password =%XSIPASSWORD-146%
account.146.xsi.host =%XSP_ADDRESS%
account.146.xsi.server_type =
account.146.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.146.ldap.enable =
handset.146.ldap.name_filter=
handset.146.ldap.number_filter=
handset.146.ldap.host=
handset.146.ldap.port=
handset.146.ldap.base=
handset.146.ldap.user=
handset.146.ldap.password=
handset.146.ldap.max_hits=
handset.146.ldap.name_attr=
handset.146.ldap.numb_attr=
handset.146.ldap.display_name=
handset.146.ldap.version=
handset.146.ldap.call_in_lookup=
handset.146.ldap.ldap_sort=
handset.146.ldap.tls_mode=
handset.146.ldap.call_out_lookup=
handset.146.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account147 Settings
##
#####
#####
```

```

account.147.enable=%BWLIN-BINARY-147%
account.147.label=%BWEXTENSION-147%
account.147.display_name=%BWCLID-147%
account.147.auth_name=%BWAUTHUSER-147%
account.147.user_name=%BWLINPORT-147%
account.147.password=%BWAUTHPASSWORD-147%

#W80B ADD
account.147.sip_server.template =
account.147.media_transmit.enable =

account.147.alarm.template =
account.147.alarm.server =
account.147.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.147.sip_server.1.failback_mode =
account.147.sip_server.1.failback_timeout =
account.147.sip_server.1.register_on_enable =
account.147.sip_server.1.failback_subscribe.enable =
account.147.sip_server.1.invite_retry_counts =
account.147.sip_server.1.only_signal_with_registered =

account.147.sip_server.2.failback_mode =
account.147.sip_server.2.failback_timeout =
account.147.sip_server.2.register_on_enable =
account.147.sip_server.2.failback_subscribe.enable =
account.147.sip_server.2.invite_retry_counts =
account.147.sip_server.2.only_signal_with_registered =

account.147.naptr_build =
account.147.fallback.redundancy_type =
account.147.fallback.timeout =

account.147.dns_cache_type =
account.147.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.147.anonymous_call =
account.147.reject_anonymous_call =
account.147.send_anonymous_code =
account.147.anonymous_call_oncode =
account.147.anonymous_call_offcode =
account.147.send_anonymous_rejection_code =
account.147.anonymous_reject_oncode =
account.147.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.147.codec.g722.enable =
account.147.codec.g722.priority =

account.147.codec.g729.enable =
account.147.codec.g729.priority =

account.147.codec.g726_16.enable =
account.147.codec.g726_16.priority =

account.147.codec.g726_24.enable =
account.147.codec.g726_24.priority =

account.147.codec.g726_32.enable =
account.147.codec.g726_32.priority =

account.147.codec.g726_40.enable =
account.147.codec.g726_40.priority =

account.147.codec.ilbc.enable =
account.147.codec.ilbc.priority =

account.147.codec.pcmu.enable =
account.147.codec.pcmu.priority =

account.147.codec.pcma.enable =
account.147.codec.pcma.priority =

account.147.codec.opus.enable =
account.147.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.147.nat.nat_traversal =
account.147.nat.udp_update_enable =
account.147.nat.udp_update_time =
account.147.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.147.blf.subscribe_period =
account.147.dtmf.type =
account.147.dtmf.dtmf_payload =
account.147.dtmf.info_type =
account.147.100rel_enable =
account.147.subscribe_register =
account.147.subscribe_mwi =
account.147.subscribe_mwi_expires =
account.147.subscribe_mwi_to_vm =
voice_mail.number.147 = %BWVOICE-PORTAL-NUMBER-147%
account.147.display_mwi.enable =
account.147.cid_source =
```

```

account.147.cid_source_privacy =
account.147.cid_source_ppi =
account.147.session_timer.enable =
account.147.session_timer.expires =
account.147.session_timer.refresher =
account.147.enable_user_equal_phone =
account.147.srtp_encryption =
account.147.ptime =
account.147.shared_line = %BWSHAREDLINE-BINARY-147%
account.147.register_mac =
account.147.register_line =
account.147.reg_fail_retry_interval =
account.147.reg_failed_retry_min_time =
account.147.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.147.conf_type =
account.147.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-147%

account.147.sip_server_type =
account.147.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.147.register_expires_overlap =
account.147.subscribe_expires_overlap =
account.147.auto_dial_enable =
account.147.auto_dial_num =
account.147.cp_source =
account.147.transfer_refer_to_contact_header.enable =
#V80 Add
account.147.custom_ua =
account.147.callpark_enable =
account.147.check_cseq.enable =
account.147.check_to_tag.enable =
account.147.hold_use_inactive =
account.147.line_seize.expires =
account.147.update_ack_while_dialing =
account.147.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.147.always_fwd.enable =
account.147.always_fwd.target =
account.147.always_fwd.off_code =
account.147.always_fwd.on_code =
account.147.busy_fwd.enable =

```

```

account.147.busy_fwd.target =
account.147.busy_fwd.off_code =
account.147.busy_fwd.on_code =
account.147.timeout_fwd.enable =
account.147.timeout_fwd.target =
account.147.timeout_fwd.timeout =
account.147.timeout_fwd.off_code =
account.147.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.147.dnd.enable =
account.147.dnd.on_code =
account.147.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.147.reg.enable =
handset.147.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.147.xsi.user =%BWLOGIN-ID-147%
account.147.xsi.password =%XSIPASSWORD-147%
account.147.xsi.host =%XSP_ADDRESS%
account.147.xsi.server_type =
account.147.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.147.ldap.enable =
handset.147.ldap.name_filter=
handset.147.ldap.number_filter=
handset.147.ldap.host=
handset.147.ldap.port=
handset.147.ldap.base=
handset.147.ldap.user=
handset.147.ldap.password=
handset.147.ldap.max_hits=
handset.147.ldap.name_attr=
handset.147.ldap.numb_attr=
handset.147.ldap.display_name=
handset.147.ldap.version=
handset.147.ldap.call_in_lookup=

```



```
handset.147.ldap.ldap_sort=
handset.147.ldap.tls_mode=
handset.147.ldap.call_out_lookup=
handset.147.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account148 Settings
##
#####
#####

account.148.enable=%BWLIN-BINARY-148%
account.148.label=%BWEXTENSION-148%
account.148.display_name=%BWCLID-148%
account.148.auth_name=%BWAUTHUSER-148%
account.148.user_name=%BWLINPORT-148%
account.148.password=%BWAUTHPASSWORD-148%

#W80B ADD
account.148.sip_server.template =
account.148.media_transmit.enable =

account.148.alarm.template =
account.148.alarm.server =
account.148.alarm.number =

#####
#####
##                               Failback
##
#####
#####

account.148.sip_server.1.failback_mode =
account.148.sip_server.1.failback_timeout =
account.148.sip_server.1.register_on_enable =
account.148.sip_server.1.failback_subscribe.enable =
account.148.sip_server.1.invite_retry_counts =
account.148.sip_server.1.only_signal_with_registered =

account.148.sip_server.2.failback_mode =
account.148.sip_server.2.failback_timeout =
account.148.sip_server.2.register_on_enable =
account.148.sip_server.2.failback_subscribe.enable =
account.148.sip_server.2.invite_retry_counts =
account.148.sip_server.2.only_signal_with_registered =

account.148.naptr_build =
account.148.fallback.redundancy_type =
account.148.fallback.timeout =

account.148.dns_cache_type =
account.148.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
```

```
account.148.anonymous_call =
account.148.reject_anonymous_call =
account.148.send_anonymous_code =
account.148.anonymous_call_oncode =
account.148.anonymous_call_offcode =
account.148.send_anonymous_rejection_code =
account.148.anonymous_reject_oncode =
account.148.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.148.codec.g722.enable =
account.148.codec.g722.priority =

account.148.codec.g729.enable =
account.148.codec.g729.priority =

account.148.codec.g726_16.enable =
account.148.codec.g726_16.priority =

account.148.codec.g726_24.enable =
account.148.codec.g726_24.priority =

account.148.codec.g726_32.enable =
account.148.codec.g726_32.priority =

account.148.codec.g726_40.enable =
account.148.codec.g726_40.priority =

account.148.codec.ilbc.enable =
account.148.codec.ilbc.priority =

account.148.codec.pcmu.enable =
account.148.codec.pcmu.priority =

account.148.codec.pcma.enable =
account.148.codec.pcma.priority =

account.148.codec.opus.enable =
account.148.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
##
#####
#####

account.148.nat.nat_traversal =
account.148.nat.udp_update_enable =
account.148.nat.udp_update_time =
account.148.nat.rport =

#####
#####
##                                     Register Advanced
##
##
```

```
#####
#####

account.148.blf.subscribe_period =
account.148.dtmf.type =
account.148.dtmf.dtmf_payload =
account.148.dtmf.info_type =
account.148.100rel_enable =
account.148.subscribe_register =
account.148.subscribe_mwi =
account.148.subscribe_mwi_expires =
account.148.subscribe_mwi_to_vm =
voice_mail.number.148 = %BWVOICE-PORTAL-NUMBER-148%
account.148.display_mwi.enable =
account.148.cid_source =
account.148.cid_source_privacy =
account.148.cid_source_ppi =
account.148.session_timer.enable =
account.148.session_timer.expires =
account.148.session_timer.refreshes =
account.148.enable_user_equal_phone =
account.148.srtp_encryption =
account.148.ptime =
account.148.shared_line = %BWSHAREDLINE-BINARY-148%
account.148.register_mac =
account.148.register_line =
account.148.reg_fail_retry_interval =
account.148.reg_failed_retry_min_time =
account.148.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.148.conf_type =
account.148.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-148%

account.148.sip_server_type =
account.148.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.148.register_expires_overlap =
account.148.subscribe_expires_overlap =
account.148.auto_dial_enable =
account.148.auto_dial_num =
account.148.cp_source =
account.148.transfer_refer_to_contact_header.enable =
#V80 Add
account.148.custom_ua =
account.148.callpark_enable =
account.148.check_cseq.enable =
account.148.check_to_tag.enable =
account.148.hold_use_inactive =
```

```

account.148.line_seize.expires =
account.148.update_ack_while_dialing =
account.148.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.148.always_fwd.enable =
account.148.always_fwd.target =
account.148.always_fwd.off_code =
account.148.always_fwd.on_code =
account.148.busy_fwd.enable =
account.148.busy_fwd.target =
account.148.busy_fwd.off_code =
account.148.busy_fwd.on_code =
account.148.timeout_fwd.enable =
account.148.timeout_fwd.target =
account.148.timeout_fwd.timeout =
account.148.timeout_fwd.off_code =
account.148.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.148.dnd.enable =
account.148.dnd.on_code =
account.148.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.148.reg.enable =
handset.148.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.148.xsi.user =%BWLOGIN-ID-148%
account.148.xsi.password =%XSIPASSWORD-148%
account.148.xsi.host =%XSP_ADDRESS%
account.148.xsi.server_type =
account.148.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.148.ldap.enable =
handset.148.ldap.name_filter=
handset.148.ldap.number_filter=
handset.148.ldap.host=
handset.148.ldap.port=
handset.148.ldap.base=
handset.148.ldap.user=
handset.148.ldap.password=
handset.148.ldap.max_hits=
handset.148.ldap.name_attr=
handset.148.ldap.numb_attr=
handset.148.ldap.display_name=
handset.148.ldap.version=
handset.148.ldap.call_in_lookup=
handset.148.ldap.ldap_sort=
handset.148.ldap.tls_mode=
handset.148.ldap.call_out_lookup=
handset.148.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account149 Settings
##
#####
#####

account.149.enable=%BWLIN-BINARY-149%
account.149.label=%BWEXTENSION-149%
account.149.display_name=%BWCLID-149%
account.149.auth_name=%BWAUTHUSER-149%
account.149.user_name=%BWLINPORT-149%
account.149.password=%BWAUTHPASSWORD-149%

#W80B ADD
account.149.sip_server.template =
account.149.media_transmit.enable =

account.149.alarm.template =
account.149.alarm.server =
account.149.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.149.sip_server.1.failback_mode =
account.149.sip_server.1.failback_timeout =
account.149.sip_server.1.register_on_enable =
account.149.sip_server.1.failback_subscribe.enable =
account.149.sip_server.1.invite_retry_counts =
account.149.sip_server.1.only_signal_with_registered =

account.149.sip_server.2.failback_mode =
account.149.sip_server.2.failback_timeout =
account.149.sip_server.2.register_on_enable =
account.149.sip_server.2.failback_subscribe.enable =
```

```
account.149.sip_server.2.invite_retry_counts =
account.149.sip_server.2.only_signal_with_registered =

account.149.naptr_build =
account.149.fallback.redundancy_type =
account.149.fallback.timeout =

account.149.dns_cache_type =
account.149.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.149.anonymous_call =
account.149.reject_anonymous_call =
account.149.send_anonymous_code =
account.149.anonymous_call_oncode =
account.149.anonymous_call_offcode =
account.149.send_anonymous_rejection_code =
account.149.anonymous_reject_oncode =
account.149.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.149.codec.g722.enable =
account.149.codec.g722.priority =

account.149.codec.g729.enable =
account.149.codec.g729.priority =

account.149.codec.g726_16.enable =
account.149.codec.g726_16.priority =

account.149.codec.g726_24.enable =
account.149.codec.g726_24.priority =

account.149.codec.g726_32.enable =
account.149.codec.g726_32.priority =

account.149.codec.g726_40.enable =
account.149.codec.g726_40.priority =

account.149.codec.ilbc.enable =
account.149.codec.ilbc.priority =

account.149.codec.pcmu.enable =
account.149.codec.pcmu.priority =

account.149.codec.pcma.enable =
account.149.codec.pcma.priority =

account.149.codec.opus.enable =
account.149.codec.opus.priority =
```

```
#####
#####
##                               NAT Settings
##
#####
#####

account.149.nat.nat_traversal =
account.149.nat.udp_update_enable =
account.149.nat.udp_update_time =
account.149.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.149.blf.subscribe_period =
account.149.dtmf.type =
account.149.dtmf.dtmf_payload =
account.149.dtmf.info_type =
account.149.100rel_enable =
account.149.subscribe_register =
account.149.subscribe_mwi =
account.149.subscribe_mwi_expires =
account.149.subscribe_mwi_to_vm =
voice_mail.number.149 = %BWVOICE-PORTAL-NUMBER-149%
account.149.display_mwi.enable =
account.149.cid_source =
account.149.cid_source_privacy =
account.149.cid_source_ppi =
account.149.session_timer.enable =
account.149.session_timer.expires =
account.149.session_timer.refresher =
account.149.enable_user_equal_phone =
account.149.srtp_encryption =
account.149.ptime =
account.149.shared_line = %BWSHAREDLINE-BINARY-149%
account.149.register_mac =
account.149.register_line =
account.149.reg_fail_retry_interval =
account.149.reg_failed_retry_min_time =
account.149.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.149.conf_type =
account.149.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-149%

account.149.sip_server_type =
account.149.unregister_on_reboot =

#####
#####
##                               Register Other
##
```

```
#####
#####
##DECT V81 Add

account.149.register_expires_overlap =
account.149.subscribe_expires_overlap =
account.149.auto_dial_enable =
account.149.auto_dial_num =
account.149.cp_source =
account.149.transfer_refer_to_contact_header.enable =
#V80 Add
account.149.custom_ua =
account.149.callpark_enable =
account.149.check_cseq.enable =
account.149.check_to_tag.enable =
account.149.hold_use_inactive =
account.149.line_seize.expires =
account.149.update_ack_while_dialing =
account.149.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.149.always_fwd.enable =
account.149.always_fwd.target =
account.149.always_fwd.off_code =
account.149.always_fwd.on_code =
account.149.busy_fwd.enable =
account.149.busy_fwd.target =
account.149.busy_fwd.off_code =
account.149.busy_fwd.on_code =
account.149.timeout_fwd.enable =
account.149.timeout_fwd.target =
account.149.timeout_fwd.timeout =
account.149.timeout_fwd.off_code =
account.149.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.149.dnd.enable =
account.149.dnd.on_code =
account.149.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.149.reg.enable =
handset.149.ipui =

#####
#####
```



```

##          Broadsoft XSI
##
#####

account.149.xsi.user =%BWLOGIN-ID-149%
account.149.xsi.password =%XSIPASSWORD-149%
account.149.xsi.host =%XSP_ADDRESS%
account.149.xsi.server_type =
account.149.xsi.port =

#####
#####
##          LADP
##
#####
handset.149.ldap.enable =
handset.149.ldap.name_filter=
handset.149.ldap.number_filter=
handset.149.ldap.host=
handset.149.ldap.port=
handset.149.ldap.base=
handset.149.ldap.user=
handset.149.ldap.password=
handset.149.ldap.max_hits=
handset.149.ldap.name_attr=
handset.149.ldap.numb_attr=
handset.149.ldap.display_name=
handset.149.ldap.version=
handset.149.ldap.call_in_lookup=
handset.149.ldap.ldap_sort=
handset.149.ldap.tls_mode=
handset.149.ldap.call_out_lookup=
handset.149.ldap.incoming_call_special_search.enable=

#####
#####
##          Account150 Settings
##
#####

account.150.enable=%BWLINE-BINARY-150%
account.150.label=%BWEXTENSION-150%
account.150.display_name=%BWCLID-150%
account.150.auth_name=%BWAUTHUSER-150%
account.150.user_name=%BWLINERPORT-150%
account.150.password=%BWAUTHPASSWORD-150%

#W80B ADD
account.150.sip_server.template =
account.150.media_transmit.enable =

account.150.alarm.template =
account.150.alarm.server =
account.150.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.150.sip_server.1.failback_mode =
account.150.sip_server.1.failback_timeout =
account.150.sip_server.1.register_on_enable =
account.150.sip_server.1.failback_subscribe.enable =
account.150.sip_server.1.invite_retry_counts =
account.150.sip_server.1.only_signal_with_registered =

account.150.sip_server.2.failback_mode =
account.150.sip_server.2.failback_timeout =
account.150.sip_server.2.register_on_enable =
account.150.sip_server.2.failback_subscribe.enable =
account.150.sip_server.2.invite_retry_counts =
account.150.sip_server.2.only_signal_with_registered =

account.150.naptr_build =
account.150.fallback.redundancy_type =
account.150.fallback.timeout =

account.150.dns_cache_type =
account.150.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.150.anonymous_call =
account.150.reject_anonymous_call =
account.150.send_anonymous_code =
account.150.anonymous_call_oncode =
account.150.anonymous_call_offcode =
account.150.send_anonymous_rejection_code =
account.150.anonymous_reject_oncode =
account.150.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.150.codec.g722.enable =
account.150.codec.g722.priority =

account.150.codec.g729.enable =
account.150.codec.g729.priority =

account.150.codec.g726_16.enable =
account.150.codec.g726_16.priority =

account.150.codec.g726_24.enable =
account.150.codec.g726_24.priority =

account.150.codec.g726_32.enable =
account.150.codec.g726_32.priority =
```

```

account.150.codec.g726_40.enable =
account.150.codec.g726_40.priority =

account.150.codec.ilbc.enable =
account.150.codec.ilbc.priority =

account.150.codec.pcmu.enable =
account.150.codec.pcmu.priority =

account.150.codec.pcma.enable =
account.150.codec.pcma.priority =

account.150.codec.opus.enable =
account.150.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.150.nat.nat_traversal =
account.150.nat.udp_update_enable =
account.150.nat.udp_update_time =
account.150.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.150.blf.subscribe_period =
account.150.dtmf.type =
account.150.dtmf.dtmf_payload =
account.150.dtmf.info_type =
account.150.100rel_enable =
account.150.subscribe_register =
account.150.subscribe_mwi =
account.150.subscribe_mwi_expires =
account.150.subscribe_mwi_to_vm =
voice_mail.number.150 = %BWVOICE-PORTAL-NUMBER-150%
account.150.display_mwi.enable =
account.150.cid_source =
account.150.cid_source_privacy =
account.150.cid_source_ppi =
account.150.session_timer.enable =
account.150.session_timer.expires =
account.150.session_timer.refresher =
account.150.enable_user_equal_phone =
account.150.srtp_encryption =
account.150.ptime =
account.150.shared_line = %BWSHAREDLINE-BINARY-150%
account.150.register_mac =
account.150.register_line =
account.150.reg_fail_retry_interval =
account.150.reg_failed_retry_min_time =
account.150.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.150.conf_type =
account.150.conf_uri = %BWNWORK-CONFERENCE-SIPURI-150%

account.150.sip_server_type =
account.150.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.150.register_expires_overlap =
account.150.subscribe_expires_overlap =
account.150.auto_dial_enable =
account.150.auto_dial_num =
account.150.cp_source =
account.150.transfer_refer_to_contact_header.enable =
#V80 Add
account.150.custom_ua =
account.150.callpark_enable =
account.150.check_cseq.enable =
account.150.check_to_tag.enable =
account.150.hold_use_inactive =
account.150.line_seize.expires =
account.150.update_ack_while_dialing =
account.150.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.150.always_fwd.enable =
account.150.always_fwd.target =
account.150.always_fwd.off_code =
account.150.always_fwd.on_code =
account.150.busy_fwd.enable =
account.150.busy_fwd.target =
account.150.busy_fwd.off_code =
account.150.busy_fwd.on_code =
account.150.timeout_fwd.enable =
account.150.timeout_fwd.target =
account.150.timeout_fwd.timeout =
account.150.timeout_fwd.off_code =
account.150.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```
account.150.dnd.enable =
account.150.dnd.on_code =
account.150.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.150.reg.enable =
handset.150.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####

account.150.xsi.user =%BWLOGIN-ID-150%
account.150.xsi.password =%XSIPASSWORD-150%
account.150.xsi.host =%XSP_ADDRESS%
account.150.xsi.server_type =
account.150.xsi.port =

#####
#####
##                               LADP
##
#####
#####
handset.150.ldap.enable =
handset.150.ldap.name_filter=
handset.150.ldap.number_filter=
handset.150.ldap.host=
handset.150.ldap.port=
handset.150.ldap.base=
handset.150.ldap.user=
handset.150.ldap.password=
handset.150.ldap.max_hits=
handset.150.ldap.name_attr=
handset.150.ldap.numb_attr=
handset.150.ldap.display_name=
handset.150.ldap.version=
handset.150.ldap.call_in_lookup=
handset.150.ldap.ldap_sort=
handset.150.ldap.tls_mode=
handset.150.ldap.call_out_lookup=
handset.150.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account151 Settings
##
#####
#####
```

```

account.151.enable=%BWLIN-BINARY-151%
account.151.label=%BWEXTENSION-151%
account.151.display_name=%BWCLID-151%
account.151.auth_name=%BWAUTHUSER-151%
account.151.user_name=%BWLINPORT-151%
account.151.password=%BWAUTHPASSWORD-151%

#W80B ADD
account.151.sip_server.template =
account.151.media_transmit.enable =

account.151.alarm.template =
account.151.alarm.server =
account.151.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.151.sip_server.1.failback_mode =
account.151.sip_server.1.failback_timeout =
account.151.sip_server.1.register_on_enable =
account.151.sip_server.1.failback_subscribe.enable =
account.151.sip_server.1.invite_retry_counts =
account.151.sip_server.1.only_signal_with_registered =

account.151.sip_server.2.failback_mode =
account.151.sip_server.2.failback_timeout =
account.151.sip_server.2.register_on_enable =
account.151.sip_server.2.failback_subscribe.enable =
account.151.sip_server.2.invite_retry_counts =
account.151.sip_server.2.only_signal_with_registered =

account.151.naptr_build =
account.151.fallback.redundancy_type =
account.151.fallback.timeout =

account.151.dns_cache_type =
account.151.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.151.anonymous_call =
account.151.reject_anonymous_call =
account.151.send_anonymous_code =
account.151.anonymous_call_oncode =
account.151.anonymous_call_offcode =
account.151.send_anonymous_rejection_code =
account.151.anonymous_reject_oncode =
account.151.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.151.codec.g722.enable =
account.151.codec.g722.priority =

account.151.codec.g729.enable =
account.151.codec.g729.priority =

account.151.codec.g726_16.enable =
account.151.codec.g726_16.priority =

account.151.codec.g726_24.enable =
account.151.codec.g726_24.priority =

account.151.codec.g726_32.enable =
account.151.codec.g726_32.priority =

account.151.codec.g726_40.enable =
account.151.codec.g726_40.priority =

account.151.codec.ilbc.enable =
account.151.codec.ilbc.priority =

account.151.codec.pcmu.enable =
account.151.codec.pcmu.priority =

account.151.codec.pcma.enable =
account.151.codec.pcma.priority =

account.151.codec.opus.enable =
account.151.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.151.nat.nat_traversal =
account.151.nat.udp_update_enable =
account.151.nat.udp_update_time =
account.151.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.151.blf.subscribe_period =
account.151.dtmf.type =
account.151.dtmf.dtmf_payload =
account.151.dtmf.info_type =
account.151.100rel_enable =
account.151.subscribe_register =
account.151.subscribe_mwi =
account.151.subscribe_mwi_expires =
account.151.subscribe_mwi_to_vm =
voice_mail.number.151 = %BWVOICE-PORTAL-NUMBER-151%
account.151.display_mwi.enable =
account.151.cid_source =
```

```

account.151.cid_source_privacy =
account.151.cid_source_ppi =
account.151.session_timer.enable =
account.151.session_timer.expires =
account.151.session_timer.refresher =
account.151.enable_user_equal_phone =
account.151.srtp_encryption =
account.151.ptime =
account.151.shared_line = %BWSHAREDLINE-BINARY-151%
account.151.register_mac =
account.151.register_line =
account.151.reg_fail_retry_interval =
account.151.reg_failed_retry_min_time =
account.151.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.151.conf_type =
account.151.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-151%

account.151.sip_server_type =
account.151.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.151.register_expires_overlap =
account.151.subscribe_expires_overlap =
account.151.auto_dial_enable =
account.151.auto_dial_num =
account.151.cp_source =
account.151.transfer_refer_to_contact_header.enable =
#V80 Add
account.151.custom_ua =
account.151.callpark_enable =
account.151.check_cseq.enable =
account.151.check_to_tag.enable =
account.151.hold_use_inactive =
account.151.line_seize.expires =
account.151.update_ack_while_dialing =
account.151.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.151.always_fwd.enable =
account.151.always_fwd.target =
account.151.always_fwd.off_code =
account.151.always_fwd.on_code =
account.151.busy_fwd.enable =

```



```

account.151.busy_fwd.target =
account.151.busy_fwd.off_code =
account.151.busy_fwd.on_code =
account.151.timeout_fwd.enable =
account.151.timeout_fwd.target =
account.151.timeout_fwd.timeout =
account.151.timeout_fwd.off_code =
account.151.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.151.dnd.enable =
account.151.dnd.on_code =
account.151.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.151.reg.enable =
handset.151.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.151.xsi.user =%BWLOGIN-ID-151%
account.151.xsi.password =%XSIPASSWORD-151%
account.151.xsi.host =%XSP_ADDRESS%
account.151.xsi.server_type =
account.151.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.151.ldap.enable =
handset.151.ldap.name_filter=
handset.151.ldap.number_filter=
handset.151.ldap.host=
handset.151.ldap.port=
handset.151.ldap.base=
handset.151.ldap.user=
handset.151.ldap.password=
handset.151.ldap.max_hits=
handset.151.ldap.name_attr=
handset.151.ldap.numb_attr=
handset.151.ldap.display_name=
handset.151.ldap.version=
handset.151.ldap.call_in_lookup=

```

```
handset.151.ldap.ldap_sort=
handset.151.ldap.tls_mode=
handset.151.ldap.call_out_lookup=
handset.151.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account152 Settings
##
#####
#####

account.152.enable=%BWLIN-BINARY-152%
account.152.label=%BWEXTENSION-152%
account.152.display_name=%BWCLID-152%
account.152.auth_name=%BWAUTHUSER-152%
account.152.user_name=%BWLINPORT-152%
account.152.password=%BWAUTHPASSWORD-152%

#W80B ADD
account.152.sip_server.template =
account.152.media_transmit.enable =

account.152.alarm.template =
account.152.alarm.server =
account.152.alarm.number =

#####
#####
##                                     Failback
##
##
#####
#####

account.152.sip_server.1.failback_mode =
account.152.sip_server.1.failback_timeout =
account.152.sip_server.1.register_on_enable =
account.152.sip_server.1.failback_subscribe.enable =
account.152.sip_server.1.invite_retry_counts =
account.152.sip_server.1.only_signal_with_registered =

account.152.sip_server.2.failback_mode =
account.152.sip_server.2.failback_timeout =
account.152.sip_server.2.register_on_enable =
account.152.sip_server.2.failback_subscribe.enable =
account.152.sip_server.2.invite_retry_counts =
account.152.sip_server.2.only_signal_with_registered =

account.152.naptr_build =
account.152.fallback.redundancy_type =
account.152.fallback.timeout =

account.152.dns_cache_type =
account.152.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
##
#####
#####
```

```
account.152.anonymous_call =
account.152.reject_anonymous_call =
account.152.send_anonymous_code =
account.152.anonymous_call_oncode =
account.152.anonymous_call_offcode =
account.152.send_anonymous_rejection_code =
account.152.anonymous_reject_oncode =
account.152.anonymous_reject_offcode =

#####
#####
##
##                               Codec
##
#####
#####
account.152.codec.g722.enable =
account.152.codec.g722.priority =

account.152.codec.g729.enable =
account.152.codec.g729.priority =

account.152.codec.g726_16.enable =
account.152.codec.g726_16.priority =

account.152.codec.g726_24.enable =
account.152.codec.g726_24.priority =

account.152.codec.g726_32.enable =
account.152.codec.g726_32.priority =

account.152.codec.g726_40.enable =
account.152.codec.g726_40.priority =

account.152.codec.ilbc.enable =
account.152.codec.ilbc.priority =

account.152.codec.pcmu.enable =
account.152.codec.pcmu.priority =

account.152.codec.pcma.enable =
account.152.codec.pcma.priority =

account.152.codec.opus.enable =
account.152.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####
account.152.nat.nat_traversal =
account.152.nat.udp_update_enable =
account.152.nat.udp_update_time =
account.152.nat.rport =

#####
#####
##
##                               Register Advanced
##
```

```
#####
#####

account.152.blf.subscribe_period =
account.152.dtmf.type =
account.152.dtmf.dtmf_payload =
account.152.dtmf.info_type =
account.152.100rel_enable =
account.152.subscribe_register =
account.152.subscribe_mwi =
account.152.subscribe_mwi_expires =
account.152.subscribe_mwi_to_vm =
voice_mail.number.152 = %BWVOICE-PORTAL-NUMBER-152%
account.152.display_mwi.enable =
account.152.cid_source =
account.152.cid_source_privacy =
account.152.cid_source_ppi =
account.152.session_timer.enable =
account.152.session_timer.expires =
account.152.session_timer.refreshes =
account.152.enable_user_equal_phone =
account.152.srtp_encryption =
account.152.ptime =
account.152.shared_line = %BWSHAREDLINE-BINARY-152%
account.152.register_mac =
account.152.register_line =
account.152.reg_fail_retry_interval =
account.152.reg_failed_retry_min_time =
account.152.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.152.conf_type =
account.152.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-152%

account.152.sip_server_type =
account.152.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.152.register_expires_overlap =
account.152.subscribe_expires_overlap =
account.152.auto_dial_enable =
account.152.auto_dial_num =
account.152.cp_source =
account.152.transfer_refer_to_contact_header.enable =
#V80 Add
account.152.custom_ua =
account.152.callpark_enable =
account.152.check_cseq.enable =
account.152.check_to_tag.enable =
account.152.hold_use_inactive =
```

```

account.152.line_seize.expires =
account.152.update_ack_while_dialing =
account.152.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.152.always_fwd.enable =
account.152.always_fwd.target =
account.152.always_fwd.off_code =
account.152.always_fwd.on_code =
account.152.busy_fwd.enable =
account.152.busy_fwd.target =
account.152.busy_fwd.off_code =
account.152.busy_fwd.on_code =
account.152.timeout_fwd.enable =
account.152.timeout_fwd.target =
account.152.timeout_fwd.timeout =
account.152.timeout_fwd.off_code =
account.152.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.152.dnd.enable =
account.152.dnd.on_code =
account.152.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.152.reg.enable =
handset.152.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.152.xsi.user =%BWLOGIN-ID-152%
account.152.xsi.password =%XSIPASSWORD-152%
account.152.xsi.host =%XSP_ADDRESS%
account.152.xsi.server_type =
account.152.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.152.ldap.enable =
handset.152.ldap.name_filter=
handset.152.ldap.number_filter=
handset.152.ldap.host=
handset.152.ldap.port=
handset.152.ldap.base=
handset.152.ldap.user=
handset.152.ldap.password=
handset.152.ldap.max_hits=
handset.152.ldap.name_attr=
handset.152.ldap.numb_attr=
handset.152.ldap.display_name=
handset.152.ldap.version=
handset.152.ldap.call_in_lookup=
handset.152.ldap.ldap_sort=
handset.152.ldap.tls_mode=
handset.152.ldap.call_out_lookup=
handset.152.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account153 Settings
##
#####
#####

account.153.enable=%BWLIN-BINARY-153%
account.153.label=%BWEXTENSION-153%
account.153.display_name=%BWCLID-153%
account.153.auth_name=%BWAUTHUSER-153%
account.153.user_name=%BWLINPORT-153%
account.153.password=%BWAUTHPASSWORD-153%

#W80B ADD
account.153.sip_server.template =
account.153.media_transmit.enable =

account.153.alarm.template =
account.153.alarm.server =
account.153.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.153.sip_server.1.failback_mode =
account.153.sip_server.1.failback_timeout =
account.153.sip_server.1.register_on_enable =
account.153.sip_server.1.failback_subscribe.enable =
account.153.sip_server.1.invite_retry_counts =
account.153.sip_server.1.only_signal_with_registered =

account.153.sip_server.2.failback_mode =
account.153.sip_server.2.failback_timeout =
account.153.sip_server.2.register_on_enable =
account.153.sip_server.2.failback_subscribe.enable =
```

```
account.153.sip_server.2.invite_retry_counts =
account.153.sip_server.2.only_signal_with_registered =

account.153.naptr_build =
account.153.fallback.redundancy_type =
account.153.fallback.timeout =

account.153.dns_cache_type =
account.153.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.153.anonymous_call =
account.153.reject_anonymous_call =
account.153.send_anonymous_code =
account.153.anonymous_call_oncode =
account.153.anonymous_call_offcode =
account.153.send_anonymous_rejection_code =
account.153.anonymous_reject_oncode =
account.153.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.153.codec.g722.enable =
account.153.codec.g722.priority =

account.153.codec.g729.enable =
account.153.codec.g729.priority =

account.153.codec.g726_16.enable =
account.153.codec.g726_16.priority =

account.153.codec.g726_24.enable =
account.153.codec.g726_24.priority =

account.153.codec.g726_32.enable =
account.153.codec.g726_32.priority =

account.153.codec.g726_40.enable =
account.153.codec.g726_40.priority =

account.153.codec.ilbc.enable =
account.153.codec.ilbc.priority =

account.153.codec.pcmu.enable =
account.153.codec.pcmu.priority =

account.153.codec.pcma.enable =
account.153.codec.pcma.priority =

account.153.codec.opus.enable =
account.153.codec.opus.priority =
```

```
#####
#####
##                               NAT Settings
##
#####
#####

account.153.nat.nat_traversal =
account.153.nat.udp_update_enable =
account.153.nat.udp_update_time =
account.153.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.153.blf.subscribe_period =
account.153.dtmf.type =
account.153.dtmf.dtmf_payload =
account.153.dtmf.info_type =
account.153.100rel_enable =
account.153.subscribe_register =
account.153.subscribe_mwi =
account.153.subscribe_mwi_expires =
account.153.subscribe_mwi_to_vm =
voice_mail.number.153 = %BWVOICE-PORTAL-NUMBER-153%
account.153.display_mwi.enable =
account.153.cid_source =
account.153.cid_source_privacy =
account.153.cid_source_ppi =
account.153.session_timer.enable =
account.153.session_timer.expires =
account.153.session_timer.refresher =
account.153.enable_user_equal_phone =
account.153.srtp_encryption =
account.153.ptime =
account.153.shared_line = %BWSHAREDLINE-BINARY-153%
account.153.register_mac =
account.153.register_line =
account.153.reg_fail_retry_interval =
account.153.reg_failed_retry_min_time =
account.153.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.153.conf_type =
account.153.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-153%

account.153.sip_server_type =
account.153.unregister_on_reboot =

#####
#####
##                               Register Other
##
```



```
#####
#####
##DECT V81 Add

account.153.register_expires_overlap =
account.153.subscribe_expires_overlap =
account.153.auto_dial_enable =
account.153.auto_dial_num =
account.153.cp_source =
account.153.transfer_refer_to_contact_header.enable =
#V80 Add
account.153.custom_ua =
account.153.callpark_enable =
account.153.check_cseq.enable =
account.153.check_to_tag.enable =
account.153.hold_use_inactive =
account.153.line_seize.expires =
account.153.update_ack_while_dialing =
account.153.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.153.always_fwd.enable =
account.153.always_fwd.target =
account.153.always_fwd.off_code =
account.153.always_fwd.on_code =
account.153.busy_fwd.enable =
account.153.busy_fwd.target =
account.153.busy_fwd.off_code =
account.153.busy_fwd.on_code =
account.153.timeout_fwd.enable =
account.153.timeout_fwd.target =
account.153.timeout_fwd.timeout =
account.153.timeout_fwd.off_code =
account.153.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.153.dnd.enable =
account.153.dnd.on_code =
account.153.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.153.reg.enable =
handset.153.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.153.xsi.user =%BWLOGIN-ID-153%
account.153.xsi.password =%XSIPASSWORD-153%
account.153.xsi.host =%XSP_ADDRESS%
account.153.xsi.server_type =
account.153.xsi.port =

#####
#####
##          LADP
##
#####
handset.153.ldap.enable =
handset.153.ldap.name_filter=
handset.153.ldap.number_filter=
handset.153.ldap.host=
handset.153.ldap.port=
handset.153.ldap.base=
handset.153.ldap.user=
handset.153.ldap.password=
handset.153.ldap.max_hits=
handset.153.ldap.name_attr=
handset.153.ldap.numb_attr=
handset.153.ldap.display_name=
handset.153.ldap.version=
handset.153.ldap.call_in_lookup=
handset.153.ldap.ldap_sort=
handset.153.ldap.tls_mode=
handset.153.ldap.call_out_lookup=
handset.153.ldap.incoming_call_special_search.enable=

#####
#####
##          Account154 Settings
##
#####

account.154.enable=%BWLINE-BINARY-154%
account.154.label=%BWEXTENSION-154%
account.154.display_name=%BWCLID-154%
account.154.auth_name=%BWAUTHUSER-154%
account.154.user_name=%BWLINEPORT-154%
account.154.password=%BWAUTHPASSWORD-154%

#W80B ADD
account.154.sip_server.template =
account.154.media_transmit.enable =

account.154.alarm.template =
account.154.alarm.server =
account.154.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.154.sip_server.1.failback_mode =
account.154.sip_server.1.failback_timeout =
account.154.sip_server.1.register_on_enable =
account.154.sip_server.1.failback_subscribe.enable =
account.154.sip_server.1.invite_retry_counts =
account.154.sip_server.1.only_signal_with_registered =

account.154.sip_server.2.failback_mode =
account.154.sip_server.2.failback_timeout =
account.154.sip_server.2.register_on_enable =
account.154.sip_server.2.failback_subscribe.enable =
account.154.sip_server.2.invite_retry_counts =
account.154.sip_server.2.only_signal_with_registered =

account.154.naptr_build =
account.154.fallback.redundancy_type =
account.154.fallback.timeout =

account.154.dns_cache_type =
account.154.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.154.anonymous_call =
account.154.reject_anonymous_call =
account.154.send_anonymous_code =
account.154.anonymous_call_oncode =
account.154.anonymous_call_offcode =
account.154.send_anonymous_rejection_code =
account.154.anonymous_reject_oncode =
account.154.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.154.codec.g722.enable =
account.154.codec.g722.priority =

account.154.codec.g729.enable =
account.154.codec.g729.priority =

account.154.codec.g726_16.enable =
account.154.codec.g726_16.priority =

account.154.codec.g726_24.enable =
account.154.codec.g726_24.priority =

account.154.codec.g726_32.enable =
account.154.codec.g726_32.priority =
```

```

account.154.codec.g726_40.enable =
account.154.codec.g726_40.priority =

account.154.codec.ilbc.enable =
account.154.codec.ilbc.priority =

account.154.codec.pcmu.enable =
account.154.codec.pcmu.priority =

account.154.codec.pcma.enable =
account.154.codec.pcma.priority =

account.154.codec.opus.enable =
account.154.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.154.nat.nat_traversal =
account.154.nat.udp_update_enable =
account.154.nat.udp_update_time =
account.154.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.154.blf.subscribe_period =
account.154.dtmf.type =
account.154.dtmf.dtmf_payload =
account.154.dtmf.info_type =
account.154.100rel_enable =
account.154.subscribe_register =
account.154.subscribe_mwi =
account.154.subscribe_mwi_expires =
account.154.subscribe_mwi_to_vm =
voice_mail.number.154 = %BWVOICE-PORTAL-NUMBER-154%
account.154.display_mwi.enable =
account.154.cid_source =
account.154.cid_source_privacy =
account.154.cid_source_ppi =
account.154.session_timer.enable =
account.154.session_timer.expires =
account.154.session_timer.refresher =
account.154.enable_user_equal_phone =
account.154.srtp_encryption =
account.154.ptime =
account.154.shared_line = %BWSHAREDLINE-BINARY-154%
account.154.register_mac =
account.154.register_line =
account.154.reg_fail_retry_interval =
account.154.reg_failed_retry_min_time =
account.154.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.154.conf_type =
account.154.conf_uri = %BWNWORK-CONFERENCE-SIPURI-154%

account.154.sip_server_type =
account.154.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.154.register_expires_overlap =
account.154.subscribe_expires_overlap =
account.154.auto_dial_enable =
account.154.auto_dial_num =
account.154.cp_source =
account.154.transfer_refer_to_contact_header.enable =
#V80 Add
account.154.custom_ua =
account.154.callpark_enable =
account.154.check_cseq.enable =
account.154.check_to_tag.enable =
account.154.hold_use_inactive =
account.154.line_seize.expires =
account.154.update_ack_while_dialing =
account.154.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.154.always_fwd.enable =
account.154.always_fwd.target =
account.154.always_fwd.off_code =
account.154.always_fwd.on_code =
account.154.busy_fwd.enable =
account.154.busy_fwd.target =
account.154.busy_fwd.off_code =
account.154.busy_fwd.on_code =
account.154.timeout_fwd.enable =
account.154.timeout_fwd.target =
account.154.timeout_fwd.timeout =
account.154.timeout_fwd.off_code =
account.154.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```

account.154.dnd.enable =
account.154.dnd.on_code =
account.154.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.154.reg.enable =
handset.154.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.154.xsi.user =%BWLOGIN-ID-154%
account.154.xsi.password =%XSIPASSWORD-154%
account.154.xsi.host =%XSP_ADDRESS%
account.154.xsi.server_type =
account.154.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.154.ldap.enable =
handset.154.ldap.name_filter=
handset.154.ldap.number_filter=
handset.154.ldap.host=
handset.154.ldap.port=
handset.154.ldap.base=
handset.154.ldap.user=
handset.154.ldap.password=
handset.154.ldap.max_hits=
handset.154.ldap.name_attr=
handset.154.ldap.numb_attr=
handset.154.ldap.display_name=
handset.154.ldap.version=
handset.154.ldap.call_in_lookup=
handset.154.ldap.ldap_sort=
handset.154.ldap.tls_mode=
handset.154.ldap.call_out_lookup=
handset.154.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account155 Settings
##
#####
#####

```

```

account.155.enable=%BWLIN-BINARY-155%
account.155.label=%BWEXTENSION-155%
account.155.display_name=%BWCLID-155%
account.155.auth_name=%BWAUTHUSER-155%
account.155.user_name=%BWLINPORT-155%
account.155.password=%BWAUTHPASSWORD-155%

#W80B ADD
account.155.sip_server.template =
account.155.media_transmit.enable =

account.155.alarm.template =
account.155.alarm.server =
account.155.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.155.sip_server.1.failback_mode =
account.155.sip_server.1.failback_timeout =
account.155.sip_server.1.register_on_enable =
account.155.sip_server.1.failback_subscribe.enable =
account.155.sip_server.1.invite_retry_counts =
account.155.sip_server.1.only_signal_with_registered =

account.155.sip_server.2.failback_mode =
account.155.sip_server.2.failback_timeout =
account.155.sip_server.2.register_on_enable =
account.155.sip_server.2.failback_subscribe.enable =
account.155.sip_server.2.invite_retry_counts =
account.155.sip_server.2.only_signal_with_registered =

account.155.naptr_build =
account.155.fallback.redundancy_type =
account.155.fallback.timeout =

account.155.dns_cache_type =
account.155.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.155.anonymous_call =
account.155.reject_anonymous_call =
account.155.send_anonymous_code =
account.155.anonymous_call_oncode =
account.155.anonymous_call_offcode =
account.155.send_anonymous_rejection_code =
account.155.anonymous_reject_oncode =
account.155.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.155.codec.g722.enable =
account.155.codec.g722.priority =

account.155.codec.g729.enable =
account.155.codec.g729.priority =

account.155.codec.g726_16.enable =
account.155.codec.g726_16.priority =

account.155.codec.g726_24.enable =
account.155.codec.g726_24.priority =

account.155.codec.g726_32.enable =
account.155.codec.g726_32.priority =

account.155.codec.g726_40.enable =
account.155.codec.g726_40.priority =

account.155.codec.ilbc.enable =
account.155.codec.ilbc.priority =

account.155.codec.pcmu.enable =
account.155.codec.pcmu.priority =

account.155.codec.pcma.enable =
account.155.codec.pcma.priority =

account.155.codec.opus.enable =
account.155.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.155.nat.nat_traversal =
account.155.nat.udp_update_enable =
account.155.nat.udp_update_time =
account.155.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.155.blf.subscribe_period =
account.155.dtmf.type =
account.155.dtmf.dtmf_payload =
account.155.dtmf.info_type =
account.155.100rel_enable =
account.155.subscribe_register =
account.155.subscribe_mwi =
account.155.subscribe_mwi_expires =
account.155.subscribe_mwi_to_vm =
voice_mail.number.155 = %BWVOICE-PORTAL-NUMBER-155%
account.155.display_mwi.enable =
account.155.cid_source =
```



```

account.155.cid_source_privacy =
account.155.cid_source_ppi =
account.155.session_timer.enable =
account.155.session_timer.expires =
account.155.session_timer.refresher =
account.155.enable_user_equal_phone =
account.155.srtp_encryption =
account.155.ptime =
account.155.shared_line = %BWSHAREDLINE-BINARY-155%
account.155.register_mac =
account.155.register_line =
account.155.reg_fail_retry_interval =
account.155.reg_failed_retry_min_time =
account.155.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.155.conf_type =
account.155.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-155%

account.155.sip_server_type =
account.155.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.155.register_expires_overlap =
account.155.subscribe_expires_overlap =
account.155.auto_dial_enable =
account.155.auto_dial_num =
account.155.cp_source =
account.155.transfer_refer_to_contact_header.enable =
#V80 Add
account.155.custom_ua =
account.155.callpark_enable =
account.155.check_cseq.enable =
account.155.check_to_tag.enable =
account.155.hold_use_inactive =
account.155.line_seize.expires =
account.155.update_ack_while_dialing =
account.155.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.155.always_fwd.enable =
account.155.always_fwd.target =
account.155.always_fwd.off_code =
account.155.always_fwd.on_code =
account.155.busy_fwd.enable =

```

```
account.155.busy_fwd.target =
account.155.busy_fwd.off_code =
account.155.busy_fwd.on_code =
account.155.timeout_fwd.enable =
account.155.timeout_fwd.target =
account.155.timeout_fwd.timeout =
account.155.timeout_fwd.off_code =
account.155.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.155.dnd.enable =
account.155.dnd.on_code =
account.155.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.155.reg.enable =
handset.155.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####
account.155.xsi.user =%BWLOGIN-ID-155%
account.155.xsi.password =%XSIPASSWORD-155%
account.155.xsi.host =%XSP_ADDRESS%
account.155.xsi.server_type =
account.155.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.155.ldap.enable =
handset.155.ldap.name_filter=
handset.155.ldap.number_filter=
handset.155.ldap.host=
handset.155.ldap.port=
handset.155.ldap.base=
handset.155.ldap.user=
handset.155.ldap.password=
handset.155.ldap.max_hits=
handset.155.ldap.name_attr=
handset.155.ldap.numb_attr=
handset.155.ldap.display_name=
handset.155.ldap.version=
handset.155.ldap.call_in_lookup=
```

```
handset.155.ldap.ldap_sort=
handset.155.ldap.tls_mode=
handset.155.ldap.call_out_lookup=
handset.155.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account156 Settings
##
#####
#####

account.156.enable=%BWLIN-BINARY-156%
account.156.label=%BWEXTENSION-156%
account.156.display_name=%BWCLID-156%
account.156.auth_name=%BWAUTHUSER-156%
account.156.user_name=%BWLINPORT-156%
account.156.password=%BWAUTHPASSWORD-156%

#W80B ADD
account.156.sip_server.template =
account.156.media_transmit.enable =

account.156.alarm.template =
account.156.alarm.server =
account.156.alarm.number =

#####
#####
##                               Failback
##
#####
#####

account.156.sip_server.1.failback_mode =
account.156.sip_server.1.failback_timeout =
account.156.sip_server.1.register_on_enable =
account.156.sip_server.1.failback_subscribe.enable =
account.156.sip_server.1.invite_retry_counts =
account.156.sip_server.1.only_signal_with_registered =

account.156.sip_server.2.failback_mode =
account.156.sip_server.2.failback_timeout =
account.156.sip_server.2.register_on_enable =
account.156.sip_server.2.failback_subscribe.enable =
account.156.sip_server.2.invite_retry_counts =
account.156.sip_server.2.only_signal_with_registered =

account.156.naptr_build =
account.156.fallback.redundancy_type =
account.156.fallback.timeout =

account.156.dns_cache_type =
account.156.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
```

```

account.156.anonymous_call =
account.156.reject_anonymous_call =
account.156.send_anonymous_code =
account.156.anonymous_call_oncode =
account.156.anonymous_call_offcode =
account.156.send_anonymous_rejection_code =
account.156.anonymous_reject_oncode =
account.156.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.156.codec.g722.enable =
account.156.codec.g722.priority =

account.156.codec.g729.enable =
account.156.codec.g729.priority =

account.156.codec.g726_16.enable =
account.156.codec.g726_16.priority =

account.156.codec.g726_24.enable =
account.156.codec.g726_24.priority =

account.156.codec.g726_32.enable =
account.156.codec.g726_32.priority =

account.156.codec.g726_40.enable =
account.156.codec.g726_40.priority =

account.156.codec.ilbc.enable =
account.156.codec.ilbc.priority =

account.156.codec.pcmu.enable =
account.156.codec.pcmu.priority =

account.156.codec.pcma.enable =
account.156.codec.pcma.priority =

account.156.codec.opus.enable =
account.156.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
##
#####
#####

account.156.nat.nat_traversal =
account.156.nat.udp_update_enable =
account.156.nat.udp_update_time =
account.156.nat.rport =

#####
#####
##                                     Register Advanced
##
##

```

```
#####
#####

account.156.blf.subscribe_period =
account.156.dtmf.type =
account.156.dtmf.dtmf_payload =
account.156.dtmf.info_type =
account.156.100rel_enable =
account.156.subscribe_register =
account.156.subscribe_mwi =
account.156.subscribe_mwi_expires =
account.156.subscribe_mwi_to_vm =
voice_mail.number.156 = %BWVOICE-PORTAL-NUMBER-156%
account.156.display_mwi.enable =
account.156.cid_source =
account.156.cid_source_privacy =
account.156.cid_source_ppi =
account.156.session_timer.enable =
account.156.session_timer.expires =
account.156.session_timer.refreshes =
account.156.enable_user_equal_phone =
account.156.srtp_encryption =
account.156.ptime =
account.156.shared_line = %BWSHAREDLINE-BINARY-156%
account.156.register_mac =
account.156.register_line =
account.156.reg_fail_retry_interval =
account.156.reg_failed_retry_min_time =
account.156.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.156.conf_type =
account.156.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-156%

account.156.sip_server_type =
account.156.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.156.register_expires_overlap =
account.156.subscribe_expires_overlap =
account.156.auto_dial_enable =
account.156.auto_dial_num =
account.156.cp_source =
account.156.transfer_refer_to_contact_header.enable =
#V80 Add
account.156.custom_ua =
account.156.callpark_enable =
account.156.check_cseq.enable =
account.156.check_to_tag.enable =
account.156.hold_use_inactive =
```

```

account.156.line_seize.expires =
account.156.update_ack_while_dialing =
account.156.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.156.always_fwd.enable =
account.156.always_fwd.target =
account.156.always_fwd.off_code =
account.156.always_fwd.on_code =
account.156.busy_fwd.enable =
account.156.busy_fwd.target =
account.156.busy_fwd.off_code =
account.156.busy_fwd.on_code =
account.156.timeout_fwd.enable =
account.156.timeout_fwd.target =
account.156.timeout_fwd.timeout =
account.156.timeout_fwd.off_code =
account.156.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.156.dnd.enable =
account.156.dnd.on_code =
account.156.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.156.reg.enable =
handset.156.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.156.xsi.user =%BWLOGIN-ID-156%
account.156.xsi.password =%XSIPASSWORD-156%
account.156.xsi.host =%XSP_ADDRESS%
account.156.xsi.server_type =
account.156.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.156.ldap.enable =
handset.156.ldap.name_filter=
handset.156.ldap.number_filter=
handset.156.ldap.host=
handset.156.ldap.port=
handset.156.ldap.base=
handset.156.ldap.user=
handset.156.ldap.password=
handset.156.ldap.max_hits=
handset.156.ldap.name_attr=
handset.156.ldap.numb_attr=
handset.156.ldap.display_name=
handset.156.ldap.version=
handset.156.ldap.call_in_lookup=
handset.156.ldap.ldap_sort=
handset.156.ldap.tls_mode=
handset.156.ldap.call_out_lookup=
handset.156.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account157 Settings
##
#####
#####

account.157.enable=%BWLINE-BINARY-157%
account.157.label=%BWEXTENSION-157%
account.157.display_name=%BWCLID-157%
account.157.auth_name=%BWAUTHUSER-157%
account.157.user_name=%BWLINEPORT-157%
account.157.password=%BWAUTHPASSWORD-157%

#W80B ADD
account.157.sip_server.template =
account.157.media_transmit.enable =

account.157.alarm.template =
account.157.alarm.server =
account.157.alarm.number =

#####
#####
##                                     Failback
##
#####
#####
account.157.sip_server.1.failback_mode =
account.157.sip_server.1.failback_timeout =
account.157.sip_server.1.register_on_enable =
account.157.sip_server.1.failback_subscribe.enable =
account.157.sip_server.1.invite_retry_counts =
account.157.sip_server.1.only_signal_with_registered =

account.157.sip_server.2.failback_mode =
account.157.sip_server.2.failback_timeout =
account.157.sip_server.2.register_on_enable =
account.157.sip_server.2.failback_subscribe.enable =
```

```

account.157.sip_server.2.invite_retry_counts =
account.157.sip_server.2.only_signal_with_registered =

account.157.naptr_build =
account.157.fallback.redundancy_type =
account.157.fallback.timeout =

account.157.dns_cache_type =
account.157.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.157.anonymous_call =
account.157.reject_anonymous_call =
account.157.send_anonymous_code =
account.157.anonymous_call_oncode =
account.157.anonymous_call_offcode =
account.157.send_anonymous_rejection_code =
account.157.anonymous_reject_oncode =
account.157.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.157.codec.g722.enable =
account.157.codec.g722.priority =

account.157.codec.g729.enable =
account.157.codec.g729.priority =

account.157.codec.g726_16.enable =
account.157.codec.g726_16.priority =

account.157.codec.g726_24.enable =
account.157.codec.g726_24.priority =

account.157.codec.g726_32.enable =
account.157.codec.g726_32.priority =

account.157.codec.g726_40.enable =
account.157.codec.g726_40.priority =

account.157.codec.ilbc.enable =
account.157.codec.ilbc.priority =

account.157.codec.pcmu.enable =
account.157.codec.pcmu.priority =

account.157.codec.pcma.enable =
account.157.codec.pcma.priority =

account.157.codec.opus.enable =
account.157.codec.opus.priority =

```



```
#####
#####
##                               NAT Settings
##
#####
#####

account.157.nat.nat_traversal =
account.157.nat.udp_update_enable =
account.157.nat.udp_update_time =
account.157.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.157.blf.subscribe_period =
account.157.dtmf.type =
account.157.dtmf.dtmf_payload =
account.157.dtmf.info_type =
account.157.100rel_enable =
account.157.subscribe_register =
account.157.subscribe_mwi =
account.157.subscribe_mwi_expires =
account.157.subscribe_mwi_to_vm =
voice_mail.number.157 = %BWVOICE-PORTAL-NUMBER-157%
account.157.display_mwi.enable =
account.157.cid_source =
account.157.cid_source_privacy =
account.157.cid_source_ppi =
account.157.session_timer.enable =
account.157.session_timer.expires =
account.157.session_timer.refresher =
account.157.enable_user_equal_phone =
account.157.srtp_encryption =
account.157.ptime =
account.157.shared_line = %BWSHAREDLINE-BINARY-157%
account.157.register_mac =
account.157.register_line =
account.157.reg_fail_retry_interval =
account.157.reg_failed_retry_min_time =
account.157.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.157.conf_type =
account.157.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-157%

account.157.sip_server_type =
account.157.unregister_on_reboot =

#####
#####
##                               Register Other
##
##
```

```
#####
#####
##DECT V81 Add

account.157.register_expires_overlap =
account.157.subscribe_expires_overlap =
account.157.auto_dial_enable =
account.157.auto_dial_num =
account.157.cp_source =
account.157.transfer_refer_to_contact_header.enable =
#V80 Add
account.157.custom_ua =
account.157.callpark_enable =
account.157.check_cseq.enable =
account.157.check_to_tag.enable =
account.157.hold_use_inactive =
account.157.line_seize.expires =
account.157.update_ack_while_dialing =
account.157.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.157.always_fwd.enable =
account.157.always_fwd.target =
account.157.always_fwd.off_code =
account.157.always_fwd.on_code =
account.157.busy_fwd.enable =
account.157.busy_fwd.target =
account.157.busy_fwd.off_code =
account.157.busy_fwd.on_code =
account.157.timeout_fwd.enable =
account.157.timeout_fwd.target =
account.157.timeout_fwd.timeout =
account.157.timeout_fwd.off_code =
account.157.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.157.dnd.enable =
account.157.dnd.on_code =
account.157.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.157.reg.enable =
handset.157.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.157.xsi.user =%BWLOGIN-ID-157%
account.157.xsi.password =%XSIPASSWORD-157%
account.157.xsi.host =%XSP_ADDRESS%
account.157.xsi.server_type =
account.157.xsi.port =

#####
#####
##          LADP
##
#####
handset.157.ldap.enable =
handset.157.ldap.name_filter=
handset.157.ldap.number_filter=
handset.157.ldap.host=
handset.157.ldap.port=
handset.157.ldap.base=
handset.157.ldap.user=
handset.157.ldap.password=
handset.157.ldap.max_hits=
handset.157.ldap.name_attr=
handset.157.ldap.numb_attr=
handset.157.ldap.display_name=
handset.157.ldap.version=
handset.157.ldap.call_in_lookup=
handset.157.ldap.ldap_sort=
handset.157.ldap.tls_mode=
handset.157.ldap.call_out_lookup=
handset.157.ldap.incoming_call_special_search.enable=

#####
#####
##          Account158 Settings
##
#####

account.158.enable=%BWLINE-BINARY-158%
account.158.label=%BWEXTENSION-158%
account.158.display_name=%BWCLID-158%
account.158.auth_name=%BWAUTHUSER-158%
account.158.user_name=%BWLINEPORT-158%
account.158.password=%BWAUTHPASSWORD-158%

#W80B ADD
account.158.sip_server.template =
account.158.media_transmit.enable =

account.158.alarm.template =
account.158.alarm.server =
account.158.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.158.sip_server.1.failback_mode =
account.158.sip_server.1.failback_timeout =
account.158.sip_server.1.register_on_enable =
account.158.sip_server.1.failback_subscribe.enable =
account.158.sip_server.1.invite_retry_counts =
account.158.sip_server.1.only_signal_with_registered =

account.158.sip_server.2.failback_mode =
account.158.sip_server.2.failback_timeout =
account.158.sip_server.2.register_on_enable =
account.158.sip_server.2.failback_subscribe.enable =
account.158.sip_server.2.invite_retry_counts =
account.158.sip_server.2.only_signal_with_registered =

account.158.naptr_build =
account.158.fallback.redundancy_type =
account.158.fallback.timeout =

account.158.dns_cache_type =
account.158.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.158.anonymous_call =
account.158.reject_anonymous_call =
account.158.send_anonymous_code =
account.158.anonymous_call_oncode =
account.158.anonymous_call_offcode =
account.158.send_anonymous_rejection_code =
account.158.anonymous_reject_oncode =
account.158.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.158.codec.g722.enable =
account.158.codec.g722.priority =

account.158.codec.g729.enable =
account.158.codec.g729.priority =

account.158.codec.g726_16.enable =
account.158.codec.g726_16.priority =

account.158.codec.g726_24.enable =
account.158.codec.g726_24.priority =

account.158.codec.g726_32.enable =
account.158.codec.g726_32.priority =
```

```
account.158.codec.g726_40.enable =
account.158.codec.g726_40.priority =

account.158.codec.ilbc.enable =
account.158.codec.ilbc.priority =

account.158.codec.pcmu.enable =
account.158.codec.pcmu.priority =

account.158.codec.pcma.enable =
account.158.codec.pcma.priority =

account.158.codec.opus.enable =
account.158.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.158.nat.nat_traversal =
account.158.nat.udp_update_enable =
account.158.nat.udp_update_time =
account.158.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.158.blf.subscribe_period =
account.158.dtmf.type =
account.158.dtmf.dtmf_payload =
account.158.dtmf.info_type =
account.158.100rel_enable =
account.158.subscribe_register =
account.158.subscribe_mwi =
account.158.subscribe_mwi_expires =
account.158.subscribe_mwi_to_vm =
voice_mail.number.158 = %BWVOICE-PORTAL-NUMBER-158%
account.158.display_mwi.enable =
account.158.cid_source =
account.158.cid_source_privacy =
account.158.cid_source_ppi =
account.158.session_timer.enable =
account.158.session_timer.expires =
account.158.session_timer.refresher =
account.158.enable_user_equal_phone =
account.158.srtp_encryption =
account.158.ptime =
account.158.shared_line = %BWSHAREDLINE-BINARY-158%
account.158.register_mac =
account.158.register_line =
account.158.reg_fail_retry_interval =
account.158.reg_failed_retry_min_time =
account.158.reg_failed_retry_max_time =
```

```
#####
#####
##                               Network Conference
##
#####
#####
account.158.conf_type =
account.158.conf_uri = %BWNWORK-CONFERENCE-SIPURI-158%

account.158.sip_server_type =
account.158.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.158.register_expires_overlap =
account.158.subscribe_expires_overlap =
account.158.auto_dial_enable =
account.158.auto_dial_num =
account.158.cp_source =
account.158.transfer_refer_to_contact_header.enable =
#V80 Add
account.158.custom_ua =
account.158.callpark_enable =
account.158.check_cseq.enable =
account.158.check_to_tag.enable =
account.158.hold_use_inactive =
account.158.line_seize.expires =
account.158.update_ack_while_dialing =
account.158.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.158.always_fwd.enable =
account.158.always_fwd.target =
account.158.always_fwd.off_code =
account.158.always_fwd.on_code =
account.158.busy_fwd.enable =
account.158.busy_fwd.target =
account.158.busy_fwd.off_code =
account.158.busy_fwd.on_code =
account.158.timeout_fwd.enable =
account.158.timeout_fwd.target =
account.158.timeout_fwd.timeout =
account.158.timeout_fwd.off_code =
account.158.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```
account.158.dnd.enable =
account.158.dnd.on_code =
account.158.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.158.reg.enable =
handset.158.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.158.xsi.user =%BWLOGIN-ID-158%
account.158.xsi.password =%XSIPASSWORD-158%
account.158.xsi.host =%XSP_ADDRESS%
account.158.xsi.server_type =
account.158.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.158.ldap.enable =
handset.158.ldap.name_filter=
handset.158.ldap.number_filter=
handset.158.ldap.host=
handset.158.ldap.port=
handset.158.ldap.base=
handset.158.ldap.user=
handset.158.ldap.password=
handset.158.ldap.max_hits=
handset.158.ldap.name_attr=
handset.158.ldap.numb_attr=
handset.158.ldap.display_name=
handset.158.ldap.version=
handset.158.ldap.call_in_lookup=
handset.158.ldap.ldap_sort=
handset.158.ldap.tls_mode=
handset.158.ldap.call_out_lookup=
handset.158.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account159 Settings
##
#####
#####
```

```

account.159.enable=%BWLIN-BINARY-159%
account.159.label=%BWEXTENSION-159%
account.159.display_name=%BWCLID-159%
account.159.auth_name=%BWAUTHUSER-159%
account.159.user_name=%BWLINPORT-159%
account.159.password=%BWAUTHPASSWORD-159%

#W80B ADD
account.159.sip_server.template =
account.159.media_transmit.enable =

account.159.alarm.template =
account.159.alarm.server =
account.159.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.159.sip_server.1.failback_mode =
account.159.sip_server.1.failback_timeout =
account.159.sip_server.1.register_on_enable =
account.159.sip_server.1.failback_subscribe.enable =
account.159.sip_server.1.invite_retry_counts =
account.159.sip_server.1.only_signal_with_registered =

account.159.sip_server.2.failback_mode =
account.159.sip_server.2.failback_timeout =
account.159.sip_server.2.register_on_enable =
account.159.sip_server.2.failback_subscribe.enable =
account.159.sip_server.2.invite_retry_counts =
account.159.sip_server.2.only_signal_with_registered =

account.159.naptr_build =
account.159.fallback.redundancy_type =
account.159.fallback.timeout =

account.159.dns_cache_type =
account.159.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.159.anonymous_call =
account.159.reject_anonymous_call =
account.159.send_anonymous_code =
account.159.anonymous_call_oncode =
account.159.anonymous_call_offcode =
account.159.send_anonymous_rejection_code =
account.159.anonymous_reject_oncode =
account.159.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```



```
#####
#####
account.159.codec.g722.enable =
account.159.codec.g722.priority =

account.159.codec.g729.enable =
account.159.codec.g729.priority =

account.159.codec.g726_16.enable =
account.159.codec.g726_16.priority =

account.159.codec.g726_24.enable =
account.159.codec.g726_24.priority =

account.159.codec.g726_32.enable =
account.159.codec.g726_32.priority =

account.159.codec.g726_40.enable =
account.159.codec.g726_40.priority =

account.159.codec.ilbc.enable =
account.159.codec.ilbc.priority =

account.159.codec.pcmu.enable =
account.159.codec.pcmu.priority =

account.159.codec.pcma.enable =
account.159.codec.pcma.priority =

account.159.codec.opus.enable =
account.159.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.159.nat.nat_traversal =
account.159.nat.udp_update_enable =
account.159.nat.udp_update_time =
account.159.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.159.blf.subscribe_period =
account.159.dtmf.type =
account.159.dtmf.dtmf_payload =
account.159.dtmf.info_type =
account.159.100rel_enable =
account.159.subscribe_register =
account.159.subscribe_mwi =
account.159.subscribe_mwi_expires =
account.159.subscribe_mwi_to_vm =
voice_mail.number.159 = %BWVOICE-PORTAL-NUMBER-159%
account.159.display_mwi.enable =
account.159.cid_source =
```

```

account.159.cid_source_privacy =
account.159.cid_source_ppi =
account.159.session_timer.enable =
account.159.session_timer.expires =
account.159.session_timer.refresher =
account.159.enable_user_equal_phone =
account.159.srtp_encryption =
account.159.ptime =
account.159.shared_line = %BWSHAREDLINE-BINARY-159%
account.159.register_mac =
account.159.register_line =
account.159.reg_fail_retry_interval =
account.159.reg_failed_retry_min_time =
account.159.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.159.conf_type =
account.159.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-159%

account.159.sip_server_type =
account.159.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.159.register_expires_overlap =
account.159.subscribe_expires_overlap =
account.159.auto_dial_enable =
account.159.auto_dial_num =
account.159.cp_source =
account.159.transfer_refer_to_contact_header.enable =
#V80 Add
account.159.custom_ua =
account.159.callpark_enable =
account.159.check_cseq.enable =
account.159.check_to_tag.enable =
account.159.hold_use_inactive =
account.159.line_seize.expires =
account.159.update_ack_while_dialing =
account.159.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.159.always_fwd.enable =
account.159.always_fwd.target =
account.159.always_fwd.off_code =
account.159.always_fwd.on_code =
account.159.busy_fwd.enable =

```

```
account.159.busy_fwd.target =
account.159.busy_fwd.off_code =
account.159.busy_fwd.on_code =
account.159.timeout_fwd.enable =
account.159.timeout_fwd.target =
account.159.timeout_fwd.timeout =
account.159.timeout_fwd.off_code =
account.159.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.159.dnd.enable =
account.159.dnd.on_code =
account.159.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.159.reg.enable =
handset.159.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####
account.159.xsi.user =%BWLOGIN-ID-159%
account.159.xsi.password =%XSIPASSWORD-159%
account.159.xsi.host =%XSP_ADDRESS%
account.159.xsi.server_type =
account.159.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.159.ldap.enable =
handset.159.ldap.name_filter=
handset.159.ldap.number_filter=
handset.159.ldap.host=
handset.159.ldap.port=
handset.159.ldap.base=
handset.159.ldap.user=
handset.159.ldap.password=
handset.159.ldap.max_hits=
handset.159.ldap.name_attr=
handset.159.ldap.numb_attr=
handset.159.ldap.display_name=
handset.159.ldap.version=
handset.159.ldap.call_in_lookup=
```

```

handset.159.ldap.ldap_sort=
handset.159.ldap.tls_mode=
handset.159.ldap.call_out_lookup=
handset.159.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account160 Settings
##
#####
#####

account.160.enable=%BWLIN-BINARY-160%
account.160.label=%BWEXTENSION-160%
account.160.display_name=%BWCLID-160%
account.160.auth_name=%BWAUTHUSER-160%
account.160.user_name=%BWLINPORT-160%
account.160.password=%BWAUTHPASSWORD-160%

#W80B ADD
account.160.sip_server.template =
account.160.media_transmit.enable =

account.160.alarm.template =
account.160.alarm.server =
account.160.alarm.number =

#####
#####
##                               Failback
##
#####
#####

account.160.sip_server.1.failback_mode =
account.160.sip_server.1.failback_timeout =
account.160.sip_server.1.register_on_enable =
account.160.sip_server.1.failback_subscribe.enable =
account.160.sip_server.1.invite_retry_counts =
account.160.sip_server.1.only_signal_with_registered =

account.160.sip_server.2.failback_mode =
account.160.sip_server.2.failback_timeout =
account.160.sip_server.2.register_on_enable =
account.160.sip_server.2.failback_subscribe.enable =
account.160.sip_server.2.invite_retry_counts =
account.160.sip_server.2.only_signal_with_registered =

account.160.naptr_build =
account.160.fallback.redundancy_type =
account.160.fallback.timeout =

account.160.dns_cache_type =
account.160.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####

```

```
account.160.anonymous_call =
account.160.reject_anonymous_call =
account.160.send_anonymous_code =
account.160.anonymous_call_oncode =
account.160.anonymous_call_offcode =
account.160.send_anonymous_rejection_code =
account.160.anonymous_reject_oncode =
account.160.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.160.codec.g722.enable =
account.160.codec.g722.priority =

account.160.codec.g729.enable =
account.160.codec.g729.priority =

account.160.codec.g726_16.enable =
account.160.codec.g726_16.priority =

account.160.codec.g726_24.enable =
account.160.codec.g726_24.priority =

account.160.codec.g726_32.enable =
account.160.codec.g726_32.priority =

account.160.codec.g726_40.enable =
account.160.codec.g726_40.priority =

account.160.codec.ilbc.enable =
account.160.codec.ilbc.priority =

account.160.codec.pcmu.enable =
account.160.codec.pcmu.priority =

account.160.codec.pcma.enable =
account.160.codec.pcma.priority =

account.160.codec.opus.enable =
account.160.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
##
#####
#####

account.160.nat.nat_traversal =
account.160.nat.udp_update_enable =
account.160.nat.udp_update_time =
account.160.nat.rport =

#####
#####
##                                     Register Advanced
##
##
```

```
#####
#####

account.160.blf.subscribe_period =
account.160.dtmf.type =
account.160.dtmf.dtmf_payload =
account.160.dtmf.info_type =
account.160.100rel_enable =
account.160.subscribe_register =
account.160.subscribe_mwi =
account.160.subscribe_mwi_expires =
account.160.subscribe_mwi_to_vm =
voice_mail.number.160 = %BWVOICE-PORTAL-NUMBER-160%
account.160.display_mwi.enable =
account.160.cid_source =
account.160.cid_source_privacy =
account.160.cid_source_ppi =
account.160.session_timer.enable =
account.160.session_timer.expires =
account.160.session_timer.refreshes =
account.160.enable_user_equal_phone =
account.160.srtp_encryption =
account.160.ptime =
account.160.shared_line = %BWSHAREDLINE-BINARY-160%
account.160.register_mac =
account.160.register_line =
account.160.reg_fail_retry_interval =
account.160.reg_failed_retry_min_time =
account.160.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.160.conf_type =
account.160.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-160%

account.160.sip_server_type =
account.160.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.160.register_expires_overlap =
account.160.subscribe_expires_overlap =
account.160.auto_dial_enable =
account.160.auto_dial_num =
account.160.cp_source =
account.160.transfer_refer_to_contact_header.enable =
#V80 Add
account.160.custom_ua =
account.160.callpark_enable =
account.160.check_cseq.enable =
account.160.check_to_tag.enable =
account.160.hold_use_inactive =
```

```

account.160.line_seize.expires =
account.160.update_ack_while_dialing =
account.160.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.160.always_fwd.enable =
account.160.always_fwd.target =
account.160.always_fwd.off_code =
account.160.always_fwd.on_code =
account.160.busy_fwd.enable =
account.160.busy_fwd.target =
account.160.busy_fwd.off_code =
account.160.busy_fwd.on_code =
account.160.timeout_fwd.enable =
account.160.timeout_fwd.target =
account.160.timeout_fwd.timeout =
account.160.timeout_fwd.off_code =
account.160.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.160.dnd.enable =
account.160.dnd.on_code =
account.160.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.160.reg.enable =
handset.160.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.160.xsi.user =%BWLOGIN-ID-160%
account.160.xsi.password =%XSIPASSWORD-160%
account.160.xsi.host =%XSP_ADDRESS%
account.160.xsi.server_type =
account.160.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.160.ldap.enable =
handset.160.ldap.name_filter=
handset.160.ldap.number_filter=
handset.160.ldap.host=
handset.160.ldap.port=
handset.160.ldap.base=
handset.160.ldap.user=
handset.160.ldap.password=
handset.160.ldap.max_hits=
handset.160.ldap.name_attr=
handset.160.ldap.numb_attr=
handset.160.ldap.display_name=
handset.160.ldap.version=
handset.160.ldap.call_in_lookup=
handset.160.ldap.ldap_sort=
handset.160.ldap.tls_mode=
handset.160.ldap.call_out_lookup=
handset.160.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account161 Settings
##
#####
#####

account.161.enable=%BWLIN-BINARY-161%
account.161.label=%BWEXTENSION-161%
account.161.display_name=%BWCLID-161%
account.161.auth_name=%BWAUTHUSER-161%
account.161.user_name=%BWLINPORT-161%
account.161.password=%BWAUTHPASSWORD-161%

#W80B ADD
account.161.sip_server.template =
account.161.media_transmit.enable =

account.161.alarm.template =
account.161.alarm.server =
account.161.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.161.sip_server.1.failback_mode =
account.161.sip_server.1.failback_timeout =
account.161.sip_server.1.register_on_enable =
account.161.sip_server.1.failback_subscribe.enable =
account.161.sip_server.1.invite_retry_counts =
account.161.sip_server.1.only_signal_with_registered =

account.161.sip_server.2.failback_mode =
account.161.sip_server.2.failback_timeout =
account.161.sip_server.2.register_on_enable =
account.161.sip_server.2.failback_subscribe.enable =
```



```
account.161.sip_server.2.invite_retry_counts =
account.161.sip_server.2.only_signal_with_registered =

account.161.naptr_build =
account.161.fallback.redundancy_type =
account.161.fallback.timeout =

account.161.dns_cache_type =
account.161.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.161.anonymous_call =
account.161.reject_anonymous_call =
account.161.send_anonymous_code =
account.161.anonymous_call_oncode =
account.161.anonymous_call_offcode =
account.161.send_anonymous_rejection_code =
account.161.anonymous_reject_oncode =
account.161.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.161.codec.g722.enable =
account.161.codec.g722.priority =

account.161.codec.g729.enable =
account.161.codec.g729.priority =

account.161.codec.g726_16.enable =
account.161.codec.g726_16.priority =

account.161.codec.g726_24.enable =
account.161.codec.g726_24.priority =

account.161.codec.g726_32.enable =
account.161.codec.g726_32.priority =

account.161.codec.g726_40.enable =
account.161.codec.g726_40.priority =

account.161.codec.ilbc.enable =
account.161.codec.ilbc.priority =

account.161.codec.pcmu.enable =
account.161.codec.pcmu.priority =

account.161.codec.pcma.enable =
account.161.codec.pcma.priority =

account.161.codec.opus.enable =
account.161.codec.opus.priority =
```

```
#####
#####
##                               NAT Settings
##
#####
#####

account.161.nat.nat_traversal =
account.161.nat.udp_update_enable =
account.161.nat.udp_update_time =
account.161.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.161.blf.subscribe_period =
account.161.dtmf.type =
account.161.dtmf.dtmf_payload =
account.161.dtmf.info_type =
account.161.100rel_enable =
account.161.subscribe_register =
account.161.subscribe_mwi =
account.161.subscribe_mwi_expires =
account.161.subscribe_mwi_to_vm =
voice_mail.number.161 = %BWVOICE-PORTAL-NUMBER-161%
account.161.display_mwi.enable =
account.161.cid_source =
account.161.cid_source_privacy =
account.161.cid_source_ppi =
account.161.session_timer.enable =
account.161.session_timer.expires =
account.161.session_timer.refresher =
account.161.enable_user_equal_phone =
account.161.srtp_encryption =
account.161.ptime =
account.161.shared_line = %BWSHAREDLINE-BINARY-161%
account.161.register_mac =
account.161.register_line =
account.161.reg_fail_retry_interval =
account.161.reg_failed_retry_min_time =
account.161.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.161.conf_type =
account.161.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-161%

account.161.sip_server_type =
account.161.unregister_on_reboot =

#####
#####
##                               Register Other
##
```

```
#####
#####
##DECT V81 Add

account.161.register_expires_overlap =
account.161.subscribe_expires_overlap =
account.161.auto_dial_enable =
account.161.auto_dial_num =
account.161.cp_source =
account.161.transfer_refer_to_contact_header.enable =
#V80 Add
account.161.custom_ua =
account.161.callpark_enable =
account.161.check_cseq.enable =
account.161.check_to_tag.enable =
account.161.hold_use_inactive =
account.161.line_seize.expires =
account.161.update_ack_while_dialing =
account.161.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.161.always_fwd.enable =
account.161.always_fwd.target =
account.161.always_fwd.off_code =
account.161.always_fwd.on_code =
account.161.busy_fwd.enable =
account.161.busy_fwd.target =
account.161.busy_fwd.off_code =
account.161.busy_fwd.on_code =
account.161.timeout_fwd.enable =
account.161.timeout_fwd.target =
account.161.timeout_fwd.timeout =
account.161.timeout_fwd.off_code =
account.161.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.161.dnd.enable =
account.161.dnd.on_code =
account.161.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.161.reg.enable =
handset.161.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.161.xsi.user =%BWLOGIN-ID-161%
account.161.xsi.password =%XSIPASSWORD-161%
account.161.xsi.host =%XSP_ADDRESS%
account.161.xsi.server_type =
account.161.xsi.port =

#####
#####
##          LADP
##
#####
handset.161.ldap.enable =
handset.161.ldap.name_filter=
handset.161.ldap.number_filter=
handset.161.ldap.host=
handset.161.ldap.port=
handset.161.ldap.base=
handset.161.ldap.user=
handset.161.ldap.password=
handset.161.ldap.max_hits=
handset.161.ldap.name_attr=
handset.161.ldap.numb_attr=
handset.161.ldap.display_name=
handset.161.ldap.version=
handset.161.ldap.call_in_lookup=
handset.161.ldap.ldap_sort=
handset.161.ldap.tls_mode=
handset.161.ldap.call_out_lookup=
handset.161.ldap.incoming_call_special_search.enable=

#####
#####
##          Account162 Settings
##
#####

account.162.enable=%BWLINE-BINARY-162%
account.162.label=%BWEXTENSION-162%
account.162.display_name=%BWCLID-162%
account.162.auth_name=%BWAUTHUSER-162%
account.162.user_name=%BWLINEPORT-162%
account.162.password=%BWAUTHPASSWORD-162%

#W80B ADD
account.162.sip_server.template =
account.162.media_transmit.enable =

account.162.alarm.template =
account.162.alarm.server =
account.162.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.162.sip_server.1.failback_mode =
account.162.sip_server.1.failback_timeout =
account.162.sip_server.1.register_on_enable =
account.162.sip_server.1.failback_subscribe.enable =
account.162.sip_server.1.invite_retry_counts =
account.162.sip_server.1.only_signal_with_registered =

account.162.sip_server.2.failback_mode =
account.162.sip_server.2.failback_timeout =
account.162.sip_server.2.register_on_enable =
account.162.sip_server.2.failback_subscribe.enable =
account.162.sip_server.2.invite_retry_counts =
account.162.sip_server.2.only_signal_with_registered =

account.162.naptr_build =
account.162.fallback.redundancy_type =
account.162.fallback.timeout =

account.162.dns_cache_type =
account.162.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.162.anonymous_call =
account.162.reject_anonymous_call =
account.162.send_anonymous_code =
account.162.anonymous_call_oncode =
account.162.anonymous_call_offcode =
account.162.send_anonymous_rejection_code =
account.162.anonymous_reject_oncode =
account.162.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.162.codec.g722.enable =
account.162.codec.g722.priority =

account.162.codec.g729.enable =
account.162.codec.g729.priority =

account.162.codec.g726_16.enable =
account.162.codec.g726_16.priority =

account.162.codec.g726_24.enable =
account.162.codec.g726_24.priority =

account.162.codec.g726_32.enable =
account.162.codec.g726_32.priority =
```

```
account.162.codec.g726_40.enable =
account.162.codec.g726_40.priority =

account.162.codec.ilbc.enable =
account.162.codec.ilbc.priority =

account.162.codec.pcmu.enable =
account.162.codec.pcmu.priority =

account.162.codec.pcma.enable =
account.162.codec.pcma.priority =

account.162.codec.opus.enable =
account.162.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.162.nat.nat_traversal =
account.162.nat.udp_update_enable =
account.162.nat.udp_update_time =
account.162.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.162.blf.subscribe_period =
account.162.dtmf.type =
account.162.dtmf.dtmf_payload =
account.162.dtmf.info_type =
account.162.100rel_enable =
account.162.subscribe_register =
account.162.subscribe_mwi =
account.162.subscribe_mwi_expires =
account.162.subscribe_mwi_to_vm =
voice_mail.number.162 = %BWVOICE-PORTAL-NUMBER-162%
account.162.display_mwi.enable =
account.162.cid_source =
account.162.cid_source_privacy =
account.162.cid_source_ppi =
account.162.session_timer.enable =
account.162.session_timer.expires =
account.162.session_timer.refresher =
account.162.enable_user_equal_phone =
account.162.srtp_encryption =
account.162.ptime =
account.162.shared_line = %BWSHAREDLINE-BINARY-162%
account.162.register_mac =
account.162.register_line =
account.162.reg_fail_retry_interval =
account.162.reg_failed_retry_min_time =
account.162.reg_failed_retry_max_time =
```

```
#####
#####
##                               Network Conference
##
#####
#####
account.162.conf_type =
account.162.conf_uri = %BWNWORK-CONFERENCE-SIPURI-162%

account.162.sip_server_type =
account.162.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.162.register_expires_overlap =
account.162.subscribe_expires_overlap =
account.162.auto_dial_enable =
account.162.auto_dial_num =
account.162.cp_source =
account.162.transfer_refer_to_contact_header.enable =
#V80 Add
account.162.custom_ua =
account.162.callpark_enable =
account.162.check_cseq.enable =
account.162.check_to_tag.enable =
account.162.hold_use_inactive =
account.162.line_seize.expires =
account.162.update_ack_while_dialing =
account.162.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.162.always_fwd.enable =
account.162.always_fwd.target =
account.162.always_fwd.off_code =
account.162.always_fwd.on_code =
account.162.busy_fwd.enable =
account.162.busy_fwd.target =
account.162.busy_fwd.off_code =
account.162.busy_fwd.on_code =
account.162.timeout_fwd.enable =
account.162.timeout_fwd.target =
account.162.timeout_fwd.timeout =
account.162.timeout_fwd.off_code =
account.162.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```

account.162.dnd.enable =
account.162.dnd.on_code =
account.162.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.162.reg.enable =
handset.162.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.162.xsi.user =%BWLOGIN-ID-162%
account.162.xsi.password =%XSIPASSWORD-162%
account.162.xsi.host =%XSP_ADDRESS%
account.162.xsi.server_type =
account.162.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.162.ldap.enable =
handset.162.ldap.name_filter=
handset.162.ldap.number_filter=
handset.162.ldap.host=
handset.162.ldap.port=
handset.162.ldap.base=
handset.162.ldap.user=
handset.162.ldap.password=
handset.162.ldap.max_hits=
handset.162.ldap.name_attr=
handset.162.ldap.numb_attr=
handset.162.ldap.display_name=
handset.162.ldap.version=
handset.162.ldap.call_in_lookup=
handset.162.ldap.ldap_sort=
handset.162.ldap.tls_mode=
handset.162.ldap.call_out_lookup=
handset.162.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account163 Settings
##
#####
#####

```



```

account.163.enable=%BWLIN-BINARY-163%
account.163.label=%BWEXTENSION-163%
account.163.display_name=%BWCLID-163%
account.163.auth_name=%BWAUTHUSER-163%
account.163.user_name=%BWLINPORT-163%
account.163.password=%BWAUTHPASSWORD-163%

#W80B ADD
account.163.sip_server.template =
account.163.media_transmit.enable =

account.163.alarm.template =
account.163.alarm.server =
account.163.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.163.sip_server.1.failback_mode =
account.163.sip_server.1.failback_timeout =
account.163.sip_server.1.register_on_enable =
account.163.sip_server.1.failback_subscribe.enable =
account.163.sip_server.1.invite_retry_counts =
account.163.sip_server.1.only_signal_with_registered =

account.163.sip_server.2.failback_mode =
account.163.sip_server.2.failback_timeout =
account.163.sip_server.2.register_on_enable =
account.163.sip_server.2.failback_subscribe.enable =
account.163.sip_server.2.invite_retry_counts =
account.163.sip_server.2.only_signal_with_registered =

account.163.naptr_build =
account.163.fallback.redundancy_type =
account.163.fallback.timeout =

account.163.dns_cache_type =
account.163.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.163.anonymous_call =
account.163.reject_anonymous_call =
account.163.send_anonymous_code =
account.163.anonymous_call_oncode =
account.163.anonymous_call_offcode =
account.163.send_anonymous_rejection_code =
account.163.anonymous_reject_oncode =
account.163.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.163.codec.g722.enable =
account.163.codec.g722.priority =

account.163.codec.g729.enable =
account.163.codec.g729.priority =

account.163.codec.g726_16.enable =
account.163.codec.g726_16.priority =

account.163.codec.g726_24.enable =
account.163.codec.g726_24.priority =

account.163.codec.g726_32.enable =
account.163.codec.g726_32.priority =

account.163.codec.g726_40.enable =
account.163.codec.g726_40.priority =

account.163.codec.ilbc.enable =
account.163.codec.ilbc.priority =

account.163.codec.pcmu.enable =
account.163.codec.pcmu.priority =

account.163.codec.pcma.enable =
account.163.codec.pcma.priority =

account.163.codec.opus.enable =
account.163.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.163.nat.nat_traversal =
account.163.nat.udp_update_enable =
account.163.nat.udp_update_time =
account.163.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.163.blf.subscribe_period =
account.163.dtmf.type =
account.163.dtmf.dtmf_payload =
account.163.dtmf.info_type =
account.163.100rel_enable =
account.163.subscribe_register =
account.163.subscribe_mwi =
account.163.subscribe_mwi_expires =
account.163.subscribe_mwi_to_vm =
voice_mail.number.163 = %BWVOICE-PORTAL-NUMBER-163%
account.163.display_mwi.enable =
account.163.cid_source =
```

```

account.163.cid_source_privacy =
account.163.cid_source_ppi =
account.163.session_timer.enable =
account.163.session_timer.expires =
account.163.session_timer.refresher =
account.163.enable_user_equal_phone =
account.163.srtp_encryption =
account.163.ptime =
account.163.shared_line = %BWSHAREDLINE-BINARY-163%
account.163.register_mac =
account.163.register_line =
account.163.reg_fail_retry_interval =
account.163.reg_failed_retry_min_time =
account.163.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.163.conf_type =
account.163.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-163%

account.163.sip_server_type =
account.163.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.163.register_expires_overlap =
account.163.subscribe_expires_overlap =
account.163.auto_dial_enable =
account.163.auto_dial_num =
account.163.cp_source =
account.163.transfer_refer_to_contact_header.enable =
#V80 Add
account.163.custom_ua =
account.163.callpark_enable =
account.163.check_cseq.enable =
account.163.check_to_tag.enable =
account.163.hold_use_inactive =
account.163.line_seize.expires =
account.163.update_ack_while_dialing =
account.163.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.163.always_fwd.enable =
account.163.always_fwd.target =
account.163.always_fwd.off_code =
account.163.always_fwd.on_code =
account.163.busy_fwd.enable =

```

```

account.163.busy_fwd.target =
account.163.busy_fwd.off_code =
account.163.busy_fwd.on_code =
account.163.timeout_fwd.enable =
account.163.timeout_fwd.target =
account.163.timeout_fwd.timeout =
account.163.timeout_fwd.off_code =
account.163.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.163.dnd.enable =
account.163.dnd.on_code =
account.163.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.163.reg.enable =
handset.163.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.163.xsi.user =%BWLOGIN-ID-163%
account.163.xsi.password =%XSIPASSWORD-163%
account.163.xsi.host =%XSP_ADDRESS%
account.163.xsi.server_type =
account.163.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.163.ldap.enable =
handset.163.ldap.name_filter=
handset.163.ldap.number_filter=
handset.163.ldap.host=
handset.163.ldap.port=
handset.163.ldap.base=
handset.163.ldap.user=
handset.163.ldap.password=
handset.163.ldap.max_hits=
handset.163.ldap.name_attr=
handset.163.ldap.numb_attr=
handset.163.ldap.display_name=
handset.163.ldap.version=
handset.163.ldap.call_in_lookup=

```

```

handset.163.ldap.ldap_sort=
handset.163.ldap.tls_mode=
handset.163.ldap.call_out_lookup=
handset.163.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account164 Settings
##
#####
#####

account.164.enable=%BWLIN-BINARY-164%
account.164.label=%BWEXTENSION-164%
account.164.display_name=%BWCLID-164%
account.164.auth_name=%BWAUTHUSER-164%
account.164.user_name=%BWLINPORT-164%
account.164.password=%BWAUTHPASSWORD-164%

#W80B ADD
account.164.sip_server.template =
account.164.media_transmit.enable =

account.164.alarm.template =
account.164.alarm.server =
account.164.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.164.sip_server.1.failback_mode =
account.164.sip_server.1.failback_timeout =
account.164.sip_server.1.register_on_enable =
account.164.sip_server.1.failback_subscribe.enable =
account.164.sip_server.1.invite_retry_counts =
account.164.sip_server.1.only_signal_with_registered =

account.164.sip_server.2.failback_mode =
account.164.sip_server.2.failback_timeout =
account.164.sip_server.2.register_on_enable =
account.164.sip_server.2.failback_subscribe.enable =
account.164.sip_server.2.invite_retry_counts =
account.164.sip_server.2.only_signal_with_registered =

account.164.naptr_build =
account.164.fallback.redundancy_type =
account.164.fallback.timeout =

account.164.dns_cache_type =
account.164.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####

```

```

account.164.anonymous_call =
account.164.reject_anonymous_call =
account.164.send_anonymous_code =
account.164.anonymous_call_oncode =
account.164.anonymous_call_offcode =
account.164.send_anonymous_rejection_code =
account.164.anonymous_reject_oncode =
account.164.anonymous_reject_offcode =

#####
#####
##
##                                Codec
##
#####
#####
account.164.codec.g722.enable =
account.164.codec.g722.priority =

account.164.codec.g729.enable =
account.164.codec.g729.priority =

account.164.codec.g726_16.enable =
account.164.codec.g726_16.priority =

account.164.codec.g726_24.enable =
account.164.codec.g726_24.priority =

account.164.codec.g726_32.enable =
account.164.codec.g726_32.priority =

account.164.codec.g726_40.enable =
account.164.codec.g726_40.priority =

account.164.codec.ilbc.enable =
account.164.codec.ilbc.priority =

account.164.codec.pcmu.enable =
account.164.codec.pcmu.priority =

account.164.codec.pcma.enable =
account.164.codec.pcma.priority =

account.164.codec.opus.enable =
account.164.codec.opus.priority =

#####
#####
##
##                                NAT Settings
##
#####
#####

account.164.nat.nat_traversal =
account.164.nat.udp_update_enable =
account.164.nat.udp_update_time =
account.164.nat.rport =

#####
#####
##
##                                Register Advanced
##

```

```
#####
#####

account.164.blf.subscribe_period =
account.164.dtmf.type =
account.164.dtmf.dtmf_payload =
account.164.dtmf.info_type =
account.164.100rel_enable =
account.164.subscribe_register =
account.164.subscribe_mwi =
account.164.subscribe_mwi_expires =
account.164.subscribe_mwi_to_vm =
voice_mail.number.164 = %BWVOICE-PORTAL-NUMBER-164%
account.164.display_mwi.enable =
account.164.cid_source =
account.164.cid_source_privacy =
account.164.cid_source_ppi =
account.164.session_timer.enable =
account.164.session_timer.expires =
account.164.session_timer.refreshes =
account.164.enable_user_equal_phone =
account.164.srtp_encryption =
account.164.ptime =
account.164.shared_line = %BWSHAREDLINE-BINARY-164%
account.164.register_mac =
account.164.register_line =
account.164.reg_fail_retry_interval =
account.164.reg_failed_retry_min_time =
account.164.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.164.conf_type =
account.164.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-164%

account.164.sip_server_type =
account.164.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.164.register_expires_overlap =
account.164.subscribe_expires_overlap =
account.164.auto_dial_enable =
account.164.auto_dial_num =
account.164.cp_source =
account.164.transfer_refer_to_contact_header.enable =
#V80 Add
account.164.custom_ua =
account.164.callpark_enable =
account.164.check_cseq.enable =
account.164.check_to_tag.enable =
account.164.hold_use_inactive =
```

```

account.164.line_seize.expires =
account.164.update_ack_while_dialing =
account.164.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.164.always_fwd.enable =
account.164.always_fwd.target =
account.164.always_fwd.off_code =
account.164.always_fwd.on_code =
account.164.busy_fwd.enable =
account.164.busy_fwd.target =
account.164.busy_fwd.off_code =
account.164.busy_fwd.on_code =
account.164.timeout_fwd.enable =
account.164.timeout_fwd.target =
account.164.timeout_fwd.timeout =
account.164.timeout_fwd.off_code =
account.164.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.164.dnd.enable =
account.164.dnd.on_code =
account.164.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.164.reg.enable =
handset.164.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.164.xsi.user =%BWLOGIN-ID-164%
account.164.xsi.password =%XSIPASSWORD-164%
account.164.xsi.host =%XSP_ADDRESS%
account.164.xsi.server_type =
account.164.xsi.port =

#####
#####
##                               LADP
##

```



```
#####
#####
handset.164.ldap.enable =
handset.164.ldap.name_filter=
handset.164.ldap.number_filter=
handset.164.ldap.host=
handset.164.ldap.port=
handset.164.ldap.base=
handset.164.ldap.user=
handset.164.ldap.password=
handset.164.ldap.max_hits=
handset.164.ldap.name_attr=
handset.164.ldap.numb_attr=
handset.164.ldap.display_name=
handset.164.ldap.version=
handset.164.ldap.call_in_lookup=
handset.164.ldap.ldap_sort=
handset.164.ldap.tls_mode=
handset.164.ldap.call_out_lookup=
handset.164.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account165 Settings
##
#####
#####

account.165.enable=%BWLIN-BINARY-165%
account.165.label=%BWEXTENSION-165%
account.165.display_name=%BWCLID-165%
account.165.auth_name=%BWAUTHUSER-165%
account.165.user_name=%BWLINPORT-165%
account.165.password=%BWAUTHPASSWORD-165%

#W80B ADD
account.165.sip_server.template =
account.165.media_transmit.enable =

account.165.alarm.template =
account.165.alarm.server =
account.165.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.165.sip_server.1.failback_mode =
account.165.sip_server.1.failback_timeout =
account.165.sip_server.1.register_on_enable =
account.165.sip_server.1.failback_subscribe.enable =
account.165.sip_server.1.invite_retry_counts =
account.165.sip_server.1.only_signal_with_registered =

account.165.sip_server.2.failback_mode =
account.165.sip_server.2.failback_timeout =
account.165.sip_server.2.register_on_enable =
account.165.sip_server.2.failback_subscribe.enable =
```

```

account.165.sip_server.2.invite_retry_counts =
account.165.sip_server.2.only_signal_with_registered =

account.165.naptr_build =
account.165.fallback.redundancy_type =
account.165.fallback.timeout =

account.165.dns_cache_type =
account.165.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.165.anonymous_call =
account.165.reject_anonymous_call =
account.165.send_anonymous_code =
account.165.anonymous_call_oncode =
account.165.anonymous_call_offcode =
account.165.send_anonymous_rejection_code =
account.165.anonymous_reject_oncode =
account.165.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.165.codec.g722.enable =
account.165.codec.g722.priority =

account.165.codec.g729.enable =
account.165.codec.g729.priority =

account.165.codec.g726_16.enable =
account.165.codec.g726_16.priority =

account.165.codec.g726_24.enable =
account.165.codec.g726_24.priority =

account.165.codec.g726_32.enable =
account.165.codec.g726_32.priority =

account.165.codec.g726_40.enable =
account.165.codec.g726_40.priority =

account.165.codec.ilbc.enable =
account.165.codec.ilbc.priority =

account.165.codec.pcmu.enable =
account.165.codec.pcmu.priority =

account.165.codec.pcma.enable =
account.165.codec.pcma.priority =

account.165.codec.opus.enable =
account.165.codec.opus.priority =

```

```
#####
#####
##                               NAT Settings
##
#####
#####

account.165.nat.nat_traversal =
account.165.nat.udp_update_enable =
account.165.nat.udp_update_time =
account.165.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.165.blf.subscribe_period =
account.165.dtmf.type =
account.165.dtmf.dtmf_payload =
account.165.dtmf.info_type =
account.165.100rel_enable =
account.165.subscribe_register =
account.165.subscribe_mwi =
account.165.subscribe_mwi_expires =
account.165.subscribe_mwi_to_vm =
voice_mail.number.165 = %BWVOICE-PORTAL-NUMBER-165%
account.165.display_mwi.enable =
account.165.cid_source =
account.165.cid_source_privacy =
account.165.cid_source_ppi =
account.165.session_timer.enable =
account.165.session_timer.expires =
account.165.session_timer.refresher =
account.165.enable_user_equal_phone =
account.165.srtp_encryption =
account.165.ptime =
account.165.shared_line = %BWSHAREDLINE-BINARY-165%
account.165.register_mac =
account.165.register_line =
account.165.reg_fail_retry_interval =
account.165.reg_failed_retry_min_time =
account.165.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.165.conf_type =
account.165.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-165%

account.165.sip_server_type =
account.165.unregister_on_reboot =

#####
#####
##                               Register Other
##
```

```
#####
#####
##DECT V81 Add

account.165.register_expires_overlap =
account.165.subscribe_expires_overlap =
account.165.auto_dial_enable =
account.165.auto_dial_num =
account.165.cp_source =
account.165.transfer_refer_to_contact_header.enable =
#V80 Add
account.165.custom_ua =
account.165.callpark_enable =
account.165.check_cseq.enable =
account.165.check_to_tag.enable =
account.165.hold_use_inactive =
account.165.line_seize.expires =
account.165.update_ack_while_dialing =
account.165.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.165.always_fwd.enable =
account.165.always_fwd.target =
account.165.always_fwd.off_code =
account.165.always_fwd.on_code =
account.165.busy_fwd.enable =
account.165.busy_fwd.target =
account.165.busy_fwd.off_code =
account.165.busy_fwd.on_code =
account.165.timeout_fwd.enable =
account.165.timeout_fwd.target =
account.165.timeout_fwd.timeout =
account.165.timeout_fwd.off_code =
account.165.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.165.dnd.enable =
account.165.dnd.on_code =
account.165.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.165.reg.enable =
handset.165.ipui =

#####
#####
```

```
##          Broadsoft XSI
##
#####

account.165.xsi.user =%BWLOGIN-ID-165%
account.165.xsi.password =%XSIPASSWORD-165%
account.165.xsi.host =%XSP_ADDRESS%
account.165.xsi.server_type =
account.165.xsi.port =

#####
#####
##          LADP
##
#####
handset.165.ldap.enable =
handset.165.ldap.name_filter=
handset.165.ldap.number_filter=
handset.165.ldap.host=
handset.165.ldap.port=
handset.165.ldap.base=
handset.165.ldap.user=
handset.165.ldap.password=
handset.165.ldap.max_hits=
handset.165.ldap.name_attr=
handset.165.ldap.numb_attr=
handset.165.ldap.display_name=
handset.165.ldap.version=
handset.165.ldap.call_in_lookup=
handset.165.ldap.ldap_sort=
handset.165.ldap.tls_mode=
handset.165.ldap.call_out_lookup=
handset.165.ldap.incoming_call_special_search.enable=

#####
#####
##          Account166 Settings
##
#####

account.166.enable=%BWLINE-BINARY-166%
account.166.label=%BWEXTENSION-166%
account.166.display_name=%BWCLID-166%
account.166.auth_name=%BWAUTHUSER-166%
account.166.user_name=%BWLINEPORT-166%
account.166.password=%BWAUTHPASSWORD-166%

#W80B ADD
account.166.sip_server.template =
account.166.media_transmit.enable =

account.166.alarm.template =
account.166.alarm.server =
account.166.alarm.number =
```

```
#####
#####
##                               Failback
##
#####
#####
account.166.sip_server.1.failback_mode =
account.166.sip_server.1.failback_timeout =
account.166.sip_server.1.register_on_enable =
account.166.sip_server.1.failback_subscribe.enable =
account.166.sip_server.1.invite_retry_counts =
account.166.sip_server.1.only_signal_with_registered =

account.166.sip_server.2.failback_mode =
account.166.sip_server.2.failback_timeout =
account.166.sip_server.2.register_on_enable =
account.166.sip_server.2.failback_subscribe.enable =
account.166.sip_server.2.invite_retry_counts =
account.166.sip_server.2.only_signal_with_registered =

account.166.naptr_build =
account.166.fallback.redundancy_type =
account.166.fallback.timeout =

account.166.dns_cache_type =
account.166.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.166.anonymous_call =
account.166.reject_anonymous_call =
account.166.send_anonymous_code =
account.166.anonymous_call_oncode =
account.166.anonymous_call_offcode =
account.166.send_anonymous_rejection_code =
account.166.anonymous_reject_oncode =
account.166.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.166.codec.g722.enable =
account.166.codec.g722.priority =

account.166.codec.g729.enable =
account.166.codec.g729.priority =

account.166.codec.g726_16.enable =
account.166.codec.g726_16.priority =

account.166.codec.g726_24.enable =
account.166.codec.g726_24.priority =

account.166.codec.g726_32.enable =
account.166.codec.g726_32.priority =
```

```

account.166.codec.g726_40.enable =
account.166.codec.g726_40.priority =

account.166.codec.ilbc.enable =
account.166.codec.ilbc.priority =

account.166.codec.pcmu.enable =
account.166.codec.pcmu.priority =

account.166.codec.pcma.enable =
account.166.codec.pcma.priority =

account.166.codec.opus.enable =
account.166.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.166.nat.nat_traversal =
account.166.nat.udp_update_enable =
account.166.nat.udp_update_time =
account.166.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.166.blf.subscribe_period =
account.166.dtmf.type =
account.166.dtmf.dtmf_payload =
account.166.dtmf.info_type =
account.166.100rel_enable =
account.166.subscribe_register =
account.166.subscribe_mwi =
account.166.subscribe_mwi_expires =
account.166.subscribe_mwi_to_vm =
voice_mail.number.166 = %BWVOICE-PORTAL-NUMBER-166%
account.166.display_mwi.enable =
account.166.cid_source =
account.166.cid_source_privacy =
account.166.cid_source_ppi =
account.166.session_timer.enable =
account.166.session_timer.expires =
account.166.session_timer.refresher =
account.166.enable_user_equal_phone =
account.166.srtp_encryption =
account.166.ptime =
account.166.shared_line = %BWSHAREDLINE-BINARY-166%
account.166.register_mac =
account.166.register_line =
account.166.reg_fail_retry_interval =
account.166.reg_failed_retry_min_time =
account.166.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.166.conf_type =
account.166.conf_uri = %BWNWORK-CONFERENCE-SIPURI-166%

account.166.sip_server_type =
account.166.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.166.register_expires_overlap =
account.166.subscribe_expires_overlap =
account.166.auto_dial_enable =
account.166.auto_dial_num =
account.166.cp_source =
account.166.transfer_refer_to_contact_header.enable =
#V80 Add
account.166.custom_ua =
account.166.callpark_enable =
account.166.check_cseq.enable =
account.166.check_to_tag.enable =
account.166.hold_use_inactive =
account.166.line_seize.expires =
account.166.update_ack_while_dialing =
account.166.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.166.always_fwd.enable =
account.166.always_fwd.target =
account.166.always_fwd.off_code =
account.166.always_fwd.on_code =
account.166.busy_fwd.enable =
account.166.busy_fwd.target =
account.166.busy_fwd.off_code =
account.166.busy_fwd.on_code =
account.166.timeout_fwd.enable =
account.166.timeout_fwd.target =
account.166.timeout_fwd.timeout =
account.166.timeout_fwd.off_code =
account.166.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```



```
account.166.dnd.enable =
account.166.dnd.on_code =
account.166.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.166.reg.enable =
handset.166.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####

account.166.xsi.user =%BWLOGIN-ID-166%
account.166.xsi.password =%XSIPASSWORD-166%
account.166.xsi.host =%XSP_ADDRESS%
account.166.xsi.server_type =
account.166.xsi.port =

#####
#####
##                               LADP
##
#####
#####
handset.166.ldap.enable =
handset.166.ldap.name_filter=
handset.166.ldap.number_filter=
handset.166.ldap.host=
handset.166.ldap.port=
handset.166.ldap.base=
handset.166.ldap.user=
handset.166.ldap.password=
handset.166.ldap.max_hits=
handset.166.ldap.name_attr=
handset.166.ldap.numb_attr=
handset.166.ldap.display_name=
handset.166.ldap.version=
handset.166.ldap.call_in_lookup=
handset.166.ldap.ldap_sort=
handset.166.ldap.tls_mode=
handset.166.ldap.call_out_lookup=
handset.166.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account167 Settings
##
#####
#####
```

```

account.167.enable=%BWLIN-BINARY-167%
account.167.label=%BWEXTENSION-167%
account.167.display_name=%BWCLID-167%
account.167.auth_name=%BWAUTHUSER-167%
account.167.user_name=%BWLINPORT-167%
account.167.password=%BWAUTHPASSWORD-167%

#W80B ADD
account.167.sip_server.template =
account.167.media_transmit.enable =

account.167.alarm.template =
account.167.alarm.server =
account.167.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.167.sip_server.1.failback_mode =
account.167.sip_server.1.failback_timeout =
account.167.sip_server.1.register_on_enable =
account.167.sip_server.1.failback_subscribe.enable =
account.167.sip_server.1.invite_retry_counts =
account.167.sip_server.1.only_signal_with_registered =

account.167.sip_server.2.failback_mode =
account.167.sip_server.2.failback_timeout =
account.167.sip_server.2.register_on_enable =
account.167.sip_server.2.failback_subscribe.enable =
account.167.sip_server.2.invite_retry_counts =
account.167.sip_server.2.only_signal_with_registered =

account.167.naptr_build =
account.167.fallback.redundancy_type =
account.167.fallback.timeout =

account.167.dns_cache_type =
account.167.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.167.anonymous_call =
account.167.reject_anonymous_call =
account.167.send_anonymous_code =
account.167.anonymous_call_oncode =
account.167.anonymous_call_offcode =
account.167.send_anonymous_rejection_code =
account.167.anonymous_reject_oncode =
account.167.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.167.codec.g722.enable =
account.167.codec.g722.priority =

account.167.codec.g729.enable =
account.167.codec.g729.priority =

account.167.codec.g726_16.enable =
account.167.codec.g726_16.priority =

account.167.codec.g726_24.enable =
account.167.codec.g726_24.priority =

account.167.codec.g726_32.enable =
account.167.codec.g726_32.priority =

account.167.codec.g726_40.enable =
account.167.codec.g726_40.priority =

account.167.codec.ilbc.enable =
account.167.codec.ilbc.priority =

account.167.codec.pcmu.enable =
account.167.codec.pcmu.priority =

account.167.codec.pcma.enable =
account.167.codec.pcma.priority =

account.167.codec.opus.enable =
account.167.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.167.nat.nat_traversal =
account.167.nat.udp_update_enable =
account.167.nat.udp_update_time =
account.167.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.167.blf.subscribe_period =
account.167.dtmf.type =
account.167.dtmf.dtmf_payload =
account.167.dtmf.info_type =
account.167.100rel_enable =
account.167.subscribe_register =
account.167.subscribe_mwi =
account.167.subscribe_mwi_expires =
account.167.subscribe_mwi_to_vm =
voice_mail.number.167 = %BWVOICE-PORTAL-NUMBER-167%
account.167.display_mwi.enable =
account.167.cid_source =
```

```

account.167.cid_source_privacy =
account.167.cid_source_ppi =
account.167.session_timer.enable =
account.167.session_timer.expires =
account.167.session_timer.refresher =
account.167.enable_user_equal_phone =
account.167.srtp_encryption =
account.167.ptime =
account.167.shared_line = %BWSHAREDLINE-BINARY-167%
account.167.register_mac =
account.167.register_line =
account.167.reg_fail_retry_interval =
account.167.reg_failed_retry_min_time =
account.167.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.167.conf_type =
account.167.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-167%

account.167.sip_server_type =
account.167.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.167.register_expires_overlap =
account.167.subscribe_expires_overlap =
account.167.auto_dial_enable =
account.167.auto_dial_num =
account.167.cp_source =
account.167.transfer_refer_to_contact_header.enable =
#V80 Add
account.167.custom_ua =
account.167.callpark_enable =
account.167.check_cseq.enable =
account.167.check_to_tag.enable =
account.167.hold_use_inactive =
account.167.line_seize.expires =
account.167.update_ack_while_dialing =
account.167.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.167.always_fwd.enable =
account.167.always_fwd.target =
account.167.always_fwd.off_code =
account.167.always_fwd.on_code =
account.167.busy_fwd.enable =

```

```
account.167.busy_fwd.target =
account.167.busy_fwd.off_code =
account.167.busy_fwd.on_code =
account.167.timeout_fwd.enable =
account.167.timeout_fwd.target =
account.167.timeout_fwd.timeout =
account.167.timeout_fwd.off_code =
account.167.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.167.dnd.enable =
account.167.dnd.on_code =
account.167.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.167.reg.enable =
handset.167.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####
account.167.xsi.user =%BWLOGIN-ID-167%
account.167.xsi.password =%XSIPASSWORD-167%
account.167.xsi.host =%XSP_ADDRESS%
account.167.xsi.server_type =
account.167.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.167.ldap.enable =
handset.167.ldap.name_filter=
handset.167.ldap.number_filter=
handset.167.ldap.host=
handset.167.ldap.port=
handset.167.ldap.base=
handset.167.ldap.user=
handset.167.ldap.password=
handset.167.ldap.max_hits=
handset.167.ldap.name_attr=
handset.167.ldap.numb_attr=
handset.167.ldap.display_name=
handset.167.ldap.version=
handset.167.ldap.call_in_lookup=
```

```

handset.167.ldap.ldap_sort=
handset.167.ldap.tls_mode=
handset.167.ldap.call_out_lookup=
handset.167.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account168 Settings
##
#####
#####

account.168.enable=%BWLIN-BINARY-168%
account.168.label=%BWEXTENSION-168%
account.168.display_name=%BWCLID-168%
account.168.auth_name=%BWAUTHUSER-168%
account.168.user_name=%BWLINPORT-168%
account.168.password=%BWAUTHPASSWORD-168%

#W80B ADD
account.168.sip_server.template =
account.168.media_transmit.enable =

account.168.alarm.template =
account.168.alarm.server =
account.168.alarm.number =

#####
#####
##                               Failback
##
#####
#####

account.168.sip_server.1.failback_mode =
account.168.sip_server.1.failback_timeout =
account.168.sip_server.1.register_on_enable =
account.168.sip_server.1.failback_subscribe.enable =
account.168.sip_server.1.invite_retry_counts =
account.168.sip_server.1.only_signal_with_registered =

account.168.sip_server.2.failback_mode =
account.168.sip_server.2.failback_timeout =
account.168.sip_server.2.register_on_enable =
account.168.sip_server.2.failback_subscribe.enable =
account.168.sip_server.2.invite_retry_counts =
account.168.sip_server.2.only_signal_with_registered =

account.168.naptr_build =
account.168.fallback.redundancy_type =
account.168.fallback.timeout =

account.168.dns_cache_type =
account.168.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####

```

```

account.168.anonymous_call =
account.168.reject_anonymous_call =
account.168.send_anonymous_code =
account.168.anonymous_call_oncode =
account.168.anonymous_call_offcode =
account.168.send_anonymous_rejection_code =
account.168.anonymous_reject_oncode =
account.168.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.168.codec.g722.enable =
account.168.codec.g722.priority =

account.168.codec.g729.enable =
account.168.codec.g729.priority =

account.168.codec.g726_16.enable =
account.168.codec.g726_16.priority =

account.168.codec.g726_24.enable =
account.168.codec.g726_24.priority =

account.168.codec.g726_32.enable =
account.168.codec.g726_32.priority =

account.168.codec.g726_40.enable =
account.168.codec.g726_40.priority =

account.168.codec.ilbc.enable =
account.168.codec.ilbc.priority =

account.168.codec.pcmu.enable =
account.168.codec.pcmu.priority =

account.168.codec.pcma.enable =
account.168.codec.pcma.priority =

account.168.codec.opus.enable =
account.168.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
##
#####
#####

account.168.nat.nat_traversal =
account.168.nat.udp_update_enable =
account.168.nat.udp_update_time =
account.168.nat.rport =

#####
#####
##                                     Register Advanced
##
##

```

```
#####
#####

account.168.blf.subscribe_period =
account.168.dtmf.type =
account.168.dtmf.dtmf_payload =
account.168.dtmf.info_type =
account.168.100rel_enable =
account.168.subscribe_register =
account.168.subscribe_mwi =
account.168.subscribe_mwi_expires =
account.168.subscribe_mwi_to_vm =
voice_mail.number.168 = %BWVOICE-PORTAL-NUMBER-168%
account.168.display_mwi.enable =
account.168.cid_source =
account.168.cid_source_privacy =
account.168.cid_source_ppi =
account.168.session_timer.enable =
account.168.session_timer.expires =
account.168.session_timer.refreshes =
account.168.enable_user_equal_phone =
account.168.srtp_encryption =
account.168.ptime =
account.168.shared_line = %BWSHAREDLINE-BINARY-168%
account.168.register_mac =
account.168.register_line =
account.168.reg_fail_retry_interval =
account.168.reg_failed_retry_min_time =
account.168.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.168.conf_type =
account.168.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-168%

account.168.sip_server_type =
account.168.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.168.register_expires_overlap =
account.168.subscribe_expires_overlap =
account.168.auto_dial_enable =
account.168.auto_dial_num =
account.168.cp_source =
account.168.transfer_refer_to_contact_header.enable =
#V80 Add
account.168.custom_ua =
account.168.callpark_enable =
account.168.check_cseq.enable =
account.168.check_to_tag.enable =
account.168.hold_use_inactive =
```



```

account.168.line_seize.expires =
account.168.update_ack_while_dialing =
account.168.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.168.always_fwd.enable =
account.168.always_fwd.target =
account.168.always_fwd.off_code =
account.168.always_fwd.on_code =
account.168.busy_fwd.enable =
account.168.busy_fwd.target =
account.168.busy_fwd.off_code =
account.168.busy_fwd.on_code =
account.168.timeout_fwd.enable =
account.168.timeout_fwd.target =
account.168.timeout_fwd.timeout =
account.168.timeout_fwd.off_code =
account.168.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.168.dnd.enable =
account.168.dnd.on_code =
account.168.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.168.reg.enable =
handset.168.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.168.xsi.user =%BWLOGIN-ID-168%
account.168.xsi.password =%XSIPASSWORD-168%
account.168.xsi.host =%XSP_ADDRESS%
account.168.xsi.server_type =
account.168.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.168.ldap.enable =
handset.168.ldap.name_filter=
handset.168.ldap.number_filter=
handset.168.ldap.host=
handset.168.ldap.port=
handset.168.ldap.base=
handset.168.ldap.user=
handset.168.ldap.password=
handset.168.ldap.max_hits=
handset.168.ldap.name_attr=
handset.168.ldap.numb_attr=
handset.168.ldap.display_name=
handset.168.ldap.version=
handset.168.ldap.call_in_lookup=
handset.168.ldap.ldap_sort=
handset.168.ldap.tls_mode=
handset.168.ldap.call_out_lookup=
handset.168.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account169 Settings
##
#####
#####

account.169.enable=%BWLIN-BINARY-169%
account.169.label=%BWEXTENSION-169%
account.169.display_name=%BWCLID-169%
account.169.auth_name=%BWAUTHUSER-169%
account.169.user_name=%BWLINPORT-169%
account.169.password=%BWAUTHPASSWORD-169%

#W80B ADD
account.169.sip_server.template =
account.169.media_transmit.enable =

account.169.alarm.template =
account.169.alarm.server =
account.169.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.169.sip_server.1.failback_mode =
account.169.sip_server.1.failback_timeout =
account.169.sip_server.1.register_on_enable =
account.169.sip_server.1.failback_subscribe.enable =
account.169.sip_server.1.invite_retry_counts =
account.169.sip_server.1.only_signal_with_registered =

account.169.sip_server.2.failback_mode =
account.169.sip_server.2.failback_timeout =
account.169.sip_server.2.register_on_enable =
account.169.sip_server.2.failback_subscribe.enable =
```

```

account.169.sip_server.2.invite_retry_counts =
account.169.sip_server.2.only_signal_with_registered =

account.169.naptr_build =
account.169.fallback.redundancy_type =
account.169.fallback.timeout =

account.169.dns_cache_type =
account.169.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.169.anonymous_call =
account.169.reject_anonymous_call =
account.169.send_anonymous_code =
account.169.anonymous_call_oncode =
account.169.anonymous_call_offcode =
account.169.send_anonymous_rejection_code =
account.169.anonymous_reject_oncode =
account.169.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.169.codec.g722.enable =
account.169.codec.g722.priority =

account.169.codec.g729.enable =
account.169.codec.g729.priority =

account.169.codec.g726_16.enable =
account.169.codec.g726_16.priority =

account.169.codec.g726_24.enable =
account.169.codec.g726_24.priority =

account.169.codec.g726_32.enable =
account.169.codec.g726_32.priority =

account.169.codec.g726_40.enable =
account.169.codec.g726_40.priority =

account.169.codec.ilbc.enable =
account.169.codec.ilbc.priority =

account.169.codec.pcmu.enable =
account.169.codec.pcmu.priority =

account.169.codec.pcma.enable =
account.169.codec.pcma.priority =

account.169.codec.opus.enable =
account.169.codec.opus.priority =

```

```
#####
#####
##                               NAT Settings
##
#####
#####

account.169.nat.nat_traversal =
account.169.nat.udp_update_enable =
account.169.nat.udp_update_time =
account.169.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.169.blf.subscribe_period =
account.169.dtmf.type =
account.169.dtmf.dtmf_payload =
account.169.dtmf.info_type =
account.169.100rel_enable =
account.169.subscribe_register =
account.169.subscribe_mwi =
account.169.subscribe_mwi_expires =
account.169.subscribe_mwi_to_vm =
voice_mail.number.169 = %BWVOICE-PORTAL-NUMBER-169%
account.169.display_mwi.enable =
account.169.cid_source =
account.169.cid_source_privacy =
account.169.cid_source_ppi =
account.169.session_timer.enable =
account.169.session_timer.expires =
account.169.session_timer.refresher =
account.169.enable_user_equal_phone =
account.169.srtp_encryption =
account.169.ptime =
account.169.shared_line = %BWSHAREDLINE-BINARY-169%
account.169.register_mac =
account.169.register_line =
account.169.reg_fail_retry_interval =
account.169.reg_failed_retry_min_time =
account.169.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.169.conf_type =
account.169.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-169%

account.169.sip_server_type =
account.169.unregister_on_reboot =

#####
#####
##                               Register Other
##
##
```

```
#####
#####
##DECT V81 Add

account.169.register_expires_overlap =
account.169.subscribe_expires_overlap =
account.169.auto_dial_enable =
account.169.auto_dial_num =
account.169.cp_source =
account.169.transfer_refer_to_contact_header.enable =
#V80 Add
account.169.custom_ua =
account.169.callpark_enable =
account.169.check_cseq.enable =
account.169.check_to_tag.enable =
account.169.hold_use_inactive =
account.169.line_seize.expires =
account.169.update_ack_while_dialing =
account.169.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.169.always_fwd.enable =
account.169.always_fwd.target =
account.169.always_fwd.off_code =
account.169.always_fwd.on_code =
account.169.busy_fwd.enable =
account.169.busy_fwd.target =
account.169.busy_fwd.off_code =
account.169.busy_fwd.on_code =
account.169.timeout_fwd.enable =
account.169.timeout_fwd.target =
account.169.timeout_fwd.timeout =
account.169.timeout_fwd.off_code =
account.169.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.169.dnd.enable =
account.169.dnd.on_code =
account.169.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.169.reg.enable =
handset.169.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.169.xsi.user =%BWLOGIN-ID-169%
account.169.xsi.password =%XSIPASSWORD-169%
account.169.xsi.host =%XSP_ADDRESS%
account.169.xsi.server_type =
account.169.xsi.port =

#####
#####
##          LADP
##
#####
handset.169.ldap.enable =
handset.169.ldap.name_filter=
handset.169.ldap.number_filter=
handset.169.ldap.host=
handset.169.ldap.port=
handset.169.ldap.base=
handset.169.ldap.user=
handset.169.ldap.password=
handset.169.ldap.max_hits=
handset.169.ldap.name_attr=
handset.169.ldap.numb_attr=
handset.169.ldap.display_name=
handset.169.ldap.version=
handset.169.ldap.call_in_lookup=
handset.169.ldap.ldap_sort=
handset.169.ldap.tls_mode=
handset.169.ldap.call_out_lookup=
handset.169.ldap.incoming_call_special_search.enable=

#####
#####
##          Account170 Settings
##
#####

account.170.enable=%BWLINE-BINARY-170%
account.170.label=%BWEXTENSION-170%
account.170.display_name=%BWCLID-170%
account.170.auth_name=%BWAUTHUSER-170%
account.170.user_name=%BWLINERPORT-170%
account.170.password=%BWAUTHPASSWORD-170%

#W80B ADD
account.170.sip_server.template =
account.170.media_transmit.enable =

account.170.alarm.template =
account.170.alarm.server =
account.170.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.170.sip_server.1.failback_mode =
account.170.sip_server.1.failback_timeout =
account.170.sip_server.1.register_on_enable =
account.170.sip_server.1.failback_subscribe.enable =
account.170.sip_server.1.invite_retry_counts =
account.170.sip_server.1.only_signal_with_registered =

account.170.sip_server.2.failback_mode =
account.170.sip_server.2.failback_timeout =
account.170.sip_server.2.register_on_enable =
account.170.sip_server.2.failback_subscribe.enable =
account.170.sip_server.2.invite_retry_counts =
account.170.sip_server.2.only_signal_with_registered =

account.170.naptr_build =
account.170.fallback.redundancy_type =
account.170.fallback.timeout =

account.170.dns_cache_type =
account.170.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.170.anonymous_call =
account.170.reject_anonymous_call =
account.170.send_anonymous_code =
account.170.anonymous_call_oncode =
account.170.anonymous_call_offcode =
account.170.send_anonymous_rejection_code =
account.170.anonymous_reject_oncode =
account.170.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.170.codec.g722.enable =
account.170.codec.g722.priority =

account.170.codec.g729.enable =
account.170.codec.g729.priority =

account.170.codec.g726_16.enable =
account.170.codec.g726_16.priority =

account.170.codec.g726_24.enable =
account.170.codec.g726_24.priority =

account.170.codec.g726_32.enable =
account.170.codec.g726_32.priority =
```

```

account.170.codec.g726_40.enable =
account.170.codec.g726_40.priority =

account.170.codec.ilbc.enable =
account.170.codec.ilbc.priority =

account.170.codec.pcmu.enable =
account.170.codec.pcmu.priority =

account.170.codec.pcma.enable =
account.170.codec.pcma.priority =

account.170.codec.opus.enable =
account.170.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.170.nat.nat_traversal =
account.170.nat.udp_update_enable =
account.170.nat.udp_update_time =
account.170.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.170.blf.subscribe_period =
account.170.dtmf.type =
account.170.dtmf.dtmf_payload =
account.170.dtmf.info_type =
account.170.100rel_enable =
account.170.subscribe_register =
account.170.subscribe_mwi =
account.170.subscribe_mwi_expires =
account.170.subscribe_mwi_to_vm =
voice_mail.number.170 = %BWVOICE-PORTAL-NUMBER-170%
account.170.display_mwi.enable =
account.170.cid_source =
account.170.cid_source_privacy =
account.170.cid_source_ppi =
account.170.session_timer.enable =
account.170.session_timer.expires =
account.170.session_timer.refresher =
account.170.enable_user_equal_phone =
account.170.srtp_encryption =
account.170.ptime =
account.170.shared_line = %BWSHAREDLINE-BINARY-170%
account.170.register_mac =
account.170.register_line =
account.170.reg_fail_retry_interval =
account.170.reg_failed_retry_min_time =
account.170.reg_failed_retry_max_time =

```



```
#####
#####
##                               Network Conference
##
#####
#####
account.170.conf_type =
account.170.conf_uri = %BWNWORK-CONFERENCE-SIPURI-170%

account.170.sip_server_type =
account.170.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.170.register_expires_overlap =
account.170.subscribe_expires_overlap =
account.170.auto_dial_enable =
account.170.auto_dial_num =
account.170.cp_source =
account.170.transfer_refer_to_contact_header.enable =
#V80 Add
account.170.custom_ua =
account.170.callpark_enable =
account.170.check_cseq.enable =
account.170.check_to_tag.enable =
account.170.hold_use_inactive =
account.170.line_seize.expires =
account.170.update_ack_while_dialing =
account.170.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.170.always_fwd.enable =
account.170.always_fwd.target =
account.170.always_fwd.off_code =
account.170.always_fwd.on_code =
account.170.busy_fwd.enable =
account.170.busy_fwd.target =
account.170.busy_fwd.off_code =
account.170.busy_fwd.on_code =
account.170.timeout_fwd.enable =
account.170.timeout_fwd.target =
account.170.timeout_fwd.timeout =
account.170.timeout_fwd.off_code =
account.170.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```
account.170.dnd.enable =
account.170.dnd.on_code =
account.170.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.170.reg.enable =
handset.170.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####

account.170.xsi.user =%BWLOGIN-ID-170%
account.170.xsi.password =%XSIPASSWORD-170%
account.170.xsi.host =%XSP_ADDRESS%
account.170.xsi.server_type =
account.170.xsi.port =

#####
#####
##                               LADP
##
#####
#####
handset.170.ldap.enable =
handset.170.ldap.name_filter=
handset.170.ldap.number_filter=
handset.170.ldap.host=
handset.170.ldap.port=
handset.170.ldap.base=
handset.170.ldap.user=
handset.170.ldap.password=
handset.170.ldap.max_hits=
handset.170.ldap.name_attr=
handset.170.ldap.numb_attr=
handset.170.ldap.display_name=
handset.170.ldap.version=
handset.170.ldap.call_in_lookup=
handset.170.ldap.ldap_sort=
handset.170.ldap.tls_mode=
handset.170.ldap.call_out_lookup=
handset.170.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account171 Settings
##
#####
#####
```

```

account.171.enable=%BWLIN-BINARY-171%
account.171.label=%BWEXTENSION-171%
account.171.display_name=%BWCLID-171%
account.171.auth_name=%BWAUTHUSER-171%
account.171.user_name=%BWLINPORT-171%
account.171.password=%BWAUTHPASSWORD-171%

#W80B ADD
account.171.sip_server.template =
account.171.media_transmit.enable =

account.171.alarm.template =
account.171.alarm.server =
account.171.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.171.sip_server.1.failback_mode =
account.171.sip_server.1.failback_timeout =
account.171.sip_server.1.register_on_enable =
account.171.sip_server.1.failback_subscribe.enable =
account.171.sip_server.1.invite_retry_counts =
account.171.sip_server.1.only_signal_with_registered =

account.171.sip_server.2.failback_mode =
account.171.sip_server.2.failback_timeout =
account.171.sip_server.2.register_on_enable =
account.171.sip_server.2.failback_subscribe.enable =
account.171.sip_server.2.invite_retry_counts =
account.171.sip_server.2.only_signal_with_registered =

account.171.naptr_build =
account.171.fallback.redundancy_type =
account.171.fallback.timeout =

account.171.dns_cache_type =
account.171.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.171.anonymous_call =
account.171.reject_anonymous_call =
account.171.send_anonymous_code =
account.171.anonymous_call_oncode =
account.171.anonymous_call_offcode =
account.171.send_anonymous_rejection_code =
account.171.anonymous_reject_oncode =
account.171.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.171.codec.g722.enable =
account.171.codec.g722.priority =

account.171.codec.g729.enable =
account.171.codec.g729.priority =

account.171.codec.g726_16.enable =
account.171.codec.g726_16.priority =

account.171.codec.g726_24.enable =
account.171.codec.g726_24.priority =

account.171.codec.g726_32.enable =
account.171.codec.g726_32.priority =

account.171.codec.g726_40.enable =
account.171.codec.g726_40.priority =

account.171.codec.ilbc.enable =
account.171.codec.ilbc.priority =

account.171.codec.pcmu.enable =
account.171.codec.pcmu.priority =

account.171.codec.pcma.enable =
account.171.codec.pcma.priority =

account.171.codec.opus.enable =
account.171.codec.opus.priority =

#####
#####
##                                NAT Settings
##
#####
#####

account.171.nat.nat_traversal =
account.171.nat.udp_update_enable =
account.171.nat.udp_update_time =
account.171.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.171.blf.subscribe_period =
account.171.dtmf.type =
account.171.dtmf.dtmf_payload =
account.171.dtmf.info_type =
account.171.100rel_enable =
account.171.subscribe_register =
account.171.subscribe_mwi =
account.171.subscribe_mwi_expires =
account.171.subscribe_mwi_to_vm =
voice_mail.number.171 = %BWVOICE-PORTAL-NUMBER-171%
account.171.display_mwi.enable =
account.171.cid_source =
```

```

account.171.cid_source_privacy =
account.171.cid_source_ppi =
account.171.session_timer.enable =
account.171.session_timer.expires =
account.171.session_timer.refresher =
account.171.enable_user_equal_phone =
account.171.srtp_encryption =
account.171.ptime =
account.171.shared_line = %BWSHAREDLINE-BINARY-171%
account.171.register_mac =
account.171.register_line =
account.171.reg_fail_retry_interval =
account.171.reg_failed_retry_min_time =
account.171.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.171.conf_type =
account.171.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-171%

account.171.sip_server_type =
account.171.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.171.register_expires_overlap =
account.171.subscribe_expires_overlap =
account.171.auto_dial_enable =
account.171.auto_dial_num =
account.171.cp_source =
account.171.transfer_refer_to_contact_header.enable =
#V80 Add
account.171.custom_ua =
account.171.callpark_enable =
account.171.check_cseq.enable =
account.171.check_to_tag.enable =
account.171.hold_use_inactive =
account.171.line_seize.expires =
account.171.update_ack_while_dialing =
account.171.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.171.always_fwd.enable =
account.171.always_fwd.target =
account.171.always_fwd.off_code =
account.171.always_fwd.on_code =
account.171.busy_fwd.enable =

```

```

account.171.busy_fwd.target =
account.171.busy_fwd.off_code =
account.171.busy_fwd.on_code =
account.171.timeout_fwd.enable =
account.171.timeout_fwd.target =
account.171.timeout_fwd.timeout =
account.171.timeout_fwd.off_code =
account.171.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.171.dnd.enable =
account.171.dnd.on_code =
account.171.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.171.reg.enable =
handset.171.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.171.xsi.user =%BWLOGIN-ID-171%
account.171.xsi.password =%XSIPASSWORD-171%
account.171.xsi.host =%XSP_ADDRESS%
account.171.xsi.server_type =
account.171.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.171.ldap.enable =
handset.171.ldap.name_filter=
handset.171.ldap.number_filter=
handset.171.ldap.host=
handset.171.ldap.port=
handset.171.ldap.base=
handset.171.ldap.user=
handset.171.ldap.password=
handset.171.ldap.max_hits=
handset.171.ldap.name_attr=
handset.171.ldap.numb_attr=
handset.171.ldap.display_name=
handset.171.ldap.version=
handset.171.ldap.call_in_lookup=

```

```
handset.171.ldap.ldap_sort=
handset.171.ldap.tls_mode=
handset.171.ldap.call_out_lookup=
handset.171.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account172 Settings
##
#####
#####

account.172.enable=%BWLIN-BINARY-172%
account.172.label=%BWEXTENSION-172%
account.172.display_name=%BWCLID-172%
account.172.auth_name=%BWAUTHUSER-172%
account.172.user_name=%BWLINPORT-172%
account.172.password=%BWAUTHPASSWORD-172%

#W80B ADD
account.172.sip_server.template =
account.172.media_transmit.enable =

account.172.alarm.template =
account.172.alarm.server =
account.172.alarm.number =

#####
#####
##                               Failback
##
#####
#####

account.172.sip_server.1.failback_mode =
account.172.sip_server.1.failback_timeout =
account.172.sip_server.1.register_on_enable =
account.172.sip_server.1.failback_subscribe.enable =
account.172.sip_server.1.invite_retry_counts =
account.172.sip_server.1.only_signal_with_registered =

account.172.sip_server.2.failback_mode =
account.172.sip_server.2.failback_timeout =
account.172.sip_server.2.register_on_enable =
account.172.sip_server.2.failback_subscribe.enable =
account.172.sip_server.2.invite_retry_counts =
account.172.sip_server.2.only_signal_with_registered =

account.172.naptr_build =
account.172.fallback.redundancy_type =
account.172.fallback.timeout =

account.172.dns_cache_type =
account.172.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
```

```

account.172.anonymous_call =
account.172.reject_anonymous_call =
account.172.send_anonymous_code =
account.172.anonymous_call_oncode =
account.172.anonymous_call_offcode =
account.172.send_anonymous_rejection_code =
account.172.anonymous_reject_oncode =
account.172.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.172.codec.g722.enable =
account.172.codec.g722.priority =

account.172.codec.g729.enable =
account.172.codec.g729.priority =

account.172.codec.g726_16.enable =
account.172.codec.g726_16.priority =

account.172.codec.g726_24.enable =
account.172.codec.g726_24.priority =

account.172.codec.g726_32.enable =
account.172.codec.g726_32.priority =

account.172.codec.g726_40.enable =
account.172.codec.g726_40.priority =

account.172.codec.ilbc.enable =
account.172.codec.ilbc.priority =

account.172.codec.pcmu.enable =
account.172.codec.pcmu.priority =

account.172.codec.pcma.enable =
account.172.codec.pcma.priority =

account.172.codec.opus.enable =
account.172.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
##
#####
#####

account.172.nat.nat_traversal =
account.172.nat.udp_update_enable =
account.172.nat.udp_update_time =
account.172.nat.rport =

#####
#####
##                                     Register Advanced
##
##

```



```
#####
#####

account.172.blf.subscribe_period =
account.172.dtmf.type =
account.172.dtmf.dtmf_payload =
account.172.dtmf.info_type =
account.172.100rel_enable =
account.172.subscribe_register =
account.172.subscribe_mwi =
account.172.subscribe_mwi_expires =
account.172.subscribe_mwi_to_vm =
voice_mail.number.172 = %BWVOICE-PORTAL-NUMBER-172%
account.172.display_mwi.enable =
account.172.cid_source =
account.172.cid_source_privacy =
account.172.cid_source_ppi =
account.172.session_timer.enable =
account.172.session_timer.expires =
account.172.session_timer.refreshes =
account.172.enable_user_equal_phone =
account.172.srtp_encryption =
account.172.ptime =
account.172.shared_line = %BWSHAREDLINE-BINARY-172%
account.172.register_mac =
account.172.register_line =
account.172.reg_fail_retry_interval =
account.172.reg_failed_retry_min_time =
account.172.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.172.conf_type =
account.172.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-172%

account.172.sip_server_type =
account.172.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.172.register_expires_overlap =
account.172.subscribe_expires_overlap =
account.172.auto_dial_enable =
account.172.auto_dial_num =
account.172.cp_source =
account.172.transfer_refer_to_contact_header.enable =
#V80 Add
account.172.custom_ua =
account.172.callpark_enable =
account.172.check_cseq.enable =
account.172.check_to_tag.enable =
account.172.hold_use_inactive =
```

```

account.172.line_seize.expires =
account.172.update_ack_while_dialing =
account.172.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.172.always_fwd.enable =
account.172.always_fwd.target =
account.172.always_fwd.off_code =
account.172.always_fwd.on_code =
account.172.busy_fwd.enable =
account.172.busy_fwd.target =
account.172.busy_fwd.off_code =
account.172.busy_fwd.on_code =
account.172.timeout_fwd.enable =
account.172.timeout_fwd.target =
account.172.timeout_fwd.timeout =
account.172.timeout_fwd.off_code =
account.172.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.172.dnd.enable =
account.172.dnd.on_code =
account.172.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.172.reg.enable =
handset.172.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.172.xsi.user =%BWLOGIN-ID-172%
account.172.xsi.password =%XSIPASSWORD-172%
account.172.xsi.host =%XSP_ADDRESS%
account.172.xsi.server_type =
account.172.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.172.ldap.enable =
handset.172.ldap.name_filter=
handset.172.ldap.number_filter=
handset.172.ldap.host=
handset.172.ldap.port=
handset.172.ldap.base=
handset.172.ldap.user=
handset.172.ldap.password=
handset.172.ldap.max_hits=
handset.172.ldap.name_attr=
handset.172.ldap.numb_attr=
handset.172.ldap.display_name=
handset.172.ldap.version=
handset.172.ldap.call_in_lookup=
handset.172.ldap.ldap_sort=
handset.172.ldap.tls_mode=
handset.172.ldap.call_out_lookup=
handset.172.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account173 Settings
##
#####
#####

account.173.enable=%BWLIN-BINARY-173%
account.173.label=%BWEXTENSION-173%
account.173.display_name=%BWCLID-173%
account.173.auth_name=%BWAUTHUSER-173%
account.173.user_name=%BWLINPORT-173%
account.173.password=%BWAUTHPASSWORD-173%

#W80B ADD
account.173.sip_server.template =
account.173.media_transmit.enable =

account.173.alarm.template =
account.173.alarm.server =
account.173.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.173.sip_server.1.failback_mode =
account.173.sip_server.1.failback_timeout =
account.173.sip_server.1.register_on_enable =
account.173.sip_server.1.failback_subscribe.enable =
account.173.sip_server.1.invite_retry_counts =
account.173.sip_server.1.only_signal_with_registered =

account.173.sip_server.2.failback_mode =
account.173.sip_server.2.failback_timeout =
account.173.sip_server.2.register_on_enable =
account.173.sip_server.2.failback_subscribe.enable =
```

```

account.173.sip_server.2.invite_retry_counts =
account.173.sip_server.2.only_signal_with_registered =

account.173.naptr_build =
account.173.fallback.redundancy_type =
account.173.fallback.timeout =

account.173.dns_cache_type =
account.173.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.173.anonymous_call =
account.173.reject_anonymous_call =
account.173.send_anonymous_code =
account.173.anonymous_call_oncode =
account.173.anonymous_call_offcode =
account.173.send_anonymous_rejection_code =
account.173.anonymous_reject_oncode =
account.173.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.173.codec.g722.enable =
account.173.codec.g722.priority =

account.173.codec.g729.enable =
account.173.codec.g729.priority =

account.173.codec.g726_16.enable =
account.173.codec.g726_16.priority =

account.173.codec.g726_24.enable =
account.173.codec.g726_24.priority =

account.173.codec.g726_32.enable =
account.173.codec.g726_32.priority =

account.173.codec.g726_40.enable =
account.173.codec.g726_40.priority =

account.173.codec.ilbc.enable =
account.173.codec.ilbc.priority =

account.173.codec.pcmu.enable =
account.173.codec.pcmu.priority =

account.173.codec.pcma.enable =
account.173.codec.pcma.priority =

account.173.codec.opus.enable =
account.173.codec.opus.priority =

```

```
#####
#####
##                               NAT Settings
##
#####
#####

account.173.nat.nat_traversal =
account.173.nat.udp_update_enable =
account.173.nat.udp_update_time =
account.173.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.173.blf.subscribe_period =
account.173.dtmf.type =
account.173.dtmf.dtmf_payload =
account.173.dtmf.info_type =
account.173.100rel_enable =
account.173.subscribe_register =
account.173.subscribe_mwi =
account.173.subscribe_mwi_expires =
account.173.subscribe_mwi_to_vm =
voice_mail.number.173 = %BWVOICE-PORTAL-NUMBER-173%
account.173.display_mwi.enable =
account.173.cid_source =
account.173.cid_source_privacy =
account.173.cid_source_ppi =
account.173.session_timer.enable =
account.173.session_timer.expires =
account.173.session_timer.refresher =
account.173.enable_user_equal_phone =
account.173.srtp_encryption =
account.173.ptime =
account.173.shared_line = %BWSHAREDLINE-BINARY-173%
account.173.register_mac =
account.173.register_line =
account.173.reg_fail_retry_interval =
account.173.reg_failed_retry_min_time =
account.173.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.173.conf_type =
account.173.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-173%

account.173.sip_server_type =
account.173.unregister_on_reboot =

#####
#####
##                               Register Other
##
```

```
#####
#####
##DECT V81 Add

account.173.register_expires_overlap =
account.173.subscribe_expires_overlap =
account.173.auto_dial_enable =
account.173.auto_dial_num =
account.173.cp_source =
account.173.transfer_refer_to_contact_header.enable =
#V80 Add
account.173.custom_ua =
account.173.callpark_enable =
account.173.check_cseq.enable =
account.173.check_to_tag.enable =
account.173.hold_use_inactive =
account.173.line_seize.expires =
account.173.update_ack_while_dialing =
account.173.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.173.always_fwd.enable =
account.173.always_fwd.target =
account.173.always_fwd.off_code =
account.173.always_fwd.on_code =
account.173.busy_fwd.enable =
account.173.busy_fwd.target =
account.173.busy_fwd.off_code =
account.173.busy_fwd.on_code =
account.173.timeout_fwd.enable =
account.173.timeout_fwd.target =
account.173.timeout_fwd.timeout =
account.173.timeout_fwd.off_code =
account.173.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.173.dnd.enable =
account.173.dnd.on_code =
account.173.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.173.reg.enable =
handset.173.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.173.xsi.user =%BWLOGIN-ID-173%
account.173.xsi.password =%XSIPASSWORD-173%
account.173.xsi.host =%XSP_ADDRESS%
account.173.xsi.server_type =
account.173.xsi.port =

#####
#####
##          LADP
##
#####
handset.173.ldap.enable =
handset.173.ldap.name_filter=
handset.173.ldap.number_filter=
handset.173.ldap.host=
handset.173.ldap.port=
handset.173.ldap.base=
handset.173.ldap.user=
handset.173.ldap.password=
handset.173.ldap.max_hits=
handset.173.ldap.name_attr=
handset.173.ldap.numb_attr=
handset.173.ldap.display_name=
handset.173.ldap.version=
handset.173.ldap.call_in_lookup=
handset.173.ldap.ldap_sort=
handset.173.ldap.tls_mode=
handset.173.ldap.call_out_lookup=
handset.173.ldap.incoming_call_special_search.enable=

#####
#####
##          Account174 Settings
##
#####

account.174.enable=%BWLINE-BINARY-174%
account.174.label=%BWEXTENSION-174%
account.174.display_name=%BWCLID-174%
account.174.auth_name=%BWAUTHUSER-174%
account.174.user_name=%BWLINEPORT-174%
account.174.password=%BWAUTHPASSWORD-174%

#W80B ADD
account.174.sip_server.template =
account.174.media_transmit.enable =

account.174.alarm.template =
account.174.alarm.server =
account.174.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.174.sip_server.1.failback_mode =
account.174.sip_server.1.failback_timeout =
account.174.sip_server.1.register_on_enable =
account.174.sip_server.1.failback_subscribe.enable =
account.174.sip_server.1.invite_retry_counts =
account.174.sip_server.1.only_signal_with_registered =

account.174.sip_server.2.failback_mode =
account.174.sip_server.2.failback_timeout =
account.174.sip_server.2.register_on_enable =
account.174.sip_server.2.failback_subscribe.enable =
account.174.sip_server.2.invite_retry_counts =
account.174.sip_server.2.only_signal_with_registered =

account.174.naptr_build =
account.174.fallback.redundancy_type =
account.174.fallback.timeout =

account.174.dns_cache_type =
account.174.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.174.anonymous_call =
account.174.reject_anonymous_call =
account.174.send_anonymous_code =
account.174.anonymous_call_oncode =
account.174.anonymous_call_offcode =
account.174.send_anonymous_rejection_code =
account.174.anonymous_reject_oncode =
account.174.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.174.codec.g722.enable =
account.174.codec.g722.priority =

account.174.codec.g729.enable =
account.174.codec.g729.priority =

account.174.codec.g726_16.enable =
account.174.codec.g726_16.priority =

account.174.codec.g726_24.enable =
account.174.codec.g726_24.priority =

account.174.codec.g726_32.enable =
account.174.codec.g726_32.priority =
```



```

account.174.codec.g726_40.enable =
account.174.codec.g726_40.priority =

account.174.codec.ilbc.enable =
account.174.codec.ilbc.priority =

account.174.codec.pcmu.enable =
account.174.codec.pcmu.priority =

account.174.codec.pcma.enable =
account.174.codec.pcma.priority =

account.174.codec.opus.enable =
account.174.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.174.nat.nat_traversal =
account.174.nat.udp_update_enable =
account.174.nat.udp_update_time =
account.174.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.174.blf.subscribe_period =
account.174.dtmf.type =
account.174.dtmf.dtmf_payload =
account.174.dtmf.info_type =
account.174.100rel_enable =
account.174.subscribe_register =
account.174.subscribe_mwi =
account.174.subscribe_mwi_expires =
account.174.subscribe_mwi_to_vm =
voice_mail.number.174 = %BWVOICE-PORTAL-NUMBER-174%
account.174.display_mwi.enable =
account.174.cid_source =
account.174.cid_source_privacy =
account.174.cid_source_ppi =
account.174.session_timer.enable =
account.174.session_timer.expires =
account.174.session_timer.refresher =
account.174.enable_user_equal_phone =
account.174.srtp_encryption =
account.174.ptime =
account.174.shared_line = %BWSHAREDLINE-BINARY-174%
account.174.register_mac =
account.174.register_line =
account.174.reg_fail_retry_interval =
account.174.reg_failed_retry_min_time =
account.174.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.174.conf_type =
account.174.conf_uri = %BWNWORK-CONFERENCE-SIPURI-174%

account.174.sip_server_type =
account.174.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.174.register_expires_overlap =
account.174.subscribe_expires_overlap =
account.174.auto_dial_enable =
account.174.auto_dial_num =
account.174.cp_source =
account.174.transfer_refer_to_contact_header.enable =
#V80 Add
account.174.custom_ua =
account.174.callpark_enable =
account.174.check_cseq.enable =
account.174.check_to_tag.enable =
account.174.hold_use_inactive =
account.174.line_seize.expires =
account.174.update_ack_while_dialing =
account.174.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.174.always_fwd.enable =
account.174.always_fwd.target =
account.174.always_fwd.off_code =
account.174.always_fwd.on_code =
account.174.busy_fwd.enable =
account.174.busy_fwd.target =
account.174.busy_fwd.off_code =
account.174.busy_fwd.on_code =
account.174.timeout_fwd.enable =
account.174.timeout_fwd.target =
account.174.timeout_fwd.timeout =
account.174.timeout_fwd.off_code =
account.174.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```
account.174.dnd.enable =
account.174.dnd.on_code =
account.174.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.174.reg.enable =
handset.174.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.174.xsi.user =%BWLOGIN-ID-174%
account.174.xsi.password =%XSIPASSWORD-174%
account.174.xsi.host =%XSP_ADDRESS%
account.174.xsi.server_type =
account.174.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.174.ldap.enable =
handset.174.ldap.name_filter=
handset.174.ldap.number_filter=
handset.174.ldap.host=
handset.174.ldap.port=
handset.174.ldap.base=
handset.174.ldap.user=
handset.174.ldap.password=
handset.174.ldap.max_hits=
handset.174.ldap.name_attr=
handset.174.ldap.numb_attr=
handset.174.ldap.display_name=
handset.174.ldap.version=
handset.174.ldap.call_in_lookup=
handset.174.ldap.ldap_sort=
handset.174.ldap.tls_mode=
handset.174.ldap.call_out_lookup=
handset.174.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account175 Settings
##
#####
#####
```

```

account.175.enable=%BWLIN-BINARY-175%
account.175.label=%BWEXTENSION-175%
account.175.display_name=%BWCLID-175%
account.175.auth_name=%BWAUTHUSER-175%
account.175.user_name=%BWLINPORT-175%
account.175.password=%BWAUTHPASSWORD-175%

#W80B ADD
account.175.sip_server.template =
account.175.media_transmit.enable =

account.175.alarm.template =
account.175.alarm.server =
account.175.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.175.sip_server.1.failback_mode =
account.175.sip_server.1.failback_timeout =
account.175.sip_server.1.register_on_enable =
account.175.sip_server.1.failback_subscribe.enable =
account.175.sip_server.1.invite_retry_counts =
account.175.sip_server.1.only_signal_with_registered =

account.175.sip_server.2.failback_mode =
account.175.sip_server.2.failback_timeout =
account.175.sip_server.2.register_on_enable =
account.175.sip_server.2.failback_subscribe.enable =
account.175.sip_server.2.invite_retry_counts =
account.175.sip_server.2.only_signal_with_registered =

account.175.naptr_build =
account.175.fallback.redundancy_type =
account.175.fallback.timeout =

account.175.dns_cache_type =
account.175.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.175.anonymous_call =
account.175.reject_anonymous_call =
account.175.send_anonymous_code =
account.175.anonymous_call_oncode =
account.175.anonymous_call_offcode =
account.175.send_anonymous_rejection_code =
account.175.anonymous_reject_oncode =
account.175.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.175.codec.g722.enable =
account.175.codec.g722.priority =

account.175.codec.g729.enable =
account.175.codec.g729.priority =

account.175.codec.g726_16.enable =
account.175.codec.g726_16.priority =

account.175.codec.g726_24.enable =
account.175.codec.g726_24.priority =

account.175.codec.g726_32.enable =
account.175.codec.g726_32.priority =

account.175.codec.g726_40.enable =
account.175.codec.g726_40.priority =

account.175.codec.ilbc.enable =
account.175.codec.ilbc.priority =

account.175.codec.pcmu.enable =
account.175.codec.pcmu.priority =

account.175.codec.pcma.enable =
account.175.codec.pcma.priority =

account.175.codec.opus.enable =
account.175.codec.opus.priority =

#####
#####
##                                NAT Settings
##
#####
#####

account.175.nat.nat_traversal =
account.175.nat.udp_update_enable =
account.175.nat.udp_update_time =
account.175.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.175.blf.subscribe_period =
account.175.dtmf.type =
account.175.dtmf.dtmf_payload =
account.175.dtmf.info_type =
account.175.100rel_enable =
account.175.subscribe_register =
account.175.subscribe_mwi =
account.175.subscribe_mwi_expires =
account.175.subscribe_mwi_to_vm =
voice_mail.number.175 = %BWVOICE-PORTAL-NUMBER-175%
account.175.display_mwi.enable =
account.175.cid_source =
```

```

account.175.cid_source_privacy =
account.175.cid_source_ppi =
account.175.session_timer.enable =
account.175.session_timer.expires =
account.175.session_timer.refresher =
account.175.enable_user_equal_phone =
account.175.srtp_encryption =
account.175.ptime =
account.175.shared_line = %BWSHAREDLINE-BINARY-175%
account.175.register_mac =
account.175.register_line =
account.175.reg_fail_retry_interval =
account.175.reg_failed_retry_min_time =
account.175.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.175.conf_type =
account.175.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-175%

account.175.sip_server_type =
account.175.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.175.register_expires_overlap =
account.175.subscribe_expires_overlap =
account.175.auto_dial_enable =
account.175.auto_dial_num =
account.175.cp_source =
account.175.transfer_refer_to_contact_header.enable =
#V80 Add
account.175.custom_ua =
account.175.callpark_enable =
account.175.check_cseq.enable =
account.175.check_to_tag.enable =
account.175.hold_use_inactive =
account.175.line_seize.expires =
account.175.update_ack_while_dialing =
account.175.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.175.always_fwd.enable =
account.175.always_fwd.target =
account.175.always_fwd.off_code =
account.175.always_fwd.on_code =
account.175.busy_fwd.enable =

```

```
account.175.busy_fwd.target =
account.175.busy_fwd.off_code =
account.175.busy_fwd.on_code =
account.175.timeout_fwd.enable =
account.175.timeout_fwd.target =
account.175.timeout_fwd.timeout =
account.175.timeout_fwd.off_code =
account.175.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.175.dnd.enable =
account.175.dnd.on_code =
account.175.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.175.reg.enable =
handset.175.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####
account.175.xsi.user =%BWLOGIN-ID-175%
account.175.xsi.password =%XSIPASSWORD-175%
account.175.xsi.host =%XSP_ADDRESS%
account.175.xsi.server_type =
account.175.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.175.ldap.enable =
handset.175.ldap.name_filter=
handset.175.ldap.number_filter=
handset.175.ldap.host=
handset.175.ldap.port=
handset.175.ldap.base=
handset.175.ldap.user=
handset.175.ldap.password=
handset.175.ldap.max_hits=
handset.175.ldap.name_attr=
handset.175.ldap.numb_attr=
handset.175.ldap.display_name=
handset.175.ldap.version=
handset.175.ldap.call_in_lookup=
```

```

handset.175.ldap.ldap_sort=
handset.175.ldap.tls_mode=
handset.175.ldap.call_out_lookup=
handset.175.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account176 Settings
##
#####
#####

account.176.enable=%BWLIN-BINARY-176%
account.176.label=%BWEXTENSION-176%
account.176.display_name=%BWCLID-176%
account.176.auth_name=%BWAUTHUSER-176%
account.176.user_name=%BWLINPORT-176%
account.176.password=%BWAUTHPASSWORD-176%

#W80B ADD
account.176.sip_server.template =
account.176.media_transmit.enable =

account.176.alarm.template =
account.176.alarm.server =
account.176.alarm.number =

#####
#####
##                               Failback
##
#####
#####

account.176.sip_server.1.failback_mode =
account.176.sip_server.1.failback_timeout =
account.176.sip_server.1.register_on_enable =
account.176.sip_server.1.failback_subscribe.enable =
account.176.sip_server.1.invite_retry_counts =
account.176.sip_server.1.only_signal_with_registered =

account.176.sip_server.2.failback_mode =
account.176.sip_server.2.failback_timeout =
account.176.sip_server.2.register_on_enable =
account.176.sip_server.2.failback_subscribe.enable =
account.176.sip_server.2.invite_retry_counts =
account.176.sip_server.2.only_signal_with_registered =

account.176.naptr_build =
account.176.fallback.redundancy_type =
account.176.fallback.timeout =

account.176.dns_cache_type =
account.176.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####

```



```

account.176.anonymous_call =
account.176.reject_anonymous_call =
account.176.send_anonymous_code =
account.176.anonymous_call_oncode =
account.176.anonymous_call_offcode =
account.176.send_anonymous_rejection_code =
account.176.anonymous_reject_oncode =
account.176.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.176.codec.g722.enable =
account.176.codec.g722.priority =

account.176.codec.g729.enable =
account.176.codec.g729.priority =

account.176.codec.g726_16.enable =
account.176.codec.g726_16.priority =

account.176.codec.g726_24.enable =
account.176.codec.g726_24.priority =

account.176.codec.g726_32.enable =
account.176.codec.g726_32.priority =

account.176.codec.g726_40.enable =
account.176.codec.g726_40.priority =

account.176.codec.ilbc.enable =
account.176.codec.ilbc.priority =

account.176.codec.pcmu.enable =
account.176.codec.pcmu.priority =

account.176.codec.pcma.enable =
account.176.codec.pcma.priority =

account.176.codec.opus.enable =
account.176.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
##
#####
#####

account.176.nat.nat_traversal =
account.176.nat.udp_update_enable =
account.176.nat.udp_update_time =
account.176.nat.rport =

#####
#####
##                                     Register Advanced
##
##

```

```
#####
#####

account.176.blf.subscribe_period =
account.176.dtmf.type =
account.176.dtmf.dtmf_payload =
account.176.dtmf.info_type =
account.176.100rel_enable =
account.176.subscribe_register =
account.176.subscribe_mwi =
account.176.subscribe_mwi_expires =
account.176.subscribe_mwi_to_vm =
voice_mail.number.176 = %BWVOICE-PORTAL-NUMBER-176%
account.176.display_mwi.enable =
account.176.cid_source =
account.176.cid_source_privacy =
account.176.cid_source_ppi =
account.176.session_timer.enable =
account.176.session_timer.expires =
account.176.session_timer.refresher =
account.176.enable_user_equal_phone =
account.176.srtp_encryption =
account.176.ptime =
account.176.shared_line = %BWSHAREDLINE-BINARY-176%
account.176.register_mac =
account.176.register_line =
account.176.reg_fail_retry_interval =
account.176.reg_failed_retry_min_time =
account.176.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.176.conf_type =
account.176.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-176%

account.176.sip_server_type =
account.176.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.176.register_expires_overlap =
account.176.subscribe_expires_overlap =
account.176.auto_dial_enable =
account.176.auto_dial_num =
account.176.cp_source =
account.176.transfer_refer_to_contact_header.enable =
#V80 Add
account.176.custom_ua =
account.176.callpark_enable =
account.176.check_cseq.enable =
account.176.check_to_tag.enable =
account.176.hold_use_inactive =
```

```

account.176.line_seize.expires =
account.176.update_ack_while_dialing =
account.176.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.176.always_fwd.enable =
account.176.always_fwd.target =
account.176.always_fwd.off_code =
account.176.always_fwd.on_code =
account.176.busy_fwd.enable =
account.176.busy_fwd.target =
account.176.busy_fwd.off_code =
account.176.busy_fwd.on_code =
account.176.timeout_fwd.enable =
account.176.timeout_fwd.target =
account.176.timeout_fwd.timeout =
account.176.timeout_fwd.off_code =
account.176.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.176.dnd.enable =
account.176.dnd.on_code =
account.176.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.176.reg.enable =
handset.176.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.176.xsi.user =%BWLOGIN-ID-176%
account.176.xsi.password =%XSIPASSWORD-176%
account.176.xsi.host =%XSP_ADDRESS%
account.176.xsi.server_type =
account.176.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.176.ldap.enable =
handset.176.ldap.name_filter=
handset.176.ldap.number_filter=
handset.176.ldap.host=
handset.176.ldap.port=
handset.176.ldap.base=
handset.176.ldap.user=
handset.176.ldap.password=
handset.176.ldap.max_hits=
handset.176.ldap.name_attr=
handset.176.ldap.numb_attr=
handset.176.ldap.display_name=
handset.176.ldap.version=
handset.176.ldap.call_in_lookup=
handset.176.ldap.ldap_sort=
handset.176.ldap.tls_mode=
handset.176.ldap.call_out_lookup=
handset.176.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account177 Settings
##
#####
#####

account.177.enable=%BWLIN-BINARY-177%
account.177.label=%BWEXTENSION-177%
account.177.display_name=%BWCLID-177%
account.177.auth_name=%BWAUTHUSER-177%
account.177.user_name=%BWLINPORT-177%
account.177.password=%BWAUTHPASSWORD-177%

#W80B ADD
account.177.sip_server.template =
account.177.media_transmit.enable =

account.177.alarm.template =
account.177.alarm.server =
account.177.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.177.sip_server.1.failback_mode =
account.177.sip_server.1.failback_timeout =
account.177.sip_server.1.register_on_enable =
account.177.sip_server.1.failback_subscribe.enable =
account.177.sip_server.1.invite_retry_counts =
account.177.sip_server.1.only_signal_with_registered =

account.177.sip_server.2.failback_mode =
account.177.sip_server.2.failback_timeout =
account.177.sip_server.2.register_on_enable =
account.177.sip_server.2.failback_subscribe.enable =
```

```
account.177.sip_server.2.invite_retry_counts =
account.177.sip_server.2.only_signal_with_registered =

account.177.naptr_build =
account.177.fallback.redundancy_type =
account.177.fallback.timeout =

account.177.dns_cache_type =
account.177.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.177.anonymous_call =
account.177.reject_anonymous_call =
account.177.send_anonymous_code =
account.177.anonymous_call_oncode =
account.177.anonymous_call_offcode =
account.177.send_anonymous_rejection_code =
account.177.anonymous_reject_oncode =
account.177.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.177.codec.g722.enable =
account.177.codec.g722.priority =

account.177.codec.g729.enable =
account.177.codec.g729.priority =

account.177.codec.g726_16.enable =
account.177.codec.g726_16.priority =

account.177.codec.g726_24.enable =
account.177.codec.g726_24.priority =

account.177.codec.g726_32.enable =
account.177.codec.g726_32.priority =

account.177.codec.g726_40.enable =
account.177.codec.g726_40.priority =

account.177.codec.ilbc.enable =
account.177.codec.ilbc.priority =

account.177.codec.pcmu.enable =
account.177.codec.pcmu.priority =

account.177.codec.pcma.enable =
account.177.codec.pcma.priority =

account.177.codec.opus.enable =
account.177.codec.opus.priority =
```

```
#####
#####
##                               NAT Settings
##
#####
#####

account.177.nat.nat_traversal =
account.177.nat.udp_update_enable =
account.177.nat.udp_update_time =
account.177.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.177.blf.subscribe_period =
account.177.dtmf.type =
account.177.dtmf.dtmf_payload =
account.177.dtmf.info_type =
account.177.100rel_enable =
account.177.subscribe_register =
account.177.subscribe_mwi =
account.177.subscribe_mwi_expires =
account.177.subscribe_mwi_to_vm =
voice_mail.number.177 = %BWVOICE-PORTAL-NUMBER-177%
account.177.display_mwi.enable =
account.177.cid_source =
account.177.cid_source_privacy =
account.177.cid_source_ppi =
account.177.session_timer.enable =
account.177.session_timer.expires =
account.177.session_timer.refresher =
account.177.enable_user_equal_phone =
account.177.srtp_encryption =
account.177.ptime =
account.177.shared_line = %BWSHAREDLINE-BINARY-177%
account.177.register_mac =
account.177.register_line =
account.177.reg_fail_retry_interval =
account.177.reg_failed_retry_min_time =
account.177.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.177.conf_type =
account.177.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-177%

account.177.sip_server_type =
account.177.unregister_on_reboot =

#####
#####
##                               Register Other
##
```

```
#####
#####
##DECT V81 Add

account.177.register_expires_overlap =
account.177.subscribe_expires_overlap =
account.177.auto_dial_enable =
account.177.auto_dial_num =
account.177.cp_source =
account.177.transfer_refer_to_contact_header.enable =
#V80 Add
account.177.custom_ua =
account.177.callpark_enable =
account.177.check_cseq.enable =
account.177.check_to_tag.enable =
account.177.hold_use_inactive =
account.177.line_seize.expires =
account.177.update_ack_while_dialing =
account.177.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.177.always_fwd.enable =
account.177.always_fwd.target =
account.177.always_fwd.off_code =
account.177.always_fwd.on_code =
account.177.busy_fwd.enable =
account.177.busy_fwd.target =
account.177.busy_fwd.off_code =
account.177.busy_fwd.on_code =
account.177.timeout_fwd.enable =
account.177.timeout_fwd.target =
account.177.timeout_fwd.timeout =
account.177.timeout_fwd.off_code =
account.177.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.177.dnd.enable =
account.177.dnd.on_code =
account.177.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.177.reg.enable =
handset.177.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.177.xsi.user =%BWLOGIN-ID-177%
account.177.xsi.password =%XSIPASSWORD-177%
account.177.xsi.host =%XSP_ADDRESS%
account.177.xsi.server_type =
account.177.xsi.port =

#####
#####
##          LADP
##
#####
handset.177.ldap.enable =
handset.177.ldap.name_filter=
handset.177.ldap.number_filter=
handset.177.ldap.host=
handset.177.ldap.port=
handset.177.ldap.base=
handset.177.ldap.user=
handset.177.ldap.password=
handset.177.ldap.max_hits=
handset.177.ldap.name_attr=
handset.177.ldap.numb_attr=
handset.177.ldap.display_name=
handset.177.ldap.version=
handset.177.ldap.call_in_lookup=
handset.177.ldap.ldap_sort=
handset.177.ldap.tls_mode=
handset.177.ldap.call_out_lookup=
handset.177.ldap.incoming_call_special_search.enable=

#####
#####
##          Account178 Settings
##
#####

account.178.enable=%BWLINE-BINARY-178%
account.178.label=%BWEXTENSION-178%
account.178.display_name=%BWCLID-178%
account.178.auth_name=%BWAUTHUSER-178%
account.178.user_name=%BWLINEPORT-178%
account.178.password=%BWAUTHPASSWORD-178%

#W80B ADD
account.178.sip_server.template =
account.178.media_transmit.enable =

account.178.alarm.template =
account.178.alarm.server =
account.178.alarm.number =

```



```
#####
#####
##                               Failback
##
#####
#####
account.178.sip_server.1.failback_mode =
account.178.sip_server.1.failback_timeout =
account.178.sip_server.1.register_on_enable =
account.178.sip_server.1.failback_subscribe.enable =
account.178.sip_server.1.invite_retry_counts =
account.178.sip_server.1.only_signal_with_registered =

account.178.sip_server.2.failback_mode =
account.178.sip_server.2.failback_timeout =
account.178.sip_server.2.register_on_enable =
account.178.sip_server.2.failback_subscribe.enable =
account.178.sip_server.2.invite_retry_counts =
account.178.sip_server.2.only_signal_with_registered =

account.178.naptr_build =
account.178.fallback.redundancy_type =
account.178.fallback.timeout =

account.178.dns_cache_type =
account.178.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.178.anonymous_call =
account.178.reject_anonymous_call =
account.178.send_anonymous_code =
account.178.anonymous_call_oncode =
account.178.anonymous_call_offcode =
account.178.send_anonymous_rejection_code =
account.178.anonymous_reject_oncode =
account.178.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.178.codec.g722.enable =
account.178.codec.g722.priority =

account.178.codec.g729.enable =
account.178.codec.g729.priority =

account.178.codec.g726_16.enable =
account.178.codec.g726_16.priority =

account.178.codec.g726_24.enable =
account.178.codec.g726_24.priority =

account.178.codec.g726_32.enable =
account.178.codec.g726_32.priority =
```

```

account.178.codec.g726_40.enable =
account.178.codec.g726_40.priority =

account.178.codec.ilbc.enable =
account.178.codec.ilbc.priority =

account.178.codec.pcmu.enable =
account.178.codec.pcmu.priority =

account.178.codec.pcma.enable =
account.178.codec.pcma.priority =

account.178.codec.opus.enable =
account.178.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.178.nat.nat_traversal =
account.178.nat.udp_update_enable =
account.178.nat.udp_update_time =
account.178.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.178.blf.subscribe_period =
account.178.dtmf.type =
account.178.dtmf.dtmf_payload =
account.178.dtmf.info_type =
account.178.100rel_enable =
account.178.subscribe_register =
account.178.subscribe_mwi =
account.178.subscribe_mwi_expires =
account.178.subscribe_mwi_to_vm =
voice_mail.number.178 = %BWVOICE-PORTAL-NUMBER-178%
account.178.display_mwi.enable =
account.178.cid_source =
account.178.cid_source_privacy =
account.178.cid_source_ppi =
account.178.session_timer.enable =
account.178.session_timer.expires =
account.178.session_timer.refresher =
account.178.enable_user_equal_phone =
account.178.srtp_encryption =
account.178.ptime =
account.178.shared_line = %BWSHAREDLINE-BINARY-178%
account.178.register_mac =
account.178.register_line =
account.178.reg_fail_retry_interval =
account.178.reg_failed_retry_min_time =
account.178.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.178.conf_type =
account.178.conf_uri = %BWNWORK-CONFERENCE-SIPURI-178%

account.178.sip_server_type =
account.178.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.178.register_expires_overlap =
account.178.subscribe_expires_overlap =
account.178.auto_dial_enable =
account.178.auto_dial_num =
account.178.cp_source =
account.178.transfer_refer_to_contact_header.enable =
#V80 Add
account.178.custom_ua =
account.178.callpark_enable =
account.178.check_cseq.enable =
account.178.check_to_tag.enable =
account.178.hold_use_inactive =
account.178.line_seize.expires =
account.178.update_ack_while_dialing =
account.178.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.178.always_fwd.enable =
account.178.always_fwd.target =
account.178.always_fwd.off_code =
account.178.always_fwd.on_code =
account.178.busy_fwd.enable =
account.178.busy_fwd.target =
account.178.busy_fwd.off_code =
account.178.busy_fwd.on_code =
account.178.timeout_fwd.enable =
account.178.timeout_fwd.target =
account.178.timeout_fwd.timeout =
account.178.timeout_fwd.off_code =
account.178.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```
account.178.dnd.enable =
account.178.dnd.on_code =
account.178.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.178.reg.enable =
handset.178.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.178.xsi.user =%BWLOGIN-ID-178%
account.178.xsi.password =%XSIPASSWORD-178%
account.178.xsi.host =%XSP_ADDRESS%
account.178.xsi.server_type =
account.178.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.178.ldap.enable =
handset.178.ldap.name_filter=
handset.178.ldap.number_filter=
handset.178.ldap.host=
handset.178.ldap.port=
handset.178.ldap.base=
handset.178.ldap.user=
handset.178.ldap.password=
handset.178.ldap.max_hits=
handset.178.ldap.name_attr=
handset.178.ldap.numb_attr=
handset.178.ldap.display_name=
handset.178.ldap.version=
handset.178.ldap.call_in_lookup=
handset.178.ldap.ldap_sort=
handset.178.ldap.tls_mode=
handset.178.ldap.call_out_lookup=
handset.178.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account179 Settings
##
#####
#####
```

```

account.179.enable=%BWLIN-BINARY-179%
account.179.label=%BWEXTENSION-179%
account.179.display_name=%BWCLID-179%
account.179.auth_name=%BWAUTHUSER-179%
account.179.user_name=%BWLINPORT-179%
account.179.password=%BWAUTHPASSWORD-179%

#W80B ADD
account.179.sip_server.template =
account.179.media_transmit.enable =

account.179.alarm.template =
account.179.alarm.server =
account.179.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.179.sip_server.1.failback_mode =
account.179.sip_server.1.failback_timeout =
account.179.sip_server.1.register_on_enable =
account.179.sip_server.1.failback_subscribe.enable =
account.179.sip_server.1.invite_retry_counts =
account.179.sip_server.1.only_signal_with_registered =

account.179.sip_server.2.failback_mode =
account.179.sip_server.2.failback_timeout =
account.179.sip_server.2.register_on_enable =
account.179.sip_server.2.failback_subscribe.enable =
account.179.sip_server.2.invite_retry_counts =
account.179.sip_server.2.only_signal_with_registered =

account.179.naptr_build =
account.179.fallback.redundancy_type =
account.179.fallback.timeout =

account.179.dns_cache_type =
account.179.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.179.anonymous_call =
account.179.reject_anonymous_call =
account.179.send_anonymous_code =
account.179.anonymous_call_oncode =
account.179.anonymous_call_offcode =
account.179.send_anonymous_rejection_code =
account.179.anonymous_reject_oncode =
account.179.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.179.codec.g722.enable =
account.179.codec.g722.priority =

account.179.codec.g729.enable =
account.179.codec.g729.priority =

account.179.codec.g726_16.enable =
account.179.codec.g726_16.priority =

account.179.codec.g726_24.enable =
account.179.codec.g726_24.priority =

account.179.codec.g726_32.enable =
account.179.codec.g726_32.priority =

account.179.codec.g726_40.enable =
account.179.codec.g726_40.priority =

account.179.codec.ilbc.enable =
account.179.codec.ilbc.priority =

account.179.codec.pcmu.enable =
account.179.codec.pcmu.priority =

account.179.codec.pcma.enable =
account.179.codec.pcma.priority =

account.179.codec.opus.enable =
account.179.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.179.nat.nat_traversal =
account.179.nat.udp_update_enable =
account.179.nat.udp_update_time =
account.179.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.179.blf.subscribe_period =
account.179.dtmf.type =
account.179.dtmf.dtmf_payload =
account.179.dtmf.info_type =
account.179.100rel_enable =
account.179.subscribe_register =
account.179.subscribe_mwi =
account.179.subscribe_mwi_expires =
account.179.subscribe_mwi_to_vm =
voice_mail.number.179 = %BWVOICE-PORTAL-NUMBER-179%
account.179.display_mwi.enable =
account.179.cid_source =
```

```

account.179.cid_source_privacy =
account.179.cid_source_ppi =
account.179.session_timer.enable =
account.179.session_timer.expires =
account.179.session_timer.refresher =
account.179.enable_user_equal_phone =
account.179.srtp_encryption =
account.179.ptime =
account.179.shared_line = %BWSHAREDLINE-BINARY-179%
account.179.register_mac =
account.179.register_line =
account.179.reg_fail_retry_interval =
account.179.reg_failed_retry_min_time =
account.179.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.179.conf_type =
account.179.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-179%

account.179.sip_server_type =
account.179.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.179.register_expires_overlap =
account.179.subscribe_expires_overlap =
account.179.auto_dial_enable =
account.179.auto_dial_num =
account.179.cp_source =
account.179.transfer_refer_to_contact_header.enable =
#V80 Add
account.179.custom_ua =
account.179.callpark_enable =
account.179.check_cseq.enable =
account.179.check_to_tag.enable =
account.179.hold_use_inactive =
account.179.line_seize.expires =
account.179.update_ack_while_dialing =
account.179.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.179.always_fwd.enable =
account.179.always_fwd.target =
account.179.always_fwd.off_code =
account.179.always_fwd.on_code =
account.179.busy_fwd.enable =

```

```
account.179.busy_fwd.target =
account.179.busy_fwd.off_code =
account.179.busy_fwd.on_code =
account.179.timeout_fwd.enable =
account.179.timeout_fwd.target =
account.179.timeout_fwd.timeout =
account.179.timeout_fwd.off_code =
account.179.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.179.dnd.enable =
account.179.dnd.on_code =
account.179.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.179.reg.enable =
handset.179.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####
account.179.xsi.user =%BWLOGIN-ID-179%
account.179.xsi.password =%XSIPASSWORD-179%
account.179.xsi.host =%XSP_ADDRESS%
account.179.xsi.server_type =
account.179.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.179.ldap.enable =
handset.179.ldap.name_filter=
handset.179.ldap.number_filter=
handset.179.ldap.host=
handset.179.ldap.port=
handset.179.ldap.base=
handset.179.ldap.user=
handset.179.ldap.password=
handset.179.ldap.max_hits=
handset.179.ldap.name_attr=
handset.179.ldap.numb_attr=
handset.179.ldap.display_name=
handset.179.ldap.version=
handset.179.ldap.call_in_lookup=
```



```

handset.179.ldap.ldap_sort=
handset.179.ldap.tls_mode=
handset.179.ldap.call_out_lookup=
handset.179.ldap.incoming_call_special_search.enable=

#####
#####
##
##                               Account180 Settings
##
#####
#####

account.180.enable=%BWLIN-BINARY-180%
account.180.label=%BWEXTENSION-180%
account.180.display_name=%BWCLID-180%
account.180.auth_name=%BWAUTHUSER-180%
account.180.user_name=%BWLINPORT-180%
account.180.password=%BWAUTHPASSWORD-180%

#W80B ADD
account.180.sip_server.template =
account.180.media_transmit.enable =

account.180.alarm.template =
account.180.alarm.server =
account.180.alarm.number =

#####
#####
##
##                               Failback
##
#####
#####

account.180.sip_server.1.failback_mode =
account.180.sip_server.1.failback_timeout =
account.180.sip_server.1.register_on_enable =
account.180.sip_server.1.failback_subscribe.enable =
account.180.sip_server.1.invite_retry_counts =
account.180.sip_server.1.only_signal_with_registered =

account.180.sip_server.2.failback_mode =
account.180.sip_server.2.failback_timeout =
account.180.sip_server.2.register_on_enable =
account.180.sip_server.2.failback_subscribe.enable =
account.180.sip_server.2.invite_retry_counts =
account.180.sip_server.2.only_signal_with_registered =

account.180.naptr_build =
account.180.fallback.redundancy_type =
account.180.fallback.timeout =

account.180.dns_cache_type =
account.180.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##
##                               Basic
##
#####
#####

```

```

account.180.anonymous_call =
account.180.reject_anonymous_call =
account.180.send_anonymous_code =
account.180.anonymous_call_oncode =
account.180.anonymous_call_offcode =
account.180.send_anonymous_rejection_code =
account.180.anonymous_reject_oncode =
account.180.anonymous_reject_offcode =

#####
#####
##
##                                Codec
##
#####
#####
account.180.codec.g722.enable =
account.180.codec.g722.priority =

account.180.codec.g729.enable =
account.180.codec.g729.priority =

account.180.codec.g726_16.enable =
account.180.codec.g726_16.priority =

account.180.codec.g726_24.enable =
account.180.codec.g726_24.priority =

account.180.codec.g726_32.enable =
account.180.codec.g726_32.priority =

account.180.codec.g726_40.enable =
account.180.codec.g726_40.priority =

account.180.codec.ilbc.enable =
account.180.codec.ilbc.priority =

account.180.codec.pcmu.enable =
account.180.codec.pcmu.priority =

account.180.codec.pcma.enable =
account.180.codec.pcma.priority =

account.180.codec.opus.enable =
account.180.codec.opus.priority =

#####
#####
##
##                                NAT Settings
##
#####
#####

account.180.nat.nat_traversal =
account.180.nat.udp_update_enable =
account.180.nat.udp_update_time =
account.180.nat.rport =

#####
#####
##
##                                Register Advanced
##

```

```
#####
#####

account.180.blf.subscribe_period =
account.180.dtmf.type =
account.180.dtmf.dtmf_payload =
account.180.dtmf.info_type =
account.180.100rel_enable =
account.180.subscribe_register =
account.180.subscribe_mwi =
account.180.subscribe_mwi_expires =
account.180.subscribe_mwi_to_vm =
voice_mail.number.180 = %BWVOICE-PORTAL-NUMBER-180%
account.180.display_mwi.enable =
account.180.cid_source =
account.180.cid_source_privacy =
account.180.cid_source_ppi =
account.180.session_timer.enable =
account.180.session_timer.expires =
account.180.session_timer.refreshes =
account.180.enable_user_equal_phone =
account.180.srtp_encryption =
account.180.ptime =
account.180.shared_line = %BWSHAREDLINE-BINARY-180%
account.180.register_mac =
account.180.register_line =
account.180.reg_fail_retry_interval =
account.180.reg_failed_retry_min_time =
account.180.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.180.conf_type =
account.180.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-180%

account.180.sip_server_type =
account.180.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.180.register_expires_overlap =
account.180.subscribe_expires_overlap =
account.180.auto_dial_enable =
account.180.auto_dial_num =
account.180.cp_source =
account.180.transfer_refer_to_contact_header.enable =
#V80 Add
account.180.custom_ua =
account.180.callpark_enable =
account.180.check_cseq.enable =
account.180.check_to_tag.enable =
account.180.hold_use_inactive =
```

```

account.180.line_seize.expires =
account.180.update_ack_while_dialing =
account.180.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.180.always_fwd.enable =
account.180.always_fwd.target =
account.180.always_fwd.off_code =
account.180.always_fwd.on_code =
account.180.busy_fwd.enable =
account.180.busy_fwd.target =
account.180.busy_fwd.off_code =
account.180.busy_fwd.on_code =
account.180.timeout_fwd.enable =
account.180.timeout_fwd.target =
account.180.timeout_fwd.timeout =
account.180.timeout_fwd.off_code =
account.180.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.180.dnd.enable =
account.180.dnd.on_code =
account.180.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.180.reg.enable =
handset.180.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.180.xsi.user =%BWLOGIN-ID-180%
account.180.xsi.password =%XSIPASSWORD-180%
account.180.xsi.host =%XSP_ADDRESS%
account.180.xsi.server_type =
account.180.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.180.ldap.enable =
handset.180.ldap.name_filter=
handset.180.ldap.number_filter=
handset.180.ldap.host=
handset.180.ldap.port=
handset.180.ldap.base=
handset.180.ldap.user=
handset.180.ldap.password=
handset.180.ldap.max_hits=
handset.180.ldap.name_attr=
handset.180.ldap.numb_attr=
handset.180.ldap.display_name=
handset.180.ldap.version=
handset.180.ldap.call_in_lookup=
handset.180.ldap.ldap_sort=
handset.180.ldap.tls_mode=
handset.180.ldap.call_out_lookup=
handset.180.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account181 Settings
##
#####
#####

account.181.enable=%BWLIN-BINARY-181%
account.181.label=%BWEXTENSION-181%
account.181.display_name=%BWCLID-181%
account.181.auth_name=%BWAUTHUSER-181%
account.181.user_name=%BWLINPORT-181%
account.181.password=%BWAUTHPASSWORD-181%

#W80B ADD
account.181.sip_server.template =
account.181.media_transmit.enable =

account.181.alarm.template =
account.181.alarm.server =
account.181.alarm.number =

#####
#####
##                                     Failback
##
#####
#####
account.181.sip_server.1.failback_mode =
account.181.sip_server.1.failback_timeout =
account.181.sip_server.1.register_on_enable =
account.181.sip_server.1.failback_subscribe.enable =
account.181.sip_server.1.invite_retry_counts =
account.181.sip_server.1.only_signal_with_registered =

account.181.sip_server.2.failback_mode =
account.181.sip_server.2.failback_timeout =
account.181.sip_server.2.register_on_enable =
account.181.sip_server.2.failback_subscribe.enable =
```

```
account.181.sip_server.2.invite_retry_counts =
account.181.sip_server.2.only_signal_with_registered =

account.181.naptr_build =
account.181.fallback.redundancy_type =
account.181.fallback.timeout =

account.181.dns_cache_type =
account.181.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.181.anonymous_call =
account.181.reject_anonymous_call =
account.181.send_anonymous_code =
account.181.anonymous_call_oncode =
account.181.anonymous_call_offcode =
account.181.send_anonymous_rejection_code =
account.181.anonymous_reject_oncode =
account.181.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.181.codec.g722.enable =
account.181.codec.g722.priority =

account.181.codec.g729.enable =
account.181.codec.g729.priority =

account.181.codec.g726_16.enable =
account.181.codec.g726_16.priority =

account.181.codec.g726_24.enable =
account.181.codec.g726_24.priority =

account.181.codec.g726_32.enable =
account.181.codec.g726_32.priority =

account.181.codec.g726_40.enable =
account.181.codec.g726_40.priority =

account.181.codec.ilbc.enable =
account.181.codec.ilbc.priority =

account.181.codec.pcmu.enable =
account.181.codec.pcmu.priority =

account.181.codec.pcma.enable =
account.181.codec.pcma.priority =

account.181.codec.opus.enable =
account.181.codec.opus.priority =
```

```
#####
#####
##                               NAT Settings
##
#####
#####

account.181.nat.nat_traversal =
account.181.nat.udp_update_enable =
account.181.nat.udp_update_time =
account.181.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.181.blf.subscribe_period =
account.181.dtmf.type =
account.181.dtmf.dtmf_payload =
account.181.dtmf.info_type =
account.181.100rel_enable =
account.181.subscribe_register =
account.181.subscribe_mwi =
account.181.subscribe_mwi_expires =
account.181.subscribe_mwi_to_vm =
voice_mail.number.181 = %BWVOICE-PORTAL-NUMBER-181%
account.181.display_mwi.enable =
account.181.cid_source =
account.181.cid_source_privacy =
account.181.cid_source_ppi =
account.181.session_timer.enable =
account.181.session_timer.expires =
account.181.session_timer.refresher =
account.181.enable_user_equal_phone =
account.181.srtp_encryption =
account.181.ptime =
account.181.shared_line = %BWSHAREDLINE-BINARY-181%
account.181.register_mac =
account.181.register_line =
account.181.reg_fail_retry_interval =
account.181.reg_failed_retry_min_time =
account.181.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.181.conf_type =
account.181.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-181%

account.181.sip_server_type =
account.181.unregister_on_reboot =

#####
#####
##                               Register Other
##
```

```
#####
#####
##DECT V81 Add

account.181.register_expires_overlap =
account.181.subscribe_expires_overlap =
account.181.auto_dial_enable =
account.181.auto_dial_num =
account.181.cp_source =
account.181.transfer_refer_to_contact_header.enable =
#V80 Add
account.181.custom_ua =
account.181.callpark_enable =
account.181.check_cseq.enable =
account.181.check_to_tag.enable =
account.181.hold_use_inactive =
account.181.line_seize.expires =
account.181.update_ack_while_dialing =
account.181.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.181.always_fwd.enable =
account.181.always_fwd.target =
account.181.always_fwd.off_code =
account.181.always_fwd.on_code =
account.181.busy_fwd.enable =
account.181.busy_fwd.target =
account.181.busy_fwd.off_code =
account.181.busy_fwd.on_code =
account.181.timeout_fwd.enable =
account.181.timeout_fwd.target =
account.181.timeout_fwd.timeout =
account.181.timeout_fwd.off_code =
account.181.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.181.dnd.enable =
account.181.dnd.on_code =
account.181.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.181.reg.enable =
handset.181.ipui =

#####
#####
```



```

##          Broadsoft XSI
##
#####

account.181.xsi.user =%BWLOGIN-ID-181%
account.181.xsi.password =%XSIPASSWORD-181%
account.181.xsi.host =%XSP_ADDRESS%
account.181.xsi.server_type =
account.181.xsi.port =

#####
#####
##          LADP
##
#####
handset.181.ldap.enable =
handset.181.ldap.name_filter=
handset.181.ldap.number_filter=
handset.181.ldap.host=
handset.181.ldap.port=
handset.181.ldap.base=
handset.181.ldap.user=
handset.181.ldap.password=
handset.181.ldap.max_hits=
handset.181.ldap.name_attr=
handset.181.ldap.numb_attr=
handset.181.ldap.display_name=
handset.181.ldap.version=
handset.181.ldap.call_in_lookup=
handset.181.ldap.ldap_sort=
handset.181.ldap.tls_mode=
handset.181.ldap.call_out_lookup=
handset.181.ldap.incoming_call_special_search.enable=

#####
#####
##          Account182 Settings
##
#####

account.182.enable=%BWLINE-BINARY-182%
account.182.label=%BWEXTENSION-182%
account.182.display_name=%BWCLID-182%
account.182.auth_name=%BWAUTHUSER-182%
account.182.user_name=%BWLINEPORT-182%
account.182.password=%BWAUTHPASSWORD-182%

#W80B ADD
account.182.sip_server.template =
account.182.media_transmit.enable =

account.182.alarm.template =
account.182.alarm.server =
account.182.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.182.sip_server.1.failback_mode =
account.182.sip_server.1.failback_timeout =
account.182.sip_server.1.register_on_enable =
account.182.sip_server.1.failback_subscribe.enable =
account.182.sip_server.1.invite_retry_counts =
account.182.sip_server.1.only_signal_with_registered =

account.182.sip_server.2.failback_mode =
account.182.sip_server.2.failback_timeout =
account.182.sip_server.2.register_on_enable =
account.182.sip_server.2.failback_subscribe.enable =
account.182.sip_server.2.invite_retry_counts =
account.182.sip_server.2.only_signal_with_registered =

account.182.naptr_build =
account.182.fallback.redundancy_type =
account.182.fallback.timeout =

account.182.dns_cache_type =
account.182.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.182.anonymous_call =
account.182.reject_anonymous_call =
account.182.send_anonymous_code =
account.182.anonymous_call_oncode =
account.182.anonymous_call_offcode =
account.182.send_anonymous_rejection_code =
account.182.anonymous_reject_oncode =
account.182.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.182.codec.g722.enable =
account.182.codec.g722.priority =

account.182.codec.g729.enable =
account.182.codec.g729.priority =

account.182.codec.g726_16.enable =
account.182.codec.g726_16.priority =

account.182.codec.g726_24.enable =
account.182.codec.g726_24.priority =

account.182.codec.g726_32.enable =
account.182.codec.g726_32.priority =
```

```

account.182.codec.g726_40.enable =
account.182.codec.g726_40.priority =

account.182.codec.ilbc.enable =
account.182.codec.ilbc.priority =

account.182.codec.pcmu.enable =
account.182.codec.pcmu.priority =

account.182.codec.pcma.enable =
account.182.codec.pcma.priority =

account.182.codec.opus.enable =
account.182.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.182.nat.nat_traversal =
account.182.nat.udp_update_enable =
account.182.nat.udp_update_time =
account.182.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.182.blf.subscribe_period =
account.182.dtmf.type =
account.182.dtmf.dtmf_payload =
account.182.dtmf.info_type =
account.182.100rel_enable =
account.182.subscribe_register =
account.182.subscribe_mwi =
account.182.subscribe_mwi_expires =
account.182.subscribe_mwi_to_vm =
voice_mail.number.182 = %BWVOICE-PORTAL-NUMBER-182%
account.182.display_mwi.enable =
account.182.cid_source =
account.182.cid_source_privacy =
account.182.cid_source_ppi =
account.182.session_timer.enable =
account.182.session_timer.expires =
account.182.session_timer.refresher =
account.182.enable_user_equal_phone =
account.182.srtp_encryption =
account.182.ptime =
account.182.shared_line = %BWSHAREDLINE-BINARY-182%
account.182.register_mac =
account.182.register_line =
account.182.reg_fail_retry_interval =
account.182.reg_failed_retry_min_time =
account.182.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.182.conf_type =
account.182.conf_uri = %BWNWORK-CONFERENCE-SIPURI-182%

account.182.sip_server_type =
account.182.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.182.register_expires_overlap =
account.182.subscribe_expires_overlap =
account.182.auto_dial_enable =
account.182.auto_dial_num =
account.182.cp_source =
account.182.transfer_refer_to_contact_header.enable =
#V80 Add
account.182.custom_ua =
account.182.callpark_enable =
account.182.check_cseq.enable =
account.182.check_to_tag.enable =
account.182.hold_use_inactive =
account.182.line_seize.expires =
account.182.update_ack_while_dialing =
account.182.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.182.always_fwd.enable =
account.182.always_fwd.target =
account.182.always_fwd.off_code =
account.182.always_fwd.on_code =
account.182.busy_fwd.enable =
account.182.busy_fwd.target =
account.182.busy_fwd.off_code =
account.182.busy_fwd.on_code =
account.182.timeout_fwd.enable =
account.182.timeout_fwd.target =
account.182.timeout_fwd.timeout =
account.182.timeout_fwd.off_code =
account.182.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```

account.182.dnd.enable =
account.182.dnd.on_code =
account.182.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.182.reg.enable =
handset.182.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.182.xsi.user =%BWLOGIN-ID-182%
account.182.xsi.password =%XSIPASSWORD-182%
account.182.xsi.host =%XSP_ADDRESS%
account.182.xsi.server_type =
account.182.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.182.ldap.enable =
handset.182.ldap.name_filter=
handset.182.ldap.number_filter=
handset.182.ldap.host=
handset.182.ldap.port=
handset.182.ldap.base=
handset.182.ldap.user=
handset.182.ldap.password=
handset.182.ldap.max_hits=
handset.182.ldap.name_attr=
handset.182.ldap.numb_attr=
handset.182.ldap.display_name=
handset.182.ldap.version=
handset.182.ldap.call_in_lookup=
handset.182.ldap.ldap_sort=
handset.182.ldap.tls_mode=
handset.182.ldap.call_out_lookup=
handset.182.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account183 Settings
##
#####
#####

```

```

account.183.enable=%BWLIN-BINARY-183%
account.183.label=%BWEXTENSION-183%
account.183.display_name=%BWCLID-183%
account.183.auth_name=%BWAUTHUSER-183%
account.183.user_name=%BWLINPORT-183%
account.183.password=%BWAUTHPASSWORD-183%

#W80B ADD
account.183.sip_server.template =
account.183.media_transmit.enable =

account.183.alarm.template =
account.183.alarm.server =
account.183.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.183.sip_server.1.failback_mode =
account.183.sip_server.1.failback_timeout =
account.183.sip_server.1.register_on_enable =
account.183.sip_server.1.failback_subscribe.enable =
account.183.sip_server.1.invite_retry_counts =
account.183.sip_server.1.only_signal_with_registered =

account.183.sip_server.2.failback_mode =
account.183.sip_server.2.failback_timeout =
account.183.sip_server.2.register_on_enable =
account.183.sip_server.2.failback_subscribe.enable =
account.183.sip_server.2.invite_retry_counts =
account.183.sip_server.2.only_signal_with_registered =

account.183.naptr_build =
account.183.fallback.redundancy_type =
account.183.fallback.timeout =

account.183.dns_cache_type =
account.183.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.183.anonymous_call =
account.183.reject_anonymous_call =
account.183.send_anonymous_code =
account.183.anonymous_call_oncode =
account.183.anonymous_call_offcode =
account.183.send_anonymous_rejection_code =
account.183.anonymous_reject_oncode =
account.183.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.183.codec.g722.enable =
account.183.codec.g722.priority =

account.183.codec.g729.enable =
account.183.codec.g729.priority =

account.183.codec.g726_16.enable =
account.183.codec.g726_16.priority =

account.183.codec.g726_24.enable =
account.183.codec.g726_24.priority =

account.183.codec.g726_32.enable =
account.183.codec.g726_32.priority =

account.183.codec.g726_40.enable =
account.183.codec.g726_40.priority =

account.183.codec.ilbc.enable =
account.183.codec.ilbc.priority =

account.183.codec.pcmu.enable =
account.183.codec.pcmu.priority =

account.183.codec.pcma.enable =
account.183.codec.pcma.priority =

account.183.codec.opus.enable =
account.183.codec.opus.priority =

#####
#####
##                                NAT Settings
##
#####
#####

account.183.nat.nat_traversal =
account.183.nat.udp_update_enable =
account.183.nat.udp_update_time =
account.183.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.183.blf.subscribe_period =
account.183.dtmf.type =
account.183.dtmf.dtmf_payload =
account.183.dtmf.info_type =
account.183.100rel_enable =
account.183.subscribe_register =
account.183.subscribe_mwi =
account.183.subscribe_mwi_expires =
account.183.subscribe_mwi_to_vm =
voice_mail.number.183 = %BWVOICE-PORTAL-NUMBER-183%
account.183.display_mwi.enable =
account.183.cid_source =
```

```

account.183.cid_source_privacy =
account.183.cid_source_ppi =
account.183.session_timer.enable =
account.183.session_timer.expires =
account.183.session_timer.refresher =
account.183.enable_user_equal_phone =
account.183.srtp_encryption =
account.183.ptime =
account.183.shared_line = %BWSHAREDLINE-BINARY-183%
account.183.register_mac =
account.183.register_line =
account.183.reg_fail_retry_interval =
account.183.reg_failed_retry_min_time =
account.183.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.183.conf_type =
account.183.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-183%

account.183.sip_server_type =
account.183.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.183.register_expires_overlap =
account.183.subscribe_expires_overlap =
account.183.auto_dial_enable =
account.183.auto_dial_num =
account.183.cp_source =
account.183.transfer_refer_to_contact_header.enable =
#V80 Add
account.183.custom_ua =
account.183.callpark_enable =
account.183.check_cseq.enable =
account.183.check_to_tag.enable =
account.183.hold_use_inactive =
account.183.line_seize.expires =
account.183.update_ack_while_dialing =
account.183.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.183.always_fwd.enable =
account.183.always_fwd.target =
account.183.always_fwd.off_code =
account.183.always_fwd.on_code =
account.183.busy_fwd.enable =

```



```
account.183.busy_fwd.target =
account.183.busy_fwd.off_code =
account.183.busy_fwd.on_code =
account.183.timeout_fwd.enable =
account.183.timeout_fwd.target =
account.183.timeout_fwd.timeout =
account.183.timeout_fwd.off_code =
account.183.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.183.dnd.enable =
account.183.dnd.on_code =
account.183.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.183.reg.enable =
handset.183.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####
account.183.xsi.user =%BWLOGIN-ID-183%
account.183.xsi.password =%XSIPASSWORD-183%
account.183.xsi.host =%XSP_ADDRESS%
account.183.xsi.server_type =
account.183.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.183.ldap.enable =
handset.183.ldap.name_filter=
handset.183.ldap.number_filter=
handset.183.ldap.host=
handset.183.ldap.port=
handset.183.ldap.base=
handset.183.ldap.user=
handset.183.ldap.password=
handset.183.ldap.max_hits=
handset.183.ldap.name_attr=
handset.183.ldap.numb_attr=
handset.183.ldap.display_name=
handset.183.ldap.version=
handset.183.ldap.call_in_lookup=
```

```
handset.183.ldap.ldap_sort=
handset.183.ldap.tls_mode=
handset.183.ldap.call_out_lookup=
handset.183.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account184 Settings
##
#####
#####

account.184.enable=%BWLIN-BINARY-184%
account.184.label=%BWEXTENSION-184%
account.184.display_name=%BWCLID-184%
account.184.auth_name=%BWAUTHUSER-184%
account.184.user_name=%BWLINPORT-184%
account.184.password=%BWAUTHPASSWORD-184%

#W80B ADD
account.184.sip_server.template =
account.184.media_transmit.enable =

account.184.alarm.template =
account.184.alarm.server =
account.184.alarm.number =

#####
#####
##                               Failback
##
#####
#####

account.184.sip_server.1.failback_mode =
account.184.sip_server.1.failback_timeout =
account.184.sip_server.1.register_on_enable =
account.184.sip_server.1.failback_subscribe.enable =
account.184.sip_server.1.invite_retry_counts =
account.184.sip_server.1.only_signal_with_registered =

account.184.sip_server.2.failback_mode =
account.184.sip_server.2.failback_timeout =
account.184.sip_server.2.register_on_enable =
account.184.sip_server.2.failback_subscribe.enable =
account.184.sip_server.2.invite_retry_counts =
account.184.sip_server.2.only_signal_with_registered =

account.184.naptr_build =
account.184.fallback.redundancy_type =
account.184.fallback.timeout =

account.184.dns_cache_type =
account.184.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
```

```
account.184.anonymous_call =
account.184.reject_anonymous_call =
account.184.send_anonymous_code =
account.184.anonymous_call_oncode =
account.184.anonymous_call_offcode =
account.184.send_anonymous_rejection_code =
account.184.anonymous_reject_oncode =
account.184.anonymous_reject_offcode =

#####
#####
##
##                               Codec
##
#####
#####
account.184.codec.g722.enable =
account.184.codec.g722.priority =

account.184.codec.g729.enable =
account.184.codec.g729.priority =

account.184.codec.g726_16.enable =
account.184.codec.g726_16.priority =

account.184.codec.g726_24.enable =
account.184.codec.g726_24.priority =

account.184.codec.g726_32.enable =
account.184.codec.g726_32.priority =

account.184.codec.g726_40.enable =
account.184.codec.g726_40.priority =

account.184.codec.ilbc.enable =
account.184.codec.ilbc.priority =

account.184.codec.pcmu.enable =
account.184.codec.pcmu.priority =

account.184.codec.pcma.enable =
account.184.codec.pcma.priority =

account.184.codec.opus.enable =
account.184.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.184.nat.nat_traversal =
account.184.nat.udp_update_enable =
account.184.nat.udp_update_time =
account.184.nat.rport =

#####
#####
##
##                               Register Advanced
##
```

```
#####
#####

account.184.blf.subscribe_period =
account.184.dtmf.type =
account.184.dtmf.dtmf_payload =
account.184.dtmf.info_type =
account.184.100rel_enable =
account.184.subscribe_register =
account.184.subscribe_mwi =
account.184.subscribe_mwi_expires =
account.184.subscribe_mwi_to_vm =
voice_mail.number.184 = %BWVOICE-PORTAL-NUMBER-184%
account.184.display_mwi.enable =
account.184.cid_source =
account.184.cid_source_privacy =
account.184.cid_source_ppi =
account.184.session_timer.enable =
account.184.session_timer.expires =
account.184.session_timer.refresher =
account.184.enable_user_equal_phone =
account.184.srtp_encryption =
account.184.ptime =
account.184.shared_line = %BWSHAREDLINE-BINARY-184%
account.184.register_mac =
account.184.register_line =
account.184.reg_fail_retry_interval =
account.184.reg_failed_retry_min_time =
account.184.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.184.conf_type =
account.184.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-184%

account.184.sip_server_type =
account.184.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.184.register_expires_overlap =
account.184.subscribe_expires_overlap =
account.184.auto_dial_enable =
account.184.auto_dial_num =
account.184.cp_source =
account.184.transfer_refer_to_contact_header.enable =
#V80 Add
account.184.custom_ua =
account.184.callpark_enable =
account.184.check_cseq.enable =
account.184.check_to_tag.enable =
account.184.hold_use_inactive =
```

```

account.184.line_seize.expires =
account.184.update_ack_while_dialing =
account.184.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.184.always_fwd.enable =
account.184.always_fwd.target =
account.184.always_fwd.off_code =
account.184.always_fwd.on_code =
account.184.busy_fwd.enable =
account.184.busy_fwd.target =
account.184.busy_fwd.off_code =
account.184.busy_fwd.on_code =
account.184.timeout_fwd.enable =
account.184.timeout_fwd.target =
account.184.timeout_fwd.timeout =
account.184.timeout_fwd.off_code =
account.184.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.184.dnd.enable =
account.184.dnd.on_code =
account.184.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.184.reg.enable =
handset.184.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.184.xsi.user =%BWLOGIN-ID-184%
account.184.xsi.password =%XSIPASSWORD-184%
account.184.xsi.host =%XSP_ADDRESS%
account.184.xsi.server_type =
account.184.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.184.ldap.enable =
handset.184.ldap.name_filter=
handset.184.ldap.number_filter=
handset.184.ldap.host=
handset.184.ldap.port=
handset.184.ldap.base=
handset.184.ldap.user=
handset.184.ldap.password=
handset.184.ldap.max_hits=
handset.184.ldap.name_attr=
handset.184.ldap.numb_attr=
handset.184.ldap.display_name=
handset.184.ldap.version=
handset.184.ldap.call_in_lookup=
handset.184.ldap.ldap_sort=
handset.184.ldap.tls_mode=
handset.184.ldap.call_out_lookup=
handset.184.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account185 Settings
##
#####
#####

account.185.enable=%BWLIN-BINARY-185%
account.185.label=%BWEXTENSION-185%
account.185.display_name=%BWCLID-185%
account.185.auth_name=%BWAUTHUSER-185%
account.185.user_name=%BWLINPORT-185%
account.185.password=%BWAUTHPASSWORD-185%

#W80B ADD
account.185.sip_server.template =
account.185.media_transmit.enable =

account.185.alarm.template =
account.185.alarm.server =
account.185.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.185.sip_server.1.failback_mode =
account.185.sip_server.1.failback_timeout =
account.185.sip_server.1.register_on_enable =
account.185.sip_server.1.failback_subscribe.enable =
account.185.sip_server.1.invite_retry_counts =
account.185.sip_server.1.only_signal_with_registered =

account.185.sip_server.2.failback_mode =
account.185.sip_server.2.failback_timeout =
account.185.sip_server.2.register_on_enable =
account.185.sip_server.2.failback_subscribe.enable =
```

```
account.185.sip_server.2.invite_retry_counts =
account.185.sip_server.2.only_signal_with_registered =

account.185.naptr_build =
account.185.fallback.redundancy_type =
account.185.fallback.timeout =

account.185.dns_cache_type =
account.185.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.185.anonymous_call =
account.185.reject_anonymous_call =
account.185.send_anonymous_code =
account.185.anonymous_call_oncode =
account.185.anonymous_call_offcode =
account.185.send_anonymous_rejection_code =
account.185.anonymous_reject_oncode =
account.185.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.185.codec.g722.enable =
account.185.codec.g722.priority =

account.185.codec.g729.enable =
account.185.codec.g729.priority =

account.185.codec.g726_16.enable =
account.185.codec.g726_16.priority =

account.185.codec.g726_24.enable =
account.185.codec.g726_24.priority =

account.185.codec.g726_32.enable =
account.185.codec.g726_32.priority =

account.185.codec.g726_40.enable =
account.185.codec.g726_40.priority =

account.185.codec.ilbc.enable =
account.185.codec.ilbc.priority =

account.185.codec.pcmu.enable =
account.185.codec.pcmu.priority =

account.185.codec.pcma.enable =
account.185.codec.pcma.priority =

account.185.codec.opus.enable =
account.185.codec.opus.priority =
```

```
#####
#####
##                               NAT Settings
##
#####
#####

account.185.nat.nat_traversal =
account.185.nat.udp_update_enable =
account.185.nat.udp_update_time =
account.185.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.185.blf.subscribe_period =
account.185.dtmf.type =
account.185.dtmf.dtmf_payload =
account.185.dtmf.info_type =
account.185.100rel_enable =
account.185.subscribe_register =
account.185.subscribe_mwi =
account.185.subscribe_mwi_expires =
account.185.subscribe_mwi_to_vm =
voice_mail.number.185 = %BWVOICE-PORTAL-NUMBER-185%
account.185.display_mwi.enable =
account.185.cid_source =
account.185.cid_source_privacy =
account.185.cid_source_ppi =
account.185.session_timer.enable =
account.185.session_timer.expires =
account.185.session_timer.refresher =
account.185.enable_user_equal_phone =
account.185.srtp_encryption =
account.185.ptime =
account.185.shared_line = %BWSHAREDLINE-BINARY-185%
account.185.register_mac =
account.185.register_line =
account.185.reg_fail_retry_interval =
account.185.reg_failed_retry_min_time =
account.185.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.185.conf_type =
account.185.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-185%

account.185.sip_server_type =
account.185.unregister_on_reboot =

#####
#####
##                               Register Other
##
```



```
#####
#####
##DECT V81 Add

account.185.register_expires_overlap =
account.185.subscribe_expires_overlap =
account.185.auto_dial_enable =
account.185.auto_dial_num =
account.185.cp_source =
account.185.transfer_refer_to_contact_header.enable =
#V80 Add
account.185.custom_ua =
account.185.callpark_enable =
account.185.check_cseq.enable =
account.185.check_to_tag.enable =
account.185.hold_use_inactive =
account.185.line_seize.expires =
account.185.update_ack_while_dialing =
account.185.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.185.always_fwd.enable =
account.185.always_fwd.target =
account.185.always_fwd.off_code =
account.185.always_fwd.on_code =
account.185.busy_fwd.enable =
account.185.busy_fwd.target =
account.185.busy_fwd.off_code =
account.185.busy_fwd.on_code =
account.185.timeout_fwd.enable =
account.185.timeout_fwd.target =
account.185.timeout_fwd.timeout =
account.185.timeout_fwd.off_code =
account.185.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.185.dnd.enable =
account.185.dnd.on_code =
account.185.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.185.reg.enable =
handset.185.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.185.xsi.user =%BWLOGIN-ID-185%
account.185.xsi.password =%XSIPASSWORD-185%
account.185.xsi.host =%XSP_ADDRESS%
account.185.xsi.server_type =
account.185.xsi.port =

#####
#####
##          LADP
##
#####
handset.185.ldap.enable =
handset.185.ldap.name_filter=
handset.185.ldap.number_filter=
handset.185.ldap.host=
handset.185.ldap.port=
handset.185.ldap.base=
handset.185.ldap.user=
handset.185.ldap.password=
handset.185.ldap.max_hits=
handset.185.ldap.name_attr=
handset.185.ldap.numb_attr=
handset.185.ldap.display_name=
handset.185.ldap.version=
handset.185.ldap.call_in_lookup=
handset.185.ldap.ldap_sort=
handset.185.ldap.tls_mode=
handset.185.ldap.call_out_lookup=
handset.185.ldap.incoming_call_special_search.enable=

#####
#####
##          Account186 Settings
##
#####

account.186.enable=%BWLINE-BINARY-186%
account.186.label=%BWEXTENSION-186%
account.186.display_name=%BWCLID-186%
account.186.auth_name=%BWAUTHUSER-186%
account.186.user_name=%BWLINEPORT-186%
account.186.password=%BWAUTHPASSWORD-186%

#W80B ADD
account.186.sip_server.template =
account.186.media_transmit.enable =

account.186.alarm.template =
account.186.alarm.server =
account.186.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.186.sip_server.1.failback_mode =
account.186.sip_server.1.failback_timeout =
account.186.sip_server.1.register_on_enable =
account.186.sip_server.1.failback_subscribe.enable =
account.186.sip_server.1.invite_retry_counts =
account.186.sip_server.1.only_signal_with_registered =

account.186.sip_server.2.failback_mode =
account.186.sip_server.2.failback_timeout =
account.186.sip_server.2.register_on_enable =
account.186.sip_server.2.failback_subscribe.enable =
account.186.sip_server.2.invite_retry_counts =
account.186.sip_server.2.only_signal_with_registered =

account.186.naptr_build =
account.186.failback.redundancy_type =
account.186.failback.timeout =

account.186.dns_cache_type =
account.186.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.186.anonymous_call =
account.186.reject_anonymous_call =
account.186.send_anonymous_code =
account.186.anonymous_call_oncode =
account.186.anonymous_call_offcode =
account.186.send_anonymous_rejection_code =
account.186.anonymous_reject_oncode =
account.186.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.186.codec.g722.enable =
account.186.codec.g722.priority =

account.186.codec.g729.enable =
account.186.codec.g729.priority =

account.186.codec.g726_16.enable =
account.186.codec.g726_16.priority =

account.186.codec.g726_24.enable =
account.186.codec.g726_24.priority =

account.186.codec.g726_32.enable =
account.186.codec.g726_32.priority =
```

```

account.186.codec.g726_40.enable =
account.186.codec.g726_40.priority =

account.186.codec.ilbc.enable =
account.186.codec.ilbc.priority =

account.186.codec.pcmu.enable =
account.186.codec.pcmu.priority =

account.186.codec.pcma.enable =
account.186.codec.pcma.priority =

account.186.codec.opus.enable =
account.186.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.186.nat.nat_traversal =
account.186.nat.udp_update_enable =
account.186.nat.udp_update_time =
account.186.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.186.blf.subscribe_period =
account.186.dtmf.type =
account.186.dtmf.dtmf_payload =
account.186.dtmf.info_type =
account.186.100rel_enable =
account.186.subscribe_register =
account.186.subscribe_mwi =
account.186.subscribe_mwi_expires =
account.186.subscribe_mwi_to_vm =
voice_mail.number.186 = %BWVOICE-PORTAL-NUMBER-186%
account.186.display_mwi.enable =
account.186.cid_source =
account.186.cid_source_privacy =
account.186.cid_source_ppi =
account.186.session_timer.enable =
account.186.session_timer.expires =
account.186.session_timer.refresher =
account.186.enable_user_equal_phone =
account.186.srtp_encryption =
account.186.ptime =
account.186.shared_line = %BWSHAREDLINE-BINARY-186%
account.186.register_mac =
account.186.register_line =
account.186.reg_fail_retry_interval =
account.186.reg_failed_retry_min_time =
account.186.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.186.conf_type =
account.186.conf_uri = %BWNWORK-CONFERENCE-SIPURI-186%

account.186.sip_server_type =
account.186.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.186.register_expires_overlap =
account.186.subscribe_expires_overlap =
account.186.auto_dial_enable =
account.186.auto_dial_num =
account.186.cp_source =
account.186.transfer_refer_to_contact_header.enable =
#V80 Add
account.186.custom_ua =
account.186.callpark_enable =
account.186.check_cseq.enable =
account.186.check_to_tag.enable =
account.186.hold_use_inactive =
account.186.line_seize.expires =
account.186.update_ack_while_dialing =
account.186.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.186.always_fwd.enable =
account.186.always_fwd.target =
account.186.always_fwd.off_code =
account.186.always_fwd.on_code =
account.186.busy_fwd.enable =
account.186.busy_fwd.target =
account.186.busy_fwd.off_code =
account.186.busy_fwd.on_code =
account.186.timeout_fwd.enable =
account.186.timeout_fwd.target =
account.186.timeout_fwd.timeout =
account.186.timeout_fwd.off_code =
account.186.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```

account.186.dnd.enable =
account.186.dnd.on_code =
account.186.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.186.reg.enable =
handset.186.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.186.xsi.user =%BWLOGIN-ID-186%
account.186.xsi.password =%XSIPASSWORD-186%
account.186.xsi.host =%XSP_ADDRESS%
account.186.xsi.server_type =
account.186.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.186.ldap.enable =
handset.186.ldap.name_filter=
handset.186.ldap.number_filter=
handset.186.ldap.host=
handset.186.ldap.port=
handset.186.ldap.base=
handset.186.ldap.user=
handset.186.ldap.password=
handset.186.ldap.max_hits=
handset.186.ldap.name_attr=
handset.186.ldap.numb_attr=
handset.186.ldap.display_name=
handset.186.ldap.version=
handset.186.ldap.call_in_lookup=
handset.186.ldap.ldap_sort=
handset.186.ldap.tls_mode=
handset.186.ldap.call_out_lookup=
handset.186.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account187 Settings
##
#####
#####

```

```

account.187.enable=%BWLIN-BINARY-187%
account.187.label=%BWEXTENSION-187%
account.187.display_name=%BWCLID-187%
account.187.auth_name=%BWAUTHUSER-187%
account.187.user_name=%BWLINPORT-187%
account.187.password=%BWAUTHPASSWORD-187%

#W80B ADD
account.187.sip_server.template =
account.187.media_transmit.enable =

account.187.alarm.template =
account.187.alarm.server =
account.187.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.187.sip_server.1.failback_mode =
account.187.sip_server.1.failback_timeout =
account.187.sip_server.1.register_on_enable =
account.187.sip_server.1.failback_subscribe.enable =
account.187.sip_server.1.invite_retry_counts =
account.187.sip_server.1.only_signal_with_registered =

account.187.sip_server.2.failback_mode =
account.187.sip_server.2.failback_timeout =
account.187.sip_server.2.register_on_enable =
account.187.sip_server.2.failback_subscribe.enable =
account.187.sip_server.2.invite_retry_counts =
account.187.sip_server.2.only_signal_with_registered =

account.187.naptr_build =
account.187.fallback.redundancy_type =
account.187.fallback.timeout =

account.187.dns_cache_type =
account.187.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.187.anonymous_call =
account.187.reject_anonymous_call =
account.187.send_anonymous_code =
account.187.anonymous_call_oncode =
account.187.anonymous_call_offcode =
account.187.send_anonymous_rejection_code =
account.187.anonymous_reject_oncode =
account.187.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.187.codec.g722.enable =
account.187.codec.g722.priority =

account.187.codec.g729.enable =
account.187.codec.g729.priority =

account.187.codec.g726_16.enable =
account.187.codec.g726_16.priority =

account.187.codec.g726_24.enable =
account.187.codec.g726_24.priority =

account.187.codec.g726_32.enable =
account.187.codec.g726_32.priority =

account.187.codec.g726_40.enable =
account.187.codec.g726_40.priority =

account.187.codec.ilbc.enable =
account.187.codec.ilbc.priority =

account.187.codec.pcmu.enable =
account.187.codec.pcmu.priority =

account.187.codec.pcma.enable =
account.187.codec.pcma.priority =

account.187.codec.opus.enable =
account.187.codec.opus.priority =

#####
#####
##                                NAT Settings
##
#####
#####

account.187.nat.nat_traversal =
account.187.nat.udp_update_enable =
account.187.nat.udp_update_time =
account.187.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.187.blf.subscribe_period =
account.187.dtmf.type =
account.187.dtmf.dtmf_payload =
account.187.dtmf.info_type =
account.187.100rel_enable =
account.187.subscribe_register =
account.187.subscribe_mwi =
account.187.subscribe_mwi_expires =
account.187.subscribe_mwi_to_vm =
voice_mail.number.187 = %BWVOICE-PORTAL-NUMBER-187%
account.187.display_mwi.enable =
account.187.cid_source =
```



```

account.187.cid_source_privacy =
account.187.cid_source_ppi =
account.187.session_timer.enable =
account.187.session_timer.expires =
account.187.session_timer.refresher =
account.187.enable_user_equal_phone =
account.187.srtp_encryption =
account.187.ptime =
account.187.shared_line = %BWSHAREDLINE-BINARY-187%
account.187.register_mac =
account.187.register_line =
account.187.reg_fail_retry_interval =
account.187.reg_failed_retry_min_time =
account.187.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.187.conf_type =
account.187.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-187%

account.187.sip_server_type =
account.187.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.187.register_expires_overlap =
account.187.subscribe_expires_overlap =
account.187.auto_dial_enable =
account.187.auto_dial_num =
account.187.cp_source =
account.187.transfer_refer_to_contact_header.enable =
#V80 Add
account.187.custom_ua =
account.187.callpark_enable =
account.187.check_cseq.enable =
account.187.check_to_tag.enable =
account.187.hold_use_inactive =
account.187.line_seize.expires =
account.187.update_ack_while_dialing =
account.187.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.187.always_fwd.enable =
account.187.always_fwd.target =
account.187.always_fwd.off_code =
account.187.always_fwd.on_code =
account.187.busy_fwd.enable =

```

```

account.187.busy_fwd.target =
account.187.busy_fwd.off_code =
account.187.busy_fwd.on_code =
account.187.timeout_fwd.enable =
account.187.timeout_fwd.target =
account.187.timeout_fwd.timeout =
account.187.timeout_fwd.off_code =
account.187.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.187.dnd.enable =
account.187.dnd.on_code =
account.187.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.187.reg.enable =
handset.187.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.187.xsi.user =%BWLOGIN-ID-187%
account.187.xsi.password =%XSIPASSWORD-187%
account.187.xsi.host =%XSP_ADDRESS%
account.187.xsi.server_type =
account.187.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.187.ldap.enable =
handset.187.ldap.name_filter=
handset.187.ldap.number_filter=
handset.187.ldap.host=
handset.187.ldap.port=
handset.187.ldap.base=
handset.187.ldap.user=
handset.187.ldap.password=
handset.187.ldap.max_hits=
handset.187.ldap.name_attr=
handset.187.ldap.numb_attr=
handset.187.ldap.display_name=
handset.187.ldap.version=
handset.187.ldap.call_in_lookup=

```

```

handset.187.ldap.ldap_sort=
handset.187.ldap.tls_mode=
handset.187.ldap.call_out_lookup=
handset.187.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account188 Settings
##
#####
#####

account.188.enable=%BWLIN-BINARY-188%
account.188.label=%BWEXTENSION-188%
account.188.display_name=%BWCLID-188%
account.188.auth_name=%BWAUTHUSER-188%
account.188.user_name=%BWLINPORT-188%
account.188.password=%BWAUTHPASSWORD-188%

#W80B ADD
account.188.sip_server.template =
account.188.media_transmit.enable =

account.188.alarm.template =
account.188.alarm.server =
account.188.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.188.sip_server.1.failback_mode =
account.188.sip_server.1.failback_timeout =
account.188.sip_server.1.register_on_enable =
account.188.sip_server.1.failback_subscribe.enable =
account.188.sip_server.1.invite_retry_counts =
account.188.sip_server.1.only_signal_with_registered =

account.188.sip_server.2.failback_mode =
account.188.sip_server.2.failback_timeout =
account.188.sip_server.2.register_on_enable =
account.188.sip_server.2.failback_subscribe.enable =
account.188.sip_server.2.invite_retry_counts =
account.188.sip_server.2.only_signal_with_registered =

account.188.naptr_build =
account.188.fallback.redundancy_type =
account.188.fallback.timeout =

account.188.dns_cache_type =
account.188.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####

```

```

account.188.anonymous_call =
account.188.reject_anonymous_call =
account.188.send_anonymous_code =
account.188.anonymous_call_oncode =
account.188.anonymous_call_offcode =
account.188.send_anonymous_rejection_code =
account.188.anonymous_reject_oncode =
account.188.anonymous_reject_offcode =

#####
#####
##
##                                Codec
##
#####
#####
account.188.codec.g722.enable =
account.188.codec.g722.priority =

account.188.codec.g729.enable =
account.188.codec.g729.priority =

account.188.codec.g726_16.enable =
account.188.codec.g726_16.priority =

account.188.codec.g726_24.enable =
account.188.codec.g726_24.priority =

account.188.codec.g726_32.enable =
account.188.codec.g726_32.priority =

account.188.codec.g726_40.enable =
account.188.codec.g726_40.priority =

account.188.codec.ilbc.enable =
account.188.codec.ilbc.priority =

account.188.codec.pcmu.enable =
account.188.codec.pcmu.priority =

account.188.codec.pcma.enable =
account.188.codec.pcma.priority =

account.188.codec.opus.enable =
account.188.codec.opus.priority =

#####
#####
##
##                                NAT Settings
##
#####
#####

account.188.nat.nat_traversal =
account.188.nat.udp_update_enable =
account.188.nat.udp_update_time =
account.188.nat.rport =

#####
#####
##
##                                Register Advanced
##

```

```
#####
#####

account.188.blf.subscribe_period =
account.188.dtmf.type =
account.188.dtmf.dtmf_payload =
account.188.dtmf.info_type =
account.188.100rel_enable =
account.188.subscribe_register =
account.188.subscribe_mwi =
account.188.subscribe_mwi_expires =
account.188.subscribe_mwi_to_vm =
voice_mail.number.188 = %BWVOICE-PORTAL-NUMBER-188%
account.188.display_mwi.enable =
account.188.cid_source =
account.188.cid_source_privacy =
account.188.cid_source_ppi =
account.188.session_timer.enable =
account.188.session_timer.expires =
account.188.session_timer.refreshes =
account.188.enable_user_equal_phone =
account.188.srtp_encryption =
account.188.ptime =
account.188.shared_line = %BWSHAREDLINE-BINARY-188%
account.188.register_mac =
account.188.register_line =
account.188.reg_fail_retry_interval =
account.188.reg_failed_retry_min_time =
account.188.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.188.conf_type =
account.188.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-188%

account.188.sip_server_type =
account.188.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
##DECT V81 Add

account.188.register_expires_overlap =
account.188.subscribe_expires_overlap =
account.188.auto_dial_enable =
account.188.auto_dial_num =
account.188.cp_source =
account.188.transfer_refer_to_contact_header.enable =
#V80 Add
account.188.custom_ua =
account.188.callpark_enable =
account.188.check_cseq.enable =
account.188.check_to_tag.enable =
account.188.hold_use_inactive =
```

```

account.188.line_seize.expires =
account.188.update_ack_while_dialing =
account.188.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.188.always_fwd.enable =
account.188.always_fwd.target =
account.188.always_fwd.off_code =
account.188.always_fwd.on_code =
account.188.busy_fwd.enable =
account.188.busy_fwd.target =
account.188.busy_fwd.off_code =
account.188.busy_fwd.on_code =
account.188.timeout_fwd.enable =
account.188.timeout_fwd.target =
account.188.timeout_fwd.timeout =
account.188.timeout_fwd.off_code =
account.188.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.188.dnd.enable =
account.188.dnd.on_code =
account.188.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.188.reg.enable =
handset.188.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.188.xsi.user =%BWLOGIN-ID-188%
account.188.xsi.password =%XSIPASSWORD-188%
account.188.xsi.host =%XSP_ADDRESS%
account.188.xsi.server_type =
account.188.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.188.ldap.enable =
handset.188.ldap.name_filter=
handset.188.ldap.number_filter=
handset.188.ldap.host=
handset.188.ldap.port=
handset.188.ldap.base=
handset.188.ldap.user=
handset.188.ldap.password=
handset.188.ldap.max_hits=
handset.188.ldap.name_attr=
handset.188.ldap.numb_attr=
handset.188.ldap.display_name=
handset.188.ldap.version=
handset.188.ldap.call_in_lookup=
handset.188.ldap.ldap_sort=
handset.188.ldap.tls_mode=
handset.188.ldap.call_out_lookup=
handset.188.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account189 Settings
##
#####
#####

account.189.enable=%BWLIN-BINARY-189%
account.189.label=%BWEXTENSION-189%
account.189.display_name=%BWCLID-189%
account.189.auth_name=%BWAUTHUSER-189%
account.189.user_name=%BWLINPORT-189%
account.189.password=%BWAUTHPASSWORD-189%

#W80B ADD
account.189.sip_server.template =
account.189.media_transmit.enable =

account.189.alarm.template =
account.189.alarm.server =
account.189.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.189.sip_server.1.failback_mode =
account.189.sip_server.1.failback_timeout =
account.189.sip_server.1.register_on_enable =
account.189.sip_server.1.failback_subscribe.enable =
account.189.sip_server.1.invite_retry_counts =
account.189.sip_server.1.only_signal_with_registered =

account.189.sip_server.2.failback_mode =
account.189.sip_server.2.failback_timeout =
account.189.sip_server.2.register_on_enable =
account.189.sip_server.2.failback_subscribe.enable =
```

```
account.189.sip_server.2.invite_retry_counts =
account.189.sip_server.2.only_signal_with_registered =

account.189.naptr_build =
account.189.fallback.redundancy_type =
account.189.fallback.timeout =

account.189.dns_cache_type =
account.189.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.189.anonymous_call =
account.189.reject_anonymous_call =
account.189.send_anonymous_code =
account.189.anonymous_call_oncode =
account.189.anonymous_call_offcode =
account.189.send_anonymous_rejection_code =
account.189.anonymous_reject_oncode =
account.189.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.189.codec.g722.enable =
account.189.codec.g722.priority =

account.189.codec.g729.enable =
account.189.codec.g729.priority =

account.189.codec.g726_16.enable =
account.189.codec.g726_16.priority =

account.189.codec.g726_24.enable =
account.189.codec.g726_24.priority =

account.189.codec.g726_32.enable =
account.189.codec.g726_32.priority =

account.189.codec.g726_40.enable =
account.189.codec.g726_40.priority =

account.189.codec.ilbc.enable =
account.189.codec.ilbc.priority =

account.189.codec.pcmu.enable =
account.189.codec.pcmu.priority =

account.189.codec.pcma.enable =
account.189.codec.pcma.priority =

account.189.codec.opus.enable =
account.189.codec.opus.priority =
```



```
#####
#####
##                               NAT Settings
##
#####
#####

account.189.nat.nat_traversal =
account.189.nat.udp_update_enable =
account.189.nat.udp_update_time =
account.189.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.189.blf.subscribe_period =
account.189.dtmf.type =
account.189.dtmf.dtmf_payload =
account.189.dtmf.info_type =
account.189.100rel_enable =
account.189.subscribe_register =
account.189.subscribe_mwi =
account.189.subscribe_mwi_expires =
account.189.subscribe_mwi_to_vm =
voice_mail.number.189 = %BWVOICE-PORTAL-NUMBER-189%
account.189.display_mwi.enable =
account.189.cid_source =
account.189.cid_source_privacy =
account.189.cid_source_ppi =
account.189.session_timer.enable =
account.189.session_timer.expires =
account.189.session_timer.refresher =
account.189.enable_user_equal_phone =
account.189.srtplib_encryption =
account.189ptime =
account.189.shared_line = %BWSHAREDLINE-BINARY-189%
account.189.register_mac =
account.189.register_line =
account.189.reg_fail_retry_interval =
account.189.reg_failed_retry_min_time =
account.189.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.189.conf_type =
account.189.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-189%

account.189.sip_server_type =
account.189.unregister_on_reboot =

#####
#####
##                               Register Other
##
##
```

```
#####
#####
##DECT V81 Add

account.189.register_expires_overlap =
account.189.subscribe_expires_overlap =
account.189.auto_dial_enable =
account.189.auto_dial_num =
account.189.cp_source =
account.189.transfer_refer_to_contact_header.enable =
#V80 Add
account.189.custom_ua =
account.189.callpark_enable =
account.189.check_cseq.enable =
account.189.check_to_tag.enable =
account.189.hold_use_inactive =
account.189.line_seize.expires =
account.189.update_ack_while_dialing =
account.189.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.189.always_fwd.enable =
account.189.always_fwd.target =
account.189.always_fwd.off_code =
account.189.always_fwd.on_code =
account.189.busy_fwd.enable =
account.189.busy_fwd.target =
account.189.busy_fwd.off_code =
account.189.busy_fwd.on_code =
account.189.timeout_fwd.enable =
account.189.timeout_fwd.target =
account.189.timeout_fwd.timeout =
account.189.timeout_fwd.off_code =
account.189.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.189.dnd.enable =
account.189.dnd.on_code =
account.189.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.189.reg.enable =
handset.189.ipui =

#####
#####
```

```
##          Broadsoft XSI
##
#####

account.189.xsi.user =%BWLOGIN-ID-189%
account.189.xsi.password =%XSIPASSWORD-189%
account.189.xsi.host =%XSP_ADDRESS%
account.189.xsi.server_type =
account.189.xsi.port =

#####
#####
##          LADP
##
#####
handset.189.ldap.enable =
handset.189.ldap.name_filter=
handset.189.ldap.number_filter=
handset.189.ldap.host=
handset.189.ldap.port=
handset.189.ldap.base=
handset.189.ldap.user=
handset.189.ldap.password=
handset.189.ldap.max_hits=
handset.189.ldap.name_attr=
handset.189.ldap.numb_attr=
handset.189.ldap.display_name=
handset.189.ldap.version=
handset.189.ldap.call_in_lookup=
handset.189.ldap.ldap_sort=
handset.189.ldap.tls_mode=
handset.189.ldap.call_out_lookup=
handset.189.ldap.incoming_call_special_search.enable=

#####
#####
##          Account190 Settings
##
#####

account.190.enable=%BWLINE-BINARY-190%
account.190.label=%BWEXTENSION-190%
account.190.display_name=%BWCLID-190%
account.190.auth_name=%BWAUTHUSER-190%
account.190.user_name=%BWLINEPORT-190%
account.190.password=%BWAUTHPASSWORD-190%

#W80B ADD
account.190.sip_server.template =
account.190.media_transmit.enable =

account.190.alarm.template =
account.190.alarm.server =
account.190.alarm.number =
```

```
#####
#####
##                               Failback
##
#####
#####
account.190.sip_server.1.failback_mode =
account.190.sip_server.1.failback_timeout =
account.190.sip_server.1.register_on_enable =
account.190.sip_server.1.failback_subscribe.enable =
account.190.sip_server.1.invite_retry_counts =
account.190.sip_server.1.only_signal_with_registered =

account.190.sip_server.2.failback_mode =
account.190.sip_server.2.failback_timeout =
account.190.sip_server.2.register_on_enable =
account.190.sip_server.2.failback_subscribe.enable =
account.190.sip_server.2.invite_retry_counts =
account.190.sip_server.2.only_signal_with_registered =

account.190.naptr_build =
account.190.fallback.redundancy_type =
account.190.fallback.timeout =

account.190.dns_cache_type =
account.190.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.190.anonymous_call =
account.190.reject_anonymous_call =
account.190.send_anonymous_code =
account.190.anonymous_call_oncode =
account.190.anonymous_call_offcode =
account.190.send_anonymous_rejection_code =
account.190.anonymous_reject_oncode =
account.190.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.190.codec.g722.enable =
account.190.codec.g722.priority =

account.190.codec.g729.enable =
account.190.codec.g729.priority =

account.190.codec.g726_16.enable =
account.190.codec.g726_16.priority =

account.190.codec.g726_24.enable =
account.190.codec.g726_24.priority =

account.190.codec.g726_32.enable =
account.190.codec.g726_32.priority =
```

```

account.190.codec.g726_40.enable =
account.190.codec.g726_40.priority =

account.190.codec.ilbc.enable =
account.190.codec.ilbc.priority =

account.190.codec.pcmu.enable =
account.190.codec.pcmu.priority =

account.190.codec.pcma.enable =
account.190.codec.pcma.priority =

account.190.codec.opus.enable =
account.190.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.190.nat.nat_traversal =
account.190.nat.udp_update_enable =
account.190.nat.udp_update_time =
account.190.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.190.blf.subscribe_period =
account.190.dtmf.type =
account.190.dtmf.dtmf_payload =
account.190.dtmf.info_type =
account.190.100rel_enable =
account.190.subscribe_register =
account.190.subscribe_mwi =
account.190.subscribe_mwi_expires =
account.190.subscribe_mwi_to_vm =
voice_mail.number.190 = %BWVOICE-PORTAL-NUMBER-190%
account.190.display_mwi.enable =
account.190.cid_source =
account.190.cid_source_privacy =
account.190.cid_source_ppi =
account.190.session_timer.enable =
account.190.session_timer.expires =
account.190.session_timer.refresher =
account.190.enable_user_equal_phone =
account.190.srtp_encryption =
account.190.ptime =
account.190.shared_line = %BWSHAREDLINE-BINARY-190%
account.190.register_mac =
account.190.register_line =
account.190.reg_fail_retry_interval =
account.190.reg_failed_retry_min_time =
account.190.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.190.conf_type =
account.190.conf_uri = %BWNWORK-CONFERENCE-SIPURI-190%

account.190.sip_server_type =
account.190.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.190.register_expires_overlap =
account.190.subscribe_expires_overlap =
account.190.auto_dial_enable =
account.190.auto_dial_num =
account.190.cp_source =
account.190.transfer_refer_to_contact_header.enable =
#V80 Add
account.190.custom_ua =
account.190.callpark_enable =
account.190.check_cseq.enable =
account.190.check_to_tag.enable =
account.190.hold_use_inactive =
account.190.line_seize.expires =
account.190.update_ack_while_dialing =
account.190.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.190.always_fwd.enable =
account.190.always_fwd.target =
account.190.always_fwd.off_code =
account.190.always_fwd.on_code =
account.190.busy_fwd.enable =
account.190.busy_fwd.target =
account.190.busy_fwd.off_code =
account.190.busy_fwd.on_code =
account.190.timeout_fwd.enable =
account.190.timeout_fwd.target =
account.190.timeout_fwd.timeout =
account.190.timeout_fwd.off_code =
account.190.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```

account.190.dnd.enable =
account.190.dnd.on_code =
account.190.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.190.reg.enable =
handset.190.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.190.xsi.user =%BWLOGIN-ID-190%
account.190.xsi.password =%XSIPASSWORD-190%
account.190.xsi.host =%XSP_ADDRESS%
account.190.xsi.server_type =
account.190.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.190.ldap.enable =
handset.190.ldap.name_filter=
handset.190.ldap.number_filter=
handset.190.ldap.host=
handset.190.ldap.port=
handset.190.ldap.base=
handset.190.ldap.user=
handset.190.ldap.password=
handset.190.ldap.max_hits=
handset.190.ldap.name_attr=
handset.190.ldap.numb_attr=
handset.190.ldap.display_name=
handset.190.ldap.version=
handset.190.ldap.call_in_lookup=
handset.190.ldap.ldap_sort=
handset.190.ldap.tls_mode=
handset.190.ldap.call_out_lookup=
handset.190.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account191 Settings
##
#####
#####

```

```
account.191.enable=%BWLIN-BINARY-191%
account.191.label=%BWEXTENSION-191%
account.191.display_name=%BWCLID-191%
account.191.auth_name=%BWAUTHUSER-191%
account.191.user_name=%BWLINPORT-191%
account.191.password=%BWAUTHPASSWORD-191%

#W80B ADD
account.191.sip_server.template =
account.191.media_transmit.enable =

account.191.alarm.template =
account.191.alarm.server =
account.191.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.191.sip_server.1.failback_mode =
account.191.sip_server.1.failback_timeout =
account.191.sip_server.1.register_on_enable =
account.191.sip_server.1.failback_subscribe.enable =
account.191.sip_server.1.invite_retry_counts =
account.191.sip_server.1.only_signal_with_registered =

account.191.sip_server.2.failback_mode =
account.191.sip_server.2.failback_timeout =
account.191.sip_server.2.register_on_enable =
account.191.sip_server.2.failback_subscribe.enable =
account.191.sip_server.2.invite_retry_counts =
account.191.sip_server.2.only_signal_with_registered =

account.191.naptr_build =
account.191.fallback.redundancy_type =
account.191.fallback.timeout =

account.191.dns_cache_type =
account.191.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.191.anonymous_call =
account.191.reject_anonymous_call =
account.191.send_anonymous_code =
account.191.anonymous_call_oncode =
account.191.anonymous_call_offcode =
account.191.send_anonymous_rejection_code =
account.191.anonymous_reject_oncode =
account.191.anonymous_reject_offcode =

#####
#####
##                               Codec
##
```



```
#####
#####
account.191.codec.g722.enable =
account.191.codec.g722.priority =

account.191.codec.g729.enable =
account.191.codec.g729.priority =

account.191.codec.g726_16.enable =
account.191.codec.g726_16.priority =

account.191.codec.g726_24.enable =
account.191.codec.g726_24.priority =

account.191.codec.g726_32.enable =
account.191.codec.g726_32.priority =

account.191.codec.g726_40.enable =
account.191.codec.g726_40.priority =

account.191.codec.ilbc.enable =
account.191.codec.ilbc.priority =

account.191.codec.pcmu.enable =
account.191.codec.pcmu.priority =

account.191.codec.pcma.enable =
account.191.codec.pcma.priority =

account.191.codec.opus.enable =
account.191.codec.opus.priority =

#####
#####
##                                NAT Settings
##
#####
#####

account.191.nat.nat_traversal =
account.191.nat.udp_update_enable =
account.191.nat.udp_update_time =
account.191.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.191.blf.subscribe_period =
account.191.dtmf.type =
account.191.dtmf.dtmf_payload =
account.191.dtmf.info_type =
account.191.100rel_enable =
account.191.subscribe_register =
account.191.subscribe_mwi =
account.191.subscribe_mwi_expires =
account.191.subscribe_mwi_to_vm =
voice_mail.number.191 = %BWVOICE-PORTAL-NUMBER-191%
account.191.display_mwi.enable =
account.191.cid_source =
```

```

account.191.cid_source_privacy =
account.191.cid_source_ppi =
account.191.session_timer.enable =
account.191.session_timer.expires =
account.191.session_timer.refresher =
account.191.enable_user_equal_phone =
account.191.srtp_encryption =
account.191.ptime =
account.191.shared_line = %BWSHAREDLINE-BINARY-191%
account.191.register_mac =
account.191.register_line =
account.191.reg_fail_retry_interval =
account.191.reg_failed_retry_min_time =
account.191.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.191.conf_type =
account.191.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-191%

account.191.sip_server_type =
account.191.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.191.register_expires_overlap =
account.191.subscribe_expires_overlap =
account.191.auto_dial_enable =
account.191.auto_dial_num =
account.191.cp_source =
account.191.transfer_refer_to_contact_header.enable =
#V80 Add
account.191.custom_ua =
account.191.callpark_enable =
account.191.check_cseq.enable =
account.191.check_to_tag.enable =
account.191.hold_use_inactive =
account.191.line_seize.expires =
account.191.update_ack_while_dialing =
account.191.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.191.always_fwd.enable =
account.191.always_fwd.target =
account.191.always_fwd.off_code =
account.191.always_fwd.on_code =
account.191.busy_fwd.enable =

```

```
account.191.busy_fwd.target =
account.191.busy_fwd.off_code =
account.191.busy_fwd.on_code =
account.191.timeout_fwd.enable =
account.191.timeout_fwd.target =
account.191.timeout_fwd.timeout =
account.191.timeout_fwd.off_code =
account.191.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.191.dnd.enable =
account.191.dnd.on_code =
account.191.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.191.reg.enable =
handset.191.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####
account.191.xsi.user =%BWLOGIN-ID-191%
account.191.xsi.password =%XSIPASSWORD-191%
account.191.xsi.host =%XSP_ADDRESS%
account.191.xsi.server_type =
account.191.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.191.ldap.enable =
handset.191.ldap.name_filter=
handset.191.ldap.number_filter=
handset.191.ldap.host=
handset.191.ldap.port=
handset.191.ldap.base=
handset.191.ldap.user=
handset.191.ldap.password=
handset.191.ldap.max_hits=
handset.191.ldap.name_attr=
handset.191.ldap.numb_attr=
handset.191.ldap.display_name=
handset.191.ldap.version=
handset.191.ldap.call_in_lookup=
```

```
handset.191.ldap.ldap_sort=
handset.191.ldap.tls_mode=
handset.191.ldap.call_out_lookup=
handset.191.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account192 Settings
##
#####
#####

account.192.enable=%BWLIN-BINARY-192%
account.192.label=%BWEXTENSION-192%
account.192.display_name=%BWCLID-192%
account.192.auth_name=%BWAUTHUSER-192%
account.192.user_name=%BWLINPORT-192%
account.192.password=%BWAUTHPASSWORD-192%

#W80B ADD
account.192.sip_server.template =
account.192.media_transmit.enable =

account.192.alarm.template =
account.192.alarm.server =
account.192.alarm.number =

#####
#####
##                               Failback
##
#####
#####

account.192.sip_server.1.failback_mode =
account.192.sip_server.1.failback_timeout =
account.192.sip_server.1.register_on_enable =
account.192.sip_server.1.failback_subscribe.enable =
account.192.sip_server.1.invite_retry_counts =
account.192.sip_server.1.only_signal_with_registered =

account.192.sip_server.2.failback_mode =
account.192.sip_server.2.failback_timeout =
account.192.sip_server.2.register_on_enable =
account.192.sip_server.2.failback_subscribe.enable =
account.192.sip_server.2.invite_retry_counts =
account.192.sip_server.2.only_signal_with_registered =

account.192.naptr_build =
account.192.fallback.redundancy_type =
account.192.fallback.timeout =

account.192.dns_cache_type =
account.192.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
```

```

account.192.anonymous_call =
account.192.reject_anonymous_call =
account.192.send_anonymous_code =
account.192.anonymous_call_oncode =
account.192.anonymous_call_offcode =
account.192.send_anonymous_rejection_code =
account.192.anonymous_reject_oncode =
account.192.anonymous_reject_offcode =

#####
#####
##
##                               Codec
##
#####
#####
account.192.codec.g722.enable =
account.192.codec.g722.priority =

account.192.codec.g729.enable =
account.192.codec.g729.priority =

account.192.codec.g726_16.enable =
account.192.codec.g726_16.priority =

account.192.codec.g726_24.enable =
account.192.codec.g726_24.priority =

account.192.codec.g726_32.enable =
account.192.codec.g726_32.priority =

account.192.codec.g726_40.enable =
account.192.codec.g726_40.priority =

account.192.codec.ilbc.enable =
account.192.codec.ilbc.priority =

account.192.codec.pcmu.enable =
account.192.codec.pcmu.priority =

account.192.codec.pcma.enable =
account.192.codec.pcma.priority =

account.192.codec.opus.enable =
account.192.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.192.nat.nat_traversal =
account.192.nat.udp_update_enable =
account.192.nat.udp_update_time =
account.192.nat.rport =

#####
#####
##
##                               Register Advanced
##

```

```
#####
#####

account.192.blf.subscribe_period =
account.192.dtmf.type =
account.192.dtmf.dtmf_payload =
account.192.dtmf.info_type =
account.192.100rel_enable =
account.192.subscribe_register =
account.192.subscribe_mwi =
account.192.subscribe_mwi_expires =
account.192.subscribe_mwi_to_vm =
voice_mail.number.192 = %BWVOICE-PORTAL-NUMBER-192%
account.192.display_mwi.enable =
account.192.cid_source =
account.192.cid_source_privacy =
account.192.cid_source_ppi =
account.192.session_timer.enable =
account.192.session_timer.expires =
account.192.session_timer.refresher =
account.192.enable_user_equal_phone =
account.192.srtp_encryption =
account.192.ptime =
account.192.shared_line = %BWSHAREDLINE-BINARY-192%
account.192.register_mac =
account.192.register_line =
account.192.reg_fail_retry_interval =
account.192.reg_failed_retry_min_time =
account.192.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.192.conf_type =
account.192.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-192%

account.192.sip_server_type =
account.192.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.192.register_expires_overlap =
account.192.subscribe_expires_overlap =
account.192.auto_dial_enable =
account.192.auto_dial_num =
account.192.cp_source =
account.192.transfer_refer_to_contact_header.enable =
#V80 Add
account.192.custom_ua =
account.192.callpark_enable =
account.192.check_cseq.enable =
account.192.check_to_tag.enable =
account.192.hold_use_inactive =
```

```

account.192.line_seize.expires =
account.192.update_ack_while_dialing =
account.192.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.192.always_fwd.enable =
account.192.always_fwd.target =
account.192.always_fwd.off_code =
account.192.always_fwd.on_code =
account.192.busy_fwd.enable =
account.192.busy_fwd.target =
account.192.busy_fwd.off_code =
account.192.busy_fwd.on_code =
account.192.timeout_fwd.enable =
account.192.timeout_fwd.target =
account.192.timeout_fwd.timeout =
account.192.timeout_fwd.off_code =
account.192.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.192.dnd.enable =
account.192.dnd.on_code =
account.192.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.192.reg.enable =
handset.192.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.192.xsi.user =%BWLOGIN-ID-192%
account.192.xsi.password =%XSIPASSWORD-192%
account.192.xsi.host =%XSP_ADDRESS%
account.192.xsi.server_type =
account.192.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.192.ldap.enable =
handset.192.ldap.name_filter=
handset.192.ldap.number_filter=
handset.192.ldap.host=
handset.192.ldap.port=
handset.192.ldap.base=
handset.192.ldap.user=
handset.192.ldap.password=
handset.192.ldap.max_hits=
handset.192.ldap.name_attr=
handset.192.ldap.numb_attr=
handset.192.ldap.display_name=
handset.192.ldap.version=
handset.192.ldap.call_in_lookup=
handset.192.ldap.ldap_sort=
handset.192.ldap.tls_mode=
handset.192.ldap.call_out_lookup=
handset.192.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account193 Settings
##
#####
#####

account.193.enable=%BWLINE-BINARY-193%
account.193.label=%BWEXTENSION-193%
account.193.display_name=%BWCLID-193%
account.193.auth_name=%BWAUTHUSER-193%
account.193.user_name=%BWLINEPORT-193%
account.193.password=%BWAUTHPASSWORD-193%

#W80B ADD
account.193.sip_server.template =
account.193.media_transmit.enable =

account.193.alarm.template =
account.193.alarm.server =
account.193.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.193.sip_server.1.failback_mode =
account.193.sip_server.1.failback_timeout =
account.193.sip_server.1.register_on_enable =
account.193.sip_server.1.failback_subscribe.enable =
account.193.sip_server.1.invite_retry_counts =
account.193.sip_server.1.only_signal_with_registered =

account.193.sip_server.2.failback_mode =
account.193.sip_server.2.failback_timeout =
account.193.sip_server.2.register_on_enable =
account.193.sip_server.2.failback_subscribe.enable =
```



```
account.193.sip_server.2.invite_retry_counts =
account.193.sip_server.2.only_signal_with_registered =

account.193.naptr_build =
account.193.fallback.redundancy_type =
account.193.fallback.timeout =

account.193.dns_cache_type =
account.193.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.193.anonymous_call =
account.193.reject_anonymous_call =
account.193.send_anonymous_code =
account.193.anonymous_call_oncode =
account.193.anonymous_call_offcode =
account.193.send_anonymous_rejection_code =
account.193.anonymous_reject_oncode =
account.193.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.193.codec.g722.enable =
account.193.codec.g722.priority =

account.193.codec.g729.enable =
account.193.codec.g729.priority =

account.193.codec.g726_16.enable =
account.193.codec.g726_16.priority =

account.193.codec.g726_24.enable =
account.193.codec.g726_24.priority =

account.193.codec.g726_32.enable =
account.193.codec.g726_32.priority =

account.193.codec.g726_40.enable =
account.193.codec.g726_40.priority =

account.193.codec.ilbc.enable =
account.193.codec.ilbc.priority =

account.193.codec.pcmu.enable =
account.193.codec.pcmu.priority =

account.193.codec.pcma.enable =
account.193.codec.pcma.priority =

account.193.codec.opus.enable =
account.193.codec.opus.priority =
```

```
#####
#####
##                               NAT Settings
##
#####
#####

account.193.nat.nat_traversal =
account.193.nat.udp_update_enable =
account.193.nat.udp_update_time =
account.193.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.193.blf.subscribe_period =
account.193.dtmf.type =
account.193.dtmf.dtmf_payload =
account.193.dtmf.info_type =
account.193.100rel_enable =
account.193.subscribe_register =
account.193.subscribe_mwi =
account.193.subscribe_mwi_expires =
account.193.subscribe_mwi_to_vm =
voice_mail.number.193 = %BWVOICE-PORTAL-NUMBER-193%
account.193.display_mwi.enable =
account.193.cid_source =
account.193.cid_source_privacy =
account.193.cid_source_ppi =
account.193.session_timer.enable =
account.193.session_timer.expires =
account.193.session_timer.refresher =
account.193.enable_user_equal_phone =
account.193.srtplib_encryption =
account.193.ptime =
account.193.shared_line = %BWSHAREDLINE-BINARY-193%
account.193.register_mac =
account.193.register_line =
account.193.reg_fail_retry_interval =
account.193.reg_failed_retry_min_time =
account.193.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.193.conf_type =
account.193.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-193%

account.193.sip_server_type =
account.193.unregister_on_reboot =

#####
#####
##                               Register Other
##
```

```
#####
#####
##DECT V81 Add

account.193.register_expires_overlap =
account.193.subscribe_expires_overlap =
account.193.auto_dial_enable =
account.193.auto_dial_num =
account.193.cp_source =
account.193.transfer_refer_to_contact_header.enable =
#V80 Add
account.193.custom_ua =
account.193.callpark_enable =
account.193.check_cseq.enable =
account.193.check_to_tag.enable =
account.193.hold_use_inactive =
account.193.line_seize.expires =
account.193.update_ack_while_dialing =
account.193.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.193.always_fwd.enable =
account.193.always_fwd.target =
account.193.always_fwd.off_code =
account.193.always_fwd.on_code =
account.193.busy_fwd.enable =
account.193.busy_fwd.target =
account.193.busy_fwd.off_code =
account.193.busy_fwd.on_code =
account.193.timeout_fwd.enable =
account.193.timeout_fwd.target =
account.193.timeout_fwd.timeout =
account.193.timeout_fwd.off_code =
account.193.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.193.dnd.enable =
account.193.dnd.on_code =
account.193.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.193.reg.enable =
handset.193.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.193.xsi.user =%BWLOGIN-ID-193%
account.193.xsi.password =%XSIPASSWORD-193%
account.193.xsi.host =%XSP_ADDRESS%
account.193.xsi.server_type =
account.193.xsi.port =

#####
#####
##          LADP
##
#####
handset.193.ldap.enable =
handset.193.ldap.name_filter=
handset.193.ldap.number_filter=
handset.193.ldap.host=
handset.193.ldap.port=
handset.193.ldap.base=
handset.193.ldap.user=
handset.193.ldap.password=
handset.193.ldap.max_hits=
handset.193.ldap.name_attr=
handset.193.ldap.numb_attr=
handset.193.ldap.display_name=
handset.193.ldap.version=
handset.193.ldap.call_in_lookup=
handset.193.ldap.ldap_sort=
handset.193.ldap.tls_mode=
handset.193.ldap.call_out_lookup=
handset.193.ldap.incoming_call_special_search.enable=

#####
#####
##          Account194 Settings
##
#####

account.194.enable=%BWLINE-BINARY-194%
account.194.label=%BWEXTENSION-194%
account.194.display_name=%BWCLID-194%
account.194.auth_name=%BWAUTHUSER-194%
account.194.user_name=%BWLINEPORT-194%
account.194.password=%BWAUTHPASSWORD-194%

#W80B ADD
account.194.sip_server.template =
account.194.media_transmit.enable =

account.194.alarm.template =
account.194.alarm.server =
account.194.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.194.sip_server.1.failback_mode =
account.194.sip_server.1.failback_timeout =
account.194.sip_server.1.register_on_enable =
account.194.sip_server.1.failback_subscribe.enable =
account.194.sip_server.1.invite_retry_counts =
account.194.sip_server.1.only_signal_with_registered =

account.194.sip_server.2.failback_mode =
account.194.sip_server.2.failback_timeout =
account.194.sip_server.2.register_on_enable =
account.194.sip_server.2.failback_subscribe.enable =
account.194.sip_server.2.invite_retry_counts =
account.194.sip_server.2.only_signal_with_registered =

account.194.naptr_build =
account.194.fallback.redundancy_type =
account.194.fallback.timeout =

account.194.dns_cache_type =
account.194.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.194.anonymous_call =
account.194.reject_anonymous_call =
account.194.send_anonymous_code =
account.194.anonymous_call_oncode =
account.194.anonymous_call_offcode =
account.194.send_anonymous_rejection_code =
account.194.anonymous_reject_oncode =
account.194.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.194.codec.g722.enable =
account.194.codec.g722.priority =

account.194.codec.g729.enable =
account.194.codec.g729.priority =

account.194.codec.g726_16.enable =
account.194.codec.g726_16.priority =

account.194.codec.g726_24.enable =
account.194.codec.g726_24.priority =

account.194.codec.g726_32.enable =
account.194.codec.g726_32.priority =
```

```

account.194.codec.g726_40.enable =
account.194.codec.g726_40.priority =

account.194.codec.ilbc.enable =
account.194.codec.ilbc.priority =

account.194.codec.pcmu.enable =
account.194.codec.pcmu.priority =

account.194.codec.pcma.enable =
account.194.codec.pcma.priority =

account.194.codec.opus.enable =
account.194.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.194.nat.nat_traversal =
account.194.nat.udp_update_enable =
account.194.nat.udp_update_time =
account.194.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.194.blf.subscribe_period =
account.194.dtmf.type =
account.194.dtmf.dtmf_payload =
account.194.dtmf.info_type =
account.194.100rel_enable =
account.194.subscribe_register =
account.194.subscribe_mwi =
account.194.subscribe_mwi_expires =
account.194.subscribe_mwi_to_vm =
voice_mail.number.194 = %BWVOICE-PORTAL-NUMBER-194%
account.194.display_mwi.enable =
account.194.cid_source =
account.194.cid_source_privacy =
account.194.cid_source_ppi =
account.194.session_timer.enable =
account.194.session_timer.expires =
account.194.session_timer.refresher =
account.194.enable_user_equal_phone =
account.194.srtp_encryption =
account.194.ptime =
account.194.shared_line = %BWSHAREDLINE-BINARY-194%
account.194.register_mac =
account.194.register_line =
account.194.reg_fail_retry_interval =
account.194.reg_failed_retry_min_time =
account.194.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.194.conf_type =
account.194.conf_uri = %BWNWORK-CONFERENCE-SIPURI-194%

account.194.sip_server_type =
account.194.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.194.register_expires_overlap =
account.194.subscribe_expires_overlap =
account.194.auto_dial_enable =
account.194.auto_dial_num =
account.194.cp_source =
account.194.transfer_refer_to_contact_header.enable =
#V80 Add
account.194.custom_ua =
account.194.callpark_enable =
account.194.check_cseq.enable =
account.194.check_to_tag.enable =
account.194.hold_use_inactive =
account.194.line_seize.expires =
account.194.update_ack_while_dialing =
account.194.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.194.always_fwd.enable =
account.194.always_fwd.target =
account.194.always_fwd.off_code =
account.194.always_fwd.on_code =
account.194.busy_fwd.enable =
account.194.busy_fwd.target =
account.194.busy_fwd.off_code =
account.194.busy_fwd.on_code =
account.194.timeout_fwd.enable =
account.194.timeout_fwd.target =
account.194.timeout_fwd.timeout =
account.194.timeout_fwd.off_code =
account.194.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```
account.194.dnd.enable =
account.194.dnd.on_code =
account.194.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.194.reg.enable =
handset.194.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.194.xsi.user =%BWLOGIN-ID-194%
account.194.xsi.password =%XSIPASSWORD-194%
account.194.xsi.host =%XSP_ADDRESS%
account.194.xsi.server_type =
account.194.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.194.ldap.enable =
handset.194.ldap.name_filter=
handset.194.ldap.number_filter=
handset.194.ldap.host=
handset.194.ldap.port=
handset.194.ldap.base=
handset.194.ldap.user=
handset.194.ldap.password=
handset.194.ldap.max_hits=
handset.194.ldap.name_attr=
handset.194.ldap.numb_attr=
handset.194.ldap.display_name=
handset.194.ldap.version=
handset.194.ldap.call_in_lookup=
handset.194.ldap.ldap_sort=
handset.194.ldap.tls_mode=
handset.194.ldap.call_out_lookup=
handset.194.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account195 Settings
##
#####
#####
```



```

account.195.enable=%BWLIN-BINARY-195%
account.195.label=%BWEXTENSION-195%
account.195.display_name=%BWCLID-195%
account.195.auth_name=%BWAUTHUSER-195%
account.195.user_name=%BWLINPORT-195%
account.195.password=%BWAUTHPASSWORD-195%

#W80B ADD
account.195.sip_server.template =
account.195.media_transmit.enable =

account.195.alarm.template =
account.195.alarm.server =
account.195.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.195.sip_server.1.failback_mode =
account.195.sip_server.1.failback_timeout =
account.195.sip_server.1.register_on_enable =
account.195.sip_server.1.failback_subscribe.enable =
account.195.sip_server.1.invite_retry_counts =
account.195.sip_server.1.only_signal_with_registered =

account.195.sip_server.2.failback_mode =
account.195.sip_server.2.failback_timeout =
account.195.sip_server.2.register_on_enable =
account.195.sip_server.2.failback_subscribe.enable =
account.195.sip_server.2.invite_retry_counts =
account.195.sip_server.2.only_signal_with_registered =

account.195.naptr_build =
account.195.fallback.redundancy_type =
account.195.fallback.timeout =

account.195.dns_cache_type =
account.195.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.195.anonymous_call =
account.195.reject_anonymous_call =
account.195.send_anonymous_code =
account.195.anonymous_call_oncode =
account.195.anonymous_call_offcode =
account.195.send_anonymous_rejection_code =
account.195.anonymous_reject_oncode =
account.195.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.195.codec.g722.enable =
account.195.codec.g722.priority =

account.195.codec.g729.enable =
account.195.codec.g729.priority =

account.195.codec.g726_16.enable =
account.195.codec.g726_16.priority =

account.195.codec.g726_24.enable =
account.195.codec.g726_24.priority =

account.195.codec.g726_32.enable =
account.195.codec.g726_32.priority =

account.195.codec.g726_40.enable =
account.195.codec.g726_40.priority =

account.195.codec.ilbc.enable =
account.195.codec.ilbc.priority =

account.195.codec.pcmu.enable =
account.195.codec.pcmu.priority =

account.195.codec.pcma.enable =
account.195.codec.pcma.priority =

account.195.codec.opus.enable =
account.195.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.195.nat.nat_traversal =
account.195.nat.udp_update_enable =
account.195.nat.udp_update_time =
account.195.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.195.blf.subscribe_period =
account.195.dtmf.type =
account.195.dtmf.dtmf_payload =
account.195.dtmf.info_type =
account.195.100rel_enable =
account.195.subscribe_register =
account.195.subscribe_mwi =
account.195.subscribe_mwi_expires =
account.195.subscribe_mwi_to_vm =
voice_mail.number.195 = %BWVOICE-PORTAL-NUMBER-195%
account.195.display_mwi.enable =
account.195.cid_source =
```

```

account.195.cid_source_privacy =
account.195.cid_source_ppi =
account.195.session_timer.enable =
account.195.session_timer.expires =
account.195.session_timer.refresher =
account.195.enable_user_equal_phone =
account.195.srtp_encryption =
account.195.ptime =
account.195.shared_line = %BWSHAREDLINE-BINARY-195%
account.195.register_mac =
account.195.register_line =
account.195.reg_fail_retry_interval =
account.195.reg_failed_retry_min_time =
account.195.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.195.conf_type =
account.195.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-195%

account.195.sip_server_type =
account.195.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.195.register_expires_overlap =
account.195.subscribe_expires_overlap =
account.195.auto_dial_enable =
account.195.auto_dial_num =
account.195.cp_source =
account.195.transfer_refer_to_contact_header.enable =
#V80 Add
account.195.custom_ua =
account.195.callpark_enable =
account.195.check_cseq.enable =
account.195.check_to_tag.enable =
account.195.hold_use_inactive =
account.195.line_seize.expires =
account.195.update_ack_while_dialing =
account.195.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.195.always_fwd.enable =
account.195.always_fwd.target =
account.195.always_fwd.off_code =
account.195.always_fwd.on_code =
account.195.busy_fwd.enable =

```

```

account.195.busy_fwd.target =
account.195.busy_fwd.off_code =
account.195.busy_fwd.on_code =
account.195.timeout_fwd.enable =
account.195.timeout_fwd.target =
account.195.timeout_fwd.timeout =
account.195.timeout_fwd.off_code =
account.195.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.195.dnd.enable =
account.195.dnd.on_code =
account.195.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.195.reg.enable =
handset.195.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.195.xsi.user =%BWLOGIN-ID-195%
account.195.xsi.password =%XSIPASSWORD-195%
account.195.xsi.host =%XSP_ADDRESS%
account.195.xsi.server_type =
account.195.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.195.ldap.enable =
handset.195.ldap.name_filter=
handset.195.ldap.number_filter=
handset.195.ldap.host=
handset.195.ldap.port=
handset.195.ldap.base=
handset.195.ldap.user=
handset.195.ldap.password=
handset.195.ldap.max_hits=
handset.195.ldap.name_attr=
handset.195.ldap.numb_attr=
handset.195.ldap.display_name=
handset.195.ldap.version=
handset.195.ldap.call_in_lookup=

```

```

handset.195.ldap.ldap_sort=
handset.195.ldap.tls_mode=
handset.195.ldap.call_out_lookup=
handset.195.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account196 Settings
##
#####
#####

account.196.enable=%BWLIN-BINARY-196%
account.196.label=%BWEXTENSION-196%
account.196.display_name=%BWCLID-196%
account.196.auth_name=%BWAUTHUSER-196%
account.196.user_name=%BWLINPORT-196%
account.196.password=%BWAUTHPASSWORD-196%

#W80B ADD
account.196.sip_server.template =
account.196.media_transmit.enable =

account.196.alarm.template =
account.196.alarm.server =
account.196.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.196.sip_server.1.failback_mode =
account.196.sip_server.1.failback_timeout =
account.196.sip_server.1.register_on_enable =
account.196.sip_server.1.failback_subscribe.enable =
account.196.sip_server.1.invite_retry_counts =
account.196.sip_server.1.only_signal_with_registered =

account.196.sip_server.2.failback_mode =
account.196.sip_server.2.failback_timeout =
account.196.sip_server.2.register_on_enable =
account.196.sip_server.2.failback_subscribe.enable =
account.196.sip_server.2.invite_retry_counts =
account.196.sip_server.2.only_signal_with_registered =

account.196.naptr_build =
account.196.fallback.redundancy_type =
account.196.fallback.timeout =

account.196.dns_cache_type =
account.196.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####

```

```
account.196.anonymous_call =
account.196.reject_anonymous_call =
account.196.send_anonymous_code =
account.196.anonymous_call_oncode =
account.196.anonymous_call_offcode =
account.196.send_anonymous_rejection_code =
account.196.anonymous_reject_oncode =
account.196.anonymous_reject_offcode =

#####
#####
##
##                                Codec
##
#####
#####
account.196.codec.g722.enable =
account.196.codec.g722.priority =

account.196.codec.g729.enable =
account.196.codec.g729.priority =

account.196.codec.g726_16.enable =
account.196.codec.g726_16.priority =

account.196.codec.g726_24.enable =
account.196.codec.g726_24.priority =

account.196.codec.g726_32.enable =
account.196.codec.g726_32.priority =

account.196.codec.g726_40.enable =
account.196.codec.g726_40.priority =

account.196.codec.ilbc.enable =
account.196.codec.ilbc.priority =

account.196.codec.pcmu.enable =
account.196.codec.pcmu.priority =

account.196.codec.pcma.enable =
account.196.codec.pcma.priority =

account.196.codec.opus.enable =
account.196.codec.opus.priority =

#####
#####
##
##                                NAT Settings
##
#####
#####

account.196.nat.nat_traversal =
account.196.nat.udp_update_enable =
account.196.nat.udp_update_time =
account.196.nat.rport =

#####
#####
##
##                                Register Advanced
##
```

```
#####
#####

account.196.blf.subscribe_period =
account.196.dtmf.type =
account.196.dtmf.dtmf_payload =
account.196.dtmf.info_type =
account.196.100rel_enable =
account.196.subscribe_register =
account.196.subscribe_mwi =
account.196.subscribe_mwi_expires =
account.196.subscribe_mwi_to_vm =
voice_mail.number.196 = %BWVOICE-PORTAL-NUMBER-196%
account.196.display_mwi.enable =
account.196.cid_source =
account.196.cid_source_privacy =
account.196.cid_source_ppi =
account.196.session_timer.enable =
account.196.session_timer.expires =
account.196.session_timer.refresher =
account.196.enable_user_equal_phone =
account.196.srtp_encryption =
account.196.ptime =
account.196.shared_line = %BWSHAREDLINE-BINARY-196%
account.196.register_mac =
account.196.register_line =
account.196.reg_fail_retry_interval =
account.196.reg_failed_retry_min_time =
account.196.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.196.conf_type =
account.196.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-196%

account.196.sip_server_type =
account.196.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.196.register_expires_overlap =
account.196.subscribe_expires_overlap =
account.196.auto_dial_enable =
account.196.auto_dial_num =
account.196.cp_source =
account.196.transfer_refer_to_contact_header.enable =
#V80 Add
account.196.custom_ua =
account.196.callpark_enable =
account.196.check_cseq.enable =
account.196.check_to_tag.enable =
account.196.hold_use_inactive =
```

```

account.196.line_seize.expires =
account.196.update_ack_while_dialing =
account.196.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.196.always_fwd.enable =
account.196.always_fwd.target =
account.196.always_fwd.off_code =
account.196.always_fwd.on_code =
account.196.busy_fwd.enable =
account.196.busy_fwd.target =
account.196.busy_fwd.off_code =
account.196.busy_fwd.on_code =
account.196.timeout_fwd.enable =
account.196.timeout_fwd.target =
account.196.timeout_fwd.timeout =
account.196.timeout_fwd.off_code =
account.196.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.196.dnd.enable =
account.196.dnd.on_code =
account.196.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.196.reg.enable =
handset.196.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.196.xsi.user =%BWLOGIN-ID-196%
account.196.xsi.password =%XSIPASSWORD-196%
account.196.xsi.host =%XSP_ADDRESS%
account.196.xsi.server_type =
account.196.xsi.port =

#####
#####
##                               LADP
##

```



```
#####
#####
handset.196.ldap.enable =
handset.196.ldap.name_filter=
handset.196.ldap.number_filter=
handset.196.ldap.host=
handset.196.ldap.port=
handset.196.ldap.base=
handset.196.ldap.user=
handset.196.ldap.password=
handset.196.ldap.max_hits=
handset.196.ldap.name_attr=
handset.196.ldap.numb_attr=
handset.196.ldap.display_name=
handset.196.ldap.version=
handset.196.ldap.call_in_lookup=
handset.196.ldap.ldap_sort=
handset.196.ldap.tls_mode=
handset.196.ldap.call_out_lookup=
handset.196.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account197 Settings
##
#####
#####

account.197.enable=%BWLIN-BINARY-197%
account.197.label=%BWEXTENSION-197%
account.197.display_name=%BWCLID-197%
account.197.auth_name=%BWAUTHUSER-197%
account.197.user_name=%BWLINPORT-197%
account.197.password=%BWAUTHPASSWORD-197%

#W80B ADD
account.197.sip_server.template =
account.197.media_transmit.enable =

account.197.alarm.template =
account.197.alarm.server =
account.197.alarm.number =

#####
#####
##                                     Failback
##
#####
#####
account.197.sip_server.1.failback_mode =
account.197.sip_server.1.failback_timeout =
account.197.sip_server.1.register_on_enable =
account.197.sip_server.1.failback_subscribe.enable =
account.197.sip_server.1.invite_retry_counts =
account.197.sip_server.1.only_signal_with_registered =

account.197.sip_server.2.failback_mode =
account.197.sip_server.2.failback_timeout =
account.197.sip_server.2.register_on_enable =
account.197.sip_server.2.failback_subscribe.enable =
```

```
account.197.sip_server.2.invite_retry_counts =
account.197.sip_server.2.only_signal_with_registered =

account.197.naptr_build =
account.197.fallback.redundancy_type =
account.197.fallback.timeout =

account.197.dns_cache_type =
account.197.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.197.anonymous_call =
account.197.reject_anonymous_call =
account.197.send_anonymous_code =
account.197.anonymous_call_oncode =
account.197.anonymous_call_offcode =
account.197.send_anonymous_rejection_code =
account.197.anonymous_reject_oncode =
account.197.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.197.codec.g722.enable =
account.197.codec.g722.priority =

account.197.codec.g729.enable =
account.197.codec.g729.priority =

account.197.codec.g726_16.enable =
account.197.codec.g726_16.priority =

account.197.codec.g726_24.enable =
account.197.codec.g726_24.priority =

account.197.codec.g726_32.enable =
account.197.codec.g726_32.priority =

account.197.codec.g726_40.enable =
account.197.codec.g726_40.priority =

account.197.codec.ilbc.enable =
account.197.codec.ilbc.priority =

account.197.codec.pcmu.enable =
account.197.codec.pcmu.priority =

account.197.codec.pcma.enable =
account.197.codec.pcma.priority =

account.197.codec.opus.enable =
account.197.codec.opus.priority =
```

```
#####
#####
##                               NAT Settings
##
#####
#####

account.197.nat.nat_traversal =
account.197.nat.udp_update_enable =
account.197.nat.udp_update_time =
account.197.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.197.blf.subscribe_period =
account.197.dtmf.type =
account.197.dtmf.dtmf_payload =
account.197.dtmf.info_type =
account.197.100rel_enable =
account.197.subscribe_register =
account.197.subscribe_mwi =
account.197.subscribe_mwi_expires =
account.197.subscribe_mwi_to_vm =
voice_mail.number.197 = %BWVOICE-PORTAL-NUMBER-197%
account.197.display_mwi.enable =
account.197.cid_source =
account.197.cid_source_privacy =
account.197.cid_source_ppi =
account.197.session_timer.enable =
account.197.session_timer.expires =
account.197.session_timer.refresher =
account.197.enable_user_equal_phone =
account.197.srtp_encryption =
account.197.ptime =
account.197.shared_line = %BWSHAREDLINE-BINARY-197%
account.197.register_mac =
account.197.register_line =
account.197.reg_fail_retry_interval =
account.197.reg_failed_retry_min_time =
account.197.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.197.conf_type =
account.197.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-197%

account.197.sip_server_type =
account.197.unregister_on_reboot =

#####
#####
##                               Register Other
##
```

```
#####
#####
##DECT V81 Add

account.197.register_expires_overlap =
account.197.subscribe_expires_overlap =
account.197.auto_dial_enable =
account.197.auto_dial_num =
account.197.cp_source =
account.197.transfer_refer_to_contact_header.enable =
#V80 Add
account.197.custom_ua =
account.197.callpark_enable =
account.197.check_cseq.enable =
account.197.check_to_tag.enable =
account.197.hold_use_inactive =
account.197.line_seize.expires =
account.197.update_ack_while_dialing =
account.197.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.197.always_fwd.enable =
account.197.always_fwd.target =
account.197.always_fwd.off_code =
account.197.always_fwd.on_code =
account.197.busy_fwd.enable =
account.197.busy_fwd.target =
account.197.busy_fwd.off_code =
account.197.busy_fwd.on_code =
account.197.timeout_fwd.enable =
account.197.timeout_fwd.target =
account.197.timeout_fwd.timeout =
account.197.timeout_fwd.off_code =
account.197.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.197.dnd.enable =
account.197.dnd.on_code =
account.197.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.197.reg.enable =
handset.197.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.197.xsi.user =%BWLOGIN-ID-197%
account.197.xsi.password =%XSIPASSWORD-197%
account.197.xsi.host =%XSP_ADDRESS%
account.197.xsi.server_type =
account.197.xsi.port =

#####
#####
##          LADP
##
#####
handset.197.ldap.enable =
handset.197.ldap.name_filter=
handset.197.ldap.number_filter=
handset.197.ldap.host=
handset.197.ldap.port=
handset.197.ldap.base=
handset.197.ldap.user=
handset.197.ldap.password=
handset.197.ldap.max_hits=
handset.197.ldap.name_attr=
handset.197.ldap.numb_attr=
handset.197.ldap.display_name=
handset.197.ldap.version=
handset.197.ldap.call_in_lookup=
handset.197.ldap.ldap_sort=
handset.197.ldap.tls_mode=
handset.197.ldap.call_out_lookup=
handset.197.ldap.incoming_call_special_search.enable=

#####
#####
##          Account198 Settings
##
#####

account.198.enable=%BWLINE-BINARY-198%
account.198.label=%BWEXTENSION-198%
account.198.display_name=%BWCLID-198%
account.198.auth_name=%BWAUTHUSER-198%
account.198.user_name=%BWLINEPORT-198%
account.198.password=%BWAUTHPASSWORD-198%

#W80B ADD
account.198.sip_server.template =
account.198.media_transmit.enable =

account.198.alarm.template =
account.198.alarm.server =
account.198.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.198.sip_server.1.failback_mode =
account.198.sip_server.1.failback_timeout =
account.198.sip_server.1.register_on_enable =
account.198.sip_server.1.failback_subscribe.enable =
account.198.sip_server.1.invite_retry_counts =
account.198.sip_server.1.only_signal_with_registered =

account.198.sip_server.2.failback_mode =
account.198.sip_server.2.failback_timeout =
account.198.sip_server.2.register_on_enable =
account.198.sip_server.2.failback_subscribe.enable =
account.198.sip_server.2.invite_retry_counts =
account.198.sip_server.2.only_signal_with_registered =

account.198.naptr_build =
account.198.fallback.redundancy_type =
account.198.fallback.timeout =

account.198.dns_cache_type =
account.198.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.198.anonymous_call =
account.198.reject_anonymous_call =
account.198.send_anonymous_code =
account.198.anonymous_call_oncode =
account.198.anonymous_call_offcode =
account.198.send_anonymous_rejection_code =
account.198.anonymous_reject_oncode =
account.198.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.198.codec.g722.enable =
account.198.codec.g722.priority =

account.198.codec.g729.enable =
account.198.codec.g729.priority =

account.198.codec.g726_16.enable =
account.198.codec.g726_16.priority =

account.198.codec.g726_24.enable =
account.198.codec.g726_24.priority =

account.198.codec.g726_32.enable =
account.198.codec.g726_32.priority =
```

```

account.198.codec.g726_40.enable =
account.198.codec.g726_40.priority =

account.198.codec.ilbc.enable =
account.198.codec.ilbc.priority =

account.198.codec.pcmu.enable =
account.198.codec.pcmu.priority =

account.198.codec.pcma.enable =
account.198.codec.pcma.priority =

account.198.codec.opus.enable =
account.198.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.198.nat.nat_traversal =
account.198.nat.udp_update_enable =
account.198.nat.udp_update_time =
account.198.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.198.blf.subscribe_period =
account.198.dtmf.type =
account.198.dtmf.dtmf_payload =
account.198.dtmf.info_type =
account.198.100rel_enable =
account.198.subscribe_register =
account.198.subscribe_mwi =
account.198.subscribe_mwi_expires =
account.198.subscribe_mwi_to_vm =
voice_mail.number.198 = %BWVOICE-PORTAL-NUMBER-198%
account.198.display_mwi.enable =
account.198.cid_source =
account.198.cid_source_privacy =
account.198.cid_source_ppi =
account.198.session_timer.enable =
account.198.session_timer.expires =
account.198.session_timer.refresher =
account.198.enable_user_equal_phone =
account.198.srtp_encryption =
account.198.ptime =
account.198.shared_line = %BWSHAREDLINE-BINARY-198%
account.198.register_mac =
account.198.register_line =
account.198.reg_fail_retry_interval =
account.198.reg_failed_retry_min_time =
account.198.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.198.conf_type =
account.198.conf_uri = %BWNWORK-CONFERENCE-SIPURI-198%

account.198.sip_server_type =
account.198.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.198.register_expires_overlap =
account.198.subscribe_expires_overlap =
account.198.auto_dial_enable =
account.198.auto_dial_num =
account.198.cp_source =
account.198.transfer_refer_to_contact_header.enable =
#V80 Add
account.198.custom_ua =
account.198.callpark_enable =
account.198.check_cseq.enable =
account.198.check_to_tag.enable =
account.198.hold_use_inactive =
account.198.line_seize.expires =
account.198.update_ack_while_dialing =
account.198.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.198.always_fwd.enable =
account.198.always_fwd.target =
account.198.always_fwd.off_code =
account.198.always_fwd.on_code =
account.198.busy_fwd.enable =
account.198.busy_fwd.target =
account.198.busy_fwd.off_code =
account.198.busy_fwd.on_code =
account.198.timeout_fwd.enable =
account.198.timeout_fwd.target =
account.198.timeout_fwd.timeout =
account.198.timeout_fwd.off_code =
account.198.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```



```
account.198.dnd.enable =
account.198.dnd.on_code =
account.198.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.198.reg.enable =
handset.198.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####

account.198.xsi.user =%BWLOGIN-ID-198%
account.198.xsi.password =%XSIPASSWORD-198%
account.198.xsi.host =%XSP_ADDRESS%
account.198.xsi.server_type =
account.198.xsi.port =

#####
#####
##                               LADP
##
#####
#####
handset.198.ldap.enable =
handset.198.ldap.name_filter=
handset.198.ldap.number_filter=
handset.198.ldap.host=
handset.198.ldap.port=
handset.198.ldap.base=
handset.198.ldap.user=
handset.198.ldap.password=
handset.198.ldap.max_hits=
handset.198.ldap.name_attr=
handset.198.ldap.numb_attr=
handset.198.ldap.display_name=
handset.198.ldap.version=
handset.198.ldap.call_in_lookup=
handset.198.ldap.ldap_sort=
handset.198.ldap.tls_mode=
handset.198.ldap.call_out_lookup=
handset.198.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account199 Settings
##
#####
#####
```

```

account.199.enable=%BWLIN-BINARY-199%
account.199.label=%BWEXTENSION-199%
account.199.display_name=%BWCLID-199%
account.199.auth_name=%BWAUTHUSER-199%
account.199.user_name=%BWLINPORT-199%
account.199.password=%BWAUTHPASSWORD-199%

#W80B ADD
account.199.sip_server.template =
account.199.media_transmit.enable =

account.199.alarm.template =
account.199.alarm.server =
account.199.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.199.sip_server.1.failback_mode =
account.199.sip_server.1.failback_timeout =
account.199.sip_server.1.register_on_enable =
account.199.sip_server.1.failback_subscribe.enable =
account.199.sip_server.1.invite_retry_counts =
account.199.sip_server.1.only_signal_with_registered =

account.199.sip_server.2.failback_mode =
account.199.sip_server.2.failback_timeout =
account.199.sip_server.2.register_on_enable =
account.199.sip_server.2.failback_subscribe.enable =
account.199.sip_server.2.invite_retry_counts =
account.199.sip_server.2.only_signal_with_registered =

account.199.naptr_build =
account.199.fallback.redundancy_type =
account.199.fallback.timeout =

account.199.dns_cache_type =
account.199.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.199.anonymous_call =
account.199.reject_anonymous_call =
account.199.send_anonymous_code =
account.199.anonymous_call_oncode =
account.199.anonymous_call_offcode =
account.199.send_anonymous_rejection_code =
account.199.anonymous_reject_oncode =
account.199.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.199.codec.g722.enable =
account.199.codec.g722.priority =

account.199.codec.g729.enable =
account.199.codec.g729.priority =

account.199.codec.g726_16.enable =
account.199.codec.g726_16.priority =

account.199.codec.g726_24.enable =
account.199.codec.g726_24.priority =

account.199.codec.g726_32.enable =
account.199.codec.g726_32.priority =

account.199.codec.g726_40.enable =
account.199.codec.g726_40.priority =

account.199.codec.ilbc.enable =
account.199.codec.ilbc.priority =

account.199.codec.pcmu.enable =
account.199.codec.pcmu.priority =

account.199.codec.pcma.enable =
account.199.codec.pcma.priority =

account.199.codec.opus.enable =
account.199.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.199.nat.nat_traversal =
account.199.nat.udp_update_enable =
account.199.nat.udp_update_time =
account.199.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.199.blf.subscribe_period =
account.199.dtmf.type =
account.199.dtmf.dtmf_payload =
account.199.dtmf.info_type =
account.199.100rel_enable =
account.199.subscribe_register =
account.199.subscribe_mwi =
account.199.subscribe_mwi_expires =
account.199.subscribe_mwi_to_vm =
voice_mail.number.199 = %BWVOICE-PORTAL-NUMBER-199%
account.199.display_mwi.enable =
account.199.cid_source =
```

```

account.199.cid_source_privacy =
account.199.cid_source_ppi =
account.199.session_timer.enable =
account.199.session_timer.expires =
account.199.session_timer.refresher =
account.199.enable_user_equal_phone =
account.199.srtp_encryption =
account.199.ptime =
account.199.shared_line = %BWSHAREDLINE-BINARY-199%
account.199.register_mac =
account.199.register_line =
account.199.reg_fail_retry_interval =
account.199.reg_failed_retry_min_time =
account.199.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.199.conf_type =
account.199.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-199%

account.199.sip_server_type =
account.199.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.199.register_expires_overlap =
account.199.subscribe_expires_overlap =
account.199.auto_dial_enable =
account.199.auto_dial_num =
account.199.cp_source =
account.199.transfer_refer_to_contact_header.enable =
#V80 Add
account.199.custom_ua =
account.199.callpark_enable =
account.199.check_cseq.enable =
account.199.check_to_tag.enable =
account.199.hold_use_inactive =
account.199.line_seize.expires =
account.199.update_ack_while_dialing =
account.199.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.199.always_fwd.enable =
account.199.always_fwd.target =
account.199.always_fwd.off_code =
account.199.always_fwd.on_code =
account.199.busy_fwd.enable =

```

```
account.199.busy_fwd.target =
account.199.busy_fwd.off_code =
account.199.busy_fwd.on_code =
account.199.timeout_fwd.enable =
account.199.timeout_fwd.target =
account.199.timeout_fwd.timeout =
account.199.timeout_fwd.off_code =
account.199.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.199.dnd.enable =
account.199.dnd.on_code =
account.199.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.199.reg.enable =
handset.199.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####
account.199.xsi.user =%BWLOGIN-ID-199%
account.199.xsi.password =%XSIPASSWORD-199%
account.199.xsi.host =%XSP_ADDRESS%
account.199.xsi.server_type =
account.199.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.199.ldap.enable =
handset.199.ldap.name_filter=
handset.199.ldap.number_filter=
handset.199.ldap.host=
handset.199.ldap.port=
handset.199.ldap.base=
handset.199.ldap.user=
handset.199.ldap.password=
handset.199.ldap.max_hits=
handset.199.ldap.name_attr=
handset.199.ldap.numb_attr=
handset.199.ldap.display_name=
handset.199.ldap.version=
handset.199.ldap.call_in_lookup=
```

```

handset.199.ldap.ldap_sort=
handset.199.ldap.tls_mode=
handset.199.ldap.call_out_lookup=
handset.199.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account200 Settings
##
#####
#####

account.200.enable=%BWLIN-BINARY-200%
account.200.label=%BWEXTENSION-200%
account.200.display_name=%BWCLID-200%
account.200.auth_name=%BWAUTHUSER-200%
account.200.user_name=%BWLINPORT-200%
account.200.password=%BWAUTHPASSWORD-200%

#W80B ADD
account.200.sip_server.template =
account.200.media_transmit.enable =

account.200.alarm.template =
account.200.alarm.server =
account.200.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.200.sip_server.1.failback_mode =
account.200.sip_server.1.failback_timeout =
account.200.sip_server.1.register_on_enable =
account.200.sip_server.1.failback_subscribe.enable =
account.200.sip_server.1.invite_retry_counts =
account.200.sip_server.1.only_signal_with_registered =

account.200.sip_server.2.failback_mode =
account.200.sip_server.2.failback_timeout =
account.200.sip_server.2.register_on_enable =
account.200.sip_server.2.failback_subscribe.enable =
account.200.sip_server.2.invite_retry_counts =
account.200.sip_server.2.only_signal_with_registered =

account.200.naptr_build =
account.200.fallback.redundancy_type =
account.200.fallback.timeout =

account.200.dns_cache_type =
account.200.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####

```

```

account.200.anonymous_call =
account.200.reject_anonymous_call =
account.200.send_anonymous_code =
account.200.anonymous_call_oncode =
account.200.anonymous_call_offcode =
account.200.send_anonymous_rejection_code =
account.200.anonymous_reject_oncode =
account.200.anonymous_reject_offcode =

#####
#####
##
##                               Codec
##
#####
#####
account.200.codec.g722.enable =
account.200.codec.g722.priority =

account.200.codec.g729.enable =
account.200.codec.g729.priority =

account.200.codec.g726_16.enable =
account.200.codec.g726_16.priority =

account.200.codec.g726_24.enable =
account.200.codec.g726_24.priority =

account.200.codec.g726_32.enable =
account.200.codec.g726_32.priority =

account.200.codec.g726_40.enable =
account.200.codec.g726_40.priority =

account.200.codec.ilbc.enable =
account.200.codec.ilbc.priority =

account.200.codec.pcmu.enable =
account.200.codec.pcmu.priority =

account.200.codec.pcma.enable =
account.200.codec.pcma.priority =

account.200.codec.opus.enable =
account.200.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.200.nat.nat_traversal =
account.200.nat.udp_update_enable =
account.200.nat.udp_update_time =
account.200.nat.rport =

#####
#####
##
##                               Register Advanced
##

```

```
#####
#####

account.200.blf.subscribe_period =
account.200.dtmf.type =
account.200.dtmf.dtmf_payload =
account.200.dtmf.info_type =
account.200.100rel_enable =
account.200.subscribe_register =
account.200.subscribe_mwi =
account.200.subscribe_mwi_expires =
account.200.subscribe_mwi_to_vm =
voice_mail.number.200 = %BWVOICE-PORTAL-NUMBER-200%
account.200.display_mwi.enable =
account.200.cid_source =
account.200.cid_source_privacy =
account.200.cid_source_ppi =
account.200.session_timer.enable =
account.200.session_timer.expires =
account.200.session_timer.refresher =
account.200.enable_user_equal_phone =
account.200.srtp_encryption =
account.200.ptime =
account.200.shared_line = %BWSHAREDLINE-BINARY-200%
account.200.register_mac =
account.200.register_line =
account.200.reg_fail_retry_interval =
account.200.reg_failed_retry_min_time =
account.200.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.200.conf_type =
account.200.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-200%

account.200.sip_server_type =
account.200.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.200.register_expires_overlap =
account.200.subscribe_expires_overlap =
account.200.auto_dial_enable =
account.200.auto_dial_num =
account.200.cp_source =
account.200.transfer_refer_to_contact_header.enable =
#V80 Add
account.200.custom_ua =
account.200.callpark_enable =
account.200.check_cseq.enable =
account.200.check_to_tag.enable =
account.200.hold_use_inactive =
```



```

account.200.line_seize.expires =
account.200.update_ack_while_dialing =
account.200.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.200.always_fwd.enable =
account.200.always_fwd.target =
account.200.always_fwd.off_code =
account.200.always_fwd.on_code =
account.200.busy_fwd.enable =
account.200.busy_fwd.target =
account.200.busy_fwd.off_code =
account.200.busy_fwd.on_code =
account.200.timeout_fwd.enable =
account.200.timeout_fwd.target =
account.200.timeout_fwd.timeout =
account.200.timeout_fwd.off_code =
account.200.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.200.dnd.enable =
account.200.dnd.on_code =
account.200.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.200.reg.enable =
handset.200.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.200.xsi.user =%BWLOGIN-ID-200%
account.200.xsi.password =%XSIPASSWORD-200%
account.200.xsi.host =%XSP_ADDRESS%
account.200.xsi.server_type =
account.200.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.200.ldap.enable =
handset.200.ldap.name_filter=
handset.200.ldap.number_filter=
handset.200.ldap.host=
handset.200.ldap.port=
handset.200.ldap.base=
handset.200.ldap.user=
handset.200.ldap.password=
handset.200.ldap.max_hits=
handset.200.ldap.name_attr=
handset.200.ldap.numb_attr=
handset.200.ldap.display_name=
handset.200.ldap.version=
handset.200.ldap.call_in_lookup=
handset.200.ldap.ldap_sort=
handset.200.ldap.tls_mode=
handset.200.ldap.call_out_lookup=
handset.200.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account201 Settings
##
#####
#####

account.201.enable=%BWLIN-BINARY-201%
account.201.label=%BWEXTENSION-201%
account.201.display_name=%BWCLID-201%
account.201.auth_name=%BWAUTHUSER-201%
account.201.user_name=%BWLINPORT-201%
account.201.password=%BWAUTHPASSWORD-201%

#W80B ADD
account.201.sip_server.template =
account.201.media_transmit.enable =

account.201.alarm.template =
account.201.alarm.server =
account.201.alarm.number =

#####
#####
##                                     Failback
##
#####
#####
account.201.sip_server.1.failback_mode =
account.201.sip_server.1.failback_timeout =
account.201.sip_server.1.register_on_enable =
account.201.sip_server.1.failback_subscribe.enable =
account.201.sip_server.1.invite_retry_counts =
account.201.sip_server.1.only_signal_with_registered =

account.201.sip_server.2.failback_mode =
account.201.sip_server.2.failback_timeout =
account.201.sip_server.2.register_on_enable =
account.201.sip_server.2.failback_subscribe.enable =
```

```

account.201.sip_server.2.invite_retry_counts =
account.201.sip_server.2.only_signal_with_registered =

account.201.naptr_build =
account.201.fallback.redundancy_type =
account.201.fallback.timeout =

account.201.dns_cache_type =
account.201.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.201.anonymous_call =
account.201.reject_anonymous_call =
account.201.send_anonymous_code =
account.201.anonymous_call_oncode =
account.201.anonymous_call_offcode =
account.201.send_anonymous_rejection_code =
account.201.anonymous_reject_oncode =
account.201.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.201.codec.g722.enable =
account.201.codec.g722.priority =

account.201.codec.g729.enable =
account.201.codec.g729.priority =

account.201.codec.g726_16.enable =
account.201.codec.g726_16.priority =

account.201.codec.g726_24.enable =
account.201.codec.g726_24.priority =

account.201.codec.g726_32.enable =
account.201.codec.g726_32.priority =

account.201.codec.g726_40.enable =
account.201.codec.g726_40.priority =

account.201.codec.ilbc.enable =
account.201.codec.ilbc.priority =

account.201.codec.pcmu.enable =
account.201.codec.pcmu.priority =

account.201.codec.pcma.enable =
account.201.codec.pcma.priority =

account.201.codec.opus.enable =
account.201.codec.opus.priority =

```

```
#####
#####
##                               NAT Settings
##
#####
#####

account.201.nat.nat_traversal =
account.201.nat.udp_update_enable =
account.201.nat.udp_update_time =
account.201.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.201.blf.subscribe_period =
account.201.dtmf.type =
account.201.dtmf.dtmf_payload =
account.201.dtmf.info_type =
account.201.100rel_enable =
account.201.subscribe_register =
account.201.subscribe_mwi =
account.201.subscribe_mwi_expires =
account.201.subscribe_mwi_to_vm =
voice_mail.number.201 = %BWVOICE-PORTAL-NUMBER-201%
account.201.display_mwi.enable =
account.201.cid_source =
account.201.cid_source_privacy =
account.201.cid_source_ppi =
account.201.session_timer.enable =
account.201.session_timer.expires =
account.201.session_timer.refresher =
account.201.enable_user_equal_phone =
account.201.srtp_encryption =
account.201.ptime =
account.201.shared_line = %BWSHAREDLINE-BINARY-201%
account.201.register_mac =
account.201.register_line =
account.201.reg_fail_retry_interval =
account.201.reg_failed_retry_min_time =
account.201.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.201.conf_type =
account.201.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-201%

account.201.sip_server_type =
account.201.unregister_on_reboot =

#####
#####
##                               Register Other
##
##
```

```
#####
#####
##DECT V81 Add

account.201.register_expires_overlap =
account.201.subscribe_expires_overlap =
account.201.auto_dial_enable =
account.201.auto_dial_num =
account.201.cp_source =
account.201.transfer_refer_to_contact_header.enable =
#V80 Add
account.201.custom_ua =
account.201.callpark_enable =
account.201.check_cseq.enable =
account.201.check_to_tag.enable =
account.201.hold_use_inactive =
account.201.line_seize.expires =
account.201.update_ack_while_dialing =
account.201.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.201.always_fwd.enable =
account.201.always_fwd.target =
account.201.always_fwd.off_code =
account.201.always_fwd.on_code =
account.201.busy_fwd.enable =
account.201.busy_fwd.target =
account.201.busy_fwd.off_code =
account.201.busy_fwd.on_code =
account.201.timeout_fwd.enable =
account.201.timeout_fwd.target =
account.201.timeout_fwd.timeout =
account.201.timeout_fwd.off_code =
account.201.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.201.dnd.enable =
account.201.dnd.on_code =
account.201.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.201.reg.enable =
handset.201.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.201.xsi.user =%BWLOGIN-ID-201%
account.201.xsi.password =%XSIPASSWORD-201%
account.201.xsi.host =%XSP_ADDRESS%
account.201.xsi.server_type =
account.201.xsi.port =

#####
#####
##          LADP
##
#####
handset.201.ldap.enable =
handset.201.ldap.name_filter=
handset.201.ldap.number_filter=
handset.201.ldap.host=
handset.201.ldap.port=
handset.201.ldap.base=
handset.201.ldap.user=
handset.201.ldap.password=
handset.201.ldap.max_hits=
handset.201.ldap.name_attr=
handset.201.ldap.numb_attr=
handset.201.ldap.display_name=
handset.201.ldap.version=
handset.201.ldap.call_in_lookup=
handset.201.ldap.ldap_sort=
handset.201.ldap.tls_mode=
handset.201.ldap.call_out_lookup=
handset.201.ldap.incoming_call_special_search.enable=

#####
#####
##          Account202 Settings
##
#####

account.202.enable=%BWLINE-BINARY-202%
account.202.label=%BWEXTENSION-202%
account.202.display_name=%BWCLID-202%
account.202.auth_name=%BWAUTHUSER-202%
account.202.user_name=%BWLINEPORT-202%
account.202.password=%BWAUTHPASSWORD-202%

#W80B ADD
account.202.sip_server.template =
account.202.media_transmit.enable =

account.202.alarm.template =
account.202.alarm.server =
account.202.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.202.sip_server.1.failback_mode =
account.202.sip_server.1.failback_timeout =
account.202.sip_server.1.register_on_enable =
account.202.sip_server.1.failback_subscribe.enable =
account.202.sip_server.1.invite_retry_counts =
account.202.sip_server.1.only_signal_with_registered =

account.202.sip_server.2.failback_mode =
account.202.sip_server.2.failback_timeout =
account.202.sip_server.2.register_on_enable =
account.202.sip_server.2.failback_subscribe.enable =
account.202.sip_server.2.invite_retry_counts =
account.202.sip_server.2.only_signal_with_registered =

account.202.naptr_build =
account.202.fallback.redundancy_type =
account.202.fallback.timeout =

account.202.dns_cache_type =
account.202.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.202.anonymous_call =
account.202.reject_anonymous_call =
account.202.send_anonymous_code =
account.202.anonymous_call_oncode =
account.202.anonymous_call_offcode =
account.202.send_anonymous_rejection_code =
account.202.anonymous_reject_oncode =
account.202.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.202.codec.g722.enable =
account.202.codec.g722.priority =

account.202.codec.g729.enable =
account.202.codec.g729.priority =

account.202.codec.g726_16.enable =
account.202.codec.g726_16.priority =

account.202.codec.g726_24.enable =
account.202.codec.g726_24.priority =

account.202.codec.g726_32.enable =
account.202.codec.g726_32.priority =
```

```

account.202.codec.g726_40.enable =
account.202.codec.g726_40.priority =

account.202.codec.ilbc.enable =
account.202.codec.ilbc.priority =

account.202.codec.pcmu.enable =
account.202.codec.pcmu.priority =

account.202.codec.pcma.enable =
account.202.codec.pcma.priority =

account.202.codec.opus.enable =
account.202.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.202.nat.nat_traversal =
account.202.nat.udp_update_enable =
account.202.nat.udp_update_time =
account.202.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.202.blf.subscribe_period =
account.202.dtmf.type =
account.202.dtmf.dtmf_payload =
account.202.dtmf.info_type =
account.202.100rel_enable =
account.202.subscribe_register =
account.202.subscribe_mwi =
account.202.subscribe_mwi_expires =
account.202.subscribe_mwi_to_vm =
voice_mail.number.202 = %BWVOICE-PORTAL-NUMBER-202%
account.202.display_mwi.enable =
account.202.cid_source =
account.202.cid_source_privacy =
account.202.cid_source_ppi =
account.202.session_timer.enable =
account.202.session_timer.expires =
account.202.session_timer.refresher =
account.202.enable_user_equal_phone =
account.202.srtp_encryption =
account.202.ptime =
account.202.shared_line = %BWSHAREDLINE-BINARY-202%
account.202.register_mac =
account.202.register_line =
account.202.reg_fail_retry_interval =
account.202.reg_failed_retry_min_time =
account.202.reg_failed_retry_max_time =

```



```
#####
#####
##                               Network Conference
##
#####
#####
account.202.conf_type =
account.202.conf_uri = %BWNWORK-CONFERENCE-SIPURI-202%

account.202.sip_server_type =
account.202.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.202.register_expires_overlap =
account.202.subscribe_expires_overlap =
account.202.auto_dial_enable =
account.202.auto_dial_num =
account.202.cp_source =
account.202.transfer_refer_to_contact_header.enable =
#V80 Add
account.202.custom_ua =
account.202.callpark_enable =
account.202.check_cseq.enable =
account.202.check_to_tag.enable =
account.202.hold_use_inactive =
account.202.line_seize.expires =
account.202.update_ack_while_dialing =
account.202.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.202.always_fwd.enable =
account.202.always_fwd.target =
account.202.always_fwd.off_code =
account.202.always_fwd.on_code =
account.202.busy_fwd.enable =
account.202.busy_fwd.target =
account.202.busy_fwd.off_code =
account.202.busy_fwd.on_code =
account.202.timeout_fwd.enable =
account.202.timeout_fwd.target =
account.202.timeout_fwd.timeout =
account.202.timeout_fwd.off_code =
account.202.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```
account.202.dnd.enable =
account.202.dnd.on_code =
account.202.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.202.reg.enable =
handset.202.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####

account.202.xsi.user =%BWLOGIN-ID-202%
account.202.xsi.password =%XSIPASSWORD-202%
account.202.xsi.host =%XSP_ADDRESS%
account.202.xsi.server_type =
account.202.xsi.port =

#####
#####
##                               LADP
##
#####
#####
handset.202.ldap.enable =
handset.202.ldap.name_filter=
handset.202.ldap.number_filter=
handset.202.ldap.host=
handset.202.ldap.port=
handset.202.ldap.base=
handset.202.ldap.user=
handset.202.ldap.password=
handset.202.ldap.max_hits=
handset.202.ldap.name_attr=
handset.202.ldap.numb_attr=
handset.202.ldap.display_name=
handset.202.ldap.version=
handset.202.ldap.call_in_lookup=
handset.202.ldap.ldap_sort=
handset.202.ldap.tls_mode=
handset.202.ldap.call_out_lookup=
handset.202.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account203 Settings
##
#####
#####
```

```

account.203.enable=%BWLIN-BINARY-203%
account.203.label=%BWEXTENSION-203%
account.203.display_name=%BWCLID-203%
account.203.auth_name=%BWAUTHUSER-203%
account.203.user_name=%BWLINPORT-203%
account.203.password=%BWAUTHPASSWORD-203%

#W80B ADD
account.203.sip_server.template =
account.203.media_transmit.enable =

account.203.alarm.template =
account.203.alarm.server =
account.203.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.203.sip_server.1.failback_mode =
account.203.sip_server.1.failback_timeout =
account.203.sip_server.1.register_on_enable =
account.203.sip_server.1.failback_subscribe.enable =
account.203.sip_server.1.invite_retry_counts =
account.203.sip_server.1.only_signal_with_registered =

account.203.sip_server.2.failback_mode =
account.203.sip_server.2.failback_timeout =
account.203.sip_server.2.register_on_enable =
account.203.sip_server.2.failback_subscribe.enable =
account.203.sip_server.2.invite_retry_counts =
account.203.sip_server.2.only_signal_with_registered =

account.203.naptr_build =
account.203.fallback.redundancy_type =
account.203.fallback.timeout =

account.203.dns_cache_type =
account.203.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.203.anonymous_call =
account.203.reject_anonymous_call =
account.203.send_anonymous_code =
account.203.anonymous_call_oncode =
account.203.anonymous_call_offcode =
account.203.send_anonymous_rejection_code =
account.203.anonymous_reject_oncode =
account.203.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.203.codec.g722.enable =
account.203.codec.g722.priority =

account.203.codec.g729.enable =
account.203.codec.g729.priority =

account.203.codec.g726_16.enable =
account.203.codec.g726_16.priority =

account.203.codec.g726_24.enable =
account.203.codec.g726_24.priority =

account.203.codec.g726_32.enable =
account.203.codec.g726_32.priority =

account.203.codec.g726_40.enable =
account.203.codec.g726_40.priority =

account.203.codec.ilbc.enable =
account.203.codec.ilbc.priority =

account.203.codec.pcmu.enable =
account.203.codec.pcmu.priority =

account.203.codec.pcma.enable =
account.203.codec.pcma.priority =

account.203.codec.opus.enable =
account.203.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.203.nat.nat_traversal =
account.203.nat.udp_update_enable =
account.203.nat.udp_update_time =
account.203.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.203.blf.subscribe_period =
account.203.dtmf.type =
account.203.dtmf.dtmf_payload =
account.203.dtmf.info_type =
account.203.100rel_enable =
account.203.subscribe_register =
account.203.subscribe_mwi =
account.203.subscribe_mwi_expires =
account.203.subscribe_mwi_to_vm =
voice_mail.number.203 = %BWVOICE-PORTAL-NUMBER-203%
account.203.display_mwi.enable =
account.203.cid_source =
```

```

account.203.cid_source_privacy =
account.203.cid_source_ppi =
account.203.session_timer.enable =
account.203.session_timer.expires =
account.203.session_timer.refresher =
account.203.enable_user_equal_phone =
account.203.srtp_encryption =
account.203.ptime =
account.203.shared_line = %BWSHAREDLINE-BINARY-203%
account.203.register_mac =
account.203.register_line =
account.203.reg_fail_retry_interval =
account.203.reg_failed_retry_min_time =
account.203.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.203.conf_type =
account.203.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-203%

account.203.sip_server_type =
account.203.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.203.register_expires_overlap =
account.203.subscribe_expires_overlap =
account.203.auto_dial_enable =
account.203.auto_dial_num =
account.203.cp_source =
account.203.transfer_refer_to_contact_header.enable =
#V80 Add
account.203.custom_ua =
account.203.callpark_enable =
account.203.check_cseq.enable =
account.203.check_to_tag.enable =
account.203.hold_use_inactive =
account.203.line_seize.expires =
account.203.update_ack_while_dialing =
account.203.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.203.always_fwd.enable =
account.203.always_fwd.target =
account.203.always_fwd.off_code =
account.203.always_fwd.on_code =
account.203.busy_fwd.enable =

```

```

account.203.busy_fwd.target =
account.203.busy_fwd.off_code =
account.203.busy_fwd.on_code =
account.203.timeout_fwd.enable =
account.203.timeout_fwd.target =
account.203.timeout_fwd.timeout =
account.203.timeout_fwd.off_code =
account.203.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.203.dnd.enable =
account.203.dnd.on_code =
account.203.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.203.reg.enable =
handset.203.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.203.xsi.user =%BWLOGIN-ID-203%
account.203.xsi.password =%XSIPASSWORD-203%
account.203.xsi.host =%XSP_ADDRESS%
account.203.xsi.server_type =
account.203.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.203.ldap.enable =
handset.203.ldap.name_filter=
handset.203.ldap.number_filter=
handset.203.ldap.host=
handset.203.ldap.port=
handset.203.ldap.base=
handset.203.ldap.user=
handset.203.ldap.password=
handset.203.ldap.max_hits=
handset.203.ldap.name_attr=
handset.203.ldap.numb_attr=
handset.203.ldap.display_name=
handset.203.ldap.version=
handset.203.ldap.call_in_lookup=

```

```
handset.203.ldap.ldap_sort=
handset.203.ldap.tls_mode=
handset.203.ldap.call_out_lookup=
handset.203.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account204 Settings
##
#####
#####

account.204.enable=%BWLIN-BINARY-204%
account.204.label=%BWEXTENSION-204%
account.204.display_name=%BWCLID-204%
account.204.auth_name=%BWAUTHUSER-204%
account.204.user_name=%BWLINPORT-204%
account.204.password=%BWAUTHPASSWORD-204%

#W80B ADD
account.204.sip_server.template =
account.204.media_transmit.enable =

account.204.alarm.template =
account.204.alarm.server =
account.204.alarm.number =

#####
#####
##                               Failback
##
#####
#####

account.204.sip_server.1.failback_mode =
account.204.sip_server.1.failback_timeout =
account.204.sip_server.1.register_on_enable =
account.204.sip_server.1.failback_subscribe.enable =
account.204.sip_server.1.invite_retry_counts =
account.204.sip_server.1.only_signal_with_registered =

account.204.sip_server.2.failback_mode =
account.204.sip_server.2.failback_timeout =
account.204.sip_server.2.register_on_enable =
account.204.sip_server.2.failback_subscribe.enable =
account.204.sip_server.2.invite_retry_counts =
account.204.sip_server.2.only_signal_with_registered =

account.204.naptr_build =
account.204.fallback.redundancy_type =
account.204.fallback.timeout =

account.204.dns_cache_type =
account.204.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
```

```

account.204.anonymous_call =
account.204.reject_anonymous_call =
account.204.send_anonymous_code =
account.204.anonymous_call_oncode =
account.204.anonymous_call_offcode =
account.204.send_anonymous_rejection_code =
account.204.anonymous_reject_oncode =
account.204.anonymous_reject_offcode =

#####
#####
##
##                                Codec
##
#####
#####
account.204.codec.g722.enable =
account.204.codec.g722.priority =

account.204.codec.g729.enable =
account.204.codec.g729.priority =

account.204.codec.g726_16.enable =
account.204.codec.g726_16.priority =

account.204.codec.g726_24.enable =
account.204.codec.g726_24.priority =

account.204.codec.g726_32.enable =
account.204.codec.g726_32.priority =

account.204.codec.g726_40.enable =
account.204.codec.g726_40.priority =

account.204.codec.ilbc.enable =
account.204.codec.ilbc.priority =

account.204.codec.pcmu.enable =
account.204.codec.pcmu.priority =

account.204.codec.pcma.enable =
account.204.codec.pcma.priority =

account.204.codec.opus.enable =
account.204.codec.opus.priority =

#####
#####
##
##                                NAT Settings
##
#####
#####

account.204.nat.nat_traversal =
account.204.nat.udp_update_enable =
account.204.nat.udp_update_time =
account.204.nat.rport =

#####
#####
##
##                                Register Advanced
##

```



```
#####
#####

account.204.blf.subscribe_period =
account.204.dtmf.type =
account.204.dtmf.dtmf_payload =
account.204.dtmf.info_type =
account.204.100rel_enable =
account.204.subscribe_register =
account.204.subscribe_mwi =
account.204.subscribe_mwi_expires =
account.204.subscribe_mwi_to_vm =
voice_mail.number.204 = %BWVOICE-PORTAL-NUMBER-204%
account.204.display_mwi.enable =
account.204.cid_source =
account.204.cid_source_privacy =
account.204.cid_source_ppi =
account.204.session_timer.enable =
account.204.session_timer.expires =
account.204.session_timer.refreshes =
account.204.enable_user_equal_phone =
account.204.srtp_encryption =
account.204.ptime =
account.204.shared_line = %BWSHAREDLINE-BINARY-204%
account.204.register_mac =
account.204.register_line =
account.204.reg_fail_retry_interval =
account.204.reg_failed_retry_min_time =
account.204.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.204.conf_type =
account.204.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-204%

account.204.sip_server_type =
account.204.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.204.register_expires_overlap =
account.204.subscribe_expires_overlap =
account.204.auto_dial_enable =
account.204.auto_dial_num =
account.204.cp_source =
account.204.transfer_refer_to_contact_header.enable =
#V80 Add
account.204.custom_ua =
account.204.callpark_enable =
account.204.check_cseq.enable =
account.204.check_to_tag.enable =
account.204.hold_use_inactive =
```

```

account.204.line_seize.expires =
account.204.update_ack_while_dialing =
account.204.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.204.always_fwd.enable =
account.204.always_fwd.target =
account.204.always_fwd.off_code =
account.204.always_fwd.on_code =
account.204.busy_fwd.enable =
account.204.busy_fwd.target =
account.204.busy_fwd.off_code =
account.204.busy_fwd.on_code =
account.204.timeout_fwd.enable =
account.204.timeout_fwd.target =
account.204.timeout_fwd.timeout =
account.204.timeout_fwd.off_code =
account.204.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.204.dnd.enable =
account.204.dnd.on_code =
account.204.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.204.reg.enable =
handset.204.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.204.xsi.user =%BWLOGIN-ID-204%
account.204.xsi.password =%XSIPASSWORD-204%
account.204.xsi.host =%XSP_ADDRESS%
account.204.xsi.server_type =
account.204.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.204.ldap.enable =
handset.204.ldap.name_filter=
handset.204.ldap.number_filter=
handset.204.ldap.host=
handset.204.ldap.port=
handset.204.ldap.base=
handset.204.ldap.user=
handset.204.ldap.password=
handset.204.ldap.max_hits=
handset.204.ldap.name_attr=
handset.204.ldap.numb_attr=
handset.204.ldap.display_name=
handset.204.ldap.version=
handset.204.ldap.call_in_lookup=
handset.204.ldap.ldap_sort=
handset.204.ldap.tls_mode=
handset.204.ldap.call_out_lookup=
handset.204.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account205 Settings
##
#####
#####

account.205.enable=%BWLIN-BINARY-205%
account.205.label=%BWEXTENSION-205%
account.205.display_name=%BWCLID-205%
account.205.auth_name=%BWAUTHUSER-205%
account.205.user_name=%BWLINPORT-205%
account.205.password=%BWAUTHPASSWORD-205%

#W80B ADD
account.205.sip_server.template =
account.205.media_transmit.enable =

account.205.alarm.template =
account.205.alarm.server =
account.205.alarm.number =

#####
#####
##                                     Failback
##
#####
#####
account.205.sip_server.1.failback_mode =
account.205.sip_server.1.failback_timeout =
account.205.sip_server.1.register_on_enable =
account.205.sip_server.1.failback_subscribe.enable =
account.205.sip_server.1.invite_retry_counts =
account.205.sip_server.1.only_signal_with_registered =

account.205.sip_server.2.failback_mode =
account.205.sip_server.2.failback_timeout =
account.205.sip_server.2.register_on_enable =
account.205.sip_server.2.failback_subscribe.enable =
```

```
account.205.sip_server.2.invite_retry_counts =
account.205.sip_server.2.only_signal_with_registered =

account.205.naptr_build =
account.205.fallback.redundancy_type =
account.205.fallback.timeout =

account.205.dns_cache_type =
account.205.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.205.anonymous_call =
account.205.reject_anonymous_call =
account.205.send_anonymous_code =
account.205.anonymous_call_oncode =
account.205.anonymous_call_offcode =
account.205.send_anonymous_rejection_code =
account.205.anonymous_reject_oncode =
account.205.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.205.codec.g722.enable =
account.205.codec.g722.priority =

account.205.codec.g729.enable =
account.205.codec.g729.priority =

account.205.codec.g726_16.enable =
account.205.codec.g726_16.priority =

account.205.codec.g726_24.enable =
account.205.codec.g726_24.priority =

account.205.codec.g726_32.enable =
account.205.codec.g726_32.priority =

account.205.codec.g726_40.enable =
account.205.codec.g726_40.priority =

account.205.codec.ilbc.enable =
account.205.codec.ilbc.priority =

account.205.codec.pcmu.enable =
account.205.codec.pcmu.priority =

account.205.codec.pcma.enable =
account.205.codec.pcma.priority =

account.205.codec.opus.enable =
account.205.codec.opus.priority =
```

```
#####
#####
##                               NAT Settings
##
#####
#####

account.205.nat.nat_traversal =
account.205.nat.udp_update_enable =
account.205.nat.udp_update_time =
account.205.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.205.blf.subscribe_period =
account.205.dtmf.type =
account.205.dtmf.dtmf_payload =
account.205.dtmf.info_type =
account.205.100rel_enable =
account.205.subscribe_register =
account.205.subscribe_mwi =
account.205.subscribe_mwi_expires =
account.205.subscribe_mwi_to_vm =
voice_mail.number.205 = %BWVOICE-PORTAL-NUMBER-205%
account.205.display_mwi.enable =
account.205.cid_source =
account.205.cid_source_privacy =
account.205.cid_source_ppi =
account.205.session_timer.enable =
account.205.session_timer.expires =
account.205.session_timer.refresher =
account.205.enable_user_equal_phone =
account.205.srtp_encryption =
account.205.ptime =
account.205.shared_line = %BWSHAREDLINE-BINARY-205%
account.205.register_mac =
account.205.register_line =
account.205.reg_fail_retry_interval =
account.205.reg_failed_retry_min_time =
account.205.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.205.conf_type =
account.205.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-205%

account.205.sip_server_type =
account.205.unregister_on_reboot =

#####
#####
##                               Register Other
##
##
```

```
#####
#####
##DECT V81 Add

account.205.register_expires_overlap =
account.205.subscribe_expires_overlap =
account.205.auto_dial_enable =
account.205.auto_dial_num =
account.205.cp_source =
account.205.transfer_refer_to_contact_header.enable =
#V80 Add
account.205.custom_ua =
account.205.callpark_enable =
account.205.check_cseq.enable =
account.205.check_to_tag.enable =
account.205.hold_use_inactive =
account.205.line_seize.expires =
account.205.update_ack_while_dialing =
account.205.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.205.always_fwd.enable =
account.205.always_fwd.target =
account.205.always_fwd.off_code =
account.205.always_fwd.on_code =
account.205.busy_fwd.enable =
account.205.busy_fwd.target =
account.205.busy_fwd.off_code =
account.205.busy_fwd.on_code =
account.205.timeout_fwd.enable =
account.205.timeout_fwd.target =
account.205.timeout_fwd.timeout =
account.205.timeout_fwd.off_code =
account.205.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.205.dnd.enable =
account.205.dnd.on_code =
account.205.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.205.reg.enable =
handset.205.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.205.xsi.user =%BWLOGIN-ID-205%
account.205.xsi.password =%XSIPASSWORD-205%
account.205.xsi.host =%XSP_ADDRESS%
account.205.xsi.server_type =
account.205.xsi.port =

#####
#####
##          LADP
##
#####
handset.205.ldap.enable =
handset.205.ldap.name_filter=
handset.205.ldap.number_filter=
handset.205.ldap.host=
handset.205.ldap.port=
handset.205.ldap.base=
handset.205.ldap.user=
handset.205.ldap.password=
handset.205.ldap.max_hits=
handset.205.ldap.name_attr=
handset.205.ldap.numb_attr=
handset.205.ldap.display_name=
handset.205.ldap.version=
handset.205.ldap.call_in_lookup=
handset.205.ldap.ldap_sort=
handset.205.ldap.tls_mode=
handset.205.ldap.call_out_lookup=
handset.205.ldap.incoming_call_special_search.enable=

#####
#####
##          Account206 Settings
##
#####

account.206.enable=%BWLINE-BINARY-206%
account.206.label=%BWEXTENSION-206%
account.206.display_name=%BWCLID-206%
account.206.auth_name=%BWAUTHUSER-206%
account.206.user_name=%BWLINEPORT-206%
account.206.password=%BWAUTHPASSWORD-206%

#W80B ADD
account.206.sip_server.template =
account.206.media_transmit.enable =

account.206.alarm.template =
account.206.alarm.server =
account.206.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.206.sip_server.1.failback_mode =
account.206.sip_server.1.failback_timeout =
account.206.sip_server.1.register_on_enable =
account.206.sip_server.1.failback_subscribe.enable =
account.206.sip_server.1.invite_retry_counts =
account.206.sip_server.1.only_signal_with_registered =

account.206.sip_server.2.failback_mode =
account.206.sip_server.2.failback_timeout =
account.206.sip_server.2.register_on_enable =
account.206.sip_server.2.failback_subscribe.enable =
account.206.sip_server.2.invite_retry_counts =
account.206.sip_server.2.only_signal_with_registered =

account.206.naptr_build =
account.206.fallback.redundancy_type =
account.206.fallback.timeout =

account.206.dns_cache_type =
account.206.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.206.anonymous_call =
account.206.reject_anonymous_call =
account.206.send_anonymous_code =
account.206.anonymous_call_oncode =
account.206.anonymous_call_offcode =
account.206.send_anonymous_rejection_code =
account.206.anonymous_reject_oncode =
account.206.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.206.codec.g722.enable =
account.206.codec.g722.priority =

account.206.codec.g729.enable =
account.206.codec.g729.priority =

account.206.codec.g726_16.enable =
account.206.codec.g726_16.priority =

account.206.codec.g726_24.enable =
account.206.codec.g726_24.priority =

account.206.codec.g726_32.enable =
account.206.codec.g726_32.priority =
```



```

account.206.codec.g726_40.enable =
account.206.codec.g726_40.priority =

account.206.codec.ilbc.enable =
account.206.codec.ilbc.priority =

account.206.codec.pcmu.enable =
account.206.codec.pcmu.priority =

account.206.codec.pcma.enable =
account.206.codec.pcma.priority =

account.206.codec.opus.enable =
account.206.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.206.nat.nat_traversal =
account.206.nat.udp_update_enable =
account.206.nat.udp_update_time =
account.206.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.206.blf.subscribe_period =
account.206.dtmf.type =
account.206.dtmf.dtmf_payload =
account.206.dtmf.info_type =
account.206.100rel_enable =
account.206.subscribe_register =
account.206.subscribe_mwi =
account.206.subscribe_mwi_expires =
account.206.subscribe_mwi_to_vm =
voice_mail.number.206 = %BWVOICE-PORTAL-NUMBER-206%
account.206.display_mwi.enable =
account.206.cid_source =
account.206.cid_source_privacy =
account.206.cid_source_ppi =
account.206.session_timer.enable =
account.206.session_timer.expires =
account.206.session_timer.refresher =
account.206.enable_user_equal_phone =
account.206.srtp_encryption =
account.206.ptime =
account.206.shared_line = %BWSHAREDLINE-BINARY-206%
account.206.register_mac =
account.206.register_line =
account.206.reg_fail_retry_interval =
account.206.reg_failed_retry_min_time =
account.206.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.206.conf_type =
account.206.conf_uri = %BWNWORK-CONFERENCE-SIPURI-206%

account.206.sip_server_type =
account.206.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.206.register_expires_overlap =
account.206.subscribe_expires_overlap =
account.206.auto_dial_enable =
account.206.auto_dial_num =
account.206.cp_source =
account.206.transfer_refer_to_contact_header.enable =
#V80 Add
account.206.custom_ua =
account.206.callpark_enable =
account.206.check_cseq.enable =
account.206.check_to_tag.enable =
account.206.hold_use_inactive =
account.206.line_seize.expires =
account.206.update_ack_while_dialing =
account.206.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.206.always_fwd.enable =
account.206.always_fwd.target =
account.206.always_fwd.off_code =
account.206.always_fwd.on_code =
account.206.busy_fwd.enable =
account.206.busy_fwd.target =
account.206.busy_fwd.off_code =
account.206.busy_fwd.on_code =
account.206.timeout_fwd.enable =
account.206.timeout_fwd.target =
account.206.timeout_fwd.timeout =
account.206.timeout_fwd.off_code =
account.206.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```

account.206.dnd.enable =
account.206.dnd.on_code =
account.206.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.206.reg.enable =
handset.206.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.206.xsi.user =%BWLOGIN-ID-206%
account.206.xsi.password =%XSIPASSWORD-206%
account.206.xsi.host =%XSP_ADDRESS%
account.206.xsi.server_type =
account.206.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.206.ldap.enable =
handset.206.ldap.name_filter=
handset.206.ldap.number_filter=
handset.206.ldap.host=
handset.206.ldap.port=
handset.206.ldap.base=
handset.206.ldap.user=
handset.206.ldap.password=
handset.206.ldap.max_hits=
handset.206.ldap.name_attr=
handset.206.ldap.numb_attr=
handset.206.ldap.display_name=
handset.206.ldap.version=
handset.206.ldap.call_in_lookup=
handset.206.ldap.ldap_sort=
handset.206.ldap.tls_mode=
handset.206.ldap.call_out_lookup=
handset.206.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account207 Settings
##
#####
#####

```

```

account.207.enable=%BWLIN-BINARY-207%
account.207.label=%BWEXTENSION-207%
account.207.display_name=%BWCLID-207%
account.207.auth_name=%BWAUTHUSER-207%
account.207.user_name=%BWLINPORT-207%
account.207.password=%BWAUTHPASSWORD-207%

#W80B ADD
account.207.sip_server.template =
account.207.media_transmit.enable =

account.207.alarm.template =
account.207.alarm.server =
account.207.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.207.sip_server.1.failback_mode =
account.207.sip_server.1.failback_timeout =
account.207.sip_server.1.register_on_enable =
account.207.sip_server.1.failback_subscribe.enable =
account.207.sip_server.1.invite_retry_counts =
account.207.sip_server.1.only_signal_with_registered =

account.207.sip_server.2.failback_mode =
account.207.sip_server.2.failback_timeout =
account.207.sip_server.2.register_on_enable =
account.207.sip_server.2.failback_subscribe.enable =
account.207.sip_server.2.invite_retry_counts =
account.207.sip_server.2.only_signal_with_registered =

account.207.naptr_build =
account.207.fallback.redundancy_type =
account.207.fallback.timeout =

account.207.dns_cache_type =
account.207.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.207.anonymous_call =
account.207.reject_anonymous_call =
account.207.send_anonymous_code =
account.207.anonymous_call_oncode =
account.207.anonymous_call_offcode =
account.207.send_anonymous_rejection_code =
account.207.anonymous_reject_oncode =
account.207.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.207.codec.g722.enable =
account.207.codec.g722.priority =

account.207.codec.g729.enable =
account.207.codec.g729.priority =

account.207.codec.g726_16.enable =
account.207.codec.g726_16.priority =

account.207.codec.g726_24.enable =
account.207.codec.g726_24.priority =

account.207.codec.g726_32.enable =
account.207.codec.g726_32.priority =

account.207.codec.g726_40.enable =
account.207.codec.g726_40.priority =

account.207.codec.ilbc.enable =
account.207.codec.ilbc.priority =

account.207.codec.pcmu.enable =
account.207.codec.pcmu.priority =

account.207.codec.pcma.enable =
account.207.codec.pcma.priority =

account.207.codec.opus.enable =
account.207.codec.opus.priority =

#####
#####
##                                NAT Settings
##
#####
#####

account.207.nat.nat_traversal =
account.207.nat.udp_update_enable =
account.207.nat.udp_update_time =
account.207.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.207.blf.subscribe_period =
account.207.dtmf.type =
account.207.dtmf.dtmf_payload =
account.207.dtmf.info_type =
account.207.100rel_enable =
account.207.subscribe_register =
account.207.subscribe_mwi =
account.207.subscribe_mwi_expires =
account.207.subscribe_mwi_to_vm =
voice_mail.number.207 = %BWVOICE-PORTAL-NUMBER-207%
account.207.display_mwi.enable =
account.207.cid_source =
```

```

account.207.cid_source_privacy =
account.207.cid_source_ppi =
account.207.session_timer.enable =
account.207.session_timer.expires =
account.207.session_timer.refresher =
account.207.enable_user_equal_phone =
account.207.srtp_encryption =
account.207.ptime =
account.207.shared_line = %BWSHAREDLINE-BINARY-207%
account.207.register_mac =
account.207.register_line =
account.207.reg_fail_retry_interval =
account.207.reg_failed_retry_min_time =
account.207.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.207.conf_type =
account.207.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-207%

account.207.sip_server_type =
account.207.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.207.register_expires_overlap =
account.207.subscribe_expires_overlap =
account.207.auto_dial_enable =
account.207.auto_dial_num =
account.207.cp_source =
account.207.transfer_refer_to_contact_header.enable =
#V80 Add
account.207.custom_ua =
account.207.callpark_enable =
account.207.check_cseq.enable =
account.207.check_to_tag.enable =
account.207.hold_use_inactive =
account.207.line_seize.expires =
account.207.update_ack_while_dialing =
account.207.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.207.always_fwd.enable =
account.207.always_fwd.target =
account.207.always_fwd.off_code =
account.207.always_fwd.on_code =
account.207.busy_fwd.enable =

```

```

account.207.busy_fwd.target =
account.207.busy_fwd.off_code =
account.207.busy_fwd.on_code =
account.207.timeout_fwd.enable =
account.207.timeout_fwd.target =
account.207.timeout_fwd.timeout =
account.207.timeout_fwd.off_code =
account.207.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.207.dnd.enable =
account.207.dnd.on_code =
account.207.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.207.reg.enable =
handset.207.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.207.xsi.user =%BWLOGIN-ID-207%
account.207.xsi.password =%XSIPASSWORD-207%
account.207.xsi.host =%XSP_ADDRESS%
account.207.xsi.server_type =
account.207.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.207.ldap.enable =
handset.207.ldap.name_filter=
handset.207.ldap.number_filter=
handset.207.ldap.host=
handset.207.ldap.port=
handset.207.ldap.base=
handset.207.ldap.user=
handset.207.ldap.password=
handset.207.ldap.max_hits=
handset.207.ldap.name_attr=
handset.207.ldap.numb_attr=
handset.207.ldap.display_name=
handset.207.ldap.version=
handset.207.ldap.call_in_lookup=

```

```
handset.207.ldap.ldap_sort=
handset.207.ldap.tls_mode=
handset.207.ldap.call_out_lookup=
handset.207.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account208 Settings
##
#####
#####

account.208.enable=%BWLIN-BINARY-208%
account.208.label=%BWEXTENSION-208%
account.208.display_name=%BWCLID-208%
account.208.auth_name=%BWAUTHUSER-208%
account.208.user_name=%BWLINPORT-208%
account.208.password=%BWAUTHPASSWORD-208%

#W80B ADD
account.208.sip_server.template =
account.208.media_transmit.enable =

account.208.alarm.template =
account.208.alarm.server =
account.208.alarm.number =

#####
#####
##                               Failback
##
#####
#####

account.208.sip_server.1.failback_mode =
account.208.sip_server.1.failback_timeout =
account.208.sip_server.1.register_on_enable =
account.208.sip_server.1.failback_subscribe.enable =
account.208.sip_server.1.invite_retry_counts =
account.208.sip_server.1.only_signal_with_registered =

account.208.sip_server.2.failback_mode =
account.208.sip_server.2.failback_timeout =
account.208.sip_server.2.register_on_enable =
account.208.sip_server.2.failback_subscribe.enable =
account.208.sip_server.2.invite_retry_counts =
account.208.sip_server.2.only_signal_with_registered =

account.208.naptr_build =
account.208.fallback.redundancy_type =
account.208.fallback.timeout =

account.208.dns_cache_type =
account.208.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
```



```

account.208.anonymous_call =
account.208.reject_anonymous_call =
account.208.send_anonymous_code =
account.208.anonymous_call_oncode =
account.208.anonymous_call_offcode =
account.208.send_anonymous_rejection_code =
account.208.anonymous_reject_oncode =
account.208.anonymous_reject_offcode =

#####
#####
##
##                                Codec
##
#####
#####
account.208.codec.g722.enable =
account.208.codec.g722.priority =

account.208.codec.g729.enable =
account.208.codec.g729.priority =

account.208.codec.g726_16.enable =
account.208.codec.g726_16.priority =

account.208.codec.g726_24.enable =
account.208.codec.g726_24.priority =

account.208.codec.g726_32.enable =
account.208.codec.g726_32.priority =

account.208.codec.g726_40.enable =
account.208.codec.g726_40.priority =

account.208.codec.ilbc.enable =
account.208.codec.ilbc.priority =

account.208.codec.pcmu.enable =
account.208.codec.pcmu.priority =

account.208.codec.pcma.enable =
account.208.codec.pcma.priority =

account.208.codec.opus.enable =
account.208.codec.opus.priority =

#####
#####
##
##                                NAT Settings
##
#####
#####

account.208.nat.nat_traversal =
account.208.nat.udp_update_enable =
account.208.nat.udp_update_time =
account.208.nat.rport =

#####
#####
##
##                                Register Advanced
##

```

```
#####
#####

account.208.blf.subscribe_period =
account.208.dtmf.type =
account.208.dtmf.dtmf_payload =
account.208.dtmf.info_type =
account.208.100rel_enable =
account.208.subscribe_register =
account.208.subscribe_mwi =
account.208.subscribe_mwi_expires =
account.208.subscribe_mwi_to_vm =
voice_mail.number.208 = %BWVOICE-PORTAL-NUMBER-208%
account.208.display_mwi.enable =
account.208.cid_source =
account.208.cid_source_privacy =
account.208.cid_source_ppi =
account.208.session_timer.enable =
account.208.session_timer.expires =
account.208.session_timer.refresher =
account.208.enable_user_equal_phone =
account.208.srtp_encryption =
account.208.ptime =
account.208.shared_line = %BWSHAREDLINE-BINARY-208%
account.208.register_mac =
account.208.register_line =
account.208.reg_fail_retry_interval =
account.208.reg_failed_retry_min_time =
account.208.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.208.conf_type =
account.208.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-208%

account.208.sip_server_type =
account.208.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.208.register_expires_overlap =
account.208.subscribe_expires_overlap =
account.208.auto_dial_enable =
account.208.auto_dial_num =
account.208.cp_source =
account.208.transfer_refer_to_contact_header.enable =
#V80 Add
account.208.custom_ua =
account.208.callpark_enable =
account.208.check_cseq.enable =
account.208.check_to_tag.enable =
account.208.hold_use_inactive =
```

```

account.208.line_seize.expires =
account.208.update_ack_while_dialing =
account.208.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.208.always_fwd.enable =
account.208.always_fwd.target =
account.208.always_fwd.off_code =
account.208.always_fwd.on_code =
account.208.busy_fwd.enable =
account.208.busy_fwd.target =
account.208.busy_fwd.off_code =
account.208.busy_fwd.on_code =
account.208.timeout_fwd.enable =
account.208.timeout_fwd.target =
account.208.timeout_fwd.timeout =
account.208.timeout_fwd.off_code =
account.208.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.208.dnd.enable =
account.208.dnd.on_code =
account.208.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.208.reg.enable =
handset.208.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.208.xsi.user =%BWLOGIN-ID-208%
account.208.xsi.password =%XSIPASSWORD-208%
account.208.xsi.host =%XSP_ADDRESS%
account.208.xsi.server_type =
account.208.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.208.ldap.enable =
handset.208.ldap.name_filter=
handset.208.ldap.number_filter=
handset.208.ldap.host=
handset.208.ldap.port=
handset.208.ldap.base=
handset.208.ldap.user=
handset.208.ldap.password=
handset.208.ldap.max_hits=
handset.208.ldap.name_attr=
handset.208.ldap.numb_attr=
handset.208.ldap.display_name=
handset.208.ldap.version=
handset.208.ldap.call_in_lookup=
handset.208.ldap.ldap_sort=
handset.208.ldap.tls_mode=
handset.208.ldap.call_out_lookup=
handset.208.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account209 Settings
##
#####
#####

account.209.enable=%BWLIN-BINARY-209%
account.209.label=%BWEXTENSION-209%
account.209.display_name=%BWCLID-209%
account.209.auth_name=%BWAUTHUSER-209%
account.209.user_name=%BWLINPORT-209%
account.209.password=%BWAUTHPASSWORD-209%

#W80B ADD
account.209.sip_server.template =
account.209.media_transmit.enable =

account.209.alarm.template =
account.209.alarm.server =
account.209.alarm.number =

#####
#####
##                                     Failback
##
#####
#####
account.209.sip_server.1.failback_mode =
account.209.sip_server.1.failback_timeout =
account.209.sip_server.1.register_on_enable =
account.209.sip_server.1.failback_subscribe.enable =
account.209.sip_server.1.invite_retry_counts =
account.209.sip_server.1.only_signal_with_registered =

account.209.sip_server.2.failback_mode =
account.209.sip_server.2.failback_timeout =
account.209.sip_server.2.register_on_enable =
account.209.sip_server.2.failback_subscribe.enable =
```

```

account.209.sip_server.2.invite_retry_counts =
account.209.sip_server.2.only_signal_with_registered =

account.209.naptr_build =
account.209.fallback.redundancy_type =
account.209.fallback.timeout =

account.209.dns_cache_type =
account.209.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.209.anonymous_call =
account.209.reject_anonymous_call =
account.209.send_anonymous_code =
account.209.anonymous_call_oncode =
account.209.anonymous_call_offcode =
account.209.send_anonymous_rejection_code =
account.209.anonymous_reject_oncode =
account.209.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.209.codec.g722.enable =
account.209.codec.g722.priority =

account.209.codec.g729.enable =
account.209.codec.g729.priority =

account.209.codec.g726_16.enable =
account.209.codec.g726_16.priority =

account.209.codec.g726_24.enable =
account.209.codec.g726_24.priority =

account.209.codec.g726_32.enable =
account.209.codec.g726_32.priority =

account.209.codec.g726_40.enable =
account.209.codec.g726_40.priority =

account.209.codec.ilbc.enable =
account.209.codec.ilbc.priority =

account.209.codec.pcmu.enable =
account.209.codec.pcmu.priority =

account.209.codec.pcma.enable =
account.209.codec.pcma.priority =

account.209.codec.opus.enable =
account.209.codec.opus.priority =

```

```
#####
#####
##                                     NAT Settings
##
#####
#####

account.209.nat.nat_traversal =
account.209.nat.udp_update_enable =
account.209.nat.udp_update_time =
account.209.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.209.blf.subscribe_period =
account.209.dtmf.type =
account.209.dtmf.dtmf_payload =
account.209.dtmf.info_type =
account.209.100rel_enable =
account.209.subscribe_register =
account.209.subscribe_mwi =
account.209.subscribe_mwi_expires =
account.209.subscribe_mwi_to_vm =
voice_mail.number.209 = %BWVOICE-PORTAL-NUMBER-209%
account.209.display_mwi.enable =
account.209.cid_source =
account.209.cid_source_privacy =
account.209.cid_source_ppi =
account.209.session_timer.enable =
account.209.session_timer.expires =
account.209.session_timer.refresher =
account.209.enable_user_equal_phone =
account.209.srtp_encryption =
account.209.ptime =
account.209.shared_line = %BWSHAREDLINE-BINARY-209%
account.209.register_mac =
account.209.register_line =
account.209.reg_fail_retry_interval =
account.209.reg_failed_retry_min_time =
account.209.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####

account.209.conf_type =
account.209.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-209%

account.209.sip_server_type =
account.209.unregister_on_reboot =

#####
#####
##                                     Register Other
##
```

```
#####
#####
##DECT V81 Add

account.209.register_expires_overlap =
account.209.subscribe_expires_overlap =
account.209.auto_dial_enable =
account.209.auto_dial_num =
account.209.cp_source =
account.209.transfer_refer_to_contact_header.enable =
#V80 Add
account.209.custom_ua =
account.209.callpark_enable =
account.209.check_cseq.enable =
account.209.check_to_tag.enable =
account.209.hold_use_inactive =
account.209.line_seize.expires =
account.209.update_ack_while_dialing =
account.209.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.209.always_fwd.enable =
account.209.always_fwd.target =
account.209.always_fwd.off_code =
account.209.always_fwd.on_code =
account.209.busy_fwd.enable =
account.209.busy_fwd.target =
account.209.busy_fwd.off_code =
account.209.busy_fwd.on_code =
account.209.timeout_fwd.enable =
account.209.timeout_fwd.target =
account.209.timeout_fwd.timeout =
account.209.timeout_fwd.off_code =
account.209.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.209.dnd.enable =
account.209.dnd.on_code =
account.209.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.209.reg.enable =
handset.209.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.209.xsi.user =%BWLOGIN-ID-209%
account.209.xsi.password =%XSIPASSWORD-209%
account.209.xsi.host =%XSP_ADDRESS%
account.209.xsi.server_type =
account.209.xsi.port =

#####
#####
##          LADP
##
#####
handset.209.ldap.enable =
handset.209.ldap.name_filter=
handset.209.ldap.number_filter=
handset.209.ldap.host=
handset.209.ldap.port=
handset.209.ldap.base=
handset.209.ldap.user=
handset.209.ldap.password=
handset.209.ldap.max_hits=
handset.209.ldap.name_attr=
handset.209.ldap.numb_attr=
handset.209.ldap.display_name=
handset.209.ldap.version=
handset.209.ldap.call_in_lookup=
handset.209.ldap.ldap_sort=
handset.209.ldap.tls_mode=
handset.209.ldap.call_out_lookup=
handset.209.ldap.incoming_call_special_search.enable=

#####
#####
##          Account210 Settings
##
#####

account.210.enable=%BWLINE-BINARY-210%
account.210.label=%BWEXTENSION-210%
account.210.display_name=%BWCLID-210%
account.210.auth_name=%BWAUTHUSER-210%
account.210.user_name=%BWLINEPORT-210%
account.210.password=%BWAUTHPASSWORD-210%

#W80B ADD
account.210.sip_server.template =
account.210.media_transmit.enable =

account.210.alarm.template =
account.210.alarm.server =
account.210.alarm.number =

```



```
#####
#####
##                               Failback
##
#####
#####
account.210.sip_server.1.failback_mode =
account.210.sip_server.1.failback_timeout =
account.210.sip_server.1.register_on_enable =
account.210.sip_server.1.failback_subscribe.enable =
account.210.sip_server.1.invite_retry_counts =
account.210.sip_server.1.only_signal_with_registered =

account.210.sip_server.2.failback_mode =
account.210.sip_server.2.failback_timeout =
account.210.sip_server.2.register_on_enable =
account.210.sip_server.2.failback_subscribe.enable =
account.210.sip_server.2.invite_retry_counts =
account.210.sip_server.2.only_signal_with_registered =

account.210.naptr_build =
account.210.fallback.redundancy_type =
account.210.fallback.timeout =

account.210.dns_cache_type =
account.210.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.210.anonymous_call =
account.210.reject_anonymous_call =
account.210.send_anonymous_code =
account.210.anonymous_call_oncode =
account.210.anonymous_call_offcode =
account.210.send_anonymous_rejection_code =
account.210.anonymous_reject_oncode =
account.210.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.210.codec.g722.enable =
account.210.codec.g722.priority =

account.210.codec.g729.enable =
account.210.codec.g729.priority =

account.210.codec.g726_16.enable =
account.210.codec.g726_16.priority =

account.210.codec.g726_24.enable =
account.210.codec.g726_24.priority =

account.210.codec.g726_32.enable =
account.210.codec.g726_32.priority =
```

```

account.210.codec.g726_40.enable =
account.210.codec.g726_40.priority =

account.210.codec.ilbc.enable =
account.210.codec.ilbc.priority =

account.210.codec.pcmu.enable =
account.210.codec.pcmu.priority =

account.210.codec.pcma.enable =
account.210.codec.pcma.priority =

account.210.codec.opus.enable =
account.210.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.210.nat.nat_traversal =
account.210.nat.udp_update_enable =
account.210.nat.udp_update_time =
account.210.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.210.blf.subscribe_period =
account.210.dtmf.type =
account.210.dtmf.dtmf_payload =
account.210.dtmf.info_type =
account.210.100rel_enable =
account.210.subscribe_register =
account.210.subscribe_mwi =
account.210.subscribe_mwi_expires =
account.210.subscribe_mwi_to_vm =
voice_mail.number.210 = %BWVOICE-PORTAL-NUMBER-210%
account.210.display_mwi.enable =
account.210.cid_source =
account.210.cid_source_privacy =
account.210.cid_source_ppi =
account.210.session_timer.enable =
account.210.session_timer.expires =
account.210.session_timer.refresher =
account.210.enable_user_equal_phone =
account.210.srtp_encryption =
account.210.ptime =
account.210.shared_line = %BWSHAREDLINE-BINARY-210%
account.210.register_mac =
account.210.register_line =
account.210.reg_fail_retry_interval =
account.210.reg_failed_retry_min_time =
account.210.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.210.conf_type =
account.210.conf_uri = %BWNWORK-CONFERENCE-SIPURI-210%

account.210.sip_server_type =
account.210.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.210.register_expires_overlap =
account.210.subscribe_expires_overlap =
account.210.auto_dial_enable =
account.210.auto_dial_num =
account.210.cp_source =
account.210.transfer_refer_to_contact_header.enable =
#V80 Add
account.210.custom_ua =
account.210.callpark_enable =
account.210.check_cseq.enable =
account.210.check_to_tag.enable =
account.210.hold_use_inactive =
account.210.line_seize.expires =
account.210.update_ack_while_dialing =
account.210.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.210.always_fwd.enable =
account.210.always_fwd.target =
account.210.always_fwd.off_code =
account.210.always_fwd.on_code =
account.210.busy_fwd.enable =
account.210.busy_fwd.target =
account.210.busy_fwd.off_code =
account.210.busy_fwd.on_code =
account.210.timeout_fwd.enable =
account.210.timeout_fwd.target =
account.210.timeout_fwd.timeout =
account.210.timeout_fwd.off_code =
account.210.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```
account.210.dnd.enable =
account.210.dnd.on_code =
account.210.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.210.reg.enable =
handset.210.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####

account.210.xsi.user =%BWLOGIN-ID-210%
account.210.xsi.password =%XSIPASSWORD-210%
account.210.xsi.host =%XSP_ADDRESS%
account.210.xsi.server_type =
account.210.xsi.port =

#####
#####
##                               LADP
##
#####
#####
handset.210.ldap.enable =
handset.210.ldap.name_filter=
handset.210.ldap.number_filter=
handset.210.ldap.host=
handset.210.ldap.port=
handset.210.ldap.base=
handset.210.ldap.user=
handset.210.ldap.password=
handset.210.ldap.max_hits=
handset.210.ldap.name_attr=
handset.210.ldap.numb_attr=
handset.210.ldap.display_name=
handset.210.ldap.version=
handset.210.ldap.call_in_lookup=
handset.210.ldap.ldap_sort=
handset.210.ldap.tls_mode=
handset.210.ldap.call_out_lookup=
handset.210.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account211 Settings
##
#####
#####
```

```

account.211.enable=%BWLIN-BINARY-211%
account.211.label=%BWEXTENSION-211%
account.211.display_name=%BWCLID-211%
account.211.auth_name=%BWAUTHUSER-211%
account.211.user_name=%BWLINPORT-211%
account.211.password=%BWAUTHPASSWORD-211%

#W80B ADD
account.211.sip_server.template =
account.211.media_transmit.enable =

account.211.alarm.template =
account.211.alarm.server =
account.211.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.211.sip_server.1.failback_mode =
account.211.sip_server.1.failback_timeout =
account.211.sip_server.1.register_on_enable =
account.211.sip_server.1.failback_subscribe.enable =
account.211.sip_server.1.invite_retry_counts =
account.211.sip_server.1.only_signal_with_registered =

account.211.sip_server.2.failback_mode =
account.211.sip_server.2.failback_timeout =
account.211.sip_server.2.register_on_enable =
account.211.sip_server.2.failback_subscribe.enable =
account.211.sip_server.2.invite_retry_counts =
account.211.sip_server.2.only_signal_with_registered =

account.211.naptr_build =
account.211.fallback.redundancy_type =
account.211.fallback.timeout =

account.211.dns_cache_type =
account.211.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.211.anonymous_call =
account.211.reject_anonymous_call =
account.211.send_anonymous_code =
account.211.anonymous_call_oncode =
account.211.anonymous_call_offcode =
account.211.send_anonymous_rejection_code =
account.211.anonymous_reject_oncode =
account.211.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.211.codec.g722.enable =
account.211.codec.g722.priority =

account.211.codec.g729.enable =
account.211.codec.g729.priority =

account.211.codec.g726_16.enable =
account.211.codec.g726_16.priority =

account.211.codec.g726_24.enable =
account.211.codec.g726_24.priority =

account.211.codec.g726_32.enable =
account.211.codec.g726_32.priority =

account.211.codec.g726_40.enable =
account.211.codec.g726_40.priority =

account.211.codec.ilbc.enable =
account.211.codec.ilbc.priority =

account.211.codec.pcmu.enable =
account.211.codec.pcmu.priority =

account.211.codec.pcma.enable =
account.211.codec.pcma.priority =

account.211.codec.opus.enable =
account.211.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.211.nat.nat_traversal =
account.211.nat.udp_update_enable =
account.211.nat.udp_update_time =
account.211.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.211.blf.subscribe_period =
account.211.dtmf.type =
account.211.dtmf.dtmf_payload =
account.211.dtmf.info_type =
account.211.100rel_enable =
account.211.subscribe_register =
account.211.subscribe_mwi =
account.211.subscribe_mwi_expires =
account.211.subscribe_mwi_to_vm =
voice_mail.number.211 = %BWVOICE-PORTAL-NUMBER-211%
account.211.display_mwi.enable =
account.211.cid_source =
```

```

account.211.cid_source_privacy =
account.211.cid_source_ppi =
account.211.session_timer.enable =
account.211.session_timer.expires =
account.211.session_timer.refresher =
account.211.enable_user_equal_phone =
account.211.srtp_encryption =
account.211.ptime =
account.211.shared_line = %BWSHAREDLINE-BINARY-211%
account.211.register_mac =
account.211.register_line =
account.211.reg_fail_retry_interval =
account.211.reg_failed_retry_min_time =
account.211.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.211.conf_type =
account.211.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-211%

account.211.sip_server_type =
account.211.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.211.register_expires_overlap =
account.211.subscribe_expires_overlap =
account.211.auto_dial_enable =
account.211.auto_dial_num =
account.211.cp_source =
account.211.transfer_refer_to_contact_header.enable =
#V80 Add
account.211.custom_ua =
account.211.callpark_enable =
account.211.check_cseq.enable =
account.211.check_to_tag.enable =
account.211.hold_use_inactive =
account.211.line_seize.expires =
account.211.update_ack_while_dialing =
account.211.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.211.always_fwd.enable =
account.211.always_fwd.target =
account.211.always_fwd.off_code =
account.211.always_fwd.on_code =
account.211.busy_fwd.enable =

```

```

account.211.busy_fwd.target =
account.211.busy_fwd.off_code =
account.211.busy_fwd.on_code =
account.211.timeout_fwd.enable =
account.211.timeout_fwd.target =
account.211.timeout_fwd.timeout =
account.211.timeout_fwd.off_code =
account.211.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.211.dnd.enable =
account.211.dnd.on_code =
account.211.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.211.reg.enable =
handset.211.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.211.xsi.user =%BWLOGIN-ID-211%
account.211.xsi.password =%XSIPASSWORD-211%
account.211.xsi.host =%XSP_ADDRESS%
account.211.xsi.server_type =
account.211.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.211.ldap.enable =
handset.211.ldap.name_filter=
handset.211.ldap.number_filter=
handset.211.ldap.host=
handset.211.ldap.port=
handset.211.ldap.base=
handset.211.ldap.user=
handset.211.ldap.password=
handset.211.ldap.max_hits=
handset.211.ldap.name_attr=
handset.211.ldap.numb_attr=
handset.211.ldap.display_name=
handset.211.ldap.version=
handset.211.ldap.call_in_lookup=

```



```

handset.211.ldap.ldap_sort=
handset.211.ldap.tls_mode=
handset.211.ldap.call_out_lookup=
handset.211.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account212 Settings
##
#####
#####

account.212.enable=%BWLIN-BINARY-212%
account.212.label=%BWEXTENSION-212%
account.212.display_name=%BWCLID-212%
account.212.auth_name=%BWAUTHUSER-212%
account.212.user_name=%BWLINPORT-212%
account.212.password=%BWAUTHPASSWORD-212%

#W80B ADD
account.212.sip_server.template =
account.212.media_transmit.enable =

account.212.alarm.template =
account.212.alarm.server =
account.212.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.212.sip_server.1.failback_mode =
account.212.sip_server.1.failback_timeout =
account.212.sip_server.1.register_on_enable =
account.212.sip_server.1.failback_subscribe.enable =
account.212.sip_server.1.invite_retry_counts =
account.212.sip_server.1.only_signal_with_registered =

account.212.sip_server.2.failback_mode =
account.212.sip_server.2.failback_timeout =
account.212.sip_server.2.register_on_enable =
account.212.sip_server.2.failback_subscribe.enable =
account.212.sip_server.2.invite_retry_counts =
account.212.sip_server.2.only_signal_with_registered =

account.212.naptr_build =
account.212.fallback.redundancy_type =
account.212.fallback.timeout =

account.212.dns_cache_type =
account.212.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####

```

```
account.212.anonymous_call =
account.212.reject_anonymous_call =
account.212.send_anonymous_code =
account.212.anonymous_call_oncode =
account.212.anonymous_call_offcode =
account.212.send_anonymous_rejection_code =
account.212.anonymous_reject_oncode =
account.212.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.212.codec.g722.enable =
account.212.codec.g722.priority =

account.212.codec.g729.enable =
account.212.codec.g729.priority =

account.212.codec.g726_16.enable =
account.212.codec.g726_16.priority =

account.212.codec.g726_24.enable =
account.212.codec.g726_24.priority =

account.212.codec.g726_32.enable =
account.212.codec.g726_32.priority =

account.212.codec.g726_40.enable =
account.212.codec.g726_40.priority =

account.212.codec.ilbc.enable =
account.212.codec.ilbc.priority =

account.212.codec.pcmu.enable =
account.212.codec.pcmu.priority =

account.212.codec.pcma.enable =
account.212.codec.pcma.priority =

account.212.codec.opus.enable =
account.212.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
##
#####
#####

account.212.nat.nat_traversal =
account.212.nat.udp_update_enable =
account.212.nat.udp_update_time =
account.212.nat.rport =

#####
#####
##                                     Register Advanced
##
##
```

```
#####
#####

account.212.blf.subscribe_period =
account.212.dtmf.type =
account.212.dtmf.dtmf_payload =
account.212.dtmf.info_type =
account.212.100rel_enable =
account.212.subscribe_register =
account.212.subscribe_mwi =
account.212.subscribe_mwi_expires =
account.212.subscribe_mwi_to_vm =
voice_mail.number.212 = %BWVOICE-PORTAL-NUMBER-212%
account.212.display_mwi.enable =
account.212.cid_source =
account.212.cid_source_privacy =
account.212.cid_source_ppi =
account.212.session_timer.enable =
account.212.session_timer.expires =
account.212.session_timer.refreshes =
account.212.enable_user_equal_phone =
account.212.srtp_encryption =
account.212.ptime =
account.212.shared_line = %BWSHAREDLINE-BINARY-212%
account.212.register_mac =
account.212.register_line =
account.212.reg_fail_retry_interval =
account.212.reg_failed_retry_min_time =
account.212.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.212.conf_type =
account.212.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-212%

account.212.sip_server_type =
account.212.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.212.register_expires_overlap =
account.212.subscribe_expires_overlap =
account.212.auto_dial_enable =
account.212.auto_dial_num =
account.212.cp_source =
account.212.transfer_refer_to_contact_header.enable =
#V80 Add
account.212.custom_ua =
account.212.callpark_enable =
account.212.check_cseq.enable =
account.212.check_to_tag.enable =
account.212.hold_use_inactive =
```

```

account.212.line_seize.expires =
account.212.update_ack_while_dialing =
account.212.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.212.always_fwd.enable =
account.212.always_fwd.target =
account.212.always_fwd.off_code =
account.212.always_fwd.on_code =
account.212.busy_fwd.enable =
account.212.busy_fwd.target =
account.212.busy_fwd.off_code =
account.212.busy_fwd.on_code =
account.212.timeout_fwd.enable =
account.212.timeout_fwd.target =
account.212.timeout_fwd.timeout =
account.212.timeout_fwd.off_code =
account.212.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.212.dnd.enable =
account.212.dnd.on_code =
account.212.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.212.reg.enable =
handset.212.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.212.xsi.user =%BWLOGIN-ID-212%
account.212.xsi.password =%XSIPASSWORD-212%
account.212.xsi.host =%XSP_ADDRESS%
account.212.xsi.server_type =
account.212.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.212.ldap.enable =
handset.212.ldap.name_filter=
handset.212.ldap.number_filter=
handset.212.ldap.host=
handset.212.ldap.port=
handset.212.ldap.base=
handset.212.ldap.user=
handset.212.ldap.password=
handset.212.ldap.max_hits=
handset.212.ldap.name_attr=
handset.212.ldap.numb_attr=
handset.212.ldap.display_name=
handset.212.ldap.version=
handset.212.ldap.call_in_lookup=
handset.212.ldap.ldap_sort=
handset.212.ldap.tls_mode=
handset.212.ldap.call_out_lookup=
handset.212.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account213 Settings
##
#####
#####

account.213.enable=%BWLIN-BINARY-213%
account.213.label=%BWEXTENSION-213%
account.213.display_name=%BWCLID-213%
account.213.auth_name=%BWAUTHUSER-213%
account.213.user_name=%BWLINPORT-213%
account.213.password=%BWAUTHPASSWORD-213%

#W80B ADD
account.213.sip_server.template =
account.213.media_transmit.enable =

account.213.alarm.template =
account.213.alarm.server =
account.213.alarm.number =

#####
#####
##                                     Failback
##
#####
#####
account.213.sip_server.1.failback_mode =
account.213.sip_server.1.failback_timeout =
account.213.sip_server.1.register_on_enable =
account.213.sip_server.1.failback_subscribe.enable =
account.213.sip_server.1.invite_retry_counts =
account.213.sip_server.1.only_signal_with_registered =

account.213.sip_server.2.failback_mode =
account.213.sip_server.2.failback_timeout =
account.213.sip_server.2.register_on_enable =
account.213.sip_server.2.failback_subscribe.enable =
```

```

account.213.sip_server.2.invite_retry_counts =
account.213.sip_server.2.only_signal_with_registered =

account.213.naptr_build =
account.213.fallback.redundancy_type =
account.213.fallback.timeout =

account.213.dns_cache_type =
account.213.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.213.anonymous_call =
account.213.reject_anonymous_call =
account.213.send_anonymous_code =
account.213.anonymous_call_oncode =
account.213.anonymous_call_offcode =
account.213.send_anonymous_rejection_code =
account.213.anonymous_reject_oncode =
account.213.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.213.codec.g722.enable =
account.213.codec.g722.priority =

account.213.codec.g729.enable =
account.213.codec.g729.priority =

account.213.codec.g726_16.enable =
account.213.codec.g726_16.priority =

account.213.codec.g726_24.enable =
account.213.codec.g726_24.priority =

account.213.codec.g726_32.enable =
account.213.codec.g726_32.priority =

account.213.codec.g726_40.enable =
account.213.codec.g726_40.priority =

account.213.codec.ilbc.enable =
account.213.codec.ilbc.priority =

account.213.codec.pcmu.enable =
account.213.codec.pcmu.priority =

account.213.codec.pcma.enable =
account.213.codec.pcma.priority =

account.213.codec.opus.enable =
account.213.codec.opus.priority =

```

```
#####
#####
##                               NAT Settings
##
#####
#####

account.213.nat.nat_traversal =
account.213.nat.udp_update_enable =
account.213.nat.udp_update_time =
account.213.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.213.blf.subscribe_period =
account.213.dtmf.type =
account.213.dtmf.dtmf_payload =
account.213.dtmf.info_type =
account.213.100rel_enable =
account.213.subscribe_register =
account.213.subscribe_mwi =
account.213.subscribe_mwi_expires =
account.213.subscribe_mwi_to_vm =
voice_mail.number.213 = %BWVOICE-PORTAL-NUMBER-213%
account.213.display_mwi.enable =
account.213.cid_source =
account.213.cid_source_privacy =
account.213.cid_source_ppi =
account.213.session_timer.enable =
account.213.session_timer.expires =
account.213.session_timer.refresher =
account.213.enable_user_equal_phone =
account.213.srtp_encryption =
account.213.ptime =
account.213.shared_line = %BWSHAREDLINE-BINARY-213%
account.213.register_mac =
account.213.register_line =
account.213.reg_fail_retry_interval =
account.213.reg_failed_retry_min_time =
account.213.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.213.conf_type =
account.213.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-213%

account.213.sip_server_type =
account.213.unregister_on_reboot =

#####
#####
##                               Register Other
##
```

```
#####
#####
##DECT V81 Add

account.213.register_expires_overlap =
account.213.subscribe_expires_overlap =
account.213.auto_dial_enable =
account.213.auto_dial_num =
account.213.cp_source =
account.213.transfer_refer_to_contact_header.enable =
#V80 Add
account.213.custom_ua =
account.213.callpark_enable =
account.213.check_cseq.enable =
account.213.check_to_tag.enable =
account.213.hold_use_inactive =
account.213.line_seize.expires =
account.213.update_ack_while_dialing =
account.213.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.213.always_fwd.enable =
account.213.always_fwd.target =
account.213.always_fwd.off_code =
account.213.always_fwd.on_code =
account.213.busy_fwd.enable =
account.213.busy_fwd.target =
account.213.busy_fwd.off_code =
account.213.busy_fwd.on_code =
account.213.timeout_fwd.enable =
account.213.timeout_fwd.target =
account.213.timeout_fwd.timeout =
account.213.timeout_fwd.off_code =
account.213.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.213.dnd.enable =
account.213.dnd.on_code =
account.213.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.213.reg.enable =
handset.213.ipui =

#####
#####
```



```

##          Broadsoft XSI
##
#####

account.213.xsi.user =%BWLOGIN-ID-213%
account.213.xsi.password =%XSIPASSWORD-213%
account.213.xsi.host =%XSP_ADDRESS%
account.213.xsi.server_type =
account.213.xsi.port =

#####
#####
##          LADP
##
#####
handset.213.ldap.enable =
handset.213.ldap.name_filter=
handset.213.ldap.number_filter=
handset.213.ldap.host=
handset.213.ldap.port=
handset.213.ldap.base=
handset.213.ldap.user=
handset.213.ldap.password=
handset.213.ldap.max_hits=
handset.213.ldap.name_attr=
handset.213.ldap.numb_attr=
handset.213.ldap.display_name=
handset.213.ldap.version=
handset.213.ldap.call_in_lookup=
handset.213.ldap.ldap_sort=
handset.213.ldap.tls_mode=
handset.213.ldap.call_out_lookup=
handset.213.ldap.incoming_call_special_search.enable=

#####
#####
##          Account214 Settings
##
#####

account.214.enable=%BWLINE-BINARY-214%
account.214.label=%BWEXTENSION-214%
account.214.display_name=%BWCLID-214%
account.214.auth_name=%BWAUTHUSER-214%
account.214.user_name=%BWLINEPORT-214%
account.214.password=%BWAUTHPASSWORD-214%

#W80B ADD
account.214.sip_server.template =
account.214.media_transmit.enable =

account.214.alarm.template =
account.214.alarm.server =
account.214.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.214.sip_server.1.failback_mode =
account.214.sip_server.1.failback_timeout =
account.214.sip_server.1.register_on_enable =
account.214.sip_server.1.failback_subscribe.enable =
account.214.sip_server.1.invite_retry_counts =
account.214.sip_server.1.only_signal_with_registered =

account.214.sip_server.2.failback_mode =
account.214.sip_server.2.failback_timeout =
account.214.sip_server.2.register_on_enable =
account.214.sip_server.2.failback_subscribe.enable =
account.214.sip_server.2.invite_retry_counts =
account.214.sip_server.2.only_signal_with_registered =

account.214.naptr_build =
account.214.fallback.redundancy_type =
account.214.fallback.timeout =

account.214.dns_cache_type =
account.214.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.214.anonymous_call =
account.214.reject_anonymous_call =
account.214.send_anonymous_code =
account.214.anonymous_call_oncode =
account.214.anonymous_call_offcode =
account.214.send_anonymous_rejection_code =
account.214.anonymous_reject_oncode =
account.214.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.214.codec.g722.enable =
account.214.codec.g722.priority =

account.214.codec.g729.enable =
account.214.codec.g729.priority =

account.214.codec.g726_16.enable =
account.214.codec.g726_16.priority =

account.214.codec.g726_24.enable =
account.214.codec.g726_24.priority =

account.214.codec.g726_32.enable =
account.214.codec.g726_32.priority =
```

```

account.214.codec.g726_40.enable =
account.214.codec.g726_40.priority =

account.214.codec.ilbc.enable =
account.214.codec.ilbc.priority =

account.214.codec.pcmu.enable =
account.214.codec.pcmu.priority =

account.214.codec.pcma.enable =
account.214.codec.pcma.priority =

account.214.codec.opus.enable =
account.214.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.214.nat.nat_traversal =
account.214.nat.udp_update_enable =
account.214.nat.udp_update_time =
account.214.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.214.blf.subscribe_period =
account.214.dtmf.type =
account.214.dtmf.dtmf_payload =
account.214.dtmf.info_type =
account.214.100rel_enable =
account.214.subscribe_register =
account.214.subscribe_mwi =
account.214.subscribe_mwi_expires =
account.214.subscribe_mwi_to_vm =
voice_mail.number.214 = %BWVOICE-PORTAL-NUMBER-214%
account.214.display_mwi.enable =
account.214.cid_source =
account.214.cid_source_privacy =
account.214.cid_source_ppi =
account.214.session_timer.enable =
account.214.session_timer.expires =
account.214.session_timer.refresher =
account.214.enable_user_equal_phone =
account.214.srtp_encryption =
account.214.ptime =
account.214.shared_line = %BWSHAREDLINE-BINARY-214%
account.214.register_mac =
account.214.register_line =
account.214.reg_fail_retry_interval =
account.214.reg_failed_retry_min_time =
account.214.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.214.conf_type =
account.214.conf_uri = %BWNWORK-CONFERENCE-SIPURI-214%

account.214.sip_server_type =
account.214.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.214.register_expires_overlap =
account.214.subscribe_expires_overlap =
account.214.auto_dial_enable =
account.214.auto_dial_num =
account.214.cp_source =
account.214.transfer_refer_to_contact_header.enable =
#V80 Add
account.214.custom_ua =
account.214.callpark_enable =
account.214.check_cseq.enable =
account.214.check_to_tag.enable =
account.214.hold_use_inactive =
account.214.line_seize.expires =
account.214.update_ack_while_dialing =
account.214.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.214.always_fwd.enable =
account.214.always_fwd.target =
account.214.always_fwd.off_code =
account.214.always_fwd.on_code =
account.214.busy_fwd.enable =
account.214.busy_fwd.target =
account.214.busy_fwd.off_code =
account.214.busy_fwd.on_code =
account.214.timeout_fwd.enable =
account.214.timeout_fwd.target =
account.214.timeout_fwd.timeout =
account.214.timeout_fwd.off_code =
account.214.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```
account.214.dnd.enable =
account.214.dnd.on_code =
account.214.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.214.reg.enable =
handset.214.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.214.xsi.user =%BWLOGIN-ID-214%
account.214.xsi.password =%XSIPASSWORD-214%
account.214.xsi.host =%XSP_ADDRESS%
account.214.xsi.server_type =
account.214.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.214.ldap.enable =
handset.214.ldap.name_filter=
handset.214.ldap.number_filter=
handset.214.ldap.host=
handset.214.ldap.port=
handset.214.ldap.base=
handset.214.ldap.user=
handset.214.ldap.password=
handset.214.ldap.max_hits=
handset.214.ldap.name_attr=
handset.214.ldap.numb_attr=
handset.214.ldap.display_name=
handset.214.ldap.version=
handset.214.ldap.call_in_lookup=
handset.214.ldap.ldap_sort=
handset.214.ldap.tls_mode=
handset.214.ldap.call_out_lookup=
handset.214.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account215 Settings
##
#####
#####
```

```

account.215.enable=%BWLIN-BINARY-215%
account.215.label=%BWEXTENSION-215%
account.215.display_name=%BWCLID-215%
account.215.auth_name=%BWAUTHUSER-215%
account.215.user_name=%BWLINPORT-215%
account.215.password=%BWAUTHPASSWORD-215%

#W80B ADD
account.215.sip_server.template =
account.215.media_transmit.enable =

account.215.alarm.template =
account.215.alarm.server =
account.215.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.215.sip_server.1.failback_mode =
account.215.sip_server.1.failback_timeout =
account.215.sip_server.1.register_on_enable =
account.215.sip_server.1.failback_subscribe.enable =
account.215.sip_server.1.invite_retry_counts =
account.215.sip_server.1.only_signal_with_registered =

account.215.sip_server.2.failback_mode =
account.215.sip_server.2.failback_timeout =
account.215.sip_server.2.register_on_enable =
account.215.sip_server.2.failback_subscribe.enable =
account.215.sip_server.2.invite_retry_counts =
account.215.sip_server.2.only_signal_with_registered =

account.215.naptr_build =
account.215.fallback.redundancy_type =
account.215.fallback.timeout =

account.215.dns_cache_type =
account.215.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.215.anonymous_call =
account.215.reject_anonymous_call =
account.215.send_anonymous_code =
account.215.anonymous_call_oncode =
account.215.anonymous_call_offcode =
account.215.send_anonymous_rejection_code =
account.215.anonymous_reject_oncode =
account.215.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.215.codec.g722.enable =
account.215.codec.g722.priority =

account.215.codec.g729.enable =
account.215.codec.g729.priority =

account.215.codec.g726_16.enable =
account.215.codec.g726_16.priority =

account.215.codec.g726_24.enable =
account.215.codec.g726_24.priority =

account.215.codec.g726_32.enable =
account.215.codec.g726_32.priority =

account.215.codec.g726_40.enable =
account.215.codec.g726_40.priority =

account.215.codec.ilbc.enable =
account.215.codec.ilbc.priority =

account.215.codec.pcmu.enable =
account.215.codec.pcmu.priority =

account.215.codec.pcma.enable =
account.215.codec.pcma.priority =

account.215.codec.opus.enable =
account.215.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.215.nat.nat_traversal =
account.215.nat.udp_update_enable =
account.215.nat.udp_update_time =
account.215.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.215.blf.subscribe_period =
account.215.dtmf.type =
account.215.dtmf.dtmf_payload =
account.215.dtmf.info_type =
account.215.100rel_enable =
account.215.subscribe_register =
account.215.subscribe_mwi =
account.215.subscribe_mwi_expires =
account.215.subscribe_mwi_to_vm =
voice_mail.number.215 = %BWVOICE-PORTAL-NUMBER-215%
account.215.display_mwi.enable =
account.215.cid_source =
```

```

account.215.cid_source_privacy =
account.215.cid_source_ppi =
account.215.session_timer.enable =
account.215.session_timer.expires =
account.215.session_timer.refresher =
account.215.enable_user_equal_phone =
account.215.srtp_encryption =
account.215.ptime =
account.215.shared_line = %BWSHAREDLINE-BINARY-215%
account.215.register_mac =
account.215.register_line =
account.215.reg_fail_retry_interval =
account.215.reg_failed_retry_min_time =
account.215.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.215.conf_type =
account.215.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-215%

account.215.sip_server_type =
account.215.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.215.register_expires_overlap =
account.215.subscribe_expires_overlap =
account.215.auto_dial_enable =
account.215.auto_dial_num =
account.215.cp_source =
account.215.transfer_refer_to_contact_header.enable =
#V80 Add
account.215.custom_ua =
account.215.callpark_enable =
account.215.check_cseq.enable =
account.215.check_to_tag.enable =
account.215.hold_use_inactive =
account.215.line_seize.expires =
account.215.update_ack_while_dialing =
account.215.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.215.always_fwd.enable =
account.215.always_fwd.target =
account.215.always_fwd.off_code =
account.215.always_fwd.on_code =
account.215.busy_fwd.enable =

```



```

account.215.busy_fwd.target =
account.215.busy_fwd.off_code =
account.215.busy_fwd.on_code =
account.215.timeout_fwd.enable =
account.215.timeout_fwd.target =
account.215.timeout_fwd.timeout =
account.215.timeout_fwd.off_code =
account.215.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.215.dnd.enable =
account.215.dnd.on_code =
account.215.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.215.reg.enable =
handset.215.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.215.xsi.user =%BWLOGIN-ID-215%
account.215.xsi.password =%XSIPASSWORD-215%
account.215.xsi.host =%XSP_ADDRESS%
account.215.xsi.server_type =
account.215.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.215.ldap.enable =
handset.215.ldap.name_filter=
handset.215.ldap.number_filter=
handset.215.ldap.host=
handset.215.ldap.port=
handset.215.ldap.base=
handset.215.ldap.user=
handset.215.ldap.password=
handset.215.ldap.max_hits=
handset.215.ldap.name_attr=
handset.215.ldap.numb_attr=
handset.215.ldap.display_name=
handset.215.ldap.version=
handset.215.ldap.call_in_lookup=

```

```
handset.215.ldap.ldap_sort=
handset.215.ldap.tls_mode=
handset.215.ldap.call_out_lookup=
handset.215.ldap.incoming_call_special_search.enable=

#####
#####
##
##                               Account216 Settings
##
#####
#####

account.216.enable=%BWLIN-BINARY-216%
account.216.label=%BWEXTENSION-216%
account.216.display_name=%BWCLID-216%
account.216.auth_name=%BWAUTHUSER-216%
account.216.user_name=%BWLINPORT-216%
account.216.password=%BWAUTHPASSWORD-216%

#W80B ADD
account.216.sip_server.template =
account.216.media_transmit.enable =

account.216.alarm.template =
account.216.alarm.server =
account.216.alarm.number =

#####
#####
##
##                               Failback
##
#####
#####

account.216.sip_server.1.failback_mode =
account.216.sip_server.1.failback_timeout =
account.216.sip_server.1.register_on_enable =
account.216.sip_server.1.failback_subscribe.enable =
account.216.sip_server.1.invite_retry_counts =
account.216.sip_server.1.only_signal_with_registered =

account.216.sip_server.2.failback_mode =
account.216.sip_server.2.failback_timeout =
account.216.sip_server.2.register_on_enable =
account.216.sip_server.2.failback_subscribe.enable =
account.216.sip_server.2.invite_retry_counts =
account.216.sip_server.2.only_signal_with_registered =

account.216.naptr_build =
account.216.fallback.redundancy_type =
account.216.fallback.timeout =

account.216.dns_cache_type =
account.216.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##
##                               Basic
##
#####
#####
```

```

account.216.anonymous_call =
account.216.reject_anonymous_call =
account.216.send_anonymous_code =
account.216.anonymous_call_oncode =
account.216.anonymous_call_offcode =
account.216.send_anonymous_rejection_code =
account.216.anonymous_reject_oncode =
account.216.anonymous_reject_offcode =

#####
#####
##
##                                Codec
##
#####
#####
account.216.codec.g722.enable =
account.216.codec.g722.priority =

account.216.codec.g729.enable =
account.216.codec.g729.priority =

account.216.codec.g726_16.enable =
account.216.codec.g726_16.priority =

account.216.codec.g726_24.enable =
account.216.codec.g726_24.priority =

account.216.codec.g726_32.enable =
account.216.codec.g726_32.priority =

account.216.codec.g726_40.enable =
account.216.codec.g726_40.priority =

account.216.codec.ilbc.enable =
account.216.codec.ilbc.priority =

account.216.codec.pcmu.enable =
account.216.codec.pcmu.priority =

account.216.codec.pcma.enable =
account.216.codec.pcma.priority =

account.216.codec.opus.enable =
account.216.codec.opus.priority =

#####
#####
##
##                                NAT Settings
##
#####
#####

account.216.nat.nat_traversal =
account.216.nat.udp_update_enable =
account.216.nat.udp_update_time =
account.216.nat.rport =

#####
#####
##
##                                Register Advanced
##

```

```
#####
#####

account.216.blf.subscribe_period =
account.216.dtmf.type =
account.216.dtmf.dtmf_payload =
account.216.dtmf.info_type =
account.216.100rel_enable =
account.216.subscribe_register =
account.216.subscribe_mwi =
account.216.subscribe_mwi_expires =
account.216.subscribe_mwi_to_vm =
voice_mail.number.216 = %BWVOICE-PORTAL-NUMBER-216%
account.216.display_mwi.enable =
account.216.cid_source =
account.216.cid_source_privacy =
account.216.cid_source_ppi =
account.216.session_timer.enable =
account.216.session_timer.expires =
account.216.session_timer.refreshes =
account.216.enable_user_equal_phone =
account.216.srtp_encryption =
account.216.ptime =
account.216.shared_line = %BWSHAREDLINE-BINARY-216%
account.216.register_mac =
account.216.register_line =
account.216.reg_fail_retry_interval =
account.216.reg_failed_retry_min_time =
account.216.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.216.conf_type =
account.216.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-216%

account.216.sip_server_type =
account.216.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.216.register_expires_overlap =
account.216.subscribe_expires_overlap =
account.216.auto_dial_enable =
account.216.auto_dial_num =
account.216.cp_source =
account.216.transfer_refer_to_contact_header.enable =
#V80 Add
account.216.custom_ua =
account.216.callpark_enable =
account.216.check_cseq.enable =
account.216.check_to_tag.enable =
account.216.hold_use_inactive =
```

```

account.216.line_seize.expires =
account.216.update_ack_while_dialing =
account.216.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.216.always_fwd.enable =
account.216.always_fwd.target =
account.216.always_fwd.off_code =
account.216.always_fwd.on_code =
account.216.busy_fwd.enable =
account.216.busy_fwd.target =
account.216.busy_fwd.off_code =
account.216.busy_fwd.on_code =
account.216.timeout_fwd.enable =
account.216.timeout_fwd.target =
account.216.timeout_fwd.timeout =
account.216.timeout_fwd.off_code =
account.216.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.216.dnd.enable =
account.216.dnd.on_code =
account.216.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.216.reg.enable =
handset.216.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.216.xsi.user =%BWLOGIN-ID-216%
account.216.xsi.password =%XSIPASSWORD-216%
account.216.xsi.host =%XSP_ADDRESS%
account.216.xsi.server_type =
account.216.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.216.ldap.enable =
handset.216.ldap.name_filter=
handset.216.ldap.number_filter=
handset.216.ldap.host=
handset.216.ldap.port=
handset.216.ldap.base=
handset.216.ldap.user=
handset.216.ldap.password=
handset.216.ldap.max_hits=
handset.216.ldap.name_attr=
handset.216.ldap.numb_attr=
handset.216.ldap.display_name=
handset.216.ldap.version=
handset.216.ldap.call_in_lookup=
handset.216.ldap.ldap_sort=
handset.216.ldap.tls_mode=
handset.216.ldap.call_out_lookup=
handset.216.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account217 Settings
##
#####
#####

account.217.enable=%BWLIN-BINARY-217%
account.217.label=%BWEXTENSION-217%
account.217.display_name=%BWCLID-217%
account.217.auth_name=%BWAUTHUSER-217%
account.217.user_name=%BWLINPORT-217%
account.217.password=%BWAUTHPASSWORD-217%

#W80B ADD
account.217.sip_server.template =
account.217.media_transmit.enable =

account.217.alarm.template =
account.217.alarm.server =
account.217.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.217.sip_server.1.failback_mode =
account.217.sip_server.1.failback_timeout =
account.217.sip_server.1.register_on_enable =
account.217.sip_server.1.failback_subscribe.enable =
account.217.sip_server.1.invite_retry_counts =
account.217.sip_server.1.only_signal_with_registered =

account.217.sip_server.2.failback_mode =
account.217.sip_server.2.failback_timeout =
account.217.sip_server.2.register_on_enable =
account.217.sip_server.2.failback_subscribe.enable =
```

```
account.217.sip_server.2.invite_retry_counts =
account.217.sip_server.2.only_signal_with_registered =

account.217.naptr_build =
account.217.fallback.redundancy_type =
account.217.fallback.timeout =

account.217.dns_cache_type =
account.217.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.217.anonymous_call =
account.217.reject_anonymous_call =
account.217.send_anonymous_code =
account.217.anonymous_call_oncode =
account.217.anonymous_call_offcode =
account.217.send_anonymous_rejection_code =
account.217.anonymous_reject_oncode =
account.217.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.217.codec.g722.enable =
account.217.codec.g722.priority =

account.217.codec.g729.enable =
account.217.codec.g729.priority =

account.217.codec.g726_16.enable =
account.217.codec.g726_16.priority =

account.217.codec.g726_24.enable =
account.217.codec.g726_24.priority =

account.217.codec.g726_32.enable =
account.217.codec.g726_32.priority =

account.217.codec.g726_40.enable =
account.217.codec.g726_40.priority =

account.217.codec.ilbc.enable =
account.217.codec.ilbc.priority =

account.217.codec.pcmu.enable =
account.217.codec.pcmu.priority =

account.217.codec.pcma.enable =
account.217.codec.pcma.priority =

account.217.codec.opus.enable =
account.217.codec.opus.priority =
```

```
#####
#####
##                               NAT Settings
##
#####
#####

account.217.nat.nat_traversal =
account.217.nat.udp_update_enable =
account.217.nat.udp_update_time =
account.217.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.217.blf.subscribe_period =
account.217.dtmf.type =
account.217.dtmf.dtmf_payload =
account.217.dtmf.info_type =
account.217.100rel_enable =
account.217.subscribe_register =
account.217.subscribe_mwi =
account.217.subscribe_mwi_expires =
account.217.subscribe_mwi_to_vm =
voice_mail.number.217 = %BWVOICE-PORTAL-NUMBER-217%
account.217.display_mwi.enable =
account.217.cid_source =
account.217.cid_source_privacy =
account.217.cid_source_ppi =
account.217.session_timer.enable =
account.217.session_timer.expires =
account.217.session_timer.refresher =
account.217.enable_user_equal_phone =
account.217.srtp_encryption =
account.217.ptime =
account.217.shared_line = %BWSHAREDLINE-BINARY-217%
account.217.register_mac =
account.217.register_line =
account.217.reg_fail_retry_interval =
account.217.reg_failed_retry_min_time =
account.217.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.217.conf_type =
account.217.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-217%

account.217.sip_server_type =
account.217.unregister_on_reboot =

#####
#####
##                               Register Other
##
```



```
#####
#####
##DECT V81 Add

account.217.register_expires_overlap =
account.217.subscribe_expires_overlap =
account.217.auto_dial_enable =
account.217.auto_dial_num =
account.217.cp_source =
account.217.transfer_refer_to_contact_header.enable =
#V80 Add
account.217.custom_ua =
account.217.callpark_enable =
account.217.check_cseq.enable =
account.217.check_to_tag.enable =
account.217.hold_use_inactive =
account.217.line_seize.expires =
account.217.update_ack_while_dialing =
account.217.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.217.always_fwd.enable =
account.217.always_fwd.target =
account.217.always_fwd.off_code =
account.217.always_fwd.on_code =
account.217.busy_fwd.enable =
account.217.busy_fwd.target =
account.217.busy_fwd.off_code =
account.217.busy_fwd.on_code =
account.217.timeout_fwd.enable =
account.217.timeout_fwd.target =
account.217.timeout_fwd.timeout =
account.217.timeout_fwd.off_code =
account.217.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.217.dnd.enable =
account.217.dnd.on_code =
account.217.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.217.reg.enable =
handset.217.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.217.xsi.user =%BWLOGIN-ID-217%
account.217.xsi.password =%XSIPASSWORD-217%
account.217.xsi.host =%XSP_ADDRESS%
account.217.xsi.server_type =
account.217.xsi.port =

#####
#####
##          LADP
##
#####
handset.217.ldap.enable =
handset.217.ldap.name_filter=
handset.217.ldap.number_filter=
handset.217.ldap.host=
handset.217.ldap.port=
handset.217.ldap.base=
handset.217.ldap.user=
handset.217.ldap.password=
handset.217.ldap.max_hits=
handset.217.ldap.name_attr=
handset.217.ldap.numb_attr=
handset.217.ldap.display_name=
handset.217.ldap.version=
handset.217.ldap.call_in_lookup=
handset.217.ldap.ldap_sort=
handset.217.ldap.tls_mode=
handset.217.ldap.call_out_lookup=
handset.217.ldap.incoming_call_special_search.enable=

#####
#####
##          Account218 Settings
##
#####

account.218.enable=%BWLINE-BINARY-218%
account.218.label=%BWEXTENSION-218%
account.218.display_name=%BWCLID-218%
account.218.auth_name=%BWAUTHUSER-218%
account.218.user_name=%BWLINEPORT-218%
account.218.password=%BWAUTHPASSWORD-218%

#W80B ADD
account.218.sip_server.template =
account.218.media_transmit.enable =

account.218.alarm.template =
account.218.alarm.server =
account.218.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.218.sip_server.1.failback_mode =
account.218.sip_server.1.failback_timeout =
account.218.sip_server.1.register_on_enable =
account.218.sip_server.1.failback_subscribe.enable =
account.218.sip_server.1.invite_retry_counts =
account.218.sip_server.1.only_signal_with_registered =

account.218.sip_server.2.failback_mode =
account.218.sip_server.2.failback_timeout =
account.218.sip_server.2.register_on_enable =
account.218.sip_server.2.failback_subscribe.enable =
account.218.sip_server.2.invite_retry_counts =
account.218.sip_server.2.only_signal_with_registered =

account.218.naptr_build =
account.218.fallback.redundancy_type =
account.218.fallback.timeout =

account.218.dns_cache_type =
account.218.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.218.anonymous_call =
account.218.reject_anonymous_call =
account.218.send_anonymous_code =
account.218.anonymous_call_oncode =
account.218.anonymous_call_offcode =
account.218.send_anonymous_rejection_code =
account.218.anonymous_reject_oncode =
account.218.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.218.codec.g722.enable =
account.218.codec.g722.priority =

account.218.codec.g729.enable =
account.218.codec.g729.priority =

account.218.codec.g726_16.enable =
account.218.codec.g726_16.priority =

account.218.codec.g726_24.enable =
account.218.codec.g726_24.priority =

account.218.codec.g726_32.enable =
account.218.codec.g726_32.priority =
```

```

account.218.codec.g726_40.enable =
account.218.codec.g726_40.priority =

account.218.codec.ilbc.enable =
account.218.codec.ilbc.priority =

account.218.codec.pcmu.enable =
account.218.codec.pcmu.priority =

account.218.codec.pcma.enable =
account.218.codec.pcma.priority =

account.218.codec.opus.enable =
account.218.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.218.nat.nat_traversal =
account.218.nat.udp_update_enable =
account.218.nat.udp_update_time =
account.218.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.218.blf.subscribe_period =
account.218.dtmf.type =
account.218.dtmf.dtmf_payload =
account.218.dtmf.info_type =
account.218.100rel_enable =
account.218.subscribe_register =
account.218.subscribe_mwi =
account.218.subscribe_mwi_expires =
account.218.subscribe_mwi_to_vm =
voice_mail.number.218 = %BWVOICE-PORTAL-NUMBER-218%
account.218.display_mwi.enable =
account.218.cid_source =
account.218.cid_source_privacy =
account.218.cid_source_ppi =
account.218.session_timer.enable =
account.218.session_timer.expires =
account.218.session_timer.refresher =
account.218.enable_user_equal_phone =
account.218.srtp_encryption =
account.218.ptime =
account.218.shared_line = %BWSHAREDLINE-BINARY-218%
account.218.register_mac =
account.218.register_line =
account.218.reg_fail_retry_interval =
account.218.reg_failed_retry_min_time =
account.218.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.218.conf_type =
account.218.conf_uri = %BWNWORK-CONFERENCE-SIPURI-218%

account.218.sip_server_type =
account.218.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.218.register_expires_overlap =
account.218.subscribe_expires_overlap =
account.218.auto_dial_enable =
account.218.auto_dial_num =
account.218.cp_source =
account.218.transfer_refer_to_contact_header.enable =
#V80 Add
account.218.custom_ua =
account.218.callpark_enable =
account.218.check_cseq.enable =
account.218.check_to_tag.enable =
account.218.hold_use_inactive =
account.218.line_seize.expires =
account.218.update_ack_while_dialing =
account.218.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.218.always_fwd.enable =
account.218.always_fwd.target =
account.218.always_fwd.off_code =
account.218.always_fwd.on_code =
account.218.busy_fwd.enable =
account.218.busy_fwd.target =
account.218.busy_fwd.off_code =
account.218.busy_fwd.on_code =
account.218.timeout_fwd.enable =
account.218.timeout_fwd.target =
account.218.timeout_fwd.timeout =
account.218.timeout_fwd.off_code =
account.218.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```
account.218.dnd.enable =
account.218.dnd.on_code =
account.218.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.218.reg.enable =
handset.218.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.218.xsi.user =%BWLOGIN-ID-218%
account.218.xsi.password =%XSIPASSWORD-218%
account.218.xsi.host =%XSP_ADDRESS%
account.218.xsi.server_type =
account.218.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.218.ldap.enable =
handset.218.ldap.name_filter=
handset.218.ldap.number_filter=
handset.218.ldap.host=
handset.218.ldap.port=
handset.218.ldap.base=
handset.218.ldap.user=
handset.218.ldap.password=
handset.218.ldap.max_hits=
handset.218.ldap.name_attr=
handset.218.ldap.numb_attr=
handset.218.ldap.display_name=
handset.218.ldap.version=
handset.218.ldap.call_in_lookup=
handset.218.ldap.ldap_sort=
handset.218.ldap.tls_mode=
handset.218.ldap.call_out_lookup=
handset.218.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account219 Settings
##
#####
#####
```

```

account.219.enable=%BWLIN-BINARY-219%
account.219.label=%BWEXTENSION-219%
account.219.display_name=%BWCLID-219%
account.219.auth_name=%BWAUTHUSER-219%
account.219.user_name=%BWLINPORT-219%
account.219.password=%BWAUTHPASSWORD-219%

#W80B ADD
account.219.sip_server.template =
account.219.media_transmit.enable =

account.219.alarm.template =
account.219.alarm.server =
account.219.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.219.sip_server.1.failback_mode =
account.219.sip_server.1.failback_timeout =
account.219.sip_server.1.register_on_enable =
account.219.sip_server.1.failback_subscribe.enable =
account.219.sip_server.1.invite_retry_counts =
account.219.sip_server.1.only_signal_with_registered =

account.219.sip_server.2.failback_mode =
account.219.sip_server.2.failback_timeout =
account.219.sip_server.2.register_on_enable =
account.219.sip_server.2.failback_subscribe.enable =
account.219.sip_server.2.invite_retry_counts =
account.219.sip_server.2.only_signal_with_registered =

account.219.naptr_build =
account.219.fallback.redundancy_type =
account.219.fallback.timeout =

account.219.dns_cache_type =
account.219.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.219.anonymous_call =
account.219.reject_anonymous_call =
account.219.send_anonymous_code =
account.219.anonymous_call_oncode =
account.219.anonymous_call_offcode =
account.219.send_anonymous_rejection_code =
account.219.anonymous_reject_oncode =
account.219.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.219.codec.g722.enable =
account.219.codec.g722.priority =

account.219.codec.g729.enable =
account.219.codec.g729.priority =

account.219.codec.g726_16.enable =
account.219.codec.g726_16.priority =

account.219.codec.g726_24.enable =
account.219.codec.g726_24.priority =

account.219.codec.g726_32.enable =
account.219.codec.g726_32.priority =

account.219.codec.g726_40.enable =
account.219.codec.g726_40.priority =

account.219.codec.ilbc.enable =
account.219.codec.ilbc.priority =

account.219.codec.pcmu.enable =
account.219.codec.pcmu.priority =

account.219.codec.pcma.enable =
account.219.codec.pcma.priority =

account.219.codec.opus.enable =
account.219.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.219.nat.nat_traversal =
account.219.nat.udp_update_enable =
account.219.nat.udp_update_time =
account.219.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.219.blf.subscribe_period =
account.219.dtmf.type =
account.219.dtmf.dtmf_payload =
account.219.dtmf.info_type =
account.219.100rel_enable =
account.219.subscribe_register =
account.219.subscribe_mwi =
account.219.subscribe_mwi_expires =
account.219.subscribe_mwi_to_vm =
voice_mail.number.219 = %BWVOICE-PORTAL-NUMBER-219%
account.219.display_mwi.enable =
account.219.cid_source =
```



```

account.219.cid_source_privacy =
account.219.cid_source_ppi =
account.219.session_timer.enable =
account.219.session_timer.expires =
account.219.session_timer.refresher =
account.219.enable_user_equal_phone =
account.219.srtp_encryption =
account.219.ptime =
account.219.shared_line = %BWSHAREDLINE-BINARY-219%
account.219.register_mac =
account.219.register_line =
account.219.reg_fail_retry_interval =
account.219.reg_failed_retry_min_time =
account.219.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.219.conf_type =
account.219.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-219%

account.219.sip_server_type =
account.219.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.219.register_expires_overlap =
account.219.subscribe_expires_overlap =
account.219.auto_dial_enable =
account.219.auto_dial_num =
account.219.cp_source =
account.219.transfer_refer_to_contact_header.enable =
#V80 Add
account.219.custom_ua =
account.219.callpark_enable =
account.219.check_cseq.enable =
account.219.check_to_tag.enable =
account.219.hold_use_inactive =
account.219.line_seize.expires =
account.219.update_ack_while_dialing =
account.219.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.219.always_fwd.enable =
account.219.always_fwd.target =
account.219.always_fwd.off_code =
account.219.always_fwd.on_code =
account.219.busy_fwd.enable =

```

```
account.219.busy_fwd.target =
account.219.busy_fwd.off_code =
account.219.busy_fwd.on_code =
account.219.timeout_fwd.enable =
account.219.timeout_fwd.target =
account.219.timeout_fwd.timeout =
account.219.timeout_fwd.off_code =
account.219.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.219.dnd.enable =
account.219.dnd.on_code =
account.219.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.219.reg.enable =
handset.219.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####
account.219.xsi.user =%BWLOGIN-ID-219%
account.219.xsi.password =%XSIPASSWORD-219%
account.219.xsi.host =%XSP_ADDRESS%
account.219.xsi.server_type =
account.219.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.219.ldap.enable =
handset.219.ldap.name_filter=
handset.219.ldap.number_filter=
handset.219.ldap.host=
handset.219.ldap.port=
handset.219.ldap.base=
handset.219.ldap.user=
handset.219.ldap.password=
handset.219.ldap.max_hits=
handset.219.ldap.name_attr=
handset.219.ldap.numb_attr=
handset.219.ldap.display_name=
handset.219.ldap.version=
handset.219.ldap.call_in_lookup=
```

```
handset.219.ldap.ldap_sort=
handset.219.ldap.tls_mode=
handset.219.ldap.call_out_lookup=
handset.219.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account220 Settings
##
#####
#####

account.220.enable=%BWLIN-BINARY-220%
account.220.label=%BWEXTENSION-220%
account.220.display_name=%BWCLID-220%
account.220.auth_name=%BWAUTHUSER-220%
account.220.user_name=%BWLINPORT-220%
account.220.password=%BWAUTHPASSWORD-220%

#W80B ADD
account.220.sip_server.template =
account.220.media_transmit.enable =

account.220.alarm.template =
account.220.alarm.server =
account.220.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.220.sip_server.1.failback_mode =
account.220.sip_server.1.failback_timeout =
account.220.sip_server.1.register_on_enable =
account.220.sip_server.1.failback_subscribe.enable =
account.220.sip_server.1.invite_retry_counts =
account.220.sip_server.1.only_signal_with_registered =

account.220.sip_server.2.failback_mode =
account.220.sip_server.2.failback_timeout =
account.220.sip_server.2.register_on_enable =
account.220.sip_server.2.failback_subscribe.enable =
account.220.sip_server.2.invite_retry_counts =
account.220.sip_server.2.only_signal_with_registered =

account.220.naptr_build =
account.220.fallback.redundancy_type =
account.220.fallback.timeout =

account.220.dns_cache_type =
account.220.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
```

```

account.220.anonymous_call =
account.220.reject_anonymous_call =
account.220.send_anonymous_code =
account.220.anonymous_call_oncode =
account.220.anonymous_call_offcode =
account.220.send_anonymous_rejection_code =
account.220.anonymous_reject_oncode =
account.220.anonymous_reject_offcode =

#####
#####
##
##                               Codec
##
#####
#####
account.220.codec.g722.enable =
account.220.codec.g722.priority =

account.220.codec.g729.enable =
account.220.codec.g729.priority =

account.220.codec.g726_16.enable =
account.220.codec.g726_16.priority =

account.220.codec.g726_24.enable =
account.220.codec.g726_24.priority =

account.220.codec.g726_32.enable =
account.220.codec.g726_32.priority =

account.220.codec.g726_40.enable =
account.220.codec.g726_40.priority =

account.220.codec.ilbc.enable =
account.220.codec.ilbc.priority =

account.220.codec.pcmu.enable =
account.220.codec.pcmu.priority =

account.220.codec.pcma.enable =
account.220.codec.pcma.priority =

account.220.codec.opus.enable =
account.220.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.220.nat.nat_traversal =
account.220.nat.udp_update_enable =
account.220.nat.udp_update_time =
account.220.nat.rport =

#####
#####
##
##                               Register Advanced
##

```

```
#####
#####

account.220.blf.subscribe_period =
account.220.dtmf.type =
account.220.dtmf.dtmf_payload =
account.220.dtmf.info_type =
account.220.100rel_enable =
account.220.subscribe_register =
account.220.subscribe_mwi =
account.220.subscribe_mwi_expires =
account.220.subscribe_mwi_to_vm =
voice_mail.number.220 = %BWVOICE-PORTAL-NUMBER-220%
account.220.display_mwi.enable =
account.220.cid_source =
account.220.cid_source_privacy =
account.220.cid_source_ppi =
account.220.session_timer.enable =
account.220.session_timer.expires =
account.220.session_timer.refreshes =
account.220.enable_user_equal_phone =
account.220.srtp_encryption =
account.220.ptime =
account.220.shared_line = %BWSHAREDLINE-BINARY-220%
account.220.register_mac =
account.220.register_line =
account.220.reg_fail_retry_interval =
account.220.reg_failed_retry_min_time =
account.220.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.220.conf_type =
account.220.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-220%

account.220.sip_server_type =
account.220.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.220.register_expires_overlap =
account.220.subscribe_expires_overlap =
account.220.auto_dial_enable =
account.220.auto_dial_num =
account.220.cp_source =
account.220.transfer_refer_to_contact_header.enable =
#V80 Add
account.220.custom_ua =
account.220.callpark_enable =
account.220.check_cseq.enable =
account.220.check_to_tag.enable =
account.220.hold_use_inactive =
```

```

account.220.line_seize.expires =
account.220.update_ack_while_dialing =
account.220.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.220.always_fwd.enable =
account.220.always_fwd.target =
account.220.always_fwd.off_code =
account.220.always_fwd.on_code =
account.220.busy_fwd.enable =
account.220.busy_fwd.target =
account.220.busy_fwd.off_code =
account.220.busy_fwd.on_code =
account.220.timeout_fwd.enable =
account.220.timeout_fwd.target =
account.220.timeout_fwd.timeout =
account.220.timeout_fwd.off_code =
account.220.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.220.dnd.enable =
account.220.dnd.on_code =
account.220.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.220.reg.enable =
handset.220.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.220.xsi.user =%BWLOGIN-ID-220%
account.220.xsi.password =%XSIPASSWORD-220%
account.220.xsi.host =%XSP_ADDRESS%
account.220.xsi.server_type =
account.220.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.220.ldap.enable =
handset.220.ldap.name_filter=
handset.220.ldap.number_filter=
handset.220.ldap.host=
handset.220.ldap.port=
handset.220.ldap.base=
handset.220.ldap.user=
handset.220.ldap.password=
handset.220.ldap.max_hits=
handset.220.ldap.name_attr=
handset.220.ldap.numb_attr=
handset.220.ldap.display_name=
handset.220.ldap.version=
handset.220.ldap.call_in_lookup=
handset.220.ldap.ldap_sort=
handset.220.ldap.tls_mode=
handset.220.ldap.call_out_lookup=
handset.220.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account221 Settings
##
#####
#####

account.221.enable=%BWLIN-BINARY-221%
account.221.label=%BWEXTENSION-221%
account.221.display_name=%BWCLID-221%
account.221.auth_name=%BWAUTHUSER-221%
account.221.user_name=%BWLINPORT-221%
account.221.password=%BWAUTHPASSWORD-221%

#W80B ADD
account.221.sip_server.template =
account.221.media_transmit.enable =

account.221.alarm.template =
account.221.alarm.server =
account.221.alarm.number =

#####
#####
##                                     Failback
##
#####
#####
account.221.sip_server.1.failback_mode =
account.221.sip_server.1.failback_timeout =
account.221.sip_server.1.register_on_enable =
account.221.sip_server.1.failback_subscribe.enable =
account.221.sip_server.1.invite_retry_counts =
account.221.sip_server.1.only_signal_with_registered =

account.221.sip_server.2.failback_mode =
account.221.sip_server.2.failback_timeout =
account.221.sip_server.2.register_on_enable =
account.221.sip_server.2.failback_subscribe.enable =
```

```
account.221.sip_server.2.invite_retry_counts =
account.221.sip_server.2.only_signal_with_registered =

account.221.naptr_build =
account.221.fallback.redundancy_type =
account.221.fallback.timeout =

account.221.dns_cache_type =
account.221.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.221.anonymous_call =
account.221.reject_anonymous_call =
account.221.send_anonymous_code =
account.221.anonymous_call_oncode =
account.221.anonymous_call_offcode =
account.221.send_anonymous_rejection_code =
account.221.anonymous_reject_oncode =
account.221.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.221.codec.g722.enable =
account.221.codec.g722.priority =

account.221.codec.g729.enable =
account.221.codec.g729.priority =

account.221.codec.g726_16.enable =
account.221.codec.g726_16.priority =

account.221.codec.g726_24.enable =
account.221.codec.g726_24.priority =

account.221.codec.g726_32.enable =
account.221.codec.g726_32.priority =

account.221.codec.g726_40.enable =
account.221.codec.g726_40.priority =

account.221.codec.ilbc.enable =
account.221.codec.ilbc.priority =

account.221.codec.pcmu.enable =
account.221.codec.pcmu.priority =

account.221.codec.pcma.enable =
account.221.codec.pcma.priority =

account.221.codec.opus.enable =
account.221.codec.opus.priority =
```



```
#####
#####
##                               NAT Settings
##
#####
#####

account.221.nat.nat_traversal =
account.221.nat.udp_update_enable =
account.221.nat.udp_update_time =
account.221.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.221.blf.subscribe_period =
account.221.dtmf.type =
account.221.dtmf.dtmf_payload =
account.221.dtmf.info_type =
account.221.100rel_enable =
account.221.subscribe_register =
account.221.subscribe_mwi =
account.221.subscribe_mwi_expires =
account.221.subscribe_mwi_to_vm =
voice_mail.number.221 = %BWVOICE-PORTAL-NUMBER-221%
account.221.display_mwi.enable =
account.221.cid_source =
account.221.cid_source_privacy =
account.221.cid_source_ppi =
account.221.session_timer.enable =
account.221.session_timer.expires =
account.221.session_timer.refresher =
account.221.enable_user_equal_phone =
account.221.srtp_encryption =
account.221.ptime =
account.221.shared_line = %BWSHAREDLINE-BINARY-221%
account.221.register_mac =
account.221.register_line =
account.221.reg_fail_retry_interval =
account.221.reg_failed_retry_min_time =
account.221.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.221.conf_type =
account.221.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-221%

account.221.sip_server_type =
account.221.unregister_on_reboot =

#####
#####
##                               Register Other
##
```

```
#####
#####
##DECT V81 Add

account.221.register_expires_overlap =
account.221.subscribe_expires_overlap =
account.221.auto_dial_enable =
account.221.auto_dial_num =
account.221.cp_source =
account.221.transfer_refer_to_contact_header.enable =
#V80 Add
account.221.custom_ua =
account.221.callpark_enable =
account.221.check_cseq.enable =
account.221.check_to_tag.enable =
account.221.hold_use_inactive =
account.221.line_seize.expires =
account.221.update_ack_while_dialing =
account.221.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.221.always_fwd.enable =
account.221.always_fwd.target =
account.221.always_fwd.off_code =
account.221.always_fwd.on_code =
account.221.busy_fwd.enable =
account.221.busy_fwd.target =
account.221.busy_fwd.off_code =
account.221.busy_fwd.on_code =
account.221.timeout_fwd.enable =
account.221.timeout_fwd.target =
account.221.timeout_fwd.timeout =
account.221.timeout_fwd.off_code =
account.221.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.221.dnd.enable =
account.221.dnd.on_code =
account.221.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.221.reg.enable =
handset.221.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.221.xsi.user =%BWLOGIN-ID-221%
account.221.xsi.password =%XSIPASSWORD-221%
account.221.xsi.host =%XSP_ADDRESS%
account.221.xsi.server_type =
account.221.xsi.port =

#####
#####
##          LADP
##
#####
handset.221.ldap.enable =
handset.221.ldap.name_filter=
handset.221.ldap.number_filter=
handset.221.ldap.host=
handset.221.ldap.port=
handset.221.ldap.base=
handset.221.ldap.user=
handset.221.ldap.password=
handset.221.ldap.max_hits=
handset.221.ldap.name_attr=
handset.221.ldap.numb_attr=
handset.221.ldap.display_name=
handset.221.ldap.version=
handset.221.ldap.call_in_lookup=
handset.221.ldap.ldap_sort=
handset.221.ldap.tls_mode=
handset.221.ldap.call_out_lookup=
handset.221.ldap.incoming_call_special_search.enable=

#####
#####
##          Account222 Settings
##
#####

account.222.enable=%BWLINE-BINARY-222%
account.222.label=%BWEXTENSION-222%
account.222.display_name=%BWCLID-222%
account.222.auth_name=%BWAUTHUSER-222%
account.222.user_name=%BWLINEPORT-222%
account.222.password=%BWAUTHPASSWORD-222%

#W80B ADD
account.222.sip_server.template =
account.222.media_transmit.enable =

account.222.alarm.template =
account.222.alarm.server =
account.222.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.222.sip_server.1.failback_mode =
account.222.sip_server.1.failback_timeout =
account.222.sip_server.1.register_on_enable =
account.222.sip_server.1.failback_subscribe.enable =
account.222.sip_server.1.invite_retry_counts =
account.222.sip_server.1.only_signal_with_registered =

account.222.sip_server.2.failback_mode =
account.222.sip_server.2.failback_timeout =
account.222.sip_server.2.register_on_enable =
account.222.sip_server.2.failback_subscribe.enable =
account.222.sip_server.2.invite_retry_counts =
account.222.sip_server.2.only_signal_with_registered =

account.222.naptr_build =
account.222.fallback.redundancy_type =
account.222.fallback.timeout =

account.222.dns_cache_type =
account.222.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.222.anonymous_call =
account.222.reject_anonymous_call =
account.222.send_anonymous_code =
account.222.anonymous_call_oncode =
account.222.anonymous_call_offcode =
account.222.send_anonymous_rejection_code =
account.222.anonymous_reject_oncode =
account.222.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.222.codec.g722.enable =
account.222.codec.g722.priority =

account.222.codec.g729.enable =
account.222.codec.g729.priority =

account.222.codec.g726_16.enable =
account.222.codec.g726_16.priority =

account.222.codec.g726_24.enable =
account.222.codec.g726_24.priority =

account.222.codec.g726_32.enable =
account.222.codec.g726_32.priority =
```

```

account.222.codec.g726_40.enable =
account.222.codec.g726_40.priority =

account.222.codec.ilbc.enable =
account.222.codec.ilbc.priority =

account.222.codec.pcmu.enable =
account.222.codec.pcmu.priority =

account.222.codec.pcma.enable =
account.222.codec.pcma.priority =

account.222.codec.opus.enable =
account.222.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.222.nat.nat_traversal =
account.222.nat.udp_update_enable =
account.222.nat.udp_update_time =
account.222.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.222.blf.subscribe_period =
account.222.dtmf.type =
account.222.dtmf.dtmf_payload =
account.222.dtmf.info_type =
account.222.100rel_enable =
account.222.subscribe_register =
account.222.subscribe_mwi =
account.222.subscribe_mwi_expires =
account.222.subscribe_mwi_to_vm =
voice_mail.number.222 = %BWVOICE-PORTAL-NUMBER-222%
account.222.display_mwi.enable =
account.222.cid_source =
account.222.cid_source_privacy =
account.222.cid_source_ppi =
account.222.session_timer.enable =
account.222.session_timer.expires =
account.222.session_timer.refresher =
account.222.enable_user_equal_phone =
account.222.srtp_encryption =
account.222.ptime =
account.222.shared_line = %BWSHAREDLINE-BINARY-222%
account.222.register_mac =
account.222.register_line =
account.222.reg_fail_retry_interval =
account.222.reg_failed_retry_min_time =
account.222.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.222.conf_type =
account.222.conf_uri = %BWNWORK-CONFERENCE-SIPURI-222%

account.222.sip_server_type =
account.222.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.222.register_expires_overlap =
account.222.subscribe_expires_overlap =
account.222.auto_dial_enable =
account.222.auto_dial_num =
account.222.cp_source =
account.222.transfer_refer_to_contact_header.enable =
#V80 Add
account.222.custom_ua =
account.222.callpark_enable =
account.222.check_cseq.enable =
account.222.check_to_tag.enable =
account.222.hold_use_inactive =
account.222.line_seize.expires =
account.222.update_ack_while_dialing =
account.222.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.222.always_fwd.enable =
account.222.always_fwd.target =
account.222.always_fwd.off_code =
account.222.always_fwd.on_code =
account.222.busy_fwd.enable =
account.222.busy_fwd.target =
account.222.busy_fwd.off_code =
account.222.busy_fwd.on_code =
account.222.timeout_fwd.enable =
account.222.timeout_fwd.target =
account.222.timeout_fwd.timeout =
account.222.timeout_fwd.off_code =
account.222.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```

account.222.dnd.enable =
account.222.dnd.on_code =
account.222.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.222.reg.enable =
handset.222.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.222.xsi.user =%BWLOGIN-ID-222%
account.222.xsi.password =%XSIPASSWORD-222%
account.222.xsi.host =%XSP_ADDRESS%
account.222.xsi.server_type =
account.222.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.222.ldap.enable =
handset.222.ldap.name_filter=
handset.222.ldap.number_filter=
handset.222.ldap.host=
handset.222.ldap.port=
handset.222.ldap.base=
handset.222.ldap.user=
handset.222.ldap.password=
handset.222.ldap.max_hits=
handset.222.ldap.name_attr=
handset.222.ldap.numb_attr=
handset.222.ldap.display_name=
handset.222.ldap.version=
handset.222.ldap.call_in_lookup=
handset.222.ldap.ldap_sort=
handset.222.ldap.tls_mode=
handset.222.ldap.call_out_lookup=
handset.222.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account223 Settings
##
#####
#####

```

```

account.223.enable=%BWLIN-BINARY-223%
account.223.label=%BWEXTENSION-223%
account.223.display_name=%BWCLID-223%
account.223.auth_name=%BWAUTHUSER-223%
account.223.user_name=%BWLINPORT-223%
account.223.password=%BWAUTHPASSWORD-223%

#W80B ADD
account.223.sip_server.template =
account.223.media_transmit.enable =

account.223.alarm.template =
account.223.alarm.server =
account.223.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.223.sip_server.1.failback_mode =
account.223.sip_server.1.failback_timeout =
account.223.sip_server.1.register_on_enable =
account.223.sip_server.1.failback_subscribe.enable =
account.223.sip_server.1.invite_retry_counts =
account.223.sip_server.1.only_signal_with_registered =

account.223.sip_server.2.failback_mode =
account.223.sip_server.2.failback_timeout =
account.223.sip_server.2.register_on_enable =
account.223.sip_server.2.failback_subscribe.enable =
account.223.sip_server.2.invite_retry_counts =
account.223.sip_server.2.only_signal_with_registered =

account.223.naptr_build =
account.223.fallback.redundancy_type =
account.223.fallback.timeout =

account.223.dns_cache_type =
account.223.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.223.anonymous_call =
account.223.reject_anonymous_call =
account.223.send_anonymous_code =
account.223.anonymous_call_oncode =
account.223.anonymous_call_offcode =
account.223.send_anonymous_rejection_code =
account.223.anonymous_reject_oncode =
account.223.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```



```
#####
#####
account.223.codec.g722.enable =
account.223.codec.g722.priority =

account.223.codec.g729.enable =
account.223.codec.g729.priority =

account.223.codec.g726_16.enable =
account.223.codec.g726_16.priority =

account.223.codec.g726_24.enable =
account.223.codec.g726_24.priority =

account.223.codec.g726_32.enable =
account.223.codec.g726_32.priority =

account.223.codec.g726_40.enable =
account.223.codec.g726_40.priority =

account.223.codec.ilbc.enable =
account.223.codec.ilbc.priority =

account.223.codec.pcmu.enable =
account.223.codec.pcmu.priority =

account.223.codec.pcma.enable =
account.223.codec.pcma.priority =

account.223.codec.opus.enable =
account.223.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.223.nat.nat_traversal =
account.223.nat.udp_update_enable =
account.223.nat.udp_update_time =
account.223.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.223.blf.subscribe_period =
account.223.dtmf.type =
account.223.dtmf.dtmf_payload =
account.223.dtmf.info_type =
account.223.100rel_enable =
account.223.subscribe_register =
account.223.subscribe_mwi =
account.223.subscribe_mwi_expires =
account.223.subscribe_mwi_to_vm =
voice_mail.number.223 = %BWVOICE-PORTAL-NUMBER-223%
account.223.display_mwi.enable =
account.223.cid_source =
```

```

account.223.cid_source_privacy =
account.223.cid_source_ppi =
account.223.session_timer.enable =
account.223.session_timer.expires =
account.223.session_timer.refresher =
account.223.enable_user_equal_phone =
account.223.srtp_encryption =
account.223.ptime =
account.223.shared_line = %BWSHAREDLINE-BINARY-223%
account.223.register_mac =
account.223.register_line =
account.223.reg_fail_retry_interval =
account.223.reg_failed_retry_min_time =
account.223.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.223.conf_type =
account.223.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-223%

account.223.sip_server_type =
account.223.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.223.register_expires_overlap =
account.223.subscribe_expires_overlap =
account.223.auto_dial_enable =
account.223.auto_dial_num =
account.223.cp_source =
account.223.transfer_refer_to_contact_header.enable =
#V80 Add
account.223.custom_ua =
account.223.callpark_enable =
account.223.check_cseq.enable =
account.223.check_to_tag.enable =
account.223.hold_use_inactive =
account.223.line_seize.expires =
account.223.update_ack_while_dialing =
account.223.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.223.always_fwd.enable =
account.223.always_fwd.target =
account.223.always_fwd.off_code =
account.223.always_fwd.on_code =
account.223.busy_fwd.enable =

```

```
account.223.busy_fwd.target =
account.223.busy_fwd.off_code =
account.223.busy_fwd.on_code =
account.223.timeout_fwd.enable =
account.223.timeout_fwd.target =
account.223.timeout_fwd.timeout =
account.223.timeout_fwd.off_code =
account.223.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.223.dnd.enable =
account.223.dnd.on_code =
account.223.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.223.reg.enable =
handset.223.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####
account.223.xsi.user =%BWLOGIN-ID-223%
account.223.xsi.password =%XSIPASSWORD-223%
account.223.xsi.host =%XSP_ADDRESS%
account.223.xsi.server_type =
account.223.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.223.ldap.enable =
handset.223.ldap.name_filter=
handset.223.ldap.number_filter=
handset.223.ldap.host=
handset.223.ldap.port=
handset.223.ldap.base=
handset.223.ldap.user=
handset.223.ldap.password=
handset.223.ldap.max_hits=
handset.223.ldap.name_attr=
handset.223.ldap.numb_attr=
handset.223.ldap.display_name=
handset.223.ldap.version=
handset.223.ldap.call_in_lookup=
```

```
handset.223.ldap.ldap_sort=
handset.223.ldap.tls_mode=
handset.223.ldap.call_out_lookup=
handset.223.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account224 Settings
##
#####
#####

account.224.enable=%BWLIN-BINARY-224%
account.224.label=%BWEXTENSION-224%
account.224.display_name=%BWCLID-224%
account.224.auth_name=%BWAUTHUSER-224%
account.224.user_name=%BWLINPORT-224%
account.224.password=%BWAUTHPASSWORD-224%

#W80B ADD
account.224.sip_server.template =
account.224.media_transmit.enable =

account.224.alarm.template =
account.224.alarm.server =
account.224.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.224.sip_server.1.failback_mode =
account.224.sip_server.1.failback_timeout =
account.224.sip_server.1.register_on_enable =
account.224.sip_server.1.failback_subscribe.enable =
account.224.sip_server.1.invite_retry_counts =
account.224.sip_server.1.only_signal_with_registered =

account.224.sip_server.2.failback_mode =
account.224.sip_server.2.failback_timeout =
account.224.sip_server.2.register_on_enable =
account.224.sip_server.2.failback_subscribe.enable =
account.224.sip_server.2.invite_retry_counts =
account.224.sip_server.2.only_signal_with_registered =

account.224.naptr_build =
account.224.fallback.redundancy_type =
account.224.fallback.timeout =

account.224.dns_cache_type =
account.224.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
```

```
account.224.anonymous_call =
account.224.reject_anonymous_call =
account.224.send_anonymous_code =
account.224.anonymous_call_oncode =
account.224.anonymous_call_offcode =
account.224.send_anonymous_rejection_code =
account.224.anonymous_reject_oncode =
account.224.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.224.codec.g722.enable =
account.224.codec.g722.priority =

account.224.codec.g729.enable =
account.224.codec.g729.priority =

account.224.codec.g726_16.enable =
account.224.codec.g726_16.priority =

account.224.codec.g726_24.enable =
account.224.codec.g726_24.priority =

account.224.codec.g726_32.enable =
account.224.codec.g726_32.priority =

account.224.codec.g726_40.enable =
account.224.codec.g726_40.priority =

account.224.codec.ilbc.enable =
account.224.codec.ilbc.priority =

account.224.codec.pcmu.enable =
account.224.codec.pcmu.priority =

account.224.codec.pcma.enable =
account.224.codec.pcma.priority =

account.224.codec.opus.enable =
account.224.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
##
#####
#####

account.224.nat.nat_traversal =
account.224.nat.udp_update_enable =
account.224.nat.udp_update_time =
account.224.nat.rport =

#####
#####
##                                     Register Advanced
##
##
```

```
#####
#####

account.224.blf.subscribe_period =
account.224.dtmf.type =
account.224.dtmf.dtmf_payload =
account.224.dtmf.info_type =
account.224.100rel_enable =
account.224.subscribe_register =
account.224.subscribe_mwi =
account.224.subscribe_mwi_expires =
account.224.subscribe_mwi_to_vm =
voice_mail.number.224 = %BWVOICE-PORTAL-NUMBER-224%
account.224.display_mwi.enable =
account.224.cid_source =
account.224.cid_source_privacy =
account.224.cid_source_ppi =
account.224.session_timer.enable =
account.224.session_timer.expires =
account.224.session_timer.refresher =
account.224.enable_user_equal_phone =
account.224.srtp_encryption =
account.224.ptime =
account.224.shared_line = %BWSHAREDLINE-BINARY-224%
account.224.register_mac =
account.224.register_line =
account.224.reg_fail_retry_interval =
account.224.reg_failed_retry_min_time =
account.224.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.224.conf_type =
account.224.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-224%

account.224.sip_server_type =
account.224.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.224.register_expires_overlap =
account.224.subscribe_expires_overlap =
account.224.auto_dial_enable =
account.224.auto_dial_num =
account.224.cp_source =
account.224.transfer_refer_to_contact_header.enable =
#V80 Add
account.224.custom_ua =
account.224.callpark_enable =
account.224.check_cseq.enable =
account.224.check_to_tag.enable =
account.224.hold_use_inactive =
```

```

account.224.line_seize.expires =
account.224.update_ack_while_dialing =
account.224.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.224.always_fwd.enable =
account.224.always_fwd.target =
account.224.always_fwd.off_code =
account.224.always_fwd.on_code =
account.224.busy_fwd.enable =
account.224.busy_fwd.target =
account.224.busy_fwd.off_code =
account.224.busy_fwd.on_code =
account.224.timeout_fwd.enable =
account.224.timeout_fwd.target =
account.224.timeout_fwd.timeout =
account.224.timeout_fwd.off_code =
account.224.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.224.dnd.enable =
account.224.dnd.on_code =
account.224.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.224.reg.enable =
handset.224.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.224.xsi.user =%BWLOGIN-ID-224%
account.224.xsi.password =%XSIPASSWORD-224%
account.224.xsi.host =%XSP_ADDRESS%
account.224.xsi.server_type =
account.224.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.224.ldap.enable =
handset.224.ldap.name_filter=
handset.224.ldap.number_filter=
handset.224.ldap.host=
handset.224.ldap.port=
handset.224.ldap.base=
handset.224.ldap.user=
handset.224.ldap.password=
handset.224.ldap.max_hits=
handset.224.ldap.name_attr=
handset.224.ldap.numb_attr=
handset.224.ldap.display_name=
handset.224.ldap.version=
handset.224.ldap.call_in_lookup=
handset.224.ldap.ldap_sort=
handset.224.ldap.tls_mode=
handset.224.ldap.call_out_lookup=
handset.224.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account225 Settings
##
#####
#####

account.225.enable=%BWLIN-BINARY-225%
account.225.label=%BWEXTENSION-225%
account.225.display_name=%BWCLID-225%
account.225.auth_name=%BWAUTHUSER-225%
account.225.user_name=%BWLINPORT-225%
account.225.password=%BWAUTHPASSWORD-225%

#W80B ADD
account.225.sip_server.template =
account.225.media_transmit.enable =

account.225.alarm.template =
account.225.alarm.server =
account.225.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.225.sip_server.1.failback_mode =
account.225.sip_server.1.failback_timeout =
account.225.sip_server.1.register_on_enable =
account.225.sip_server.1.failback_subscribe.enable =
account.225.sip_server.1.invite_retry_counts =
account.225.sip_server.1.only_signal_with_registered =

account.225.sip_server.2.failback_mode =
account.225.sip_server.2.failback_timeout =
account.225.sip_server.2.register_on_enable =
account.225.sip_server.2.failback_subscribe.enable =
```



```

account.225.sip_server.2.invite_retry_counts =
account.225.sip_server.2.only_signal_with_registered =

account.225.naptr_build =
account.225.fallback.redundancy_type =
account.225.fallback.timeout =

account.225.dns_cache_type =
account.225.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.225.anonymous_call =
account.225.reject_anonymous_call =
account.225.send_anonymous_code =
account.225.anonymous_call_oncode =
account.225.anonymous_call_offcode =
account.225.send_anonymous_rejection_code =
account.225.anonymous_reject_oncode =
account.225.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.225.codec.g722.enable =
account.225.codec.g722.priority =

account.225.codec.g729.enable =
account.225.codec.g729.priority =

account.225.codec.g726_16.enable =
account.225.codec.g726_16.priority =

account.225.codec.g726_24.enable =
account.225.codec.g726_24.priority =

account.225.codec.g726_32.enable =
account.225.codec.g726_32.priority =

account.225.codec.g726_40.enable =
account.225.codec.g726_40.priority =

account.225.codec.ilbc.enable =
account.225.codec.ilbc.priority =

account.225.codec.pcmu.enable =
account.225.codec.pcmu.priority =

account.225.codec.pcma.enable =
account.225.codec.pcma.priority =

account.225.codec.opus.enable =
account.225.codec.opus.priority =

```

```
#####
#####
##                                     NAT Settings
##
#####
#####

account.225.nat.nat_traversal =
account.225.nat.udp_update_enable =
account.225.nat.udp_update_time =
account.225.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.225.blf.subscribe_period =
account.225.dtmf.type =
account.225.dtmf.dtmf_payload =
account.225.dtmf.info_type =
account.225.100rel_enable =
account.225.subscribe_register =
account.225.subscribe_mwi =
account.225.subscribe_mwi_expires =
account.225.subscribe_mwi_to_vm =
voice_mail.number.225 = %BWVOICE-PORTAL-NUMBER-225%
account.225.display_mwi.enable =
account.225.cid_source =
account.225.cid_source_privacy =
account.225.cid_source_ppi =
account.225.session_timer.enable =
account.225.session_timer.expires =
account.225.session_timer.refresher =
account.225.enable_user_equal_phone =
account.225.srtp_encryption =
account.225.ptime =
account.225.shared_line = %BWSHAREDLINE-BINARY-225%
account.225.register_mac =
account.225.register_line =
account.225.reg_fail_retry_interval =
account.225.reg_failed_retry_min_time =
account.225.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####

account.225.conf_type =
account.225.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-225%

account.225.sip_server_type =
account.225.unregister_on_reboot =

#####
#####
##                                     Register Other
##
```

```
#####
#####
##DECT V81 Add

account.225.register_expires_overlap =
account.225.subscribe_expires_overlap =
account.225.auto_dial_enable =
account.225.auto_dial_num =
account.225.cp_source =
account.225.transfer_refer_to_contact_header.enable =
#V80 Add
account.225.custom_ua =
account.225.callpark_enable =
account.225.check_cseq.enable =
account.225.check_to_tag.enable =
account.225.hold_use_inactive =
account.225.line_seize.expires =
account.225.update_ack_while_dialing =
account.225.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.225.always_fwd.enable =
account.225.always_fwd.target =
account.225.always_fwd.off_code =
account.225.always_fwd.on_code =
account.225.busy_fwd.enable =
account.225.busy_fwd.target =
account.225.busy_fwd.off_code =
account.225.busy_fwd.on_code =
account.225.timeout_fwd.enable =
account.225.timeout_fwd.target =
account.225.timeout_fwd.timeout =
account.225.timeout_fwd.off_code =
account.225.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.225.dnd.enable =
account.225.dnd.on_code =
account.225.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.225.reg.enable =
handset.225.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.225.xsi.user =%BWLOGIN-ID-225%
account.225.xsi.password =%XSIPASSWORD-225%
account.225.xsi.host =%XSP_ADDRESS%
account.225.xsi.server_type =
account.225.xsi.port =

#####
#####
##          LADP
##
#####
handset.225.ldap.enable =
handset.225.ldap.name_filter=
handset.225.ldap.number_filter=
handset.225.ldap.host=
handset.225.ldap.port=
handset.225.ldap.base=
handset.225.ldap.user=
handset.225.ldap.password=
handset.225.ldap.max_hits=
handset.225.ldap.name_attr=
handset.225.ldap.numb_attr=
handset.225.ldap.display_name=
handset.225.ldap.version=
handset.225.ldap.call_in_lookup=
handset.225.ldap.ldap_sort=
handset.225.ldap.tls_mode=
handset.225.ldap.call_out_lookup=
handset.225.ldap.incoming_call_special_search.enable=

#####
#####
##          Account226 Settings
##
#####

account.226.enable=%BWLINE-BINARY-226%
account.226.label=%BWEXTENSION-226%
account.226.display_name=%BWCLID-226%
account.226.auth_name=%BWAUTHUSER-226%
account.226.user_name=%BWLINERPORT-226%
account.226.password=%BWAUTHPASSWORD-226%

#W80B ADD
account.226.sip_server.template =
account.226.media_transmit.enable =

account.226.alarm.template =
account.226.alarm.server =
account.226.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.226.sip_server.1.failback_mode =
account.226.sip_server.1.failback_timeout =
account.226.sip_server.1.register_on_enable =
account.226.sip_server.1.failback_subscribe.enable =
account.226.sip_server.1.invite_retry_counts =
account.226.sip_server.1.only_signal_with_registered =

account.226.sip_server.2.failback_mode =
account.226.sip_server.2.failback_timeout =
account.226.sip_server.2.register_on_enable =
account.226.sip_server.2.failback_subscribe.enable =
account.226.sip_server.2.invite_retry_counts =
account.226.sip_server.2.only_signal_with_registered =

account.226.naptr_build =
account.226.fallback.redundancy_type =
account.226.fallback.timeout =

account.226.dns_cache_type =
account.226.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.226.anonymous_call =
account.226.reject_anonymous_call =
account.226.send_anonymous_code =
account.226.anonymous_call_oncode =
account.226.anonymous_call_offcode =
account.226.send_anonymous_rejection_code =
account.226.anonymous_reject_oncode =
account.226.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.226.codec.g722.enable =
account.226.codec.g722.priority =

account.226.codec.g729.enable =
account.226.codec.g729.priority =

account.226.codec.g726_16.enable =
account.226.codec.g726_16.priority =

account.226.codec.g726_24.enable =
account.226.codec.g726_24.priority =

account.226.codec.g726_32.enable =
account.226.codec.g726_32.priority =
```

```

account.226.codec.g726_40.enable =
account.226.codec.g726_40.priority =

account.226.codec.ilbc.enable =
account.226.codec.ilbc.priority =

account.226.codec.pcmu.enable =
account.226.codec.pcmu.priority =

account.226.codec.pcma.enable =
account.226.codec.pcma.priority =

account.226.codec.opus.enable =
account.226.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.226.nat.nat_traversal =
account.226.nat.udp_update_enable =
account.226.nat.udp_update_time =
account.226.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.226.blf.subscribe_period =
account.226.dtmf.type =
account.226.dtmf.dtmf_payload =
account.226.dtmf.info_type =
account.226.100rel_enable =
account.226.subscribe_register =
account.226.subscribe_mwi =
account.226.subscribe_mwi_expires =
account.226.subscribe_mwi_to_vm =
voice_mail.number.226 = %BWVOICE-PORTAL-NUMBER-226%
account.226.display_mwi.enable =
account.226.cid_source =
account.226.cid_source_privacy =
account.226.cid_source_ppi =
account.226.session_timer.enable =
account.226.session_timer.expires =
account.226.session_timer.refresher =
account.226.enable_user_equal_phone =
account.226.srtp_encryption =
account.226.ptime =
account.226.shared_line = %BWSHAREDLINE-BINARY-226%
account.226.register_mac =
account.226.register_line =
account.226.reg_fail_retry_interval =
account.226.reg_failed_retry_min_time =
account.226.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.226.conf_type =
account.226.conf_uri = %BWNWORK-CONFERENCE-SIPURI-226%

account.226.sip_server_type =
account.226.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.226.register_expires_overlap =
account.226.subscribe_expires_overlap =
account.226.auto_dial_enable =
account.226.auto_dial_num =
account.226.cp_source =
account.226.transfer_refer_to_contact_header.enable =
#V80 Add
account.226.custom_ua =
account.226.callpark_enable =
account.226.check_cseq.enable =
account.226.check_to_tag.enable =
account.226.hold_use_inactive =
account.226.line_seize.expires =
account.226.update_ack_while_dialing =
account.226.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.226.always_fwd.enable =
account.226.always_fwd.target =
account.226.always_fwd.off_code =
account.226.always_fwd.on_code =
account.226.busy_fwd.enable =
account.226.busy_fwd.target =
account.226.busy_fwd.off_code =
account.226.busy_fwd.on_code =
account.226.timeout_fwd.enable =
account.226.timeout_fwd.target =
account.226.timeout_fwd.timeout =
account.226.timeout_fwd.off_code =
account.226.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```

account.226.dnd.enable =
account.226.dnd.on_code =
account.226.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.226.reg.enable =
handset.226.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.226.xsi.user =%BWLOGIN-ID-226%
account.226.xsi.password =%XSIPASSWORD-226%
account.226.xsi.host =%XSP_ADDRESS%
account.226.xsi.server_type =
account.226.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.226.ldap.enable =
handset.226.ldap.name_filter=
handset.226.ldap.number_filter=
handset.226.ldap.host=
handset.226.ldap.port=
handset.226.ldap.base=
handset.226.ldap.user=
handset.226.ldap.password=
handset.226.ldap.max_hits=
handset.226.ldap.name_attr=
handset.226.ldap.numb_attr=
handset.226.ldap.display_name=
handset.226.ldap.version=
handset.226.ldap.call_in_lookup=
handset.226.ldap.ldap_sort=
handset.226.ldap.tls_mode=
handset.226.ldap.call_out_lookup=
handset.226.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account227 Settings
##
#####
#####

```



```

account.227.enable=%BWLIN-BINARY-227%
account.227.label=%BWEXTENSION-227%
account.227.display_name=%BWCLID-227%
account.227.auth_name=%BWAUTHUSER-227%
account.227.user_name=%BWLINPORT-227%
account.227.password=%BWAUTHPASSWORD-227%

#W80B ADD
account.227.sip_server.template =
account.227.media_transmit.enable =

account.227.alarm.template =
account.227.alarm.server =
account.227.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.227.sip_server.1.failback_mode =
account.227.sip_server.1.failback_timeout =
account.227.sip_server.1.register_on_enable =
account.227.sip_server.1.failback_subscribe.enable =
account.227.sip_server.1.invite_retry_counts =
account.227.sip_server.1.only_signal_with_registered =

account.227.sip_server.2.failback_mode =
account.227.sip_server.2.failback_timeout =
account.227.sip_server.2.register_on_enable =
account.227.sip_server.2.failback_subscribe.enable =
account.227.sip_server.2.invite_retry_counts =
account.227.sip_server.2.only_signal_with_registered =

account.227.naptr_build =
account.227.fallback.redundancy_type =
account.227.fallback.timeout =

account.227.dns_cache_type =
account.227.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.227.anonymous_call =
account.227.reject_anonymous_call =
account.227.send_anonymous_code =
account.227.anonymous_call_oncode =
account.227.anonymous_call_offcode =
account.227.send_anonymous_rejection_code =
account.227.anonymous_reject_oncode =
account.227.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.227.codec.g722.enable =
account.227.codec.g722.priority =

account.227.codec.g729.enable =
account.227.codec.g729.priority =

account.227.codec.g726_16.enable =
account.227.codec.g726_16.priority =

account.227.codec.g726_24.enable =
account.227.codec.g726_24.priority =

account.227.codec.g726_32.enable =
account.227.codec.g726_32.priority =

account.227.codec.g726_40.enable =
account.227.codec.g726_40.priority =

account.227.codec.ilbc.enable =
account.227.codec.ilbc.priority =

account.227.codec.pcmu.enable =
account.227.codec.pcmu.priority =

account.227.codec.pcma.enable =
account.227.codec.pcma.priority =

account.227.codec.opus.enable =
account.227.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.227.nat.nat_traversal =
account.227.nat.udp_update_enable =
account.227.nat.udp_update_time =
account.227.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.227.blf.subscribe_period =
account.227.dtmf.type =
account.227.dtmf.dtmf_payload =
account.227.dtmf.info_type =
account.227.100rel_enable =
account.227.subscribe_register =
account.227.subscribe_mwi =
account.227.subscribe_mwi_expires =
account.227.subscribe_mwi_to_vm =
voice_mail.number.227 = %BWVOICE-PORTAL-NUMBER-227%
account.227.display_mwi.enable =
account.227.cid_source =
```

```

account.227.cid_source_privacy =
account.227.cid_source_ppi =
account.227.session_timer.enable =
account.227.session_timer.expires =
account.227.session_timer.refresher =
account.227.enable_user_equal_phone =
account.227.srtp_encryption =
account.227.ptime =
account.227.shared_line = %BWSHAREDLINE-BINARY-227%
account.227.register_mac =
account.227.register_line =
account.227.reg_fail_retry_interval =
account.227.reg_failed_retry_min_time =
account.227.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.227.conf_type =
account.227.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-227%

account.227.sip_server_type =
account.227.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.227.register_expires_overlap =
account.227.subscribe_expires_overlap =
account.227.auto_dial_enable =
account.227.auto_dial_num =
account.227.cp_source =
account.227.transfer_refer_to_contact_header.enable =
#V80 Add
account.227.custom_ua =
account.227.callpark_enable =
account.227.check_cseq.enable =
account.227.check_to_tag.enable =
account.227.hold_use_inactive =
account.227.line_seize.expires =
account.227.update_ack_while_dialing =
account.227.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.227.always_fwd.enable =
account.227.always_fwd.target =
account.227.always_fwd.off_code =
account.227.always_fwd.on_code =
account.227.busy_fwd.enable =

```

```
account.227.busy_fwd.target =
account.227.busy_fwd.off_code =
account.227.busy_fwd.on_code =
account.227.timeout_fwd.enable =
account.227.timeout_fwd.target =
account.227.timeout_fwd.timeout =
account.227.timeout_fwd.off_code =
account.227.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.227.dnd.enable =
account.227.dnd.on_code =
account.227.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.227.reg.enable =
handset.227.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.227.xsi.user =%BWLOGIN-ID-227%
account.227.xsi.password =%XSIPASSWORD-227%
account.227.xsi.host =%XSP_ADDRESS%
account.227.xsi.server_type =
account.227.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.227.ldap.enable =
handset.227.ldap.name_filter=
handset.227.ldap.number_filter=
handset.227.ldap.host=
handset.227.ldap.port=
handset.227.ldap.base=
handset.227.ldap.user=
handset.227.ldap.password=
handset.227.ldap.max_hits=
handset.227.ldap.name_attr=
handset.227.ldap.numb_attr=
handset.227.ldap.display_name=
handset.227.ldap.version=
handset.227.ldap.call_in_lookup=
```

```
handset.227.ldap.ldap_sort=
handset.227.ldap.tls_mode=
handset.227.ldap.call_out_lookup=
handset.227.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account228 Settings
##
#####
#####

account.228.enable=%BWLIN-BINARY-228%
account.228.label=%BWEXTENSION-228%
account.228.display_name=%BWCLID-228%
account.228.auth_name=%BWAUTHUSER-228%
account.228.user_name=%BWLINPORT-228%
account.228.password=%BWAUTHPASSWORD-228%

#W80B ADD
account.228.sip_server.template =
account.228.media_transmit.enable =

account.228.alarm.template =
account.228.alarm.server =
account.228.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.228.sip_server.1.failback_mode =
account.228.sip_server.1.failback_timeout =
account.228.sip_server.1.register_on_enable =
account.228.sip_server.1.failback_subscribe.enable =
account.228.sip_server.1.invite_retry_counts =
account.228.sip_server.1.only_signal_with_registered =

account.228.sip_server.2.failback_mode =
account.228.sip_server.2.failback_timeout =
account.228.sip_server.2.register_on_enable =
account.228.sip_server.2.failback_subscribe.enable =
account.228.sip_server.2.invite_retry_counts =
account.228.sip_server.2.only_signal_with_registered =

account.228.naptr_build =
account.228.fallback.redundancy_type =
account.228.fallback.timeout =

account.228.dns_cache_type =
account.228.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
```

```
account.228.anonymous_call =
account.228.reject_anonymous_call =
account.228.send_anonymous_code =
account.228.anonymous_call_oncode =
account.228.anonymous_call_offcode =
account.228.send_anonymous_rejection_code =
account.228.anonymous_reject_oncode =
account.228.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.228.codec.g722.enable =
account.228.codec.g722.priority =

account.228.codec.g729.enable =
account.228.codec.g729.priority =

account.228.codec.g726_16.enable =
account.228.codec.g726_16.priority =

account.228.codec.g726_24.enable =
account.228.codec.g726_24.priority =

account.228.codec.g726_32.enable =
account.228.codec.g726_32.priority =

account.228.codec.g726_40.enable =
account.228.codec.g726_40.priority =

account.228.codec.ilbc.enable =
account.228.codec.ilbc.priority =

account.228.codec.pcmu.enable =
account.228.codec.pcmu.priority =

account.228.codec.pcma.enable =
account.228.codec.pcma.priority =

account.228.codec.opus.enable =
account.228.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
##
#####
#####

account.228.nat.nat_traversal =
account.228.nat.udp_update_enable =
account.228.nat.udp_update_time =
account.228.nat.rport =

#####
#####
##                                     Register Advanced
##
##
```

```
#####
#####

account.228.blf.subscribe_period =
account.228.dtmf.type =
account.228.dtmf.dtmf_payload =
account.228.dtmf.info_type =
account.228.100rel_enable =
account.228.subscribe_register =
account.228.subscribe_mwi =
account.228.subscribe_mwi_expires =
account.228.subscribe_mwi_to_vm =
voice_mail.number.228 = %BWVOICE-PORTAL-NUMBER-228%
account.228.display_mwi.enable =
account.228.cid_source =
account.228.cid_source_privacy =
account.228.cid_source_ppi =
account.228.session_timer.enable =
account.228.session_timer.expires =
account.228.session_timer.refreshes =
account.228.enable_user_equal_phone =
account.228.srtp_encryption =
account.228.ptime =
account.228.shared_line = %BWSHAREDLINE-BINARY-228%
account.228.register_mac =
account.228.register_line =
account.228.reg_fail_retry_interval =
account.228.reg_failed_retry_min_time =
account.228.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.228.conf_type =
account.228.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-228%

account.228.sip_server_type =
account.228.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.228.register_expires_overlap =
account.228.subscribe_expires_overlap =
account.228.auto_dial_enable =
account.228.auto_dial_num =
account.228.cp_source =
account.228.transfer_refer_to_contact_header.enable =
#V80 Add
account.228.custom_ua =
account.228.callpark_enable =
account.228.check_cseq.enable =
account.228.check_to_tag.enable =
account.228.hold_use_inactive =
```

```

account.228.line_seize.expires =
account.228.update_ack_while_dialing =
account.228.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.228.always_fwd.enable =
account.228.always_fwd.target =
account.228.always_fwd.off_code =
account.228.always_fwd.on_code =
account.228.busy_fwd.enable =
account.228.busy_fwd.target =
account.228.busy_fwd.off_code =
account.228.busy_fwd.on_code =
account.228.timeout_fwd.enable =
account.228.timeout_fwd.target =
account.228.timeout_fwd.timeout =
account.228.timeout_fwd.off_code =
account.228.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.228.dnd.enable =
account.228.dnd.on_code =
account.228.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.228.reg.enable =
handset.228.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.228.xsi.user =%BWLOGIN-ID-228%
account.228.xsi.password =%XSIPASSWORD-228%
account.228.xsi.host =%XSP_ADDRESS%
account.228.xsi.server_type =
account.228.xsi.port =

#####
#####
##                               LADP
##

```



```
#####
#####
handset.228.ldap.enable =
handset.228.ldap.name_filter=
handset.228.ldap.number_filter=
handset.228.ldap.host=
handset.228.ldap.port=
handset.228.ldap.base=
handset.228.ldap.user=
handset.228.ldap.password=
handset.228.ldap.max_hits=
handset.228.ldap.name_attr=
handset.228.ldap.numb_attr=
handset.228.ldap.display_name=
handset.228.ldap.version=
handset.228.ldap.call_in_lookup=
handset.228.ldap.ldap_sort=
handset.228.ldap.tls_mode=
handset.228.ldap.call_out_lookup=
handset.228.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account229 Settings
##
#####
#####

account.229.enable=%BWLIN-BINARY-229%
account.229.label=%BWEXTENSION-229%
account.229.display_name=%BWCLID-229%
account.229.auth_name=%BWAUTHUSER-229%
account.229.user_name=%BWLINPORT-229%
account.229.password=%BWAUTHPASSWORD-229%

#W80B ADD
account.229.sip_server.template =
account.229.media_transmit.enable =

account.229.alarm.template =
account.229.alarm.server =
account.229.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.229.sip_server.1.failback_mode =
account.229.sip_server.1.failback_timeout =
account.229.sip_server.1.register_on_enable =
account.229.sip_server.1.failback_subscribe.enable =
account.229.sip_server.1.invite_retry_counts =
account.229.sip_server.1.only_signal_with_registered =

account.229.sip_server.2.failback_mode =
account.229.sip_server.2.failback_timeout =
account.229.sip_server.2.register_on_enable =
account.229.sip_server.2.failback_subscribe.enable =
```

```
account.229.sip_server.2.invite_retry_counts =
account.229.sip_server.2.only_signal_with_registered =

account.229.naptr_build =
account.229.fallback.redundancy_type =
account.229.fallback.timeout =

account.229.dns_cache_type =
account.229.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.229.anonymous_call =
account.229.reject_anonymous_call =
account.229.send_anonymous_code =
account.229.anonymous_call_oncode =
account.229.anonymous_call_offcode =
account.229.send_anonymous_rejection_code =
account.229.anonymous_reject_oncode =
account.229.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.229.codec.g722.enable =
account.229.codec.g722.priority =

account.229.codec.g729.enable =
account.229.codec.g729.priority =

account.229.codec.g726_16.enable =
account.229.codec.g726_16.priority =

account.229.codec.g726_24.enable =
account.229.codec.g726_24.priority =

account.229.codec.g726_32.enable =
account.229.codec.g726_32.priority =

account.229.codec.g726_40.enable =
account.229.codec.g726_40.priority =

account.229.codec.ilbc.enable =
account.229.codec.ilbc.priority =

account.229.codec.pcmu.enable =
account.229.codec.pcmu.priority =

account.229.codec.pcma.enable =
account.229.codec.pcma.priority =

account.229.codec.opus.enable =
account.229.codec.opus.priority =
```

```
#####
#####
##                               NAT Settings
##
#####
#####

account.229.nat.nat_traversal =
account.229.nat.udp_update_enable =
account.229.nat.udp_update_time =
account.229.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.229.blf.subscribe_period =
account.229.dtmf.type =
account.229.dtmf.dtmf_payload =
account.229.dtmf.info_type =
account.229.100rel_enable =
account.229.subscribe_register =
account.229.subscribe_mwi =
account.229.subscribe_mwi_expires =
account.229.subscribe_mwi_to_vm =
voice_mail.number.229 = %BWVOICE-PORTAL-NUMBER-229%
account.229.display_mwi.enable =
account.229.cid_source =
account.229.cid_source_privacy =
account.229.cid_source_ppi =
account.229.session_timer.enable =
account.229.session_timer.expires =
account.229.session_timer.refresher =
account.229.enable_user_equal_phone =
account.229.srtp_encryption =
account.229.ptime =
account.229.shared_line = %BWSHAREDLINE-BINARY-229%
account.229.register_mac =
account.229.register_line =
account.229.reg_fail_retry_interval =
account.229.reg_failed_retry_min_time =
account.229.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.229.conf_type =
account.229.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-229%

account.229.sip_server_type =
account.229.unregister_on_reboot =

#####
#####
##                               Register Other
##
```

```
#####
#####
##DECT V81 Add

account.229.register_expires_overlap =
account.229.subscribe_expires_overlap =
account.229.auto_dial_enable =
account.229.auto_dial_num =
account.229.cp_source =
account.229.transfer_refer_to_contact_header.enable =
#V80 Add
account.229.custom_ua =
account.229.callpark_enable =
account.229.check_cseq.enable =
account.229.check_to_tag.enable =
account.229.hold_use_inactive =
account.229.line_seize.expires =
account.229.update_ack_while_dialing =
account.229.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.229.always_fwd.enable =
account.229.always_fwd.target =
account.229.always_fwd.off_code =
account.229.always_fwd.on_code =
account.229.busy_fwd.enable =
account.229.busy_fwd.target =
account.229.busy_fwd.off_code =
account.229.busy_fwd.on_code =
account.229.timeout_fwd.enable =
account.229.timeout_fwd.target =
account.229.timeout_fwd.timeout =
account.229.timeout_fwd.off_code =
account.229.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.229.dnd.enable =
account.229.dnd.on_code =
account.229.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.229.reg.enable =
handset.229.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.229.xsi.user =%BWLOGIN-ID-229%
account.229.xsi.password =%XSIPASSWORD-229%
account.229.xsi.host =%XSP_ADDRESS%
account.229.xsi.server_type =
account.229.xsi.port =

#####
#####
##          LADP
##
#####
handset.229.ldap.enable =
handset.229.ldap.name_filter=
handset.229.ldap.number_filter=
handset.229.ldap.host=
handset.229.ldap.port=
handset.229.ldap.base=
handset.229.ldap.user=
handset.229.ldap.password=
handset.229.ldap.max_hits=
handset.229.ldap.name_attr=
handset.229.ldap.numb_attr=
handset.229.ldap.display_name=
handset.229.ldap.version=
handset.229.ldap.call_in_lookup=
handset.229.ldap.ldap_sort=
handset.229.ldap.tls_mode=
handset.229.ldap.call_out_lookup=
handset.229.ldap.incoming_call_special_search.enable=

#####
#####
##          Account230 Settings
##
#####

account.230.enable=%BWLINE-BINARY-230%
account.230.label=%BWEXTENSION-230%
account.230.display_name=%BWCLID-230%
account.230.auth_name=%BWAUTHUSER-230%
account.230.user_name=%BWLINEPORT-230%
account.230.password=%BWAUTHPASSWORD-230%

#W80B ADD
account.230.sip_server.template =
account.230.media_transmit.enable =

account.230.alarm.template =
account.230.alarm.server =
account.230.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.230.sip_server.1.failback_mode =
account.230.sip_server.1.failback_timeout =
account.230.sip_server.1.register_on_enable =
account.230.sip_server.1.failback_subscribe.enable =
account.230.sip_server.1.invite_retry_counts =
account.230.sip_server.1.only_signal_with_registered =

account.230.sip_server.2.failback_mode =
account.230.sip_server.2.failback_timeout =
account.230.sip_server.2.register_on_enable =
account.230.sip_server.2.failback_subscribe.enable =
account.230.sip_server.2.invite_retry_counts =
account.230.sip_server.2.only_signal_with_registered =

account.230.naptr_build =
account.230.fallback.redundancy_type =
account.230.fallback.timeout =

account.230.dns_cache_type =
account.230.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.230.anonymous_call =
account.230.reject_anonymous_call =
account.230.send_anonymous_code =
account.230.anonymous_call_oncode =
account.230.anonymous_call_offcode =
account.230.send_anonymous_rejection_code =
account.230.anonymous_reject_oncode =
account.230.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.230.codec.g722.enable =
account.230.codec.g722.priority =

account.230.codec.g729.enable =
account.230.codec.g729.priority =

account.230.codec.g726_16.enable =
account.230.codec.g726_16.priority =

account.230.codec.g726_24.enable =
account.230.codec.g726_24.priority =

account.230.codec.g726_32.enable =
account.230.codec.g726_32.priority =
```

```

account.230.codec.g726_40.enable =
account.230.codec.g726_40.priority =

account.230.codec.ilbc.enable =
account.230.codec.ilbc.priority =

account.230.codec.pcmu.enable =
account.230.codec.pcmu.priority =

account.230.codec.pcma.enable =
account.230.codec.pcma.priority =

account.230.codec.opus.enable =
account.230.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.230.nat.nat_traversal =
account.230.nat.udp_update_enable =
account.230.nat.udp_update_time =
account.230.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.230.blf.subscribe_period =
account.230.dtmf.type =
account.230.dtmf.dtmf_payload =
account.230.dtmf.info_type =
account.230.100rel_enable =
account.230.subscribe_register =
account.230.subscribe_mwi =
account.230.subscribe_mwi_expires =
account.230.subscribe_mwi_to_vm =
voice_mail.number.230 = %BWVOICE-PORTAL-NUMBER-230%
account.230.display_mwi.enable =
account.230.cid_source =
account.230.cid_source_privacy =
account.230.cid_source_ppi =
account.230.session_timer.enable =
account.230.session_timer.expires =
account.230.session_timer.refresher =
account.230.enable_user_equal_phone =
account.230.srtp_encryption =
account.230.ptime =
account.230.shared_line = %BWSHAREDLINE-BINARY-230%
account.230.register_mac =
account.230.register_line =
account.230.reg_fail_retry_interval =
account.230.reg_failed_retry_min_time =
account.230.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.230.conf_type =
account.230.conf_uri = %BWNWORK-CONFERENCE-SIPURI-230%

account.230.sip_server_type =
account.230.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.230.register_expires_overlap =
account.230.subscribe_expires_overlap =
account.230.auto_dial_enable =
account.230.auto_dial_num =
account.230.cp_source =
account.230.transfer_refer_to_contact_header.enable =
#V80 Add
account.230.custom_ua =
account.230.callpark_enable =
account.230.check_cseq.enable =
account.230.check_to_tag.enable =
account.230.hold_use_inactive =
account.230.line_seize.expires =
account.230.update_ack_while_dialing =
account.230.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.230.always_fwd.enable =
account.230.always_fwd.target =
account.230.always_fwd.off_code =
account.230.always_fwd.on_code =
account.230.busy_fwd.enable =
account.230.busy_fwd.target =
account.230.busy_fwd.off_code =
account.230.busy_fwd.on_code =
account.230.timeout_fwd.enable =
account.230.timeout_fwd.target =
account.230.timeout_fwd.timeout =
account.230.timeout_fwd.off_code =
account.230.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```



```

account.230.dnd.enable =
account.230.dnd.on_code =
account.230.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.230.reg.enable =
handset.230.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.230.xsi.user =%BWLOGIN-ID-230%
account.230.xsi.password =%XSIPASSWORD-230%
account.230.xsi.host =%XSP_ADDRESS%
account.230.xsi.server_type =
account.230.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.230.ldap.enable =
handset.230.ldap.name_filter=
handset.230.ldap.number_filter=
handset.230.ldap.host=
handset.230.ldap.port=
handset.230.ldap.base=
handset.230.ldap.user=
handset.230.ldap.password=
handset.230.ldap.max_hits=
handset.230.ldap.name_attr=
handset.230.ldap.numb_attr=
handset.230.ldap.display_name=
handset.230.ldap.version=
handset.230.ldap.call_in_lookup=
handset.230.ldap.ldap_sort=
handset.230.ldap.tls_mode=
handset.230.ldap.call_out_lookup=
handset.230.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account231 Settings
##
#####
#####

```

```

account.231.enable=%BWLIN-BINARY-231%
account.231.label=%BWEXTENSION-231%
account.231.display_name=%BWCLID-231%
account.231.auth_name=%BWAUTHUSER-231%
account.231.user_name=%BWLINPORT-231%
account.231.password=%BWAUTHPASSWORD-231%

#W80B ADD
account.231.sip_server.template =
account.231.media_transmit.enable =

account.231.alarm.template =
account.231.alarm.server =
account.231.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.231.sip_server.1.failback_mode =
account.231.sip_server.1.failback_timeout =
account.231.sip_server.1.register_on_enable =
account.231.sip_server.1.failback_subscribe.enable =
account.231.sip_server.1.invite_retry_counts =
account.231.sip_server.1.only_signal_with_registered =

account.231.sip_server.2.failback_mode =
account.231.sip_server.2.failback_timeout =
account.231.sip_server.2.register_on_enable =
account.231.sip_server.2.failback_subscribe.enable =
account.231.sip_server.2.invite_retry_counts =
account.231.sip_server.2.only_signal_with_registered =

account.231.naptr_build =
account.231.fallback.redundancy_type =
account.231.fallback.timeout =

account.231.dns_cache_type =
account.231.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.231.anonymous_call =
account.231.reject_anonymous_call =
account.231.send_anonymous_code =
account.231.anonymous_call_oncode =
account.231.anonymous_call_offcode =
account.231.send_anonymous_rejection_code =
account.231.anonymous_reject_oncode =
account.231.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.231.codec.g722.enable =
account.231.codec.g722.priority =

account.231.codec.g729.enable =
account.231.codec.g729.priority =

account.231.codec.g726_16.enable =
account.231.codec.g726_16.priority =

account.231.codec.g726_24.enable =
account.231.codec.g726_24.priority =

account.231.codec.g726_32.enable =
account.231.codec.g726_32.priority =

account.231.codec.g726_40.enable =
account.231.codec.g726_40.priority =

account.231.codec.ilbc.enable =
account.231.codec.ilbc.priority =

account.231.codec.pcmu.enable =
account.231.codec.pcmu.priority =

account.231.codec.pcma.enable =
account.231.codec.pcma.priority =

account.231.codec.opus.enable =
account.231.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.231.nat.nat_traversal =
account.231.nat.udp_update_enable =
account.231.nat.udp_update_time =
account.231.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.231.blf.subscribe_period =
account.231.dtmf.type =
account.231.dtmf.dtmf_payload =
account.231.dtmf.info_type =
account.231.100rel_enable =
account.231.subscribe_register =
account.231.subscribe_mwi =
account.231.subscribe_mwi_expires =
account.231.subscribe_mwi_to_vm =
voice_mail.number.231 = %BWVOICE-PORTAL-NUMBER-231%
account.231.display_mwi.enable =
account.231.cid_source =
```

```

account.231.cid_source_privacy =
account.231.cid_source_ppi =
account.231.session_timer.enable =
account.231.session_timer.expires =
account.231.session_timer.refresher =
account.231.enable_user_equal_phone =
account.231.srtp_encryption =
account.231.ptime =
account.231.shared_line = %BWSHAREDLINE-BINARY-231%
account.231.register_mac =
account.231.register_line =
account.231.reg_fail_retry_interval =
account.231.reg_failed_retry_min_time =
account.231.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.231.conf_type =
account.231.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-231%

account.231.sip_server_type =
account.231.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.231.register_expires_overlap =
account.231.subscribe_expires_overlap =
account.231.auto_dial_enable =
account.231.auto_dial_num =
account.231.cp_source =
account.231.transfer_refer_to_contact_header.enable =
#V80 Add
account.231.custom_ua =
account.231.callpark_enable =
account.231.check_cseq.enable =
account.231.check_to_tag.enable =
account.231.hold_use_inactive =
account.231.line_seize.expires =
account.231.update_ack_while_dialing =
account.231.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.231.always_fwd.enable =
account.231.always_fwd.target =
account.231.always_fwd.off_code =
account.231.always_fwd.on_code =
account.231.busy_fwd.enable =

```

```

account.231.busy_fwd.target =
account.231.busy_fwd.off_code =
account.231.busy_fwd.on_code =
account.231.timeout_fwd.enable =
account.231.timeout_fwd.target =
account.231.timeout_fwd.timeout =
account.231.timeout_fwd.off_code =
account.231.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.231.dnd.enable =
account.231.dnd.on_code =
account.231.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.231.reg.enable =
handset.231.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.231.xsi.user =%BWLOGIN-ID-231%
account.231.xsi.password =%XSIPASSWORD-231%
account.231.xsi.host =%XSP_ADDRESS%
account.231.xsi.server_type =
account.231.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.231.ldap.enable =
handset.231.ldap.name_filter=
handset.231.ldap.number_filter=
handset.231.ldap.host=
handset.231.ldap.port=
handset.231.ldap.base=
handset.231.ldap.user=
handset.231.ldap.password=
handset.231.ldap.max_hits=
handset.231.ldap.name_attr=
handset.231.ldap.numb_attr=
handset.231.ldap.display_name=
handset.231.ldap.version=
handset.231.ldap.call_in_lookup=

```

```
handset.231.ldap.ldap_sort=
handset.231.ldap.tls_mode=
handset.231.ldap.call_out_lookup=
handset.231.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account232 Settings
##
#####
#####

account.232.enable=%BWLIN-BINARY-232%
account.232.label=%BWEXTENSION-232%
account.232.display_name=%BWCLID-232%
account.232.auth_name=%BWAUTHUSER-232%
account.232.user_name=%BWLINPORT-232%
account.232.password=%BWAUTHPASSWORD-232%

#W80B ADD
account.232.sip_server.template =
account.232.media_transmit.enable =

account.232.alarm.template =
account.232.alarm.server =
account.232.alarm.number =

#####
#####
##                                     Failback
##
##
#####
#####

account.232.sip_server.1.failback_mode =
account.232.sip_server.1.failback_timeout =
account.232.sip_server.1.register_on_enable =
account.232.sip_server.1.failback_subscribe.enable =
account.232.sip_server.1.invite_retry_counts =
account.232.sip_server.1.only_signal_with_registered =

account.232.sip_server.2.failback_mode =
account.232.sip_server.2.failback_timeout =
account.232.sip_server.2.register_on_enable =
account.232.sip_server.2.failback_subscribe.enable =
account.232.sip_server.2.invite_retry_counts =
account.232.sip_server.2.only_signal_with_registered =

account.232.naptr_build =
account.232.fallback.redundancy_type =
account.232.fallback.timeout =

account.232.dns_cache_type =
account.232.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
##
#####
#####
```

```
account.232.anonymous_call =
account.232.reject_anonymous_call =
account.232.send_anonymous_code =
account.232.anonymous_call_oncode =
account.232.anonymous_call_offcode =
account.232.send_anonymous_rejection_code =
account.232.anonymous_reject_oncode =
account.232.anonymous_reject_offcode =

#####
#####
##
##                               Codec
##
#####
#####
account.232.codec.g722.enable =
account.232.codec.g722.priority =

account.232.codec.g729.enable =
account.232.codec.g729.priority =

account.232.codec.g726_16.enable =
account.232.codec.g726_16.priority =

account.232.codec.g726_24.enable =
account.232.codec.g726_24.priority =

account.232.codec.g726_32.enable =
account.232.codec.g726_32.priority =

account.232.codec.g726_40.enable =
account.232.codec.g726_40.priority =

account.232.codec.ilbc.enable =
account.232.codec.ilbc.priority =

account.232.codec.pcmu.enable =
account.232.codec.pcmu.priority =

account.232.codec.pcma.enable =
account.232.codec.pcma.priority =

account.232.codec.opus.enable =
account.232.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.232.nat.nat_traversal =
account.232.nat.udp_update_enable =
account.232.nat.udp_update_time =
account.232.nat.rport =

#####
#####
##
##                               Register Advanced
##
```

```
#####
#####

account.232.blf.subscribe_period =
account.232.dtmf.type =
account.232.dtmf.dtmf_payload =
account.232.dtmf.info_type =
account.232.100rel_enable =
account.232.subscribe_register =
account.232.subscribe_mwi =
account.232.subscribe_mwi_expires =
account.232.subscribe_mwi_to_vm =
voice_mail.number.232 = %BWVOICE-PORTAL-NUMBER-232%
account.232.display_mwi.enable =
account.232.cid_source =
account.232.cid_source_privacy =
account.232.cid_source_ppi =
account.232.session_timer.enable =
account.232.session_timer.expires =
account.232.session_timer.refreshes =
account.232.enable_user_equal_phone =
account.232.srtp_encryption =
account.232.ptime =
account.232.shared_line = %BWSHAREDLINE-BINARY-232%
account.232.register_mac =
account.232.register_line =
account.232.reg_fail_retry_interval =
account.232.reg_failed_retry_min_time =
account.232.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.232.conf_type =
account.232.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-232%

account.232.sip_server_type =
account.232.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.232.register_expires_overlap =
account.232.subscribe_expires_overlap =
account.232.auto_dial_enable =
account.232.auto_dial_num =
account.232.cp_source =
account.232.transfer_refer_to_contact_header.enable =
#V80 Add
account.232.custom_ua =
account.232.callpark_enable =
account.232.check_cseq.enable =
account.232.check_to_tag.enable =
account.232.hold_use_inactive =
```



```

account.232.line_seize.expires =
account.232.update_ack_while_dialing =
account.232.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.232.always_fwd.enable =
account.232.always_fwd.target =
account.232.always_fwd.off_code =
account.232.always_fwd.on_code =
account.232.busy_fwd.enable =
account.232.busy_fwd.target =
account.232.busy_fwd.off_code =
account.232.busy_fwd.on_code =
account.232.timeout_fwd.enable =
account.232.timeout_fwd.target =
account.232.timeout_fwd.timeout =
account.232.timeout_fwd.off_code =
account.232.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.232.dnd.enable =
account.232.dnd.on_code =
account.232.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.232.reg.enable =
handset.232.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.232.xsi.user =%BWLOGIN-ID-232%
account.232.xsi.password =%XSIPASSWORD-232%
account.232.xsi.host =%XSP_ADDRESS%
account.232.xsi.server_type =
account.232.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.232.ldap.enable =
handset.232.ldap.name_filter=
handset.232.ldap.number_filter=
handset.232.ldap.host=
handset.232.ldap.port=
handset.232.ldap.base=
handset.232.ldap.user=
handset.232.ldap.password=
handset.232.ldap.max_hits=
handset.232.ldap.name_attr=
handset.232.ldap.numb_attr=
handset.232.ldap.display_name=
handset.232.ldap.version=
handset.232.ldap.call_in_lookup=
handset.232.ldap.ldap_sort=
handset.232.ldap.tls_mode=
handset.232.ldap.call_out_lookup=
handset.232.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account233 Settings
##
#####
#####

account.233.enable=%BWLIN-BINARY-233%
account.233.label=%BWEXTENSION-233%
account.233.display_name=%BWCLID-233%
account.233.auth_name=%BWAUTHUSER-233%
account.233.user_name=%BWLINPORT-233%
account.233.password=%BWAUTHPASSWORD-233%

#W80B ADD
account.233.sip_server.template =
account.233.media_transmit.enable =

account.233.alarm.template =
account.233.alarm.server =
account.233.alarm.number =

#####
#####
##                                     Failback
##
#####
#####
account.233.sip_server.1.failback_mode =
account.233.sip_server.1.failback_timeout =
account.233.sip_server.1.register_on_enable =
account.233.sip_server.1.failback_subscribe.enable =
account.233.sip_server.1.invite_retry_counts =
account.233.sip_server.1.only_signal_with_registered =

account.233.sip_server.2.failback_mode =
account.233.sip_server.2.failback_timeout =
account.233.sip_server.2.register_on_enable =
account.233.sip_server.2.failback_subscribe.enable =
```

```
account.233.sip_server.2.invite_retry_counts =
account.233.sip_server.2.only_signal_with_registered =

account.233.naptr_build =
account.233.fallback.redundancy_type =
account.233.fallback.timeout =

account.233.dns_cache_type =
account.233.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.233.anonymous_call =
account.233.reject_anonymous_call =
account.233.send_anonymous_code =
account.233.anonymous_call_oncode =
account.233.anonymous_call_offcode =
account.233.send_anonymous_rejection_code =
account.233.anonymous_reject_oncode =
account.233.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.233.codec.g722.enable =
account.233.codec.g722.priority =

account.233.codec.g729.enable =
account.233.codec.g729.priority =

account.233.codec.g726_16.enable =
account.233.codec.g726_16.priority =

account.233.codec.g726_24.enable =
account.233.codec.g726_24.priority =

account.233.codec.g726_32.enable =
account.233.codec.g726_32.priority =

account.233.codec.g726_40.enable =
account.233.codec.g726_40.priority =

account.233.codec.ilbc.enable =
account.233.codec.ilbc.priority =

account.233.codec.pcmu.enable =
account.233.codec.pcmu.priority =

account.233.codec.pcma.enable =
account.233.codec.pcma.priority =

account.233.codec.opus.enable =
account.233.codec.opus.priority =
```

```
#####
#####
##                               NAT Settings
##
#####
#####

account.233.nat.nat_traversal =
account.233.nat.udp_update_enable =
account.233.nat.udp_update_time =
account.233.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.233.blf.subscribe_period =
account.233.dtmf.type =
account.233.dtmf.dtmf_payload =
account.233.dtmf.info_type =
account.233.100rel_enable =
account.233.subscribe_register =
account.233.subscribe_mwi =
account.233.subscribe_mwi_expires =
account.233.subscribe_mwi_to_vm =
voice_mail.number.233 = %BWVOICE-PORTAL-NUMBER-233%
account.233.display_mwi.enable =
account.233.cid_source =
account.233.cid_source_privacy =
account.233.cid_source_ppi =
account.233.session_timer.enable =
account.233.session_timer.expires =
account.233.session_timer.refresher =
account.233.enable_user_equal_phone =
account.233.srtp_encryption =
account.233.ptime =
account.233.shared_line = %BWSHAREDLINE-BINARY-233%
account.233.register_mac =
account.233.register_line =
account.233.reg_fail_retry_interval =
account.233.reg_failed_retry_min_time =
account.233.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.233.conf_type =
account.233.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-233%

account.233.sip_server_type =
account.233.unregister_on_reboot =

#####
#####
##                               Register Other
##
```

```
#####
#####
##DECT V81 Add

account.233.register_expires_overlap =
account.233.subscribe_expires_overlap =
account.233.auto_dial_enable =
account.233.auto_dial_num =
account.233.cp_source =
account.233.transfer_refer_to_contact_header.enable =
#V80 Add
account.233.custom_ua =
account.233.callpark_enable =
account.233.check_cseq.enable =
account.233.check_to_tag.enable =
account.233.hold_use_inactive =
account.233.line_seize.expires =
account.233.update_ack_while_dialing =
account.233.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.233.always_fwd.enable =
account.233.always_fwd.target =
account.233.always_fwd.off_code =
account.233.always_fwd.on_code =
account.233.busy_fwd.enable =
account.233.busy_fwd.target =
account.233.busy_fwd.off_code =
account.233.busy_fwd.on_code =
account.233.timeout_fwd.enable =
account.233.timeout_fwd.target =
account.233.timeout_fwd.timeout =
account.233.timeout_fwd.off_code =
account.233.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.233.dnd.enable =
account.233.dnd.on_code =
account.233.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.233.reg.enable =
handset.233.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.233.xsi.user =%BWLOGIN-ID-233%
account.233.xsi.password =%XSIPASSWORD-233%
account.233.xsi.host =%XSP_ADDRESS%
account.233.xsi.server_type =
account.233.xsi.port =

#####
#####
##          LADP
##
#####
handset.233.ldap.enable =
handset.233.ldap.name_filter=
handset.233.ldap.number_filter=
handset.233.ldap.host=
handset.233.ldap.port=
handset.233.ldap.base=
handset.233.ldap.user=
handset.233.ldap.password=
handset.233.ldap.max_hits=
handset.233.ldap.name_attr=
handset.233.ldap.numb_attr=
handset.233.ldap.display_name=
handset.233.ldap.version=
handset.233.ldap.call_in_lookup=
handset.233.ldap.ldap_sort=
handset.233.ldap.tls_mode=
handset.233.ldap.call_out_lookup=
handset.233.ldap.incoming_call_special_search.enable=

#####
#####
##          Account234 Settings
##
#####

account.234.enable=%BWLINE-BINARY-234%
account.234.label=%BWEXTENSION-234%
account.234.display_name=%BWCLID-234%
account.234.auth_name=%BWAUTHUSER-234%
account.234.user_name=%BWLINEPORT-234%
account.234.password=%BWAUTHPASSWORD-234%

#W80B ADD
account.234.sip_server.template =
account.234.media_transmit.enable =

account.234.alarm.template =
account.234.alarm.server =
account.234.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.234.sip_server.1.failback_mode =
account.234.sip_server.1.failback_timeout =
account.234.sip_server.1.register_on_enable =
account.234.sip_server.1.failback_subscribe.enable =
account.234.sip_server.1.invite_retry_counts =
account.234.sip_server.1.only_signal_with_registered =

account.234.sip_server.2.failback_mode =
account.234.sip_server.2.failback_timeout =
account.234.sip_server.2.register_on_enable =
account.234.sip_server.2.failback_subscribe.enable =
account.234.sip_server.2.invite_retry_counts =
account.234.sip_server.2.only_signal_with_registered =

account.234.naptr_build =
account.234.fallback.redundancy_type =
account.234.fallback.timeout =

account.234.dns_cache_type =
account.234.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.234.anonymous_call =
account.234.reject_anonymous_call =
account.234.send_anonymous_code =
account.234.anonymous_call_oncode =
account.234.anonymous_call_offcode =
account.234.send_anonymous_rejection_code =
account.234.anonymous_reject_oncode =
account.234.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.234.codec.g722.enable =
account.234.codec.g722.priority =

account.234.codec.g729.enable =
account.234.codec.g729.priority =

account.234.codec.g726_16.enable =
account.234.codec.g726_16.priority =

account.234.codec.g726_24.enable =
account.234.codec.g726_24.priority =

account.234.codec.g726_32.enable =
account.234.codec.g726_32.priority =
```

```

account.234.codec.g726_40.enable =
account.234.codec.g726_40.priority =

account.234.codec.ilbc.enable =
account.234.codec.ilbc.priority =

account.234.codec.pcmu.enable =
account.234.codec.pcmu.priority =

account.234.codec.pcma.enable =
account.234.codec.pcma.priority =

account.234.codec.opus.enable =
account.234.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.234.nat.nat_traversal =
account.234.nat.udp_update_enable =
account.234.nat.udp_update_time =
account.234.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.234.blf.subscribe_period =
account.234.dtmf.type =
account.234.dtmf.dtmf_payload =
account.234.dtmf.info_type =
account.234.100rel_enable =
account.234.subscribe_register =
account.234.subscribe_mwi =
account.234.subscribe_mwi_expires =
account.234.subscribe_mwi_to_vm =
voice_mail.number.234 = %BWVOICE-PORTAL-NUMBER-234%
account.234.display_mwi.enable =
account.234.cid_source =
account.234.cid_source_privacy =
account.234.cid_source_ppi =
account.234.session_timer.enable =
account.234.session_timer.expires =
account.234.session_timer.refresher =
account.234.enable_user_equal_phone =
account.234.srtp_encryption =
account.234.ptime =
account.234.shared_line = %BWSHAREDLINE-BINARY-234%
account.234.register_mac =
account.234.register_line =
account.234.reg_fail_retry_interval =
account.234.reg_failed_retry_min_time =
account.234.reg_failed_retry_max_time =

```



```
#####
#####
##                               Network Conference
##
#####
#####
account.234.conf_type =
account.234.conf_uri = %BWNWORK-CONFERENCE-SIPURI-234%

account.234.sip_server_type =
account.234.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.234.register_expires_overlap =
account.234.subscribe_expires_overlap =
account.234.auto_dial_enable =
account.234.auto_dial_num =
account.234.cp_source =
account.234.transfer_refer_to_contact_header.enable =
#V80 Add
account.234.custom_ua =
account.234.callpark_enable =
account.234.check_cseq.enable =
account.234.check_to_tag.enable =
account.234.hold_use_inactive =
account.234.line_seize.expires =
account.234.update_ack_while_dialing =
account.234.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.234.always_fwd.enable =
account.234.always_fwd.target =
account.234.always_fwd.off_code =
account.234.always_fwd.on_code =
account.234.busy_fwd.enable =
account.234.busy_fwd.target =
account.234.busy_fwd.off_code =
account.234.busy_fwd.on_code =
account.234.timeout_fwd.enable =
account.234.timeout_fwd.target =
account.234.timeout_fwd.timeout =
account.234.timeout_fwd.off_code =
account.234.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```

account.234.dnd.enable =
account.234.dnd.on_code =
account.234.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.234.reg.enable =
handset.234.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.234.xsi.user =%BWLOGIN-ID-234%
account.234.xsi.password =%XSIPASSWORD-234%
account.234.xsi.host =%XSP_ADDRESS%
account.234.xsi.server_type =
account.234.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.234.ldap.enable =
handset.234.ldap.name_filter=
handset.234.ldap.number_filter=
handset.234.ldap.host=
handset.234.ldap.port=
handset.234.ldap.base=
handset.234.ldap.user=
handset.234.ldap.password=
handset.234.ldap.max_hits=
handset.234.ldap.name_attr=
handset.234.ldap.numb_attr=
handset.234.ldap.display_name=
handset.234.ldap.version=
handset.234.ldap.call_in_lookup=
handset.234.ldap.ldap_sort=
handset.234.ldap.tls_mode=
handset.234.ldap.call_out_lookup=
handset.234.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account235 Settings
##
#####
#####

```

```

account.235.enable=%BWLIN-BINARY-235%
account.235.label=%BWEXTENSION-235%
account.235.display_name=%BWCLID-235%
account.235.auth_name=%BWAUTHUSER-235%
account.235.user_name=%BWLINPORT-235%
account.235.password=%BWAUTHPASSWORD-235%

#W80B ADD
account.235.sip_server.template =
account.235.media_transmit.enable =

account.235.alarm.template =
account.235.alarm.server =
account.235.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.235.sip_server.1.failback_mode =
account.235.sip_server.1.failback_timeout =
account.235.sip_server.1.register_on_enable =
account.235.sip_server.1.failback_subscribe.enable =
account.235.sip_server.1.invite_retry_counts =
account.235.sip_server.1.only_signal_with_registered =

account.235.sip_server.2.failback_mode =
account.235.sip_server.2.failback_timeout =
account.235.sip_server.2.register_on_enable =
account.235.sip_server.2.failback_subscribe.enable =
account.235.sip_server.2.invite_retry_counts =
account.235.sip_server.2.only_signal_with_registered =

account.235.naptr_build =
account.235.fallback.redundancy_type =
account.235.fallback.timeout =

account.235.dns_cache_type =
account.235.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.235.anonymous_call =
account.235.reject_anonymous_call =
account.235.send_anonymous_code =
account.235.anonymous_call_oncode =
account.235.anonymous_call_offcode =
account.235.send_anonymous_rejection_code =
account.235.anonymous_reject_oncode =
account.235.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.235.codec.g722.enable =
account.235.codec.g722.priority =

account.235.codec.g729.enable =
account.235.codec.g729.priority =

account.235.codec.g726_16.enable =
account.235.codec.g726_16.priority =

account.235.codec.g726_24.enable =
account.235.codec.g726_24.priority =

account.235.codec.g726_32.enable =
account.235.codec.g726_32.priority =

account.235.codec.g726_40.enable =
account.235.codec.g726_40.priority =

account.235.codec.ilbc.enable =
account.235.codec.ilbc.priority =

account.235.codec.pcmu.enable =
account.235.codec.pcmu.priority =

account.235.codec.pcma.enable =
account.235.codec.pcma.priority =

account.235.codec.opus.enable =
account.235.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.235.nat.nat_traversal =
account.235.nat.udp_update_enable =
account.235.nat.udp_update_time =
account.235.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.235.blf.subscribe_period =
account.235.dtmf.type =
account.235.dtmf.dtmf_payload =
account.235.dtmf.info_type =
account.235.100rel_enable =
account.235.subscribe_register =
account.235.subscribe_mwi =
account.235.subscribe_mwi_expires =
account.235.subscribe_mwi_to_vm =
voice_mail.number.235 = %BWVOICE-PORTAL-NUMBER-235%
account.235.display_mwi.enable =
account.235.cid_source =
```

```

account.235.cid_source_privacy =
account.235.cid_source_ppi =
account.235.session_timer.enable =
account.235.session_timer.expires =
account.235.session_timer.refresher =
account.235.enable_user_equal_phone =
account.235.srtp_encryption =
account.235.ptime =
account.235.shared_line = %BWSHAREDLINE-BINARY-235%
account.235.register_mac =
account.235.register_line =
account.235.reg_fail_retry_interval =
account.235.reg_failed_retry_min_time =
account.235.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.235.conf_type =
account.235.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-235%

account.235.sip_server_type =
account.235.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.235.register_expires_overlap =
account.235.subscribe_expires_overlap =
account.235.auto_dial_enable =
account.235.auto_dial_num =
account.235.cp_source =
account.235.transfer_refer_to_contact_header.enable =
#V80 Add
account.235.custom_ua =
account.235.callpark_enable =
account.235.check_cseq.enable =
account.235.check_to_tag.enable =
account.235.hold_use_inactive =
account.235.line_seize.expires =
account.235.update_ack_while_dialing =
account.235.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.235.always_fwd.enable =
account.235.always_fwd.target =
account.235.always_fwd.off_code =
account.235.always_fwd.on_code =
account.235.busy_fwd.enable =

```

```

account.235.busy_fwd.target =
account.235.busy_fwd.off_code =
account.235.busy_fwd.on_code =
account.235.timeout_fwd.enable =
account.235.timeout_fwd.target =
account.235.timeout_fwd.timeout =
account.235.timeout_fwd.off_code =
account.235.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.235.dnd.enable =
account.235.dnd.on_code =
account.235.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.235.reg.enable =
handset.235.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.235.xsi.user =%BWLOGIN-ID-235%
account.235.xsi.password =%XSIPASSWORD-235%
account.235.xsi.host =%XSP_ADDRESS%
account.235.xsi.server_type =
account.235.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.235.ldap.enable =
handset.235.ldap.name_filter=
handset.235.ldap.number_filter=
handset.235.ldap.host=
handset.235.ldap.port=
handset.235.ldap.base=
handset.235.ldap.user=
handset.235.ldap.password=
handset.235.ldap.max_hits=
handset.235.ldap.name_attr=
handset.235.ldap.numb_attr=
handset.235.ldap.display_name=
handset.235.ldap.version=
handset.235.ldap.call_in_lookup=

```

```
handset.235.ldap.ldap_sort=
handset.235.ldap.tls_mode=
handset.235.ldap.call_out_lookup=
handset.235.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account236 Settings
##
#####
#####

account.236.enable=%BWLIN-BINARY-236%
account.236.label=%BWEXTENSION-236%
account.236.display_name=%BWCLID-236%
account.236.auth_name=%BWAUTHUSER-236%
account.236.user_name=%BWLINPORT-236%
account.236.password=%BWAUTHPASSWORD-236%

#W80B ADD
account.236.sip_server.template =
account.236.media_transmit.enable =

account.236.alarm.template =
account.236.alarm.server =
account.236.alarm.number =

#####
#####
##                               Failback
##
#####
#####

account.236.sip_server.1.failback_mode =
account.236.sip_server.1.failback_timeout =
account.236.sip_server.1.register_on_enable =
account.236.sip_server.1.failback_subscribe.enable =
account.236.sip_server.1.invite_retry_counts =
account.236.sip_server.1.only_signal_with_registered =

account.236.sip_server.2.failback_mode =
account.236.sip_server.2.failback_timeout =
account.236.sip_server.2.register_on_enable =
account.236.sip_server.2.failback_subscribe.enable =
account.236.sip_server.2.invite_retry_counts =
account.236.sip_server.2.only_signal_with_registered =

account.236.naptr_build =
account.236.fallback.redundancy_type =
account.236.fallback.timeout =

account.236.dns_cache_type =
account.236.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
```

```

account.236.anonymous_call =
account.236.reject_anonymous_call =
account.236.send_anonymous_code =
account.236.anonymous_call_oncode =
account.236.anonymous_call_offcode =
account.236.send_anonymous_rejection_code =
account.236.anonymous_reject_oncode =
account.236.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.236.codec.g722.enable =
account.236.codec.g722.priority =

account.236.codec.g729.enable =
account.236.codec.g729.priority =

account.236.codec.g726_16.enable =
account.236.codec.g726_16.priority =

account.236.codec.g726_24.enable =
account.236.codec.g726_24.priority =

account.236.codec.g726_32.enable =
account.236.codec.g726_32.priority =

account.236.codec.g726_40.enable =
account.236.codec.g726_40.priority =

account.236.codec.ilbc.enable =
account.236.codec.ilbc.priority =

account.236.codec.pcmu.enable =
account.236.codec.pcmu.priority =

account.236.codec.pcma.enable =
account.236.codec.pcma.priority =

account.236.codec.opus.enable =
account.236.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
##
#####
#####

account.236.nat.nat_traversal =
account.236.nat.udp_update_enable =
account.236.nat.udp_update_time =
account.236.nat.rport =

#####
#####
##                                     Register Advanced
##
##

```



```
#####
#####

account.236.blf.subscribe_period =
account.236.dtmf.type =
account.236.dtmf.dtmf_payload =
account.236.dtmf.info_type =
account.236.100rel_enable =
account.236.subscribe_register =
account.236.subscribe_mwi =
account.236.subscribe_mwi_expires =
account.236.subscribe_mwi_to_vm =
voice_mail.number.236 = %BWVOICE-PORTAL-NUMBER-236%
account.236.display_mwi.enable =
account.236.cid_source =
account.236.cid_source_privacy =
account.236.cid_source_ppi =
account.236.session_timer.enable =
account.236.session_timer.expires =
account.236.session_timer.refreshes =
account.236.enable_user_equal_phone =
account.236.srtp_encryption =
account.236.ptime =
account.236.shared_line = %BWSHAREDLINE-BINARY-236%
account.236.register_mac =
account.236.register_line =
account.236.reg_fail_retry_interval =
account.236.reg_failed_retry_min_time =
account.236.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.236.conf_type =
account.236.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-236%

account.236.sip_server_type =
account.236.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.236.register_expires_overlap =
account.236.subscribe_expires_overlap =
account.236.auto_dial_enable =
account.236.auto_dial_num =
account.236.cp_source =
account.236.transfer_refer_to_contact_header.enable =
#V80 Add
account.236.custom_ua =
account.236.callpark_enable =
account.236.check_cseq.enable =
account.236.check_to_tag.enable =
account.236.hold_use_inactive =
```

```

account.236.line_seize.expires =
account.236.update_ack_while_dialing =
account.236.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.236.always_fwd.enable =
account.236.always_fwd.target =
account.236.always_fwd.off_code =
account.236.always_fwd.on_code =
account.236.busy_fwd.enable =
account.236.busy_fwd.target =
account.236.busy_fwd.off_code =
account.236.busy_fwd.on_code =
account.236.timeout_fwd.enable =
account.236.timeout_fwd.target =
account.236.timeout_fwd.timeout =
account.236.timeout_fwd.off_code =
account.236.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.236.dnd.enable =
account.236.dnd.on_code =
account.236.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.236.reg.enable =
handset.236.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.236.xsi.user =%BWLOGIN-ID-236%
account.236.xsi.password =%XSIPASSWORD-236%
account.236.xsi.host =%XSP_ADDRESS%
account.236.xsi.server_type =
account.236.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.236.ldap.enable =
handset.236.ldap.name_filter=
handset.236.ldap.number_filter=
handset.236.ldap.host=
handset.236.ldap.port=
handset.236.ldap.base=
handset.236.ldap.user=
handset.236.ldap.password=
handset.236.ldap.max_hits=
handset.236.ldap.name_attr=
handset.236.ldap.numb_attr=
handset.236.ldap.display_name=
handset.236.ldap.version=
handset.236.ldap.call_in_lookup=
handset.236.ldap.ldap_sort=
handset.236.ldap.tls_mode=
handset.236.ldap.call_out_lookup=
handset.236.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account237 Settings
##
#####
#####

account.237.enable=%BWLINE-BINARY-237%
account.237.label=%BWEXTENSION-237%
account.237.display_name=%BWCLID-237%
account.237.auth_name=%BWAUTHUSER-237%
account.237.user_name=%BWLINEPORT-237%
account.237.password=%BWAUTHPASSWORD-237%

#W80B ADD
account.237.sip_server.template =
account.237.media_transmit.enable =

account.237.alarm.template =
account.237.alarm.server =
account.237.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.237.sip_server.1.failback_mode =
account.237.sip_server.1.failback_timeout =
account.237.sip_server.1.register_on_enable =
account.237.sip_server.1.failback_subscribe.enable =
account.237.sip_server.1.invite_retry_counts =
account.237.sip_server.1.only_signal_with_registered =

account.237.sip_server.2.failback_mode =
account.237.sip_server.2.failback_timeout =
account.237.sip_server.2.register_on_enable =
account.237.sip_server.2.failback_subscribe.enable =
```

```

account.237.sip_server.2.invite_retry_counts =
account.237.sip_server.2.only_signal_with_registered =

account.237.naptr_build =
account.237.fallback.redundancy_type =
account.237.fallback.timeout =

account.237.dns_cache_type =
account.237.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.237.anonymous_call =
account.237.reject_anonymous_call =
account.237.send_anonymous_code =
account.237.anonymous_call_oncode =
account.237.anonymous_call_offcode =
account.237.send_anonymous_rejection_code =
account.237.anonymous_reject_oncode =
account.237.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.237.codec.g722.enable =
account.237.codec.g722.priority =

account.237.codec.g729.enable =
account.237.codec.g729.priority =

account.237.codec.g726_16.enable =
account.237.codec.g726_16.priority =

account.237.codec.g726_24.enable =
account.237.codec.g726_24.priority =

account.237.codec.g726_32.enable =
account.237.codec.g726_32.priority =

account.237.codec.g726_40.enable =
account.237.codec.g726_40.priority =

account.237.codec.ilbc.enable =
account.237.codec.ilbc.priority =

account.237.codec.pcmu.enable =
account.237.codec.pcmu.priority =

account.237.codec.pcma.enable =
account.237.codec.pcma.priority =

account.237.codec.opus.enable =
account.237.codec.opus.priority =

```

```
#####
#####
##                               NAT Settings
##
#####
#####

account.237.nat.nat_traversal =
account.237.nat.udp_update_enable =
account.237.nat.udp_update_time =
account.237.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.237.blf.subscribe_period =
account.237.dtmf.type =
account.237.dtmf.dtmf_payload =
account.237.dtmf.info_type =
account.237.100rel_enable =
account.237.subscribe_register =
account.237.subscribe_mwi =
account.237.subscribe_mwi_expires =
account.237.subscribe_mwi_to_vm =
voice_mail.number.237 = %BWVOICE-PORTAL-NUMBER-237%
account.237.display_mwi.enable =
account.237.cid_source =
account.237.cid_source_privacy =
account.237.cid_source_ppi =
account.237.session_timer.enable =
account.237.session_timer.expires =
account.237.session_timer.refresher =
account.237.enable_user_equal_phone =
account.237.srtp_encryption =
account.237.ptime =
account.237.shared_line = %BWSHAREDLINE-BINARY-237%
account.237.register_mac =
account.237.register_line =
account.237.reg_fail_retry_interval =
account.237.reg_failed_retry_min_time =
account.237.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.237.conf_type =
account.237.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-237%

account.237.sip_server_type =
account.237.unregister_on_reboot =

#####
#####
##                               Register Other
##
```

```
#####
#####
##DECT V81 Add

account.237.register_expires_overlap =
account.237.subscribe_expires_overlap =
account.237.auto_dial_enable =
account.237.auto_dial_num =
account.237.cp_source =
account.237.transfer_refer_to_contact_header.enable =
#V80 Add
account.237.custom_ua =
account.237.callpark_enable =
account.237.check_cseq.enable =
account.237.check_to_tag.enable =
account.237.hold_use_inactive =
account.237.line_seize.expires =
account.237.update_ack_while_dialing =
account.237.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.237.always_fwd.enable =
account.237.always_fwd.target =
account.237.always_fwd.off_code =
account.237.always_fwd.on_code =
account.237.busy_fwd.enable =
account.237.busy_fwd.target =
account.237.busy_fwd.off_code =
account.237.busy_fwd.on_code =
account.237.timeout_fwd.enable =
account.237.timeout_fwd.target =
account.237.timeout_fwd.timeout =
account.237.timeout_fwd.off_code =
account.237.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.237.dnd.enable =
account.237.dnd.on_code =
account.237.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.237.reg.enable =
handset.237.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.237.xsi.user =%BWLOGIN-ID-237%
account.237.xsi.password =%XSIPASSWORD-237%
account.237.xsi.host =%XSP_ADDRESS%
account.237.xsi.server_type =
account.237.xsi.port =

#####
#####
##          LADP
##
#####
handset.237.ldap.enable =
handset.237.ldap.name_filter=
handset.237.ldap.number_filter=
handset.237.ldap.host=
handset.237.ldap.port=
handset.237.ldap.base=
handset.237.ldap.user=
handset.237.ldap.password=
handset.237.ldap.max_hits=
handset.237.ldap.name_attr=
handset.237.ldap.numb_attr=
handset.237.ldap.display_name=
handset.237.ldap.version=
handset.237.ldap.call_in_lookup=
handset.237.ldap.ldap_sort=
handset.237.ldap.tls_mode=
handset.237.ldap.call_out_lookup=
handset.237.ldap.incoming_call_special_search.enable=

#####
#####
##          Account238 Settings
##
#####

account.238.enable=%BWLINE-BINARY-238%
account.238.label=%BWEXTENSION-238%
account.238.display_name=%BWCLID-238%
account.238.auth_name=%BWAUTHUSER-238%
account.238.user_name=%BWLINEPORT-238%
account.238.password=%BWAUTHPASSWORD-238%

#W80B ADD
account.238.sip_server.template =
account.238.media_transmit.enable =

account.238.alarm.template =
account.238.alarm.server =
account.238.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.238.sip_server.1.failback_mode =
account.238.sip_server.1.failback_timeout =
account.238.sip_server.1.register_on_enable =
account.238.sip_server.1.failback_subscribe.enable =
account.238.sip_server.1.invite_retry_counts =
account.238.sip_server.1.only_signal_with_registered =

account.238.sip_server.2.failback_mode =
account.238.sip_server.2.failback_timeout =
account.238.sip_server.2.register_on_enable =
account.238.sip_server.2.failback_subscribe.enable =
account.238.sip_server.2.invite_retry_counts =
account.238.sip_server.2.only_signal_with_registered =

account.238.naptr_build =
account.238.failback.redundancy_type =
account.238.failback.timeout =

account.238.dns_cache_type =
account.238.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.238.anonymous_call =
account.238.reject_anonymous_call =
account.238.send_anonymous_code =
account.238.anonymous_call_oncode =
account.238.anonymous_call_offcode =
account.238.send_anonymous_rejection_code =
account.238.anonymous_reject_oncode =
account.238.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.238.codec.g722.enable =
account.238.codec.g722.priority =

account.238.codec.g729.enable =
account.238.codec.g729.priority =

account.238.codec.g726_16.enable =
account.238.codec.g726_16.priority =

account.238.codec.g726_24.enable =
account.238.codec.g726_24.priority =

account.238.codec.g726_32.enable =
account.238.codec.g726_32.priority =
```



```

account.238.codec.g726_40.enable =
account.238.codec.g726_40.priority =

account.238.codec.ilbc.enable =
account.238.codec.ilbc.priority =

account.238.codec.pcmu.enable =
account.238.codec.pcmu.priority =

account.238.codec.pcma.enable =
account.238.codec.pcma.priority =

account.238.codec.opus.enable =
account.238.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.238.nat.nat_traversal =
account.238.nat.udp_update_enable =
account.238.nat.udp_update_time =
account.238.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.238.blf.subscribe_period =
account.238.dtmf.type =
account.238.dtmf.dtmf_payload =
account.238.dtmf.info_type =
account.238.100rel_enable =
account.238.subscribe_register =
account.238.subscribe_mwi =
account.238.subscribe_mwi_expires =
account.238.subscribe_mwi_to_vm =
voice_mail.number.238 = %BWVOICE-PORTAL-NUMBER-238%
account.238.display_mwi.enable =
account.238.cid_source =
account.238.cid_source_privacy =
account.238.cid_source_ppi =
account.238.session_timer.enable =
account.238.session_timer.expires =
account.238.session_timer.refreshes =
account.238.enable_user_equal_phone =
account.238.srtp_encryption =
account.238.ptime =
account.238.shared_line = %BWSHAREDLINE-BINARY-238%
account.238.register_mac =
account.238.register_line =
account.238.reg_fail_retry_interval =
account.238.reg_failed_retry_min_time =
account.238.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.238.conf_type =
account.238.conf_uri = %BWNWORK-CONFERENCE-SIPURI-238%

account.238.sip_server_type =
account.238.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.238.register_expires_overlap =
account.238.subscribe_expires_overlap =
account.238.auto_dial_enable =
account.238.auto_dial_num =
account.238.cp_source =
account.238.transfer_refer_to_contact_header.enable =
#V80 Add
account.238.custom_ua =
account.238.callpark_enable =
account.238.check_cseq.enable =
account.238.check_to_tag.enable =
account.238.hold_use_inactive =
account.238.line_seize.expires =
account.238.update_ack_while_dialing =
account.238.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.238.always_fwd.enable =
account.238.always_fwd.target =
account.238.always_fwd.off_code =
account.238.always_fwd.on_code =
account.238.busy_fwd.enable =
account.238.busy_fwd.target =
account.238.busy_fwd.off_code =
account.238.busy_fwd.on_code =
account.238.timeout_fwd.enable =
account.238.timeout_fwd.target =
account.238.timeout_fwd.timeout =
account.238.timeout_fwd.off_code =
account.238.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```
account.238.dnd.enable =
account.238.dnd.on_code =
account.238.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.238.reg.enable =
handset.238.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####

account.238.xsi.user =%BWLOGIN-ID-238%
account.238.xsi.password =%XSIPASSWORD-238%
account.238.xsi.host =%XSP_ADDRESS%
account.238.xsi.server_type =
account.238.xsi.port =

#####
#####
##                               LADP
##
#####
#####
handset.238.ldap.enable =
handset.238.ldap.name_filter=
handset.238.ldap.number_filter=
handset.238.ldap.host=
handset.238.ldap.port=
handset.238.ldap.base=
handset.238.ldap.user=
handset.238.ldap.password=
handset.238.ldap.max_hits=
handset.238.ldap.name_attr=
handset.238.ldap.numb_attr=
handset.238.ldap.display_name=
handset.238.ldap.version=
handset.238.ldap.call_in_lookup=
handset.238.ldap.ldap_sort=
handset.238.ldap.tls_mode=
handset.238.ldap.call_out_lookup=
handset.238.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account239 Settings
##
#####
#####
```

```

account.239.enable=%BWLIN-BINARY-239%
account.239.label=%BWEXTENSION-239%
account.239.display_name=%BWCLID-239%
account.239.auth_name=%BWAUTHUSER-239%
account.239.user_name=%BWLINPORT-239%
account.239.password=%BWAUTHPASSWORD-239%

#W80B ADD
account.239.sip_server.template =
account.239.media_transmit.enable =

account.239.alarm.template =
account.239.alarm.server =
account.239.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.239.sip_server.1.failback_mode =
account.239.sip_server.1.failback_timeout =
account.239.sip_server.1.register_on_enable =
account.239.sip_server.1.failback_subscribe.enable =
account.239.sip_server.1.invite_retry_counts =
account.239.sip_server.1.only_signal_with_registered =

account.239.sip_server.2.failback_mode =
account.239.sip_server.2.failback_timeout =
account.239.sip_server.2.register_on_enable =
account.239.sip_server.2.failback_subscribe.enable =
account.239.sip_server.2.invite_retry_counts =
account.239.sip_server.2.only_signal_with_registered =

account.239.naptr_build =
account.239.fallback.redundancy_type =
account.239.fallback.timeout =

account.239.dns_cache_type =
account.239.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.239.anonymous_call =
account.239.reject_anonymous_call =
account.239.send_anonymous_code =
account.239.anonymous_call_oncode =
account.239.anonymous_call_offcode =
account.239.send_anonymous_rejection_code =
account.239.anonymous_reject_oncode =
account.239.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.239.codec.g722.enable =
account.239.codec.g722.priority =

account.239.codec.g729.enable =
account.239.codec.g729.priority =

account.239.codec.g726_16.enable =
account.239.codec.g726_16.priority =

account.239.codec.g726_24.enable =
account.239.codec.g726_24.priority =

account.239.codec.g726_32.enable =
account.239.codec.g726_32.priority =

account.239.codec.g726_40.enable =
account.239.codec.g726_40.priority =

account.239.codec.ilbc.enable =
account.239.codec.ilbc.priority =

account.239.codec.pcmu.enable =
account.239.codec.pcmu.priority =

account.239.codec.pcma.enable =
account.239.codec.pcma.priority =

account.239.codec.opus.enable =
account.239.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.239.nat.nat_traversal =
account.239.nat.udp_update_enable =
account.239.nat.udp_update_time =
account.239.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.239.blf.subscribe_period =
account.239.dtmf.type =
account.239.dtmf.dtmf_payload =
account.239.dtmf.info_type =
account.239.100rel_enable =
account.239.subscribe_register =
account.239.subscribe_mwi =
account.239.subscribe_mwi_expires =
account.239.subscribe_mwi_to_vm =
voice_mail.number.239 = %BWVOICE-PORTAL-NUMBER-239%
account.239.display_mwi.enable =
account.239.cid_source =
```

```

account.239.cid_source_privacy =
account.239.cid_source_ppi =
account.239.session_timer.enable =
account.239.session_timer.expires =
account.239.session_timer.refresher =
account.239.enable_user_equal_phone =
account.239.srtp_encryption =
account.239.ptime =
account.239.shared_line = %BWSHAREDLINE-BINARY-239%
account.239.register_mac =
account.239.register_line =
account.239.reg_fail_retry_interval =
account.239.reg_failed_retry_min_time =
account.239.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.239.conf_type =
account.239.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-239%

account.239.sip_server_type =
account.239.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.239.register_expires_overlap =
account.239.subscribe_expires_overlap =
account.239.auto_dial_enable =
account.239.auto_dial_num =
account.239.cp_source =
account.239.transfer_refer_to_contact_header.enable =
#V80 Add
account.239.custom_ua =
account.239.callpark_enable =
account.239.check_cseq.enable =
account.239.check_to_tag.enable =
account.239.hold_use_inactive =
account.239.line_seize.expires =
account.239.update_ack_while_dialing =
account.239.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.239.always_fwd.enable =
account.239.always_fwd.target =
account.239.always_fwd.off_code =
account.239.always_fwd.on_code =
account.239.busy_fwd.enable =

```

```
account.239.busy_fwd.target =
account.239.busy_fwd.off_code =
account.239.busy_fwd.on_code =
account.239.timeout_fwd.enable =
account.239.timeout_fwd.target =
account.239.timeout_fwd.timeout =
account.239.timeout_fwd.off_code =
account.239.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.239.dnd.enable =
account.239.dnd.on_code =
account.239.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.239.reg.enable =
handset.239.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####
account.239.xsi.user =%BWLOGIN-ID-239%
account.239.xsi.password =%XSIPASSWORD-239%
account.239.xsi.host =%XSP_ADDRESS%
account.239.xsi.server_type =
account.239.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.239.ldap.enable =
handset.239.ldap.name_filter=
handset.239.ldap.number_filter=
handset.239.ldap.host=
handset.239.ldap.port=
handset.239.ldap.base=
handset.239.ldap.user=
handset.239.ldap.password=
handset.239.ldap.max_hits=
handset.239.ldap.name_attr=
handset.239.ldap.numb_attr=
handset.239.ldap.display_name=
handset.239.ldap.version=
handset.239.ldap.call_in_lookup=
```

```
handset.239.ldap.ldap_sort=
handset.239.ldap.tls_mode=
handset.239.ldap.call_out_lookup=
handset.239.ldap.incoming_call_special_search.enable=

#####
#####
##                               Account240 Settings
##
#####
#####

account.240.enable=%BWLIN-BINARY-240%
account.240.label=%BWEXTENSION-240%
account.240.display_name=%BWCLID-240%
account.240.auth_name=%BWAUTHUSER-240%
account.240.user_name=%BWLINPORT-240%
account.240.password=%BWAUTHPASSWORD-240%

#W80B ADD
account.240.sip_server.template =
account.240.media_transmit.enable =

account.240.alarm.template =
account.240.alarm.server =
account.240.alarm.number =

#####
#####
##                               Failback
##
#####
#####

account.240.sip_server.1.failback_mode =
account.240.sip_server.1.failback_timeout =
account.240.sip_server.1.register_on_enable =
account.240.sip_server.1.failback_subscribe.enable =
account.240.sip_server.1.invite_retry_counts =
account.240.sip_server.1.only_signal_with_registered =

account.240.sip_server.2.failback_mode =
account.240.sip_server.2.failback_timeout =
account.240.sip_server.2.register_on_enable =
account.240.sip_server.2.failback_subscribe.enable =
account.240.sip_server.2.invite_retry_counts =
account.240.sip_server.2.only_signal_with_registered =

account.240.naptr_build =
account.240.fallback.redundancy_type =
account.240.fallback.timeout =

account.240.dns_cache_type =
account.240.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
```



```

account.240.anonymous_call =
account.240.reject_anonymous_call =
account.240.send_anonymous_code =
account.240.anonymous_call_oncode =
account.240.anonymous_call_offcode =
account.240.send_anonymous_rejection_code =
account.240.anonymous_reject_oncode =
account.240.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.240.codec.g722.enable =
account.240.codec.g722.priority =

account.240.codec.g729.enable =
account.240.codec.g729.priority =

account.240.codec.g726_16.enable =
account.240.codec.g726_16.priority =

account.240.codec.g726_24.enable =
account.240.codec.g726_24.priority =

account.240.codec.g726_32.enable =
account.240.codec.g726_32.priority =

account.240.codec.g726_40.enable =
account.240.codec.g726_40.priority =

account.240.codec.ilbc.enable =
account.240.codec.ilbc.priority =

account.240.codec.pcmu.enable =
account.240.codec.pcmu.priority =

account.240.codec.pcma.enable =
account.240.codec.pcma.priority =

account.240.codec.opus.enable =
account.240.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
##
#####
#####

account.240.nat.nat_traversal =
account.240.nat.udp_update_enable =
account.240.nat.udp_update_time =
account.240.nat.rport =

#####
#####
##                                     Register Advanced
##

```

```
#####
#####

account.240.blf.subscribe_period =
account.240.dtmf.type =
account.240.dtmf.dtmf_payload =
account.240.dtmf.info_type =
account.240.100rel_enable =
account.240.subscribe_register =
account.240.subscribe_mwi =
account.240.subscribe_mwi_expires =
account.240.subscribe_mwi_to_vm =
voice_mail.number.240 = %BWVOICE-PORTAL-NUMBER-240%
account.240.display_mwi.enable =
account.240.cid_source =
account.240.cid_source_privacy =
account.240.cid_source_ppi =
account.240.session_timer.enable =
account.240.session_timer.expires =
account.240.session_timer.refreshes =
account.240.enable_user_equal_phone =
account.240.srtp_encryption =
account.240.ptime =
account.240.shared_line = %BWSHAREDLINE-BINARY-240%
account.240.register_mac =
account.240.register_line =
account.240.reg_fail_retry_interval =
account.240.reg_failed_retry_min_time =
account.240.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.240.conf_type =
account.240.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-240%

account.240.sip_server_type =
account.240.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.240.register_expires_overlap =
account.240.subscribe_expires_overlap =
account.240.auto_dial_enable =
account.240.auto_dial_num =
account.240.cp_source =
account.240.transfer_refer_to_contact_header.enable =
#V80 Add
account.240.custom_ua =
account.240.callpark_enable =
account.240.check_cseq.enable =
account.240.check_to_tag.enable =
account.240.hold_use_inactive =
```

```

account.240.line_seize.expires =
account.240.update_ack_while_dialing =
account.240.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.240.always_fwd.enable =
account.240.always_fwd.target =
account.240.always_fwd.off_code =
account.240.always_fwd.on_code =
account.240.busy_fwd.enable =
account.240.busy_fwd.target =
account.240.busy_fwd.off_code =
account.240.busy_fwd.on_code =
account.240.timeout_fwd.enable =
account.240.timeout_fwd.target =
account.240.timeout_fwd.timeout =
account.240.timeout_fwd.off_code =
account.240.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.240.dnd.enable =
account.240.dnd.on_code =
account.240.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.240.reg.enable =
handset.240.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.240.xsi.user =%BWLOGIN-ID-240%
account.240.xsi.password =%XSIPASSWORD-240%
account.240.xsi.host =%XSP_ADDRESS%
account.240.xsi.server_type =
account.240.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.240.ldap.enable =
handset.240.ldap.name_filter=
handset.240.ldap.number_filter=
handset.240.ldap.host=
handset.240.ldap.port=
handset.240.ldap.base=
handset.240.ldap.user=
handset.240.ldap.password=
handset.240.ldap.max_hits=
handset.240.ldap.name_attr=
handset.240.ldap.numb_attr=
handset.240.ldap.display_name=
handset.240.ldap.version=
handset.240.ldap.call_in_lookup=
handset.240.ldap.ldap_sort=
handset.240.ldap.tls_mode=
handset.240.ldap.call_out_lookup=
handset.240.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account241 Settings
##
#####
#####

account.241.enable=%BWLIN-BINARY-241%
account.241.label=%BWEXTENSION-241%
account.241.display_name=%BWCLID-241%
account.241.auth_name=%BWAUTHUSER-241%
account.241.user_name=%BWLINPORT-241%
account.241.password=%BWAUTHPASSWORD-241%

#W80B ADD
account.241.sip_server.template =
account.241.media_transmit.enable =

account.241.alarm.template =
account.241.alarm.server =
account.241.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.241.sip_server.1.failback_mode =
account.241.sip_server.1.failback_timeout =
account.241.sip_server.1.register_on_enable =
account.241.sip_server.1.failback_subscribe.enable =
account.241.sip_server.1.invite_retry_counts =
account.241.sip_server.1.only_signal_with_registered =

account.241.sip_server.2.failback_mode =
account.241.sip_server.2.failback_timeout =
account.241.sip_server.2.register_on_enable =
account.241.sip_server.2.failback_subscribe.enable =
```

```

account.241.sip_server.2.invite_retry_counts =
account.241.sip_server.2.only_signal_with_registered =

account.241.naptr_build =
account.241.fallback.redundancy_type =
account.241.fallback.timeout =

account.241.dns_cache_type =
account.241.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.241.anonymous_call =
account.241.reject_anonymous_call =
account.241.send_anonymous_code =
account.241.anonymous_call_oncode =
account.241.anonymous_call_offcode =
account.241.send_anonymous_rejection_code =
account.241.anonymous_reject_oncode =
account.241.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.241.codec.g722.enable =
account.241.codec.g722.priority =

account.241.codec.g729.enable =
account.241.codec.g729.priority =

account.241.codec.g726_16.enable =
account.241.codec.g726_16.priority =

account.241.codec.g726_24.enable =
account.241.codec.g726_24.priority =

account.241.codec.g726_32.enable =
account.241.codec.g726_32.priority =

account.241.codec.g726_40.enable =
account.241.codec.g726_40.priority =

account.241.codec.ilbc.enable =
account.241.codec.ilbc.priority =

account.241.codec.pcmu.enable =
account.241.codec.pcmu.priority =

account.241.codec.pcma.enable =
account.241.codec.pcma.priority =

account.241.codec.opus.enable =
account.241.codec.opus.priority =

```

```
#####
#####
##                                     NAT Settings
##
#####
#####

account.241.nat.nat_traversal =
account.241.nat.udp_update_enable =
account.241.nat.udp_update_time =
account.241.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.241.blf.subscribe_period =
account.241.dtmf.type =
account.241.dtmf.dtmf_payload =
account.241.dtmf.info_type =
account.241.100rel_enable =
account.241.subscribe_register =
account.241.subscribe_mwi =
account.241.subscribe_mwi_expires =
account.241.subscribe_mwi_to_vm =
voice_mail.number.241 = %BWVOICE-PORTAL-NUMBER-241%
account.241.display_mwi.enable =
account.241.cid_source =
account.241.cid_source_privacy =
account.241.cid_source_ppi =
account.241.session_timer.enable =
account.241.session_timer.expires =
account.241.session_timer.refresher =
account.241.enable_user_equal_phone =
account.241.srtp_encryption =
account.241.ptime =
account.241.shared_line = %BWSHAREDLINE-BINARY-241%
account.241.register_mac =
account.241.register_line =
account.241.reg_fail_retry_interval =
account.241.reg_failed_retry_min_time =
account.241.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####

account.241.conf_type =
account.241.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-241%

account.241.sip_server_type =
account.241.unregister_on_reboot =

#####
#####
##                                     Register Other
##
##
```

```
#####
#####
##DECT V81 Add

account.241.register_expires_overlap =
account.241.subscribe_expires_overlap =
account.241.auto_dial_enable =
account.241.auto_dial_num =
account.241.cp_source =
account.241.transfer_refer_to_contact_header.enable =
#V80 Add
account.241.custom_ua =
account.241.callpark_enable =
account.241.check_cseq.enable =
account.241.check_to_tag.enable =
account.241.hold_use_inactive =
account.241.line_seize.expires =
account.241.update_ack_while_dialing =
account.241.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.241.always_fwd.enable =
account.241.always_fwd.target =
account.241.always_fwd.off_code =
account.241.always_fwd.on_code =
account.241.busy_fwd.enable =
account.241.busy_fwd.target =
account.241.busy_fwd.off_code =
account.241.busy_fwd.on_code =
account.241.timeout_fwd.enable =
account.241.timeout_fwd.target =
account.241.timeout_fwd.timeout =
account.241.timeout_fwd.off_code =
account.241.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.241.dnd.enable =
account.241.dnd.on_code =
account.241.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.241.reg.enable =
handset.241.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.241.xsi.user =%BWLOGIN-ID-241%
account.241.xsi.password =%XSIPASSWORD-241%
account.241.xsi.host =%XSP_ADDRESS%
account.241.xsi.server_type =
account.241.xsi.port =

#####
#####
##          LADP
##
#####
handset.241.ldap.enable =
handset.241.ldap.name_filter=
handset.241.ldap.number_filter=
handset.241.ldap.host=
handset.241.ldap.port=
handset.241.ldap.base=
handset.241.ldap.user=
handset.241.ldap.password=
handset.241.ldap.max_hits=
handset.241.ldap.name_attr=
handset.241.ldap.numb_attr=
handset.241.ldap.display_name=
handset.241.ldap.version=
handset.241.ldap.call_in_lookup=
handset.241.ldap.ldap_sort=
handset.241.ldap.tls_mode=
handset.241.ldap.call_out_lookup=
handset.241.ldap.incoming_call_special_search.enable=

#####
#####
##          Account242 Settings
##
#####

account.242.enable=%BWLINE-BINARY-242%
account.242.label=%BWEXTENSION-242%
account.242.display_name=%BWCLID-242%
account.242.auth_name=%BWAUTHUSER-242%
account.242.user_name=%BWLINEPORT-242%
account.242.password=%BWAUTHPASSWORD-242%

#W80B ADD
account.242.sip_server.template =
account.242.media_transmit.enable =

account.242.alarm.template =
account.242.alarm.server =
account.242.alarm.number =

```



```
#####
#####
##                               Failback
##
#####
#####
account.242.sip_server.1.failback_mode =
account.242.sip_server.1.failback_timeout =
account.242.sip_server.1.register_on_enable =
account.242.sip_server.1.failback_subscribe.enable =
account.242.sip_server.1.invite_retry_counts =
account.242.sip_server.1.only_signal_with_registered =

account.242.sip_server.2.failback_mode =
account.242.sip_server.2.failback_timeout =
account.242.sip_server.2.register_on_enable =
account.242.sip_server.2.failback_subscribe.enable =
account.242.sip_server.2.invite_retry_counts =
account.242.sip_server.2.only_signal_with_registered =

account.242.naptr_build =
account.242.fallback.redundancy_type =
account.242.fallback.timeout =

account.242.dns_cache_type =
account.242.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.242.anonymous_call =
account.242.reject_anonymous_call =
account.242.send_anonymous_code =
account.242.anonymous_call_oncode =
account.242.anonymous_call_offcode =
account.242.send_anonymous_rejection_code =
account.242.anonymous_reject_oncode =
account.242.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.242.codec.g722.enable =
account.242.codec.g722.priority =

account.242.codec.g729.enable =
account.242.codec.g729.priority =

account.242.codec.g726_16.enable =
account.242.codec.g726_16.priority =

account.242.codec.g726_24.enable =
account.242.codec.g726_24.priority =

account.242.codec.g726_32.enable =
account.242.codec.g726_32.priority =
```

```

account.242.codec.g726_40.enable =
account.242.codec.g726_40.priority =

account.242.codec.ilbc.enable =
account.242.codec.ilbc.priority =

account.242.codec.pcmu.enable =
account.242.codec.pcmu.priority =

account.242.codec.pcma.enable =
account.242.codec.pcma.priority =

account.242.codec.opus.enable =
account.242.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.242.nat.nat_traversal =
account.242.nat.udp_update_enable =
account.242.nat.udp_update_time =
account.242.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.242.blf.subscribe_period =
account.242.dtmf.type =
account.242.dtmf.dtmf_payload =
account.242.dtmf.info_type =
account.242.100rel_enable =
account.242.subscribe_register =
account.242.subscribe_mwi =
account.242.subscribe_mwi_expires =
account.242.subscribe_mwi_to_vm =
voice_mail.number.242 = %BWVOICE-PORTAL-NUMBER-242%
account.242.display_mwi.enable =
account.242.cid_source =
account.242.cid_source_privacy =
account.242.cid_source_ppi =
account.242.session_timer.enable =
account.242.session_timer.expires =
account.242.session_timer.refresher =
account.242.enable_user_equal_phone =
account.242.srtp_encryption =
account.242.ptime =
account.242.shared_line = %BWSHAREDLINE-BINARY-242%
account.242.register_mac =
account.242.register_line =
account.242.reg_fail_retry_interval =
account.242.reg_failed_retry_min_time =
account.242.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.242.conf_type =
account.242.conf_uri = %BWNWORK-CONFERENCE-SIPURI-242%

account.242.sip_server_type =
account.242.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.242.register_expires_overlap =
account.242.subscribe_expires_overlap =
account.242.auto_dial_enable =
account.242.auto_dial_num =
account.242.cp_source =
account.242.transfer_refer_to_contact_header.enable =
#V80 Add
account.242.custom_ua =
account.242.callpark_enable =
account.242.check_cseq.enable =
account.242.check_to_tag.enable =
account.242.hold_use_inactive =
account.242.line_seize.expires =
account.242.update_ack_while_dialing =
account.242.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.242.always_fwd.enable =
account.242.always_fwd.target =
account.242.always_fwd.off_code =
account.242.always_fwd.on_code =
account.242.busy_fwd.enable =
account.242.busy_fwd.target =
account.242.busy_fwd.off_code =
account.242.busy_fwd.on_code =
account.242.timeout_fwd.enable =
account.242.timeout_fwd.target =
account.242.timeout_fwd.timeout =
account.242.timeout_fwd.off_code =
account.242.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```

account.242.dnd.enable =
account.242.dnd.on_code =
account.242.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.242.reg.enable =
handset.242.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.242.xsi.user =%BWLOGIN-ID-242%
account.242.xsi.password =%XSIPASSWORD-242%
account.242.xsi.host =%XSP_ADDRESS%
account.242.xsi.server_type =
account.242.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.242.ldap.enable =
handset.242.ldap.name_filter=
handset.242.ldap.number_filter=
handset.242.ldap.host=
handset.242.ldap.port=
handset.242.ldap.base=
handset.242.ldap.user=
handset.242.ldap.password=
handset.242.ldap.max_hits=
handset.242.ldap.name_attr=
handset.242.ldap.numb_attr=
handset.242.ldap.display_name=
handset.242.ldap.version=
handset.242.ldap.call_in_lookup=
handset.242.ldap.ldap_sort=
handset.242.ldap.tls_mode=
handset.242.ldap.call_out_lookup=
handset.242.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account243 Settings
##
#####
#####

```

```

account.243.enable=%BWLIN-BINARY-243%
account.243.label=%BWEXTENSION-243%
account.243.display_name=%BWCLID-243%
account.243.auth_name=%BWAUTHUSER-243%
account.243.user_name=%BWLINPORT-243%
account.243.password=%BWAUTHPASSWORD-243%

#W80B ADD
account.243.sip_server.template =
account.243.media_transmit.enable =

account.243.alarm.template =
account.243.alarm.server =
account.243.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.243.sip_server.1.failback_mode =
account.243.sip_server.1.failback_timeout =
account.243.sip_server.1.register_on_enable =
account.243.sip_server.1.failback_subscribe.enable =
account.243.sip_server.1.invite_retry_counts =
account.243.sip_server.1.only_signal_with_registered =

account.243.sip_server.2.failback_mode =
account.243.sip_server.2.failback_timeout =
account.243.sip_server.2.register_on_enable =
account.243.sip_server.2.failback_subscribe.enable =
account.243.sip_server.2.invite_retry_counts =
account.243.sip_server.2.only_signal_with_registered =

account.243.naptr_build =
account.243.fallback.redundancy_type =
account.243.fallback.timeout =

account.243.dns_cache_type =
account.243.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.243.anonymous_call =
account.243.reject_anonymous_call =
account.243.send_anonymous_code =
account.243.anonymous_call_oncode =
account.243.anonymous_call_offcode =
account.243.send_anonymous_rejection_code =
account.243.anonymous_reject_oncode =
account.243.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.243.codec.g722.enable =
account.243.codec.g722.priority =

account.243.codec.g729.enable =
account.243.codec.g729.priority =

account.243.codec.g726_16.enable =
account.243.codec.g726_16.priority =

account.243.codec.g726_24.enable =
account.243.codec.g726_24.priority =

account.243.codec.g726_32.enable =
account.243.codec.g726_32.priority =

account.243.codec.g726_40.enable =
account.243.codec.g726_40.priority =

account.243.codec.ilbc.enable =
account.243.codec.ilbc.priority =

account.243.codec.pcmu.enable =
account.243.codec.pcmu.priority =

account.243.codec.pcma.enable =
account.243.codec.pcma.priority =

account.243.codec.opus.enable =
account.243.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.243.nat.nat_traversal =
account.243.nat.udp_update_enable =
account.243.nat.udp_update_time =
account.243.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.243.blf.subscribe_period =
account.243.dtmf.type =
account.243.dtmf.dtmf_payload =
account.243.dtmf.info_type =
account.243.100rel_enable =
account.243.subscribe_register =
account.243.subscribe_mwi =
account.243.subscribe_mwi_expires =
account.243.subscribe_mwi_to_vm =
voice_mail.number.243 = %BWVOICE-PORTAL-NUMBER-243%
account.243.display_mwi.enable =
account.243.cid_source =
```

```

account.243.cid_source_privacy =
account.243.cid_source_ppi =
account.243.session_timer.enable =
account.243.session_timer.expires =
account.243.session_timer.refresher =
account.243.enable_user_equal_phone =
account.243.srtp_encryption =
account.243.ptime =
account.243.shared_line = %BWSHAREDLINE-BINARY-243%
account.243.register_mac =
account.243.register_line =
account.243.reg_fail_retry_interval =
account.243.reg_failed_retry_min_time =
account.243.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.243.conf_type =
account.243.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-243%

account.243.sip_server_type =
account.243.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.243.register_expires_overlap =
account.243.subscribe_expires_overlap =
account.243.auto_dial_enable =
account.243.auto_dial_num =
account.243.cp_source =
account.243.transfer_refer_to_contact_header.enable =
#V80 Add
account.243.custom_ua =
account.243.callpark_enable =
account.243.check_cseq.enable =
account.243.check_to_tag.enable =
account.243.hold_use_inactive =
account.243.line_seize.expires =
account.243.update_ack_while_dialing =
account.243.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.243.always_fwd.enable =
account.243.always_fwd.target =
account.243.always_fwd.off_code =
account.243.always_fwd.on_code =
account.243.busy_fwd.enable =

```

```

account.243.busy_fwd.target =
account.243.busy_fwd.off_code =
account.243.busy_fwd.on_code =
account.243.timeout_fwd.enable =
account.243.timeout_fwd.target =
account.243.timeout_fwd.timeout =
account.243.timeout_fwd.off_code =
account.243.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.243.dnd.enable =
account.243.dnd.on_code =
account.243.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.243.reg.enable =
handset.243.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.243.xsi.user =%BWLOGIN-ID-243%
account.243.xsi.password =%XSIPASSWORD-243%
account.243.xsi.host =%XSP_ADDRESS%
account.243.xsi.server_type =
account.243.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.243.ldap.enable =
handset.243.ldap.name_filter=
handset.243.ldap.number_filter=
handset.243.ldap.host=
handset.243.ldap.port=
handset.243.ldap.base=
handset.243.ldap.user=
handset.243.ldap.password=
handset.243.ldap.max_hits=
handset.243.ldap.name_attr=
handset.243.ldap.numb_attr=
handset.243.ldap.display_name=
handset.243.ldap.version=
handset.243.ldap.call_in_lookup=

```



```

handset.243.ldap.ldap_sort=
handset.243.ldap.tls_mode=
handset.243.ldap.call_out_lookup=
handset.243.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account244 Settings
##
#####
#####

account.244.enable=%BWLIN-BINARY-244%
account.244.label=%BWEXTENSION-244%
account.244.display_name=%BWCLID-244%
account.244.auth_name=%BWAUTHUSER-244%
account.244.user_name=%BWLINPORT-244%
account.244.password=%BWAUTHPASSWORD-244%

#W80B ADD
account.244.sip_server.template =
account.244.media_transmit.enable =

account.244.alarm.template =
account.244.alarm.server =
account.244.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.244.sip_server.1.failback_mode =
account.244.sip_server.1.failback_timeout =
account.244.sip_server.1.register_on_enable =
account.244.sip_server.1.failback_subscribe.enable =
account.244.sip_server.1.invite_retry_counts =
account.244.sip_server.1.only_signal_with_registered =

account.244.sip_server.2.failback_mode =
account.244.sip_server.2.failback_timeout =
account.244.sip_server.2.register_on_enable =
account.244.sip_server.2.failback_subscribe.enable =
account.244.sip_server.2.invite_retry_counts =
account.244.sip_server.2.only_signal_with_registered =

account.244.naptr_build =
account.244.fallback.redundancy_type =
account.244.fallback.timeout =

account.244.dns_cache_type =
account.244.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####

```

```

account.244.anonymous_call =
account.244.reject_anonymous_call =
account.244.send_anonymous_code =
account.244.anonymous_call_oncode =
account.244.anonymous_call_offcode =
account.244.send_anonymous_rejection_code =
account.244.anonymous_reject_oncode =
account.244.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.244.codec.g722.enable =
account.244.codec.g722.priority =

account.244.codec.g729.enable =
account.244.codec.g729.priority =

account.244.codec.g726_16.enable =
account.244.codec.g726_16.priority =

account.244.codec.g726_24.enable =
account.244.codec.g726_24.priority =

account.244.codec.g726_32.enable =
account.244.codec.g726_32.priority =

account.244.codec.g726_40.enable =
account.244.codec.g726_40.priority =

account.244.codec.ilbc.enable =
account.244.codec.ilbc.priority =

account.244.codec.pcmu.enable =
account.244.codec.pcmu.priority =

account.244.codec.pcma.enable =
account.244.codec.pcma.priority =

account.244.codec.opus.enable =
account.244.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
##
#####
#####

account.244.nat.nat_traversal =
account.244.nat.udp_update_enable =
account.244.nat.udp_update_time =
account.244.nat.rport =

#####
#####
##                                     Register Advanced
##
##

```

```
#####
#####

account.244.blf.subscribe_period =
account.244.dtmf.type =
account.244.dtmf.dtmf_payload =
account.244.dtmf.info_type =
account.244.100rel_enable =
account.244.subscribe_register =
account.244.subscribe_mwi =
account.244.subscribe_mwi_expires =
account.244.subscribe_mwi_to_vm =
voice_mail.number.244 = %BWVOICE-PORTAL-NUMBER-244%
account.244.display_mwi.enable =
account.244.cid_source =
account.244.cid_source_privacy =
account.244.cid_source_ppi =
account.244.session_timer.enable =
account.244.session_timer.expires =
account.244.session_timer.refresher =
account.244.enable_user_equal_phone =
account.244.srtp_encryption =
account.244.ptime =
account.244.shared_line = %BWSHAREDLINE-BINARY-244%
account.244.register_mac =
account.244.register_line =
account.244.reg_fail_retry_interval =
account.244.reg_failed_retry_min_time =
account.244.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.244.conf_type =
account.244.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-244%

account.244.sip_server_type =
account.244.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.244.register_expires_overlap =
account.244.subscribe_expires_overlap =
account.244.auto_dial_enable =
account.244.auto_dial_num =
account.244.cp_source =
account.244.transfer_refer_to_contact_header.enable =
#V80 Add
account.244.custom_ua =
account.244.callpark_enable =
account.244.check_cseq.enable =
account.244.check_to_tag.enable =
account.244.hold_use_inactive =
```

```

account.244.line_seize.expires =
account.244.update_ack_while_dialing =
account.244.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.244.always_fwd.enable =
account.244.always_fwd.target =
account.244.always_fwd.off_code =
account.244.always_fwd.on_code =
account.244.busy_fwd.enable =
account.244.busy_fwd.target =
account.244.busy_fwd.off_code =
account.244.busy_fwd.on_code =
account.244.timeout_fwd.enable =
account.244.timeout_fwd.target =
account.244.timeout_fwd.timeout =
account.244.timeout_fwd.off_code =
account.244.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.244.dnd.enable =
account.244.dnd.on_code =
account.244.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.244.reg.enable =
handset.244.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.244.xsi.user =%BWLOGIN-ID-244%
account.244.xsi.password =%XSIPASSWORD-244%
account.244.xsi.host =%XSP_ADDRESS%
account.244.xsi.server_type =
account.244.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.244.ldap.enable =
handset.244.ldap.name_filter=
handset.244.ldap.number_filter=
handset.244.ldap.host=
handset.244.ldap.port=
handset.244.ldap.base=
handset.244.ldap.user=
handset.244.ldap.password=
handset.244.ldap.max_hits=
handset.244.ldap.name_attr=
handset.244.ldap.numb_attr=
handset.244.ldap.display_name=
handset.244.ldap.version=
handset.244.ldap.call_in_lookup=
handset.244.ldap.ldap_sort=
handset.244.ldap.tls_mode=
handset.244.ldap.call_out_lookup=
handset.244.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account245 Settings
##
#####
#####

account.245.enable=%BWLIN-BINARY-245%
account.245.label=%BWEXTENSION-245%
account.245.display_name=%BWCLID-245%
account.245.auth_name=%BWAUTHUSER-245%
account.245.user_name=%BWLINPORT-245%
account.245.password=%BWAUTHPASSWORD-245%

#W80B ADD
account.245.sip_server.template =
account.245.media_transmit.enable =

account.245.alarm.template =
account.245.alarm.server =
account.245.alarm.number =

#####
#####
##                                     Failback
##
#####
#####

account.245.sip_server.1.failback_mode =
account.245.sip_server.1.failback_timeout =
account.245.sip_server.1.register_on_enable =
account.245.sip_server.1.failback_subscribe.enable =
account.245.sip_server.1.invite_retry_counts =
account.245.sip_server.1.only_signal_with_registered =

account.245.sip_server.2.failback_mode =
account.245.sip_server.2.failback_timeout =
account.245.sip_server.2.register_on_enable =
account.245.sip_server.2.failback_subscribe.enable =
```

```
account.245.sip_server.2.invite_retry_counts =
account.245.sip_server.2.only_signal_with_registered =

account.245.naptr_build =
account.245.fallback.redundancy_type =
account.245.fallback.timeout =

account.245.dns_cache_type =
account.245.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.245.anonymous_call =
account.245.reject_anonymous_call =
account.245.send_anonymous_code =
account.245.anonymous_call_oncode =
account.245.anonymous_call_offcode =
account.245.send_anonymous_rejection_code =
account.245.anonymous_reject_oncode =
account.245.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.245.codec.g722.enable =
account.245.codec.g722.priority =

account.245.codec.g729.enable =
account.245.codec.g729.priority =

account.245.codec.g726_16.enable =
account.245.codec.g726_16.priority =

account.245.codec.g726_24.enable =
account.245.codec.g726_24.priority =

account.245.codec.g726_32.enable =
account.245.codec.g726_32.priority =

account.245.codec.g726_40.enable =
account.245.codec.g726_40.priority =

account.245.codec.ilbc.enable =
account.245.codec.ilbc.priority =

account.245.codec.pcmu.enable =
account.245.codec.pcmu.priority =

account.245.codec.pcma.enable =
account.245.codec.pcma.priority =

account.245.codec.opus.enable =
account.245.codec.opus.priority =
```

```
#####
#####
##                                NAT Settings
##
#####
#####

account.245.nat.nat_traversal =
account.245.nat.udp_update_enable =
account.245.nat.udp_update_time =
account.245.nat.rport =

#####
#####
##                                Register Advanced
##
#####
#####

account.245.blf.subscribe_period =
account.245.dtmf.type =
account.245.dtmf.dtmf_payload =
account.245.dtmf.info_type =
account.245.100rel_enable =
account.245.subscribe_register =
account.245.subscribe_mwi =
account.245.subscribe_mwi_expires =
account.245.subscribe_mwi_to_vm =
voice_mail.number.245 = %BWVOICE-PORTAL-NUMBER-245%
account.245.display_mwi.enable =
account.245.cid_source =
account.245.cid_source_privacy =
account.245.cid_source_ppi =
account.245.session_timer.enable =
account.245.session_timer.expires =
account.245.session_timer.refresher =
account.245.enable_user_equal_phone =
account.245.srtp_encryption =
account.245.ptime =
account.245.shared_line = %BWSHAREDLINE-BINARY-245%
account.245.register_mac =
account.245.register_line =
account.245.reg_fail_retry_interval =
account.245.reg_failed_retry_min_time =
account.245.reg_failed_retry_max_time =

#####
#####
##                                Network Conference
##
#####
#####

account.245.conf_type =
account.245.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-245%

account.245.sip_server_type =
account.245.unregister_on_reboot =

#####
#####
##                                Register Other
##
```

```
#####
#####
##DECT V81 Add

account.245.register_expires_overlap =
account.245.subscribe_expires_overlap =
account.245.auto_dial_enable =
account.245.auto_dial_num =
account.245.cp_source =
account.245.transfer_refer_to_contact_header.enable =
#V80 Add
account.245.custom_ua =
account.245.callpark_enable =
account.245.check_cseq.enable =
account.245.check_to_tag.enable =
account.245.hold_use_inactive =
account.245.line_seize.expires =
account.245.update_ack_while_dialing =
account.245.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.245.always_fwd.enable =
account.245.always_fwd.target =
account.245.always_fwd.off_code =
account.245.always_fwd.on_code =
account.245.busy_fwd.enable =
account.245.busy_fwd.target =
account.245.busy_fwd.off_code =
account.245.busy_fwd.on_code =
account.245.timeout_fwd.enable =
account.245.timeout_fwd.target =
account.245.timeout_fwd.timeout =
account.245.timeout_fwd.off_code =
account.245.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.245.dnd.enable =
account.245.dnd.on_code =
account.245.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.245.reg.enable =
handset.245.ipui =

#####
#####
```



```

##          Broadsoft XSI
##
#####

account.245.xsi.user =%BWLOGIN-ID-245%
account.245.xsi.password =%XSIPASSWORD-245%
account.245.xsi.host =%XSP_ADDRESS%
account.245.xsi.server_type =
account.245.xsi.port =

#####
#####
##          LADP
##
#####
handset.245.ldap.enable =
handset.245.ldap.name_filter=
handset.245.ldap.number_filter=
handset.245.ldap.host=
handset.245.ldap.port=
handset.245.ldap.base=
handset.245.ldap.user=
handset.245.ldap.password=
handset.245.ldap.max_hits=
handset.245.ldap.name_attr=
handset.245.ldap.numb_attr=
handset.245.ldap.display_name=
handset.245.ldap.version=
handset.245.ldap.call_in_lookup=
handset.245.ldap.ldap_sort=
handset.245.ldap.tls_mode=
handset.245.ldap.call_out_lookup=
handset.245.ldap.incoming_call_special_search.enable=

#####
#####
##          Account246 Settings
##
#####

account.246.enable=%BWLINE-BINARY-246%
account.246.label=%BWEXTENSION-246%
account.246.display_name=%BWCLID-246%
account.246.auth_name=%BWAUTHUSER-246%
account.246.user_name=%BWLINEPORT-246%
account.246.password=%BWAUTHPASSWORD-246%

#W80B ADD
account.246.sip_server.template =
account.246.media_transmit.enable =

account.246.alarm.template =
account.246.alarm.server =
account.246.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.246.sip_server.1.failback_mode =
account.246.sip_server.1.failback_timeout =
account.246.sip_server.1.register_on_enable =
account.246.sip_server.1.failback_subscribe.enable =
account.246.sip_server.1.invite_retry_counts =
account.246.sip_server.1.only_signal_with_registered =

account.246.sip_server.2.failback_mode =
account.246.sip_server.2.failback_timeout =
account.246.sip_server.2.register_on_enable =
account.246.sip_server.2.failback_subscribe.enable =
account.246.sip_server.2.invite_retry_counts =
account.246.sip_server.2.only_signal_with_registered =

account.246.naptr_build =
account.246.fallback.redundancy_type =
account.246.fallback.timeout =

account.246.dns_cache_type =
account.246.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.246.anonymous_call =
account.246.reject_anonymous_call =
account.246.send_anonymous_code =
account.246.anonymous_call_oncode =
account.246.anonymous_call_offcode =
account.246.send_anonymous_rejection_code =
account.246.anonymous_reject_oncode =
account.246.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.246.codec.g722.enable =
account.246.codec.g722.priority =

account.246.codec.g729.enable =
account.246.codec.g729.priority =

account.246.codec.g726_16.enable =
account.246.codec.g726_16.priority =

account.246.codec.g726_24.enable =
account.246.codec.g726_24.priority =

account.246.codec.g726_32.enable =
account.246.codec.g726_32.priority =
```

```

account.246.codec.g726_40.enable =
account.246.codec.g726_40.priority =

account.246.codec.ilbc.enable =
account.246.codec.ilbc.priority =

account.246.codec.pcmu.enable =
account.246.codec.pcmu.priority =

account.246.codec.pcma.enable =
account.246.codec.pcma.priority =

account.246.codec.opus.enable =
account.246.codec.opus.priority =

#####
#####
##
##                               NAT Settings
##
#####
#####

account.246.nat.nat_traversal =
account.246.nat.udp_update_enable =
account.246.nat.udp_update_time =
account.246.nat.rport =

#####
#####
##
##                               Register Advanced
##
#####
#####

account.246.blf.subscribe_period =
account.246.dtmf.type =
account.246.dtmf.dtmf_payload =
account.246.dtmf.info_type =
account.246.100rel_enable =
account.246.subscribe_register =
account.246.subscribe_mwi =
account.246.subscribe_mwi_expires =
account.246.subscribe_mwi_to_vm =
voice_mail.number.246 = %BWVOICE-PORTAL-NUMBER-246%
account.246.display_mwi.enable =
account.246.cid_source =
account.246.cid_source_privacy =
account.246.cid_source_ppi =
account.246.session_timer.enable =
account.246.session_timer.expires =
account.246.session_timer.refresher =
account.246.enable_user_equal_phone =
account.246.srtp_encryption =
account.246.ptime =
account.246.shared_line = %BWSHAREDLINE-BINARY-246%
account.246.register_mac =
account.246.register_line =
account.246.reg_fail_retry_interval =
account.246.reg_failed_retry_min_time =
account.246.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.246.conf_type =
account.246.conf_uri = %BWNWORK-CONFERENCE-SIPURI-246%

account.246.sip_server_type =
account.246.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.246.register_expires_overlap =
account.246.subscribe_expires_overlap =
account.246.auto_dial_enable =
account.246.auto_dial_num =
account.246.cp_source =
account.246.transfer_refer_to_contact_header.enable =
#V80 Add
account.246.custom_ua =
account.246.callpark_enable =
account.246.check_cseq.enable =
account.246.check_to_tag.enable =
account.246.hold_use_inactive =
account.246.line_seize.expires =
account.246.update_ack_while_dialing =
account.246.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.246.always_fwd.enable =
account.246.always_fwd.target =
account.246.always_fwd.off_code =
account.246.always_fwd.on_code =
account.246.busy_fwd.enable =
account.246.busy_fwd.target =
account.246.busy_fwd.off_code =
account.246.busy_fwd.on_code =
account.246.timeout_fwd.enable =
account.246.timeout_fwd.target =
account.246.timeout_fwd.timeout =
account.246.timeout_fwd.off_code =
account.246.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```
account.246.dnd.enable =
account.246.dnd.on_code =
account.246.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.246.reg.enable =
handset.246.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.246.xsi.user =%BWLOGIN-ID-246%
account.246.xsi.password =%XSIPASSWORD-246%
account.246.xsi.host =%XSP_ADDRESS%
account.246.xsi.server_type =
account.246.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.246.ldap.enable =
handset.246.ldap.name_filter=
handset.246.ldap.number_filter=
handset.246.ldap.host=
handset.246.ldap.port=
handset.246.ldap.base=
handset.246.ldap.user=
handset.246.ldap.password=
handset.246.ldap.max_hits=
handset.246.ldap.name_attr=
handset.246.ldap.numb_attr=
handset.246.ldap.display_name=
handset.246.ldap.version=
handset.246.ldap.call_in_lookup=
handset.246.ldap.ldap_sort=
handset.246.ldap.tls_mode=
handset.246.ldap.call_out_lookup=
handset.246.ldap.incoming_call_special_search.enable=

#####
#####
##                                Account247 Settings
##
#####
#####
```

```

account.247.enable=%BWLIN-BINARY-247%
account.247.label=%BWEXTENSION-247%
account.247.display_name=%BWCLID-247%
account.247.auth_name=%BWAUTHUSER-247%
account.247.user_name=%BWLINPORT-247%
account.247.password=%BWAUTHPASSWORD-247%

#W80B ADD
account.247.sip_server.template =
account.247.media_transmit.enable =

account.247.alarm.template =
account.247.alarm.server =
account.247.alarm.number =

#####
#####
##                               Failback
##
#####
#####
account.247.sip_server.1.failback_mode =
account.247.sip_server.1.failback_timeout =
account.247.sip_server.1.register_on_enable =
account.247.sip_server.1.failback_subscribe.enable =
account.247.sip_server.1.invite_retry_counts =
account.247.sip_server.1.only_signal_with_registered =

account.247.sip_server.2.failback_mode =
account.247.sip_server.2.failback_timeout =
account.247.sip_server.2.register_on_enable =
account.247.sip_server.2.failback_subscribe.enable =
account.247.sip_server.2.invite_retry_counts =
account.247.sip_server.2.only_signal_with_registered =

account.247.naptr_build =
account.247.fallback.redundancy_type =
account.247.fallback.timeout =

account.247.dns_cache_type =
account.247.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.247.anonymous_call =
account.247.reject_anonymous_call =
account.247.send_anonymous_code =
account.247.anonymous_call_oncode =
account.247.anonymous_call_offcode =
account.247.send_anonymous_rejection_code =
account.247.anonymous_reject_oncode =
account.247.anonymous_reject_offcode =

#####
#####
##                               Codec
##

```

```
#####
#####
account.247.codec.g722.enable =
account.247.codec.g722.priority =

account.247.codec.g729.enable =
account.247.codec.g729.priority =

account.247.codec.g726_16.enable =
account.247.codec.g726_16.priority =

account.247.codec.g726_24.enable =
account.247.codec.g726_24.priority =

account.247.codec.g726_32.enable =
account.247.codec.g726_32.priority =

account.247.codec.g726_40.enable =
account.247.codec.g726_40.priority =

account.247.codec.ilbc.enable =
account.247.codec.ilbc.priority =

account.247.codec.pcmu.enable =
account.247.codec.pcmu.priority =

account.247.codec.pcma.enable =
account.247.codec.pcma.priority =

account.247.codec.opus.enable =
account.247.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.247.nat.nat_traversal =
account.247.nat.udp_update_enable =
account.247.nat.udp_update_time =
account.247.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.247.blf.subscribe_period =
account.247.dtmf.type =
account.247.dtmf.dtmf_payload =
account.247.dtmf.info_type =
account.247.100rel_enable =
account.247.subscribe_register =
account.247.subscribe_mwi =
account.247.subscribe_mwi_expires =
account.247.subscribe_mwi_to_vm =
voice_mail.number.247 = %BWVOICE-PORTAL-NUMBER-247%
account.247.display_mwi.enable =
account.247.cid_source =
```

```

account.247.cid_source_privacy =
account.247.cid_source_ppi =
account.247.session_timer.enable =
account.247.session_timer.expires =
account.247.session_timer.refresher =
account.247.enable_user_equal_phone =
account.247.srtp_encryption =
account.247.ptime =
account.247.shared_line = %BWSHAREDLINE-BINARY-247%
account.247.register_mac =
account.247.register_line =
account.247.reg_fail_retry_interval =
account.247.reg_failed_retry_min_time =
account.247.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####
account.247.conf_type =
account.247.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-247%

account.247.sip_server_type =
account.247.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.247.register_expires_overlap =
account.247.subscribe_expires_overlap =
account.247.auto_dial_enable =
account.247.auto_dial_num =
account.247.cp_source =
account.247.transfer_refer_to_contact_header.enable =
#V80 Add
account.247.custom_ua =
account.247.callpark_enable =
account.247.check_cseq.enable =
account.247.check_to_tag.enable =
account.247.hold_use_inactive =
account.247.line_seize.expires =
account.247.update_ack_while_dialing =
account.247.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.247.always_fwd.enable =
account.247.always_fwd.target =
account.247.always_fwd.off_code =
account.247.always_fwd.on_code =
account.247.busy_fwd.enable =

```



```

account.247.busy_fwd.target =
account.247.busy_fwd.off_code =
account.247.busy_fwd.on_code =
account.247.timeout_fwd.enable =
account.247.timeout_fwd.target =
account.247.timeout_fwd.timeout =
account.247.timeout_fwd.off_code =
account.247.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.247.dnd.enable =
account.247.dnd.on_code =
account.247.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.247.reg.enable =
handset.247.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.247.xsi.user =%BWLOGIN-ID-247%
account.247.xsi.password =%XSIPASSWORD-247%
account.247.xsi.host =%XSP_ADDRESS%
account.247.xsi.server_type =
account.247.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.247.ldap.enable =
handset.247.ldap.name_filter=
handset.247.ldap.number_filter=
handset.247.ldap.host=
handset.247.ldap.port=
handset.247.ldap.base=
handset.247.ldap.user=
handset.247.ldap.password=
handset.247.ldap.max_hits=
handset.247.ldap.name_attr=
handset.247.ldap.numb_attr=
handset.247.ldap.display_name=
handset.247.ldap.version=
handset.247.ldap.call_in_lookup=

```

```
handset.247.ldap.ldap_sort=
handset.247.ldap.tls_mode=
handset.247.ldap.call_out_lookup=
handset.247.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account248 Settings
##
#####
#####

account.248.enable=%BWLIN-BINARY-248%
account.248.label=%BWEXTENSION-248%
account.248.display_name=%BWCLID-248%
account.248.auth_name=%BWAUTHUSER-248%
account.248.user_name=%BWLINPORT-248%
account.248.password=%BWAUTHPASSWORD-248%

#W80B ADD
account.248.sip_server.template =
account.248.media_transmit.enable =

account.248.alarm.template =
account.248.alarm.server =
account.248.alarm.number =

#####
#####
##                                     Failback
##
##
#####
#####

account.248.sip_server.1.failback_mode =
account.248.sip_server.1.failback_timeout =
account.248.sip_server.1.register_on_enable =
account.248.sip_server.1.failback_subscribe.enable =
account.248.sip_server.1.invite_retry_counts =
account.248.sip_server.1.only_signal_with_registered =

account.248.sip_server.2.failback_mode =
account.248.sip_server.2.failback_timeout =
account.248.sip_server.2.register_on_enable =
account.248.sip_server.2.failback_subscribe.enable =
account.248.sip_server.2.invite_retry_counts =
account.248.sip_server.2.only_signal_with_registered =

account.248.naptr_build =
account.248.fallback.redundancy_type =
account.248.fallback.timeout =

account.248.dns_cache_type =
account.248.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
##
#####
#####
```

```

account.248.anonymous_call =
account.248.reject_anonymous_call =
account.248.send_anonymous_code =
account.248.anonymous_call_oncode =
account.248.anonymous_call_offcode =
account.248.send_anonymous_rejection_code =
account.248.anonymous_reject_oncode =
account.248.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.248.codec.g722.enable =
account.248.codec.g722.priority =

account.248.codec.g729.enable =
account.248.codec.g729.priority =

account.248.codec.g726_16.enable =
account.248.codec.g726_16.priority =

account.248.codec.g726_24.enable =
account.248.codec.g726_24.priority =

account.248.codec.g726_32.enable =
account.248.codec.g726_32.priority =

account.248.codec.g726_40.enable =
account.248.codec.g726_40.priority =

account.248.codec.ilbc.enable =
account.248.codec.ilbc.priority =

account.248.codec.pcmu.enable =
account.248.codec.pcmu.priority =

account.248.codec.pcma.enable =
account.248.codec.pcma.priority =

account.248.codec.opus.enable =
account.248.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
##
#####
#####

account.248.nat.nat_traversal =
account.248.nat.udp_update_enable =
account.248.nat.udp_update_time =
account.248.nat.rport =

#####
#####
##                                     Register Advanced
##
##

```

```
#####
#####

account.248.blf.subscribe_period =
account.248.dtmf.type =
account.248.dtmf.dtmf_payload =
account.248.dtmf.info_type =
account.248.100rel_enable =
account.248.subscribe_register =
account.248.subscribe_mwi =
account.248.subscribe_mwi_expires =
account.248.subscribe_mwi_to_vm =
voice_mail.number.248 = %BWVOICE-PORTAL-NUMBER-248%
account.248.display_mwi.enable =
account.248.cid_source =
account.248.cid_source_privacy =
account.248.cid_source_ppi =
account.248.session_timer.enable =
account.248.session_timer.expires =
account.248.session_timer.refreshes =
account.248.enable_user_equal_phone =
account.248.srtp_encryption =
account.248.ptime =
account.248.shared_line = %BWSHAREDLINE-BINARY-248%
account.248.register_mac =
account.248.register_line =
account.248.reg_fail_retry_interval =
account.248.reg_failed_retry_min_time =
account.248.reg_failed_retry_max_time =

#####
#####
##                                     Network Conference
##
#####
#####
account.248.conf_type =
account.248.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-248%

account.248.sip_server_type =
account.248.unregister_on_reboot =

#####
#####
##                                     Register Other
##
#####
#####
##DECT V81 Add

account.248.register_expires_overlap =
account.248.subscribe_expires_overlap =
account.248.auto_dial_enable =
account.248.auto_dial_num =
account.248.cp_source =
account.248.transfer_refer_to_contact_header.enable =
#V80 Add
account.248.custom_ua =
account.248.callpark_enable =
account.248.check_cseq.enable =
account.248.check_to_tag.enable =
account.248.hold_use_inactive =
```

```

account.248.line_seize.expires =
account.248.update_ack_while_dialing =
account.248.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
#####
#####
account.248.always_fwd.enable =
account.248.always_fwd.target =
account.248.always_fwd.off_code =
account.248.always_fwd.on_code =
account.248.busy_fwd.enable =
account.248.busy_fwd.target =
account.248.busy_fwd.off_code =
account.248.busy_fwd.on_code =
account.248.timeout_fwd.enable =
account.248.timeout_fwd.target =
account.248.timeout_fwd.timeout =
account.248.timeout_fwd.off_code =
account.248.timeout_fwd.on_code =

#####
#####
##                               DND
##
#####
#####
account.248.dnd.enable =
account.248.dnd.on_code =
account.248.dnd.off_code =

#####
#####
##                               IPUI Registration
##
#####
#####
handset.248.reg.enable =
handset.248.ipui =

#####
#####
##                               Broadsoft XSI
##
#####
#####
account.248.xsi.user =%BWLOGIN-ID-248%
account.248.xsi.password =%XSIPASSWORD-248%
account.248.xsi.host =%XSP_ADDRESS%
account.248.xsi.server_type =
account.248.xsi.port =

#####
#####
##                               LADP
##

```

```
#####
#####
handset.248.ldap.enable =
handset.248.ldap.name_filter=
handset.248.ldap.number_filter=
handset.248.ldap.host=
handset.248.ldap.port=
handset.248.ldap.base=
handset.248.ldap.user=
handset.248.ldap.password=
handset.248.ldap.max_hits=
handset.248.ldap.name_attr=
handset.248.ldap.numb_attr=
handset.248.ldap.display_name=
handset.248.ldap.version=
handset.248.ldap.call_in_lookup=
handset.248.ldap.ldap_sort=
handset.248.ldap.tls_mode=
handset.248.ldap.call_out_lookup=
handset.248.ldap.incoming_call_special_search.enable=

#####
#####
##                                     Account249 Settings
##
#####
#####

account.249.enable=%BWLIN-BINARY-249%
account.249.label=%BWEXTENSION-249%
account.249.display_name=%BWCLID-249%
account.249.auth_name=%BWAUTHUSER-249%
account.249.user_name=%BWLINPORT-249%
account.249.password=%BWAUTHPASSWORD-249%

#W80B ADD
account.249.sip_server.template =
account.249.media_transmit.enable =

account.249.alarm.template =
account.249.alarm.server =
account.249.alarm.number =

#####
#####
##                                     Failback
##
#####
#####
account.249.sip_server.1.failback_mode =
account.249.sip_server.1.failback_timeout =
account.249.sip_server.1.register_on_enable =
account.249.sip_server.1.failback_subscribe.enable =
account.249.sip_server.1.invite_retry_counts =
account.249.sip_server.1.only_signal_with_registered =

account.249.sip_server.2.failback_mode =
account.249.sip_server.2.failback_timeout =
account.249.sip_server.2.register_on_enable =
account.249.sip_server.2.failback_subscribe.enable =
```

```
account.249.sip_server.2.invite_retry_counts =
account.249.sip_server.2.only_signal_with_registered =

account.249.naptr_build =
account.249.fallback.redundancy_type =
account.249.fallback.timeout =

account.249.dns_cache_type =
account.249.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                                     Basic
##
#####
#####
account.249.anonymous_call =
account.249.reject_anonymous_call =
account.249.send_anonymous_code =
account.249.anonymous_call_oncode =
account.249.anonymous_call_offcode =
account.249.send_anonymous_rejection_code =
account.249.anonymous_reject_oncode =
account.249.anonymous_reject_offcode =

#####
#####
##                                     Codec
##
#####
#####
account.249.codec.g722.enable =
account.249.codec.g722.priority =

account.249.codec.g729.enable =
account.249.codec.g729.priority =

account.249.codec.g726_16.enable =
account.249.codec.g726_16.priority =

account.249.codec.g726_24.enable =
account.249.codec.g726_24.priority =

account.249.codec.g726_32.enable =
account.249.codec.g726_32.priority =

account.249.codec.g726_40.enable =
account.249.codec.g726_40.priority =

account.249.codec.ilbc.enable =
account.249.codec.ilbc.priority =

account.249.codec.pcmu.enable =
account.249.codec.pcmu.priority =

account.249.codec.pcma.enable =
account.249.codec.pcma.priority =

account.249.codec.opus.enable =
account.249.codec.opus.priority =
```

```
#####
#####
##                               NAT Settings
##
#####
#####

account.249.nat.nat_traversal =
account.249.nat.udp_update_enable =
account.249.nat.udp_update_time =
account.249.nat.rport =

#####
#####
##                               Register Advanced
##
#####
#####

account.249.blf.subscribe_period =
account.249.dtmf.type =
account.249.dtmf.dtmf_payload =
account.249.dtmf.info_type =
account.249.100rel_enable =
account.249.subscribe_register =
account.249.subscribe_mwi =
account.249.subscribe_mwi_expires =
account.249.subscribe_mwi_to_vm =
voice_mail.number.249 = %BWVOICE-PORTAL-NUMBER-249%
account.249.display_mwi.enable =
account.249.cid_source =
account.249.cid_source_privacy =
account.249.cid_source_ppi =
account.249.session_timer.enable =
account.249.session_timer.expires =
account.249.session_timer.refresher =
account.249.enable_user_equal_phone =
account.249.srtp_encryption =
account.249.ptime =
account.249.shared_line = %BWSHAREDLINE-BINARY-249%
account.249.register_mac =
account.249.register_line =
account.249.reg_fail_retry_interval =
account.249.reg_failed_retry_min_time =
account.249.reg_failed_retry_max_time =

#####
#####
##                               Network Conference
##
#####
#####

account.249.conf_type =
account.249.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-249%

account.249.sip_server_type =
account.249.unregister_on_reboot =

#####
#####
##                               Register Other
##
```



```
#####
#####
##DECT V81 Add

account.249.register_expires_overlap =
account.249.subscribe_expires_overlap =
account.249.auto_dial_enable =
account.249.auto_dial_num =
account.249.cp_source =
account.249.transfer_refer_to_contact_header.enable =
#V80 Add
account.249.custom_ua =
account.249.callpark_enable =
account.249.check_cseq.enable =
account.249.check_to_tag.enable =
account.249.hold_use_inactive =
account.249.line_seize.expires =
account.249.update_ack_while_dialing =
account.249.sub_fail_retry_interval =

#####
#####
##                                Call Forward
##
#####
#####
account.249.always_fwd.enable =
account.249.always_fwd.target =
account.249.always_fwd.off_code =
account.249.always_fwd.on_code =
account.249.busy_fwd.enable =
account.249.busy_fwd.target =
account.249.busy_fwd.off_code =
account.249.busy_fwd.on_code =
account.249.timeout_fwd.enable =
account.249.timeout_fwd.target =
account.249.timeout_fwd.timeout =
account.249.timeout_fwd.off_code =
account.249.timeout_fwd.on_code =

#####
#####
##                                DND
##
#####
#####
account.249.dnd.enable =
account.249.dnd.on_code =
account.249.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.249.reg.enable =
handset.249.ipui =

#####
#####
```

```

##          Broadsoft XSI
##
#####

account.249.xsi.user =%BWLOGIN-ID-249%
account.249.xsi.password =%XSIPASSWORD-249%
account.249.xsi.host =%XSP_ADDRESS%
account.249.xsi.server_type =
account.249.xsi.port =

#####
#####
##          LADP
##
#####
handset.249.ldap.enable =
handset.249.ldap.name_filter=
handset.249.ldap.number_filter=
handset.249.ldap.host=
handset.249.ldap.port=
handset.249.ldap.base=
handset.249.ldap.user=
handset.249.ldap.password=
handset.249.ldap.max_hits=
handset.249.ldap.name_attr=
handset.249.ldap.numb_attr=
handset.249.ldap.display_name=
handset.249.ldap.version=
handset.249.ldap.call_in_lookup=
handset.249.ldap.ldap_sort=
handset.249.ldap.tls_mode=
handset.249.ldap.call_out_lookup=
handset.249.ldap.incoming_call_special_search.enable=

#####
#####
##          Account250 Settings
##
#####

account.250.enable=%BWLINE-BINARY-250%
account.250.label=%BWEXTENSION-250%
account.250.display_name=%BWCLID-250%
account.250.auth_name=%BWAUTHUSER-250%
account.250.user_name=%BWLINEPORT-250%
account.250.password=%BWAUTHPASSWORD-250%

#W80B ADD
account.250.sip_server.template =
account.250.media_transmit.enable =

account.250.alarm.template =
account.250.alarm.server =
account.250.alarm.number =

```

```
#####
#####
##                               Failback
##
#####
#####
account.250.sip_server.1.failback_mode =
account.250.sip_server.1.failback_timeout =
account.250.sip_server.1.register_on_enable =
account.250.sip_server.1.failback_subscribe.enable =
account.250.sip_server.1.invite_retry_counts =
account.250.sip_server.1.only_signal_with_registered =

account.250.sip_server.2.failback_mode =
account.250.sip_server.2.failback_timeout =
account.250.sip_server.2.register_on_enable =
account.250.sip_server.2.failback_subscribe.enable =
account.250.sip_server.2.invite_retry_counts =
account.250.sip_server.2.only_signal_with_registered =

account.250.naptr_build =
account.250.fallback.redundancy_type =
account.250.fallback.timeout =

account.250.dns_cache_type =
account.250.static_cache_pri = %STATIC-CACHE-PRI%

#####
#####
##                               Basic
##
#####
#####
account.250.anonymous_call =
account.250.reject_anonymous_call =
account.250.send_anonymous_code =
account.250.anonymous_call_oncode =
account.250.anonymous_call_offcode =
account.250.send_anonymous_rejection_code =
account.250.anonymous_reject_oncode =
account.250.anonymous_reject_offcode =

#####
#####
##                               Codec
##
#####
#####
account.250.codec.g722.enable =
account.250.codec.g722.priority =

account.250.codec.g729.enable =
account.250.codec.g729.priority =

account.250.codec.g726_16.enable =
account.250.codec.g726_16.priority =

account.250.codec.g726_24.enable =
account.250.codec.g726_24.priority =

account.250.codec.g726_32.enable =
account.250.codec.g726_32.priority =
```

```

account.250.codec.g726_40.enable =
account.250.codec.g726_40.priority =

account.250.codec.ilbc.enable =
account.250.codec.ilbc.priority =

account.250.codec.pcmu.enable =
account.250.codec.pcmu.priority =

account.250.codec.pcma.enable =
account.250.codec.pcma.priority =

account.250.codec.opus.enable =
account.250.codec.opus.priority =

#####
#####
##                                     NAT Settings
##
#####
#####

account.250.nat.nat_traversal =
account.250.nat.udp_update_enable =
account.250.nat.udp_update_time =
account.250.nat.rport =

#####
#####
##                                     Register Advanced
##
#####
#####

account.250.blf.subscribe_period =
account.250.dtmf.type =
account.250.dtmf.dtmf_payload =
account.250.dtmf.info_type =
account.250.100rel_enable =
account.250.subscribe_register =
account.250.subscribe_mwi =
account.250.subscribe_mwi_expires =
account.250.subscribe_mwi_to_vm =
voice_mail.number.250 = %BWVOICE-PORTAL-NUMBER-250%
account.250.display_mwi.enable =
account.250.cid_source =
account.250.cid_source_privacy =
account.250.cid_source_ppi =
account.250.session_timer.enable =
account.250.session_timer.expires =
account.250.session_timer.refresher =
account.250.enable_user_equal_phone =
account.250.srtp_encryption =
account.250.ptime =
account.250.shared_line = %BWSHAREDLINE-BINARY-250%
account.250.register_mac =
account.250.register_line =
account.250.reg_fail_retry_interval =
account.250.reg_failed_retry_min_time =
account.250.reg_failed_retry_max_time =

```

```
#####
#####
##                               Network Conference
##
#####
#####
account.250.conf_type =
account.250.conf_uri = %BWNWORK-CONFERENCE-SIPURI-250%

account.250.sip_server_type =
account.250.unregister_on_reboot =

#####
#####
##                               Register Other
##
#####
#####
##DECT V81 Add

account.250.register_expires_overlap =
account.250.subscribe_expires_overlap =
account.250.auto_dial_enable =
account.250.auto_dial_num =
account.250.cp_source =
account.250.transfer_refer_to_contact_header.enable =
#V80 Add
account.250.custom_ua =
account.250.callpark_enable =
account.250.check_cseq.enable =
account.250.check_to_tag.enable =
account.250.hold_use_inactive =
account.250.line_seize.expires =
account.250.update_ack_while_dialing =
account.250.sub_fail_retry_interval =

#####
#####
##                               Call Forward
##
##
#####
#####
account.250.always_fwd.enable =
account.250.always_fwd.target =
account.250.always_fwd.off_code =
account.250.always_fwd.on_code =
account.250.busy_fwd.enable =
account.250.busy_fwd.target =
account.250.busy_fwd.off_code =
account.250.busy_fwd.on_code =
account.250.timeout_fwd.enable =
account.250.timeout_fwd.target =
account.250.timeout_fwd.timeout =
account.250.timeout_fwd.off_code =
account.250.timeout_fwd.on_code =

#####
#####
##                               DND
##
##
#####
#####
```

```
account.250.dnd.enable =
account.250.dnd.on_code =
account.250.dnd.off_code =

#####
#####
##                                IPUI Registration
##
#####
#####
handset.250.reg.enable =
handset.250.ipui =

#####
#####
##                                Broadsoft XSI
##
#####
#####

account.250.xsi.user =%BWLOGIN-ID-250%
account.250.xsi.password =%XSIPASSWORD-250%
account.250.xsi.host =%XSP_ADDRESS%
account.250.xsi.server_type =
account.250.xsi.port =

#####
#####
##                                LADP
##
#####
#####
handset.250.ldap.enable =
handset.250.ldap.name_filter=
handset.250.ldap.number_filter=
handset.250.ldap.host=
handset.250.ldap.port=
handset.250.ldap.base=
handset.250.ldap.user=
handset.250.ldap.password=
handset.250.ldap.max_hits=
handset.250.ldap.name_attr=
handset.250.ldap.numb_attr=
handset.250.ldap.display_name=
handset.250.ldap.version=
handset.250.ldap.call_in_lookup=
handset.250.ldap.ldap_sort=
handset.250.ldap.tls_mode=
handset.250.ldap.call_out_lookup=
handset.250.ldap.incoming_call_special_search.enable=
```

Default-System File: y000000000130.cfg.def file

NOTE: This is an example file and it should be used for reference only.

```
#!version:1.0.0.1

auto_provision.server.url = http://ylxsp.yealink.com:80/dms/Yealink-W90B/
#auto_provision.server.url =
http://%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICEA
CCESSURI%
```

Appendix B: %TIMEZONENAME% Values

Time Zone	Time Zone Name
-11:00	Samoa
-10:00	United States-Hawaii-Aleutian
-10:00	United States-Alaska-Aleutian
-09:00	United States-Alaska Time
-08:00	Canada (Vancouver, Whitehorse)
-08:00	Mexico (Tijuana, Mexicali)
-08:00	United States-Pacific Time
-07:00	Canada (Edmonton, Calgary)
-07:00	Mexico (Mazatlán, Chihuahua)
-07:00	United States-Mountain Time
-07:00	United States-MST no DST
-06:00	Canada-Manitoba (Winnipeg)
-06:00	Chile (Easter Islands)
-06:00	Mexico (Mexico City, Acapulco)
-06:00	United States-Central Time
-05:00	Bahamas (Nassau)
-05:00	Canada (Montreal, Ottawa, Quebec)
-05:00	Cuba (Havana)
-05:00	United States-Eastern Time
-04:30	Venezuela (Caracas)
-04:00	Canada (Halifax, Saint John)
-04:00	Chile (Santiago)
-04:00	Paraguay (Asuncion)
-04:00	United Kingdom-Bermuda (Bermuda)
-04:00	United Kingdom (Falkland Islands)
-04:00	Trinidad and Tobago
-03:30	Canada (Newfoundland, St. Johns)
-03:00	Denmark-Greenland (Nuuk)
-03:00	Argentina (Buenos Aires)
-03:00	Brazil (no DST)
-03:00	Brazil (DST)
-02:00	Brazil (no DST)
-01:00	Portugal (Azores)

Time Zone	Time Zone Name
0	GMT
0	Greenland
0	Denmark-Faroe Islands (Torshavn)
0	Ireland (Dublin)
0	Portugal (Lisbon, Porto, Funchal)
0	Spain-Canary Islands (Las Palmas) Administrator's Guide for SIP-W90B IP DECT PHONES
0	United Kingdom (London)
0	Morocco
+01:00	Albania (Tirana)
+01:00	Austria (Vienna)
+01:00	Belgium (Brussels)
+01:00	Caicos
+01:00	Chad
+01:00	Croatia (Zagreb)
+01:00	Czech Republic (Prague)
+01:00	Denmark (Copenhagen)
+01:00	France (Paris)
+01:00	Germany (Berlin)
+01:00	Hungary (Budapest)
+01:00	Italy (Rome)
+01:00	Luxembourg (Luxembourg)
+01:00	Macedonia (Skopje)
+01:00	Netherlands (Amsterdam)
+01:00	Namibia (Windhoek)
+02:00	Estonia (Tallinn)
+02:00	Finland (Helsinki)
+02:00	Gaza Strip (Gaza)
+02:00	Greece (Athens)
+02:00	Jordan (Amman)
+02:00	Latvia (Riga)
+02:00	Lebanon (Beirut)
+02:00	Moldova (Kishinev)
+02:00	Russia (Kaliningrad)
+02:00	Romania (Bucharest)
+02:00	Turkey (Ankara)
+02:00	Ukraine (Kyiv, Odessa)

Time Zone	Time Zone Name
+03:00	East Africa Time
+03:00	Iraq (Baghdad)
+03:00	Russia (Moscow)
+03:30	Iran (Teheran)
+04:00	Armenia (Yerevan)
+04:00	Azerbaijan (Baku)
+04:00	Georgia (Tbilisi)
+04:00	Kazakhstan (Aktau)
+04:00	Russia (Samara)
+04:30	Afghanistan
+05:00	Kazakhstan (Aktobe)
+05:00	Kyrgyzstan (Bishkek)
+05:00	Pakistan (Islamabad)
+05:00	Russia (Chelyabinsk)
+05:30	India (Calcutta)
+06:00	Kazakhstan (Astana, Almaty)
+06:00	Russia (Novosibirsk, Omsk)
+07:00	Russia (Krasnoyarsk)
+07:00	Thailand (Bangkok)
+08:00	China (Beijing)
+08:00	Singapore (Singapore)
+08:00	Australia (Perth)
+09:00	Korea (Seoul)
+09:00	Japan (Tokyo)
+09:30	Australia (Adelaide)
+09:30	Australia (Darwin)
+10:00	Australia (Sydney, Melbourne, Canberra)
+10:00	Australia (Brisbane)
+10:00	Australia (Hobart)
+10:00	Russia (Vladivostok)
+10:30	Australia (Lord Howe Islands)
+11:00	New Caledonia (Nouméa)
+12:00	New Zealand (Wellington, Auckland)
+12:45	New Zealand (Chatham Islands)

References

- [1] Yealink, Inc. 2017. *Yealink W90B IP DECT PHONE User Guide, Release 81*. Available from Yealink at <http://www.yealink.com/DocumentDownload.aspx?CatId=142&flag=142>.
- [2] Cisco Systems, Inc. 2018. *Cisco BroadWorks Device Management Configuration Guide, Release 22.0*. Available from BroadSoft at <https://solutionpartner.cisco.com/site/index.gsp>
- [3] Cisco Systems, Inc. 2018. *Cisco BroadWorks Redundancy Guide, Release 22.0*. Available from BroadSoft at <https://solutionpartner.cisco.com/site/index.gsp>
- [4] Cisco Systems, Inc. 2018. *Cisco BroadWorks SIP Access Interface Interworking Guide, Release 22.0*. Available from BroadSoft at <https://solutionpartner.cisco.com/site/index.gsp>
- [5] Cisco Systems, Inc. 2018. *Cisco BroadWorks SIP Phone Interoperability Test Plan, Release 22.0*. Available from BroadSoft at <https://solutionpartner.cisco.com/site/index.gsp>
- [6] Cisco Systems, Inc. 2018. *Cisco BroadWorks SIP Phone XSI and XMPP Test Plan, Release 22.0*. Available from BroadSoft at <https://solutionpartner.cisco.com/site/index.gsp>
- [7] Cisco Systems, Inc. 2018. *Cisco BroadWorks Device Management Interoperability Test Plan, Release 22.0*. Available from BroadSoft at <https://solutionpartner.cisco.com/site/index.gsp>
- [8] Cisco Systems, Inc. 2018. *Cisco BroadWorks CPE Kit Usage Guide, Release 22.0*. Available from BroadSoft at <https://solutionpartner.cisco.com/site/index.gsp>
- [9] Cisco Systems, Inc. 2018. *Cisco BroadWorks SIP Phone Functional Test Plan, Release 22.0*. Available from BroadSoft at <https://solutionpartner.cisco.com/site/index.gsp>