

Please read the following instructions carefully.

Keep this instruction manual for future reference.


Tools required: Phillips head screwdriver, drill (for top of stair installation), and pencil (not included), wrench (included).

For use with children from 6 - 24 months.

Keep small parts away from children.

Adult assembly required.

Fits openings from 36" - 60" wide.

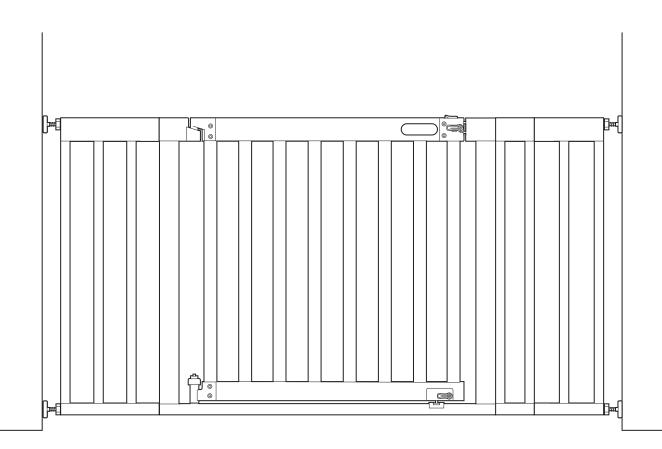

West End™ Safety Gate

INSTRUCTION MANUAL



Text "Install West" to 38344 for a step-by-step installation video.

Have questions? We're here to help. For technical support please contact us at 401-671-6551 or www.summerinfant.com/contact.

FALL HAZARD! IMPORTANT! KEEP FOR FUTURE REFERENCE!


A WARNING


- Children have died or been seriously injured when gates are not securely installed. ALWAYS install and use gate as directed using all required parts.
- STOP using when a child can climb over or dislodge the gate.
- Use only with the locking/latching mechanism securely engaged.
- To prevent falls, never use at top of stairs without wall mounting cups and door stoppers.
- NEVER use to keep child away from pool.
- NEVER leave child unattended.
- Always close and lock the gate behind you.
- This product will not necessarily prevent all accidents.
- Do not use if any components are missing or damaged.
- Adult assembly required. Exercise care when unpacking and assembling product.

CAUTION: KEEP SMALL PARTS OUT OF CHILD'S REACH.

IMPORTANT – Read the instructions carefully before use and keep them for future reference.

components:

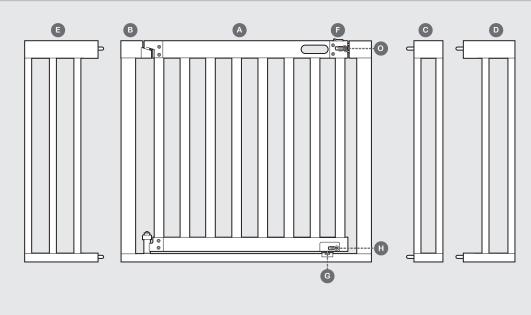

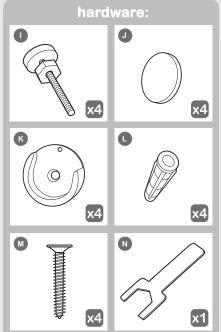

- A Gate Door
- B Gate Frame
- C Short Extension Frame
- Medium Extension Frame
- Long Extension Frame
- Top Latch
- C Lower Latch
- G Lower Latti
- H Lower Door Stopper


- Tension Bolts with Tension Nuts (4)
- Adhesive Mounting Pads (4)
- Wall Cups (4)
- Wall Anchors (4)
- M Screws (4)
- N Wrench
- O Upper Door Stopper


gate configurations (choose which best fits your scenario):





Measure the width of the opening where you intend to install the gate. Refer to the following illustrations to determine the correct installation configuration. Baseboard molding may change which configuration is appropriate.


NEVER install three extension frames on the same side of the gate.

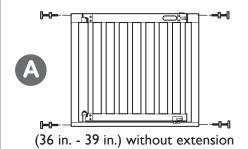


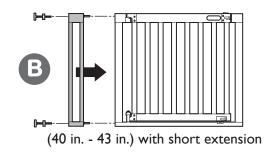


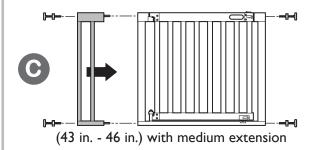


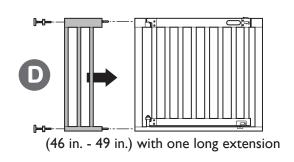

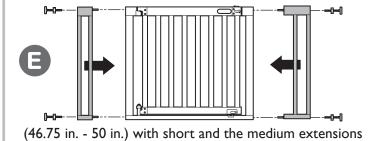

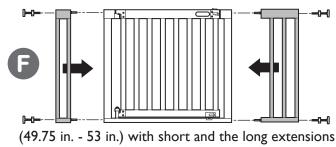


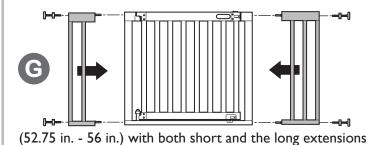

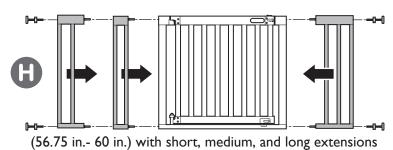



Note: This instruction book illustrates installation of gate configuration H. If choosing gate configuration A, skip ahead to step 2. Otherwise, follow step I using the appropriate extension frames that best fit your scenario.

Important: Gate includes door stoppers (parts O and H) which prevents the gate from swinging open in one direction. When installing the gate at the top of stairs, be sure that the door stops are engaged on the opposite side of the stairs so the gate door cannot open over the stairs.

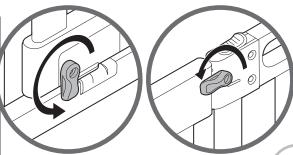

installation:

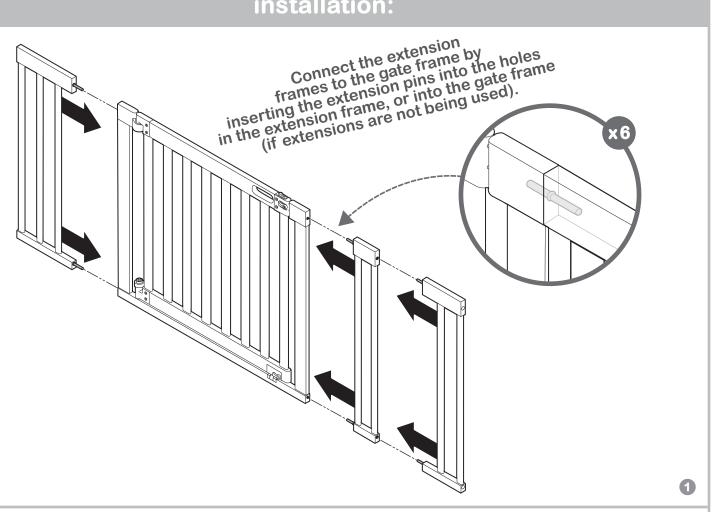

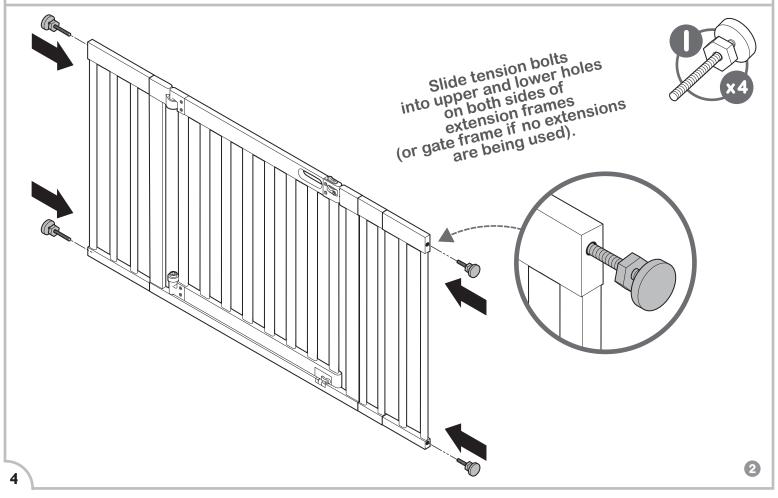



Installation (continued):


Stand the gate in the center of the opening. center of the bottom of Make sure the bottom flush the gate is completely flush to the floor. Slide tension to the floor until they bolts out until they contact the door frame or wall on both sides.

⚠ IMPORTANT

Check locations A and B. The distance between the gate and the wall should never exceed 2.75".

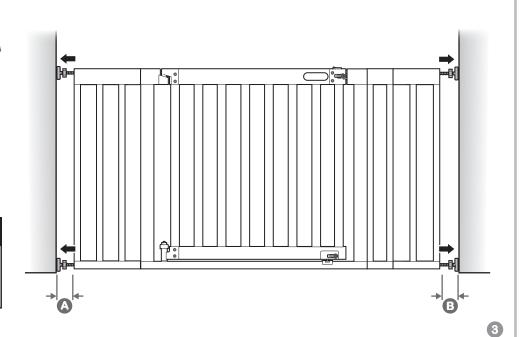

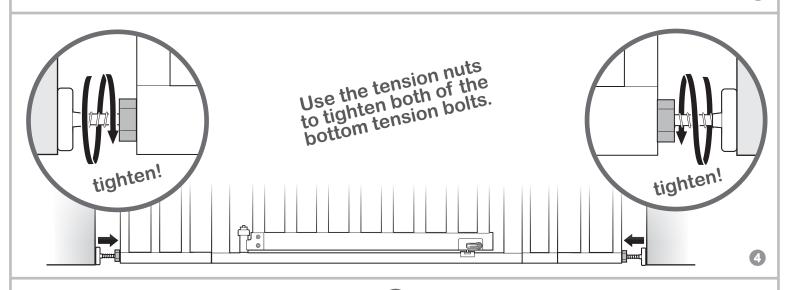


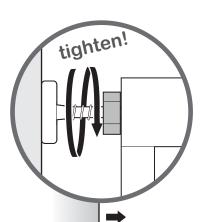


-0

Note: If mounting at top of stairs, proceed to step 6. Otherwise, follow the directions in step 14 to tighten the tension nuts.

Use the tension nuts to tighten both of the top tension bolts.

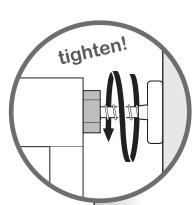


STOP! wall cup/top of stairs installation:

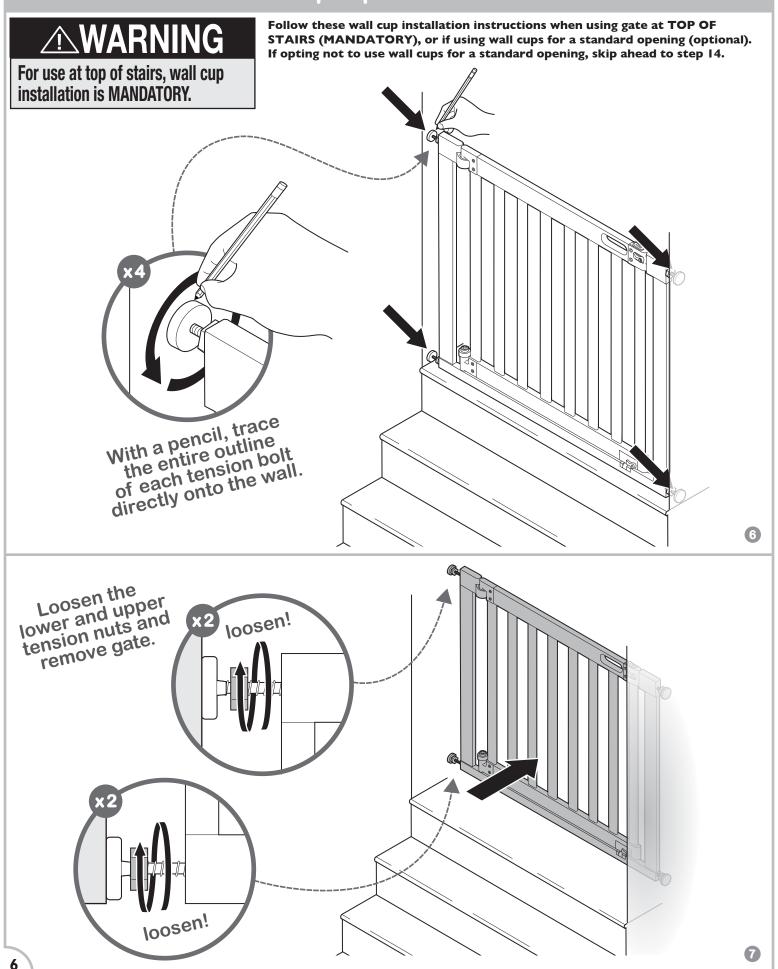


wall cup/top of stairs installation (continued): Place a wall cup over the center of each circular outline on the wall. 0 Mark drill holes with a pencil through the center of each wall cup. 8 Note: If mounting into plaster or drywall, follow this step and use the wall anchors provided. Drill a 7/32" pilot hole into each of the 4 center marks. Insert wall anchors into pilot holes.


9


wall cup/top of stairs installation (continued):

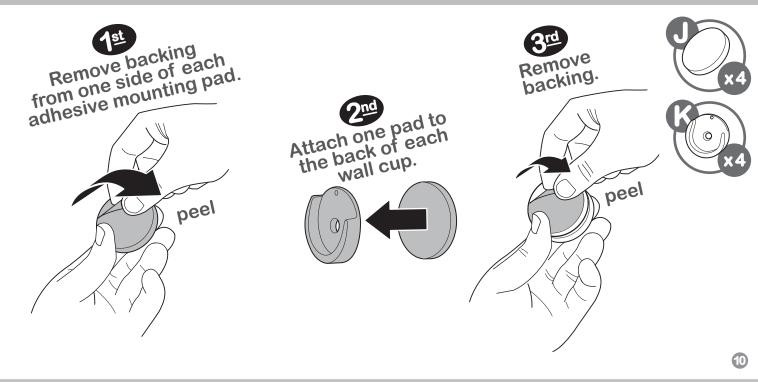

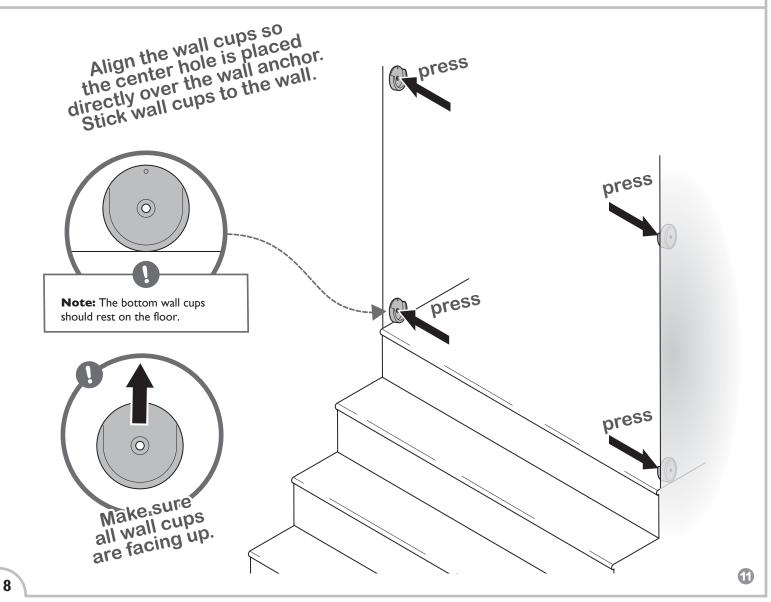


wall cup/top of stairs installation (continued):

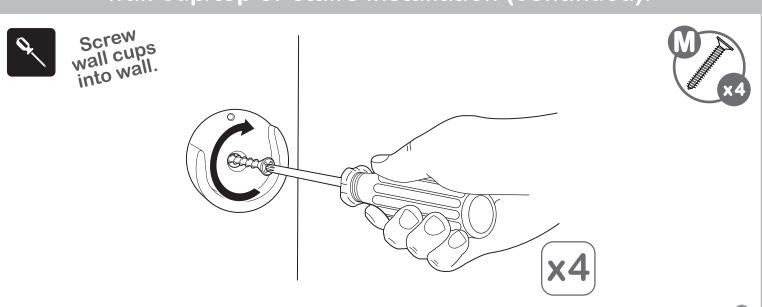

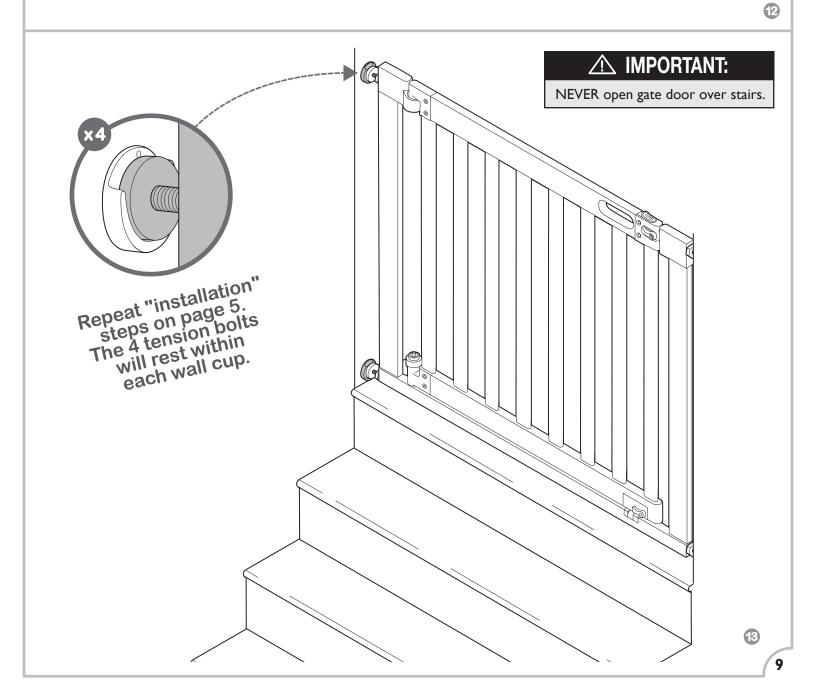


wall cup/top of stairs installation (continued):

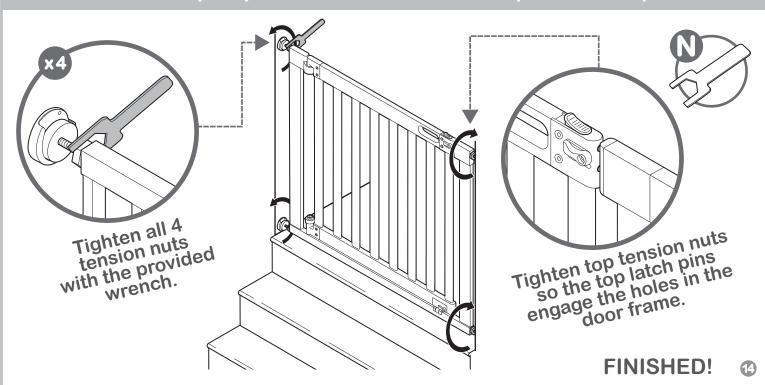


door stopper:

Note: This gate includes door stoppers which prevents the gate from swinging open in one direction when used at the top of the stairs.


Note: Both door stoppers should be turned on the opposite side of the stairs, when the gate is installed.

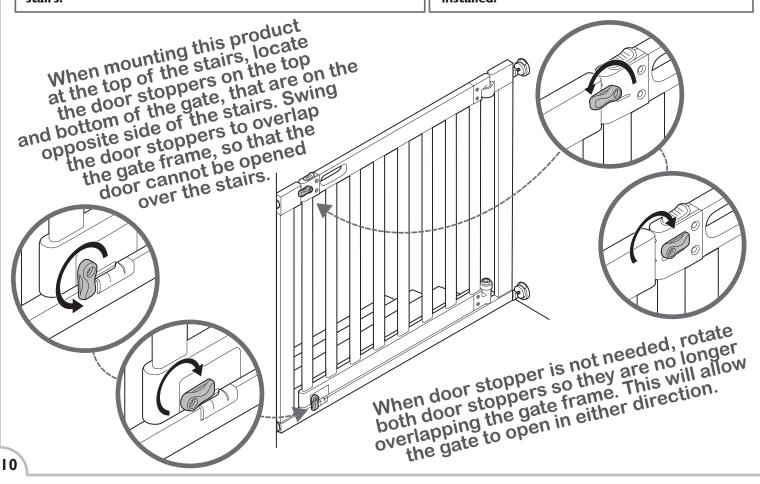


testing the installation:

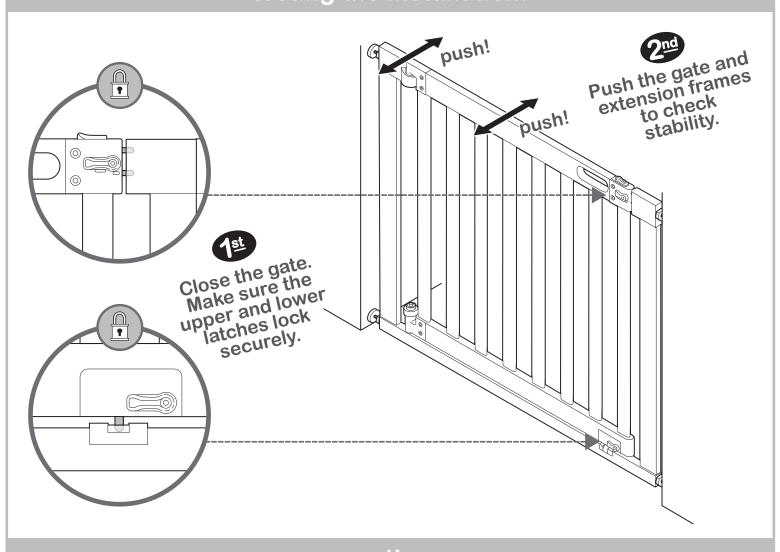

operation:

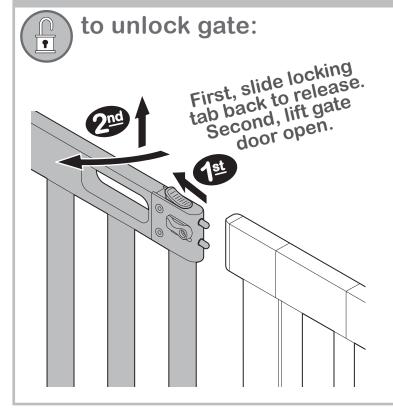

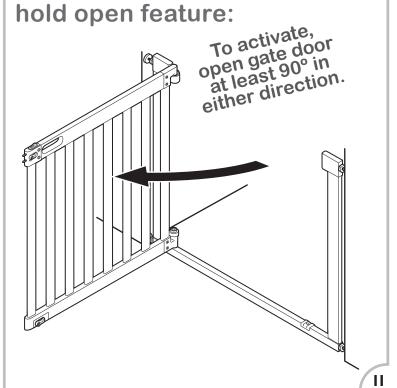

troubleshooting:


If the gate does not close properly:

I. Gate is not properly aligned in the door frame.

Solution: To adjust the gate's alignment, loosen all four tension bolts and reposition gate so that it matches the "correct" image. Re-tighten tension bolts.

2. Pressure of tension bolts needs to be adjusted.

Solution: Loosen or tighten the upper tension bolts. Ensure the upper latch engages securely when the gate swings closed, and that it can be released properly when the sliding lock tab is pushed back.

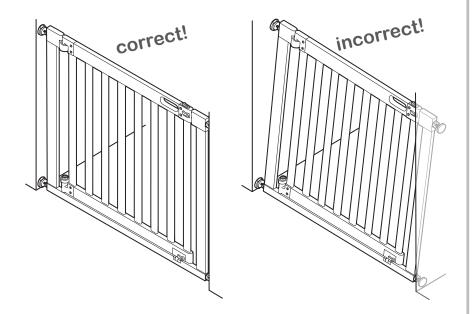

maintenance:

- Regularly check tension bolts to make sure the gate is securely in place.
- · Do not use the gate if any components are damaged or missing.
- Surface clean with a damp cloth or sponge using mild detergent and warm water.

replacement hardware kit #27950-50



Text "Install West" to 38344 for a step-by-step installation video.

Have questions? We're here to help. For technical support please contact us at 401-671-6551 or www.summerinfant.com/contact.