
INSTRUCTION MANUAL

ULTRASONIC HUMIDIFIER MODEL: J66



Carried standard: GB4706.1-2005 GB4706.48-2009

Thank you for using the ultrasonic humidifier produced by our company. In order to ensure your convenience, please read this manual carefully before use and keep it for future reference.

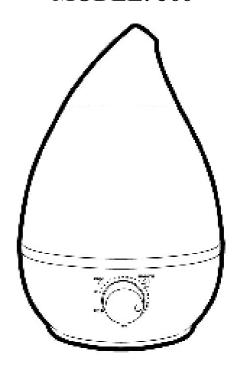

CONTENTS

Description
Specifications
Part Names
Precautions
Safety Instructions
Instructions
Cleaning and Maintenance
Failure Analysis

Description

- 1. Intelligent Microcomputer Control, Smooth Rotary Control, Easy to On/Off.
- 2. Ultra-long-distance humidification, ultra-quiet.
- 3. Automatic shutdown protection for water shortage. Streamlined design, sleek and simple.

Specifications

| Model | Voltage | Rated frequency | Rated power | Rated capacity |
|-------|---------|-----------------|-------------|----------------|
| J66 | 220V | 50-60Hz | 25W | 2.4 L |


| on, no fog, no wind or no air outlet. | waterless. 2. The atomizer is damaged or the fan is damaged. | tank. 2. Send for maintenance; |
|---|---|--|
| The sprayed mist has an odor. | New product, the water in the water tank is not clean. | Open the water tank cover, put the water tank open in a cool place for 12 hours, clean the water tank, and replace the water tank water. |
| The wind blown out by the air outlet has an odor. | Filter box problem | Replace the filter box |
| Small amount of mist. | Water on the atomizer or water storage time is too long. | Clean the atomizer or replace the clean water. |

The above are common fault diagnosis and troubleshooting methods. For other faults, please contact our customer service or directly to the company's repair point for repair, do not disassemble.

KindNotes:

- 1. When the humidifier will be used at first, it will have a slight odor. It will be eliminated after three or four times of normal use.
- 2. For proper product use and extended life, regularly clean the scaling from the nebulizer.


- 4. Cleaning outside the humidifier: Wipe the outer surface with a clean cloth below 40 °C.
- 5. Filter box cleaning: Remove the filter box cover, then take out the filter box and wipe it with a dry cloth;
- 6. Storage of humidifier: When not in use for a long time, clean it, put it back in the original packaging, and store it in a dry and ventilated place.

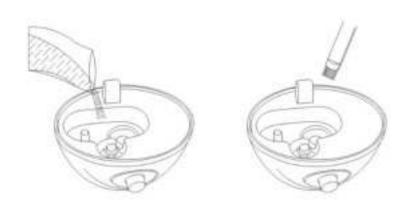

Failure Analysis

| Fault Phenomenon | Cause Analysis | Correction Measure |
|--|--|---|
| The indicator light is not bright, no fog, no wind | The power cord plug is not connected well; The power cord is damaged; | Check the power plug and connect it; Send for maintenance; |
| The power indicator light is | 1. The water tank is | 1. Add water to the water |

Part Names (The pictures are just for reference)

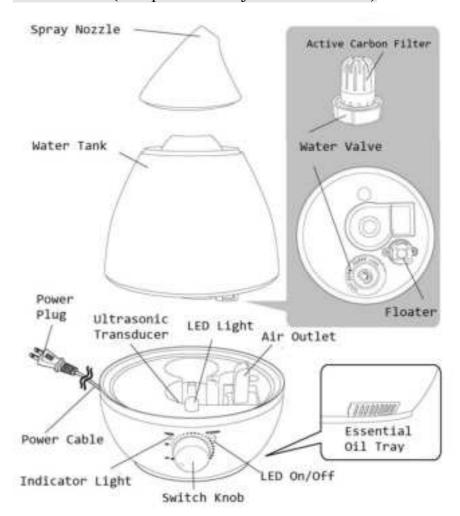

Precautions

- 1. Please read and retain the product manual before using the product.
- 2. When using the product, it must be placed on a level surface. Do not tilt or dump work.
- 3. When using, the power supply voltage must be the same as the rated power of this

product. If the voltage does not match, please contact your dealer and do not use the product.

- 4. Always use RO/Distilled Water to operate the humidifier. Using Tap Water will cause scaling that may damage the unit permanently.
- 5. Do not place the humidifier in the vents and keep it away from electrical appliances.
- 6. Please do not put the humidifier directly on the wooden floor to avoid damage to the wooden floor due to moisture deformation.
- 7. Do not inject more than 40°C hot water into the water tank to avoid damage to the machine.
- 8. Do not allow water to flow from the air outlet into the body; use water on the body to clean it with a dry cloth to avoid damage to the machine.
- 9. When the room temperature is below 0°C, pour out the water from the tank to avoid damage to the machine caused by ice.
- 10. Please do not put chemicals such as detergents and essential oils into the water tank and water tank, otherwise there will be bad atomization and damage to the water tank.
- 11. When the machine is working, do not move it at will, otherwise an electric shock will occur.
- 12. Do not add water directly to the body tank.
- 13. When not using the machine for a long time, turn off the power and unplug it.
- 14. Turn off the power and remove the plug when draining the water from the sink.
- 15. If the humidifier is to be moved, cleaned, or added with water, the power must be turned off and the power plug must be unplugged.
- 16. Do not disassemble the body components at will.

- 1. Please do not pull the plug with wet hands to avoid the risk of electric shock.
- 2. When the body is tilted, please cut off the power before proceeding.
- 3. When turning on the device, do not touch the atomizer with your hands. Otherwise, it will cause you a pain.
- 4. Non-professionals are not allowed to split the machine at will to avoid electric shock.
- 5. The power cord should not be scratched, damaged, knotted, or pressed or clamped or processed, otherwise it may cause electric shock, short circuit, or fire.
- 6. If the power cord is damaged, it must be replaced by the manufacturer or its service department or a similar professional service department or a dedicated person to avoid danger.
- 7. This machine is for indoor use only.
- 8. Do not allow children or people who cannot take care of themselves to operate the machine.

Cleaning and Maintenance

- 1. Always turn off the power and unplug the power cord before cleaning.
- 2. Cleaning the water tank (two to three weeks): Unscrew the water tank cover, wipe off the water in the water tank with a clean soft cloth, and rinse with water.
- 3. Cleaning of the sink and atomizer (once a week): If there is scale in the sink, pour citric acid into the large tank (to dissolve the scale), then wipe off the scale with a cotton swab or a soft brush, then rinse with water. (As shown below)

Safety Instructions