

包
装
信
息

型号: AMC2A Neo
成品尺寸: 140*185MM
材质: 120g书写纸, 折页
工艺: 四色双面印刷
版本号: V1.0-20230618

备
注
信
息

英文版
较版本V1.0-20230615样品修改了文案(参数信息)

尺寸: 420*555mm

1

2

3

4

maono

GLOBAL BEST SELLING
INTERNET MICROPHONE



User Manual

Portable Live Streaming and Podcast Console
For Computer & Smartphone

maono

GLOBAL BEST SELLING
INTERNET MICROPHONE

maonocaster

Thanks for choosing Maonocaster C2A Neo Starter Bundle.
Please read the User manual carefully to
have a better using experience.

Accessory List

1. Maono C2 Neo Podcast Console
2. USB-A to USB-C Cable
3. 3.5mm TRRS Audio Cable
4. User Manual

Product Features

The Maonocaster C2 Neo audio console is the latest addition to the Maonocaster series. It features a simplified and compact design that reduces the learning curve and improves portability without compromising on the audio quality. We have also redesigned the I/O to make it work better with both PC and mobile devices.
Thanks to the C2 Neo's XLR input with built-in preamps and phantom power, the bundled ACP30T microphone will capture your voice with amazing clarity and details.
You can use either Bluetooth or 3.5mm AUX input for accompaniment. Additionally, you can utilize pitch presets, reverb presets, and three custom sound pads to elevate your content creating experience.

Product Feature Highlights

• 4-in 1 phantom power supply for the microphone.
• Bluetooth and AUX input to enrich your content.
• Independent microphone and accompaniment volume control.
• Side chain and music-only feature.
• Direct monitoring and loopback switch.
• Two-level noise canceling to reduce ambient noise.
• USB-C for easy connector with computer and mobile device.
• USB-C port for charging for select mobile devices.
• Compatible with Windows and macOS.
• Active battery, up to 6 hours of off-grid operation.


Applications

Streaming, recording, and streaming on computers, tablets, and smartphones.
Compatible with mainstream recording and streaming software.

Specifications

Data Connectivity	USB-C	Battery Type	Lithium
Frequency Response	20Hz-20kHz	Battery Capacity	500mAh
THD	<1% @ 0dB, 10Hz	Power Input	30V/5A Max
Headphone Output	20mW, 32Ω	Charging Time	Approx. 2.5hrs
Sample Rate	48kHz/24bit	Battery Life	Approx. 7 hrs
Wireless Connectivity	Bluetooth 4.2	Dimension	78mm x 150mm x 50mm (Including buttons)

Layout

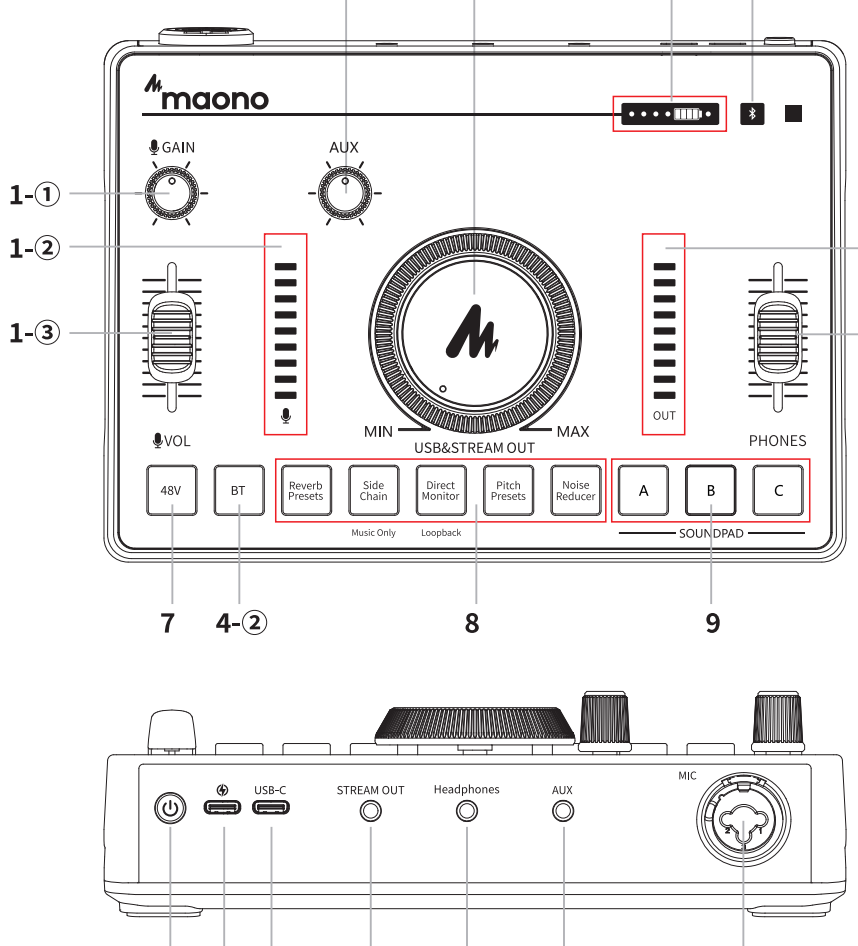

1. Microphone gain knob, ①, fader, ③, and level meter, ③
First, rotate left and right to control the gain of the microphone. Keeping the gain low will reduce the amount of environmental noises being recorded.
Then slide up and down the fader to control the volume of the microphone.
The color distribution of the level meter is 4: green, 3: orange, 2: red.
To achieve the best audio quality, please keep the level meter in green and orange section.

2. Accompaniment volume knob
Rotate left and right to control the volume of audio input from USB-C input port, 3.5mm accompaniment input and Bluetooth input.

3. Battery level display
When all 4 LED lights are on, it means 100% battery level; when 3 LED lights are on, it means 75%; when 2 LED lights are on, it means 50%; when 1 LED light is on, it means 25%. When charging, the battery level indicator LED lights will blink in sequence and a red light remains on.

4. Bluetooth LED indicator, ① and switch button, ③
4.1. After turning on the Bluetooth by long press the switch button, the LED indicator flashes and the device actively searches for and connects to paired devices. It stays on after a successful connection.
4.2. Press and hold the Bluetooth button for more than 2 seconds to turn the Bluetooth off.

5. USB/Stream Output level knob, ① and output level meter, ③
Rotate left and right to control the volume of audio output from 3.5mm stream output and USB-C output. The level meter on the right shows the output level.

6. Headphone volume fader
Slide up and down to control the headphone volume.

7. 48V phantom power supply switch
This button controls the phantom power of XLR microphone input. When the button is turned on, the LED indicator turns red.
Whether to turn on phantom power depends on the type of XLR microphone you are using. In most cases, only XLR condenser microphones require phantom power to function. If your microphone does not require phantom power, turning it on may damage it.
Tip: Phantom power cannot be turned on when there is no XLR microphone connected.
If you don't know what type of microphone you have, please contact your microphone manufacturer for confirmation.
Select Maono XLR condenser microphone models: PM320, PM350, PM500, ACP30.
Select Maono XLR dynamic microphone models: PD100, PD200, PD200X, PD400X, HX300.

8. There are five function keys in this area, namely Reverb Preset, SideChain(Music Only), Direct Monitoring (Loopback), Pitch Presets, and Noise Reducer.

8.1. Reverb Presets
This function has 6 preset reverb effects. Short presses can switch back and forth between the original sound, KTV, church, hall, valley, and room among these 6 sound effects. When switching, the light color will change and come with voice prompts. The effect of reverb and echo changes after switching.

8.2. SideChain and Music Only
The SideChain function automatically lowers the volume of background music when you start to speak, highlighting your voice. It is suitable for chatting rooms in live broadcasts and podcasts. The Music Only mode can eliminate the vocal part in the accompaniment input and retain the music part, which is convenient for users to sing along. The SideChain function and Music Only function are turned off by default.

8.3. Direct Monitor and Loopback
Direct Monitor is turned on and the Loopback is turned off by default.
If the Loopback feature is enabled, the audio sent to the device via USB will be sent back to the USB connected device. If it is disabled, the audio sent to the device can be heard through the headphones, but will not be recorded. Turning off this feature can avoid unwanted echoes.

8.4. Pitch Presets
This feature adds pitch changing effects to the microphone input.
Short press to loop through the five pitch presets available and turn off the pitch-changing feature. The LED indicator shows the current status.

8.5. Noise Reducer
This feature reduces background noise from recording. The first setting is Noise Cancellation Low, and the red LED indicator lights up. Short press again for Noise Reduction High, and the red LED light turns purple. Press again to turn off the Noise Cancellation and the LED will be off.

9. Custom Sound Effect Buttons
Maonocaster C2 Neo provides users with 3 custom sound effect buttons. You can record their favorite song, music, beat and other sound clips into the device through microphone, external audio accompaniment, Bluetooth input. To use in live broadcasting and recording.
A/B/C buttons can record sound effects within 20 seconds.
X: The product does not have custom sound preloaded and need to be recorded by the user first.

9.1. Erase existing sound effects
Press and hold any of the previously recorded custom keys for more than 3 seconds. At this time, the LED indicator is on and flashing quickly, entering the state of recording erasing. The light goes out when the erasing is completed.

9.2. Sound effect recording
Regardless of whether there are special effects in the custom keys or not, the action of erasing the original special effects must be performed first. Short press the corresponding erased custom key, and the light flashes slowly. At this time, it is in recording state. The light goes out when recording is completed. During recording, if you short press the corresponding custom key, you can stop recording.
Note: The storage space of each custom special effect key is limited. When the memory of this custom key is full, it will automatically stop recording. At this time, the light will automatically go out.

9.3. Play custom sound effects
Short press any of the previously recorded custom key to start playing special effects. The LED indicator remains on until the playback is completed during playback, short press to stop.

10. Power switch
Turn on and off the device.
Press and hold for 2 seconds to turn on.
When the power is on, press and hold for 3 seconds to turn off.

11. DC-5V Interface
This interface is only used to power the device.

12. USB-C Data Interface
Data interface, can be used for audio data communications with computer and mobile devices.
Note:
(1) When using an external power supply to power the Maonocaster C2 Neo through the DC-5V interface, the USB-C interface can pass-through charge the smartphone connected to USB-C.

1. Connect the streaming phone, accompaniment device, headphones and microphone as shown in the figure.
2. Turn on the power and adjust the various required sound effects.
3. Use an App to start streaming or recording.
Tip: If your phone do not have a 3.5mm jack, it is necessary to use the original USB-C to headphone adapter from your phone brand.
* You can record two phones if you utilize both USB-C output and Line Out.
Maonocaster C2 Neo only supports one microphone input and is suitable for single-person recording live streaming.

2. PC Streaming
1. Connect the accompaniment source (mobile phone), headphones, and microphone to the sound card as shown in the figure.
2. Use the included USB-C data cable to connect the computer and the Maonocaster C2 Neo. The computer will automatically recognize the device and install the driver.
3. Enter the sound control panel of Windows, and set the "Maonocaster C2 Neo" as the system default playback and recording device in "Playback" and "Recording".

3. Charging
1. You can use a USB-C cable to connect to a computer, power bank, or power adapter for charging.
2. The battery level display will turn red when charging, and flashes to show the charging progress.
3. The DC-5V port only supports device charging and does not have data transfer function.
Notes:
• Please charge the device before first use.
• If not used for a long time, please charge the device every 3 months.
• Charging is supported even when the device is turned off.
• For safety, please stop charging after the battery is fully charged to avoid overcharging.

4. Bluetooth connectivity
Maonocaster C2 Neo supports Bluetooth audio input for background music and accompaniment. (You can also refer to item 14 in function guide)

Pairing and connection:
1. Turn on the device and the Bluetooth indicator starts flashing.
2. Search for the device in your smartphone's Bluetooth menu and find the "Maonocaster C2 Neo" Bluetooth device and click the name to connect.
3. Bluetooth indicator remains solid after successful connection.
4. Play your desired music or audio on your smartphone.
Notes:
• Bluetooth connection is limited by distance. Do not place the phone too far away.
• The Bluetooth connectivity is only for audio input.

5. Troubleshooting
5.1. Unable to power on
① Please check if the device has enough battery level and charge it before powering on.
② Press and hold the ① logo button for more than 3 seconds to turn on the device.
5.2. No sound from the external audio source
① Check if the external audio source is connected to the AUX input or Bluetooth.
② Check if the AUX volume control knob is turned on.
③ Check if the volume of the audio input device is turned up.
5.3. No sound from the headphones
① Check if the headphone cable is plugged into the "headphone" jack.
② Check the "headphone" fader and gradually increase the volume by sliding it upwards.
5.4. No sound from the microphone
① Check if the microphone is correctly connected to the microphone input, unplug and reconnect if necessary.
② Check the "USB/Stream Out" knob in the middle. Turn it clockwise to gradually increase the output volume.
③ Check the "microphone volume" fader and gradually increase the volume by sliding it upwards.
④ Confirm with the microphone dealer if your microphone is compatible with Maonocaster C2 Neo, or consult us for recommended microphone models.
5.5. No sound during live streaming
① Check the "USB/Stream Out" knob and turn it clockwise to gradually increase the output to a suitable level.

6. Safety precautions
• To avoid personal injury or property damage caused by factors such as high temperature, noise, radiation, fire, and machinery, please use this product in a safe environment and carefully read and follow the following precautions.
• If the product overheats, emits smoke or strange odors during use, please turn off the power and unplug the power cord immediately, and send the product to the dealer for repair.
• Do not modify, disassemble or repair the equipment by yourself, so as not to invalidate the product warranty or cause personal injury. If necessary, please contact the dealer for assistance.
• This product should be used and stored in a dry, ventilated, and safe environment. Do not use this product in a damp or dusty environment.
• Avoid rainwater, dust entering the product and causing a short circuit, being close to a heat source, collision, or severe vibration may cause irreversible damage to the product.
• Do not use this product in situations where it is explicitly prohibited by law. Comply with relevant safety regulations and use the product safely to avoid accidents.
• This product is not a toy for children. Keep it out of the reach of children.

Microphone Intro
Mount
XLR Audio Cable
Microphone
Tightener
Adjustable Stand
Base

Microphone Placement
Connect Microphone to the Maonocaster C2 Neo

Technical Support:
support@maono.com
www.maono.com
CE, FCC, UK, REP
Made in China
Frost clause
Information and data contained in this manual are subject to change without notice in advance.
We frequently update product firmware to improve user experience and performance.
The actual display and operation may be slightly different among different firmware versions.
For latest user manuals, please access on <https://www.maono.com>.

FCC Statement
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.
Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Note
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following:
Measures
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.
IC Caution:
English
This device complies with Industry Canada (Interference-RS) standards.
Operation is subject to the following two conditions:
(1) This device may not cause interference, and
(2) This device must accept any interference, including interference that may cause undesired operation of the device.
French
Le présent appareil a été certifié conforme aux normes de l'Industrie Canada applicables aux appareils radio.
Le présent appareil est soumis aux deux conditions suivantes:
(1) L'appareil ne doit pas produire de brouillage, et
(2) L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'entraîner une interruption de service.