

## 1990-06 ACURA/HONDA/ISUZU KIT VEHICLES APPLICATIONS

### ACURA


1994-01	INTEGRA .....	2
1990-93	INTEGRA .....	3
1992-95	LEGEND .....	3
1992-94	VIGOR .....	3

### HONDA

1998-02	ACCORD .....	3
1994-97	ACCORD .....	3
1990-93	ACCORD .....	3
2006-UP	CIVIC .....	3
1999-00	CIVIC .....	4
2002-04	CRV .....	4
1997-01	CRV .....	4
1999-04	ODYSSEY .....	4
1995-98	ODYSSEY .....	4
1997-01	PRELUDE .....	4
1992-96	PRELUDE .....	4

### ISUZU

1996-98	OASIS .....	4
---------	-------------	---

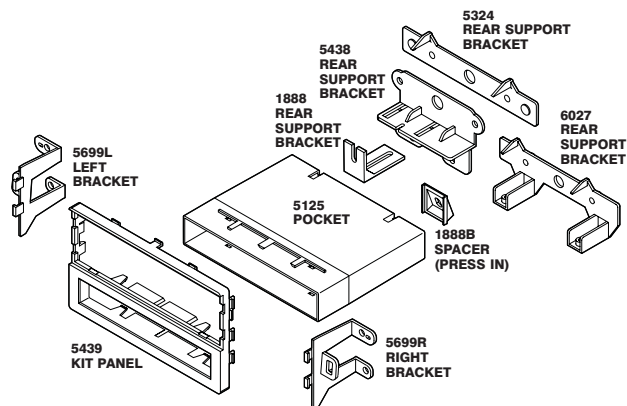

## INTRODUCTION

This premium installation kit is for 1990-06 select Acura, Honda and Isuzu vehicles. Included are all the parts you need to mount your car stereo/cassette, or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.


### NOTES:

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo/cassette player for proper wiring and mounting instructions.

## MOUNTING THE RADIO

### DIN RADIO INSTALLATION (DETACHABLE FACE/PULLOUT)



Slide the mounting sleeve (metal shroud) into the panel's radio opening and bend all available mounting tabs outward (see inset). Slide the radio into the mounting sleeve once it has been fastened to the kit panel until the radio locks into place.

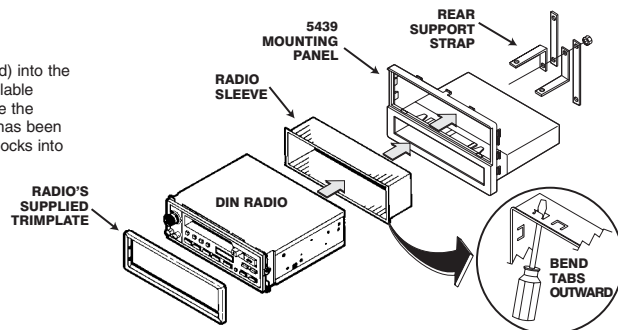

## POCKET ASSEMBLY

### A. ATTACHING THE REAR BRACKET:

Align the two (2) screw emboss locations to the matching locations on pocket. When aligned, slide the bracket together. Screw the two (2) supplied screws to screw emboss locations.

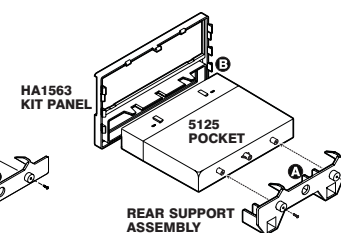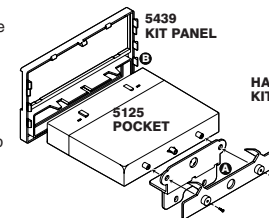


### B. ATTACHING THE POCKET:

Align the pocket to the snaps of kit panel. Snap the pocket into place on the back of kit panel.

## BRACKET ASSEMBLY

### A. REMOVING SIDE TABS

Remove all side tabs from kit panel making sure to have a smooth surface.

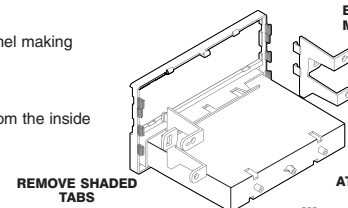

### BACK VIEW OF THE MOUNTING PANEL

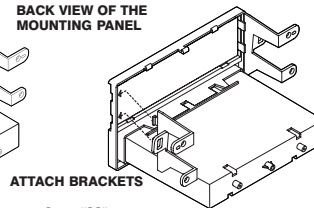


Illustration "H"

### B. ATTACHING THE BRACKETS:

Next, snap brackets into place from the inside of kit.

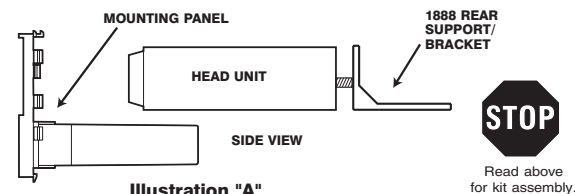


Illustration "A"

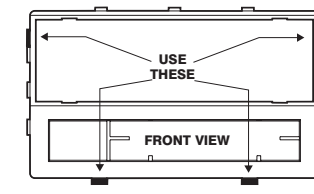


Illustration "B"

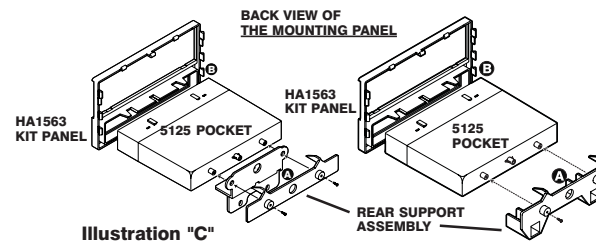


Illustration "C"

Illustration "C2"

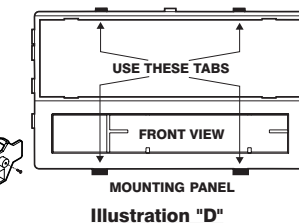


Illustration "D"

USE THE SHADED BRACKETS & THE INDICATED HOLE LOCATIONS. CUT OFF THE REMAINING BRACKETS AND DISCARD.

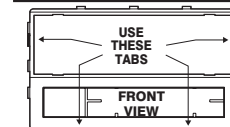


Illustration "E"

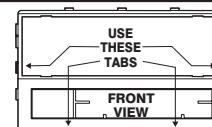


Illustration "F"

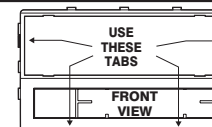


Illustration "G"

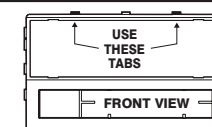


Illustration "I"

### 1994-01 Acura Integra

See Illustration "A" and "B"

### RADIO REMOVAL:

1. Remove the ashtray and extract the (2) screws securing the ashtray and lighter assembly to the dash, pull the assembly from the dash, unplug the connectors and remove the assembly.
2. Reach in behind the radio and loosen the (2) 8mm bolts securing the rear of the radio to the sub-dash structure.
3. Pull the radio out of the dash, unplug all connectors and remove the radio.

NOTE: A 1/4" socket drive assembly with a 6" extension or a Scosche Skewdriver set will make the job easier.

**1990-93 Acura Integra**

**See Illustration "A"**

**RADIO REMOVAL:**  
**NOTE: Floorboard access - view from the rear of the console.**

- Locate and loosen the (2) chrome/silver 8mm bolts securing the rear support of the radio, pull the radio, pull the radio assembly from the dash. Disconnect the antenna and other connectors, then remove the radio assembly.

**NOTE: A 1/4" socket drive assembly with a 6" extension will make the job easier.**

**1992-95 Acura Legend**

**See Illustration "C"**

**RADIO REMOVAL:**

- Extract the (2) screws below the ashtray securing the dash bezel to the dash.
- Using a panel removal tool carefully release the metal clip fasteners from around the parameter of the dash bezel and remove.
- Extract the (2) bolts securing the rear of the radio to the sub-dash structure from under the radio in the ash tray cavity.
- Pull the radio out of the cavity, unplug all connectors and remove.

**1992-94 Acura Vigor**

**See Illustration "A"**

**RADIO REMOVAL:**

- Extract the cover cap in between the heater control sliding adjuster controls and extract the screw behind.
- Pull the heater controls assembly out of the dash, disconnect the connector and remove.
- Extract the (2) screws securing the top of the radio assembly located in the heater controlcavity.
- Remove the ashtray and extract the (2) screws from this location.
- Remove the cover caps located at the front of the console on each side of the console and extract the screw behind each.
- Lift up and remove the carpet, insert piece located in the console pocket.
- Extract the (2) screws from the console pocket under the previously removed piece of carpet.
- Carefully lift up on the console and slide it back away from the radio.
- Pull the radio dash bezel assembly away from the dash, unplug all connectors (see caution) and remove.
- Extract the (2) rear support bolts securing the rear of the radio to the subframe assembly structure and remove the radio from the front of the dash bezel.

**CAUTION: THIS RADIO IS OF THE ANTI-THEFT DESIGN, INCORPORATING A CODE SYSTEM PREVENTING THE RADIO FROM FUNCTIONING WHEN POWER IS DISCONNECTED AND THEN RECONNECTED. TO RESTORE PROPER FUNCTION IT IS NECESSARY TO ENTER THE SPECIFIC ACCESS CODE FOR THE RADIO. CHECK TO MAKE SURE THAT THE ACCESS CODE IS READILY AVAILABLE BEFORE DISCONNECTING THE RADIO.**

**1998-02 Honda Accord**

**See Illustration "H"**

**RADIO REMOVAL:**

- Extract (2) screws from the bottom of the radio dash bezel.
- Carefully pop out the hazard switch/clock assembly and extract (1) screw from behind.
- Carefully pry up on radio trim bezel to release from the dash, unplug climate controls and remove the dash bezel.

**NOTE: The factory provision is for a Double DIN style stereo or stereo/pocket assembly. An installation kit is not necessary for aftermarket installations if a stereo with ISO side mounting holes is used along with the factory equipped or similar style pocket.**

**1994-97 Honda Accord**

**See Illustration "C" and "D"**

**RADIO REMOVAL:**

- Remove the ashtray and extract the screw located in the ashtray cavity securing the radio dash bezel to the dash.
- Remove the cup holder located in front of the console storage compartment and extract the screw from inside the cavity securing the console.
- Carefully pry up on the cover panel located in the console storage pocket with a small screwdriver and extract the (2) screws securing the console.
- Carefully slide the console back far enough to access and remove the (2) screws behind the shifter securing the radio dash bezel.
- Using a panel removal tool carefully pry up on the parameter of the radio trim bezel starting around the shifter to release the fastening clips securing it to the dash, unplug all connectors and remove the bezel.
- Extract the (2) bolts securing the rear support of the radio to the dash below the radio/pocket assembly, pull the radio out of the dash cavity, unplug all connectors and remove the radio.

**1990-93 Honda Accord**

**See Illustration "C" and "D"**

**RADIO REMOVAL:**

- Extract the (2) screws - one from each side of the console. Lift off the console (for manual transmissions remove the shift lever boot first).
- Pull out the ashtray and extract the (2) screws securing the ashtray light and side housing.
- Remove the (2) screws securing the rear of the radio (screws are located to the rear of the dash cavity, in the support bracket of the radio).
- Pull the radio/pocket assembly out of the sash, flex the trim panel for radio support bracket clearance.

**NOTE: For added bracket clearance, remove (2) screws that secure the bottom/backside of the radio trim - (1) from each side of the panel, located just below where the rear radio support screws were removed, then remove (2) screws from the panel just above the radio location. Disconnect the connectors and remove the assembly.**

**2006-Up Honda Civic**

**See Illustration "I" and "C2"**

**RADIO REMOVAL:**

- Using a panel removal tool, unsnap panel located beneath radio inside storage compartment.
- Extract two 8mm bolts from behind panel, securing factory radio to dash chassis.
- The panel closest to foot pedal will have a release knob that will have to be turned counter clockwise to release panel; unsnap the remaining attached portion of the panel.
- Using a panel removal tool, unsnap knee guard under steering wheel.
- Extract (1) Phillips head screw securing dash bezel located at the left of the steering wheel.
- Using panel removal tool, unsnap the parameter of the top dash surrounding radio and instrument cluster.
- Radio is attached to the dash bezel.
- Lift away, disconnect harness, and remove.

**1999-00 Honda Civic**

**RADIO REMOVAL:**

- Extract (2) screws from center panel below radio.
- Extract (4) screws from driver's side underdash panel, and unsnap to remove.
- Extract (2) screws from left side of center dash panel.
- Open glove box, push stoppers inward to let glove box hang all the way open.
- Extract (2) screws from right side of center dash panel.
- Pull the center dash panel down, unplug lighter socket and remove panel.
- Looking up into dash from underneath, extract
- Carefully pull out complete center console/radio/climate control assembly.
- Unplug all control, radio, antenna, and remove entire assembly.

**2002-04 Honda CRV**

**RADIO REMOVAL:**

- Remove (2)
- Using a panel removal tool pry out the dash bezel around the radio.
- Remove (4) screws

**1997-01 Honda CRV**

**RADIO REMOVAL:**

- Unsnap push-pin fasteners from bottom of center console and remove bottom panel.
- Extract (4) screws from bottom edge of bezel. Extract (4) screws from inside dash below pocket. Pull cup holder/pocket assembl
- Open glove box and remove stoppers. Extract (2) screws from right side of center dash bezel.
- From below steering wheel extract (2) screws from bottom edge or panel, unsnap upper edge of panel, unplug, and remove.
- Unsnap top edge or center lower bezel, unplug, and remove.
- Extract (2) screws from sides of pocket.
- Unsnap radio/AC control dash bezel, unplug, and remove
- Extract (4) screws from each side of the radio bracket assembly to remove radio from dash/AC bezel.

**1999-04 Honda Odyssey**

**RADIO REMOVAL:**  
**NOTE: The Factory Radio is a Double Din/ISO. An installation kit is necessary when using an Aftermarket radio. We recommend the Scosche HA1560 or HA1562.**

- Unsnap bezel, lift away, unplug and remove

**1995-98 Honda Odyssey**  
**1996-98 Isuzu Oasis**

**RADIO REMOVAL:**

- Open glovebox and unsnap glove box's rubber stoppers at the sides and remove (1) screw at restraining arm at the right side t
- Extract (2) screws from right side of center console assembly.
- Extract (2) screws from bottom of center console near carpet.
- Open console storage compartment and extract (2) screws from near top.
- Extract (2) screws from driver's side underdash panel and pop out the right side of panel only to access (1) screw holding ce
- Carefully pull back on the lower center console assembly to unsnap, unplug, and remove.
- Extract (2) screws from each side of slide out cup holder and remove cup holder.
- From underneath, extract (2) 8mm screws holding back edge of radio/pocket to dash structure.
- Slide radio out of dash unplug connectors, antenna and remove.

**1997-01 Honda Prelude**

**RADIO REMOVAL:**

- Carefully unsnap r
- Extract (4) screws from radio/pocket assembly, unplug radio, and remove.

**1992-96 Honda Prelude**

**RADIO REMOVAL:**

- Carefully reaching behind the console, access and untighten the 8mm bolt securing the rear of the radio.
- Carefully pull the unit from the cavity, unplug all connectors and remove.