




NO POWER OOPS WITH OUPES

2000W Outdoor Power Station

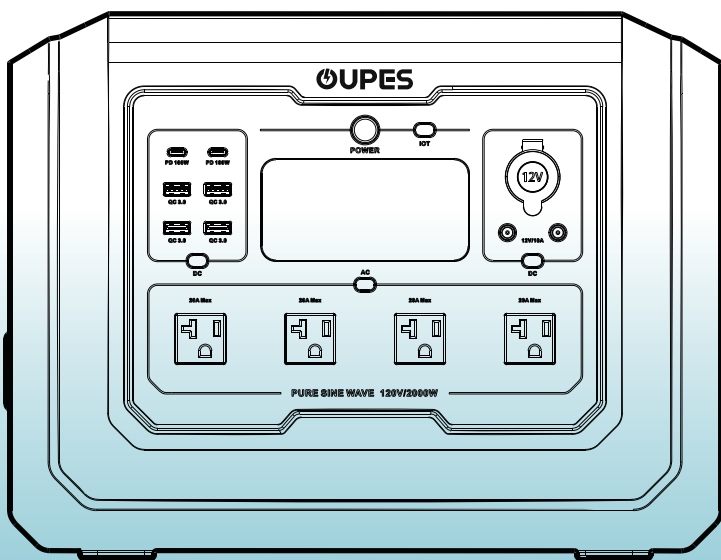

MEGA 1

User Manual

Welcome

Hi friend, thank you for choosing to support our products.

Please follow our YOUTUBE channel to learn more about product operation guides, precautions, new product release information, as well as see product usage experiences and stories shared by others.



Content

Product List	1
Product Description	2-4
Parameter Specifications	2
Function Description	3
LCD Screen Description	4
Instructions for Use	4-6
Recharge Methods	6-12
AC Charging	6-7
Solar Charging	8
Car Charging	9
Power Pack Charging	9-10
Gasoline SilentInverter Generator Charging	11-12
Other Functions	12-14
EPS	12-13
Frequency Switching.....	14
Circuit Breaker Protection	14
FAQ	15-16
Fault Code and Trouble Shooting	16-18
Storage and Maintenance	19


Disclaimer

Read this user manual carefully before using the product to ensure that you completely understand the product and can correctly use it. After reading this user manual, keep it properly for future reference. Improper use of this product may cause serious injury to yourself or others, or cause product damage and property loss. Once you use this product, it is deemed that you understand, approve and accept all the terms and content in this document. The Company is not liable for any loss caused by the user's failure to use this product in compliance with this User Manual.


In compliance with laws and regulations, the Company reserves the right to final interpretation of this document and all documents related to this product. This document is subject to changes updates, revisions, or termination) without prior notice. Please visit the official website to obtain the latest product information.

- The Company is not responsible for any damage caused by force majeure (e.g. fire, typhoon, flood, earthquake or negligence, abuse or use under other abnormal circumstances by the customer).
- No compensation for losses caused by the use of non-standard connectors.
- The Company is not responsible for any damage caused by not following the instructions in the operating instructions.


What's in the Box

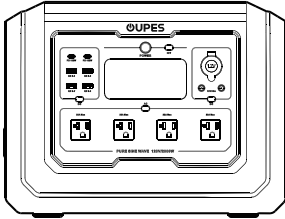


Power Station

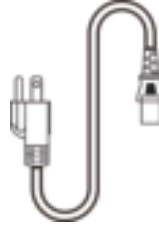


AC Charging Cable

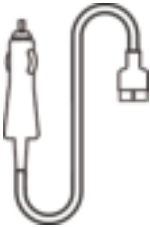

Anderson-Car
Charging Cable

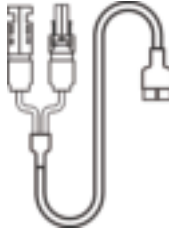

Anderson-MC4 Cable

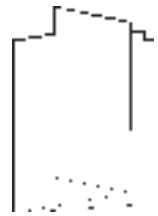

User Manual & Warranty


Product Description

⚡ Parameter Specifications

Output Technical Parameters		
AC Output	Rated Voltage	120Vac
	Rated Power	2000W
	Peak Power	4500W
	Frequency	60Hz
DC 5521 & Car Lighter Output	Rated Voltage	13V
	Rated Current	10A
USB-A Output	5V/3A; 9V/2A; 12V/1.5A 【18W Max】	
USB-C Output	5V/3A; 9V/3A; 12V/3A; 15V/3A; 20V/5A 【100W Max】	
Input		
AC Charge Input	85~145Va.c 12A 1400W	
PV (Anderson) Input	12~80Vd.c MPPT:18V-75V 14A 800W	
Car Charge Input	12~15Vd.c 8A	
Battery		
Rated Capacity	1024Wh	
Rated Voltage	51.2Vdc	
Battery Type	LiFePO4	
Common Information		
IP Grade	IP21	
Working Temperature	0°C~40°C/30°F~104°F	
Dimension	15.1*9.1*11.6in (384*232*295mm)	
Net Weight	27.8lb (12.6kg)	

Product Description

⚡ Function Description

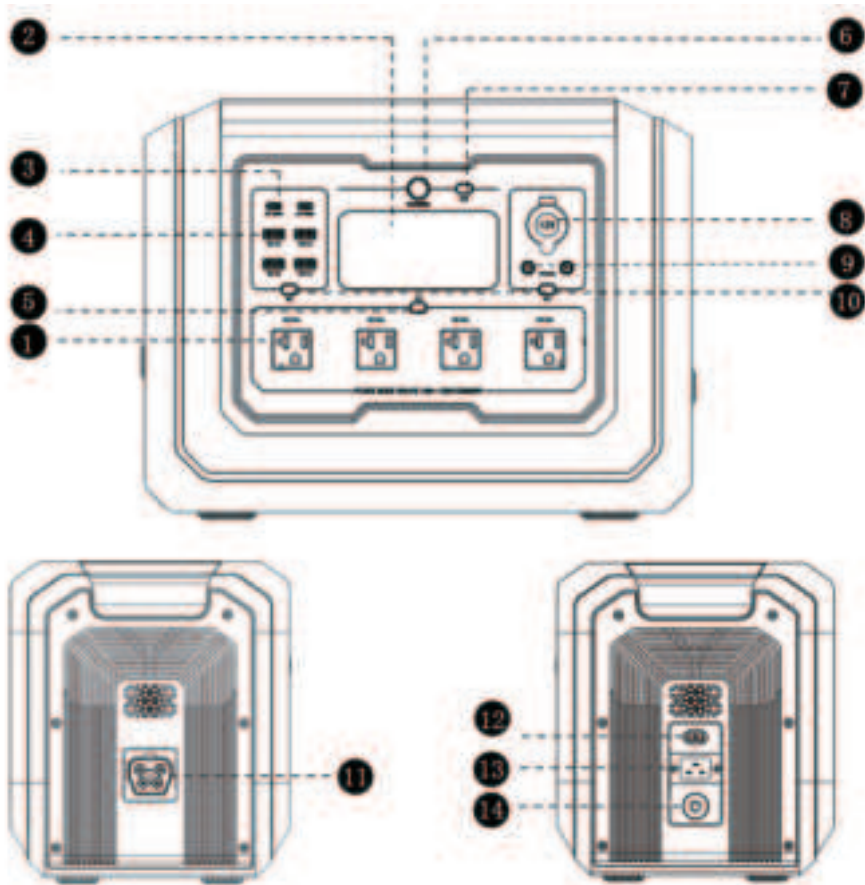

1. AC Output Port(20A Max)

2. LCD Screen

3.USB-C Output Port

4. USB-A Output Port

5. AC Output Power

6. Main Power On/Off

7. IOT On/Off Switch

8. 12V Car Charger Output Port

9. DC 5521 Output Port Conversion

10.DC Output Power On/Off Switch

11. Powerpack Connection Port


12. .Anderson Input Port

13. AC Recharging Input Port

14. Overload Protection

Product Description

⚡ LCD Screen Description

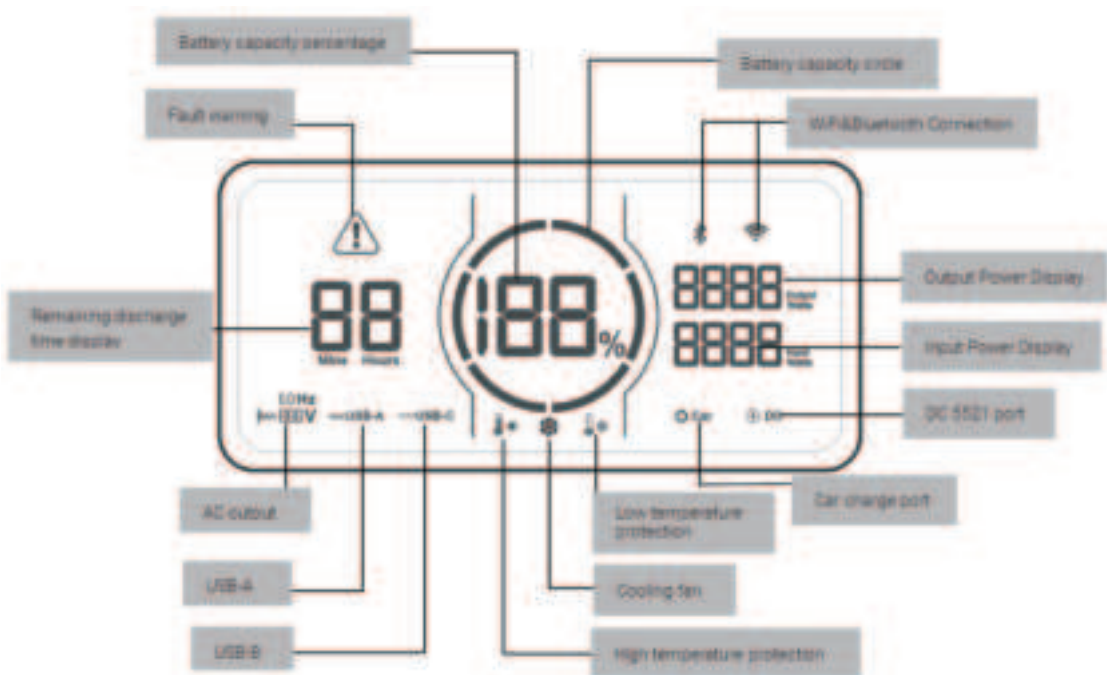

Instructions for use


LCD battery capacity circle indicates battery level. The capacity circle is divided into six sections, accounting for approximately 17%~35%~51%~68%~85%~100% of the capacity. When in use, the LCD display automatically wakes up. When discharging, the blue capacity segment disappears from the display, indicating remaining capacity. When charging, the blue battery capacity circle flashes clockwise along the trajectory,

Instructions for use

which indicates that the device is currently charging. The number on the right side of the energy circle now displays the real-time input power. After full charging, all blue capacity segments will be illuminated and keep in stable. After charging is completed, please unplug the charger.

Press and hold the power button, the product will turn on, the LCD screen will light up, and the power button indicator light will turn to a steady state; press and hold the power button for about 3 seconds or more, the LCD screen will display the word "off" and then release it, the product will shut down, and the LCD display will turn off.

When the main power button is turned on, lightly press the switch button of each functional area, and the corresponding function icons on the LCD screen will light up at the same time. At this time, the functions in this area can be used normally; tap the corresponding functional area button again, and the corresponding LCD screen icons will turn off. This area function stops working.

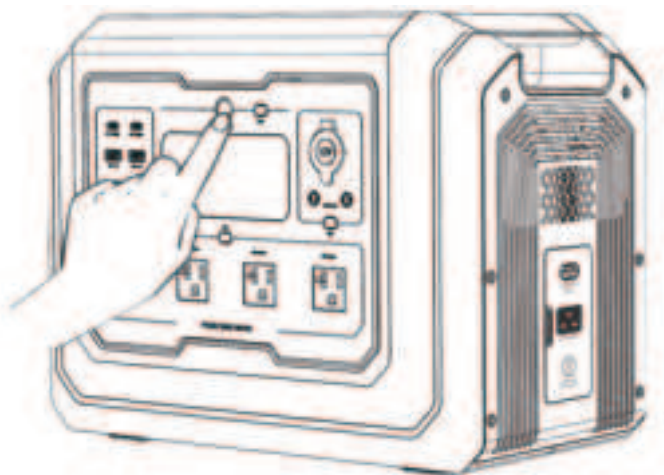

Instructions for use

Notice:


1. After the product is turned on, short press the main power button The LCD screen will turn off but the product will not shut down If the product is not operated within 5 minutes, the product will automatically shut down.
2. The default standby time of this product is 6 hours, If other output power keys are not turned on and no load is connected to the product, the product will automatically shut down after 6 hours. If the product is not operated within 5 minutes, the product will enter sleep state and the LCD screen will automatically turn off, When the product has load changes or operations, the LCD screen automatically lights up. The standby time can be set on the APP.
3. In high-temperature environments, it is recommended to use loads below 1600W when the capacity is discharged from 100% to 30%. Otherwise, it may trigger the high-temperature protection of the battery cells.

Recharge Methods

⚡ AC Charging

To charge the device using the standard AC charging cable, connect as shown in the figure. At this time, the input power reading appears on the screen, and the device starts charging. It can support up to 1400W fast charging, which takes about 1.3 hours to fully charge.

Recharge Methods

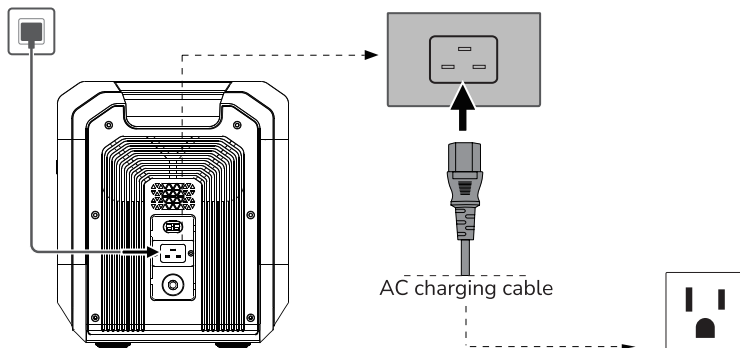

Instruction for Fast Charging & Slow Charging Switching Function


Note: The product must be turned on, and the input and output ports must be cut off.

1. Simultaneously press the IOT button + the left Dc button for 3-5 seconds, the LCD screen flash and display 'SET', the product enter the input power switching interface, lightly press the IOT button to switch, 'L' means slow charging (700W input), 'H' means fast charge (1400w input);

2. After the switching is completed, press the POWER button for 3-5 seconds to confirm the setting; the LCD screen stop flashing and display 'SUC', which means the setting is successful;

3. Press the POWER button again for 3-5 seconds to exit the fast charging & slow charging switching function.

Note: The product's fast and slow charging function must be turned off when switching.

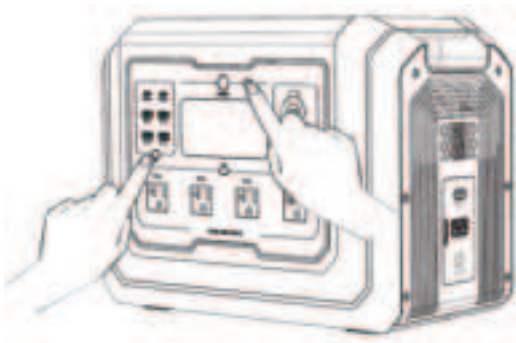


Recharge Methods

⚡ Solar Charging

Use the accessories 1 "Anderson to MC4 adapter cable" to connect the standard solar panels to the device. Up to 3 standard solar panels can be connected.

Note:


1. The solar charging cable (MC4-Anderson adapter cable) and solar panel must be purchased by yourself.
2. When using the supporting solar panel to charge this product, please make the connection according to the user manual specifications.
3. Before connecting the solar panel, please confirm that the output open circuit voltage specification of the solar panel is within 80V to avoid damage to the product.

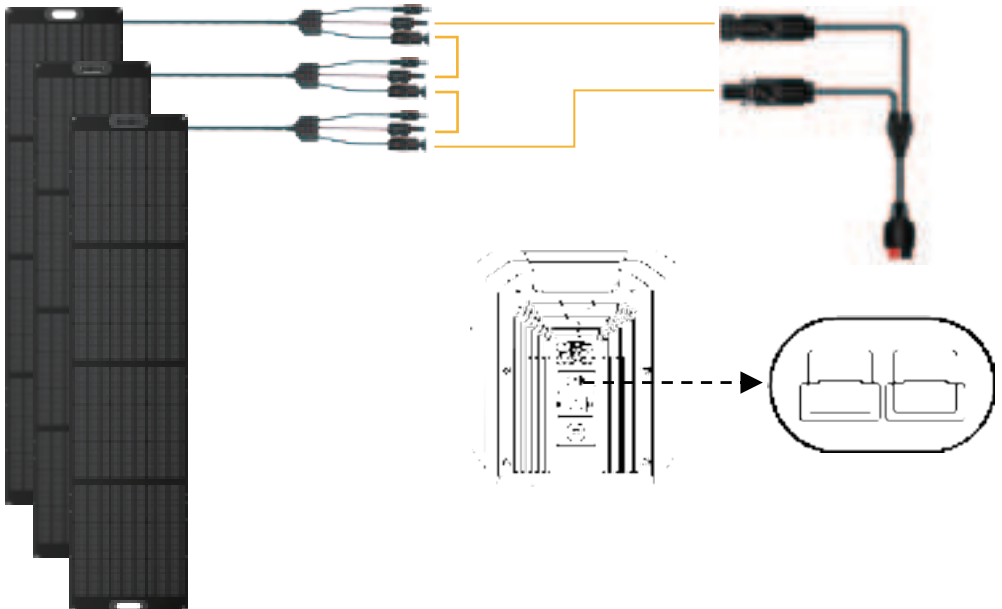

Recharge Methods

⚡ Car Charging

Use the car charger port of the car to charge this product, supporting 14V/8A car charging. For protecting the car battery from losing power and unable to start, it is necessary to use the car charger to charge after the car is started. At the same time, ensure that the car charger port and the cigarette lighter of the car charger input cable are in good connection. The company shall not be held responsible for any loss caused by non-compliance with the standard operation.

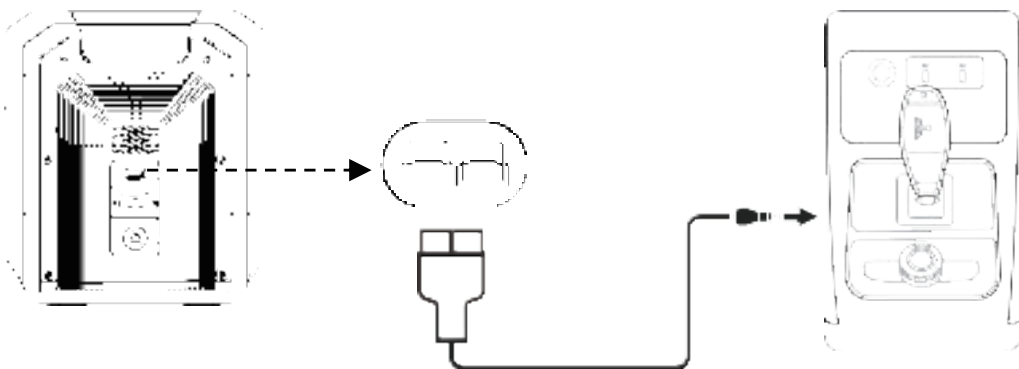


⚡ Power Pack Charging

Power pack(up to one) can be connected to this product. Use the product-specific power pack cable to connect the product and the battery pack, and the device starts to charge when a reading appears on the input power on the screen.

Recharge Methods

⚡ Power Pack Charging

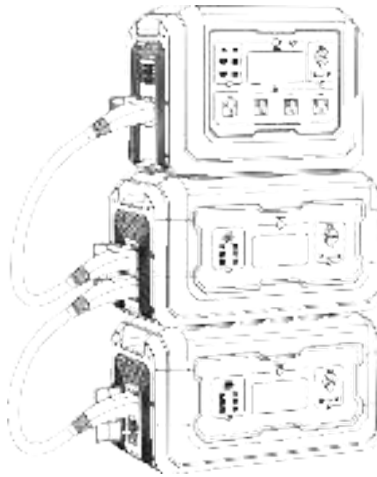


Note:

1. Please make sure that both the product and the power pack are turned off Before connecting the power pack to this product,.
2. After this product is connected to the power pack, make sure that the LCD display of this product shows the input power, and then start to use.
3. Do not directly connect or remove the power pack during the charging and discharging process. If you need to connect or remove the power pack when using, please turn off the power before operating.
4. Do not use your hands or other objects to touch the metal terminals at the connection port of the power pack . If there are foreign objects attached to the metal terminals, please lightly wipe with a dry cloth.
- 5.The device only allows to plug in and unplug the battery pack in the shutdown status;with the device on, to plug or unplug battery packs will trigger the overcurrent protection. If damage under this situation,no warranty allowed.

Recharge Methods

⚡ Gasoline Silent Inverter Generator Charging

This device supports charging via a gasoline silent inverter generator. Use the product-specific cable and gasoline silent inverter generator to connect to this device. The gasoline silent inverter generator automatically starts when the power station's battery level falls below 20%, and charging begins once a reading appears on the input power on the display screen; the gasoline silent inverter generator will stop operating when the battery level exceeds 85%, thereby ending the charging process.

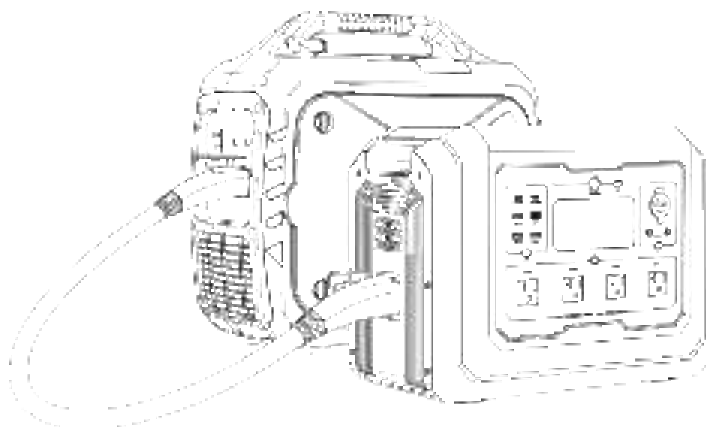

Note:

1. Please follow the gasoline silent inverter generator's user manual when operating the device.
2. If multiple charging sessions are required within a short period, there is no need to operate the device after the gasoline silent inverter generator automatically shuts down when the battery charge reaches 85%. The gasoline silent inverter generator will automatically restart to continue charging when the connected battery level falls below 20%.


Recharge Methods

⚡ Gasline SilentInverter Generator Charging

3. Do not plug or unplug the cable when the gasoline silent inverter generator and power station are in operation, as this may cause damage to the equipment.
4. In case of an emergency during the use of the gasoline silent inverter generator, you may directly press the emergency stop button to halt the generator.
5. Please ensure the product is turned off before connecting to the gasoline silent inverter generator; otherwise, damage caused to the equipment will not be covered by our warranty service.

Other Functions

⚡ EPS(Emergency Power Supply)

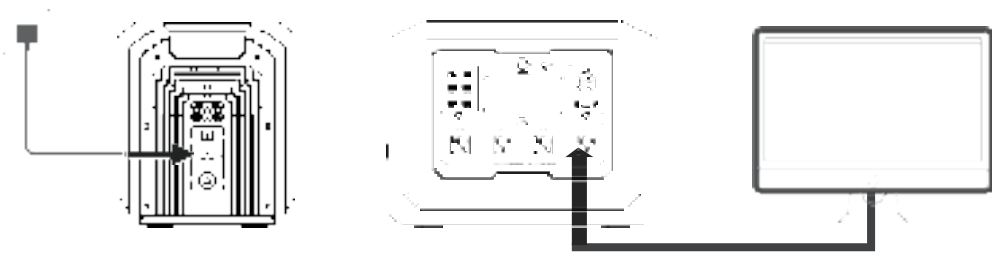

The product supports EPS. When you connect the grid power to the AC Input Port of the product through an AC cable, you can power electrical devices through the AC Output Port (AC power will come from the grid and not the power station in this situation). In case of a sudden blackout, the product can automatically switch to the battery powered supply mode within 20ms.

Other Functions

⚡ **EPS(Emergency Power Supply)**


Note:

This function is a non-professional UPS function and does not support 0ms switching. Please do not connect it to equipment that requires uninterrupted power supply (such as data servers and workstations), or please test it multiple times to confirm whether it is compatible before using it. It is recommended to use only one device during use. The operating power of the device should not exceed 2000W (input + output). When the load and charging reach 2000W, it will delay for one minute to report overload and shut down the output. If it is higher than 2000W, it will delay for 1 second to shut down the output. Do not use multiple devices at the same time to avoid triggering the overload protection of this product. If the device fails to operate normally or data is lost due to failure to follow instructions, our company will not bear the corresponding responsibility.

Other Functions


⚡ Frequency Switching

1. In the power-on state, turn off the AC output, and press the main power button & the DC button(USB output) at the same time to enter the switching frequency menu.
2. Press the AC output button to switch the frequency, the frequency to be set will continue to flash.
3. Long press the main power button to set the frequency, the word "SUC" will be displayed if the setting is successful, and then long press the main power button to exit the setting menu.

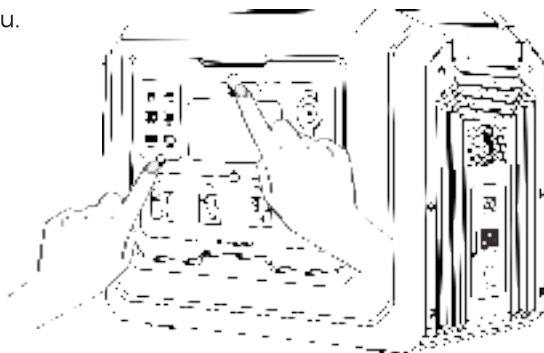

⚡ AC Input Overload Protection

When the AC input current is continuously more than 25A, the device charge input port will protect itself. The AC input overload protector button will pop up automatically. After confirming that the product is not faulty, press the AC input overload protector to resume charging.

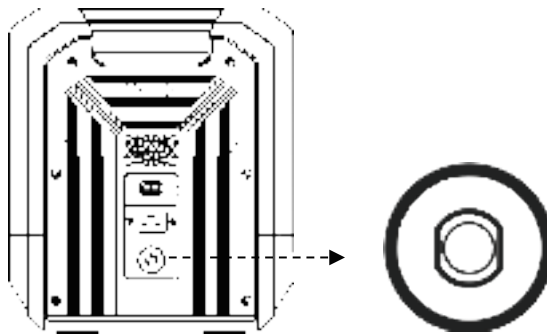

1. What type of battery does the product use?

This product uses high-quality lithium iron phosphate batteries.

2. What equipment can be connected to the AC output port of the product?

The AC output port of this product has a rated power of 2000W and a peak power of 4500W. It can power most household appliances. However, it is recommended that you confirm the power of the appliance before use and ensure that the sum of the power of all load devices is less than the rated power.

3. How to know how long the product can provide power?

The LCD screen of this product will display the battery life, and devices with stable power consumption can be estimated based on this time.

4. How to tell if the product is charging?

When charging, the LCD screen will display the remaining charging time, and the power indicator circle outside the battery power percentage will begin to rotate in a circular motion, and the input power will be displayed.

5. How to clean this product?

Please use a dry, soft, clean cloth or paper towel to wipe this product.

6. How to store the product?

When storing, please turn off this product first and then store it in a dry, ventilated place at room temperature. Do not place this product near water sources. During long-term storage, it is recommended to charge and discharge the battery every three months to extend the service life of this product.

7. Can this product be brought on board a plane?

Can't.

8. Is the actual output capacity of the product consistent with the capacity specified in the user manual?

The capacity indicated in the user manual is the rated capacity of the battery pack of this product. Since this product has a certain efficiency loss during the charging and discharging process, the actual output capacity of the product is lower than the capacity specified in the user manual.

Fault Code and Trouble Shooting

Fault code	Fault information	Status	Remarks
E000	AC output short circuit protection	 +  Flashing, no output	Press the AC output power on/off button for recovery
E001	Output overload protection	 +  +  Flashing, no output	Flashing icons indicates which circuit overload. Overload protection needs to be restored manually, UPS function overload 2200W 1 min., 3600W 1 sec
E002	AC Battery low voltage protection	The corresponding function icon flashes and the corresponding port has no output.	After protection, restart corresponding function keys to restore functions, and recharge it timely
E003	AC output over-voltage and low voltage protection	 Flashing, no AC output	You need to manually press the AC power button to recover
E004	Abnormal AC input frequency	 Flashing, no output	Automatically recover when frequency is normal
E005	High and low bus voltage, over-current	 Flashing, no output at all ports	You need to manually press the AC power button to recover

Fault Code and Trouble Shooting

Fault code	Fault information	Status	Remarks
E006	Inverter over-temperature charging over-temperature protection	 +  +  Flashing, no output	Temperature lower down to normal level, it will recover automatically
E010	Overload and short circuit of the cigarette lighter socket	 +  +  Flashing, no output	You need to manually press the DC power button to recover
E011	Overload and short circuit of the USB-A port	 +  Flashing, no output at all ports	You need to manually press the DC power button to recover
E012	Overload and short circuit of the USB-C port	 +  Flashing, no output at all ports	You need to manually press the DC power button to recover
E016	Overvoltage of the inverter input battery	E016 code +  Flashing	You need to manually press the DC power button to recover
E020	BMS communication failure	 Flashing, no output at all ports	Check BMS communication cable
E021	Battery cell high voltage alarm	E021 code flashing	Set the device aside and wait for the battery voltage to recover automatically
E022	Battery cell low voltage alarm	Battery capacity percentage flashing	Connect the AC charging cable and keep charging until the voltage is normal
E023	Total battery voltage is too high	E23 code flashing but output is normal	Set the device aside and wait for the battery voltage to recover automatically
E024	Total battery voltage is too low	 Flashing, no output at all ports	Connect the AC charging cable and keep charging until the voltage is normal
E025	Battery high temperature	 +  Flashing, no output at all ports	Automatically resumes after temperature recovery
E026	Battery low temperature	 +  Flashing, no output at all ports	Automatically resumes after temperature recovery

Fault Code and Trouble Shooting

Fault code	Fault information	Status	Remarks
E027	System overload	 Flashing, AC output close, DC output is normal, the AC load is higher than 3600W or AC+DC load is higher than 3600W	You need to manually press the AC power ON/OFF button to recover
E028	Charging over-temperature	 +  Flashing, charging stop	Automatically resumes after temperature recovery
E029	MOSFET over-temperature	 +  Flashing, no output at all ports	Automatically resumes after temperature recovery
E030	Abnormal battery pack connection	Battery pack connection error	Please replace with the standard battery pack

Storage & Maintenance

1. Please store the product away from water sources, heat sources, and metal objects.
2. In order to extend the service life of the battery, it is recommended to use or store this product in an environment of 20 °C to 30 °C.
3. If long-term storage is required, please charge and discharge this product once every 3 months (first discharge to 0%, then fully charge, then discharge to 60% for long-term storage); products that have not been charged or discharged for more than 6 months Warranty will not be provided.
4. For safety reasons, do not store this product in an environment above 45 °C or below -10 °C for a long time.
5. If the product is seriously low on power and idle for too long, the product will enter deep sleep mode, and the product must be charged before use again.