

Oasis Plus

User Manual




Item No.: BTTC-500P-2

Table of Contents


Box Contents	3
Product Introduction	4
Product Overview	4
Button Functions	5
LED Indicators	6
Set Up	7
Connecting to TV	7
Connecting Your Headphones	11
Setting Up Your TV	13
Advanced Features	14
Adding a Second Pair of Headphones	14
Reconnecting Your Headphones	15
Listening with a Soundbar	16
Using the Remote	17
Specifications	18
FAQ	19
Contact Us	97

Box Contents


EN

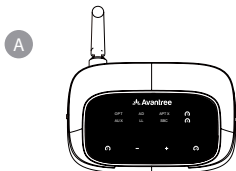


Oasis Plus 2 - Bluetooth Transmitter

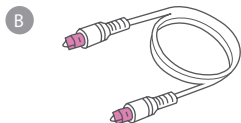


Digital Optical Audio Cable

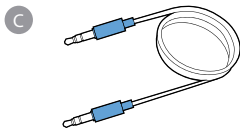


AUX 3.5mm Audio Cable

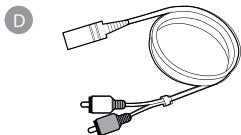

AUX 3.5mm to RCA Adapter

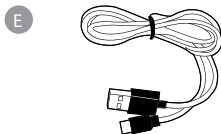



Type C Power Cable

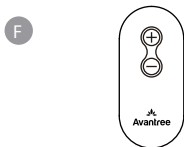

Remote

Product Introduction

Product Overview

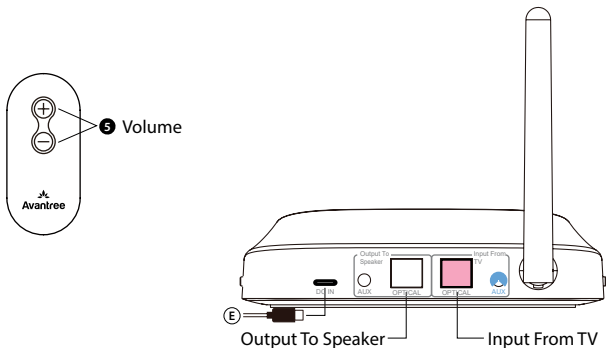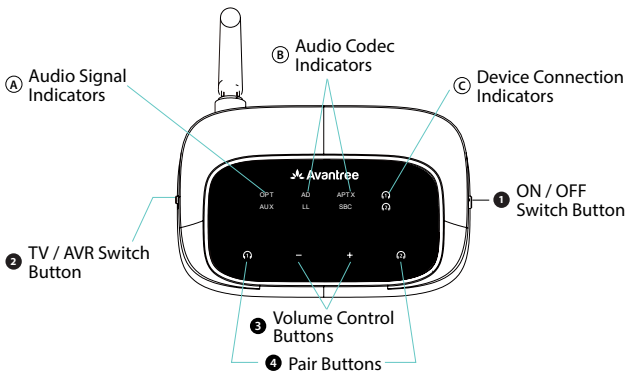

Button Functions

EN

No.	Button	Functions
1	OFF  ON Bypass	Switch to ON/OFF to turn it on/off
2	TV  AVR AUX only	Switch to TV/AVR mode while connecting via AUX cable
3	 	Press once to adjust volume
		Press & hold both buttons for 7 seconds to clear pairing history
4	 	Press & hold for 2 seconds to enter pairing mode
		Press once to reconnect paired device
5	 	Press once to adjust volume with the Remote

LED Indicators

No.	Indicator	Status
A	Flashing white light by "OPT" / "AUX"	Invalid audio signal
	Solid white light by "OPT" / "AUX"	Valid audio signal
B	Solid white light by "AD," "LL," "APT," or "SBC"	Audio streaming in the aptX adaptive, aptX low latency, aptX or SBC codec
C	Flashing white and green alternately by ① / ②	Pairing mode
	Solid white light by ① / ②	Successfully connected to your device(s)

Set Up

EN

Connecting to TV


The Oasis Plus 2 must be connected to a power source via the provided power cable in order to function. Plug the transmitter into either:

1. A TV's USB power port (we recommend this so that they auto power ON / OFF in tandem with your TV), OR
2. A nearby wall outlet - 5V/500mA-2A rated USB adapter (any phone charger should work. Please contact support@avantree.com if you'd like us to send you a free adapter)

Once the Oasis Plus 2 is connected to its power source, switch  to the "on" position. You can then connect it to your TV's audio ports. You can choose one of 3 different ways to do this.

OPTION 1 Optical port (recommended)

Plug the provided optical audio cable into the TV's "optical OUT" or "OPT OUT" port, then plug the other end into the transmitter's optical port in the "TX INPUT FROM TV" section.

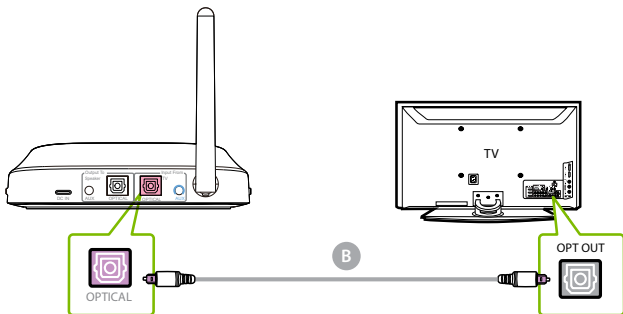


NOTE: Most TVs support audio output through only one digital output port at a time, so if your TV's HDMI ARC port is in use, the optical port may be disabled. You can either disconnect the HDMI ARC device, or try connecting the transmitter via RCA / AUX.

OPTION 2 AUX 3.5mm port


EN

Plug the provided AUX 3.5mm audio cable into the TV's AUX 3.5mm output port, then plug the other end into the transmitter's AUX 3.5mm port in the "TX INPUT FROM TV" section.

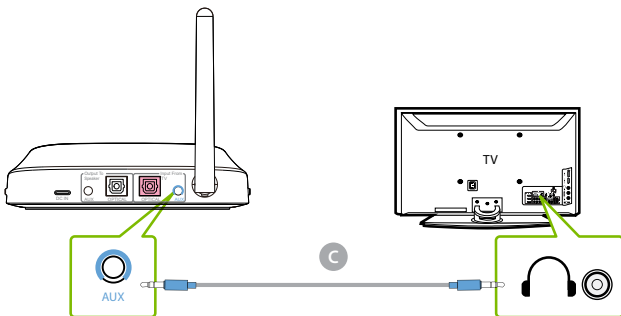

OPTION 3 RCA port

Plug the red & white RCA connectors into the TV's "AUDIO OUT" ports, then use the provided RCA to AUX adapter to plug the other end into the transmitter's AUX.

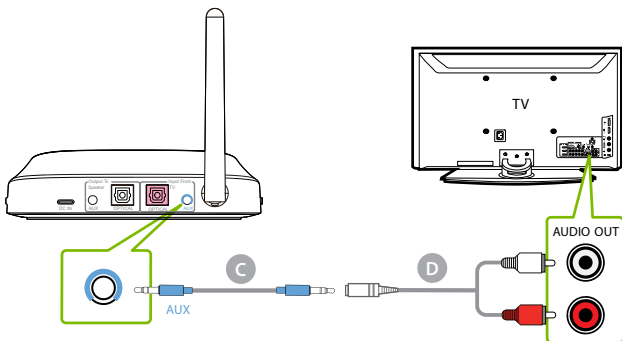

NOTE: Double check to ensure that optical / RCA cables are plugged into the TV's audio OUT ports and not the AUDIO IN / COMPONENT IN ports.

Connecting Your Headphones

Now that your Oasis Plus 2 is all set up, you can connect your headphones to the transmitter.

STEP 1

First, power everything on.

STEP 2

For first time use, the Oasis Plus 2 will enter PAIRING MODE automatically. For subsequent use, put your Oasis Plus 2 into PAIRING MODE by pressing & holding the  button until the " " LED flashes green and white alternately.

STEP 3


Put your Bluetooth headphones / speakers into PAIRING mode.

STEP 4

Keep the Oasis Plus 2 & your device close together and wait for 5-10s until they connect. Once connected, the connection indicator's " " will turn a solid white.

NOTE 1: Most cases where your device & the transmitter fail to connect happen because the device is not properly placed into PAIRING MODE. Double check that your device is successfully in PAIRING MODE (typically indicated by an LED indicator's alternate red & blue flashes). For more details, please refer to your device's online user manual.

NOTE 2: Some smart TVs will automatically scan for and try to pair with any Bluetooth devices in its vicinity. If your TV prompts you to connect your Bluetooth headphones or the Oasis Plus 2, please "DENY" the request so that your device can properly pair with the transmitter.

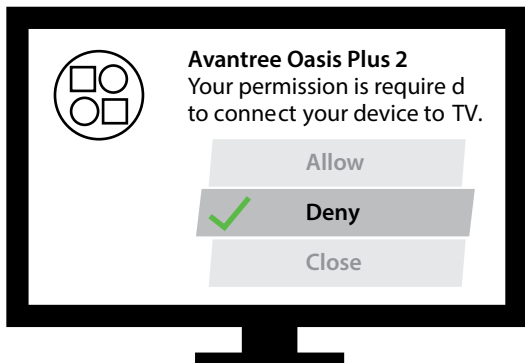

Setting Up Your TV

(FOR OPTICAL CONNECTIONS ONLY)

If you connected to your TV via the optical OUT or “OPT OUT” port, you’ll need to configure your TV settings before you’ll receive audio.

STEP 1



Using your TV’s remote control, press the SETTINGS button and navigate to the AUDIO tab within the settings menu. (Please note that there may be differences in the setting names depending on your brand of TV).

STEP 2

Proceed to AUDIO OUTPUT and select “OPTICAL OUT / DIGITAL OUT”. Many TVs will do this automatically; skip this step as needed.

STEP 3

Set Audio Output format to “PCM / STEREO” ON or “DOLBY” OFF.



If you're having trouble finding these settings, you can scan the QR code correlating to your TV's brand OR visit avantree.com/oasis-plus-2/tv-audio-settings for a more detailed guide.



LG



SONY



SAMSUNG

Advanced Features

Adding a Second Pair of Headphones

You can connect and simultaneously listen through two pairs of headphones if desired. Visit avantree.com/oasis-plus-2/video if you'd prefer to watch a video guide on this process.

STEP 1

Pair your first pair of headphones to the Oasis Plus 2 by following the steps in the "Connecting Your Headphones" section (Page 11).

STEP 2

Once your first device is successfully connected, put your Oasis Plus 2 into PAIRING MODE once again by pressing & holding the  button until the " " LED flashes GREEN and WHITE alternately.

STEP 3

Put your second pair of Bluetooth headphones / speakers into PAIRING mode. Please refer to your headphones' / speaker's user manual for more details if necessary.

STEP 4

Keep the Oasis Plus 2 & your second device close together and wait for 5-10s until they connect. Once connected, the connection indicator's "🔌" will turn a solid white.

NOTE: The dual headphones support function works with most headphones but not all. Certain true wireless earbuds in particular do not work well with Bluetooth transmitters' dual headphones mode.

Reconnecting Your Headphones

You typically do NOT need to re-pair your Bluetooth headphones / speakers with the Oasis Plus 2 every time. Once successfully paired, they should automatically reconnect when both devices are turned on (this may take a few seconds).

If your device does not automatically reconnect after 5-10 seconds, you can manually initiate reconnection by pressing the Oasis Plus 2's Pairing button once and waiting for 5-10 seconds. If this still doesn't work, try initiating reconnection on your audio device as well (typically done by pressing the main Bluetooth PLAY button on your headphones once).

NOTE: If you paired your headphones with a different Bluetooth device, turn Bluetooth OFF on said device(s). AirPods in particular will always prioritize iPhones for automatic pairing, so you'll need to turn your iPhone's Bluetooth OFF when pairing your AirPods with the Oasis Plus 2.

Listening with a Soundbar


The Oasis Plus 2's pass-through function allows you to listen through both headphones and an external soundbar / stereo AVR simultaneously.

STEP 1

Plug an additional optical or 3.5mm AUX cable into the correlating audio port in the transmitter's "OUTPUT TO SPEAKER" section.

STEP 2

Plug the other end into your external sound system, then you're good to go.

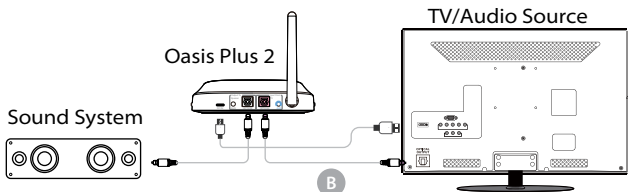

NOTE: Bypass only works with the same type of input / output, i.e. if you connect to your TV via OPT, you'll need to connect to your speaker via OPT as well.

Using the Remote

Simply press the ⊕ and ⊖ buttons on the remote controller to adjust volume. Facing the remote to the infrared window in front of the Oasis Plus 2 within 4 meters and no obstacles.

If your remote runs out of power, you can replace the battery with any CR2025 3V Lithium battery. Use a coin, a button cell, or a slotted screwdriver, turn the cap counterclockwise and replace the dead battery with a fresh one, then turn the cap back.

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



Specifications

Bluetooth version	v5.3
Supported profiles	A2DP, AVRCP
Audio codecs	aptX adaptive, aptX-LL, aptX, SBC
Operating range	Up to 164ft / 50m
Input voltage / current	DC5.0V / 500Ma-2A
Supported sampling rate in optical mode	≤48KHz, 16bit
Supported audio format in optical mode	PCM / LPCM
Net weight	90g

FAQ

EN

Below are some of the most common questions people have during setup.

Can I have audio through both my TV speakers and my wireless headphones at the same time?

This completely depends on whether or not your TV supports the ability to output audio to 2 sources simultaneously. You can try a few different methods to test if your TV is capable of this or not -- please refer to avantree.com/oasis-plus-2/sound for more details.

Why am I getting audio delay?

Both the sender (i.e. the Oasis Plus 2) and the receiver (i.e. your Bluetooth headphones) must support either aptX Low Latency or aptX adaptive in order to eliminate audio latency. You can check your device's specs to ensure it supports either of these audio codecs. Please note that most true wireless earbuds do not currently support aptX Low Latency or aptX adaptive audio codecs.

Other Tips

If your TV's HDMI ARC port is in use, your optical audio output might not work. Try connecting the transmitter via RCA / AUX or unplugging the HDMI ARC.

Why aren't I getting sound from my headphones?

How do I connect my Oasis Plus 2 to my Samsung / LG smart TV?

.....

For answers to questions like these and for a full FAQ list, you can visit avantree.com/support/oasis-plus-2, or you can contact us directly for additional assistance.

Contact Us



Support Tickets avantree.com/submit-a-ticket



Support Email support@avantree.com



Support Numbers

US	+1 800 232 2078	9am-6pm PST	Mon-Fri
CA	+1 800 232 2078	9am-6pm PST	Mon-Fri
UK	+44 208 068 2023	9am-6pm GMT	Mon-Sat
DE	+49 322 2109 7297	11am-9pm CET	Mon-Sat
FR	+33 17 634 0312	11am-9pm CET	Mon-Sat
IT	+39 069 4803 330	9am-6pm CET	Mon-Sat
ES	+34 93 1786 261	9am-6pm CET	Mon-Sat
AU	+61 2 8310 9897	11am-7pm AEST	Mon-Fri



FAQ avantree.com/support/oasis-plus-2



Video Guide avantree.com/oasis-plus-2/video



Product Registration See QR code on the product.

Manufacturer:
Avantronics Limited
Luohu District, Shenzhen 518000 China
+ 86 755 8228 5022 support@avantree.com

US Importer:
Avantree Corporation
San Jose, California 95119 USA
+1 800 232 2078 support@avantree.com

UK Importer:
Avantree Limited
Watford, WD180 0HQ UK
+44 20 8068 2023 support@avantree.com



Servicer in Europe:
Gizmex GmbH,
Sternstr. 67, 40479 Dusseldorf, Germany
+49 322 2109 7297 support@avantree.com



Item No.: BTTC-500P
Dispose of the packaging and this product in accordance with the latest provisions.
Z-PKQG-TC500P2-V0