


ConBee II


Installation

The deCONZ application is a tool to configure, control and monitor Zigbee networks with the ConBee II.

The following sections describe the installation steps of deCONZ for various platforms.

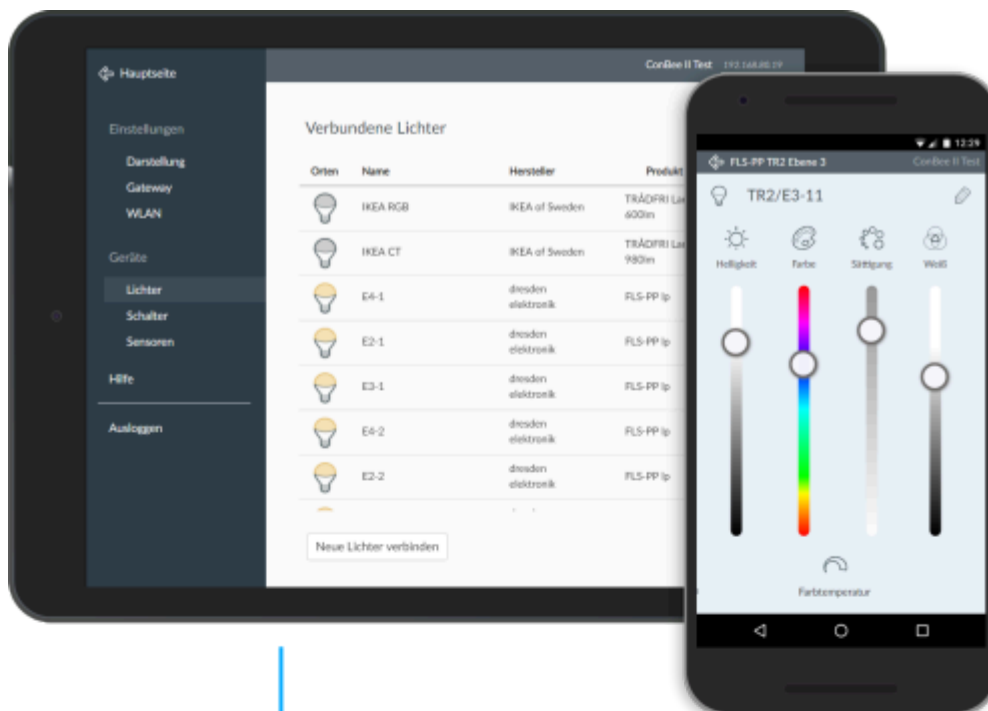

deCONZ

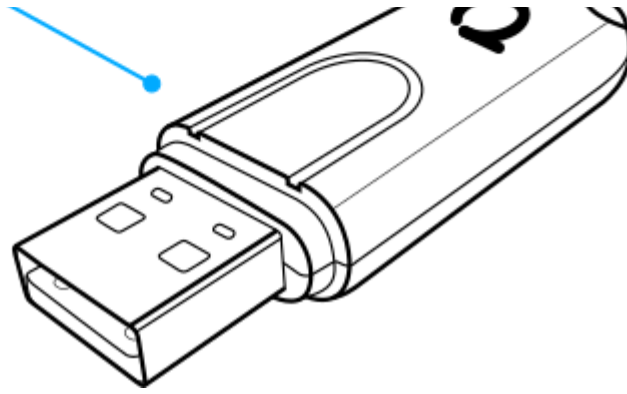

Supported platforms

Raspberry Pi OS

Ubuntu

Docker

macOS


Windows 11

Windows 10

Windows 7

Connection

To ensure a strong radio signal, the ConBee II should preferably be connected to a USB 2.0 socket with an USB extension cable.

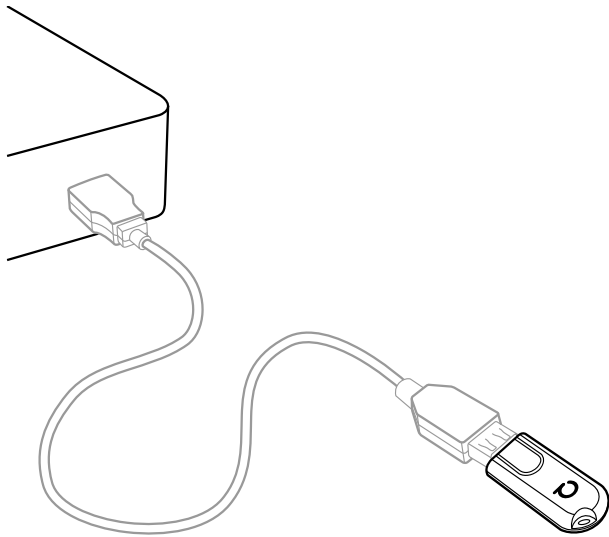

- Prevents interference with housing and peripherals
- Provides maximum signal range and reliability

Note

Connection problems may occur if the ConBee II is attached directly to the USB port or is located near USB 3.0 devices such as external hard drives or memory sticks.

Raspberry Pi OS

Supported Raspberry Pi models and distributions

- Raspberry Pi (all models, except Pico)
- Raspberry Pi OS

Note

The following steps describe the manual installation of deCONZ. Alternatively a preinstalled [SD-card image](#) can be used.

Installation

1. Set user USB access rights

```
sudo gpasswd -a $USER dialout
```

Note: Changes to access rights only become active after logging out and in or after a restart.

2. Import Phoscon public key

```
wget -O - http://phoscon.de/apt/deconz.pub.key | \
sudo apt-key add -
```

Note: The “apt-key deprecation” warning is uncritical and can be ignored.

3. Configure the APT repository for deCONZ

Stable

```
sudo sh -c "echo 'deb http://phoscon.de/apt/deconz \
$(lsb_release -cs) main' > \
/etc/apt/sources.list.d/deconz.list"
```

Beta (alternative)

```
sudo sh -c "echo 'deb http://phoscon.de/apt/deconz \
$(lsb_release -cs)-beta main' > \
/etc/apt/sources.list.d/deconz.list"
```

4. Update APT package list


```
sudo apt update
```

5. Install deCONZ

```
sudo apt install deconz
```

After the installation deCONZ can be started via the application menu.

Menu > Programming > deCONZ

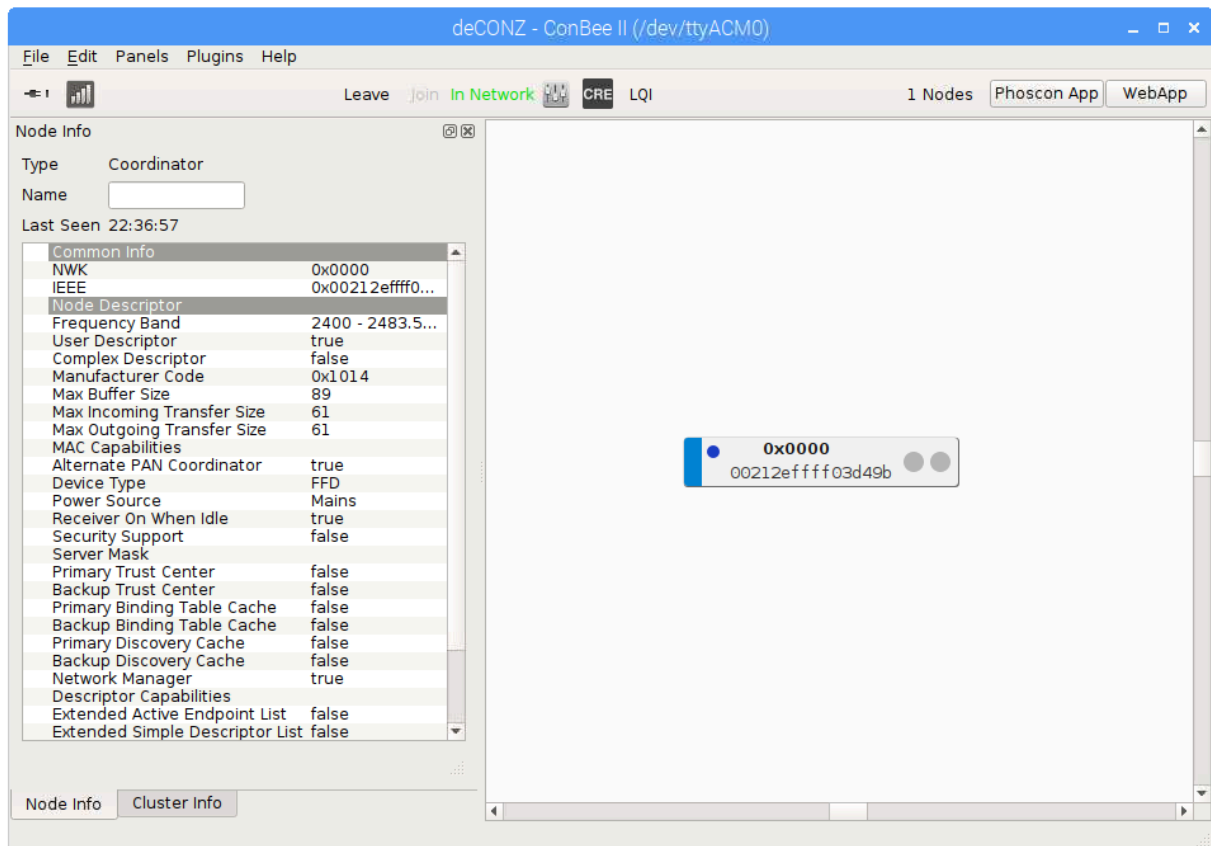

Now the first Zigbee devices can be paired via the Phoscon App. Further information can be found in the [Phoscon App documentation](#).

Troubleshooting

If problems occur during the installation, the [Support section](#) answers frequently asked questions (FAQ) and provides further assistance.

Ubuntu

Supported Ubuntu versions

- ~~Ubuntu 16.04 LTS 64-Bit PC (AMD64)~~
- Ubuntu 18.04 LTS 64-Bit PC (AMD64)
- Ubuntu 20.04 LTS 64-Bit PC (AMD64)

Installation

1. Set user USB access rights

```
sudo gpasswd -a $USER dialout
```

Note: Changes to access rights only become active after logging out and in or after a restart.

2. Import Phoscon public key

```
wget -O - http://phoscon.de/apt/deconz.pub.key | \  
sudo apt-key add -
```

3. Configure the APT repository for deCONZ

Stable

```
sudo sh -c "echo 'deb [arch=amd64] http://phoscon.de/apt/deconz \  
$(lsb_release -cs) main' > \  
/etc/apt/sources.list.d/deconz.list"
```

Beta (alternative)

```
sudo sh -c "echo 'deb [arch=amd64] http://phoscon.de/apt/deconz \  
$(lsb_release -cs)-beta main' > \  
/etc/apt/sources.list.d/deconz.list"
```


4. Update APT package list

```
sudo apt update
```

5. Install deCONZ

```
sudo apt install deconz
```

After the installation deCONZ can be started via the application menu.

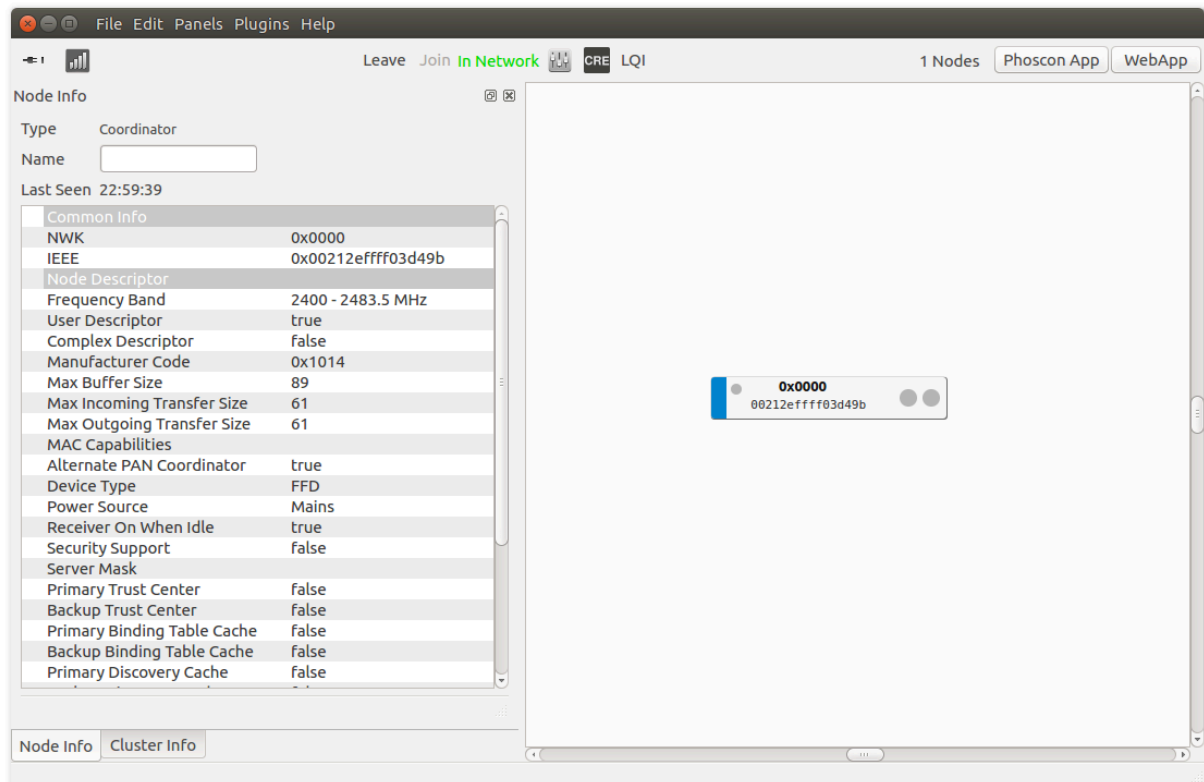

Now the first Zigbee devices can be paired via the Phoscon App. Further information can be found in the [Phoscon App documentation](#).


Auto start of the deCONZ GUI (optional)

1. Open the Startup Application Preferences via the application menu

```
gnome-session-properties
```

2. Add a new entry with the following commandline:

```
deCONZ --http-port=80 --auto-connect=1
```

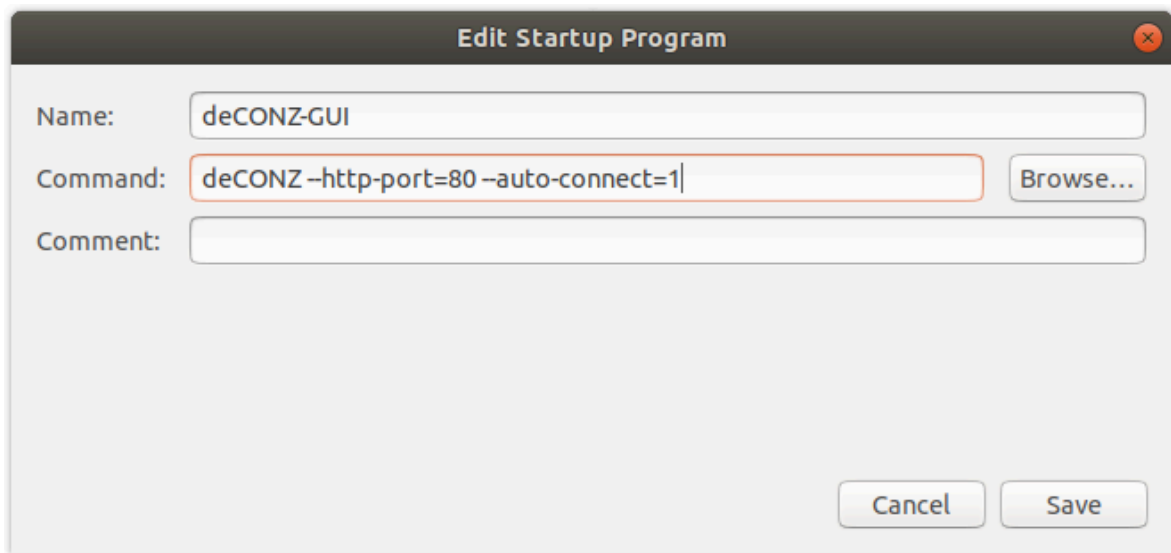Edit Startup Program

Name:

Command:

Comment:

Troubleshooting

If problems occur during the installation, the [Support section](#) answers frequently asked questions (FAQ) and provides further assistance.

Linux Headless

The [SD card images](#) as well as the standard installation method start automatically with graphical user interface.

Switch off graphical user interface (headless)

To switch off the graphical user interface (GUI), the following commands must be entered in the console:

1. Stop the GUI service immediately.

```
sudo systemctl disable --now deconz-gui
```

2. Start the headless service now and every time the system starts.

```
sudo systemctl enable --now deconz
```

Switch on graphical user interface (GUI)

To switch on the graphical user interface (GUI), the following commands must be entered in the console:

1. Stop the headless service immediately.

```
sudo systemctl disable --now deconz
```

2. Start the GUI service now and every time the system starts.

```
sudo systemctl enable --now deconz-gui
```

Docker

Supported host systems

- Linux x86_64/amd64
- Linux armv7 (e.g. Raspberry Pi)
- Linux arm64

To run deCONZ in a Docker container, we recommend the Docker image **deconz-community/deconz-docker**, which is maintained by the community.

The installation steps are described on <https://github.com/deconz-community/deconz-docker>.

macOS installation

1. Download deCONZ.

<https://deconz.dresden-elektronik.de/macOS>

2. Unzip and start deCONZ.

Unzip the file “deCONZ_macOS.zip” in “Downloads” and start the application “deCONZ.app”.

Windows 11 installation

1. Download deCONZ software

<https://deconz.dresden-elektronik.de/win>

2. Install USB driver

The drivers are installed automatically after connecting the ConBee II. If necessary, the drivers are downloaded from the Internet.

Windows 10 installation

1. Download deCONZ software

<https://deconz.dresden-elektronik.de/win>

2. Install USB driver

The drivers are installed automatically after connecting the ConBee II. If necessary, the drivers are downloaded from the Internet.

Windows 7 installation

1. Download deCONZ software


<https://deconz.dresden-elektronik.de/win>

2. Download and extract the driver ZIP file


[ConBee_II_USB_Driver_V1_00.zip](#)

3. Manual driver installation

After plugging in the ConBee II, Windows automatically starts the search for a suitable driver.

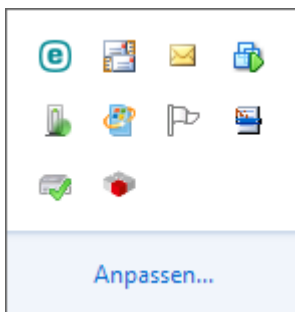


4. Select "Skip Windows Update driver software download".

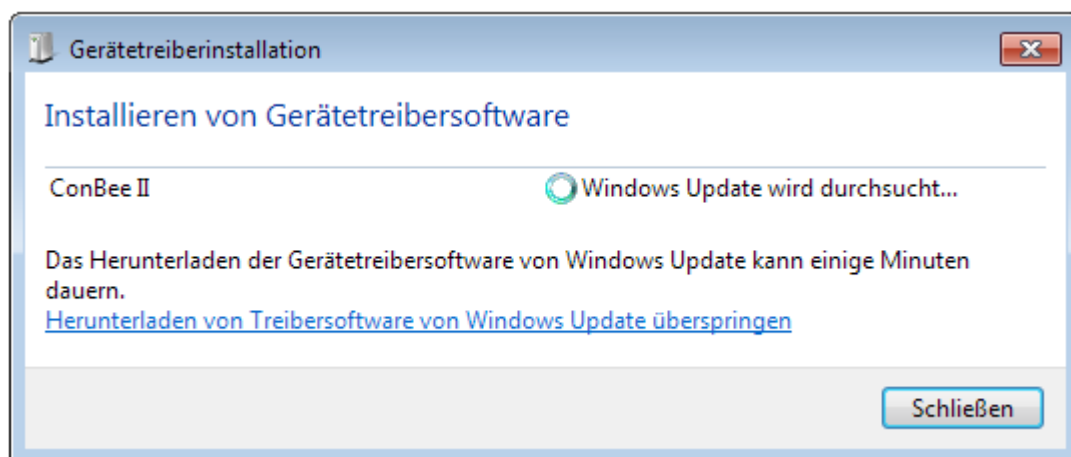


5. Open Device Manager


Enter the key combination <Win> + <Pause> and select “Device Manager” in the dialog that appears.

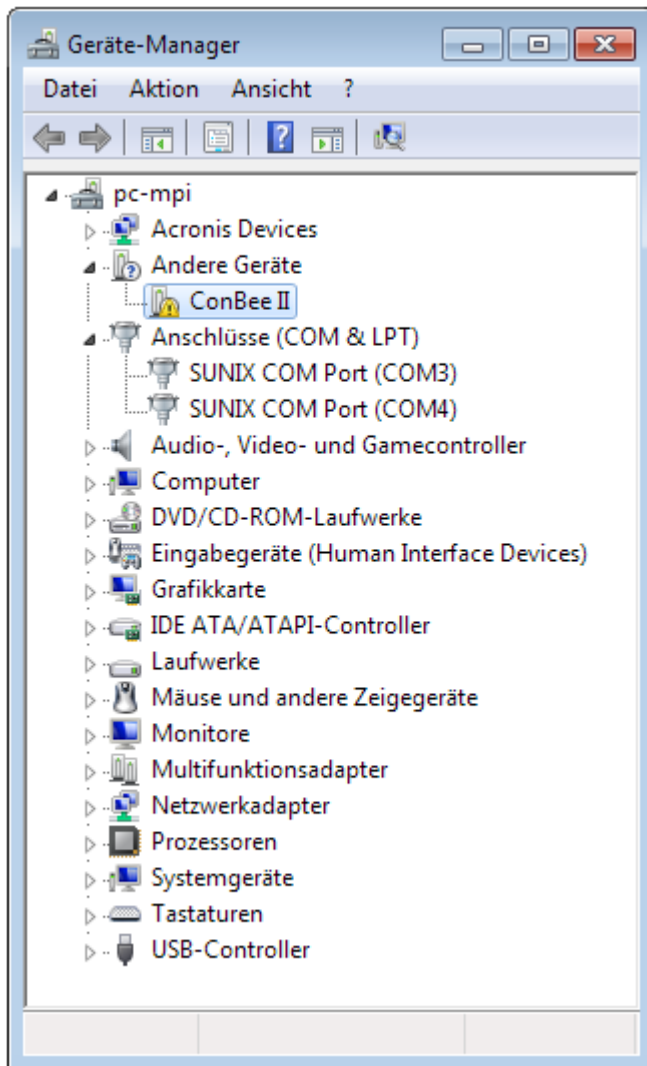

6. Right click on “ConBee II” and select “Update driver” in the context menu.

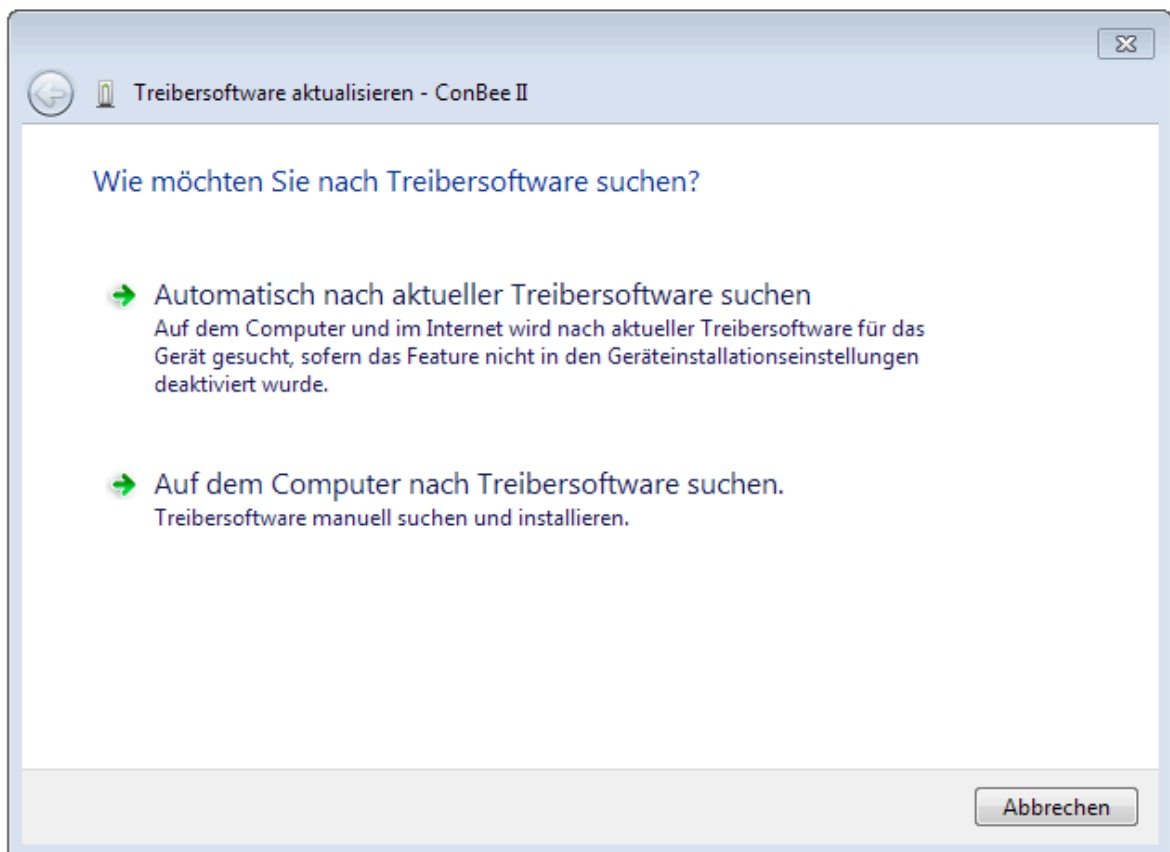

7. Select the option "Search for driver software on the computer".

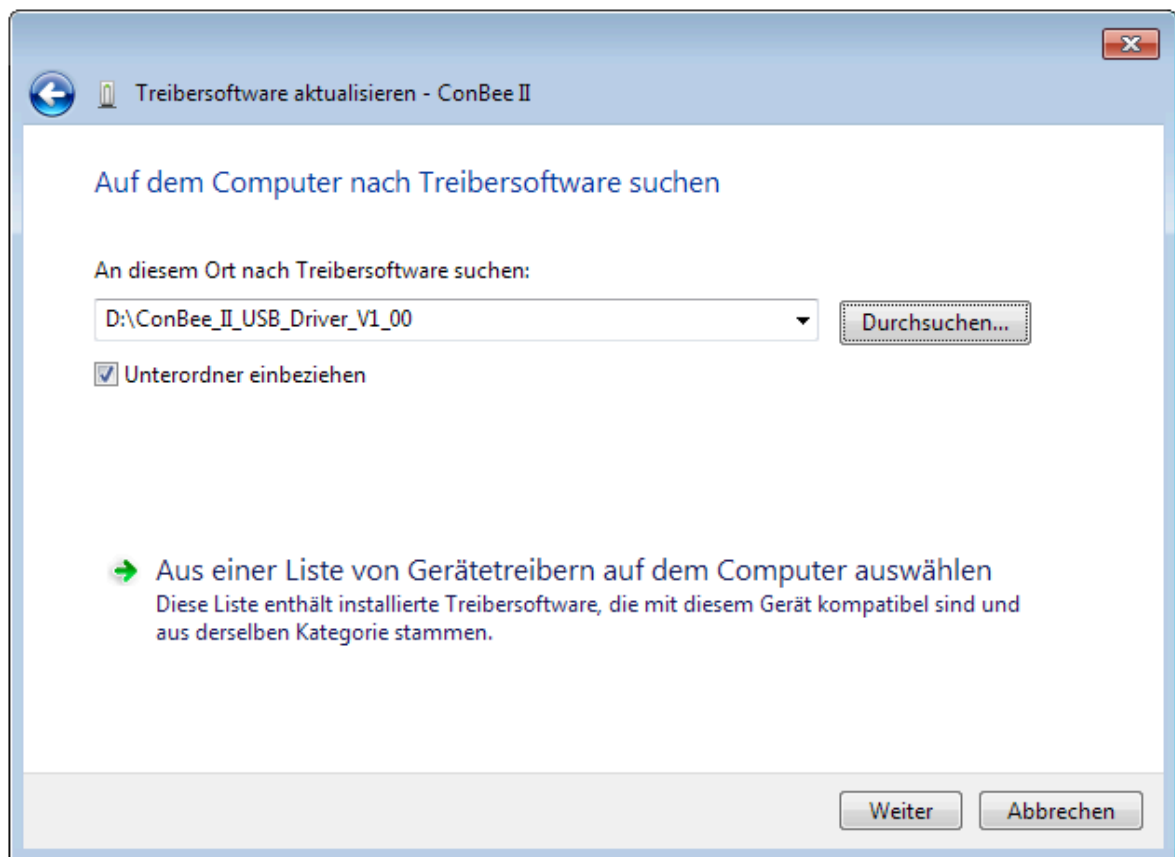

8. Select the directory with the extracted drivers and follow the instructions.

