

KA06


ILLUSTRATED ASSEMBLY MANUAL HKA06IP'1

LCD shield for Arduino®



velleman®
projects

@velleman_RnD

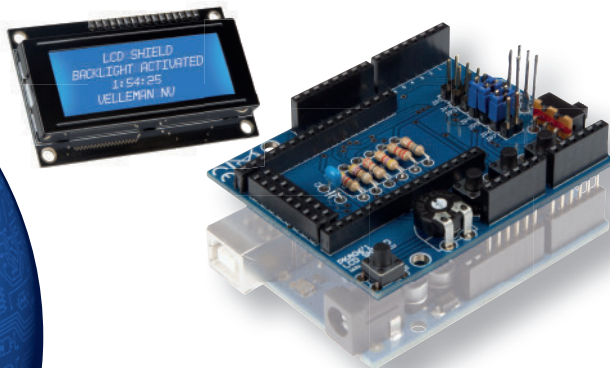

Add an LCD to your projects and visualize measurements, parameters, data, messages, etc...

Features

- for Hitachi HD44780 or compatible LCD's
- requires 1 Arduino UNO™ (not included)
- stackable design: the shield can be stacked with other shields

Specifications

- supplied with 20 character / 4 lines display with white backlight
- contrast adjust trimmer
- backlight on/off switch
- reset button
- 3 user configurable pushbuttons (3 digital inputs / 1 analog input)
- dimensions: 68 x 53mm / 2.67 x 2.08"



Search product

Search Product

Navigation

- Home page
- Products
- Sales outlets
- Support
- Publications
- Jobs
- About us

News

NEW HI3193 LED CYBE

CubeAnimator software
available for download
(here!)

Posted on 04-06-12

[Read more...](#)

Velleman Projects Newsletter

Are you an electronics enthusiast or simply interested in our kits, mini-kits, modules and instruments?

Subscribe to our Newsletter and receive every month the latest news, new products & updates on Velleman Projects.

You will receive an e-mail. Click on the link in that e-mail to confirm your subscription.

Email:



Do you want to unsubscribe? Click on the 'unsubscribe' link in the footer of the last received newsletter from Velleman Projects.



velleman.eu

hgwvvel.eu

perl.eu

vellemanprojects.com

kit - modules - instruments

velbr.eu

forum.velleman.eu

Advertisements

SAC1

SAC2

AT

KASISSI / VELLEMAN
Android Application

**Subscribe
Newsletter**



Subscribing our newsletter?, visit www.vellemanprojects.eu

Login Register

View unanswered posts | View active topics

Board index

Help Search

It is currently Fri May 25, 2012 4:00 pm

All times are UTC

	Forum	Topics	Posts	Last post
General				
1	The velleman Instruments de France KASISSI / KILL REVIEWERS Moderation: Velleman Support	2	2	Fri Dec 06, 2008 12:44 pm Velleman #2
2	Forum Administrators Velleman Software Forum Moderation Moderation: Velleman Support	1	1	Fri May 18, 2012 1:22 pm Velleman #2
Velleman				
3	Velleman Home Automation Special section for our new Velleman Home Automation System (KASISSI) Moderation: Velleman Support	424	3372	Fri May 11, 2012 4:11 pm Velleman #2
Who's looking tonight - Projects & security				
4	General For other topics, general tips and tricks, new ideas Moderation: Velleman Support	125	419	Fri May 04, 2012 1:17 pm Velleman #2
5	Audio I/O Projects All audio related projects, amplifiers, voice amplifiers Moderation: Velleman Support	387	2683	Fri May 11, 2012 4:02 pm Velleman #2
6	IPC related Projects For projects that are connected to the PC via interface cards Moderation: Velleman Support	2438	5946	The Sep 19, 2012 6:04 pm Velleman #2
7	Microcontroller Programmer - Experimental Projects Here you can discuss PIC programming, assembly, etc. Moderation: Velleman Support	491	1746	Fri May 11, 2012 4:07 pm Velleman #2
8	Sensors and Clocks All about our time related projects from regular clocks to programmable timers Moderation: Velleman Support	181	826	Fri May 07, 2012 4:42 pm Velleman #2
9	Voice Projects Presented related projects from light projects remote control Moderation: Velleman Support	636	2283	Fri May 04, 2012 4:40 pm Velleman #2

**View
Forum**



Participate our Velleman Projects Forum

assembly hints

1. Assembly (Skipping this can lead to troubles !)

Ok, so we have your attention. These hints will help you to make this project successful. Read them carefully.

1.1 Make sure you have the right tools:

- A good quality soldering iron (25-40W) with a small tip.
- Wipe it often on a wet sponge or cloth, to keep it clean; then apply solder to the tip, to give it a wet look. This is called 'thinning' and will protect the tip, and enables you to make good connections. When solder rolls off the tip, it needs cleaning.
- Thin raisin-core solder. Do not use any flux or grease.
- A diagonal cutter to trim excess wires. To avoid injury when cutting excess leads, hold the lead so they cannot fly towards the eyes.
- Needle nose pliers, for bending leads, or to hold components in place.
- Small blade and Phillips screwdrivers. A basic range is fine.

For some projects, a basic multi-meter is required, or might be handy.




1.2 Assembly Hints :

- Make sure the skill level matches your experience, to avoid disappointments.
- Follow the instructions carefully. Read and understand the entire step before you perform each operation.
- Perform the assembly in the correct order as stated in this manual.
- Position all parts on the PCB (Printed Circuit Board) as shown on the drawings.
- Values on the circuit diagram are subject to changes, the values in this assembly guide are correct*.
- Use the check-boxes to mark your progress.
- Please read the included information on safety and customer service.


* Typographical inaccuracies excluded. Always look for possible last minute manual updates, indicated as 'NOTE' on a separate leaflet.

1.3 Soldering Hints :

1. Mount the component against the PCB surface and carefully solder the leads. →

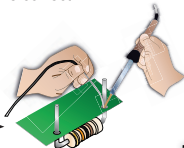


2. Make sure the solder joints are cone-shaped and shiny. →




3. Trim excess leads as close as possible to the solder joint. →



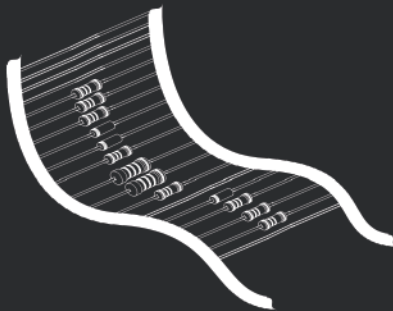


REMOVE THEM FROM THE TAPE ONE AT A TIME !

Included in
this kit

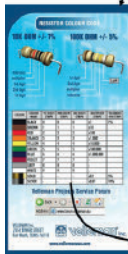

2. RESISTOR

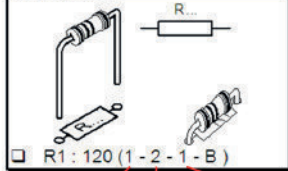

COLOUR	COLOUR NAME	1ST DIGIT/ STRIPE	2ND DIGIT/ STRIPE	3RD DIGIT/ STRIPE	MULTIPLIER STRIPE	TOL- 4TH
Black	BLACK	0	0	0	x1	1%
Brown	BROWN	1	1	1	x10	
Red	RED	2	2	2	x100	
Orange	ORANGE	3	3	3	x1.000	
Yellow	YELLOW	4	4	4	x10.000	
Green	GREEN	5	5	5	x100.000	
Blue	BLUE	6	6	6	x1.000.000	

DO NOT BLINDLY FOLLOW THE ORDER OF THE COMPONENTS ON THE TAPE. ALWAYS CHECK THEIR VALUE ON THE PARTS LIST!


I CONSTRUCTION

1 Resistors




- ☐ R1: 4K7 (4-7-2-B)
- ☐ R2: 470 (4-7-1-B)
- ☐ R3: 22 (2-2-0-B)
- ☐ R4: 4K7 (4-7-2-B)
- ☐ R5: 2K2 (2-2-2-B)
- ☐ R6: 6K8 (6-8-2-B)

2 Ceramic capacitor on tape




- ☐ C1: 100nF (104)

3 Female headers

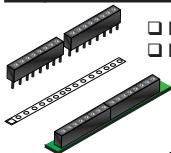


- ☐ LCD1: 2 x 8p
- ☐ LCD2: 2 x 8p

- ☐ LCD3: 2 x 8p




4 Trimmer

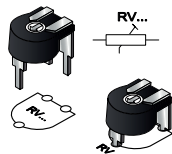


- ☐ VR1: 10K (Contrast)

5 Switch

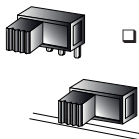

- ☐ SW5: Backlight

6 Push buttons

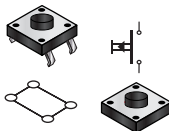


Digital inputs

- ☐ SW1
- ☐ SW2
- ☐ SW3

Reset


- ☐ SW4

7 Male headers

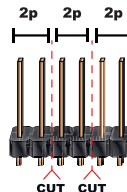

- ☐ JP1
- ☐ JP2
- ☐ JP3
- ☐ JP4
- ☐ JP5
- ☐ JP6
- ☐ JP7



Selection analog / digital interface




8 Female headers




Do not cut the
connector pins!

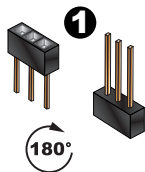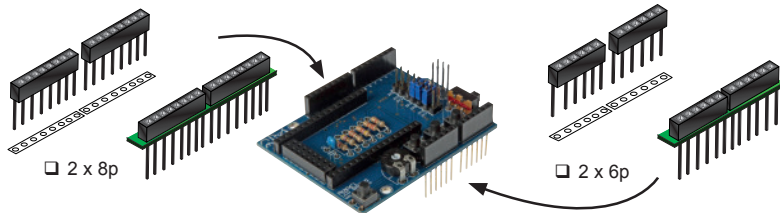





□ SK6: 2 x 3p

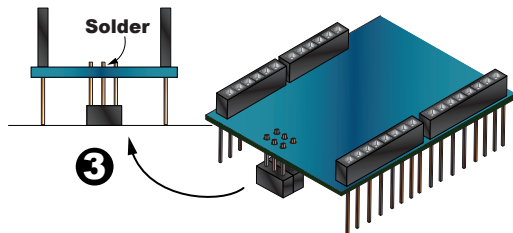

9 LCD

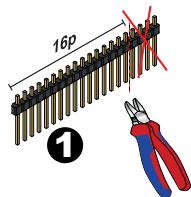


Follow these steps if the supplied LCD is not provided with a male header connector.

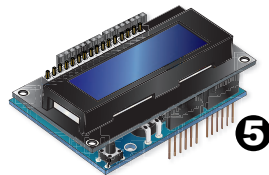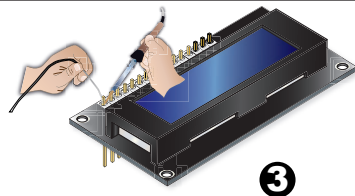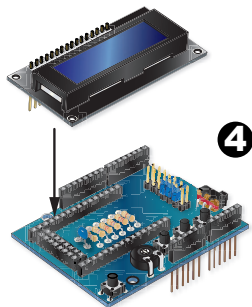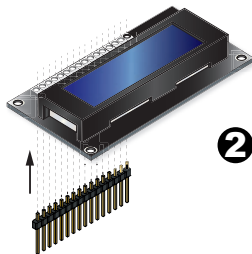

II CONNECTION DIAGRAM

1 LCD




HITACHI HD44780 or compatible LCD's

LCD

LCD


LCD

2 Selection analog / digital interface



3 (de)activate the backlight


Backlight

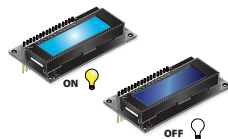

6 Reset



5 Contrast




4 Input data

DIGITAL

ANALOG

101011101011001...
101011101011001...
101011101011001...

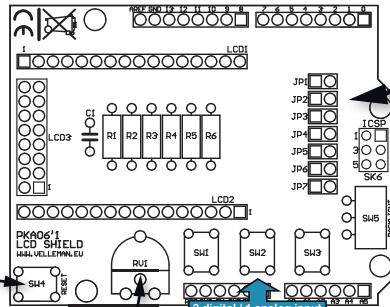

3 digital / 1 analog input

III GENERAL INFORMATION

All displays based on the HD44780 have the same interface, regardless of the connector type or the pin arrangement. This interface consists of eight data lines, three control lines, a power supply, a GND and a line for contrast setting. The arrangement of these lines varies from model to model, so you will have to refer to the data sheet. Some models feature a built-in backlight connected via two lines.

Pin LCD	function	Pin Arduino UNO
VDD	+5 V Power supply	+5 V
Vss	GND	GND
Vo	contrast voltage	Trimmer
RS	Selection: write data or commands	8
R / W	Selection: writing or reading	GND
Enable	'Enable'-line	9
DB0	Data line 0	Not used
DB1	Data line 1	Not used
DB2	Data line 2	Not used
DB3	Data line 3	Not used
DB4	Data line 4	4
DB5	Data Line 5	5
DB6	Data Line 6	6
DB7	Data Line 7	7
BL +	LED Backlight +	+5 V
BL -	LED Backlight -	GND

UNO Connections Assigned to the Buttons

Push button	Arduino connection (digital mode)	Arduino PIN (analogue mode)
S1	10	AN3
S2	11	AN3
S3	12	AN3

The shield has three different connector types and is thus compatible with a large array of displays.

The connectors are arranged so as to leave room for the three push buttons and the reset button.

To work properly, each LCD requires a small voltage to adjust the contrast. This voltage is obtained from the +5 V through a trimmer.

Three push buttons are provided for your own applications. For maximum flexibility, we provide two ways to interface with these buttons. The first is the classic way, which makes use of three digital Arduino lines, specifically pins 10, 11 and 12. In this case, the available digital lines are 0, 1, 2, 3 and 13. Activate this mode by shortcutting jumpers JP4, JP5 and JP6.

To use the push buttons with the digital inputs, activate the internal pull-up resistors via your firmware. Do this for each push button with following code: `pinMode (buttonPin, INPUT_PULLUP)`. The push buttons will work in negative logic, i.e. the value at rest is 1, the value at pressed push button is 0 (zero).

A second way involves the use of one analogue line, pin A3. In this case, the digital lines remain free for other purposes. Activate this mode by shortcutting jumpers JP1, JP2, JP3 and JP7.

How does it work? Study the diagram and in particular the network formed by R4, R5 and R6. These resistors, in series, form a voltage divider.

When no button is pressed, the AN3 line is at +5 V as there is no current flowing. If we press S1, AN3 will be shorted to GND and the voltage is zeroed.

If we press S2, the node between R5 and R6 is grounded, so that line AN3 reaches 1.6 V. If we press S3, the node at R6 is grounded so AN3 goes to 3.3 V.

This means that, for each button, the Arduino ADC converter will get a different voltage. The `analogRead(A3)` function will provide a different value according to which push button is pressed (see table).


Push button	AN3 voltage	ADC value
None	5v	1024
P1	0v	0
P2	1.6 v	328
P3	3.3v	676






Analogue mode of reading of the buttons

IV PROGRAMMING


Programming via the Arduino IDE is straightforward, as it does not require no additional library. The system library `LiquidCrystal` already includes all necessary functions.

A programming code is available on www.velleman.eu.


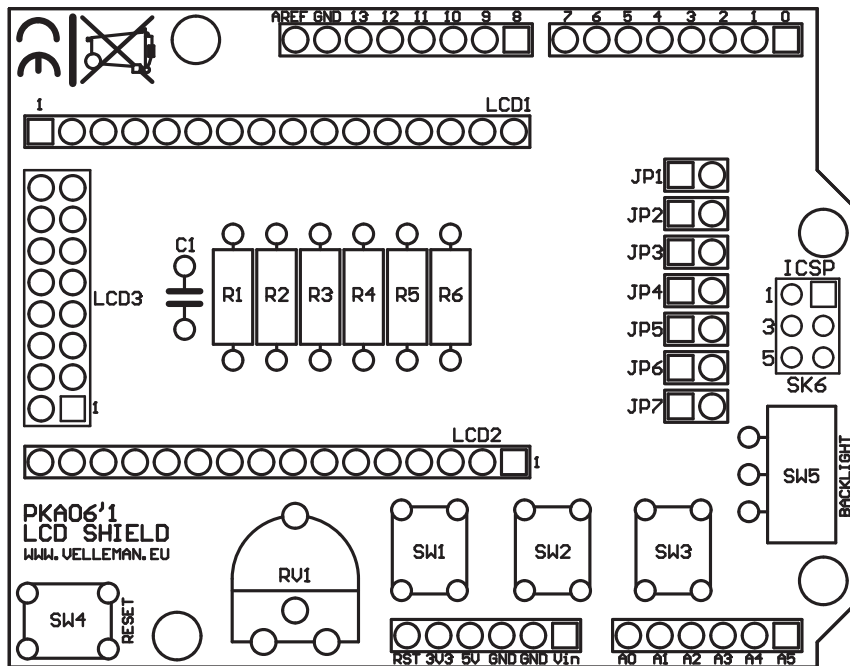


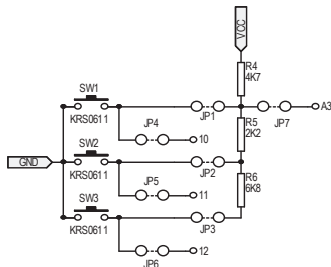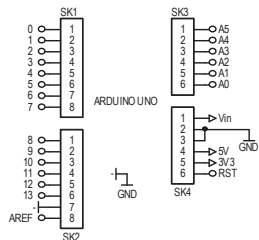


Leds and how to use them



Leds feature a specific voltage drop, depending on type and colour. Check the datasheet for exact voltage drop and rated current !

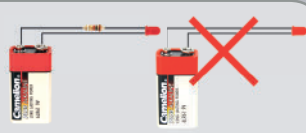

Never connect leds in parallel

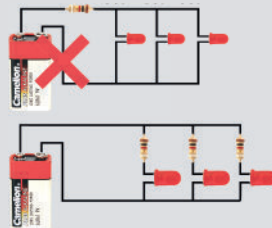

How to Calculate the series resistor:

Example: operate a red led (1.7V) on a 9Vdc source.

Required led current for full brightness: 5mA (this can be found in the datasheet of the led)

$$\frac{\text{Supply voltage (V) - led voltage (V)}}{\text{required current (A)}} = \text{series resistance (ohms)}$$

$$\rightarrow \frac{9V - 1.7V}{0.005A} = 1460 \text{ ohm}$$

closest value :
use a 1k5 resistor

Required resistor power handling=
voltage over resistor x current passed trough resistor


$$\rightarrow (9V - 1.7V) \times 0.005A = 0.036W$$

a standard 1/4W resistor
will do the job

LEDs in series:

Example: 3 x red led (1.7V) on 9V battery

Required led current for full brightness: 5mA
(this can be found in the datasheet of the led)

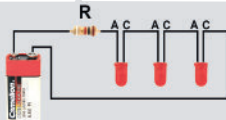


$$\frac{\text{Supply voltage (V) - (number of leds x led voltage (V))}}{\text{required current (A)}} = \text{series resistance (ohms)}$$

$$\rightarrow \frac{9V - (3 \times 1.7V)}{0.005A} = 780 \text{ ohm}$$


use an
820 ohm resistor

open collector outputs

An open collector output can be compared to a switch which switches to ground when operated



Example: How to switch an LED by means of an open collector output





Velleman N.V.
Legen Heirweg 33
9890 Gavere
(België)



The new Velleman Projects catalogue is
now available. Download your copy here:
www.vellemanprojects.eu



Modifications and typographical errors reserved - © Velleman nv. HKA06'IP
Velleman NV, Legen Heirweg 33 - 9890 Gavere.