



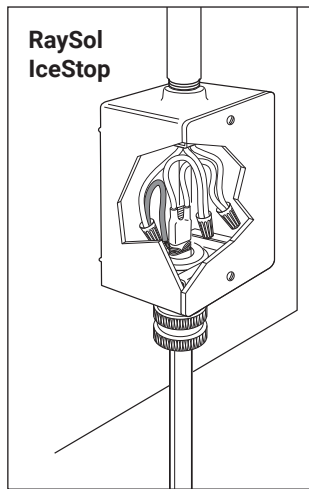

RAYCHEM

FTC-P

XL-Trace Edge, RaySol, and IceStop Power Connection Kit with End Seal Installation Instructions

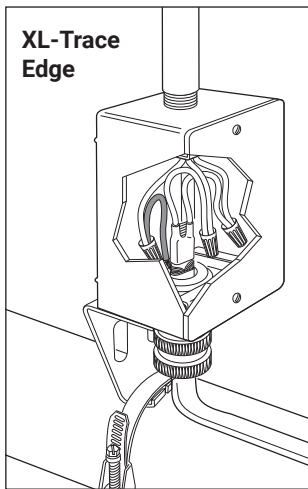

DESCRIPTION

The nVent RAYCHEM FTC-P Power Connection and End Seal Kit is for use with nVent RAYCHEM XL-Trace Edge, RaySol and IceStop heating cables. Materials for one power connection and one end seal are included in this kit. These installation instructions should be used in conjunction with the XL-Trace Edge, RaySol and IceStop System Installation and Operation Manuals. For technical support contact your nVent representative or call nVent at 800-545-6258.

TOOLS REQUIRED

- Screw driver
- Needle-nose pliers
- Utility knife
- Pen
- Diagonal cutters
- Heat gun or propane torch

ADDITIONAL MATERIALS REQUIRED (NOT PROVIDED IN THIS KIT)

- UL Listed or CSA Certified junction box suitable for the location, with a clearance hole or threaded hub for 1/2 inch NPT. For RaySol applications, the power connection and end seal may be terminated in the same box.

APPROVALS



With XL-Trace Edge



With IceStop and Raysol



With IceStop and RaySol



With IceStop heating cable only
For Class I, Div. 2, Groups A, B, C, D
Hazardous Locations: GM-1XT and GM-2XT only

⚠ WARNING:

This component is an electrical device that must be installed correctly to ensure proper operation and to prevent shock or fire. Read these important warnings and carefully follow all the installation instructions.

- To minimize the danger of fire from sustained electrical arcing if the heating cable is damaged or improperly installed, and to comply with the requirements of nVent, agency certifications, and national electrical codes, ground fault equipment protection must be used. Arcing may not be stopped by conventional circuit breakers.
- Bus wires will short if they contact each other. Keep bus wires separated.

- Keep components and heating cable ends dry before and during installation.
- The black heating cable core is conductive and can short. It must be properly insulated and kept dry.
- Component approvals and performance are based on the use of nVent- specified parts only. Do not use substitute parts or vinyl electrical tape.
- Leave these instructions with end user for reference and future use.

⚠ CAUTION:


HEALTH HAZARD: Overheating heat-shrinkable tubes will produce fumes that may cause irritation. Use adequate ventilation and avoid charring or burning. Consult MSDS RAY3122 for further information.

CHEMTREC 24-hour emergency telephone:
(800) 424-9300

Non-emergency health and safety information:
(800) 545-6258.


KIT CONTENTS

Item	Qty	Description
A	4	Warning labels
B	1	Pipe mounting bracket
C	1	Lock nut
D	1	Blue grommet
E	1	Sealing fitting
F	3	Wire nuts
G	1	Black heat-shrinkable tube (1/2 in x 11/2 in)
H	1	Green/yellow heat-shrinkable tube (1/4 in x 51/2 in)
I	2	Black heat-shrinkable tubes (1/8 in x 51/2 in)
J	1	#3 pipe strap
K	1	Gel-filled end seal (FTC-E)
L	1	RaySol circuit tag
M	1	Sealing gasket

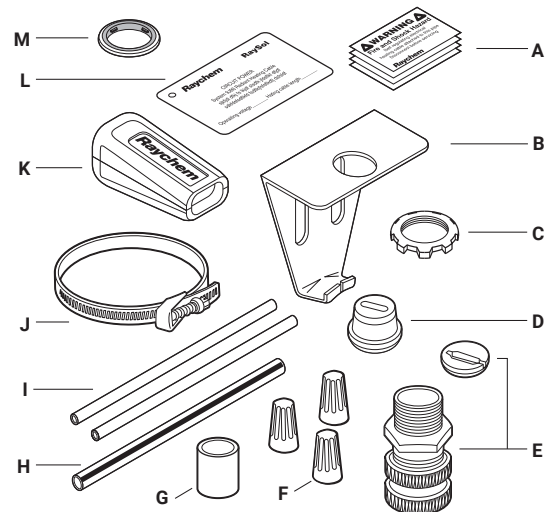


POWER CONNECTION INSTALLATION

XL-Trace Edge-CR and -CT, RaySol, and IceStop

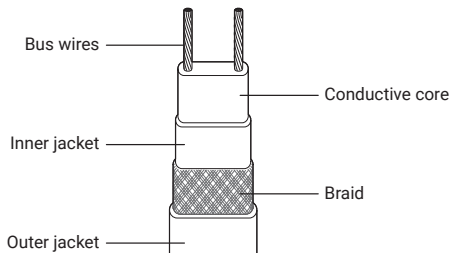


1


- Discard black grommet and use blue grommet.

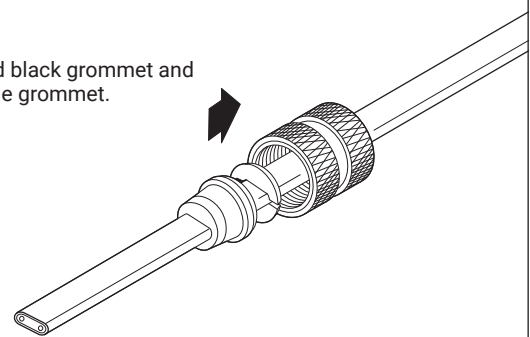


2

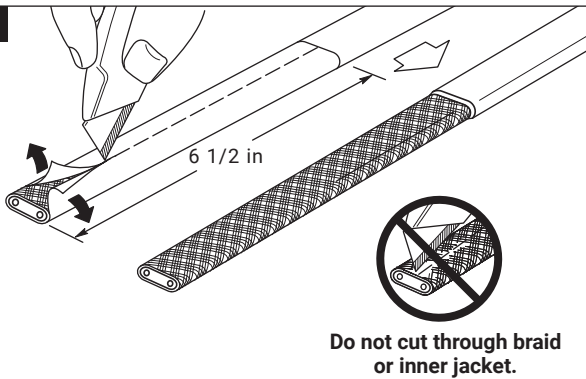


3








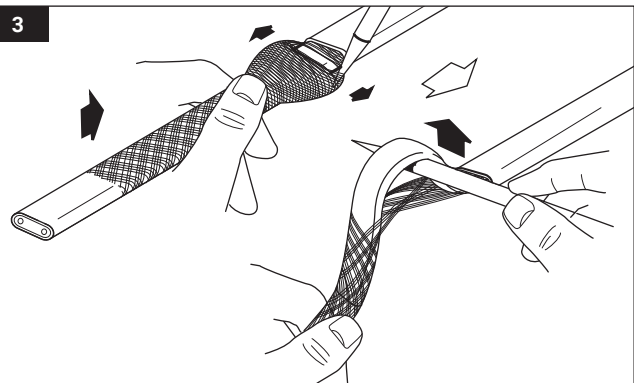


4

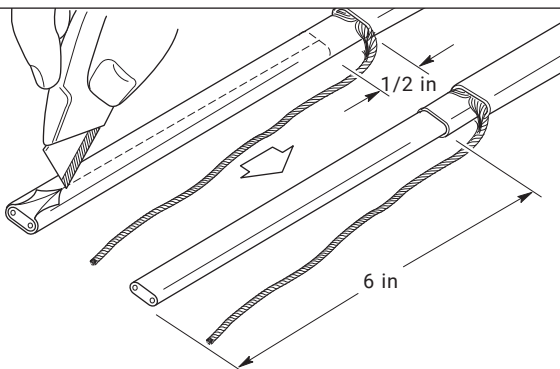


5

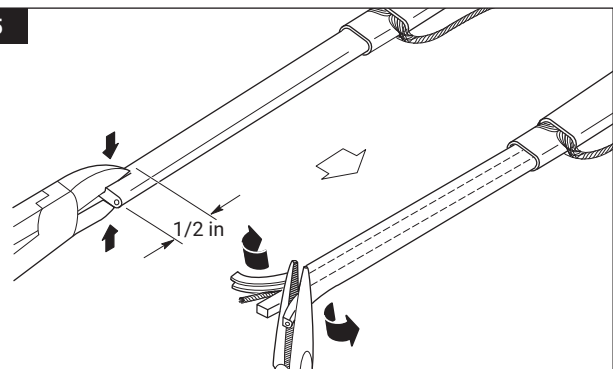

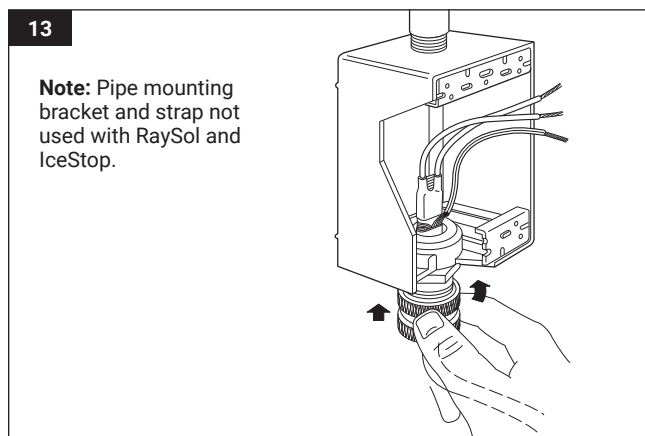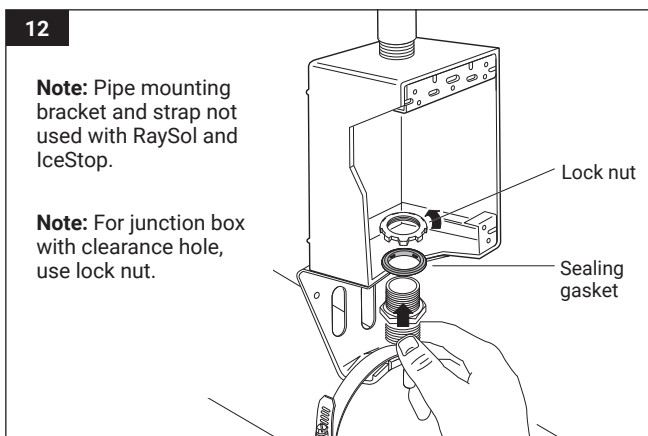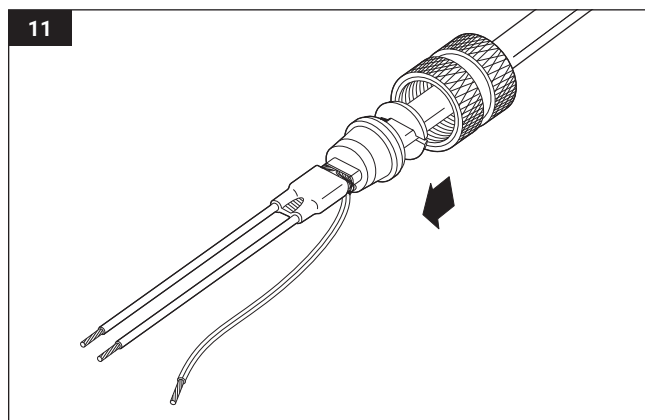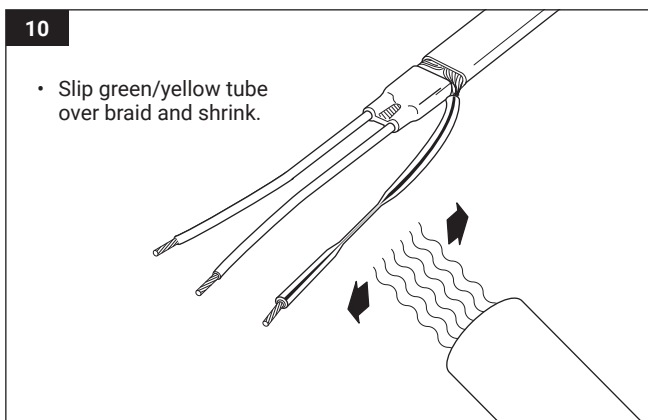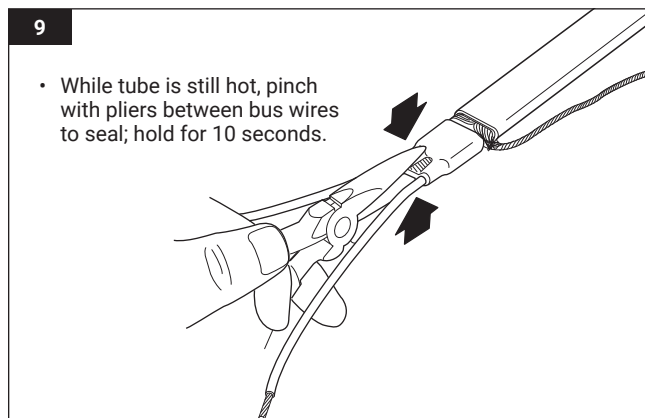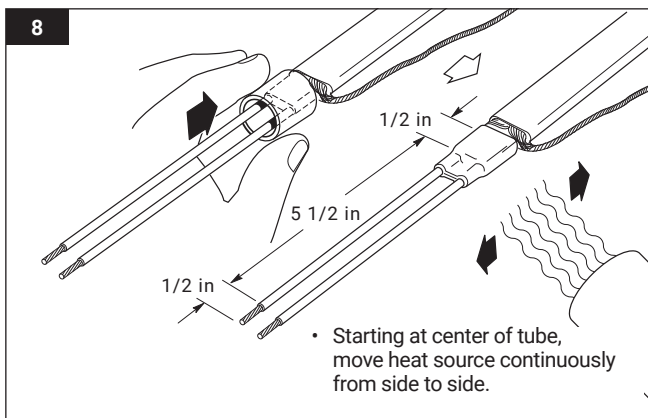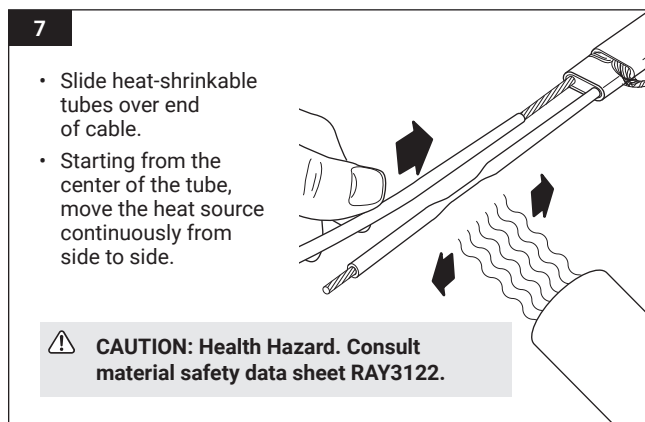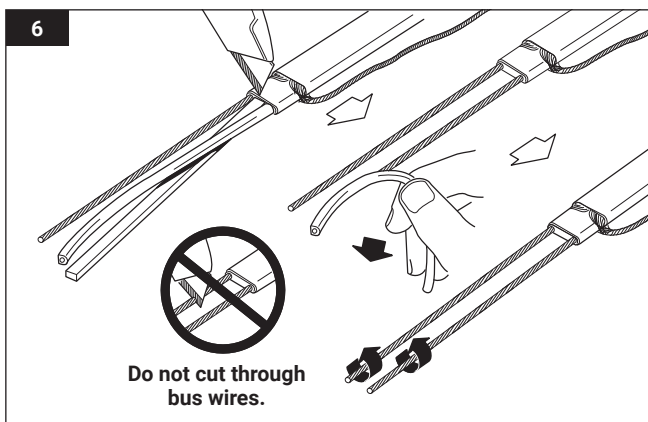


14

- Attach circuit tag to heating cable (RaySol only).

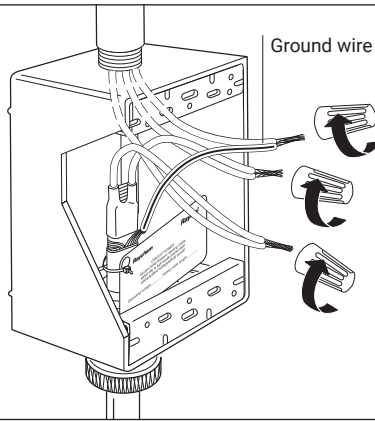

15

- Apply appropriate warning label to junction box cover:
IceStop = Yellow
RaySol = Orange
XL-Trace Edge = Orange

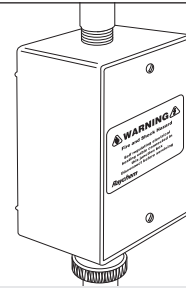


WARNING: For IceStop system, junction box must be installed on exterior of building. Heating cable must not be installed inside building, in conduit or under any form of insulation to minimize risk of fire.

END SEAL INSTALLATION FOR XL-TRACE EDGE-CR AND -CT, RAYSOL, AND ICESTOP HEATING CABLES


1

- Score down and around outer jacket 1 inch from the end.
- Remove the outer jacket.
- Do not cut or damage inner jacket. If damaged, remove damaged section and repeat step 1.

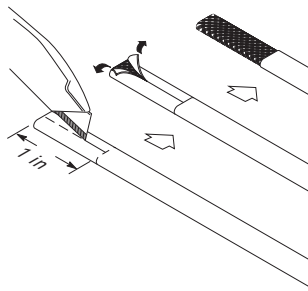

2


- Remove exposed braid.

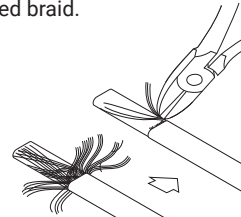

3

- Push end seal completely onto heating cable.

Note: The end seal is designed to be installed only once; it cannot be removed from the heating cable once installed. Do not use until ready for final installation.

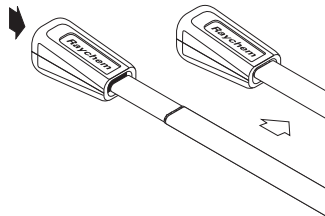

North America

Tel +1.800.545.6258
Fax +1.800.527.5703
thermal.info@nVent.com

Europe, Middle East, Africa

Tel +32.16.213.511
Fax +32.16.213.604
thermal.info@nVent.com

Asia Pacific

Tel +86.21.2412.1688
Fax +86.21.5426.3167
cn.thermal.info@nVent.com

Latin America

Tel +1.713.868.4800
Fax +1.713.868.2333
thermal.info@nVent.com



nVent.com/RAYCHEM