

xiaomi Smart Air Purifier Elite User Manual · 1

คู่มือการใช้งานเครื่องฟอกอากาศอัจฉริยะ Xiaomi Elite · 13



WARNINGS

- When the power cord is damaged, it must be replaced with a genuine power cord purchased from the manufacturer or after-sales service department.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Make sure the purifier is turned off and unplugged before performing the maintenance. Fix the grille with screw after cleaning fan blades and air duct.
- This appliance contains a UV-C emitter.
- Do NOT replace the UV-C emitter.
- Unintended use of the appliance or damage to the housing may result in the escape of dangerous UV-C radiation. UV-C radiation may, even in little doses, cause harm to the eyes and skin.
- Appliances that are obviously damaged must not be operated.

Precautions

- Turn off and unplug the purifier before moving it.
- When moving the purifier, do not touch the release buttons of the upper compartment. Otherwise, the filter compartment may fall off and a possible injury may occur.

-
- The purifier cannot turn on when the fan grille and the filter compartment cover are not installed properly.
 - Maintain a distance of at least 20 cm between the air inlets and walls or other objects.
 - The purifier must be placed on firm and flat floor.

-
- Prior to cleaning or other maintenance, the appliance must be disconnected from the supply mains.
 - Frequently remove dust, hair, and other particles from the outer mesh screen of the filter, so as to reduce the chance of bacteria growth.
 - Remove dust, hair, and particles from the purifier's air inlets to prevent a reduction of air intake.
 - Cover the air outlet to prevent dust, hair, and other particles from falling in when the purifier is left unused for a long time.

To avoid fire, electric shocks, or other damage, use the power cord and electrical outlet as instructed below:

- Do not excessively pull, twist or bend the power cord; otherwise, the cord's core may be exposed or broken.
- The power cord must be plugged into a suitable electrical outlet.
- Use the power cord that is provided with the purifier, do not use any third-party power cords.
- Always unplug the purifier before carrying out maintenance to or moving the purifier.

-
- Immediately stop using the purifier when it makes unusual sounds, gives off bad odors, overheats, or its fan rotates irregularly.
 - Do not stick your fingers or foreign objects into the protective parts, movable parts, air inlets, or air outlets.
 - Keep objects such as hairs or fabrics away from the purifier to avoid blocking the air inlets or air outlets.
 - Do not sit on, lean on or tilt the purifier.
 - When using in conjunction with gas-fueled appliances (such as gas stoves, gas heaters), please ventilate sufficiently to avoid carbon monoxide poisoning.
 - Do not pour liquids, nor throw powders or other small substances into the purifier's air outlet.
 - Make sure no inflammable objects get into the purifier.
 - Do not clean the device with flammable liquids that may cause harm from fire or explosion.
 - Replace the filter regularly according to the specified period; if ignored, the filter may be a breeding ground for germs.
 - Wrap the filter tightly before discarding.


Do not use the purifier in the following circumstances to avoid electric shocks, fire, or other damage:

- Near open flames, such as candles, incense burners, stoves, fireplaces, cigarettes, firecrackers, lighters, multipurpose torches, candle lighters, or fire pans.
- Near appliances that generate high temperatures, such as electric heaters, fan heaters, electric foot warmers, electric stoves, or electric irons.
- In unstable locations where the purifier can easily fall over.
- In environments that are extremely hot, humid, or damp, such as bathrooms.

Product Overview

Read this manual carefully before use, and retain it for future reference.

Note: Illustrations of the product, accessories, and user interface in this user manual are for reference purposes only. The actual product and functions may vary due to product enhancements.

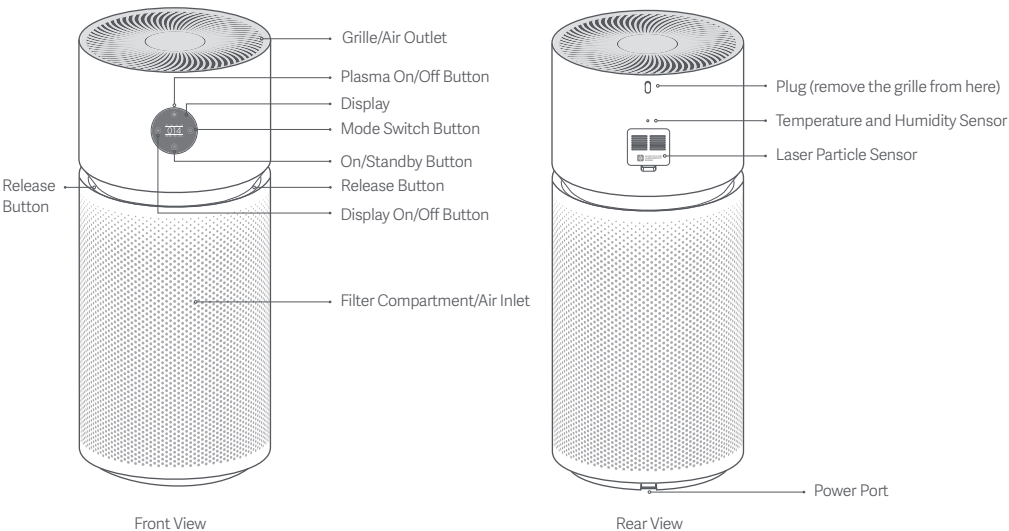

Display Instructions

Plasma On/Off Button

UV Indicator

Mode

PM2.5 Value

Mode Switch Button

Plasma Indicator

Wi-Fi Indicator

Display On/Off Button

Temperature

On/Standby Button

Humidity

Coarse Particles Indicator

ⓘ

ⓐ

ⓑ

Ⓒ

Ⓓ

Ⓔ

Ⓕ

Ⓖ

Ⓗ

Ⓙ

Ⓚ

014

26℃ 45%

ⓐ

ⓑ

Ⓒ

Ⓓ

Ⓔ

Ⓕ

Ⓖ

Ⓗ

Ⓙ

Ⓚ

Automatic: Automatically switch modes according to the indoor air quality.

Sleep: Ultra-low noise for a comfortable sleeping environment.

Speed 1: Low speed

Speed 2: Medium speed

Speed 3: High speed

Manual: Set and save the coverage area in the app to adjust the purifying efficiency.

Excellent

Good

Moderate

Poor

Note: Coarse particles have an aerodynamic diameter ranging from 2.5 to 10 μm (PM10-PM2.5). Examples of coarse particles include dust, pollen, spores, and fly ash.

Air Quality Indicator

The indicator displays green, yellow, orange or red based on the highest concentration of fine particles (PM2.5) and coarse particles (PM10-2.5) in the air.


		Coarse Particles			
		Excellent	Good	Moderate	Poor
PM2.5 Value	1-20 μg/m³	Green	Yellow	Orange	Red
	21-35 μg/m³				
	36-55 μg/m³				
	>55 μg/m³				

4

How to Install


Placing the purifier

For optimal performance, make sure the distances between purifier's air inlets and other objects such as walls meet the requirements as suggested below.

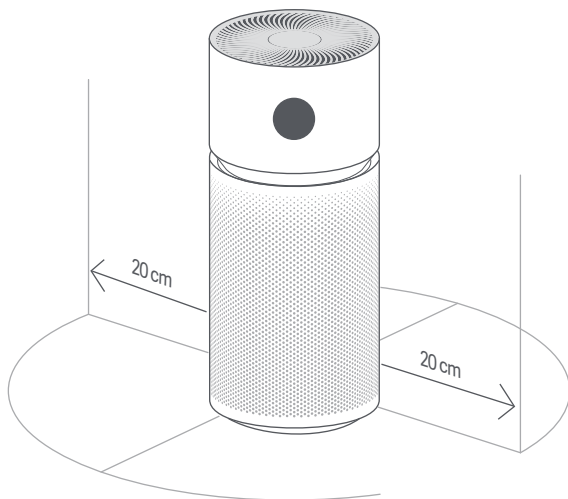

Connecting to an electrical outlet

Connect the power cord to the power port at the bottom of the purifier and then plug it into an electrical outlet.

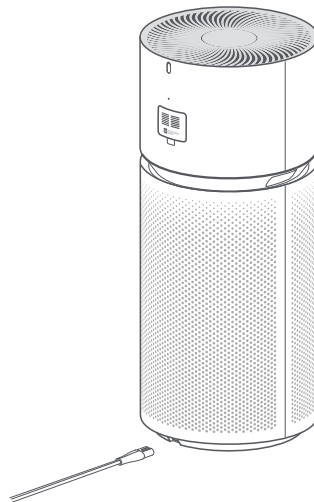

Note: It is recommended to keep doors and windows closed for a better purifying effect when using the purifier.

How to Use

On/Standby

Tap the on/standby button to turn on the purifier. When the purifier is on, tap the on/standby button to enter standby mode.



Switching mode

While the purifier is on, tap the mode switch button to cycle through modes.



Enabling & disabling plasma/UV sterilization

Tap the plasma on/off button to enable or disable plasma sterilization. Tap and hold the plasma on/off button for seven seconds to enable or disable UV sterilization.



Adjusting the display's brightness

Press the display on/off button to cycle through its brightness levels: on, dim, and off.



Resetting Wi-Fi

When connecting the purifier to the app for the first time or unable to connect to it, press and hold the display on/off button for 7 seconds. The purifier will make a notification sound once Wi-Fi is successfully reset.



Enabling/disabling the child lock function

Press and hold the mode switch button for 7 seconds to enable or disable the child lock function. The purifier will make the corresponding notification sound and show the corresponding icon on the display.



Child Lock Enabled




Child Lock Disabled

Enabling/Disabling Wi-Fi

Simultaneously press and hold the mode switch button on the display and the display on/off button for 7 seconds. The purifier will make a notification sound and the Wi-Fi will be disabled.


While Wi-Fi is off, simultaneously press and hold the mode switch button on the display and the display on/off button for 7 seconds. The purifier will make a notification sound and the Wi-Fi will be enabled.

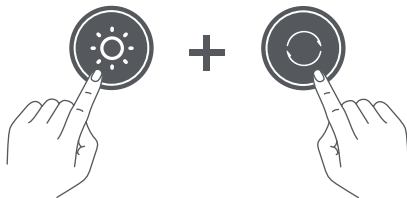

Filter life notification

The display will show the remaining service time of the filter when the purifier is turned on.

The display will show a warning icon if no genuine filter is detected.

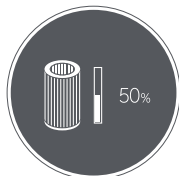

Filter service time
remaining notification



Not a genuine filter
warning

Connecting with the Mi Home/Xiaomi Home App

This product works with the Mi Home/Xiaomi Home app*.
Control your device with Mi Home/Xiaomi Home app.

Scan the QR code to download and install the app. You will be directed to the connection setup page if the app is installed already. Or search for "Mi Home/Xiaomi Home" in the app store to download and install it.

Open the Mi Home/Xiaomi Home app, tap "+" on the upper right, and then follow the instructions to add your device.

*The app is referred to as Xiaomi Home app in Europe (except for Russia). The name of the app displayed on your device should be taken as the default.

Note: The version of the app might have been updated, please follow the instructions based on the current app version.



D29D97D

Replacing the Filter


⚠ Warning: Make sure the purifier is turned off and the power cord is unplugged before replacing the filter.

Notes:

- To avoid injuries, do not put your fingers between the upper and filter compartments when replacing the filter.
- Unpack the new filter before replacing the old one.

1 Opening the filter compartment


Press and hold the release buttons with both of your hands to separate the upper compartment from the filter compartment.

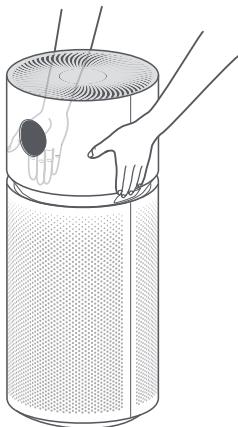

Note: This purifier is compatible with the model AFEF7TFX19 filter.

2 Replacing the filter

Remove the old filter upwards and place the new filter into the filter compartment. Then reinstall the upper compartment. The dirt may rise in the air when removing the old filter, and it is recommended to wear gloves and a mask before replacing the filter. Then put the old filter into a plastic bag, and secure the bag before discarding it. If you come into physical contact with dust, wash it off with water instead of wiping it off.

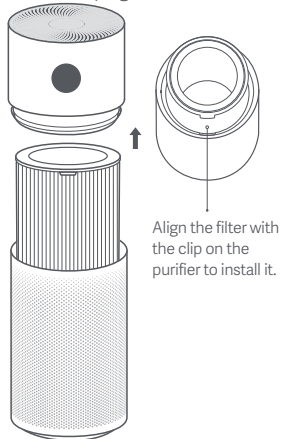


Daily Care & Maintenance

⚠ Warning: Make sure the purifier is turned off and unplugged before performing the following operations.

Cleaning fan blades and air duct

- Open the plug, loosen the screw inside it with a screwdriver, and rotate the grille clockwise to remove it upwards.
- Use a vacuum cleaner to remove any dust from the air duct and fan blades, or wipe the dust off gently with a soft cloth.
- Use a brush or soft cloth to gently wipe the plasma generator.
- After cleaning, rotate the grille counterclockwise to install it. Tighten the screw with a screwdriver, and close the plug.

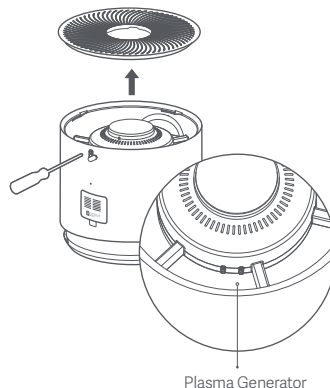


Plasma Generator

Note: To avoid damaging the purifier, do not rinse or spray the air duct and fan blades directly with water, or wipe them with a soaking wet cloth.

Cleaning the filter compartment


To ensure optimal ventilation and purification, use a vacuum cleaner to remove any dust from the air inlets and the filter compartment, or wipe these areas gently with a soft cloth.

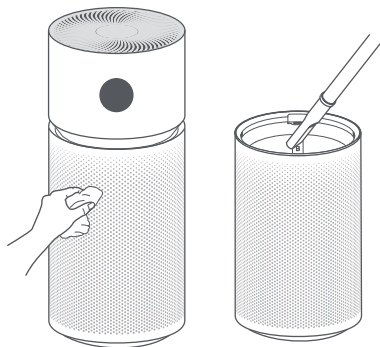

Note: To avoid damaging the purifier, do not rinse or spray the filter compartment directly with water, or wipe it with a soaking wet cloth.

Cleaning the laser particle sensor

Use a non-sharp tool to open the cover of the laser particle sensor, then use an air blow gun or hair dryer to clean the filter on the cover and the sensor, as illustrated in the figure.

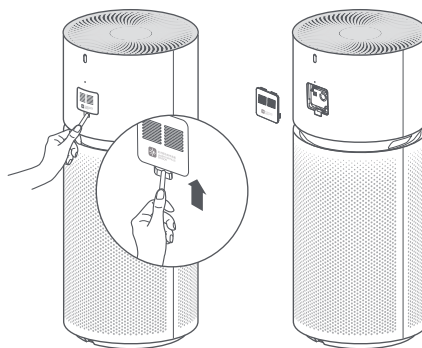

Note: Do not use hot air.

Specifications

Name: Air Purifier

Model: Y-600

Item Dimensions: $\Phi 310 \times 730$ mm

Net Weight: Approx. 6.5 kg

Rated Voltage: 100–240 V~

Rated Frequency: 50/60 Hz

Rated Power: 60 W

Noise Level: ≤ 68 dB(A)

Calculated according to standard GB/T 18801-2022

Network Standby Power Consumption: < 2.0 W

Particle's Clean Air Delivery Rate (CADR Particle): $600 \text{ m}^3/\text{h}$

TVOC Clean Air Delivery Rate (CADR TVOC): $135 \text{ m}^3/\text{h}$

Wireless Connectivity: Wi-Fi IEEE 802.11 b/g/n 2.4 GHz

Service Life: 5.7 years

RF Specification:

Wi-Fi 2.4 GHz (2400–2483.5 MHz), Max. RF Output Power: < 20 dBm

RFID (13.56 MHz), Max. Magnetic Field Strength: $< 42 \text{ dB}\mu\text{A/m}@10 \text{ m}$

Under normal use of condition, this equipment should be kept a separation distance of at least 20 cm between the antenna and the body of the user.

Regulatory Compliance Information

Disposal and recycling information



All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.

WARRANTY NOTICE

THIS WARRANTY GIVES YOU SPECIFIC RIGHTS, AND YOU MAY HAVE OTHER RIGHTS CONVEYED BY LAWS OF YOUR COUNTRY, PROVINCE OR STATE. INDEED, IN SOME COUNTRIES, PROVINCES OR STATES, CONSUMER LAW MAY IMPOSE A MINIMUM WARRANTY PERIOD. OTHER THAN AS PERMITTED BY LAW, XIAOMI DOES NOT EXCLUDE, LIMIT OR SUSPEND OTHER RIGHTS YOU MAY HAVE. FOR A FULL UNDERSTANDING OF YOUR RIGHTS WE INVITE YOU TO CONSULT THE LAWS OF YOUR COUNTRY, PROVINCE OR STATE.

1. LIMITED PRODUCT WARRANTY

XIAOMI warrants that the Products are free from defects in materials and workmanship under normal use and use in accordance with the respective Product user manual, during the Warranty Period.

The duration and conditions related to the legal warranties are provided by respective local laws. For more information about the consumer warranty benefits, please refer to Xiaomi's official website <https://www.mi.com/global/support/warranty>.

Xiaomi warrants to the original purchaser that its Xiaomi Product will be free from defects in materials and workmanship under normal use in the period mentioned above.

Xiaomi does not guarantee that the operation of the Product will be uninterrupted or error free.

Xiaomi is not liable for damages arising from non-compliance with the instructions related to the use of the Product.

2. REMEDIES

If a hardware defect is found and a valid claim is received by Xiaomi within the Warranty Period, Xiaomi will either (1) repair the product at no charge, (2) replace the product, or (3) refund the Product, excluding potential shipping costs.

3. HOW TO OBTAIN WARRANTY SERVICE

To obtain warranty service, you must deliver the Product, in its original packaging or similar packaging providing an equal degree of Product protection, to the address specified by Xiaomi. Except to the extent prohibited by applicable law, Xiaomi may require you to present proofs or proof of purchase and / or comply with registration requirements before receiving warranty service.

4. EXCLUSIONS AND LIMITATIONS

Unless otherwise stipulated by Xiaomi, this Limited Warranty applies only to the Product manufactured by or for Xiaomi and identifiable by the trademarks, trade name or "Xiaomi" or "Mi" logo.

The Limited Warranty does not apply to any (a) Damage due to acts of nature or God, for example, lightning strikes, tornadoes, flood, fire, earthquake or other external causes; (b) Negligence; (c) Commercial use; (d) Alterations or modifications to any part of the Product; (e) Damage caused by use with non-Xiaomi products; (f) Damage caused by accident, abuse or misuse; (g) Damage caused by operating the Product outside the permitted or intended uses described by Xiaomi or with improper voltage or power supply; or (h) Damage caused by service (including upgrades and expansions) performed by anyone who is not a representative of Xiaomi.

It is your responsibility to backup any data, software, or other materials you may have stored or preserved on the product. It is likely that the data, software or other materials in the equipment will be lost or reformatted during the service process, Xiaomi is not responsible for such damage or loss.

No Xiaomi reseller, agent, or employee is authorized to make any modification, extension, or addition to this Limited Warranty. If any term is held to be illegal or unenforceable, the legality or enforceability of the remaining terms shall not be affected or impaired.

Except as prohibited by laws or otherwise promised by Xiaomi, the after-sales services shall be limited to the country or region of the original purchase.

Products which were not duly imported and/or were not duly manufactured by Xiaomi and/or were not duly acquired from Xiaomi or a Xiaomi's official seller are not covered by the present warranties. As per applicable law you may benefit from warranties from the non-official retailer who sold the product. Therefore, Xiaomi invites you to contact the retailer from whom you purchased the product.

The present warranties do not apply in Hong Kong and Taiwan.

5. IMPLIED WARRANTIES

Except to the extent prohibited by applicable law, all implied warranties (including warranties of merchantability and fitness for a particular purpose) will have a limited duration up to a maximum duration of this limited warranty. Some jurisdictions do not allow limitations on the duration of an implied warranty, so the above limitation will not be applied in these cases.

6. DAMAGE LIMITATION

Except to the extent prohibited by applicable law, Xiaomi shall not be liable for any damages caused by accidents, indirect, special or consequential damages, including but not limited to loss of profits, revenue or data, damages resulting from any breach of express or implied warranty or condition, or under any other legal theory, even if Xiaomi has been informed of the possibility of such damages. Some jurisdictions do not allow the exclusion or limitation of special, indirect, or consequential damages, so the above limitation or exclusion may not apply to you.

7. XIAOMI CONTACTS

For customers, please visit the website: <https://www.mi.com/global/support/warranty>

The contact person for the after-sale service may be any person in Xiaomi's authorized service network, Xiaomi's authorized distributors or the final vendor who sold the products to you. If in doubt please contact the relevant person as Xiaomi may identify.

คำเตือน

- เมื่อสายไฟเกิดความเสียหาย จะต้องเปลี่ยนสายไฟใหม่ที่เป็นของแท้ ซึ่งซื้อมาจากผู้ผลิต หรือฝ่ายบริการหลังการขายทันที
- เด็กอายุตั้งแต่ 8 ปีขึ้นไปและบุคคลที่มีข้อจำกัดทางร่างกาย ระบบประสาท หรือสภาวะจิต หรือขาดประสบการณ์และความรู้ ล้วนแต่สามารถใช้เครื่องใช้ไฟฟ้านี้ได้ แต่ต้องได้รับการควบคุมดูแลหรือชี้นำวิธีใช้งานเครื่องอย่างปลอดภัยและเข้าใจถึงอันตรายที่อาจเกิดขึ้นจากการใช้เครื่อง
- เด็กๆ ไม่ควรเล่นเครื่อง ไม่ควรปล่อยให้เด็กทำความสะอาดและบำรุงรักษาเครื่องโดยไม่มีการควบคุมดูแล
- ตรวจสอบให้แน่ใจว่าคุณได้ปิดเครื่องฟอกอากาศและถอดปลั๊กออกแล้วก่อนที่จะทำการบำรุงรักษา ยึดตะแกรงโดยใช้สกรูหลังจากทำความสะอาดใบพัดและทอลล์
- เครื่องใช้ไม่มีตัวปล่อยรังสี UV-C
- ห้ามเปลี่ยนตัวปล่อยรังสี UV-C
- การใช้งานเครื่องใช้โดยไม่เจตนาหรือความเสียหายที่มีต่อตัวเครื่องอาจส่งผลให้เกิดการรั่วไหลของการแผ่รังสี UV-C ที่เป็นอันตรายได้ การแผ่รังสี UV-C แม้แต่ในปริมาณเพียงเล็กน้อยจะก่อให้เกิดอันตรายต่อดวงตาและผิวหนัง
- คุณจะต้องไม่ใช้งานเครื่องใช้ที่เสียหายอย่างเห็นได้ชัดเจน
- เครื่องใช้ไฟฟ้านี้ไม่มีเจตนาให้ใช้โดยบุคคล (รวมถึงเด็ก) ที่ด้อยความสามารถทางร่างกาย ทางประสาทสัมผัส หรือจิตใจ หรือขาดประสบการณ์และความรู้ เว้นแต่ว่าจะได้รับการควบคุมดูแลหรือการสอนเกี่ยวกับการใช้ เครื่องใช้ไฟฟ้าโดยบุคคลที่รับผิดชอบต่อความปลอดภัยของบุคคลเหล่านั้น เด็กควรได้รับการควบคุมดูแลเพื่อให้แน่ใจว่าจะไม่เล่นเครื่องใช้ไฟฟ้า

ข้อพึงระวังเพื่อความปลอดภัย

- ปิดและถอดปลั๊กเครื่องฟอกอากาศออกก่อนที่จะทำการเคลื่อนย้าย
- เมื่อทำการย้ายเครื่องฟอกอากาศ ห้ามสัมผัสกับปลั๊กของช่องด้านบน มิเช่นนั้น ช่องใส่กรองเครื่องฟอกอากาศอาจจะหล่นลงมาและทำให้เกิดการบาดเจ็บขึ้นได้

- คุณจะสามารถเปิดเครื่องฟอกอากาศได้หากไม่มีการติดตั้งตะแกรงพัดลมและฝาปิดใส่กรองเครื่องฟอกอากาศอย่างเหมาะสม
- รักษาระยะห่างอย่างน้อย 20 ซม. ระหว่างช่องรับอากาศกับกำแพงหรือสิ่งอื่นๆ
- คุณจะต้องวางเครื่องฟอกอากาศไว้บนพื้นผิวที่มั่นคงและราบเรียบ

- ก่อนทำความสะอาดหรือทำการบำรุงรักษาอื่นๆ ต้องถอดปลั๊กเครื่องออกจากแหล่งจ่ายไฟ
- กำจัดฝุ่น เส้นผมและฝุ่นละอองต่างๆ ออกจากตะแกรงกรองด้านนอกของใส่กรองเครื่องฟอกอากาศอย่างสม่ำเสมอเพื่อลดโอกาสในการเกิดแบคทีเรีย
- กำจัดฝุ่น เส้นผมและฝุ่นละอองต่างๆ ออกจากช่องรับอากาศของเครื่องฟอกอากาศเพื่อป้องกันการลดลงของปริมาณอากาศเข้า
- ปิดช่องระบายอากาศเพื่อป้องกันไม่ให้ฝุ่น เส้นผมและฝุ่นละอองต่างๆ เข้าไปข้างในเมื่อไม่มีการใช้งานเครื่องฟอกอากาศเป็นเวลานาน

เพื่อหลีกเลี่ยงไม่ให้เกิดไฟไหม้ ไฟดูดหรือความเสียหายอื่นๆ ควรใช้สายไฟและแหล่งจ่ายไฟตามคำแนะนำไว้ดังต่อไปนี้เท่านั้น:

- ห้ามดึง บิดหรือองสายไฟมากเกินไปเนื่องจากอาจทำให้สัมผัสหรือทำให้แกนสายไฟเสียหายได้
- เสียบสายไฟเข้าไปในแหล่งจ่ายไฟฟ้าที่เหมาะสมเท่านั้น
- ใช้สายไฟที่ได้รับมาพร้อมกับเครื่องฟอกอากาศเท่านั้น ห้ามใช้สายไฟของบริษัทผู้ผลิตรายอื่น
- ถอดปลั๊กออกจากเครื่องฟอกอากาศก่อนที่จะทำการบำรุงรักษาหรือเคลื่อนย้ายเครื่องฟอกอากาศอยู่เสมอ

- หยุดใช้งานเครื่องฟอกอากาศทันทีเมื่อเครื่องฟอกอากาศมีเสียงที่ผิดปกติ สงกิ่นเหมือน ร้อนจัดหรือเมื่อพัดลมหมุนผิดปกติ
- ห้ามหำยนิ้วของคุณหรือสิ่งแปลกปลอมต่างๆ เข้าไปในส่วนที่มีการป้องกัน ส่วนที่เคลื่อนไหว ช่องรับอากาศหรือช่องระบายอากาศ
- กันไม่ให้วัตถุต่างๆ เช่น เส้นผมหรือเส้นใยอยู่ใกล้เครื่องฟอกอากาศเพื่อป้องกันการอุดตันของช่องรับอากาศหรือช่องระบายอากาศ
- อย่างน้อย 1 ฟุต หรือตะแคงเครื่องฟอกอากาศ
- เมื่อใช้งานร่วมกับอุปกรณ์ที่ใช้แก๊สและน้ำมัน (เช่น เตาแก๊ส เครื่องทำความร้อนแบบใช้แก๊ส) โปรดระบายนอากาศเพื่อหลีกเลี่ยงภาวะคาร์บอนมอนอกไซด์เป็นพิษ
- ห้ามเทของเหลวหรือใส่ผงหรือสารขนาดเล็กต่างๆ เข้าไปในช่องระบายอากาศของเครื่องฟอกอากาศ
- ตรวจสอบให้แน่ใจว่า ไม่มีวัตถุไวไฟเข้าไปในเครื่องฟอกอากาศ

ห้ามใช้งานเครื่องฟอกอากาศในสภาพการณ์ดังต่อไปนี้เนื่องจากอาจก่อให้เกิดไฟดูด ไฟไหม้หรือความเสียหายอื่นๆ ได้:

- ใกล้เปลวไฟ เช่น เทียนไข กระถางธูป เตาไฟ เตาผิง บุหรี่ ประทัด เครื่องจุดไฟ คบไฟ ที่จุดเทียน หรือแหล่งติดไฟต่างๆ
- ใกล้อุปกรณ์ต่างๆ ที่ก่อให้เกิดอุณหภูมิสูง เช่น เครื่องทำความร้อนไฟฟ้า เครื่องทำความร้อนพัดลม เครื่องทำความร้อนสำหรับเท้า เตาไฟฟ้า เตาไรต์ไฟฟ้า
- ในตำแหน่งที่ไม่เหมาะสมซึ่งเครื่องฟอกอากาศอาจล้มคว่ำลงมาได้ง่าย
- ในสภาพแวดล้อมที่ร้อน ชื้นและหมกหมุ่นมาก เช่น ห้องน้ำ


ภาพรวมผลิตภัณฑ์

อ่านคู่มือฉบับนี้ให้ละเอียดก่อนใช้งาน และควรเก็บไว้ใช้อ้างอิงในอนาคต

หมายเหตุ: ภาพของผลิตภัณฑ์ อุปกรณ์เสริมและยูสเซอร์อินเตอร์เฟซในคู่มือการใช้งานใช้สำหรับการอ้างอิงเท่านั้น ผลิตภัณฑ์และฟังก์ชันการทำงานจริงอาจแตกต่างกันไปเนื่องจากการปรับปรุงผลิตภัณฑ์




มุมมองด้านหน้า

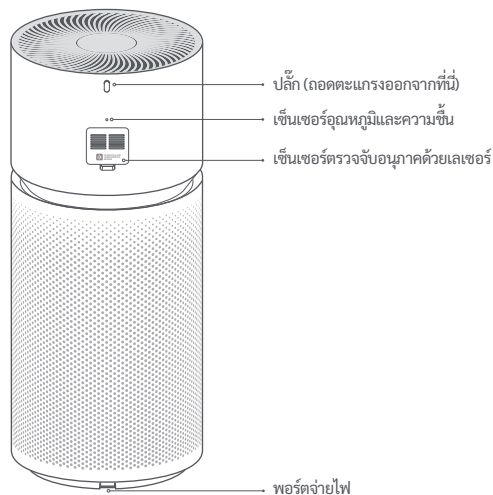

มุมมองด้านหลัง

คำแนะนำการใช้งานหน้าจอ

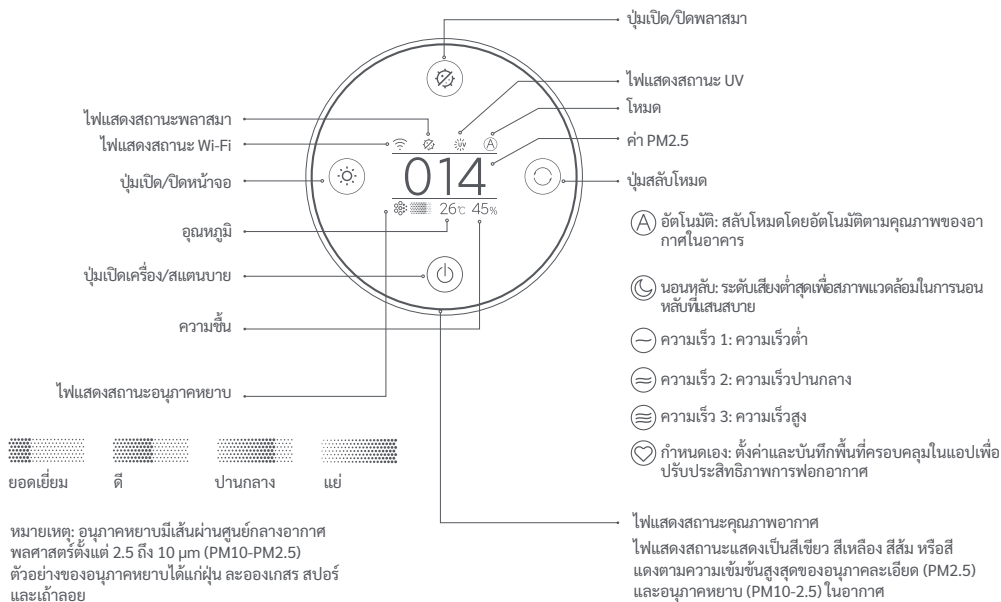


		อนุภาคหยาบ			
		ยอดเยี่ยม	ดี	ปานกลาง	แย่
ค่า PM2.5	1-20 $\mu\text{g}/\text{cm}^3$	ดีเยี่ยม	ดี	ปานกลาง	แย่
	21-35 $\mu\text{g}/\text{cm}^3$	ดี	ดี	ปานกลาง	แย่
	36-55 $\mu\text{g}/\text{cm}^3$	ดี	ดี	ปานกลาง	แย่
	>55 $\mu\text{g}/\text{cm}^3$	ดี	ดี	ปานกลาง	แย่

การติดตั้ง


การวางเครื่องฟอกอากาศ

เพื่อประสิทธิภาพสูงสุด ควรตรวจสอบให้แน่ใจว่าระยะห่างระหว่างช่องลมเข้าของเครื่องฟอกอากาศกับวัตถุต่างๆ อาทิ ผนัง ตรงตามข้อกำหนดตามที่แนะนำที่ด้านล่าง

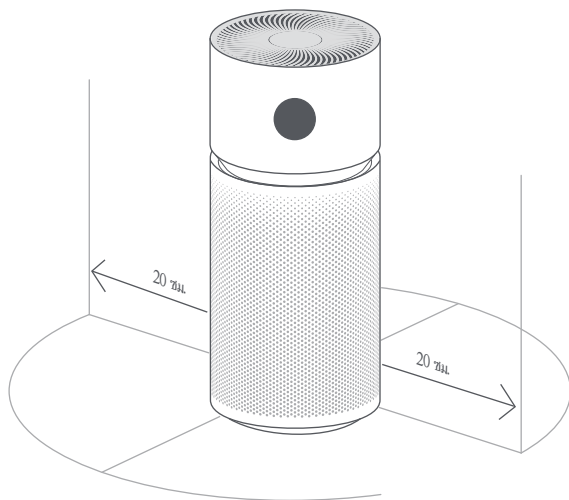

การเชื่อมต่อเข้ากับกับเต้ารับไฟฟ้า

เชื่อมต่อสายไฟเข้ากับพอร์ตจ่ายไฟที่ด้านล่างของเครื่องฟอกอากาศ จากนั้นจึงเสียบปลั๊กเข้าไปในเต้ารับไฟฟ้า

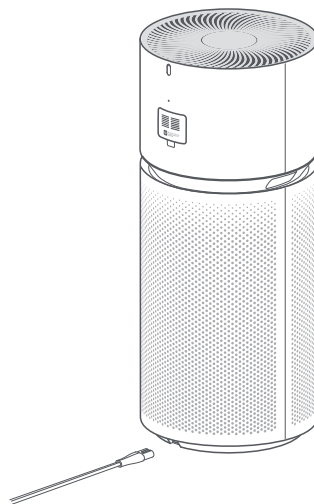

หมายเหตุ: แนะนำให้ปิดประตูและหน้าต่างระหว่างที่ใช้งานเครื่องฟอกอากาศเพื่อการฟอกอากาศที่มีประสิทธิภาพยิ่งขึ้น

วิธีการใช้

เปิดเครื่อง/สแตนด์บาย

แตะปุ่มเปิดเครื่อง/
สแตนด์บายเพื่อเปิด
เครื่องฟอกอากาศ
เมื่อเครื่องฟอกอากาศ
เปิดอยู่ แตะปุ่มเปิดเครื่อง/สแตนด์บาย
เพื่อเข้าสู่โหมดสแตนด์บาย



การสลับโหมด

ในขณะที่เครื่องฟอกอากาศเปิดอยู่
ให้คุณแตะที่ปุ่มสลับโหมดเพื่อสลับ
เป็นโหมดต่างๆ



การเปิดใช้งานและการปิดใช้งานการฆ่าเชื้อพลาสมา/UV

แตะปุ่มเปิด/ปิดพลาสมาเพื่อเปิดใช้งานหรือปิดใช้งานการ
ฆ่าเชื้อพลาสมา แตะปุ่มเปิด/ปิดพลาสมาค้างไว้เป็นเวลา
เจ็ดวินาทีเพื่อเปิดใช้งานหรือปิดใช้งานการฆ่าเชื้อ UV



การปรับความสว่างของหน้าจอ การรีเซ็ต Wi-Fi

กดปุ่มเปิด/ปิดหน้าจอเพื่อสลับ
ระดับความสว่างของหน้าจอ:
สว่าง สลัว ดับ



เมื่อเชื่อมต่อเครื่องฟอกอากาศเข้ากับ
แอปเป็นครั้งแรกหรือเมื่อไม่สามารถ
เชื่อมต่อเข้ากับแอปได้ ให้คุณกด
ปุ่มเปิด/ปิดหน้าจอค้างไว้เป็นเวลา
7 วินาที เครื่องฟอกอากาศจะส่ง
เสียงการแจ้งเตือนเมื่อ Wi-Fi
ได้รับการรีเซ็ตเรียบร้อยแล้ว



การเปิดใช้งาน/การปิดใช้งานฟังก์ชันล็อกป้องกันเด็ก

กดปุ่มสลับโหมดเป็นเวลา 7 วินาทีเพื่อเปิดใช้งานหรือปิด
ใช้งานฟังก์ชันล็อกป้องกันเด็ก เครื่องฟอกอากาศจะส่ง
เสียงการแจ้งเตือนที่เกี่ยวข้อง และแสดงไอคอนที่
เกี่ยวข้องกับหน้าจอ




เปิดใช้งานล็อกป้องกันเด็กแล้ว



ปิดใช้งานล็อกป้องกันเด็กแล้ว


การเปิดใช้งาน/การปิดใช้งาน Wi-Fi

กดปุ่มสลับโหมดบนหน้าจอและปุ่มปรับความสว่างค้างไว้พร้อมกันเป็นเวลา 7 วินาที เครื่องฟอกอากาศจะส่งเสียงการแจ้งเตือนและ Wi-Fi จะถูกปิดใช้งาน ในขณะที่ปิด Wi-Fi อยู่ให้คุณกดปุ่มสลับโหมดบนหน้าจอและปุ่มปรับความสว่างค้างไว้พร้อมกันเป็นเวลา 7 วินาที เครื่องฟอกอากาศจะส่งเสียงการแจ้งเตือน และ Wi-Fi จะถูกเปิดใช้งาน

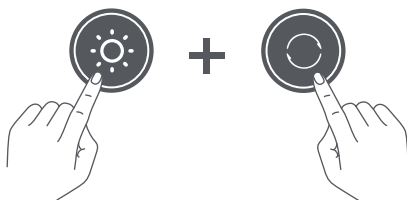

การแจ้งเตือนอายุการใช้งานของไส้กรองเครื่องฟอกอากาศ

หน้าจอจะแสดงระยะเวลาการใช้งานที่เหลือของไส้กรองเครื่องฟอกอากาศเมื่อคุณเปิดเครื่องฟอกอากาศ หน้าจอจะแสดงไอคอนค่าเตือนหากตรวจพบไส้กรองเครื่องฟอกอากาศที่ไม่ใช่ของแท้

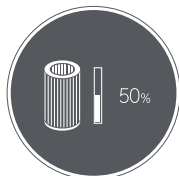

การแจ้งเตือนระยะเวลาการใช้งานที่เหลือของไส้กรองเครื่องฟอกอากาศ



คำเตือนไส้กรองเครื่องฟอกอากาศไม่ใช่ของแท้

สามารถเชื่อมต่อกับแอป Mi Home/Xiaomi Home

ผลิตภัณฑ์นี้ทำงานกับแอป Mi Home/Xiaomi Home* ได้ ใช้แอป Mi Home/Xiaomi Home ควบคุมอุปกรณ์และโต้ตอบกับอุปกรณ์ Smart home อื่นๆ



D29D97D

สแกนคิวอาร์โค้ดเพื่อดาวน์โหลดและติดตั้งแอป ระบบจะนำคุณไปที่หน้าการตั้งค่าการเชื่อมต่อหากแอปได้รับการติดตั้งแล้ว หรือค้นหา “Mi Home/Xiaomi Home” ใน App Store เพื่อดาวน์โหลดแล้วติดตั้งแอป เปิดแอป Mi Home/Xiaomi Home แล้วแตะ “+” ที่ด้านบนขวา จากนั้นให้ปฏิบัติตามพรอมต์เพื่อเพิ่มอุปกรณ์ของคุณ

*แอปนี้ถูกเรียกว่าแอป Xiaomi Home ในยุโรป (ยกเว้นในรัสเซีย)

ชื่อแอปที่แสดงบนอุปกรณ์ของคุณจะถือว่าเป็นค่าเริ่มต้น

หมายเหตุ: เวอร์ชันของแอปอาจอัปเดตแล้ว กรุณาปฏิบัติตามคำแนะนำตามเวอร์ชันปัจจุบันของแอป

การเปลี่ยนไส้กรองเครื่องฟอกอากาศ


⚠ คำเตือน: ตรวจสอบให้แน่ใจว่าคุณได้ปิดเครื่องฟอกอากาศและถอดปลั๊กสายไฟออกแล้วก่อนที่จะทำการเปลี่ยนไส้กรองเครื่องฟอกอากาศ

หมายเหตุ:

- อย่าแหย่นิ้วของคุณเข้าไปที่ระหว่างช่องด้านบนกับช่องไส้กรองเครื่องฟอกอากาศเมื่อทำการเปลี่ยนไส้กรองเครื่องฟอกอากาศเพื่อหลีกเลี่ยงการบาดเจ็บ
- และไส้กรองเครื่องฟอกอากาศอันใหม่ก่อนที่จะทำการเปลี่ยนแทนอันเก่า

1 การเปิดช่องไส้กรองเครื่องฟอกอากาศ


กดปุ่มปล่อยค้างไว้โดยใช้มือทั้งสองข้างของคุณ และแยกช่องด้านบนออกจากช่องไส้กรองเครื่องฟอกอากาศ

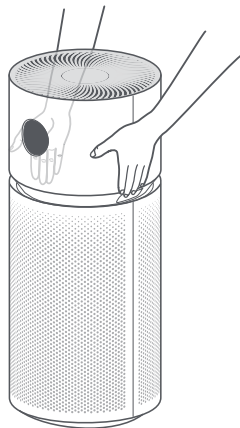

หมายเหตุ:
เครื่องฟอกอากาศนี้เข้ากันได้กับ
ไส้กรองเครื่องฟอกอากาศรุ่น
AFEP7TFX19

2 การเปลี่ยนไส้กรองเครื่องฟอกอากาศ

ถอดไส้กรองเครื่องฟอกอากาศอันเก่าขึ้นด้านบน และใส่ไส้กรองเครื่องฟอกอากาศอันใหม่เข้าไปในช่องไส้กรองเครื่องฟอกอากาศ จากนั้นจึงใส่ช่องด้านบนกลับเข้าไป อาจเกิดเสียงกรกขุ่นในอากาศได้เมื่อทำการถอดไส้กรองเครื่องฟอกอากาศอันเก่า เราจึงแนะนำให้ปิดเครื่องและหน้าต่างก่อนที่จะทำการเปลี่ยนไส้กรองเครื่องฟอกอากาศ จากนั้นให้คุณใส่ไส้กรองเครื่องฟอกอากาศอันเก่าลงในถุงพลาสติก และรัดถุงให้แน่นก่อนที่จะนำไปทิ้งพลาสติกไปทิ้ง หากร่างกายของคุณสัมผัสกับฝุ่นละออง ให้คุณล้างออกด้วยน้ำแทนที่จะทำการเช็ดออก

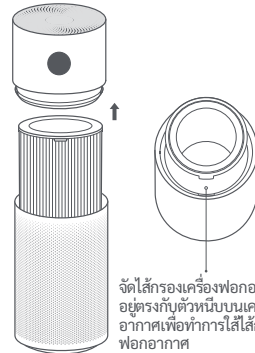


จัดไส้กรองเครื่องฟอกอากาศให้
อยู่ตรงกับตัวหนีบนบนเครื่องฟอก
อากาศเพื่อทำการใส่ไส้กรองเครื่อง
ฟอกอากาศ

การดูแลและการบำรุงรักษา

⚠ คำเตือน: ตรวจสอบให้แน่ใจว่าคุณได้ปิดเครื่องฟอกอากาศและถอดปลั๊กออกแล้วก่อนที่จะดำเนินการดังต่อไปนี้

การทำความสะอาดใบพัดและท่อลม

- เปิดปลั๊ก คลายสกรูที่ด้านในของปลั๊กโดยใช้ไขควง และหมุนตะแกรงตามเข็มนาฬิกาเพื่อถอดตะแกรงขึ้นด้านบน
- ใช้เครื่องดูดฝุ่นกำจัดฝุ่นละอองออกจากท่อลมและใบพัด หรือค่อยๆ เช็ดฝุ่นละอองออกโดยใช้ผ้านุ่มๆ
- ใช้แปรงขนนุ่มหรือผ้านุ่มค่อยๆ เช็ดทราานสมิตเตอร์พลาสติก
- หมายเหตุ: เพื่อหลีกเลี่ยงการทำให้อุปกรณ์ฟอกอากาศเสียหาย ห้ามล้างหรือฉีดท่อลมและใบพัดโดยตรงโดยใช้น้ำหรือเช็ดท่อลมและใบพัดโดยใช้ผ้าที่เปียกโชก

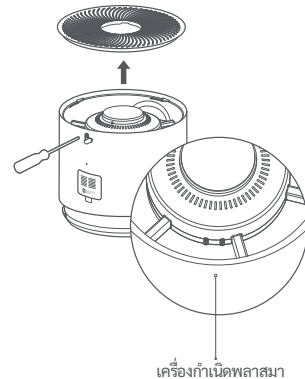


เครื่องกำเนิดพลาสมา

หมายเหตุ: เพื่อหลีกเลี่ยงการทำให้อุปกรณ์ฟอกอากาศเสียหาย ห้ามล้างหรือฉีดท่อลมและใบพัดโดยตรงโดยใช้น้ำหรือเช็ดท่อลมและใบพัดโดยใช้ผ้าที่เปียกโชก

การทำความสะอาดช่องใส่กรองเครื่องฟอกอากาศ


เพื่อให้แน่ใจได้ถึงการระบายอากาศและการฟอกอากาศที่ดีที่สุด คุณควรใช้เครื่องดูดฝุ่นในการกำจัดฝุ่นละอองจากช่องลมเข้าและช่องใส่กรองเครื่องฟอกอากาศ หรือค่อยๆ เช็ดบริเวณดังกล่าวโดยใช้ผ้านุ่มๆ

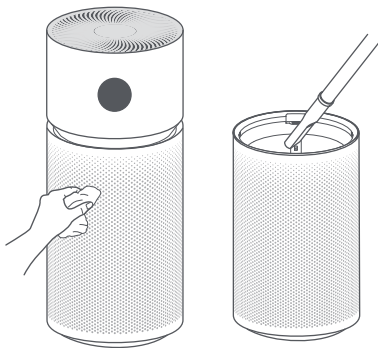

หมายเหตุ: เพื่อหลีกเลี่ยงการทำให้เครื่องฟอกอากาศเสียหาย ห้ามล้างหรือฉีดช่องใส่กรองเครื่องฟอกอากาศโดยตรงโดยใช้น้ำ หรือเช็ดช่องใส่กรองเครื่องฟอกอากาศโดยใช้ผ้าที่เปียกโชก

การทำความสะอาดเซ็นเซอร์ตรวจจับอนุภาคด้วยเลเซอร์

ใช้เครื่องมือที่มคมเปิดฝาดปิดของเซ็นเซอร์ตรวจจับอนุภาคด้วยเลเซอร์ จากนั้นใช้ปืนเป่าลมหรือไดร์เป่าผมทำความสะอาดไส้กรองเครื่องฟอกอากาศบนฝาดปิดและเซ็นเซอร์ตามที่แสดงในรูป

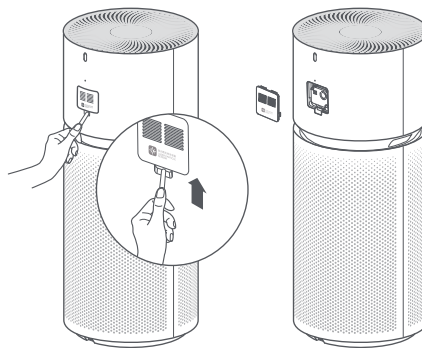

หมายเหตุ: ห้ามใช้ลมร้อน

ข้อมูลจำเพาะ

ชื่อประเภท : เครื่องฟอกอากาศ

รุ่น : Y-600

ขนาดวัดถ : Φ 310 × 730 มม.

น้ำหนักสุทธิ : ประมาณ 6.5 กก.

อัตราแรงดันไฟฟ้า : 100–240 V~

ความถี่ : 50/60 Hz

กำลังไฟฟ้า : 60 วัตต์

ระดับเสียง : ≤68 dB(A)

การใช้พลังงานระหว่างที่เครื่องฯสแตนด์บาย : < 2.0 W

คำนวณจากมาตรฐาน GB/T 18801-2022

เครื่องโทรคมนาคมและอุปกรณ์นี้มีความสอดคล้องตามมาตรฐานหรือข้อกำหนดทางเทคนิคของ กสทช.

อัตราการส่งผ่านอากาศบริสุทธิ์ของอนุภาค (CADR ของอนุภาค) : 600 ลบ.ม./ชม.

อัตราการส่งผ่านอากาศบริสุทธิ์ของ TVOC (CADR TVOC) : 135 ลบ.ม./ชม.

การเชื่อมต่อแบบไร้สาย : Wi-Fi IEEE 802.11b/g/n 2.4 GHz

อายุการใช้งาน : 5.7 ปี

ประกาศการรับประกัน

การรับประกันนี้ให้สิทธิที่เฉพาะเจาะจงแก่คุณ

และคุณอาจมีสิทธิอื่นๆ ตามกฎหมายภายในประเทศ มลรัฐ หรือรัฐของคุณ แน่นอนว่า ในบางประเทศ มลรัฐ หรือรัฐกฎหมายคุ้มครองผู้บริโภคอาจกำหนดระยะเวลาการรับประกันขั้นต่ำ นอกเหนือจากที่ได้รับอนุญาตตามกฎหมาย XIAOMI จะไม่ยกเว้นจำกัด หรือระงับสิทธิอื่นๆ ที่คุณอาจมี เพื่อความเข้าใจสิทธิของคุณอย่างถึถ้วน เราขอแนะนำให้คุณค้นคว้ากฎหมายของประเทศ มลรัฐ หรือรัฐของคุณ

1. การรับประกันสินค้าแบบจำกัด

XIAOMI รับประกันว่า

ผลิตภัณฑ์ปราศจากข้อบกพร่องด้านวัสดุและคุณภาพภายใต้การใช้งานปกติและการใช้งานตามคู่มือผู้ใช้ผลิตภัณฑ์ที่เกี่ยวข้องภายในระยะเวลาการรับประกัน

ระยะเวลาและเงื่อนไขที่เกี่ยวข้องกับการรับประกันตามกฎหมายจะให้อำนาจตามกฎหมายภายในประเทศของคุณตามลำดับ

สำหรับข้อพิพาทเพิ่มเติมเกี่ยวกับประโยชน์จาก การรับประกันสำหรับผู้บริโภค โปรดอ้างถึงเว็บไซต์ทางการของ Xiaomi

<https://www.mi.com/global/support/warranty>

Xiaomi รับประกันต่อผู้ซื้อผลิตภัณฑ์ครั้งแรกว่า ผลิตภัณฑ์ Xiaomi

จะไม่มีข้อบกพร่องด้านวัสดุและคุณภาพภายใต้การใช้งานปกติในระยะเวลาตามที่กล่าวไว้ข้างต้น

Xiaomi ไม่รับประกันว่า การทำงานของผลิตภัณฑ์จะไม่ถูกรบกวนหรือปราศจากข้อผิดพลาด

Xiaomi ไม่มีส่วนรับผิดชอบต่อความเสียหายที่เกิดขึ้นจากการไม่ปฏิบัติตามคำแนะนำที่เกี่ยวข้องกับการใช้ผลิตภัณฑ์

2. การเยียวยา

หากพบข้อบกพร่องด้านฮาร์ดแวร์และ Xiaomi ได้รับการอ้างสิทธิที่ถูกต้องภายในระยะเวลาการรับประกัน Xiaomi จะ (1)

ซ่อมแซมผลิตภัณฑ์โดยไม่คิดค่าบริการ (2) เปลี่ยนผลิตภัณฑ์ หรือ (3) คืนเงินค่าผลิตภัณฑ์ อย่างหนึ่งอย่างใด โดยไม่รวมค่าจัดส่งที่อาจเกิดขึ้น

3. วิธีรับบริการการรับประกัน

ในการรับบริการการรับประกัน

คุณต้องส่งผลิตภัณฑ์ในบรรจุภัณฑ์ดั้งเดิม หรือบรรจุภัณฑ์ที่คล้ายคลึงและปกป้องผลิตภัณฑ์ได้เท่าเทียมกัน มายังที่อยู่ระบุไว้โดย

Xiaomi เว็บไซต์ในขอบเขตที่ต้องห้ามตามกฎหมายที่บังคับใช้ Xiaomi อาจเรียกร้องให้คุณแสดงหลักฐานหรือหลักฐานการซื้อ และ /

หรือปฏิบัติตามข้อกำหนดการลงทะเบียนก่อนรับบริการการรับประกัน

4. ข้อยกเว้นและข้อจำกัด

เว้นแต่ได้กำหนดไว้เป็นอย่างอื่นโดย Xiaomi การรับประกันแบบจำกัดนี้ไม่ผลกับผลิตภัณฑ์ที่ผลิตโดยหรือเพื่อ Xiaomi

และสามารถระบุได้โดยเครื่องหมายการค้า ชื่อการค้า หรือโลโก้ "Xiaomi" หรือ "Mi" เท่านั้น

การรับประกันแบบจำกัดไม่มีผลต่อ (ก) ความเสียหายที่เกิดจากธรรมชาติหรือเหตุสุดวิสัย ตัวอย่างเช่น ไฟฟ้า ทอร์นาโด น้ำท่วม ไฟไหม้

แผ่นดินไหว หรือเหตุการณ์อื่น ๆ (ข) ความประมาทเลินเล่อ (ค) การใช้เพื่อการค้า (ง) การปรับเปลี่ยนหรือแก้ไขส่วนใดส่วนหนึ่งของผลิตภัณฑ์

(จ) ความเสียหายที่เกิดจากการใช้งานกับ ผลิตภัณฑ์ที่ไม่ใช่ของ Xiaomi (ฉ) ความเสียหายที่เกิดจากอุบัติเหตุ การละเมิด หรือการใช้ในทางที่ผิด

(ข) ความเสียหายที่เกิดจากการใช้งานผลิตภัณฑ์นอกเหนือจาก ที่ได้รับอนุญาต หรือนอกเหนือวัตถุประสงค์ที่อธิบายไว้โดย Xiaomi หรือใช้แรงดันไฟฟ้าหรือแหล่งจ่ายไฟที่ไม่เหมาะสม หรือ (ซ) ความเสียหายที่เกิดจากการบริการ (รวมถึงการอัปเดตและการขยาย) ที่ดำเนินการโดยผู้ที่ไม่ใช่ตัวแทนของ Xiaomi การสำรองข้อมูล ซอฟต์แวร์ หรือวัสดุอื่นใดที่คุณอาจเก็บหรือรักษาไว้ในผลิตภัณฑ์ อยู่ในความรับผิดชอบของคุณ

มีแนวโน้มว่าข้อมูล ซอฟต์แวร์ หรือวัสดุอื่นใน อุปกรณ์จะสูญหายหรือถูกจัดรูปแบบใหม่ในระหว่างกระบวนการให้บริการ Xiaomi จะไม่รับผิดชอบต่อความเสียหายหรือความสูญเสียดังกล่าว

ไม่มีผู้ค้าปลีก ตัวแทน หรือพนักงานของ Xiaomi ได้รับอนุญาตให้แก้ไข ขยาย หรือเพิ่มเติมใดๆ นอกเหนือการรับประกันแบบจำกัดนี้ หากข้อกำหนดใดๆ ผิดต่อ กฎหมายหรือไม่สามารถบังคับใช้ได้ ความชอบด้วยกฎหมายหรือการบังคับใช้ข้อกำหนดที่เหลือจะไม่สามารถกระทบหรือความเสียหาย

ยกเว้นการรับประกันที่ห้ามโดยกฎหมาย หรือสัญญาไว้โดย Xiaomi บริการหลังการขายจะจำกัดตามประเทศหรือภูมิภาคของการซื้อผลิตภัณฑ์ครั้งแรก

ผลิตภัณฑ์ที่ไม่ได้รับการนำเข้าอย่างถูกต้อง และ/หรือไม่ได้ผลิตอย่างถูกต้องโดย Xiaomi และ/หรือไม่ได้รับมาอย่างถูกต้องจาก Xiaomi หรือผู้ขายอย่างเป็นทางการ ของ Xiaomi จะไม่ได้รับความคุ้มครองตามการรับประกันปัจจุบัน

ตามกฎหมายที่บังคับใช้ คุณอาจได้รับประโยชน์จากการรับประกันจากผู้ค้าปลีกอย่างไม่เป็นทางการ ที่ขายผลิตภัณฑ์ ดังนั้น Xiaomi ขอแนะนำให้คุณติดต่อผู้ค้าปลีกที่คุณซื้อผลิตภัณฑ์

การรับประกันปัจจุบันไม่บังคับใช้ในฮ่องกงและไต้หวัน

5. การรับประกันโดยนัย

เว้นแต่ในขอบเขตที่ต้องห้ามตามกฎหมายที่บังคับใช้ การรับประกันโดยนัยทั้งหมด (รวมถึงการรับประกันสภาพการใช้ประโยชน์ในเชิงพาณิชย์และความเหมาะสม สำหรับวัตถุประสงค์เฉพาะ) จะมีระยะเวลาจำกัดจนถึงระยะเวลาสูงสุดของการรับประกันแบบจำกัดนี้ เขตอำนาจศาลบางแห่งไม่อนุญาตให้มีข้อกำหนดเกี่ยวกับระยะเวลาการรับประกันโดยนัย ดังนั้นข้อกำหนดข้างต้นจะไม่ถูกนำมาใช้ในกรณีเหล่านั้น

6. ข้อจำกัดความเสียหาย

เว้นแต่ในขอบเขตที่ต้องห้ามตามกฎหมายที่บังคับใช้ Xiaomi จะไม่รับผิดชอบต่อความเสียหายใดๆ ที่เกิดขึ้นจากอุบัติเหตุ ความเสียหายโดยอ้อม ความเสียหายพิเศษ หรือความเสียหายที่เกิดตามมา รวมถึงแต่ไม่จำกัดเพียงการสูญเสียผลกำไร รายได้หรือข้อมูล ความเสียหายที่เป็นผลมาจากการละเมิดเงื่อนไขการรับประกันที่ขัดแย้งหรือโดยนัย หรือภายใต้กฎหมายอื่นใด แม้ว่า Xiaomi จะได้รับแจ้งถึงความเป็นไปได้ในการเกิดความเสียหายดังกล่าวก็ตาม

เขตอำนาจศาลบางแห่งไม่ อนุญาตให้มีข้อยกเว้นหรือข้อจำกัดความเสียหายพิเศษ ความเสียหายโดยอ้อม หรือความเสียหายที่เกิดตามมา ดังนั้นข้อจำกัดหรือข้อยกเว้นข้างต้นอาจไม่มีผลกับ คุณ

7. ติดต่อ XIAOMI

สำหรับลูกค้า โปรดเยี่ยมชมเว็บไซต์: <https://www.mi.com/global/support/warranty>

ผู้ติดต่อสำหรับบริการหลังการขายอาจเป็นบุคคลใดก็ได้ในเครือข่ายการให้บริการที่ได้รับอนุญาตจาก Xiaomi

ผู้แทนจำหน่ายที่ได้รับอนุญาตจาก Xiaomi หรือผู้จำหน่ายขั้นสุดท้ายที่ขายผลิตภัณฑ์ให้คุณ หากมีข้อสงสัย โปรดติดต่อบุคคลที่เกี่ยวข้องที่ Xiaomi อาจจะตัวบุคคลได้

- Manufacturer: Xiaomi Communications Co., Ltd.
Address: #019, 9th Floor, Building 6, 33 Xi'erqi Middle Road, Haidian District, Beijing, 100085, China
For further information, please go to www.mi.com
Made in China
User Manual Version: V1.0
- ผู้ผลิต: Xiaomi Communications Co., Ltd.
ที่อยู่: #019, 9th Floor, Building 6, 33 Xi'erqi Middle Road, Haidian District, Beijing, 100085, China
สำหรับข้อมูลเพิ่มเติม โปรดดูที่ www.mi.com
ผลิตในประเทศจีน
คู่มือการใช้งานเวอร์ชัน: V1.0

