

USER'S MANUAL

MASSAGE CHAIR

JL10009

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP!

Follow Costway



Contact Us!

Do NOT return this item.

Contact our friendly customer service department for help first.



Before You Start

- ⚠ Please read all instructions carefully.
- ⚠ Retain instructions for future reference.
- ⚠ Separate and count all parts and hardware.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Always place the product on a flat, steady and stable surface.
- ⚠ Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

Thanks for purchasing this product. Please read this manual instruction carefully in order to know how to use this product correctly before operation. Please pay more attention to some important safety warning and keep this manual book properly for future use.

Note: Our Company reserves the right to revise the design and description of this product without any further notice. Please refer to the actual color of this product.

CONTENTS

Safety and maintenance	4
Use safety warning	8
Name of components	10
Function	11
Method of usage	13
Product specification	26
Features, maintenance and cleaning of microfiber leather ..	27
Maintenance and cleaning of PU synthetic leather	28

Safety and maintenance

1. Important Safety Warnings

- Do not allow children to touch any movable part of this product.
- Use the well-grounded power supply unit suitable for this product.
- Pull out the plug after use or before cleaning to avoid any physical injury or damage to the product.
- Operate this product as instructed in this manual.
- Do not use any parts or accessories which are not recommended.
- Do not use this product outdoors.
- Please read the Operation Instructions carefully before operation.
- Never use this product for any other purpose not listed herein.
- 20 minutes of usage each time is recommended.
- Do not use this product if the leather is broken or damaged.
- Do not use this product if the cover or leather is broken or damaged.
- Do not use this product if the radiator hole is covered or blocked.
- Do not drop anything into this product.
- Never fall asleep while using this product.
- Do not use this product if you are drunk or feel unwell.
- Do not use this product within one hour after a meal.
- Do not use this product with excessive force to avoid any injury.

2. Operating Environment

- Do not use this product in a very moist environment such as the bathroom.
- Stop using this product immediately when the ambient temperature changes sharply.

- Do not use this product in any heavily-dusty or caustic environment.
- Do not use this product in a small space or a place without good ventilation.

3. The following populations should not use this product

- Patients with osteoporosis.
- Patients with heart disease or wearing electronic medical devices such as a pacemaker.
- People who have a fever.
- Pregnant women or women on their menstrual period.
- Patients who are injured or have a skin disease.
- When unsupervised, any children are under the age of 14 and those unconscious are not allowed to use this product.
- People who are told by their physicians to have rest or who feel unwell.
- People whose bodies are wet are forbidden to use this product.
- This product has a hot surface. Persons insensitive to heat must pay attention when using this product.

4. Safety Precautions

- Check whether voltage is consistent with the specification of this product.
- Never insert or pull out the plug with a wet hand.
- Do not let water flow into this product to avoid electric shock or cause damage to this product.
- Do not pull the power cord when plugging or unplugging it. Rough handling is forbidden.
- Do not damage the wire or modify the circuit of this product.
- Do not clean live parts of this product with a wet cloth such as a power switch and plug.
- Be away from this product in case of power failure to avoid any injury if power is restored suddenly.

- Stop using this product at once while it works abnormal, and consult your local supplier.
- Stop using this product if you feel unwell, and consult your health care practitioner.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of this product by the personnel responsible for their safety. Children should be supervised to ensure that they do not play with this product.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified staff in order to avoid hazards.

5. Product Service and Maintenance

- This product should be maintained by the service center designated by the manufacturer only. No user should disassemble or maintain it without permission.
- Do not forget to turn off the main power switch after usage.
- Do not use this product if the power socket becomes loose.
- If this product will be left unused for a long period of time, it is necessary to roll up the power cord of this product and store this product in a dry and dust-free environment.
- Do not store this product at a high temperature or near open flame. Avoid prolonged exposure to direct sunshine.
- Please clean this product with dry cloth. Never use thinner, benzene or alcohol.
- The mechanical components of this product are specially designed and manufactured, so no special maintenance is needed.
- Do not use a sharp object to stab at this product.

- Do not roll or pull this product on any uneven ground. Instead, it should be lifted before moving.
- Please use this product intermittently. Do not keep it working continuously for a long period of time.

6. Solutions to Ordinary Malfunctions


- If the motor sounds during operation of this product, this is the normal operation sound.
- If the controller cannot work normally, check whether the plug and the power socket are connected reliably, and whether the power switch is turned on.
- If the rated working time is over, this product will automatically activate the power-off key; If this product keeps operating for a long period of time, the temperature protector will stop this product automatically. The product can be used again after half an hour.

Use safety warning




Warning

·When the footrest lifting, people should not apply pressure on the footrest to avoid the massage chair falling forward to damage the product or cause personal injuries.

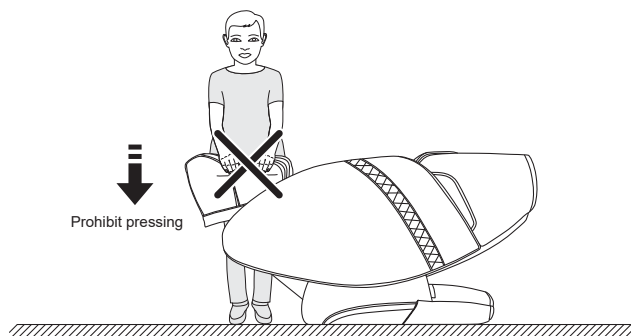

Warning

·Before sitting on the massage chair, Please make sure the massage hand cannot place in the seat position, so as to avoid the massage hand to damage the product or cause personal buttocks injuries.

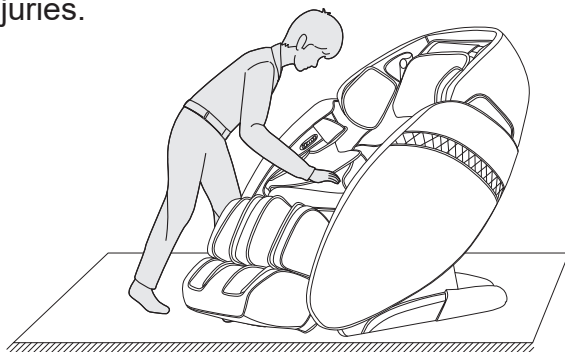


Use safety warning




Warning

·Do not strive to pull out the control cable or power cord during standby or power on-state to avoid product damaged or electrocution accidents. Advise you unplug the controller cable and power cord and put away after you use the chair.


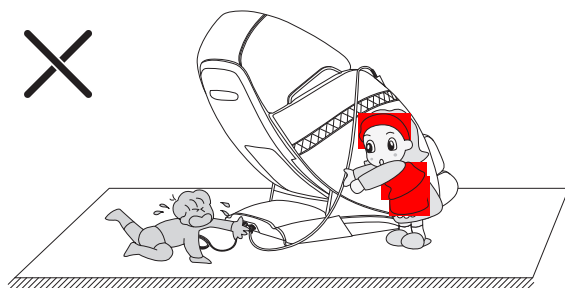


Warning

·When turning on the zero-gravity lying function, be sure to notice whether there are children or pets under the massage table under the bottom of the calf and the backrest to stay or play to avoid product damage and personal injury.

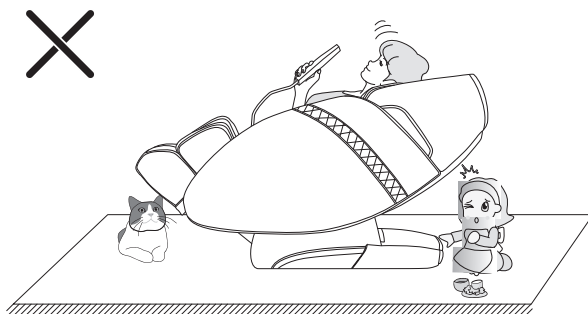

Name of components

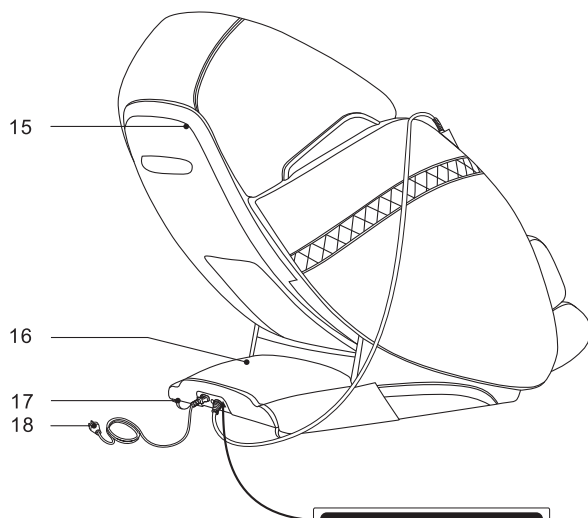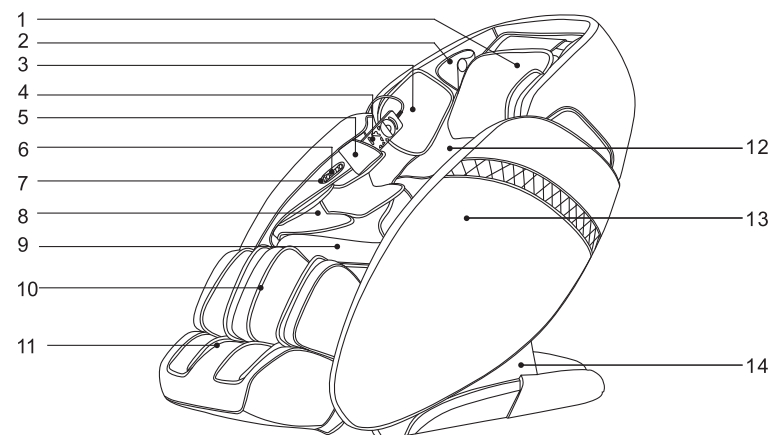

19 20 21 22

1. Head cushion
2. 3D digital sound and Negative oxygen ion generator
3. Upper arm capsule assembly
4. Hand controller
5. Hand-controller storage bag
6. Quick armrest
7. USB charging interface
8. Arm bag assembly
9. Seat cushion
10. Leg rest
11. Footrest
12. Back cushion
13. Armrest
14. Side cover
15. Backrest cover
16. Drive box cover
17. Mobile pulley
18. Power cord and plug
19. Power cord plug
20. Fuse box
21. Power switch
22. Controller cable plug

Function

- This product is designed with a set of massage machines that can move up and down, four-wheel drive, and static design.
- Set five simulated massage techniques: Shiatsu, kneading, tapping, knocking, kneading and tapping synchronously.
- Set shoulder automatic detection and positioning.
- Set characteristic automatic massage function: soreness improvement, comfort, relaxation, quick press mode, upper half and lower half automatic mode.
- Set with memory storage functions M1 and M2.
- Set the upper half manual massage function to five massage position selections: full body, partial body, fixed point, upper body, lower body. There are five kinds of simulation massages: Shiatsu, kneading, tapping, knocking, kneading and tapping synchronously. The speed of each massage method can be adjusted in three levels as a whole. In the fixed point and partial body state, the mechanical hand can adjust the position of the upper and lower positions; in the slap, acupressure, and percussion massages, the width of the massage ball has big, medium, and small gear selections).
- Pressure massage function: full body pressure, arm pressure (4 sacs built in the upper arm, 8 sacs built in the arm) leg pressure (16 sacs built in leg), a certain mode of pressure , Three-level intensity.
- The bottom of the leg is equipped with a bottom roller massage function, two pairs of mastoid massage the toe roots; scrape massage the feet and heels.
- Front-end hyperthermia function: collect plasma carbon fiber as far-infrared heat source.
- The small leg frame has double-section non-level telescopic adjustment function to adapt to different people's tibias.

Resting and picking sliding rail technology under the backrest frame keeps the backrest away from the wall always with zero space, saving space to the greatest extent.

- The function of adjusting the lifting and lowering of the leg frame, the backrest frame and the automatic lying mode.

- The backrest rail adopts curved curve rail technology, which completely fits the curve of the back of the body, and you can enjoy a close massage from the head to the legs.

- The upper arm has a built-in 3D digital sound, which can be connected through the Bluetooth function of a smart device (such as a mobile phone or tablet) for music playback.

- The left and right upper arms are equipped with negative ion generators.


- On the right hand, there are shortcut keys such as on/off key, zero weight key, auto key, linkage key, etc.

- The upper right hand armrests USB charging function.

- The headrest cushion is designed with a foldable design for picking two tibia sections (folded back into two layers). The number of sidewall layers can be determined according to your own needs to reduce the degree of massage of the neck and shoulders; unfold the headrest to extend to the top. Suitable for different people so that the eaves can be chosen freely.

Method of usage

Note: The specific display is subject to the actual product!

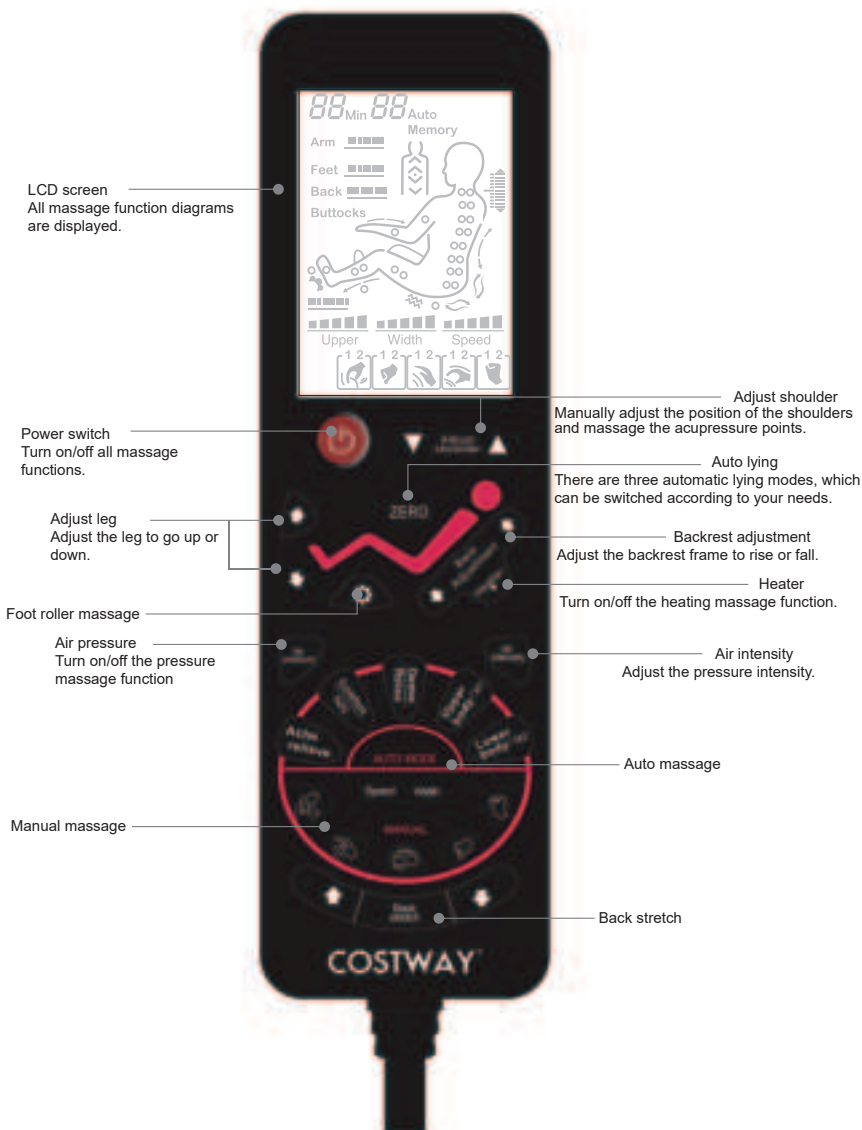

Method of usage


1.Power on the whole machine



2.Start massage

- 1). Press the power key to automatically lie down and start the massage.
- 2). Automatically carry out the detection of body shoulder position and massage points, and wait for the detection to be completed.
- 3). If there is a deviation between the detected shoulder position and the actual shoulder position, adjust the shoulder position up and down to the suitable position. There are a total of 10 shoulder positions. If there is no shoulder position adjustment within 10 seconds, the massage function will automatically start to work.

Key	Description	Display
	Adjust the position of the massage ball upwards to make it reach a suitable shoulder position.	
	Adjust the position of the massage ball downwards to make it reach a suitable shoulder position.	

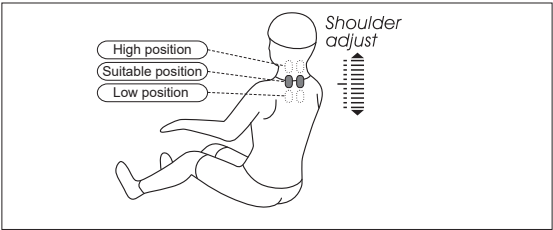

4).Select the massage function to start the massage.






·Memory function massage:

Select the upper body/M1, lower body/M2 mode, press for 3 seconds, enter the previous function M1 or M2, then it will return to the massage setting state that was previously stored in memory for massage.





















Function	Key	Display
Memory Massage	Upper body/M1	Memory 1
	Lower body/M2	Memory 2

Method of usage







Specially automatic massage

Display	Button	Massage features	Display
Specially automatic massage		Deep massage on the acupressure points can effectively relieve soreness.	Auto F1
		Loose body muscles.	Auto F2
		Promote fluid circulation. Quickly experience all massage effects (press for 3 seconds, switch to quick press).	Auto F3/Auto F0
		Upper body is the focus of massage.	Auto F4
		Lower body is the focus of massage.	Auto F5







Manual massage of the upper body

Function	Key	Adjustment of massage ball		Display
Massage techniques		Shiatsu: speed, width		
		Kneading: speed		
		Tapping: speed, width		
		Kneading and tapping: speed		
		Knocking: speed, width		
Speed	Speed	Three adjustable speed		 Speed
Width	Width	Three adjustable width		 Width
Back stretch		Fixed position massage.		 H0
		Small range partial massage back and forth.		 H1
		Full back-and-forth body massage.		 H2
		Upper body back-and-forth massage .		 H3
		Lower body back-and-forth massage.		 H4
		Massage position adjustment (The massage position can be adjusted at fixed or partial point).	Go up	
			Go down	






Air pressure massage

Function	Key	Description	Display
Air pressure		Three mode selection (full body pressure, arm pressure, leg pressure).	Arm  Feet 
Air intensity		Three adjustable intensity selections	Arm  Feet 






Other manual functions

Function	Key	Description	Display
Foot roller massage		Bottom foot roller massage switch and speed adjustment. Three speeds can be adjusted.	
Heater		Far-infrared hyperthermia on the back, it will be warm after 3 minutes of opening.	
NAI		Press for 3 seconds to turn on or off the negative oxygen ionization function.	

Other manual functions

Function	Key	Description
Adjust leg		Lower leg up: Press this key, the lower leg rises slowly, release it to stop.
		Lower leg down: Press and hold this key, the lower leg will slowly goes down, release it to stop.
Adjust backrest		Backrest up: Press this key, the backrest rises slowly, release it to stop.
		Backrest down: Press and hold this key to slowly lower the backrest, release it to stop.
Auto lying		Lying Mode: Each time you press the key, you can switch to an automatic Lying Mode. There are three modes in total, which can be switched cyclically.

Quick Armrest Key

Function	Key	Description
Switch		Press and hold this key to turn on or off the massage function.
Up		Press and hold this button to slowly raise the backrest, and at the same time, the lower leg support slowly lowers, release it to stop.
Zero Gravity		Each time you press the key, one automatic lying mode is switched, and three automatic lying modes can be adjusted.
Down		Press and hold this button to slowly lower the backrest, and at the same time the lower leg support slowly rises, release it to stop.
Auto mode	AUTO	Each time you press it, the automatic massage function switches.
USB		USB charging port can charge smart devices (like a mobile phone).



3. Turn off the power and end the massage

- 1). During the massage process, press the power switch button, immediately turn off all massage functions, the chair back and foot pads are reset, the same time can be stored by memory function. When the massage time is up, all massage functions will be turned off immediately, and the memory can be stored at the same time. The chair back and foot pads are not reset.
- 2).Memory function storage: the display screen Memory will flash and indicate, at this time, you can press the memory function key of M1 or M2 to store the massage selection statistics before the end of the massage.
- 3). Cut off the power supply of the whole machine. As the picture shows.





4. Armrest installation

- 1). Find the connecting plug corresponding to the armrest from the bottom of the seat frame, and pass it out from the middle of the rear end of the seat frame (Figure 1).
- 2). After passing the connecting plug from the middle of the back end of the seat frame, correspond to each pair of wiring plugs (connect according to the mark on the pair of wiring) (Figure 2).

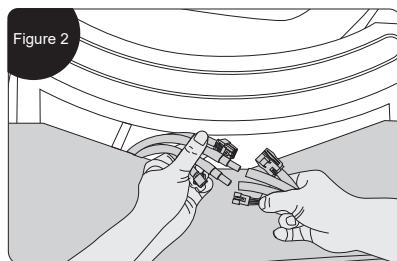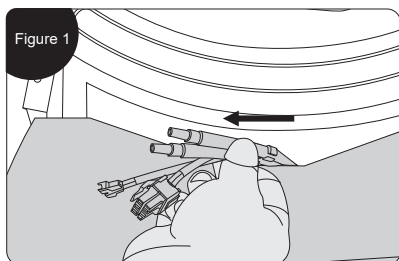



3). The joints drawn from the bottom of the seat frame are firmly inserted into the armrest joints, and the pipe joints are also inserted in place (Figure 3).

4). After connecting with the corresponding connecting wire, gently use your hand to follow the steel pipe in the middle of the steel frame of the seat frame and insert it into the bottom of the seat frame. Then pull the cloth cover well, and take care to prevent the tube from being broken (Figure 4).

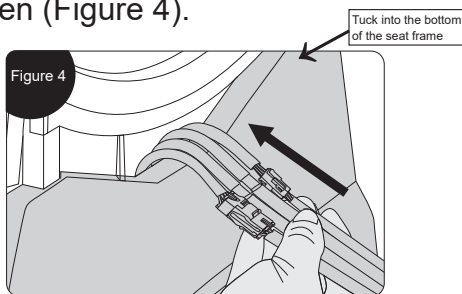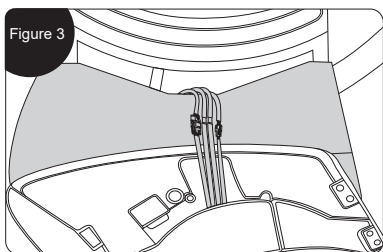



5). Hands hold the front and rear ends of the armrest, first put the rear end of the armrest close to the lower end of the capsule (Figure 5).

6). Then insert the limit shaft of the armrest into the limit block of the space capsule (Figure 6).

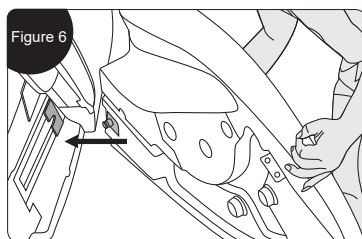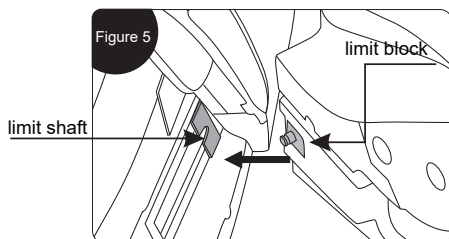



7). After inserting the rear end, move the front end of the armrest close to the steel frame and hook the front end of the armrest into the steel pipe of the seat frame (Figure 7).

8). After hanging up, press down on the armrest, press it in place, and then push up the front end of the armrest. Place the hook at the front end of the armrest close to the steel pipe, and then shake the armrest lightly to check whether the front and back ends of the armrest are in place (Figure 8).

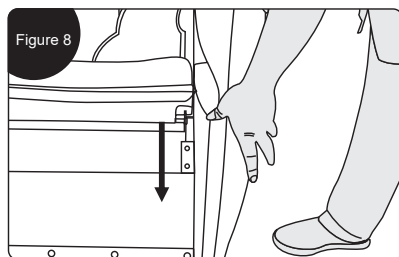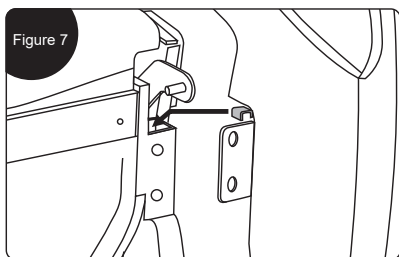


9). Unzip the upper arm sleeve, and then use the cross-head screw to fix cross-head screws through the hole of the space capsule. Tighten it with the armrest, and then zip the upper arm cover (Figure 9).

10). Align the mounting holes on the armrest, and then use the cross-head screws to tighten the cross-head screws and fix them on the armrest. Then the armrest is completed. The same installation procedure to the other armrest(Figure 10).

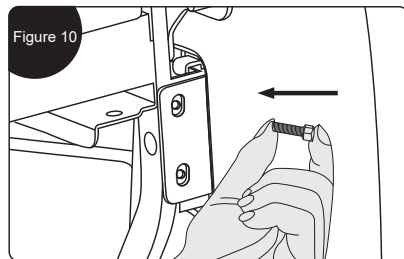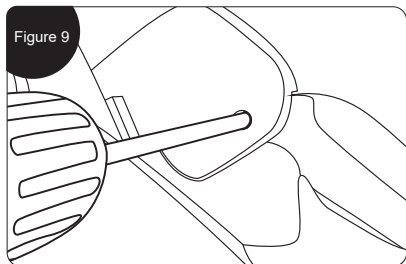


5.The Calf Installation

- 1). Put the rotating shaft on the fixed shaft of the calf first, and pay attention to the alignment of the hole position to facilitate the disassembly and assembly of the R-shaped pin (Figure 1).
- 2). Align one end of the lower leg with the fixed shaft and insert it (Figure 2).

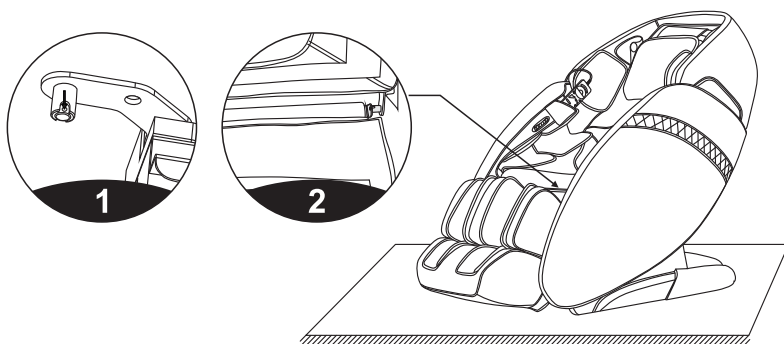


- 3). Insert the R-shaped pin, move the calf to the other side, and insert the R-shaped pin (Figure 3).
- 4). The installation of the calf is completed (Figure 4).

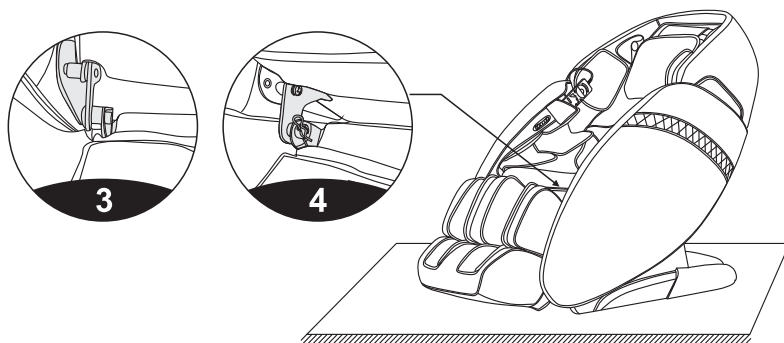


6. Head cushion and backrest pad's dismounting and use manual

·Using head cushions can reduce the kneading massage intensity on neck and shoulder, according to your needs to decide whether the head cushions is needed (recommend head cushions). Backrest cushion and backrest connected by zipper (1), head cushions and backrest pad connected by thread gluing (2).

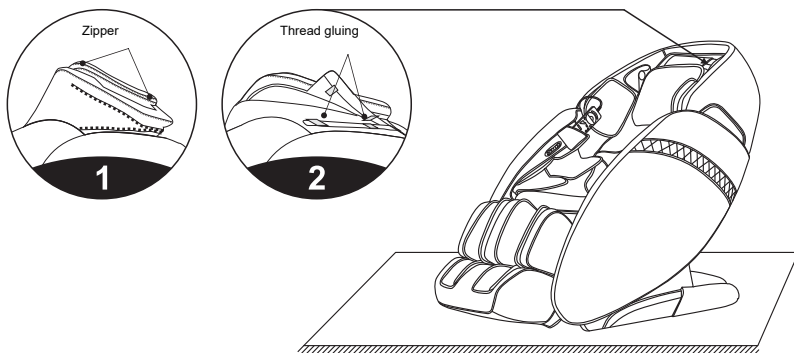

7. Floor protection

·Put the heavy massage chairs on the wood floor may damage the floor, so please place a carpet or other object to avoid this damage.

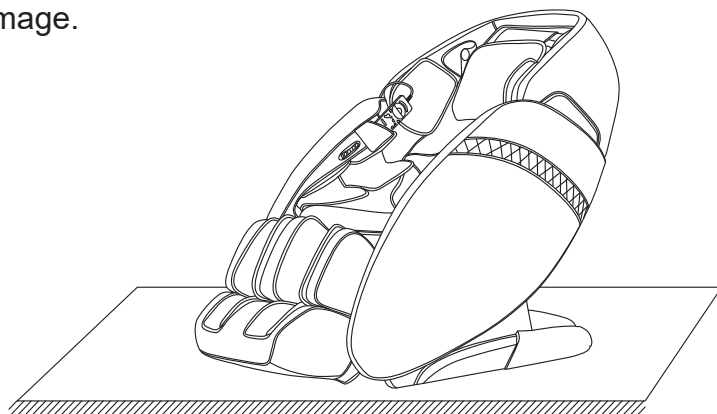


Caution: Do not move the chairs with its wheels on wood floor, rough ground or in a narrow space. Two people are required to lift the chair. During the lifting period, take the calf rest end sealing plate and backrest cover grooves as the force-bearing point (Please do not lift armrest directly.)

8.Method of movement

·Make sure that all wires are far above the ground, tilt the backrest backward to a certain degree (with the gravity center resting on the wheels), push the chair forward or backward with your hands and finally resume the chair to the normal position in a slow and gentle manner.

(Note: During movement you must turn off the power first and then unplug the power cord and the controller cord.)

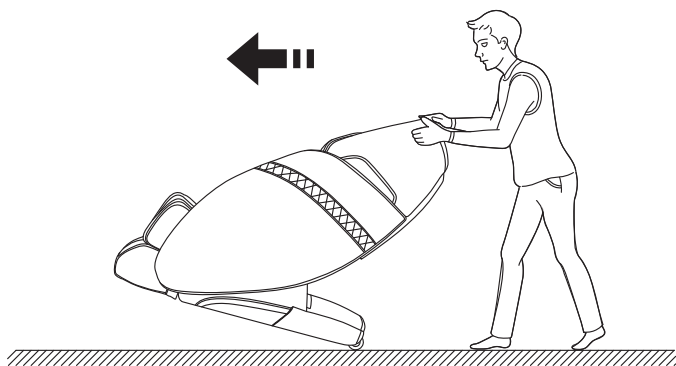

Warning : Massage chair rear wheels are only suitable for short distance movement for long distances, please use other assistive tools to move the massage chair.

Product specification

Model: JL10009
Name: Massage Chair
Rated voltage: 110-120V~ 60Hz
Rated power input:150W
Rated time: 20Min
Safety structure: Class I

Material introduction: PVC, PA, steel parts and electric & electron parts

MATERIAL	PU	LEATHER	CLOTH	WOOD

Features, maintenance and cleaning of microfiber leather

The full name of microfiber is "ultra fine fiber reinforced PU", also called refinish, and it belongs to a newly developed high-grade leather. It has excellent wear resistance, excellent permeability, chemical resistance, with softness and comfort, and strong flexibility. Microfiber is the best hand-made material, the texture is similar to the real one, and the hand feels soft.

It is abrasion resistant, cold resistant, permeable, texture resistant. With soft texture and beautiful appearance, it has become an ideal choice.

■Maintenance method:

- 1). Must be kept in a place where air is circulated.
- 2). NOT to be exposed to violent sunlight.
- 3). If the surface of the equipment is wet, it is necessary to clean the surface with a cloth immediately, and place it in a cool, dry place.
- 4). Smudges or other traces on the surface are evenly wiped on the surface of the smudges with a cloth, but water leakage must be avoided.
- 5). Regularly use a small amount of care solution to wipe the surface to regain its luster.

■Cleaning method:

- 1). Clean with water and detergent, avoid gasoline scrubbing.
- 2). Cannot be washed.
- 3). It can only be washed in water, and the temperature of water washing cannot exceed 40 degrees/ 104 Fahrenheit degree.
- 4). Can not be exposed to sunlight.
- 5). Do not touch some organic solvents.
- 6). PU need to be stored in a bag, and cannot be folded.

Maintenance and cleaning of PU synthetic leather

PU synthetic leather is made of polyurethane. Compared with other materials, it has better acid and alkali resistance, heat resistance, and sunlight resistance features. While also Avoid placing it in dust, high temperature, high humidity, and low temperature. Strong light exposure and environment containing acid and alkali chemicals, which makes it easy to crack and accelerates the conversion and dissolution.

■Cleaning for PU synthetic leather:

- 1). Do not use organic reagents, grease solutions and compounds, especially strong solvents. Otherwise it is easy to corrode the PU surface;
- 2). Do not use clean water or washing powder to scrub the PU surface, as it is easy to produce cracks;
- 3). The pH value should be selected: the PH value = 5~7 range, no abrasives, and environmentally friendly cleaners to clean the PU surface;
- 4). For the dirty PU surface, wipe the dirt with a soft cloth, and avoid cleaning it with a brush.

■Maintenance for PU synthetic leather:

- 1). To ensure the indoor communication, too dry or damp will accelerate deterioration;
- 2). Do not place the leather in a place where the sun can reach it directly or where the air conditioner blows it directly, otherwise it will damage the floor. Direct sunlight will make the color fade;
- 3). High temperature and humidity will cause the chemical react with the leather, which is easy to produce peculiar smell. In this regard, wipe with a slightly damp soft cloth frequently;
- 4). When wiping the sofa, do not use alkaline cleaning fluid. Because it is acidic treatment during preparation, alkalinity will reduce the flexibility of the paper and cause damages and cracks during long-term use.

Welcome to visit our website and purchase our quality products!

With your inspiring rating, COSTWAY will be more consistent to offer you
EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office: Fontana, California

UK office: Ipswich



- * Reward Points
- * Exclusive Customer Service
- * Personalized Recommendations
- * Permanent Shopping Cart
- * Order History

5 Star Rating



We would like to extend our heartfelt thanks to
all of our customers for taking time to assemble
this product and giving us valuable feedbacks.

THANK
you
😊

