



Per-Amplifer and Subwoofer Output (5.1 channels)

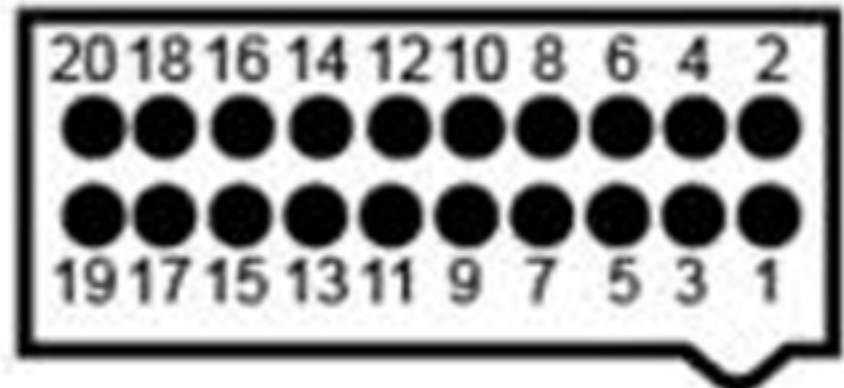

20Pin RCA Cable

- Pin 1 Amplifer turn-on(+)
- Pin 2 Ground
- Pin 3 AUX Right Audio Input
- Pin 4 Front Left Ouput(Pre-Amp)
- Pin 5 AUX Left Audio Input
- Pin 6 Front Right Ouput(Pre-Amp)
- Pin 7 No Use
- Pin 9 No Use
- Pin 10 Ground
- Pin 11 No Use
- Pin 12 Ground
- Pin 13 No Use
- Pin 14 No Use
- Pin 15 No Use
- Pin 16 Subwoofer Output
- Pin 17 No Use
- Pin 18 AUX Video Input
- Pin 19 External Micphone(-)
- Pin 20 External Micphone(+)

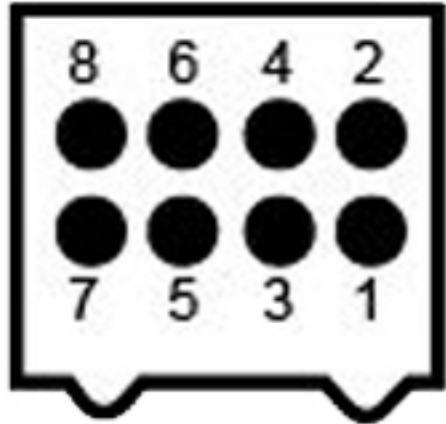

8Pin



- Pin 1 Ground
- Pin 2 No Use
- Pin 3 Rear left output(Pre-Amp)
- Pin 4 Rear right output(Pre-Amp)
- Pin 5 No Use
- Pin 6 Center Output(Pre-Amp)
- Pin 7 Canbus Decoder TX
- Pin 8 Canbus Decoder RX



Subwoofer



Aftermarket Amplifier

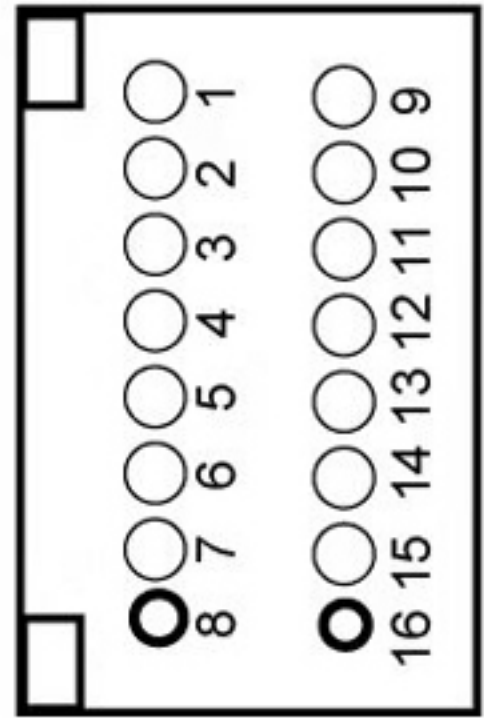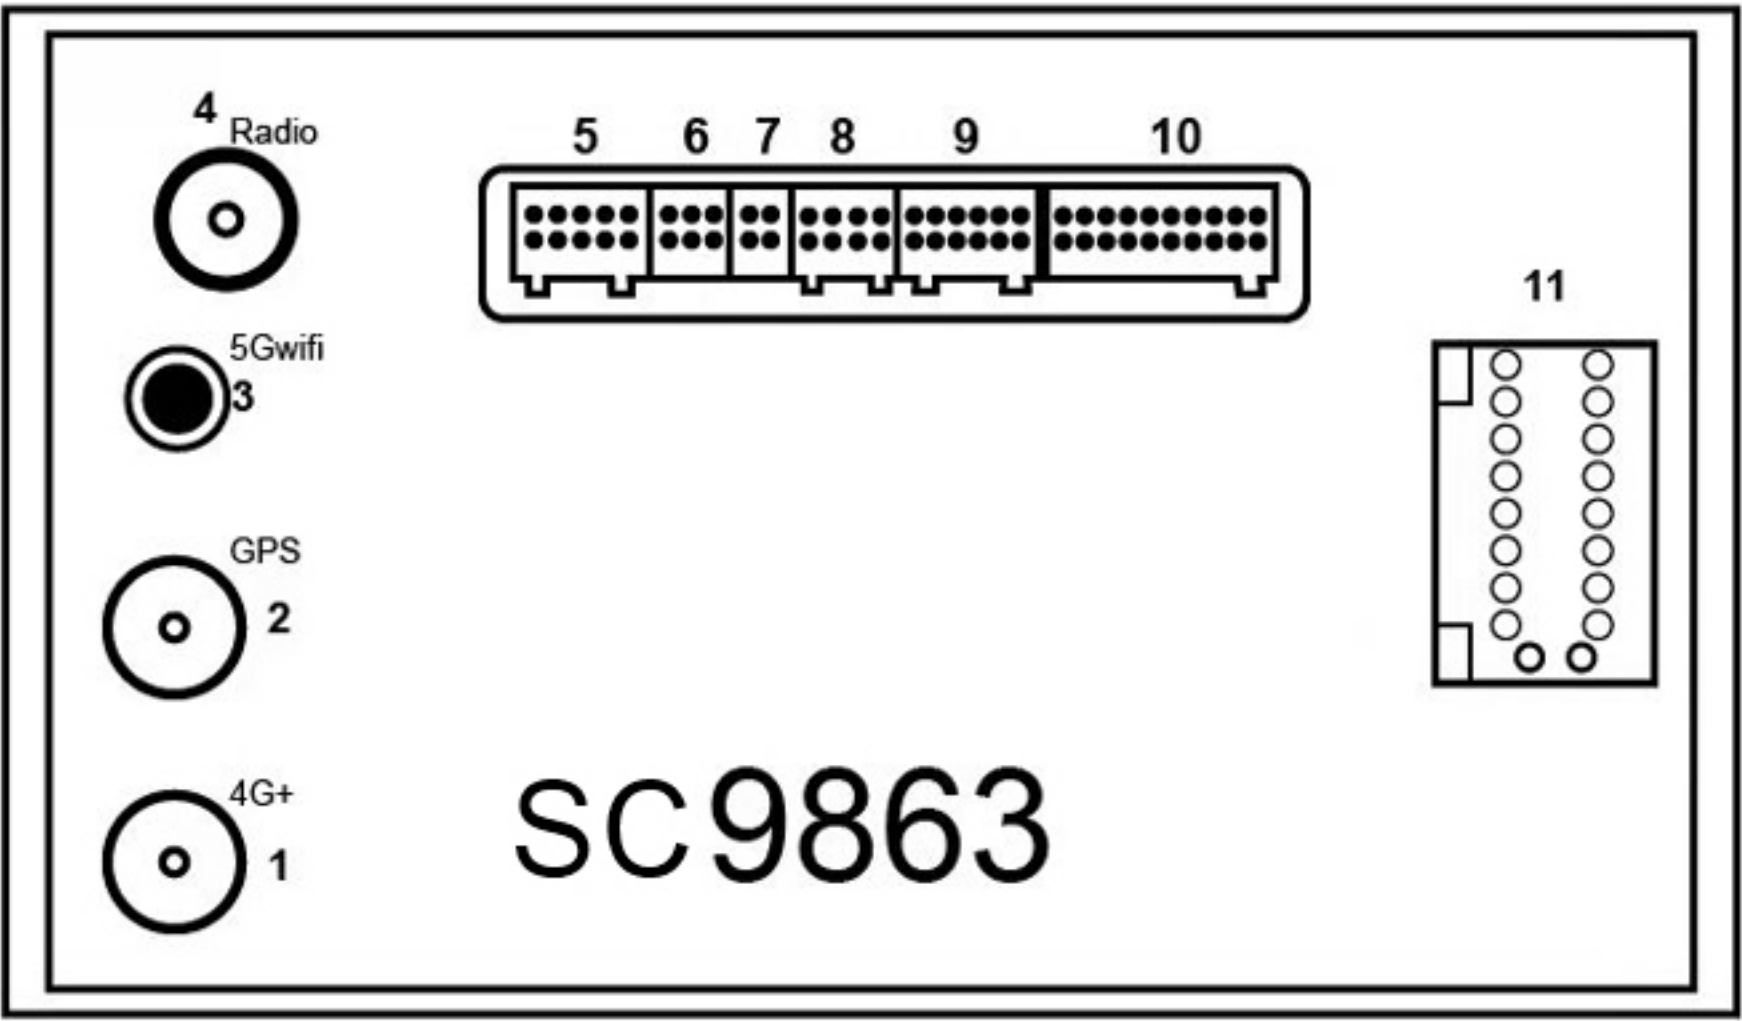

11

- Pin 1 [White] Front Left (+)
- Pin 2 [White black] Front Left (-)
- Pin 3 [Grey] Front Right (+)
- Pin 4 [Grey black] Front Right (-)
- Pin 5 [Orange black] steering Wheel key (+)
- Pin 6 [Pink] Rear Camera (+)
- Pin 7 [Red] Accessory/Lgnition(+)
- Pin 8 [Black] Chassis Ground(+)
- Pin 9 [Purple] Rear Right(+)
- Pin 10 [Purple black] Rear Right(-)
- Pin 11 [Green] Rear Left (+)
- Pin 12 [Green black] Rear Left (-)
- Pin 13 [Blue] Power Antenna(+)
- Pin 14 [Brown black] Steering Wheel Key#(+)
- Pin 15 [Orange] Dimmer/Illumination(+)
- Pin 16 [Yellow] Constant/Battery Power(+)

	1	4G Antenna
	2	GPS Antenna
	3	5G Wi-Fi Antenna
	4	Radio Antenna
	5	Pin 1 No Use Pin 2 Bluetooth Antenna Pin 3 No Use Pin 4 No Use Pin 5 No Use Pin 6 Rear Camera Video Input Pin 7 Power Rear Camera(+12V) Pin 8 Ground Pin 9 Parking brake(-) Pin 10 WIFI Antenna
	6	USB
	7	USB (CarPlay)
	8	Pin 1 Ground Pin 2 No Use Pin 3 Rear left output(Pre-Amp) Pin 4 Rear right output(Pre-Amp) Pin 5 No Use Pin 6 Center Output(Pre-Amp) Pin 7 Canbus Decoder TX Pin 8 Canbus Decoder RX
	10	Pin 1 Amplifer turn-on(+) Pin 2 Ground Pin 3 AUX Right Audio Input Pin 4 Front Left Output (Pre-Amp) Pin 5 AUX Left Audio Input Pin 6 Front Right Output (Pre-Amp) Pin 7 4G SIM Card Pin 8 Ground Pin 9 4G SIM Card Pin 10 Ground Pin 11 4G SIM Card Pin 12 Ground Pin 13 4G SIM Card Pin 14 No Use Pin 15 4G SIM Card Pin 16 Subwoofer Output Pin 17 No Use Pin 18 AUX Video Input Pin 19 External Micphone(-) Pin 20 External Micphone(+)