



i-Size Car Seat MBCS80

Designed for children of
height from 76 - 150cm

GB Instruction Manual

ES Manual de instrucciones



IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

Welcome to the familiie

Your trust in our product means the world to us, and we're thrilled to be a part of your parenting journey. Our team has worked tirelessly to ensure that this product provides comfort, safety, and style for you and your little one. We're confident it will exceed your expectations. Should you have any questions or require assistance in the future, please don't hesitate to reach out. Thank you for choosing My Babiie; we wish you and your family countless wonderful journeys ahead.

Get to know your Car Seat

Scan the QR code below on your camera app to be linked off to our page to get all the information you need for using your car seat.



Warranty

We provide a 1 year warranty against manufacturing or material defects.

The warranty period is effective from the day of purchase and applicable to the UK and Ireland.

The Warranty does not cover:

- Natural signs of wear and damage resulting from excessive stress.
- Damage resulting from inappropriate or improper use.
- Visit our website mybabiie.com/guarantee to see full Terms & Conditions.

What is covered by the Warranty?

Fabric: All of our fabrics meet very high requirements with regards to colour fastness when exposed to UV radiation. Nevertheless, all fabrics fade when exposed to prolonged UV radiation. This is not a material defect, but rather a normal sign of wear which is not covered by the Warranty.

Buckles: Buckle malfunction is often due to accumulations of dirt and dust which may stop it from working properly. If this happens, please firstly check if you can clean by yourself without damaging the installation. Please contact your retailer directly in the event of a warranty claim. We will give you the advice and support you need. When processing claims, product-specific depreciation rates will be applied. Please refer to our General Terms and Conditions which are available from your retailer.

To read more about your guarantee, please visit mybabiie.com/guarantee.

Our guarantee is provided by My Babiie Retail Ltd, Registered address: Suite 188, Stockiie Business Centre, Unit A, St. James Business Park, Henwood Ind. Estate, Henwood, Ashford TN24 8DH

Your statutory rights are not affected by the guarantee.

Registering your Warranty

To register your warranty please visit www.mybabiie.com/warranties

Registering for your product warranty is important because it provides proof of purchase and allows you to claim repairs or replacements if your product develops a fault. It will also help us contact you in the event of a product issue that you may need to be made aware of.

Problems or Questions

If you have any questions about your product then please drop us an email at info@mybabiie.com and we will get back to you as soon as possible. Alternatively, you can chat to us on our Live Support Chat on our website mybabiie.com or contact us via our social media channels.

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

i-Size ECRS Notice

This is an i-Size Enhanced Child Restraint System. It is approved according to UN Regulation No. 129, for use in, i-Size compatible vehicle seating positions as indicated by vehicle manufacturers in the vehicle users' manual.

If in doubt, consult either the Enhanced Child Restraint System manufacturer or the retailer.

"i-Size booster seat" notice

This is a i-Size booster seat Enhanced Child Restraint System. It is approved according to UN Regulation No. 129, for use primarily in "i-Size seating positions" as indicated by vehicle manufacturers in the vehicle user's manual.

If in doubt, consult either the Enhanced Child Restraint System manufacturer or the retailer.


IMPORTANT

DO NOT use before the child's age exceeds 15 months. (Refer to instructions)


IMPORTANT

- This product can be forward-facing used by 5-point safety system for children with a height of 76-105cm (Weight: 9-18kg), using ISOFIX+Top tether to fix the child restraint system.
- This product can also be forward-facing used for children with a height of 100-150cm (Weight: 15-36kg), using adult three-point belt to fix the child restraint system, or using ISOFIX and adult three-point belt together to fix the child restraint system.
- Do not use any load bearing contact points other than those described in the instructions and marked in the child restraint when in 100-150cm.
- In order to keep for future reference, the instruction manual should be stored in the back bag of the headrest cloth cover.
- Do not use this child seat at home. It has not been designed for home use and should only be used in your car.
- For the reason of safety, the child seat must be fixed inside the vehicle using ISOFIX anchorages even if you do not put your child inside the child seat.
- The rigid items and plastic parts of a child seat shall be so located and installed that they are not liable, during everyday use of the vehicle to become trapped by a moveable seat or in a door of the vehicle.
- Any straps holding the restraint to the vehicle should be tight.
- Any straps restraining the child should be adjusted to the child's body.
- Straps should not be twisted.
- Ensure that any lap strap is worn low down, so that the pelvis is firmly engaged, shall be stressed ;
- The device should be replaced when it has been subject to violent stresses in an accident.
- It's dangerous to make any alterations or additions to the device without the approval of the Type Approval Authority, also dangerous not to follow closely the installation instructions provided by the manufacturer.
- When the chair is not provided with a textile cover, the chair should be kept away from sunlight, otherwise it may be too hot for the child's skin.
- Don't leave your child in the device unattended.
- Any luggage or other object liable to cause injuries in the event of a collision shall be properly secured.
- The ECRS shall not be used without the cover.
- The seat cover should not be replaced with any other than the one recommended by the manufacturer, because the cover constitutes an integral part of the restraint performance.
- The instructions shall be retained on the device for its life period or in the vehicle handbook in the case of built-in restraints.
- The user shall also be referred to the vehicle manufacturer's handbook.
- Never use a second-hand product , as you can never be certain what was happened to it.
- Do not allow food or drink in or near the car seat as debris and dirt ingress can affect the critical safety performance of the harness system.

Know your car seat

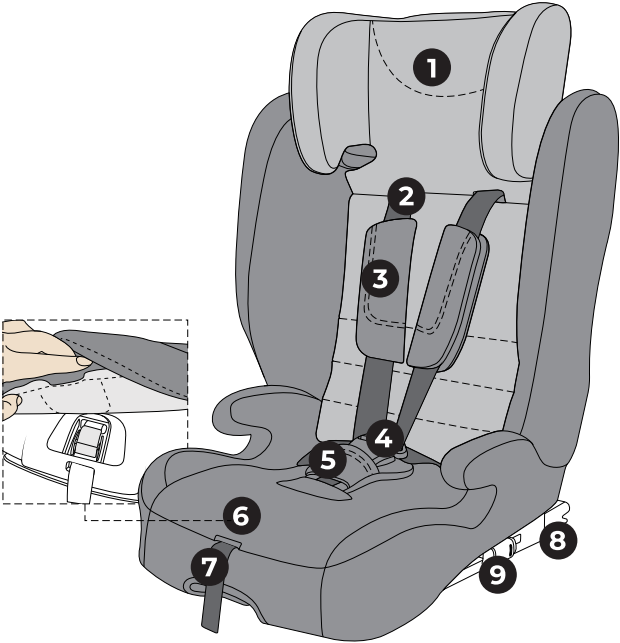


- 1 Headrest
- 2 Shoulder strap
- 3 Shoulder pads
- 4 Buckle
- 5 Crotch pad
- 6 Adjuster button
- 7 Harness adjuster strap
- 8 ISOFIX attachment
- 9 ISOFIX release button

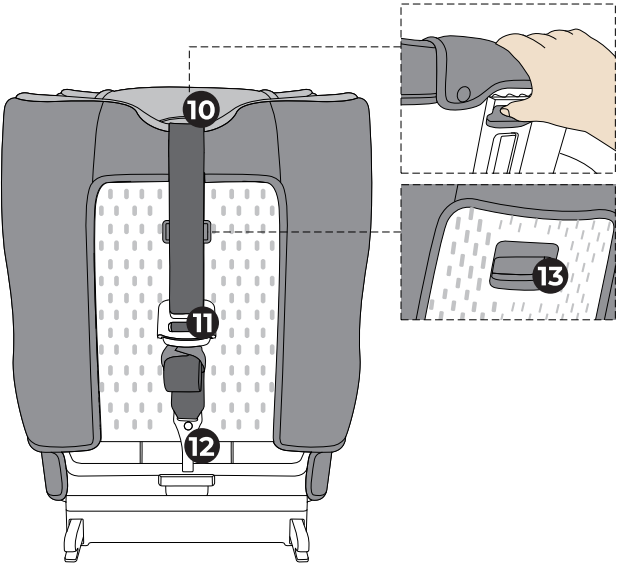

- 10 Headrest adjustment handle
- 11 Top tether release button
- 12 Top tether hook
- 13 The backrest button

1 Install positions of the child seat in vehicle

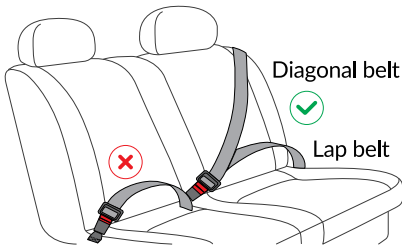


✓ Proper installation

✗ Improper installation

Only suitable if the approved vehicles are fitted with 3 point safety-belt, approved to UN/ECE Regulation No.16 or other equivalent standards.


?1 Not to use rearward-facing in seating positions where an active frontal airbag is installed.

?2 Only use on this seat if a lap and diagonal seat belt is fitted.

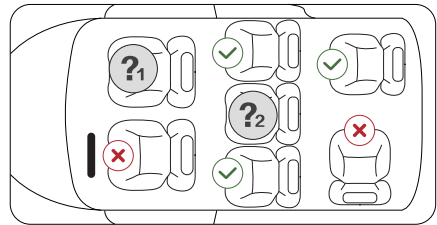

2 Adjust the headrest

As shown in the picture, you can adjust the headrest ① up and down by pulling on the headrest adjustment handle ⑩, and adjust the headrest to a position suitable for the child's head.

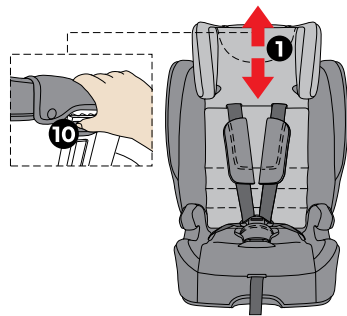

3 Checking the shoulder strap height

Always check that the shoulder straps are at the correct height for your child. The child's shoulder straps should always be threaded through the slots in the cover and seat shell that are closest to the top of your child's shoulders.



✗ too low




✗ too high



✓ slightly higher


4 Usage of buckle

- Get the left and the right pieces of the buckle together.
- Insert both buckle pieces into the slot of the buckle. When you hear a "click," it indicates that the buckle is securely fastened. Pull on the buckle pieces to confirm that it is locked properly.

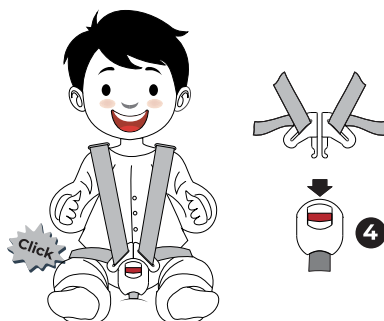

To release the safety belts, press the red button, and the buckle pieces will pop up

5 Adjust the length of the harness

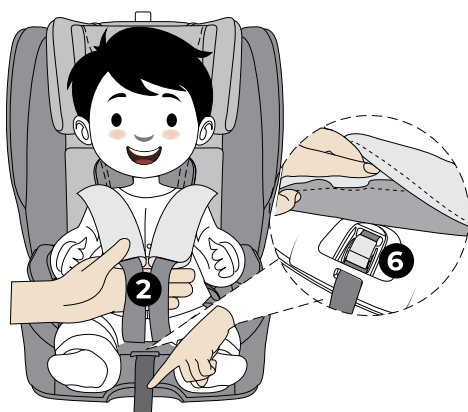

Loosen the shoulder strap 2

The shoulder strap can be slackened by pressing the adjuster (under the seat cover 6) on the front of the seat. Press down the adjuster as you grip the two shoulder straps with your another hand. Pull the harness towards you to loosen the shoulder strap.



Tighten the shoulder strap


Pull the shoulder strap upward to remove the slack from the lap sections of the harness then pull the front stretch belt until the harness adjuster strap 7 is fully tightened.

The harness should be adjusted as tightly as possible without causing discomfort to your child. A loose harness can be dangerous. Check the harness adjuster and tighten each time when the child is placed in the seat.


6 Adjust the ISOFIX attachments

The ISOFIX attachments can be adjusted to multiple positions to accommodate different ISOFIX **8** low anchorages extending from the car seat.


Press down the release button **9** to extend the ISOFIX attachments on both sides to their longest position. Snap the ISOFIX into the ISOFIX anchor points, ensuring you hear a "click" and the ISOFIX latching indicator turns GREEN.

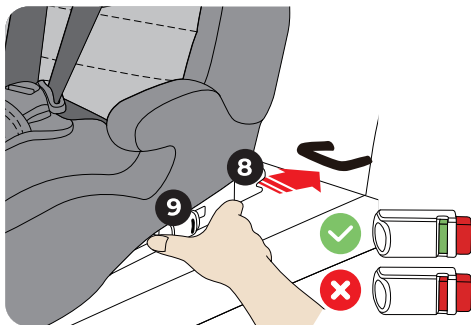




7 Adjust top tether

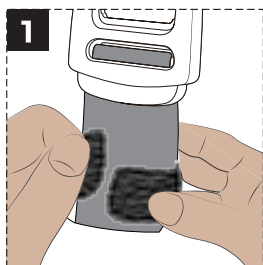

Firstly, undo the storage Velcro.

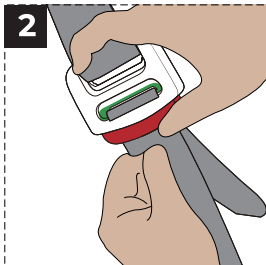

Secondly, press and hold the button of the top tether adjuster (see 2) and release the top tether to the appropriate length (see 3).

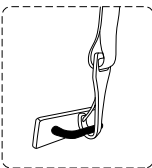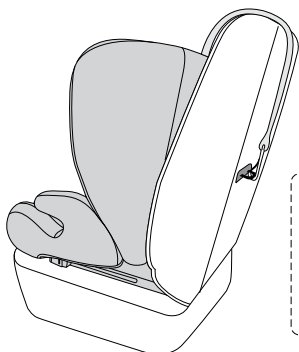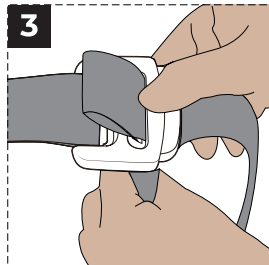


Thirdly, hook the top tether to the designated top tether anchorage as recommended in the vehicle user manual. Finally, tighten the top tether until the adjustment indicator turns green.

8 Headrest opening / folding method


Press and hold the side button on top of the headrest to open the folding headrest on that side. Repeat the process for the other side.

Note: Ensure you press the button all the way down to fully open the folding headrest.

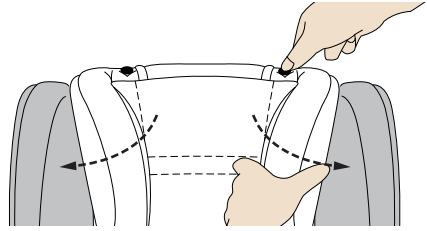


Press and hold the side button on top of the headrest to fold it inward. Repeat the process for the other side.

Note: Ensure you press the button all the way down to fold the headrest properly.

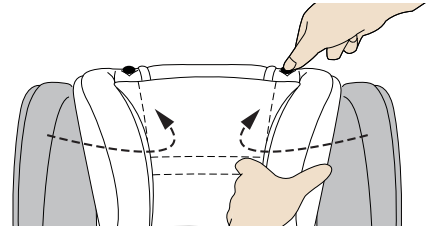


Note: When opening or folding the headrest, please press and hold the headrest button in position, and it will naturally open and close. Do not use force to operate.


9 Adjust seat backrest

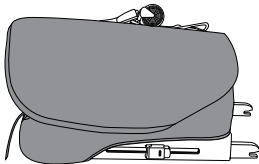

Folded State

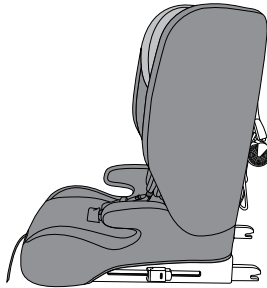


Upright State

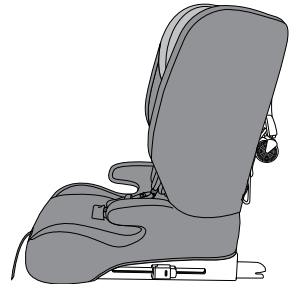




Incline State

Pull the backrest button **13** behind the seat to adjust it to three positions. The folded position is for storage, while the upright and reclined positions are suitable for children to sit comfortably.

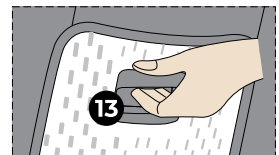

10 Remove objects when in use for 100-150cm


Unfasten the buckle **4** and shoulder straps **2** on both sides, and store the buckle in the seat groove **A**, and then pull out the seat belt and pull out the buckle insert; Pull out the strap with shoulder straps from the top and store it properly.

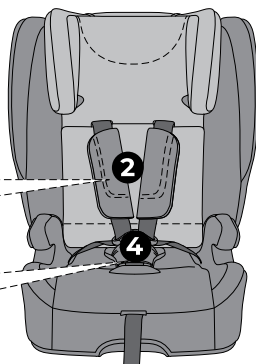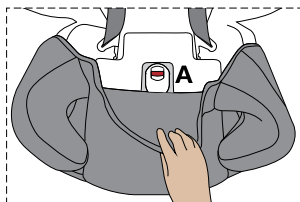

Finally, adjust the fabric cover neatly before using the seat.


11 If the seat is folded when you open the package, please install the seat according to the operating instructions.

Step1

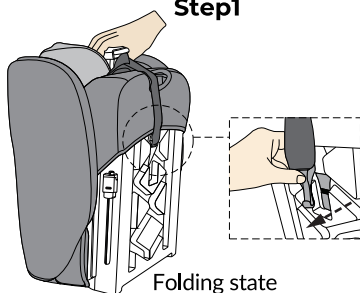

Folding state

Step2

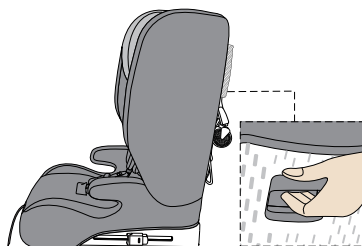


Step 1: First, undo the top tether hook from the bottom of the seat.

Step 2: Then pull the adjuster behind the seat back, open the backrest to an upright position until you hear a "click" sound.

Step 3: Press and hold the side button on top of the headrest to open the folding headrest on that side. Repeat the process for the other side.

Note: Make sure to press the button **all** the way down to fully open the folding headrest.

If you need to store the child seat, please follow the above steps in reverse.

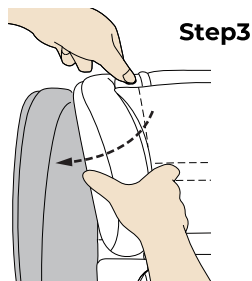

Step3

Installation


Installed forward-facing (Height: 76-105cm)



Usage :
ISOFIX+Top tether


Step 1

Push the ISOFIX connectors **8** on both sides of the base into the ISOFIX anchor points until they securely click into place. When properly attached, the ISOFIX release button **9** will turn green, indicating a secure connection.

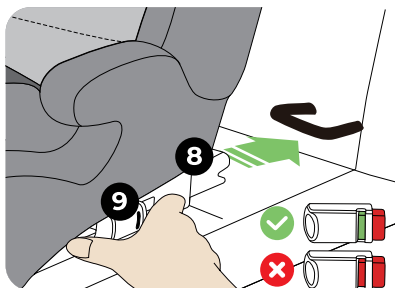

Step 2

Pull out the top tether strap to a suitable length, and then fix the top tether hook **12** to the top tether anchorage of the vehicle seat.

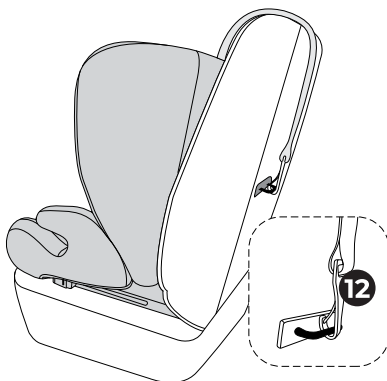

Step 3

Put the child in the safety seat, and lock the buckle **4**, tighten the front tether **7**.



Installation

Installed forward-facing (Height: 100-150cm)



Usage :

① ISOFIX + 3 point belt

Step 1


Push the ISOFIX connectors **8** on both sides of the base into the ISOFIX anchor points until they securely click into place. When properly attached, the ISOFIX release button **9** will turn green, indicating a secure connection.

Step 2


Put the child into the safety seat, adjust the headrest up and down according to the height of the child.

Step 3

Pull out the adult 3-point belt, clip the vehicle shoulder belt into the belt guide hook of the headrest, and then clip vehicle shoulder and lap belt together into the belt guide slot on the side of the seat, finally lock the buckle.

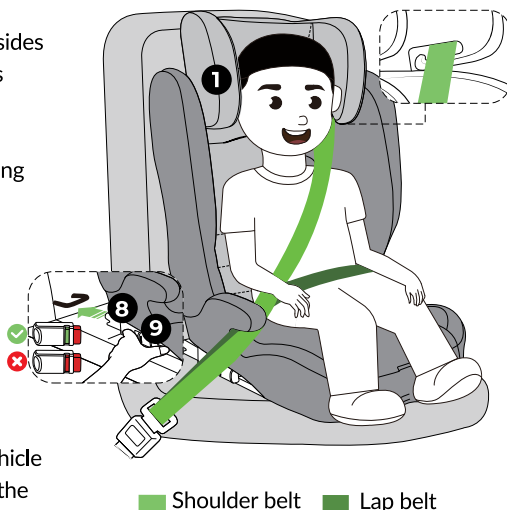

The lap belt on the other side should also pass under the armrest.

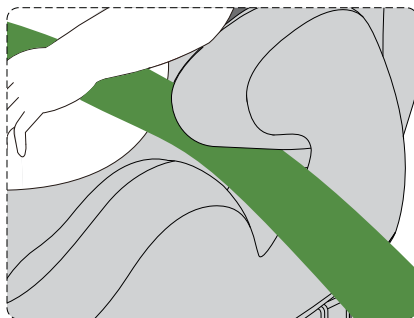

Installation

Installed forward-facing (Height: 100-150cm)



Usage :

② only 3 point belt



Step 1

Put the child into the safety seat, adjust the headrest **1** up and down according to the height of the child.



Step 2

Pull out the adult 3-point belt, clip the vehicle shoulder belt into the belt guide hook of the headrest, and then clip vehicle shoulder and lap belt together into the belt guide slot on the side of the seat, finally lock the buckle.

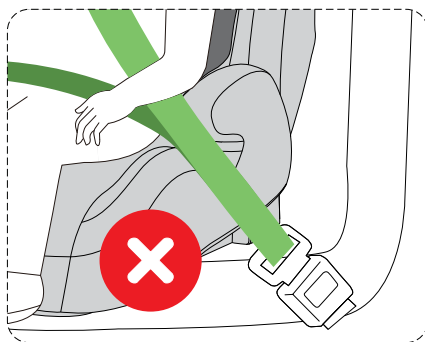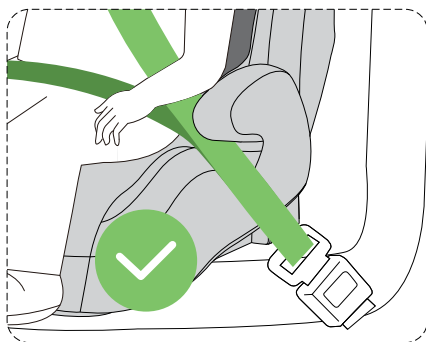

When in use, ensure that the buckle of the adult 3-point belt does not interfere with the primary load-bearing contact point of the child restraint system. If unsure, please contact the manufacturer.

Cleaning

Please be sure to use only original My Babiie replacement seat covers, as the seat cover is important to the proper functioning of the system. Replacement seat covers are available from My Babiie.



The child seat must not be used without the seat cover.

- The cover can be removed and hand washed at 30°C with a mild detergent. Please observe the instructions on the washing label of the cover. The colours of the cover may fade if washed at more than 30°C.
Never tumble dry in an electric clothes dryer (the fabric may separate from the padding).
- The plastic parts can be cleaned using soapy water. Do not use harsh cleaning agents (such as solvents).
- The harness can be removed and washed in lukewarm soapy water.

Caution! Never remove the buckle from the straps.

IMPORTANTE, CONSÉRVELO PARA REFERENCIA FUTURA: LEA DETENIDAMENTE

Aviso de i-Size ECRS

Este es un sistema de retención infantil mejorado i-Size. Está aprobado de acuerdo con el Reglamento n.º 129 de las Naciones Unidas para su uso en asientos de vehículos compatibles con i-Size, tal como lo indican los fabricantes de vehículos en el manual del usuario del vehículo.

En caso de duda, consulte al fabricante del sistema de retención infantil mejorado o al minorista.

Aviso sobre el asiento elevador i-Size

Este es un sistema de retención infantil mejorado con asiento elevador i-Size. Está aprobado de acuerdo con el Reglamento n.º 129 de las Naciones Unidas, para su uso principalmente en "posiciones de asiento i-Size", tal como lo indican los fabricantes de vehículos en el manual del usuario del vehículo.

En caso de duda, consulte al fabricante del sistema de retención infantil mejorado o al minorista.


IMPORTANTE

NO lo use antes de que el niño tenga más de 15 meses. (Consulte las instrucciones)


IMPORTANTE

- Este producto se puede utilizar en sentido de la marcha con un sistema de seguridad de 5 puntos para niños con una altura de 76-105 cm (peso: 9-18 kg), utilizando ISOFIX + anclaje superior para fijar el sistema de retención infantil.
- Este producto también se puede utilizar en sentido de la marcha para niños con una altura de 100-150 cm (peso: 15-36 kg), utilizando un cinturón de tres puntos para adultos para fijar el sistema de retención infantil, o utilizando ISOFIX y un cinturón de tres puntos para adultos juntos para fijar el sistema de retención infantil.
- No utilice ningún punto de contacto de carga que no sea el descrito en las instrucciones y marcado en el sistema de retención infantil cuando esté a 100-150 cm.
- Para conservarlo como referencia futura, el manual de instrucciones debe guardarse en la bolsa trasera de la funda de tela del reposacabezas.
- No utilice este asiento para niños en casa. No ha sido diseñado para uso doméstico y solo debe utilizarse en su coche.
- Por razones de seguridad, el asiento infantil debe fijarse dentro del vehículo mediante anclajes ISOFIX incluso si no coloca al niño dentro del asiento infantil.
- Los elementos rígidos y las piezas de plástico de un asiento infantil deben ubicarse e instalarse de manera que no puedan quedar atrapados, durante el uso diario del vehículo, en un asiento móvil o en una puerta del vehículo.
- Las correas que sujetan el dispositivo de retención al vehículo deben estar tensas.
- Las correas que sujetan al niño deben ajustarse al cuerpo del niño.
- Las correas no deben estar torcidas.
- Asegúrese de que las correas de regazo se usen bajas, de modo que la pelvis quede firmemente enganchada, y que no estén tensas;
- El dispositivo debe reemplazarse cuando haya sido sometido a tensiones violentas en un accidente.
- Es peligroso realizar modificaciones o adiciones al dispositivo sin la aprobación de la Autoridad de Homologación de Tipo, así como no seguir de cerca las instrucciones de instalación proporcionadas por el fabricante.
- Cuando la silla no esté provista de una funda textil, debe mantenerse alejada de la luz solar, ya que puede resultar demasiado caliente para la piel del niño.
- No deje a su hijo en el dispositivo sin supervisión.
- Todo equipaje u otro objeto que pueda causar lesiones en caso de colisión debe estar debidamente asegurado.
- El ECRS no debe utilizarse sin la funda.
- La funda del asiento no debe sustituirse por ninguna otra que no sea la recomendada por el fabricante, ya que la funda constituye una parte integral del rendimiento del sistema de retención.
- Las instrucciones deben conservarse en el dispositivo durante su vida útil o en el manual del vehículo en el caso de sistemas de retención incorporados.
- También se debe remitir al usuario al manual del fabricante del vehículo.
- Nunca utilice un producto de segunda mano, ya que nunca puede estar seguro de lo que le sucedió.
- No permita que entren alimentos o bebidas en el asiento del automóvil o cerca de él, ya que la entrada de residuos y suciedad puede afectar al rendimiento de seguridad crítico del sistema de arnés.

Conozca su asiento de automóvil

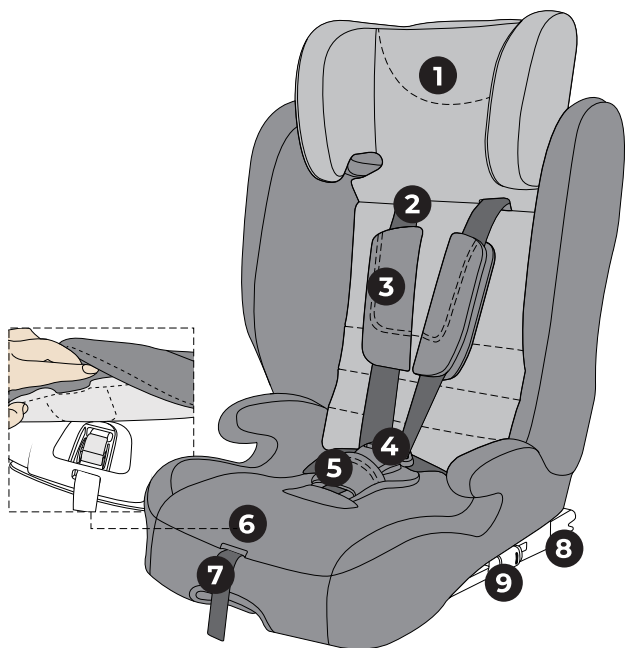


- ❶ Reposacabezas
- ❷ Correa para el hombro
- ❸ Hombreras
- ❹ Hebilla
- ❺ Almohadilla para la entrepierna
- ❻ Botón de ajuste
- ❼ Correa de ajuste del arnés
- ❽ Fijación ISOFIX
- ❾ Botón de liberación ISOFIX

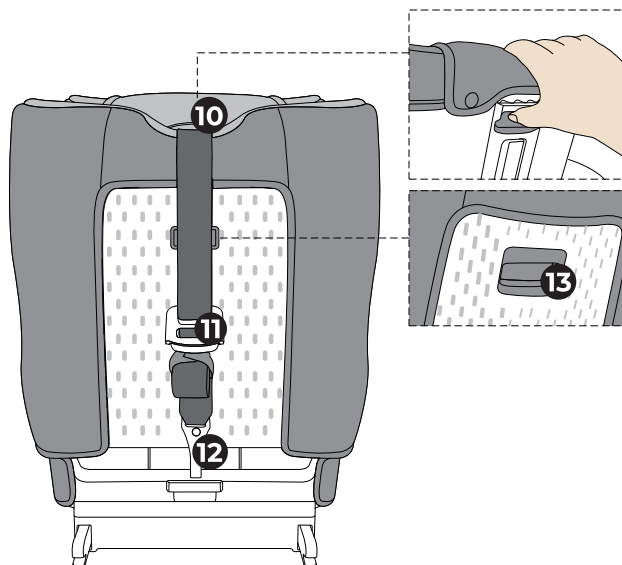

- ❿ Manija de ajuste del reposacabezas
- ⓫ Botón de liberación del anclaje superior
- ⓬ Gancho del anclaje superior
- ⓭ Botón del respaldo

1 Posiciones de instalación del asiento para niños en el vehículo

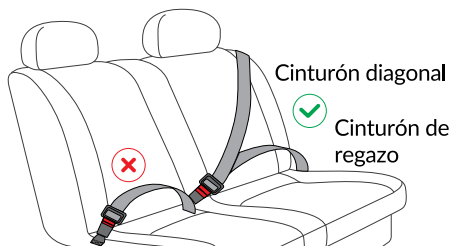

Cinturón diagonal



Cinturón de regazo


✓ Adecuada instalación

✗ Instalación incorrecta

Solo apto si los vehículos homologados están equipados con cinturones de seguridad de 3 puntos, homologados según el Reglamento UNECE nº 16 u otras normas equivalentes.


?1 No se debe utilizar en posición orientada hacia atrás en asientos donde esté instalado un airbag frontal activo.

?2 Utilízelo únicamente en este asiento si está instalado un cinturón de seguridad de regazo y diagonal.

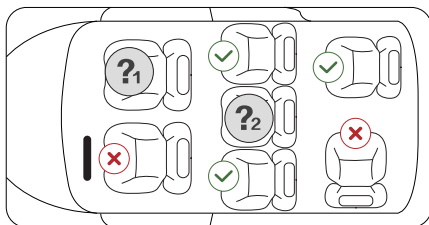

2 Ajuste el reposacabezas

Como se muestra en la imagen, puede ajustar el reposacabezas hacia arriba y hacia abajo tirando de la pestaña de ajuste del reposacabezas y ajustar el reposacabezas a una posición adecuada para la cabeza del niño.

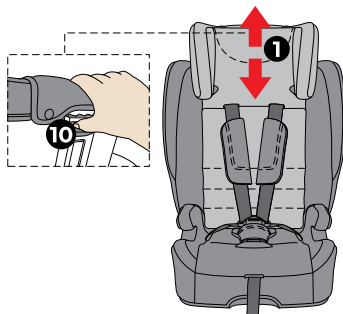


3 Comprobación de la altura de la correa del hombro

Compruebe siempre que las correas de los hombros estén a la altura correcta para su hijo. Las correas de los hombros del niño siempre deben pasar por las ranuras de la funda y la carcasa del asiento que estén más cerca de la parte superior de los hombros de su hijo.




4 Uso de la hebilla

- Junta las piezas izquierda y derecha de la hebilla.
- Inserte ambas piezas de la hebilla en la ranura de la hebilla. Cuando escuche un "clic", esto indicará que la hebilla está bien abrochada. Tire de las piezas de la hebilla para confirmar que está bien abrochada.

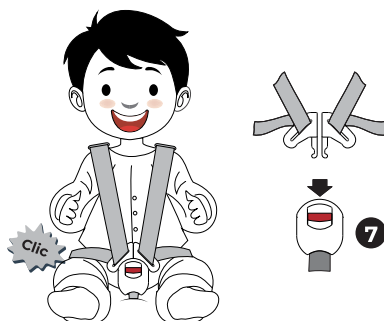

Para soltar los cinturones de seguridad, presione el botón rojo y las piezas de la hebilla saltarán.

5 Ajuste la longitud del arnés

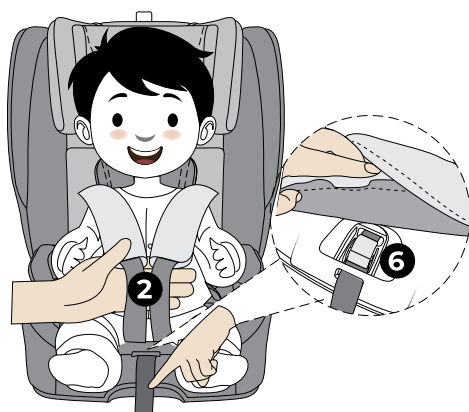

Afloje la correa del hombro 2

La correa para el hombro se puede aflojar presionando el ajustador (debajo de la funda del asiento) en la parte delantera del asiento. Presione el ajustador hacia abajo mientras sujeta las dos correas para el hombro con la otra mano. Tire del arnés hacia usted para aflojar la correa para el hombro.



Apriete la correa del hombro

Tire de la correa del hombro hacia arriba para quitar la holgura de las secciones de regazo del arnés y luego tire del cinturón elástico delantero hasta que la correa de ajuste del arnés esté completamente apretada.


El arnés debe ajustarse lo más firmemente posible sin causarle molestias al niño.

Un arnés suelto puede ser peligroso. Revise el ajustador del arnés y ajústelo cada vez que coloque al niño en el asiento.


6 Ajuste de los anclajes ISOFIX

Los anclajes ISOFIX se pueden ajustar a múltiples posiciones para adaptarse a diferentes anclajes bajos ISOFIX que se extienden desde el asiento del automóvil.


Presione el botón de liberación para extender los anclajes ISOFIX en ambos lados hasta su posición más larga. Coloque el ISOFIX en los puntos de anclaje ISOFIX, asegurándose de escuchar un "clic" y de que el indicador de enganche ISOFIX se vuelva VERDE.

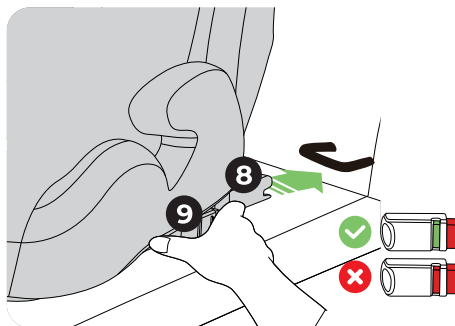



7 Ajuste de la correa superior

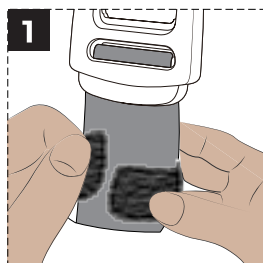

En primer lugar, deshaga el velcro de almacenamiento.

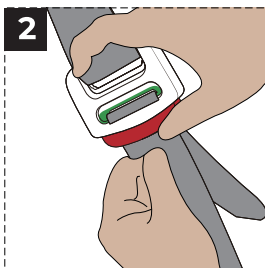


En segundo lugar, mantenga presionado el botón del ajustador de la correa superior (ver 2) y suelte la correa superior hasta la longitud adecuada (ver 3).

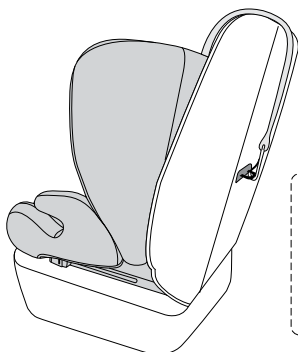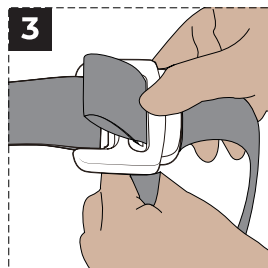


En tercer lugar, enganche el anclaje superior al anclaje designado para el anclaje superior, tal como se recomienda en el manual del usuario del vehículo. Por último, ajuste el anclaje superior hasta que el indicador de ajuste se vuelva verde.

8 Método de apertura/plegado del reposacabezas

Mantenga presionado el botón lateral en la parte superior del reposacabezas para abrir el reposacabezas plegable de ese lado. Repita el proceso para el otro lado.
Nota: Asegúrese de presionar el botón hasta el tope para abrir completamente el reposacabezas plegable.

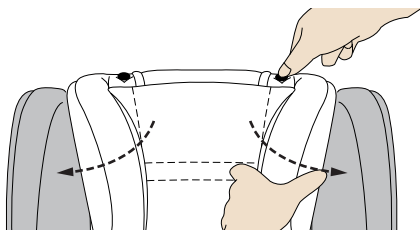


Mantenga presionado el botón lateral en la parte superior del apoyacabezas para plegarlo hacia adentro. Repita el proceso para el otro lado. Nota: Asegúrese de presionar el botón hasta el tope para plegar el reposacabezas correctamente.

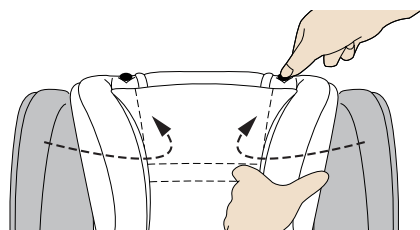


Nota: Al abrir o plegar el reposacabezas, mantenga presionado el botón del reposacabezas en la posición y se abrirá y cerrará de manera natural. No use la fuerza para operar.


9 Ajustar el respaldo del asiento

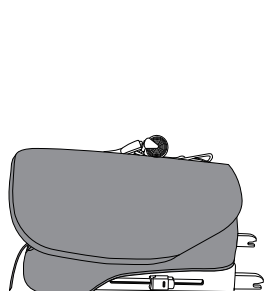

Estado plegado

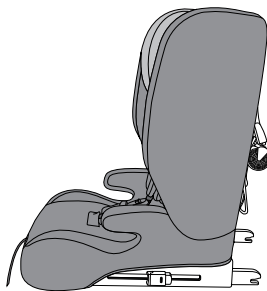


Estado vertical

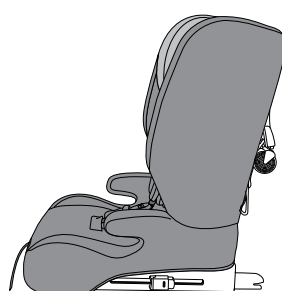




Estado de inclinación

Tire del botón del respaldo detrás del asiento para ajustarlo en tres posiciones. La posición plegada es para guardarlo, mientras que las posiciones erguida y reclinada son adecuadas para que los niños se sienten cómodamente.

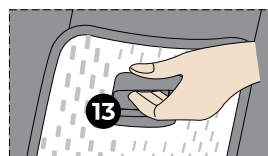

10 Retire los objetos cuando esté en uso durante 100-150 cm.


Desabroche la hebilla y las correas de los hombros en ambos lados y guarde la hebilla en la ranura del asiento A. Luego, saque el cinturón de seguridad y saque el inserto de la hebilla. Saque la correa con las correas de los hombros desde la parte superior y guárdela adecuadamente.

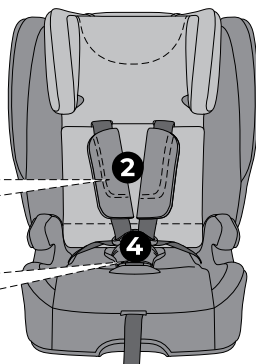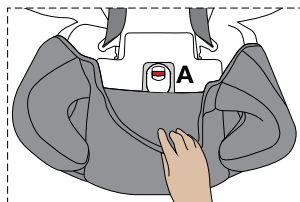

Por último, ajuste cuidadosamente la funda de tela antes de utilizar el asiento.


11 Si el asiento está plegado al abrir el paquete, instálelo de acuerdo con las instrucciones de funcionamiento.

Paso 1

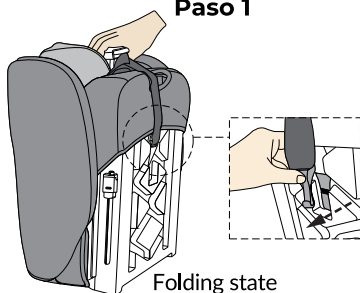

Folding state

Paso 2

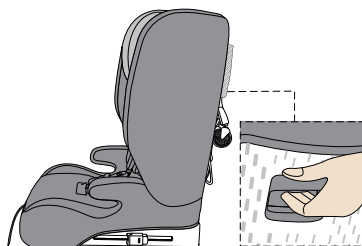


Paso 1: Primero, deshaga el gancho de sujeción superior de la parte inferior del asiento.

Paso 2: Luego, tire del ajustador que se encuentra detrás del respaldo del asiento y abra el respaldo hasta que quede en posición vertical hasta que escuche un "clic".

Paso 3: Mantenga presionado el botón lateral en la parte superior del reposacabezas para abrir el reposacabezas plegable de ese lado. Repita el proceso para el otro lado.
Nota: Asegúrese de presionar el botón hasta el fondo para abrir por completo el reposacabezas plegable.

Si necesita guardar el asiento para niños, siga los pasos anteriores en orden inverso.

Paso 3

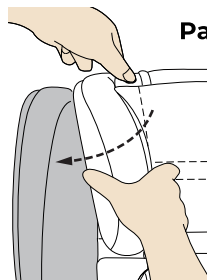

Instalación


Instalada mirando hacia adelante (Altura: 76-105cm)



Uso:
ISOFIX+anclaje superior


Paso 1

Presione los conectores ISOFIX de ambos lados de la base en los puntos de anclaje ISOFIX hasta que encajen en su lugar. Cuando estén correctamente fijados, el botón de liberación ISOFIX se pondrá verde, lo que indicará una conexión segura.

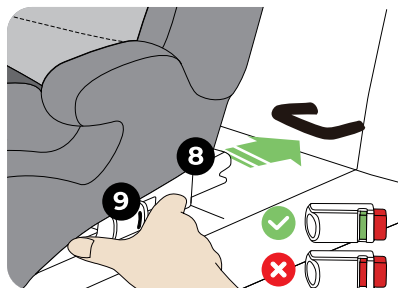

Paso 2

Tire de la correa de sujeción superior hasta obtener una longitud adecuada y luego fije el gancho de sujeción superior al anclaje de sujeción superior del asiento del vehículo.

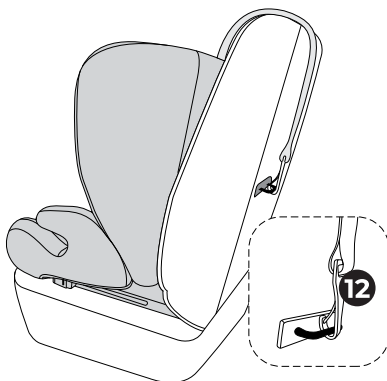

Paso 3

Coloque al niño en el asiento de seguridad, bloquee la hebilla y apriete la correa delantera.



Instalado en el sentido de la marcha

(Altura: 100-150 cm)



Uso:

① ISOFIX + cinturón de 3 puntos

Paso 1

Presione los conectores ISOFIX de ambos lados de la base en los puntos de anclaje ISOFIX hasta que encajen en su lugar. Cuando estén correctamente fijados, el botón de liberación ISOFIX se pondrá verde, lo que indicará una conexión segura.


Paso 2

Coloque al niño en el asiento de seguridad, ajuste el reposacabezas hacia arriba y hacia abajo según la altura del niño.


Paso 3

Saque el cinturón de 3 puntos para adultos, enganche el cinturón de hombro del vehículo en el gancho de la guía del cinturón del apoyacabezas y luego enganche el cinturón de hombro y de regazo del vehículo juntos en la ranura de la guía del cinturón en el costado del asiento, finalmente bloquee la hebilla.

El cinturón de regazo del otro lado también debe pasar por debajo del apoyabrazos.

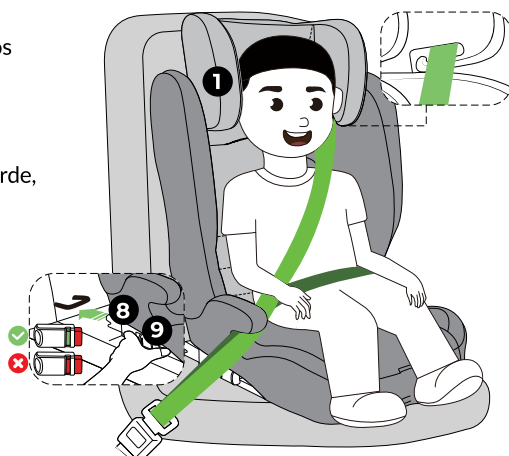

■ Cinturón de hombro
■ Cinturón de regazo

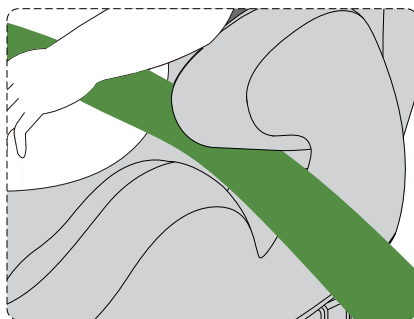

Instalación

Instalado en el sentido de la marcha

(Altura: 100-150 cm)



Uso:



② Solo cinturón de 3 puntos

Paso 1

Coloque al niño en el asiento de seguridad, ajuste el reposacabezas hacia arriba y hacia abajo según la altura del niño.

Paso 2

Saque el cinturón de 3 puntos para adultos, enganche el cinturón de hombro del vehículo en el gancho de la guía del cinturón del apoyacabezas y luego enganche el cinturón de hombro y de regazo del vehículo juntos en la ranura de la guía del cinturón en el costado del asiento, finalmente bloquee la hebilla.

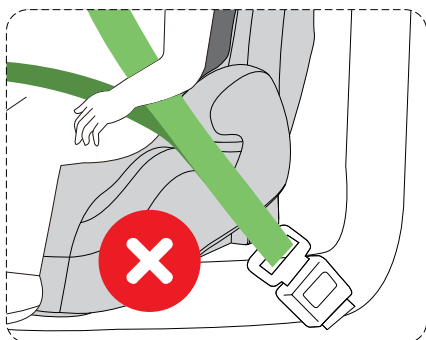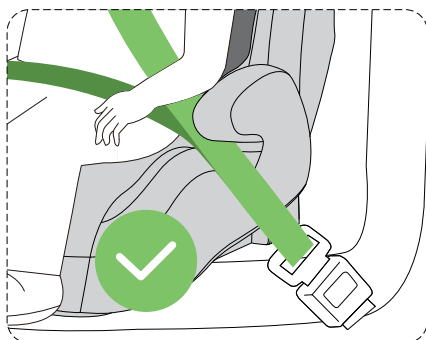

Al utilizar el cinturón de seguridad de 3 puntos para adultos, asegúrese de que la hebilla no interfiera con el punto de contacto principal de soporte de carga del sistema de retención infantil. Si no está seguro, comuníquese con el fabricante.

Limpieza


Asegúrese de utilizar únicamente fundas de asiento de repuesto originales de My Babiie, ya que la funda del asiento es importante para el correcto funcionamiento del sistema. My Babiie dispone de fundas de asiento de repuesto.



El asiento para niños no debe utilizarse sin la funda del asiento.

- La funda se puede quitar y lavar a mano a 30°C con un detergente suave. Siga las instrucciones en la etiqueta de lavado de la funda. los colores de La funda puede desteñirse si se lava a más de 30°C. Nunca seque en secadora eléctrica (la tela podría separarse de la ropa). relleno).
- Las piezas de plástico se pueden limpiar con agua y jabón. No utilice limpieza dura agentes (como disolventes).
- El arnés se puede quitar y lavar con agua tibia y jabón.

¡Precaución! Nunca retire la hebilla de las correas.

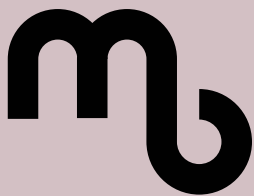

Register your product



www.mybabiie.com/warranties



www.mybabiie.com/registro

In the first instance of needing assistance please
contact your original place of purchase.

This product qualifies for 12 month warranty
when registered through our website

mybabiie.com



My Babiie



@MyBabiieOfficial



My Babiie



@mybabiie_official