

FUJIFILM

DIGITAL CAMERA

X100VI

New Features Guide

Version 1.10

Features added or changed as a result of firmware updates may no longer match the descriptions in the documentation supplied with this product. Visit our website for information on the updates available for different products:

<https://fujifilm-x.com/support/download/firmware/cameras/>

Contents

X100VI firmware version 1.10 adds or updates the features listed below. For the latest manuals, visit the following website.

<https://fujifilm-dsc.com/en/manual/>

No.	Description	X100VI 	See 	Ver.
1	The connection method with Frame.io has changed. A NETWORK SETTING item has been added to the network/USB settings menu for this purpose.	252 264	1 4 6	1.10
2	RAW has been added under Bluetooth/SMARTPHONE SETTING > SELECT FILE TYPE in the network/USB setting menu.	263	3	1.10

Changes and Additions

Changes and additions are as follows.

X100VI Owner's Manual: 252

Ver. 1.10

Uploading Files to Frame.io

Upload files to Frame.io.

- Confirm that the camera clock is set to the correct time and date before proceeding.


Connecting via Wireless LAN

Connect to Frame.io via wireless LAN.

- 1 Select **NETWORK SETTING** in the network/USB setting menu.


- 2 Select **NOT CREATED**.

You can also select or edit existing network.

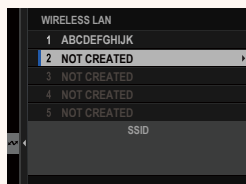

- 3 Select **ACCESS POINT SETTING**.

Select **IP ADDRESS SETTING** to choose the IP address manually as described in "Connecting Using an IP Address".

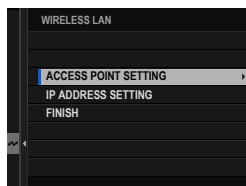

- 4 Select **SIMPLE SETUP**.

To select a wireless LAN router or enter the router SSID manually, choose **MANUAL SETUP**.




- 5 Follow the on-screen instructions to ready the wireless LAN router.


 You also have the option of connecting using a PIN. Display the camera PIN by pressing the focus stick (focus lever) up and enter it on the wireless LAN router.



- 6 Press **MENU/OK** when setup is complete.

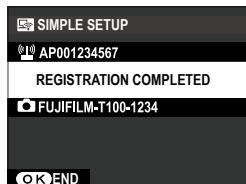


- 7 Select **Frame.io Camera to Cloud > CONNECT** in the network/USB settings menu.

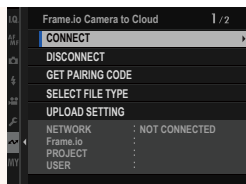

- 8 Once connected, select **GET PAIRING CODE**.

A pairing code will be displayed.

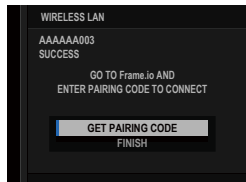

- 9 Sign in to Frame.io from a computer or other device and enter the pairing code displayed on the camera.
- 10 Upload files to Frame.io.

SELECT FILE TYPE

Choose the types of files uploaded. You can select or deselect each file type individually.

Options		
JPEG	RAW	HEIF

Adjust settings for use with Frame.io.

CONNECT

You can connect to the Frame.io project via wireless LAN.

 If you have not registered the network, register the network in the **NETWORK SETTING** before proceeding.

DISCONNECT

End the connection to the Frame.io project and terminate the network connection.

GET PAIRING CODE

A pairing code will be displayed to connect to the Frame.io project. Enter this code on the Frame.io screen accessed from your personal computer or tablet to connect Frame.io and the camera.

SELECT FILE TYPE

Choose the types of files uploaded to Frame.io. You can select or deselect each file type individually.

Options		
MOV/MP4	JPEG	RAW
HEIF	TIFF	

UPLOAD SETTING

Adjust settings Frame.io upload settings.

SELECT IMAGE & TRANSFER

Mark picture for upload.

AUTO IMAGE TRANSFER ORDER

Select **ON** to automatically mark photos and movies for upload as they are taken.

Options	
ON	OFF

TRANSFER/SUSPEND

Pause or resume upload to Frame.io.

Options	
TRANSFER	SUSPEND

IMAGE TRANSFER WHILE POWER OFF

If **ON** is selected, upload of files to Frame.io will continue while the camera is off.

Options	
ON	OFF

ROOT CERTIFICATE

Copy a root certificate to the camera for use with Frame.io.

Option	Description
LOAD FROM STORAGE MEDIA	Copy the root certificate from the camera memory card.
DELETE	Delete the current root certificate.

UPLOAD STATUS

View Frame.io upload status.

TRANSFER QUEUE

View a list of the files awaiting upload.

RESET TRANSFER ORDER

Remove upload marking from all files selected for upload to Frame.io.

X100VI Owner's Manual:  **264**

Ver. 1.10

NETWORK SETTING

Adjust settings for connection to wireless networks. Select a registered network and then select **EDIT** to change the selected network setting.

Option	Description
ACCESS POINT SETTING	• SIMPLE SETUP: Connect to an access point using simple settings. • MANUAL SETUP: Manually adjust settings for connection to a wireless network. Choose the network from a list (SELECT FROM NETWORK LIST) or enter the name manually (ENTER SSID).
IP ADDRESS SETTING	• AUTO: The IP address is assigned automatically. • MANUAL: Assign an IP address manually. Manually choose the IP address (IP ADDRESS), subnet mask (SUBNET MASK), and gateway address (GATEWAY ADDRESS).

[illegible]

FUJIFILM

FUJIFILM Corporation

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN

<https://fujifilm-x.com>

