



126T00

Illustrated Parts List

Model Series

126T00

TYPE NUMBERS
0004 through 3842.

TABLE OF CONTENTS

Air Cleaner	4
Blower Housing/Shrouds	6
Camshaft	2
Carburetor	3
Controls	5
Crankshaft	2
Cylinder	2
Electric Starter	7
Electrical	5
Engine Sump	2
Exhaust System	4
Flywheel	7
Flywheel Brake	5
Fuel Supply	3
Governor Spring	5
Ignition	5
Kits/Gaskets	2 & 3
Lubrication	2
Piston Group	2
Rewind Starter	7
Valves	2

BRIGGS & STRATTON



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

1319 WARNING LABEL



REQUIRED when replacing parts with warning labels affixed.


1058 OPERATOR'S MANUAL










1330 REPAIR MANUAL




1019 LABEL KIT

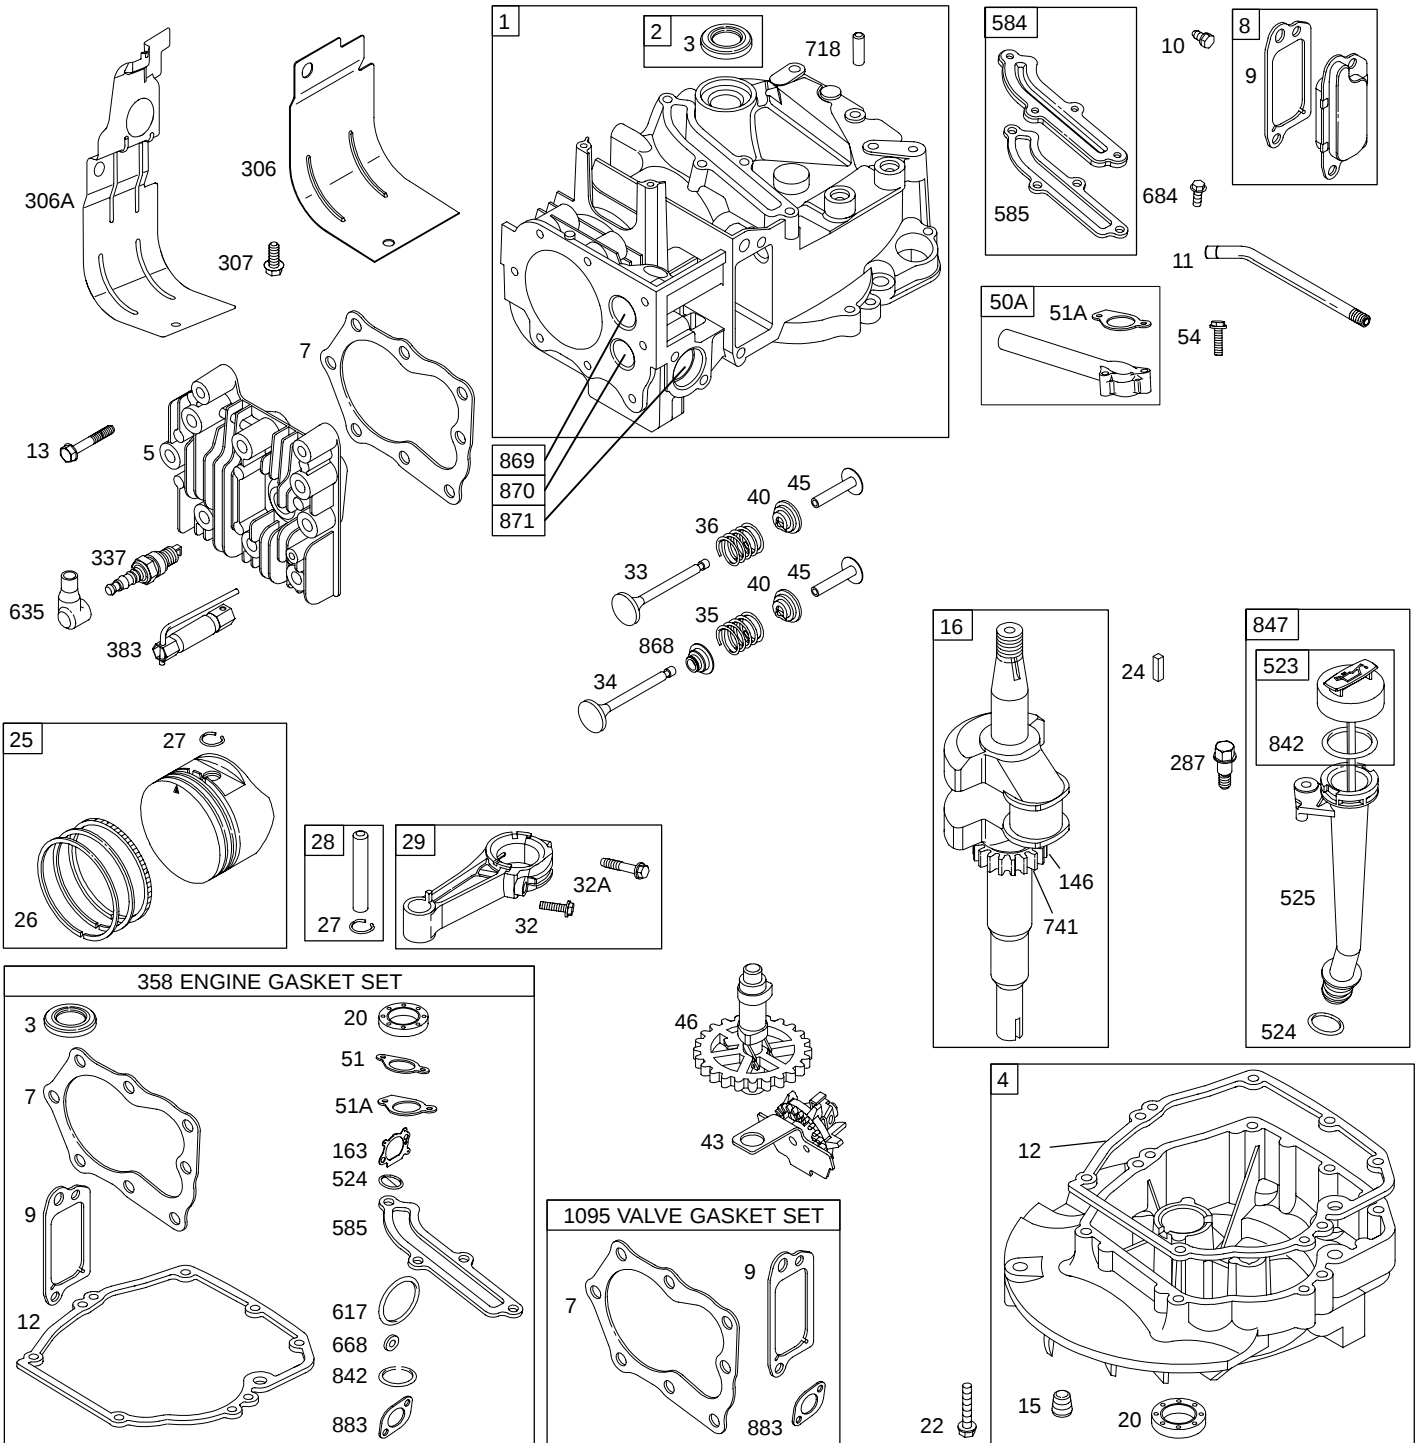

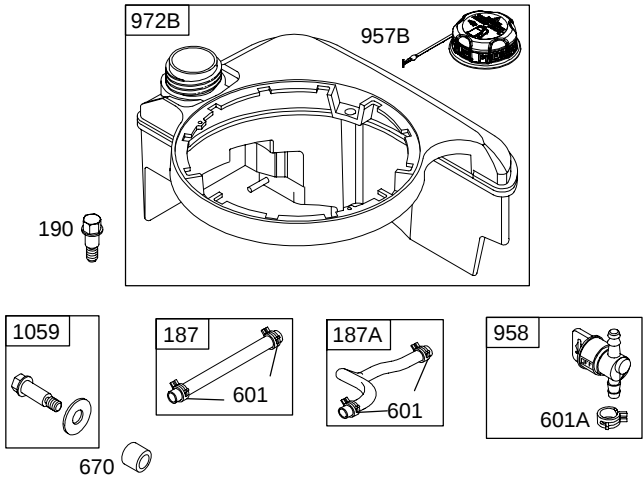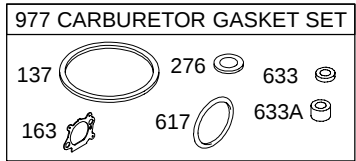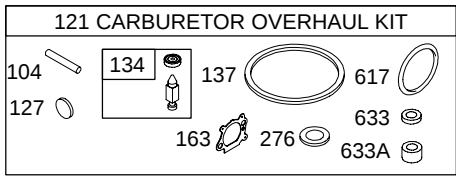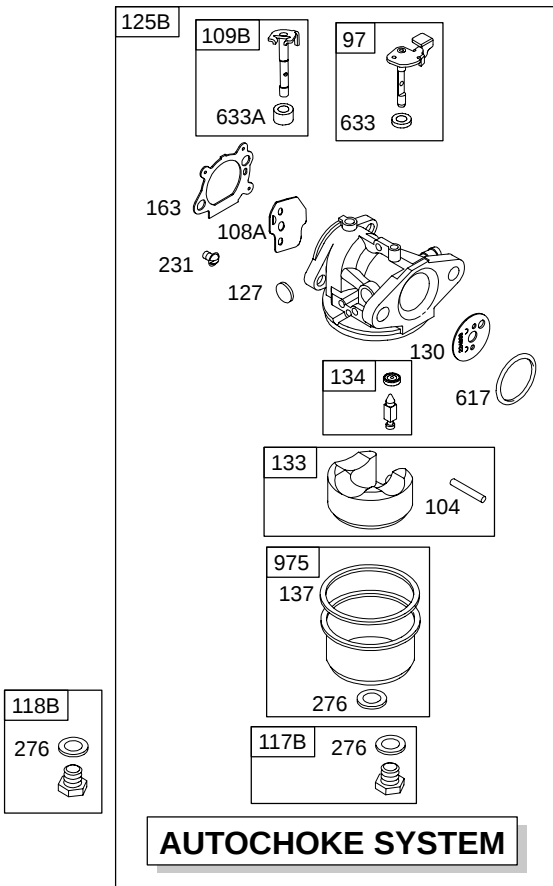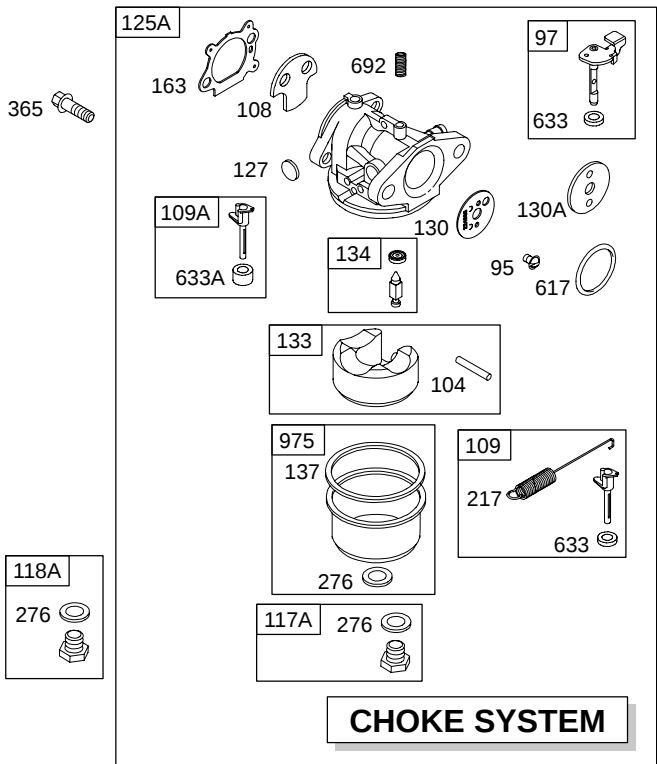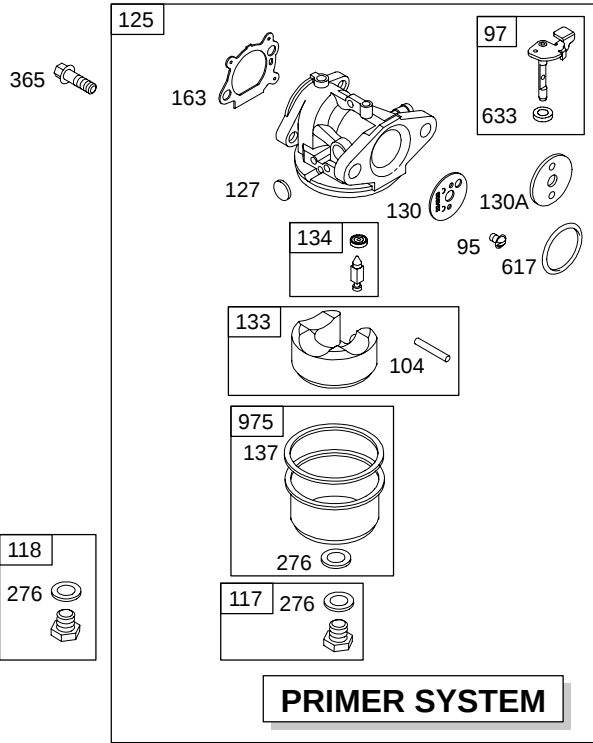

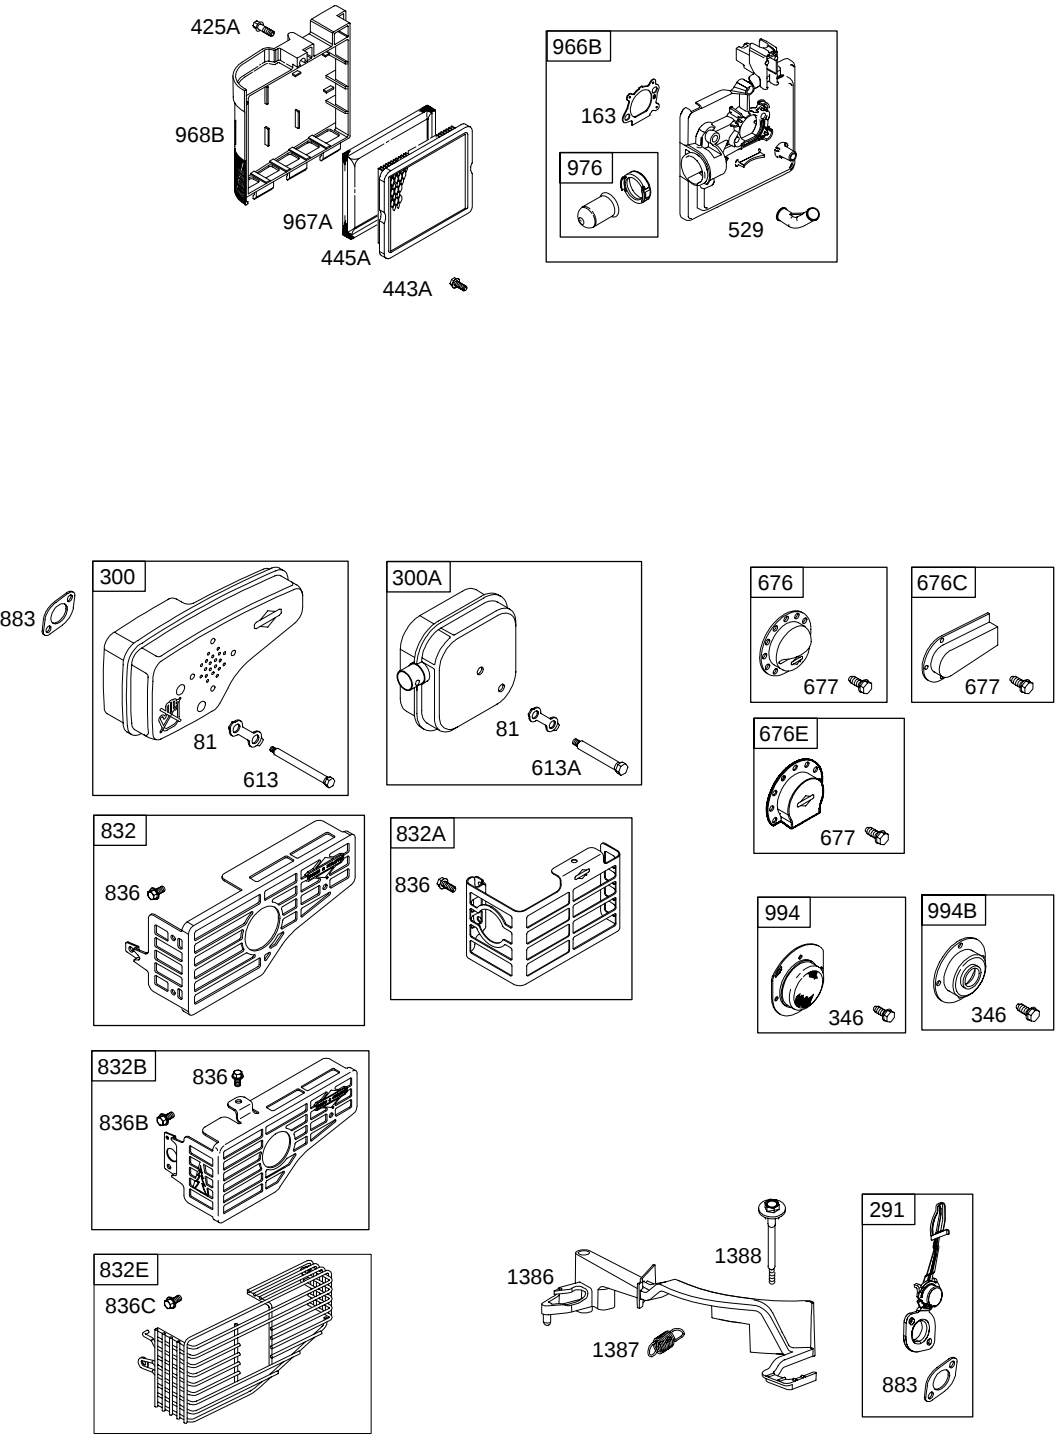


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.






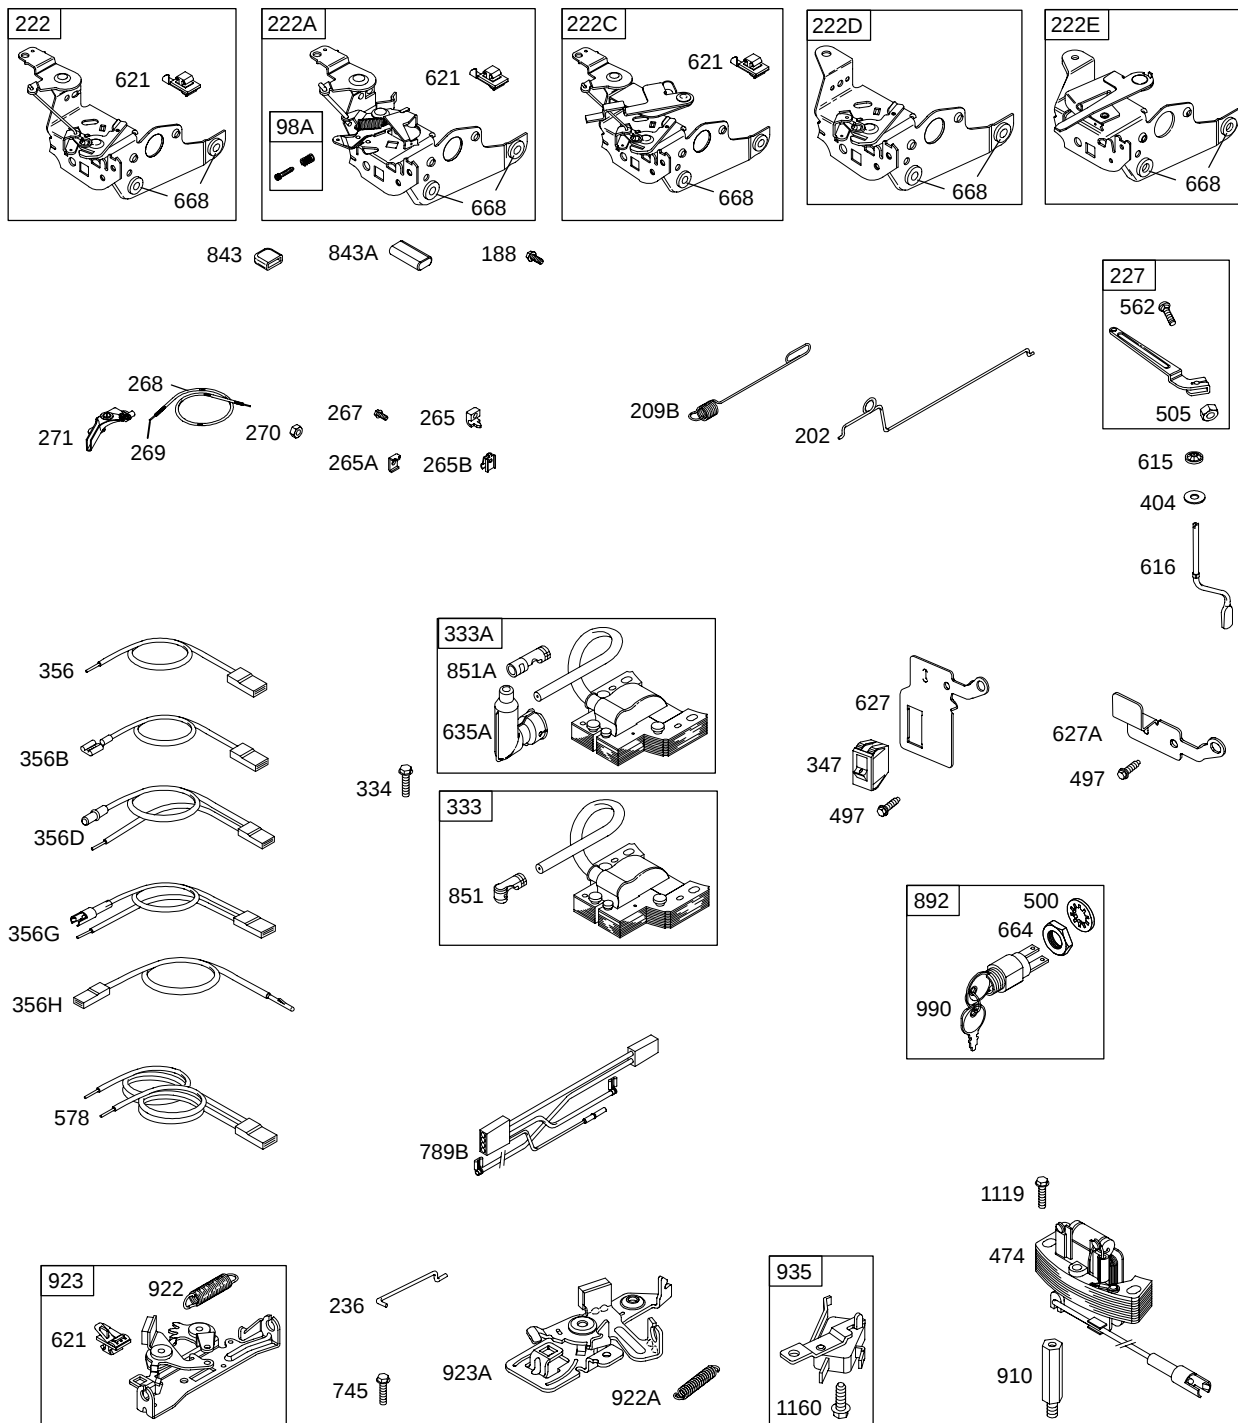


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

126T00

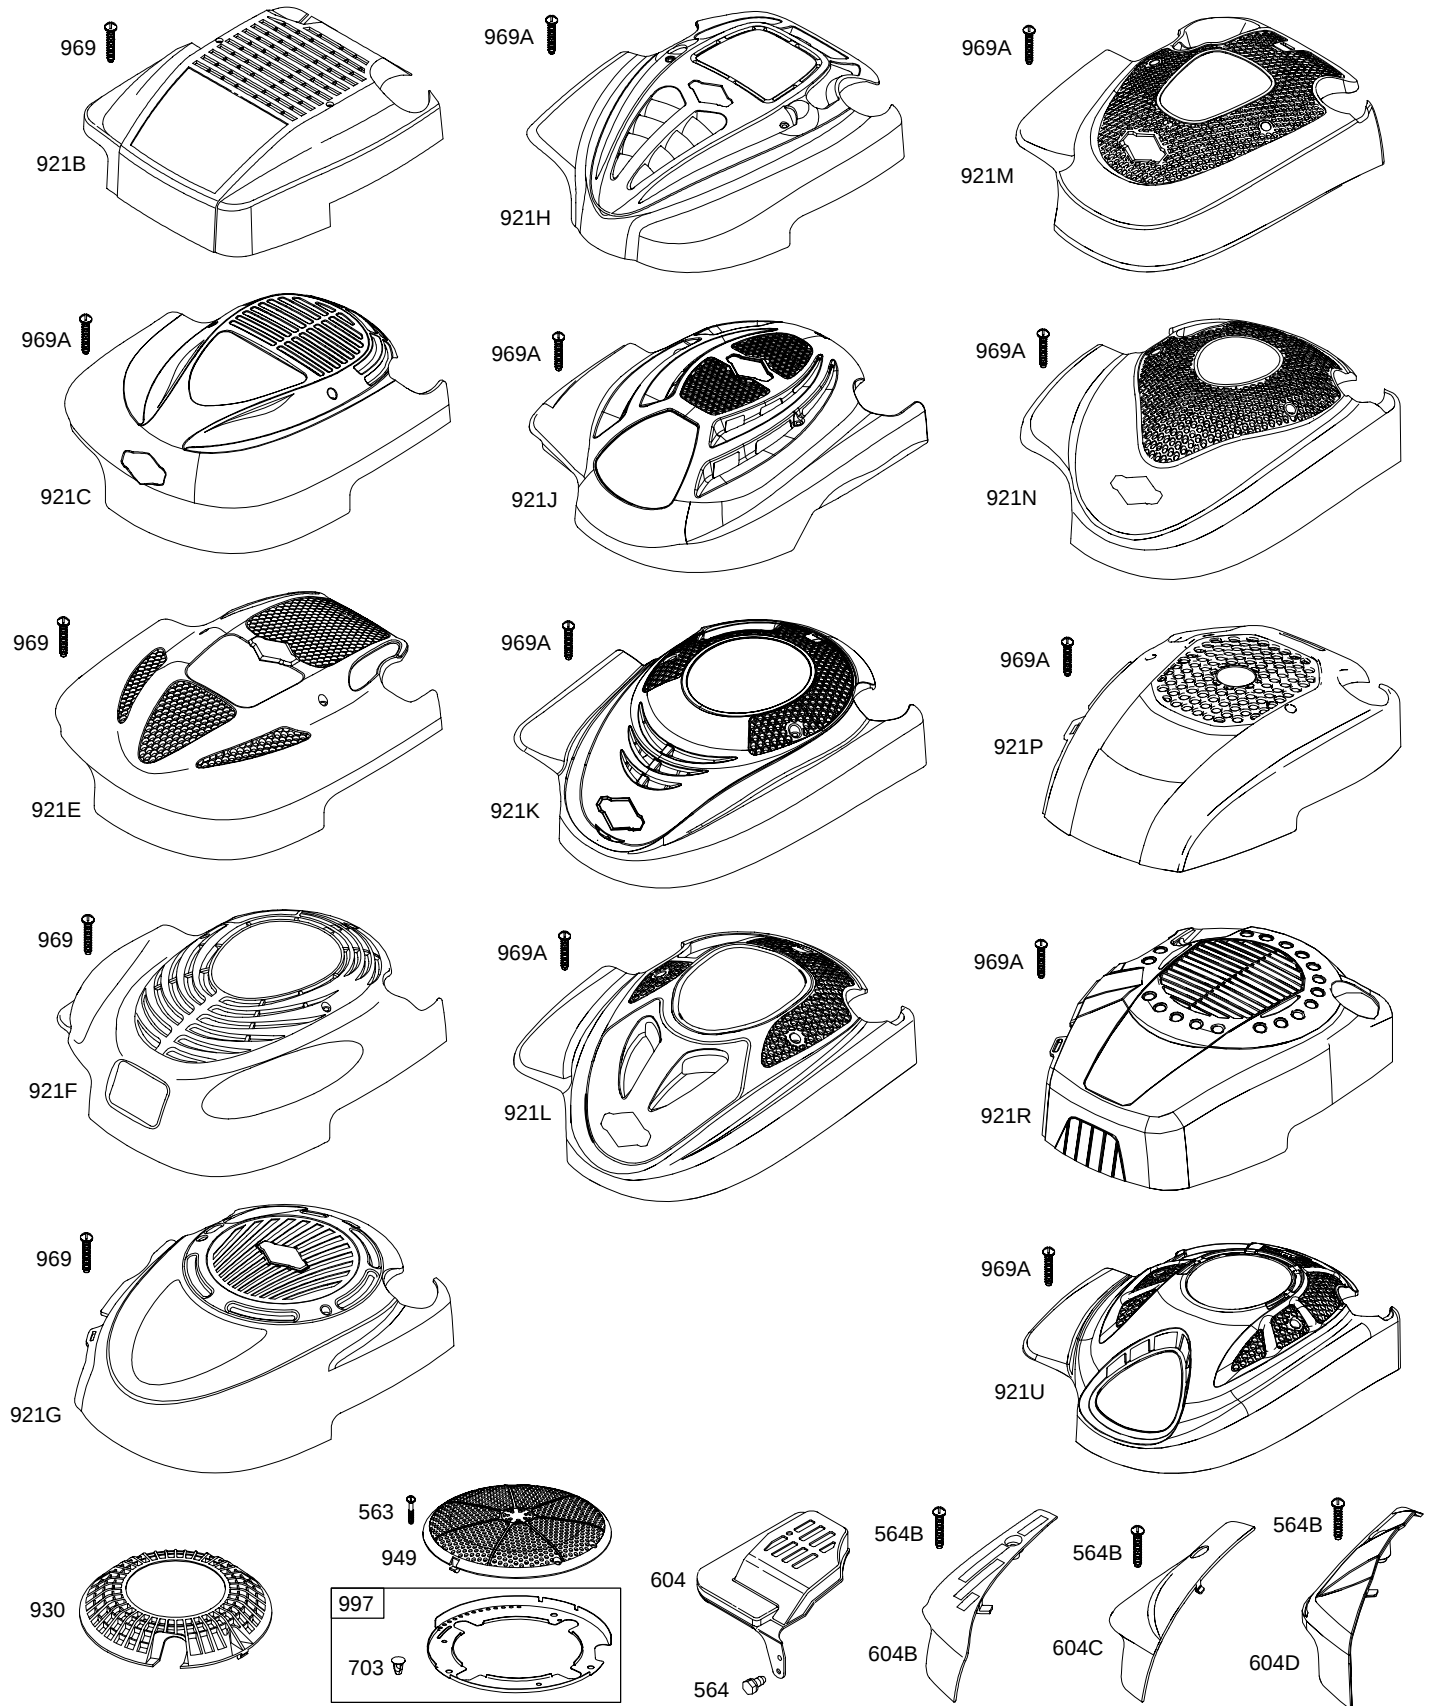

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3728-6 Assemblies include all parts shown in frames. **12/20/2007**

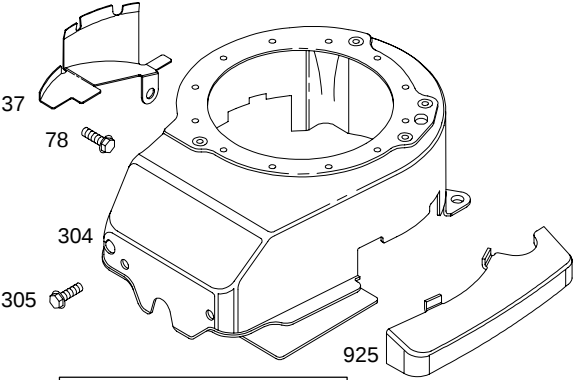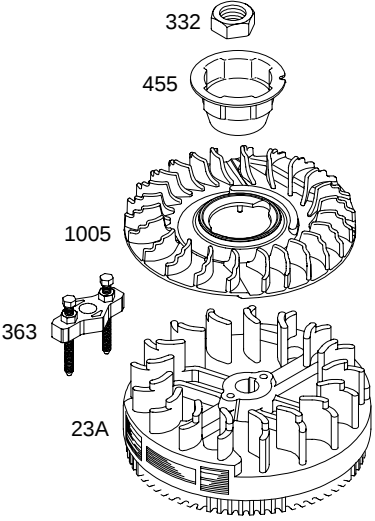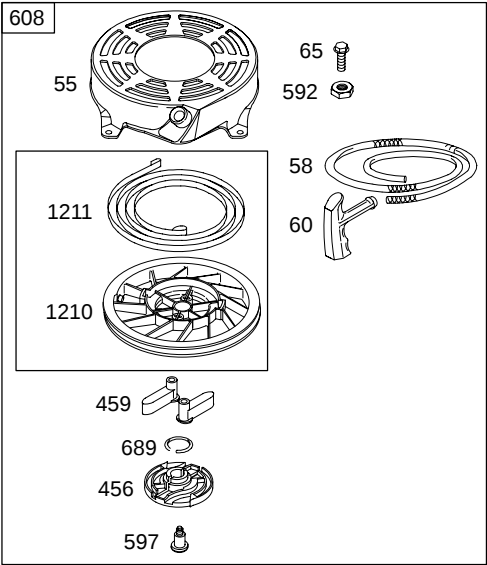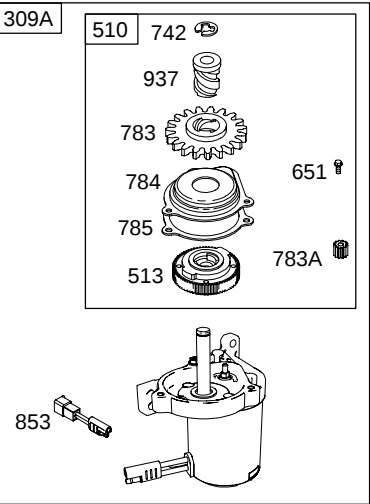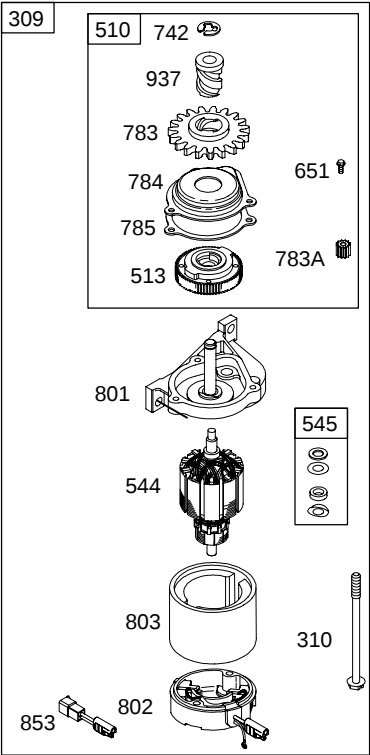

1036 EMISSIONS LABEL

126T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697322	Cylinder Assembly	16	691450	Crankshaft			691455 Crankshaft
2	399269	Kit-Bushing/Seal (Magnet Side)			----- Note -----			Used on Type No(s). 0006, 0018, 0523.
3	★299819S	Seal-Oil (Magnet Side)			691451 Crankshaft			694849 Crankshaft
4	493279	Sump-Engine			Used on Type No(s).			Used on Type No(s).
		----- Note -----			0004, 0010, 0011,			0005, 0114, 0131,
		498983 Sump-Engine			0015, 0060, 0121,			0179, 2013.
		Used on Type No(s).			0135, 0138, 0148,			695242 Crankshaft
		0006.			0153, 0158, 0159,			Used on Type No(s).
5	691160	Head-Cylinder			0169, 0172, 0173,			0026.
7	★Ø692249	Gasket-Cylinder Head			0199, 0243, 0329,			696009 Crankshaft
8	695250	Breather Assembly			0454, 0475, 0479,			Used on Type No(s).
9	★Ø696125	Gasket-Breather			0487, 0491, 0555,			0115, 0139, 0181,
10	691125	Screw			0615, 0660, 0826,			0182, 0183, 0184,
		(Breather Assembly)			1064, 1724, 1728,			0204, 0206, 0216,
					1729, 1750, 1767,			0219, 0220, 0224,
11	691781	Tube-Breather			1791, 1802, 1807,			0231, 0233, 0236,
12	★692232	Gasket-Crankcase			1817, 1820, 1822,			0240, 0241, 0329,
13	690912	Screw			1824, 1833, 1963,			0678, 0933, 1840,
		(Cylinder Head)			2003, 2004, 2011,			1841.
15	691680	Plug-Oil Drain			2016, 2021, 2022,			791061 Crankshaft
		(Square Socket)			2034, 2091, 2388.			Used on Type No(s).
					691452 Crankshaft			0116, 0209, 0225,
					Used on Type No(s).			0227, 0234, 0237.
					0016, 0147, 0150,			694478 Crankshaft
					0151, 0154, 0163,			Used on Type No(s).
					0168, 0242, 0568,			0521, 0538.
					0680, 0878, 1727,			691454 Crankshaft
					1733, 1734, 1737,			Used on Type No(s).
					1738, 1739, 1740,			1706.
					1748, 1749, 1794,			694079 Crankshaft
					1801, 1803, 1804,			Used on Type No(s).
					1805, 1808, 1810,			1701.
					1814, 1816, 1818,			795499 Crankshaft
					1821, 1823, 1825,			Used on Type No(s).
					1826, 1827, 1829,			0222.
					1830, 1831, 1832,			
					1835, 1837, 1839,			
					1844, 1845, 1846,			
					1847, 1849, 1852,			
					1853, 1904, 1914,			
					1917, 1926, 1941,			
					1958, 1965, 1992,			
					1995, 2006, 2008,			
					2010, 2112, 2014,			
					2015, 2017, 2023,			
					2027, 2035, 2148,			
					2149, 2304.			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3728-8

Assemblies include all parts shown in frames.

12/20/2007

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
20	★399781S	Seal–Oil (PTO Side)	26	795431	Ring Set (Standard) (Used After Code Date 07090300). ----- Note -----	51	★272199S	Gasket–Intake
22	691092	Screw (Crankcase Cover/ Sump)				51A	★794306	Gasket–Intake
23A	691987	Flywheel ----- Note ----- 691992 Flywheel Used on Type No(s). 0004, 0005, 0006, 0010, 0114, 0116, 0131, 0169, 0179, 0209, 0222, 0225, 0227, 0234, 0237, 0523, 0826, 0933, 1064, 1802, 1807, 1822, 1849, 2013, 2016.			791098 Ring Set (Standard) (Used Before Code Date 07090400). 795432 Ring Set (.020" Oversize) (Used After Code Date 07090300). 791324 Ring Set (.020" Oversize) (Used Before Code Date 07090400).	54	691650	Screw (Intake Manifold)
24	222698S	Key–Flywheel	27	691866	Lock–Piston Pin	55	691421	Housing–Rewind Starter
25	795429	Piston Assembly (Standard) (Used After Code Date 07090300). ----- Note ----- 791097 Piston Assembly (Standard) (Used Before Code Date 07090400). 795430 Piston Assembly (.020" Oversize) (Used After Code Date 07090300). 791326 Piston Assembly (.020" Oversize) (Used Before Code Date 07090400).	28	499423	Pin–Piston (Standard)	58	697316	Rope–Starter (Cut To Required Length) ----- Note ----- 791362 Rope–Starter Used on Type No(s). 0132, 0133, 0143, 0144, 0165, 0166, 0175, 0181, 0234.
			29	499424	Rod–Connecting (Standard)	60	281434S	Grip–Starter Rope
			32	691664	Screw (Connecting Rod)	65	690837	Screw (Rewind Starter)
			32A	695759	Screw (Connecting Rod)	78	691108	Screw (Flywheel Guard)
			33	262651S	Valve–Exhaust	81	691740	Lock–Muffler Screw
			34	262652S	Valve–Intake	95	691636	Screw (Throttle Valve)
			35	691270	Spring–Valve (Intake)	97	493267	Shaft–Throttle (Metal) ----- Note ----- 696565 Shaft–Throttle (Plastic)
			36	691270	Spring–Valve (Exhaust)	98A	493280	Kit–Idle Speed
			37	694086	Guard–Flywheel	104	●691242	Pin–Float Hinge
			40	692194	Retainer–Valve	108	691182	Valve–Choke
			43	691997	Slinger–Governor/Oil	108A	790844	Valve–Choke
			45	690548	Tappet–Valve	109	494218	Shaft–Choke
			46	691449	Camshaft	109A	498593	Shaft–Choke
			50A	794305	Manifold–Intake	109B	790843	Shaft–Choke

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

⊗ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

126T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
117	498978	Jet–Main (Standard) ----- Note ----- 692677 Jet–Main (Standard) (Used After Code Date 07020600). Used on Type No(s). 0154, 0680, 0761, 1749, 1837, 1850, 1917, 2035, 3761. 494870 Jet–Main (Standard) (Used Before Code Date 07020700). Used on Type No(s). 0761, 3761.	121	498260	Kit–Carburetor Overhaul	127	694468	Plug–Welch
117A	498981	Jet–Main (Standard)	125	498170	Carburetor (Primer System) ----- Note ----- 694882 Carburetor (Primer System) (Used After Code Date 07020600). Used on Type No(s). 0154, 0680, 0761, 1749, 1837, 1850, 1917, 2035, 3761. 790821 Carburetor (Primer System) (Used Before Code Date 07020700). Used on Type No(s). 0761, 3761.	130	696564	Valve–Throttle
117B	691428	Jet–Main (Standard) (Used After Code Date 07020600). ----- Note ----- 697355 Jet–Main (Standard) (Used Before Code Date 07020700).	125A	792253	Carburetor (Choke System) ----- Note ----- 790978 Carburetor Used on Type No(s). 1746, 1801, 1802, 1803, 1804, 1805.	130A	691203	Valve–Throttle
118	497466	Jet–Main (High Altitude) ----- Note ----- 497315 Jet–Main (High Altitude) Used on Type No(s). 0154, 0680, 0761, 1749, 1837, 1850, 1917, 2035, 3761.	125B	794304	Carburetor (Autochoke System) (Used After Code Date 07020600). ----- Note ----- 790845 Carburetor (Used Before Code Date 07020700).	133	398187	Float–Carburetor
118A	497315	Jet–Main (High Altitude)				134	398188	Kit–Needle/Seat
118B	695042	Jet–Main (High Altitude) (Used After Code Date 07020600). ----- Note ----- 692677 Jet–Main (High Altitude) (Used Before Code Date 07020700).				137	693981	Gasket–Float Bowl
						146	690979	Key–Timing
						163	272653	Gasket–Air Cleaner
						187	791766	Line–Fuel (Cut to Required Length)
						187A	791873	Line–Fuel (Molded)
						188	693399	Screw (Control Bracket)
						190	690940	Screw (Fuel Tank)
						202	691829	Link–Mechanical Governor

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

⊗ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3728–10

Assemblies include all parts shown in frames.

12/20/2007

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
209B	699056	Spring–Governor ----- Note ----- 691292 Spring–Governor Used on Type No(s). 0115, 0116, 0117, 0135, 0139, 0145, 0146, 0147, 0153, 0161, 0172, 0175, 0176, 0181, 0199, 0204, 0206, 0209, 0216, 0219, 0220, 0222, 0224, 0225, 0227, 0236, 0237, 0329, 0555, 0568, 0933, 0951, 0985, 0992, 1003, 1006, 1009, 1037, 1724, 1733, 1734, 1737, 1738, 1750, 1767, 1791, 1808, 1810, 1816, 1817, 1826, 1827, 1829, 1837, 1839, 1845, 1849, 1850, 1852, 1853, 1904, 1941, 1963, 1965, 1966, 1992, 1995, 2003, 2004, 2008, 2011, 2012, 2014, 2017, 2022, 2027, 2034, 2041, 2148, 2149, 2304,.			691852 Spring–Governor Used on Type No(s). 0150, 0151, 0154, 0155, 0158, 0159, 0163, 0168, 0182, 0183, 0184, 0231, 0233, 0234, 0240, 0241, 0680, 1706, 1727, 1728, 1729, 1739, 1740, 1748, 1749, 1794, 1807, 1814, 1818, 1820, 1821, 1822, 1823, 1824, 1825, 1830, 1831, 1832, 1833, 1835, 1840, 1841, 1844, 1846, 1847, 1914, 1958, 2006, 2010, 2015, 2016, 2021, 2023, 2035. 691291 Spring–Governor Used on Type No(s). 0006, 0010, 0011, 0521, 0538, 0826, 1064. 691851 Spring–Governor Used on Type No(s). 0121, 0132, 0133, 0134, 0143, 0165, 3139, 3140.			691290 Spring–Governor Used on Type No(s). 0005, 0114, 0131, 0169, 0179, 2013. 791157 Spring–Governor Used on Type No(s). 1746, 1801, 1803, 1804, 1805. 691835 Spring–Governor Used on Type No(s). 1802. 790944 Spring–Governor Used on Type No(s). 0523.

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

⊗ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

126T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
217	690354	Spring–Choke Return	227	690783	Lever–Governor Control	300	692038	Muffler
222	790143	Bracket–Control (Remote/Manual Friction)(Primer)	231	691636	Screw (Choke Valve)	----- Note -----		
222A	692021	Bracket–Control (Remote, Choke A Matic, Non Compliance)	236	691826	Link–Lockout	790828 Muffler		
		----- Note -----	265	690798	Clamp–Casing	Used on Type No(s).		
		790982 Bracket–Control	265A	691024	Clamp–Casing	0114, 0121, 0132,		
		Control	265B	692179	Clamp–Casing	0133, 0140, 0143,		
		Used on Type No(s).	267	691044	Screw (Casing Clamp)	0144, 0150, 0151,		
		1746, 1801, 1803,	268	691025	Casing–Control Wire (Cut to Required Length)	0158, 0159, 0161,		
		1804, 1805.				0165, 0166, 0168,		
222C	692150	Bracket–Control (Variable Speed) (5 Postion Manual Choke)	269	691026	Wire–Control (Cut to Required Length)	0172, 0173, 0175,		
						0181, 0183, 0200,		
222D	791128	Bracket–Control (Fixed Speed)	270	691027	Nut (Control Wire Casing)	0216, 0219, 0220,		
222E	692982	Bracket–Control (Manual Friction, 5 Position Manual Choke)	271	691028	Lever–Control	0222, 0224, 0225,		
			276 ♦ 271716	Washer–Sealing	0227, 0231, 0233,			
			287	690940	Screw (Dipstick Tube)	0234, 0236, 0237,		
			291	790830	Thermostat	0240, 0241, 0378,		
						0454, 0475, 0487,		
						0491, 0548, 0555,		
						0615, 0625, 0660,		
						0662, 0675, 0677,		
						0678, 0709, 0849,		
						0867, 0875, 0880,		
						0893, 0932, 0933,		
						0985, 0992, 1003,		
						1006, 1024, 1044,		
						1045, 1047, 1055,		
						1706, 1738, 1807,		
						1808, 1823, 1825,		
						1827, 1831, 1845,		
						1847, 1849, 1851,		
						1963, 1965, 2011,		
						2015, 2016, 2017,		
						2021, 2022, 2034,		
						2041, 3709, 3849.		
						792677 Muffler		
						Used on Type No(s).		
						0329, 1003, 1844.		
						300A	494343S	Muffler

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

♦ Included in Carburetor Gasket Set–Ref. No. 977.

Ø Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3728–12

Assemblies include all parts shown in frames.

12/20/2007

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
304	695892	Housing–Blower ----- Note ----- 493293 Housing– Blower Used on Type No(s). 0015, 0016, 0018, 0025, 0060, 0062, 0115, 0139, 0147, 0162, 0173, 0204, 0206, 0244, 0479, 1701, 1727, 1728, 1733, 1734, 1740, 1767, 1791, 1794, 1801, 1803, 1804, 1805, 1810, 1814, 1821, 1832, 1833, 1840, 1904, 1914, 1958, 1992, 1995, 2003, 2004, 2006, 2010, 2023, 2304, 2388, 3841. 493294 Housing– Blower Used on Type No(s). 0004, 0005, 0006, 0010, 0116, 0131, 0169, 0179, 0209, 0242, 0521, 0523, 0538, 0826, 0878, 1064, 1729, 1802, 1822, 1839, 1926, 1941, 2013, 2014, 2027, 3139, 3140.			790826 Housing– Blower Used on Type No(s). 0121, 0133, 0144, 0150, 0151, 0158, 0159, 0161, 0163, 0165, 0168, 0172, 0175, 0200, 0216, 0219, 0231, 0233, 0236, 0240, 0241, 0378, 0454, 0487, 0491, 0548, 0555, 0615, 0625, 0675, 0677, 0678, 0709, 0849, 0867, 0875, 0880, 0893, 0909, 0923, 0985, 0992, 1003, 1006, 1024, 1044, 1045, 1047, 1055, 1706, 1748, 1816, 1825, 1827, 1829, 1831, 1835, 1844, 1845, 1846, 1853, 1963, 1965, 2011, 2021, 2022, 2041, 3709, 3849.			790983 Housing– Blower Used on Type No(s). 0132, 0140, 0143, 0166, 0181, 0183, 0220, 0224, 0475, 0660, 0662, 0880, 0893, 0933, 1738, 1739, 1808, 1823, 1826, 1847, 2015, 2017. 791291 Housing– Blower Used on Type No(s). 0114, 0222, 0225, 0227, 0234, 0237, 1807, 1849, 2016, 2034. 791135 Housing– Blower Used on Type No(s). 0329.

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

⊗ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

126T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
305	691108	Screw (Blower Housing)	334	691061	Screw (Magneto Armature)	523	499621	Dipstick
306	690450	Shield-Cylinder	337	802592S	Plug-Spark (Resistor)	524	★692296	Seal-Dipstick Tube
306A	790836	Shield-Cylinder			----- Note -----	525	495265	Tube-Dipstick
307	690345	Screw (Cylinder Shield)			697451 Plug-Spark (EMS)	529	691923	Grommet
309	695550	Motor-Starter (Used Before Code Date 07052900).	346	690661	Screw (Spark Arrestor)	544	690786	Armature-Starter
309A	795092	Motor-Starter (Used After Code Date 07052800).	347	691396	Switch-Rocker	545	492919	Washer Set
310	692327	Bolt (Starter Motor)	356	692390	Wire-Stop	562	92613	Bolt (Governor Control Lever)
332	690662	Nut (Flywheel)	356B	693010	Wire-Stop	563	691138	Screw (Debris Guard Screen)
333	802574	Armature-Magneto ----- Note ----- 790817 Armature- Magneto Used on Type No(s). 0224, 0487, 0761, 1045, 1817, 2034, 3761.	356D	496381	Wire-Stop	564B	698589	Screw (Control Cover)
333A	793353	Armature-Magneto ----- Note ----- 793354 Armature- Magneto Used on Type No(s). 0121, 0150, 0151, 0154, 0158, 0159, 0163, 0168, 0172, 0680, 0875, 0893, 0909, 1706, 1739, 1748, 1749, 1750, 1807, 1808, 1816, 1823, 1824, 1825, 1826, 1827, 1829, 1831, 1835, 1837, 1844, 1845, 1846, 1847, 1849, 1850, 1853, 1917, 1963, 1965, 2011, 2015, 2016, 2017, 2021, 2035, 2041.	356G	695283	Wire-Stop	564	690664	Screw (Control Cover)
			356H	690791	Wire-Stop	578	398153	Wire-Assembly
			358	794307	Gasket Set-Engine	584	697734	Cover-Breather Passage
			363	19069	Flywheel Puller	585	★691879	Gasket-Breather Passage
			365	691688	Screw (Carburetor)	592	690800	Nut (Rewind Starter)
			383	89838S	Wrench-Spark Plug	597	691696	Screw (Pawl Friction Plate)
			404	690272	Washer (Governor Crank)	601	791850	Clamp-Hose
			425A	690670	Screw (Air Cleaner Cover)	601A	691038	Clamp-Hose
			443A	692523	Screw (Air Cleaner Primer Base)	604	691757	Cover-Control
			445A	491588S	Filter-Air Cleaner Cartridge	604B	790703	Cover-Control
			455	791960	Cup-Flywheel	604C	792418	Cover-Control
			456	692299	Plate-Pawl Friction	604D	793770	Cover-Control
			459	281505S	Plate-Ratchet	608	497680	Starter-Rewind
			474	691991	Alternator			----- Note ----- 791363 Starter- Rewind Used on Type No(s). 0132, 0133, 0143, 0144, 0165, 0166, 0175, 0181, 0234, 0479, 0487, 0491.
			497	690664	Screw (Stop Switch Bracket)			
			500	691086	Washer (Key Switch)			
			505	691251	Nut (Governor Control Lever)			
			510	795093	Drive-Starter			
			513	692358	Clutch-Drive			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊗ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3728-14

Assemblies include all parts shown in frames.

12/20/2007

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
613	691340	Screw (Muffler) ----- Note ----- 790833 Screw (Muffler) Used on Type No(s). 0114, 0121, 0132, 0133, 0140, 0143, 0144, 0150, 0151, 0158, 0159, 0161, 0165, 0166, 0168, 0172, 0173, 0175, 0181, 0183, 0200, 0216, 0219, 0220, 0222, 0224, 0225, 0227, 0231, 0233, 0234, 0236, 0237, 0240, 0241, 0378, 0454, 0475, 0487, 0491, 0548, 0555, 0615, 0625, 0660, 0662, 0675, 0677, 0678, 0709, 0849, 0867, 0875, 0880, 0893, 0932, 0933, 0985, 0992, 1003, 1006, 1024, 1044, 1045, 1047, 1055, 1706, 1738, 1807, 1808, 1823, 1825, 1827, 1831, 1845, 1847, 1849, 1851, 1963, 1965, 2011, 2015, 2016, 2017, 2021, 2022, 2034, 2041, 3709, 3849. 792678 Screw (Muffler) Used on Type No(s). 0329, 1003, 1844.	617★♦270344	Seal-O Ring (Intake Manifold)	742	93941	Retainer-E Ring	
			621	692310	Switch-Stop	745	691648	Screw (Brake)
			627	792565	Bracket-Stop Switch	783	691918	Gear-Pinion
			627A	793211	Bracket-Stop Switch	783A	691269	Gear-Pinion
			633	♦691321	Seal-Choke/Throttle Shaft	784	795095	Cover-Starter Gear
			633A	♦693867	Seal-Choke/Throttle Shaft	785	692352	Gasket-Starter Cover
			635	66538S	Boot-Spark Plug	789B	792685	Harness-Wiring
			635A	793351	Boot-Spark Plug	801	690782	Cap-Drive
			651	691660	Screw (Starter Gear Cover)	802	695267	Cap-End
			664	691087	Nut (Key Switch)	803	695266	Housing-Starter
			668	★493823	Spacer	832	499034	Guard-Muffler
			670	692294	Spacer-Fuel Tank	832A	691424	Guard-Muffler
			676	396548	Deflector-Muffler	832B	497683	Guard-Muffler
			676C	493871	Deflector-Muffler	832E	793568	Guard-Muffler
			676E	393760	Deflector-Muffler	836	690664	Screw (Muffler Guard)
			677	690661	Screw (Muffler Deflector)	836B	691147	Screw (Muffler Guard)
			684	690345	Screw (Breather Passage Cover)	836C	790745	Screw (Muffler Guard)
			689	691855	Spring-Friction	842	★691031	Seal-O Ring (Dipstick Tube)
			692	690572	Spring-Detent	843	691884	Sleeve-Lever (Speed Control)
			697	691127	Screw (Drive Cap)	843A	691895	Sleeve-Lever (Choke)
			703	696309	Clip	847	692047	Dipstick/Tube Assembly
			718	690959	Pin-Locating	851	493880S	Terminal-Spark Plug
			741	794388	Gear-Timing (Use Without Woodruff Key) (Used After Code Date 07093000). ----- Note ----- 790345 Gear-Timing (Use Without Woodruff Key) (Used Before Code Date 07100100). 691830 Gear-Timing (Uses Woodruff Key)	851A	692424	Terminal-Spark Plug
613A	691653	Screw (Muffler)				853	695268	Adapter-Wire
615	690340	Retainer-Governor Shaft				868	697338	Seal-Valve
616	698801	Crank-Governor				869	691155	Seat-Valve (Intake)
						870	690380	Seat-Valve (Exhaust)
						871	262001	Bushing-Valve Guide (Exhaust) ----- Note ----- 63709 Bushing-Valve Guide (Intake)
						883	★Ø691881	Gasket-Exhaust

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

♦ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

126T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
892	690646	Switch-Key	937	691325	Spline-Starter	990	691959	Key Set
910	691094	Stud (Alternator)	946	691738	Stop-Rope	994	398067	Arrestor-Spark
921B	692931	Cover-Blower Housing	949	696306	Guard-Debris Screen	994B	792245	Arrestor-Spark
921C	695889	Cover-Blower Housing	957B	699985	Cap-Fuel Tank (Plastic)	997	696310	Shield-Debris
921E	696262	Cover-Blower Housing	958	698183	Valve-Fuel Shut Off (Plastic)	1005	691346	Fan-Flywheel
921F	697343	Cover-Blower Housing	966B	792040	Base-Air Cleaner Primer	1019	694881	Kit-Label
921G	790701	Cover-Blower Housing			----- Note -----	1036		Label-Emissions (Available From A Briggs & Statton Authorized Dealer)
921H	790037	Cover-Blower Housing			795259	277039	Operator's Manual	
921J	790036	Cover-Blower Housing			Cleaner Primer	1059	692311	Kit-Screw/Washer
921K	699984	Cover-Blower Housing			Used on Type No(s). 1064.	1095	498528	Gasket Set-Valve
921L	791026	Cover-Blower Housing	967A	493537S	Filter-Pre Cleaner	1119	692979	Screw (Alternator)
921M	792652	Cover-Blower Housing	968B	692298	Cover-Air Cleaner	1160	690345	Screw (Interlock Switch)
921N	792675	Cover-Blower Housing	969	690700	Screw (Blower Housing Cover)	1210	498144	Pulley/Spring Assembly (Pulley)
921P	792687	Cover-Blower Housing	969A	691138	Screw (Blower Housing Cover)	1211	498144	Pulley/Spring Assembly (Spring)
921R	793771	Cover-Blower Housing	970	691669	Screw (Air Cleaner Primer Bracket)	1319	794467	Label-Warning
921U	794355	Cover-Blower Housing	972B	699374	Tank-Fuel (Plastic)	1330	270962	Manual-Repair
922	691831	Spring-Brake	975	493640	Bowl-Float	1386	790848	Vane-Air (Autochoke System)
922A	692135	Spring-Brake	976	694395	Primer-Carburetor	1387	790849	Spring-Air Vane
923	691994	Brake	977	498261	Gasket Set-Carburetor	1388	790850	Screw (Air Vane)
923A	695891	Brake						
925	795403	Cover-Linkage (Used After Code Date 07072200). ----- Note ----- 690595 Cover- Linkage (Used Before Code Date 07072300).						
930	691919	Guard-Rewind						
935	499421	Switch-Interlock						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3728-16

Assemblies include all parts shown in frames.

12/20/2007