




KENWOOD

SERVICE MANUAL

Model TS-700S(SP)

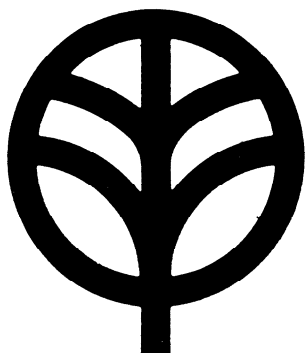


This photograph shows K type.

2m ALL MODE TRANSCEIVER


CONTENTS

SPECIFICATIONS (K Type)	3
BLOCK DIAGRAM (K Type)	4
SPECIFICATIONS (W, T Type)	5
BLOCK DIAGRAM (W, T Type)	6
FEATURES	7
GENERAL	8
CIRCUIT DESCRIPTION	8
MECHANISM DESCRIPTION	12
SEMICONDUCTORS DATA	13
EXTERNAL VIEW	16
INTERNAL VIEW	17
PC BOARD	
PC BOARD FOR ROTARY SWITCH	18
VFO UNIT (X40-1080-02)	18
SWITCH UNIT (X41-1060-00)	18
RECTIFIER UNIT (X43-1240-01)	19
FM · IF UNIT (X48-1140-20, -61, -51)	20
MIX UNIT (X48-1130-00)	21
AF UNIT (X49-1060-00)	22
HET UNIT (X50-1410-11, -61)	23
CAR · VOX UNIT (X50-1420-00)	24
GENERATOR UNIT (X52-1080-21)	25
COUNTER UNIT (X54-1250-11, -61)	26
RX · NB UNIT (X55-1170-11, -00)	27
DISPLAY UNIT (X54-1240-11)	28
FINAL UNIT (X56-1250-00)	28
PARTS LIST	29
PACKING	40
DISASSEMBLY	42
TROUBLESHOOTING	46
LEVEL DIAGRAM	51
ADJUSTMENT	52
SCHEMATIC DIAGRAM	SEPARATE SHEET OF PAPER
VFO-700S	
GENERAL	62
SPECIFICATIONS	62
ADJUSTMENT	62
PACKING	62
PARTS LIST	63
SCHEMATIC DIAGRAM	65


U.S.A.	K type
Europe	W type
Britain	T type

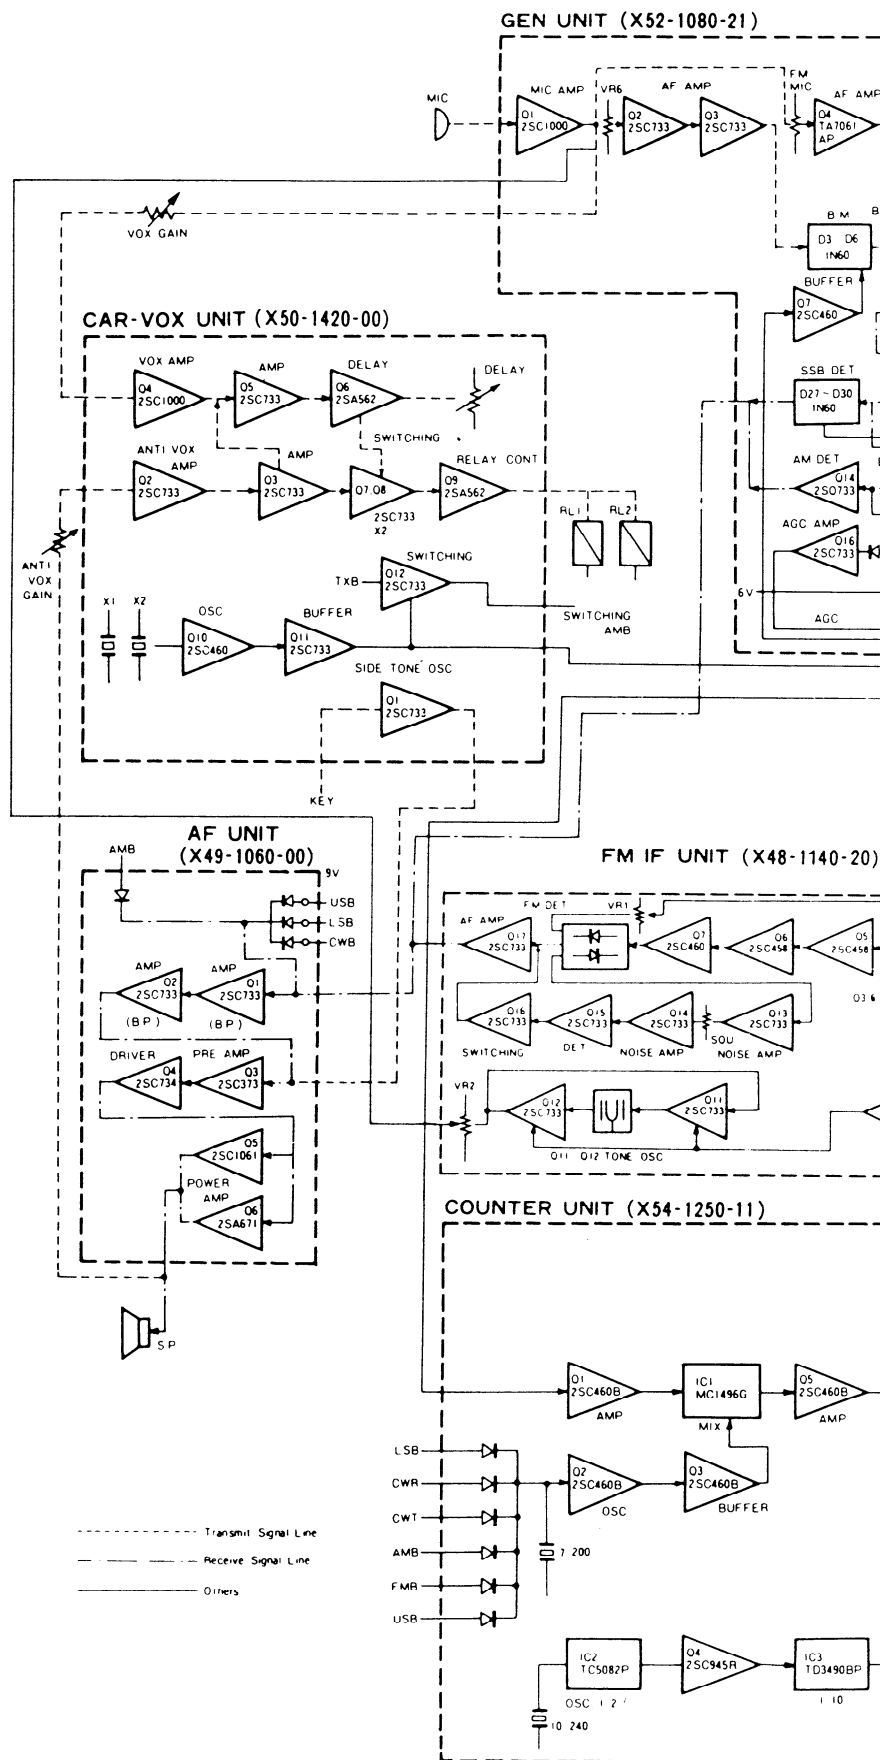

BLOCK DIAGRAM(K type)

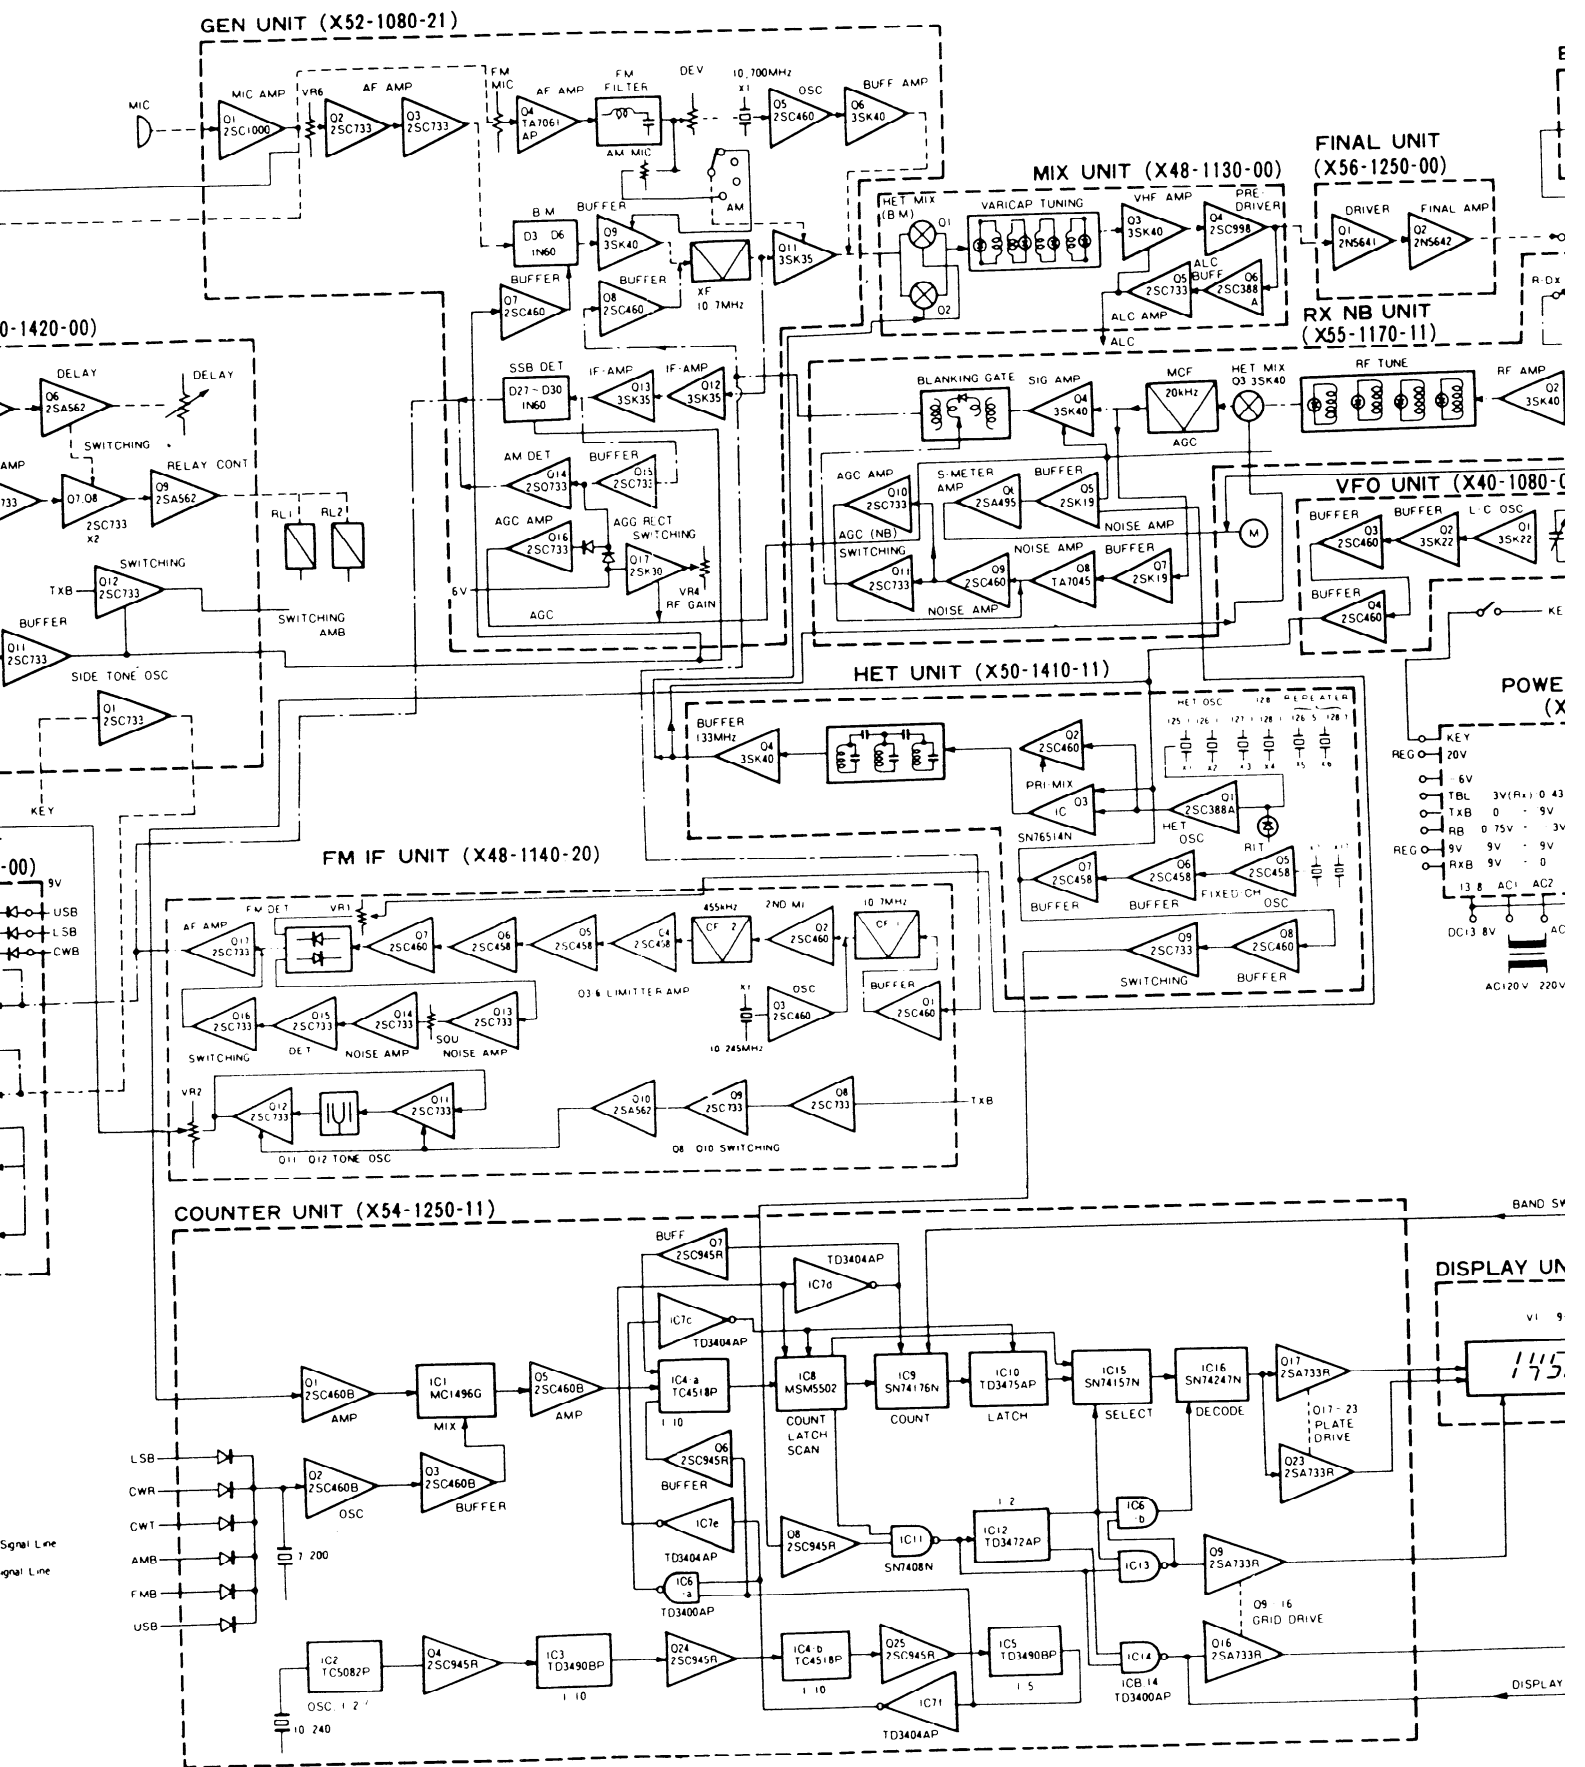

DIAGRAM(K type)

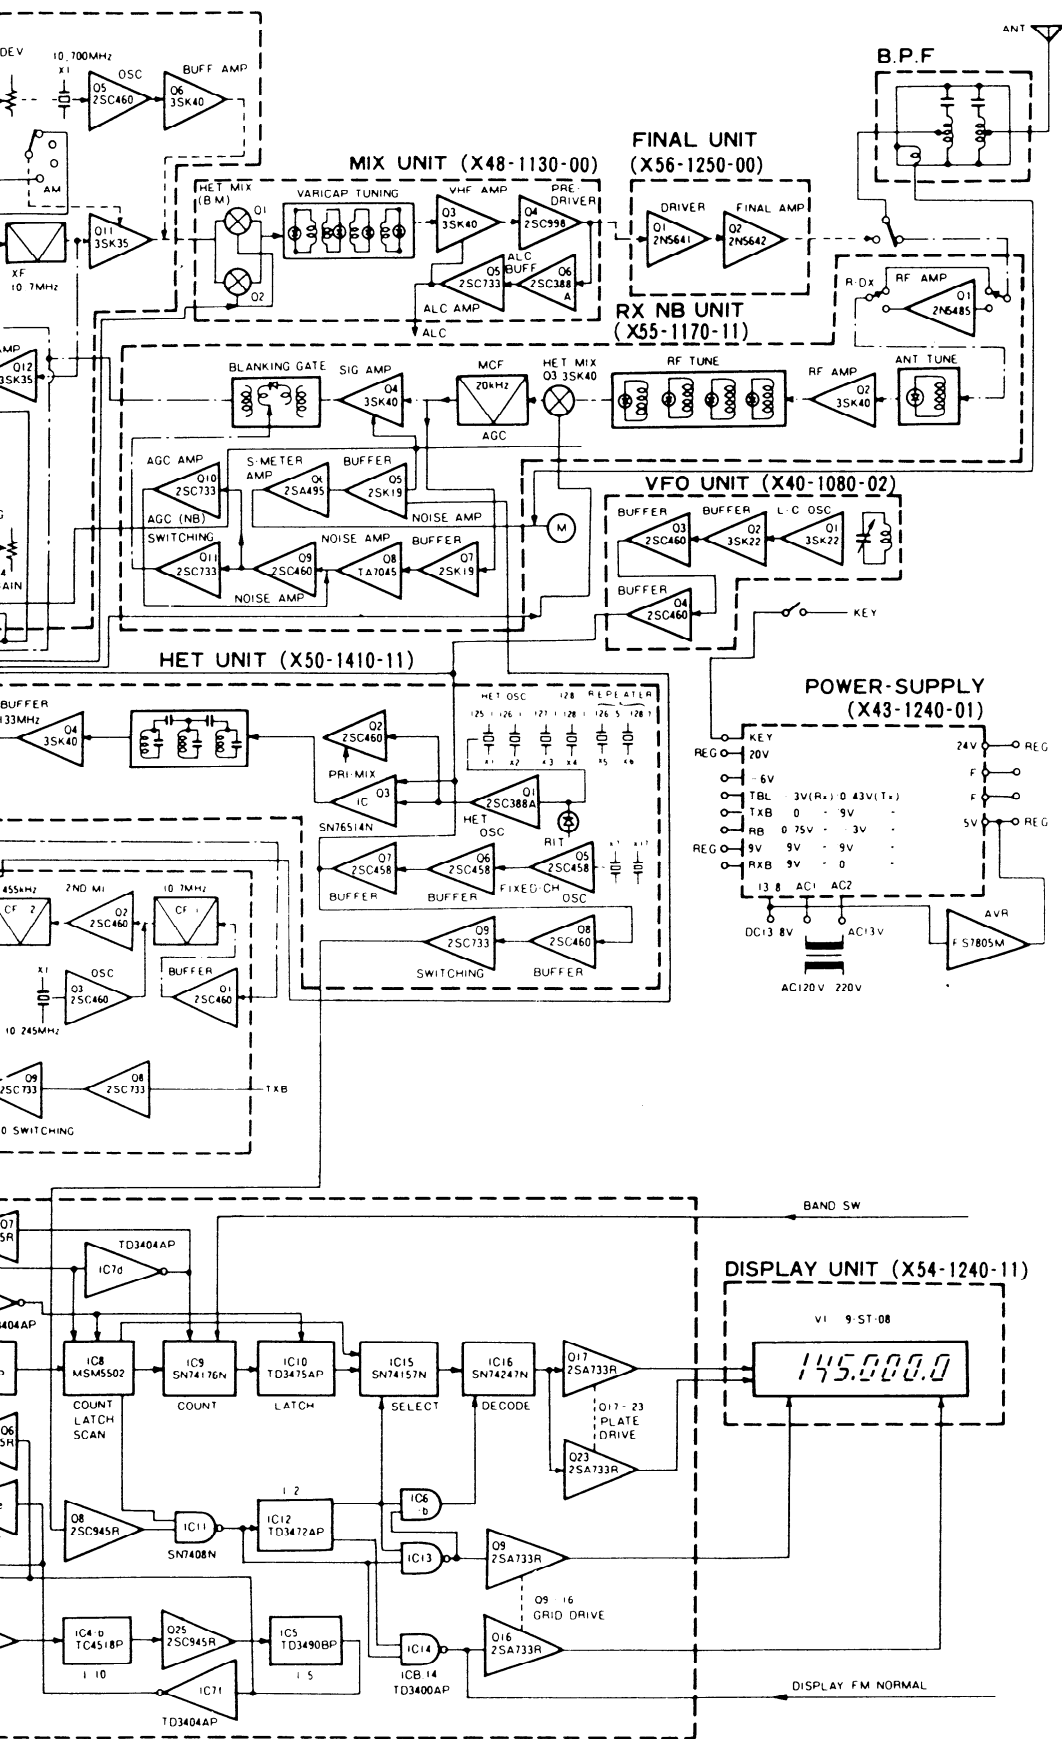

SPECIFICATIONS(K type)

GENERAL

Frequency Range	144.0 to 148.0 MHz
Mode	SSB (USB, LSB), CW, AM, FM
Antenna Impedance	50 Ohms
Frequency Stability	Within ± 3 kHz during one hour after one minute of Warm-up, and withi during any 30 minute period thereafter
Semiconductors	Transistors: 105, FETs: 18, ICs: 21, Diodes: 176
Power Requirement	120/220V AC, 50/60 Hz: 12.0 to 16.0V DC (nominal 13.8V DC)
Power Consumption	Transmit: 98 Watts (120/220V AC), 4.0A (13.8V DC) Receive (no signal): 48 Watts (120/220V AC), 1.2A (13.8V DC)
Dimension	278 (10-7/8) wide x 124 (4-7/8 high x 320 (12-5/8) deep mm (inch)
Weight	11.0 kg (24.2 lbs)

TRANSMITTER

RF Output Power	SSB, FM, CW: 10 Watts AM: 3 Watts FM: (Low): Approx. 1 Watts
Modulation	SSB: Balanced modulation FM: Variable reactance frequency shift AM: Low power modulation
Maximum Frequency Deviation (FM)	± 5 kHz
Carrier Suppression	Better than 40 dB
Sideband Suppression	Better than 40 dB
Spurious Radiation	Better than -60 dB
Microphone	Low impedance microphone (500 Ohms)
AF Response	400 to 2,600 Hz
Repeater Frequency Shift	600 kHz
Tone Burst Duration	0.5 to 1.0 Sec.

RECEIVER

Sensitivity	SSB and CW: $0.25 \mu V$ for 10 dB (S+N)/N AM: $1.0 \mu V$ for 10 dB (S+N)/N FM: $0.4 \mu V$ for 20 dB noise quieting $1.0 \mu V$ for 30 dB (S+N)/N
Intermediate Frequency	SSB, CW and AM: 10.7 MHz FM: 1st 10.7 MHz, 2nd 455 kHz
Selectivity	SSB, CW and AM: 2.4 kHz/-6 dB, 4.8 kHz/-60 dB FM: 12 kHz/-6 dB, 24 kHz/-60 dB
Image Ratio	Better than 70 dB
IF Rejection	Better than 70 dB
Squelch Sensitivity	$0.25 \mu V$
AF Output Power	2 Watts/8 Ohms load, with less than 10% distortion
AF Output Impedance	8 Ohms

The above specifications are subject to change without notice for improvement.

FEATURES

This transceiver is a 144 MHz through 148 MHz, all mode transceiver.

- Highly reliable VFO.
- Kenwood's stable FM circuitry
- Built-in VOX, featuring semi-brake in CW
- Built in CW side tone circuit.
- Easy to use band change system, with a single knob.
- Built in Digital Display
- Built in Receiver Pre Amp.
- Digital display features 7 digit green fluorescent indicating tube.
- Carrier position can be read directly for each mode selected.
- Frequencies of fixed channels, and remote VFO is directly read.

Advanced Design Features

- The analog type sub-dial is calibrated at 100 kHz intervals for easy checking of receive frequencies.
- The two speed dial mechanism features 25 kHz per turn (inner main knob), and 100 kHz per turn (outer fast forward knob).
- The drive control is automatically switched at each band change in order to maintain optimum tuning conditions.
- The panel layout is based on human engineered technology.
- Indicating lamps are provided for VFO, RIT, and ON AIR.
- Amplification type AGC and ALC circuits are employed to maintain constant transmitting and receiving levels.

Spurious Reduction

- High selectivity circuit voltage vari-caps are used in both transmit and receive RF amplifiers.
- Latest technology double balanced IC mixer is used to assure minimums spurious signals.
- Both the VFO and Band Pass Filter units are well shielded.

Auxiliary functions

- Kenwood's unique noise blanker circuitry eliminates pulse type noise.
- The FM squelch circuit is triggered by noise.
- There is a newly developed S-Meter which indicates S units as well as center meter and relative power output.
- Fixed channel operation is possible with the installation of 11 optional crystals.
- There is a High/Low switch for reduction of RF output.
- RIT circuit operates with VFO as well as with fixed channels.
- There is a receiver Pre Amp, which is effective for DX SSB operation.
- Split frequency operation is possible with the optional VFO-700S Remote VFO.

Designed for fixed and mobile operation

- The TS-700S features both AC and DC built in supplies.
- Accessories include high performance hand type microphone.
- There is a convenient carrying handle.
- High level audio output (2 Watts into 8 Ohms) permits operation in noisy mobile locations.
- Built in speaker (9 CM by 6 CM). There is a jack for external speaker connection.

GENERAL / CIRCUIT DESCRIPTION

This unit is a 2 Meter, all mode, all solid state, professional type transceiver designed to operate in the amateur bands of 144 to 148 MHz, with CW, AM, SSB and FM transmissions. The receiver section for SSB, CW and AM is of the single conversion superheterodyne type, and for FM is of the double conversion superheterodyne type. The transmitter section is single conversion, featuring Filter type SSB, FM is variable reactance-direct conversion type circuitry, and the AM section is low power modulation type. CW is of the block bias keying type.

Table 1 shows the oscillation frequency of each unit.

UNIT	MODE	FREQUENCY
HET Unit	K type	144
		145
		146
		147
		145.4
		147.6
	W, T type	144
		145
		RPT

Table 1 Oscillation Frequency of Each Unit

1. RX · NB Unit (X55-1170-11) K type
(X55-1170-00) W, T type

The RF circuit has a 4-stage tuning circuit with vari-cap diodes. By adjusting the drive knob, the vari-cap voltage is controlled for optimum tuning. This largely improves the reception of spurious signals. The RF amplifier is operated by setting the R. DX switch to ON. The amplifier uses a low noise FET to provide about 5dB gain. Normally, the R. DX switch is set to OFF. When receiving signals adjacent to threshold level during FM operation, this switch should be set to ON. The gain control volume (VR5) is for adjustment of IF gain when R.DX switch is ON. A semi-fixed volume is also contained in the unit for adjustment of S meter and RF meter as well as center meter.

2. FM · IF Unit (X48-1140-20) K type
(X48-1140-61) W type
(X48-1140-51) T type

This unit operates only in FM mode and serves to obtain the second IF signal of 455KHz, mixing the second oscillator signal of 10.245 MHz and the first IF signal of 10.7 MHz taken from RX-NB unit.

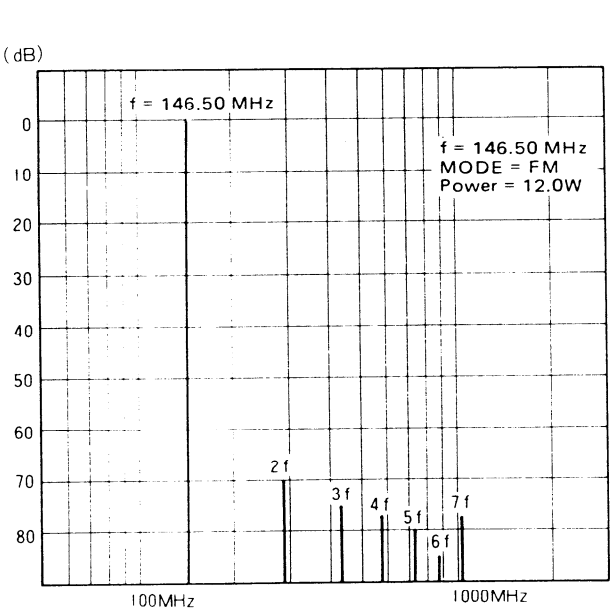


Fig. 1(a) An example of harmonics spurious

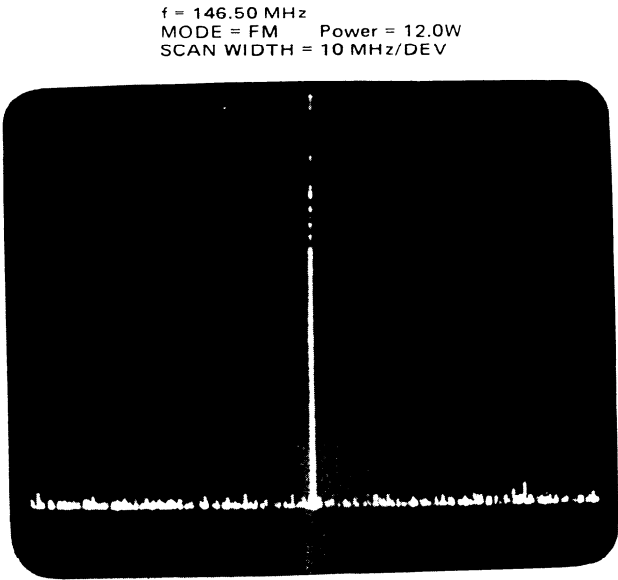


Fig. 1(b) An example of adjacent spurious

CIRCUIT DESCRIPTION

3. HET Unit (X50-1410-11) K type (X50-1410-61) W, T type

A 3-stage tuning circuit is provided after the MIX stage to suppress spurious of heterodyne signal in 133MHz band. External VFO (VFO-700S) is available as an optional accessory for use with the unit. With VFO-700S connected to the unit, the RIT circuit is automatically switched OFF by the relay in the unit, when the function switch is set to the external VFO position. Thus, the internal RIT circuit does not operate while the RIT in external VFO is in operation.

4. CAR·VOX Unit (X50-1420-00)

This unit is composed of a carrier oscillator circuit, a VOX circuit and a side-tone oscillator circuit. Semi-break-in operation in CW mode is possible by using side-tone signal.

5. BPF Unit (L79-0432-15) K type (L79-0430-15) W, T type

Double tuning configuration is employed. This results in eliminating the FINAL knob and contributes to improve handling.

6. Power Supply Unit (X43-1240-01)

The power supply unit contains a DC-DC converter to supply power to the fluorescent display tubes. It delivers outputs of AC 3.5V and DC-24V with 5V input. Oscillation frequency of DC-DC converter is 11KHz.

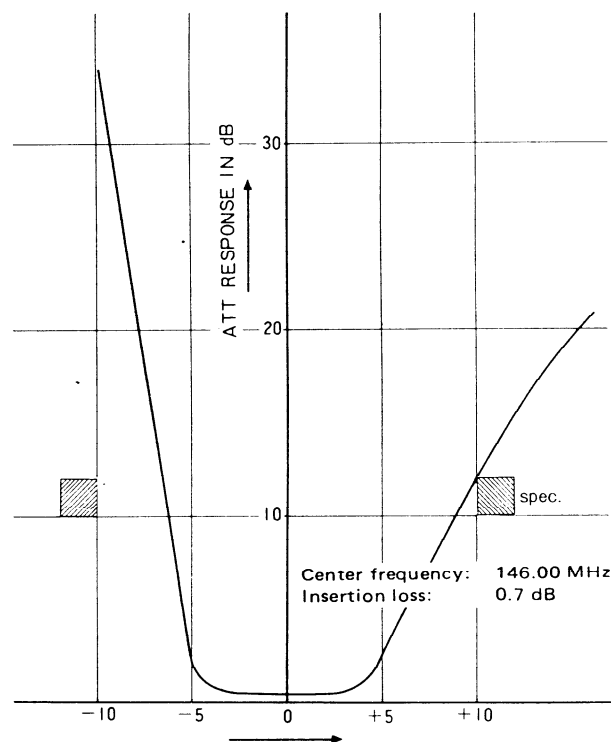


Fig. 2(a) An example of BPF characteristic (K type)

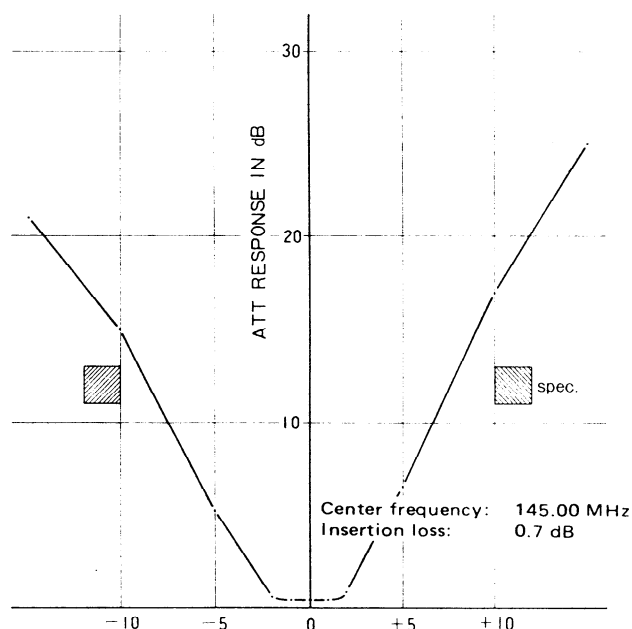


Fig. 2(b) An example of BPF characteristic (W, T type)

A latch pulse is generated by IC6-a, IC7-c and IC7-f in the delay circuit composed of R64 and C30 when the count is completed. The output of the counter IC (IC9) at "H" appears as output of the latch IC (IC10). The output at "L" remains unchanged even when the input of the latch IC is changed. IC8 functions in the same way.

When the DS terminal of IC9 is “L”, a preset input appears in QA-QD as an output. When DS is “H”, the count is started from the value reset. Since the number of the input pulse to CK1 of IC9 is “1”, the value of preset input plus “1” appears in QA-QD as a counter output. By combining the input to CK1 and the preset input corresponding to the operating band, the accurate frequency is displayed according to the position of the band switch. **Table 2** shows the preset input. When the CK terminal is “H”, the output of IC10 (Q1-4) varies with the input (D1-4). When the CK is shifted to “L”, the output is maintained in the original state.



CIRCUIT DESCRIPTION

The output of IC8 is dynamic. Since the digital scan output has 4 digits, the digital scan pulse as shown in the time chart (BO of Fig. 5) is obtained when the output is received by IC11.

The circuit Q9-16 has a switching function. When it is ON, the display unit will light; the output of G1-7, 9 is about +4.5V. When this circuit is OFF, the display unit goes off where the output is -24V.

The fluorescent tubes in the display unit are of the dynamic lighting system. The counter unit has IC8 and IC10 to produce two different outputs. In order to operate the display tubes, the count outputs of IC8 and IC10 must be applied to the plate of display tubes according to the digit scan pulse; this is accomplished by IC15 which selects these outputs.

When SL of IC15 is "L", the A output or the input from IC8 appears on the output side. When it is "H", the B output or the input from IC10 appears on the output side. This output is BCD and is indicated on 7-segment display by means of IC16. The input from IC10 is a signal of 1MHz digit. Only when G5 is ON, it should be indicated as an output of IC16. If the output appears when G9, 7, or 6 is ON, the indication becomes incorrect. Therefore, when G9, 7 or 6 is ON, BI/RBO of IC16 is set to "L" and all the outputs a-g are set to "H" so that the switching transistors Q17-23 can be set to OFF. In this way, the display tubes do not respond to the count output of IC9.

The output level of PA-PG is the same as that of G1-7, 9, thereby the segments to be displayed are maintained at a high voltage. The indication of 100MHz digit and 10MHz digit as well as the decimal point remain unchanged regardless of the value counted, so the corresponding digit scan pulse, which passes through the switching diode, is used to light each segment.

For example, the two decimal points will light by D9 and 10, the 100MHz digit " / " by D17 and 18 and the 10MHz digit " 4 " by D15, 16, 19 and 20.

BAND (K type)	BCD CODE				DECIMAL NUMBER
	A	B	C	D	
144	1	1	0	0	3
145	0	0	1	0	4
146	1	0	1	0	5
147	0	1	1	0	6

Table 2 Preset Input of IC9 (SN74/76N)

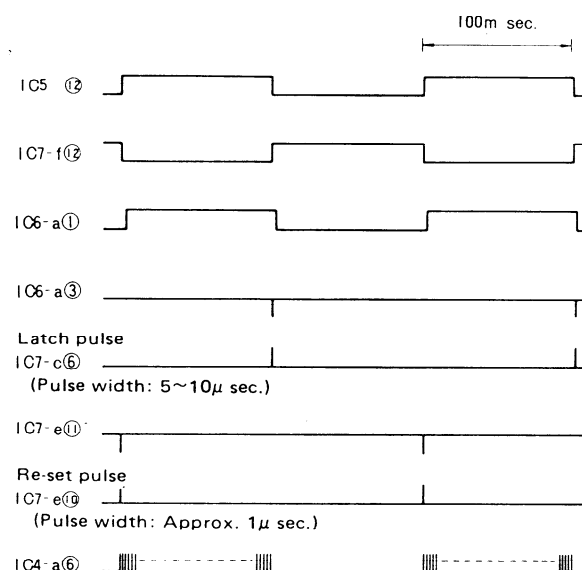


Fig. 4 Timing chart (A), Generation of Latch pulse and Re-set pulse

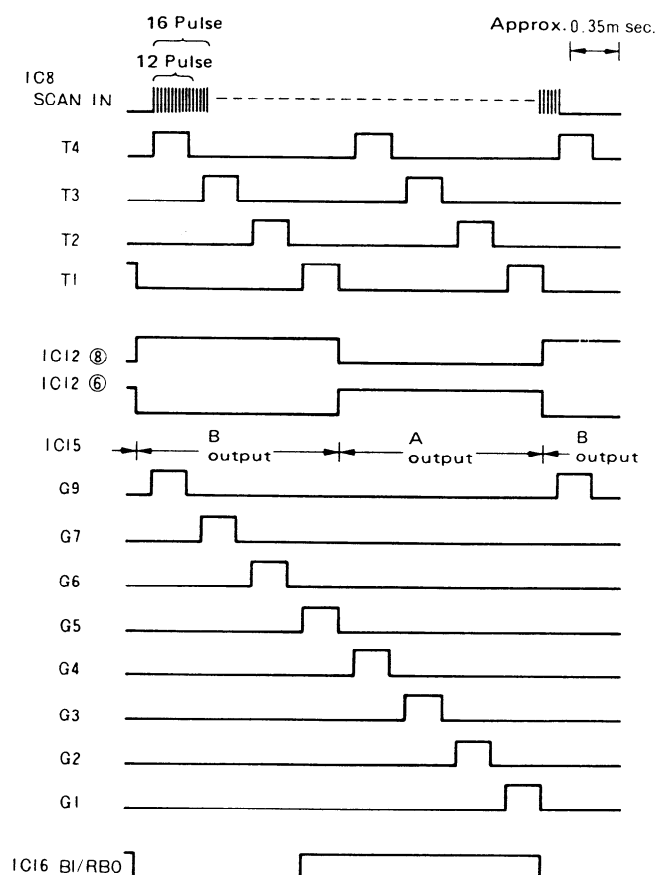


Fig. 5 Timing chart (B)

CIRCUIT DESCRIPTION/MECHANISM DESCRIPTION

9. To Turn OFF Fluorescent Display Tubes

When the oscillation of VFO or FIX CH stops, the fluorescent tube goes off. When VFO stops, the output from the PL terminal of the HET unit is 4.8V and Q8 turns to ON. Since IC11 is an AND gate, the output is "L" regardless of whether the scan pulse of IC8 is "H" or "L". Thus, the display tubes turn OFF because of the absence of the scan pulse.

10. To Turn OFF 100Hz Digit in FM Mode

During FM operation, the 100Hz digit is less used than in the case of other modes. This digit can be set to OFF as necessary by using the switch as shown in Fig. 6.

Set this switch to NORMAL when the mode switch is in FM position. Then, FMB (9V) is fed to the FBL terminal and the base of Q16 becomes "H" level and turns to OFF. At this time, the collector output becomes -24V and thus the 100Hz digit display segment goes off.

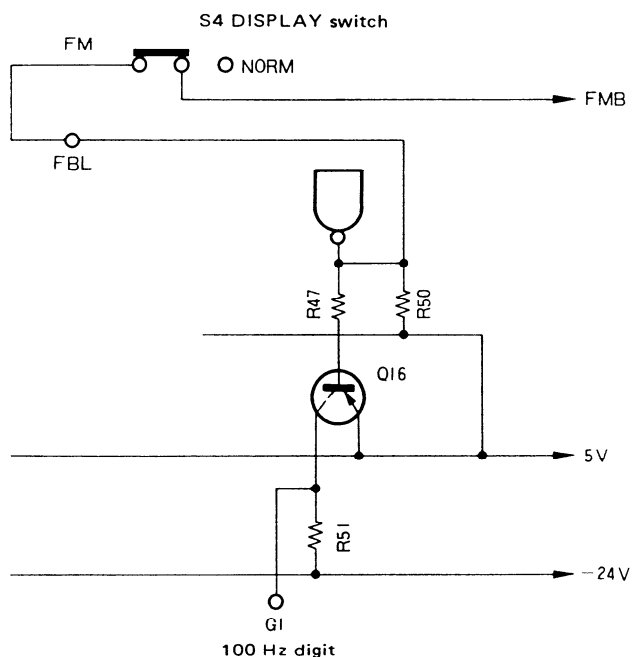


Fig. 6 Turning off Circuit of 100 Hz Digit

1. VFO Knob

The VFO knob is larger (outside 50mm ϕ , inside 40mm ϕ) than that of TS-700A, providing easier operation and better operating touch. This also improved the flywheel effect, thus permitting the knob to be rotated very smoothly.

2. VFO Gear Mechanism

The unit uses a newly developed clutch type VFO gear mechanism. As shown in Fig. 7, the clutch unit is composed of the phase gear A, phase gear B, intermediate phase gear C, and spring. Turning the VFO knob clockwise will operate the clutch between the phase gear A and the one side of the intermediate phase gear C; turning the knob counterclockwise will operate the clutch between the phase gear B and the one side of the intermediate phase gear C. This minimizes the fluctuation of the dial scale during the operation of the clutch. The clutch is positioned at the final stage and is operated by turning either the large or small VFO knob, without causing damage to the gear. The operating touch is also improved by the use of new material in the gear.

3. Dial Plate

The dial plate of the unit features digital indication and analog indication. It is calibrated up to 285.6° and is mounted on the shaft of the VFO knob.

When the operating frequency is rapidly changed, the figures tend to twinkle because the digital indication changes quickly. In this case, the dial scale should be set to the approximate operating frequency and then the digital indication used for accurate frequency.



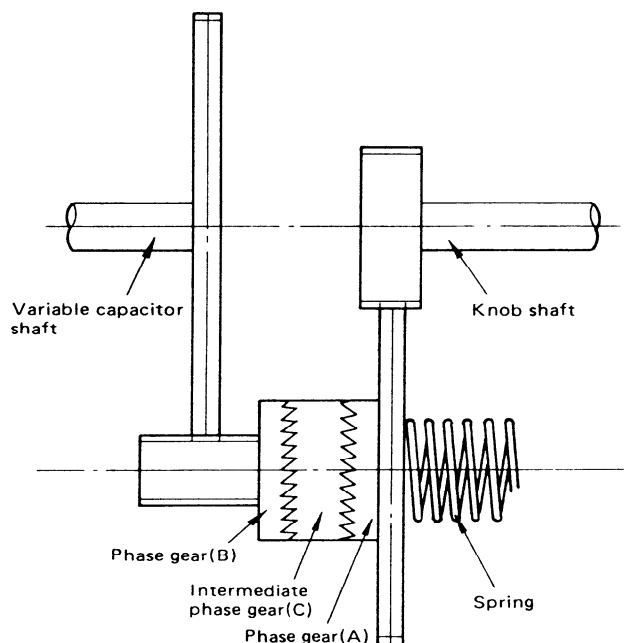


Fig. 7 Clutch Section of VFO Gear Mechanism


Item	Code	Rating	Unit
Collector-emitter breakdown voltage	V_{CEO}	35	V _{dc}
Collector-base breakdown voltage*	V_{CB}	65	V _d
Emitter-base breakdown voltage	V_{EB}	4.0	V _{dc}
Collector cut-off current	I_C	3.0	A _{dc}
Allowable loss	P_D	30	W
		171	mW/°C
Operating ambient temperature	T_{stg} , T_j	−65~200	°C

[illegible]

PIN CONNECTION

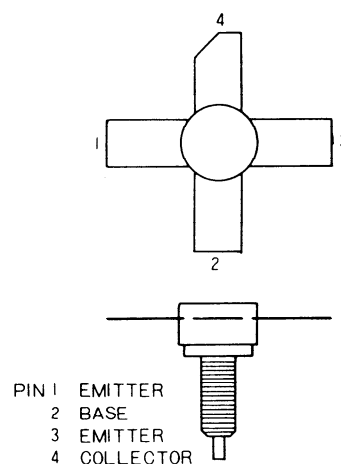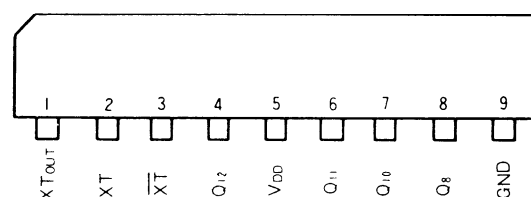

LOGICAL DIAGRAM

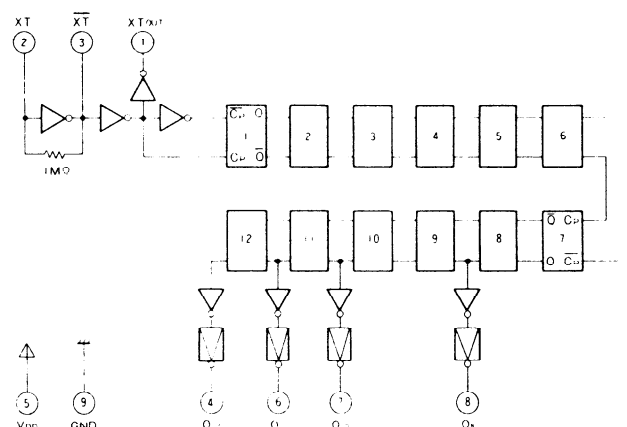


PIN-NO	8	7	6	4	1
PIN NAME	Q ₈	Q ₁₀	Q ₁₁	Q ₁₂	XT _{OUT}
Freq. division	1/256	1/1024	1/2018	1/1096	1/1
Output freq. X-tal 10.24MHz	40kHz	10kHz	5 kHz	2.5kHz	10.24MHz

SEMICONDUCTORS DATA

4518P (Counter unit: IC4)

PIN CONNECTION

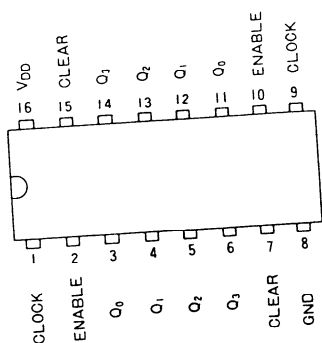

FUNCTION TABLE

CLOCK	ENABLE	CLEAR	OUTPUT = Q
	H	L	UP COUNT
	L	L	NO CHANGE
	☆	L	NO CHANGE
H		L	NO CHANGE
L		L	UP COUNT
☆		L	NO CHANGE
☆	☆	H	L


MSM5502 (Counter unit: IC8)

MSM5502 is a 4-digit counter with built-in oscillator for latch and dynamic lighting; the counting unit is composed of 4 decimal system counters. The output is of a dynamic lighting type, and each digit is selected in turn by the built-in oscillator so as to be fed to BCD OUT.


In the DIGIT SELECT, the digit corresponding to the BCD output becomes "High". In the SCAN IN, the internal oscillator is operated when it is opened or a capacitor is connected between SCAN IN and GND. External frequency (below the internal oscillator frequency) can be applied to SCAN IN. In the LOAD, when it is "High", the information of the counter enters the latch and is delivered to BCD OUT. The output is triggered at the negative edge of the clock pulse. The input/output circuits are of the TTL compatible type.

To latch the data, the LOAD should be set from "High" to "Low" more than 5μS after the count is completed. The RESET resets the counter at "H". It starts to operate normally from the reset condition.

LOGICAL DIAGRAM

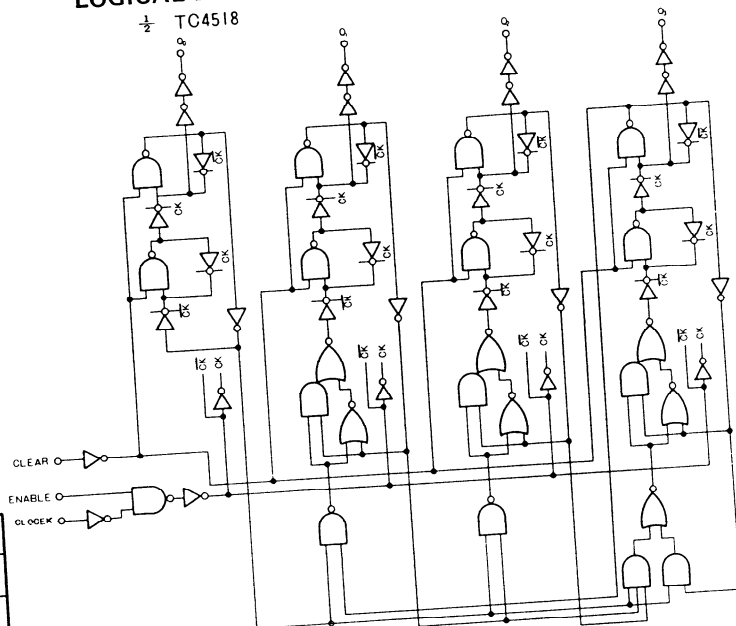


CIRCUIT CONFIGURATION

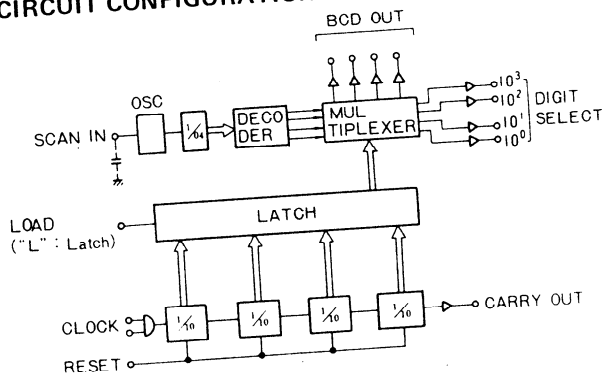



PIN CONNECTION

16 Lead DIP (Resin Type) Top View

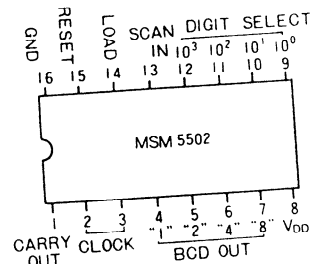

SEMICONDUCTORS DATA


MSM5502 TIMING CHART

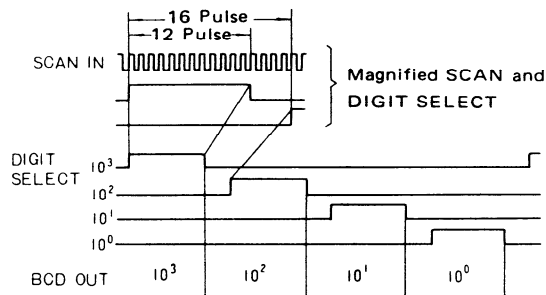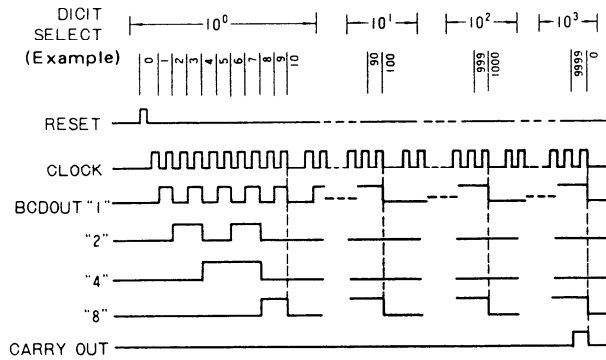

SN74247 (Counter unit: IC16)


FUNCTION TABLE

DECIMAL OR FUNCTION	INPUTS						BI/ROB	OUTPUTS							
	LT	RBI	D	C	B	A		a	b	c	d	e	f	g	
0	H	H	L	L	L	L	H	ON	ON	ON	ON	ON	ON	OFF	
1	H	X	L	L	L	H	H	OFF	ON	ON	OFF	OFF	OFF	OFF	
2	H	X	L	L	H	L	H	ON	ON	OFF	ON	ON	OFF	ON	
3	H	X	L	L	H	H	H	ON	ON	ON	ON	OFF	OFF	ON	
4	H	X	L	H	L	L	H	OFF	ON	ON	OFF	OFF	ON	ON	
5	H	X	L	H	L	H	H	ON	OFF	ON	ON	OFF	ON	ON	
6	H	X	L	H	H	L	H	ON	OFF	ON	ON	ON	ON	ON	
7	H	X	L	H	H	H	H	ON	ON	ON	OFF	OFF	OFF	OFF	
8	H	X	H	L	L	L	H	ON	ON	ON	ON	ON	ON	ON	
9	H	X	H	L	L	H	H	ON	ON	ON	ON	OFF	ON	ON	
10	H	X	H	L	H	L	H	OFF	OFF	OFF	ON	ON	OFF	ON	
11	H	X	H	L	H	H	H	OFF	OFF	ON	ON	OFF	OFF	ON	
12	H	X	H	H	L	L	H	OFF	ON	OFF	OFF	OFF	ON	ON	
13	H	X	H	H	L	H	H	ON	OFF	OFF	ON	OFF	ON	ON	
14	H	X	H	H	H	L	H	OFF	OFF	OFF	ON	ON	ON	ON	
15	H	X	H	H	H	H	H	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
BI	X	X	X	X	X	X	L	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
RBI	H	L	L	L	L	L	L	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
LT	L	X	X	X	X	X	H	ON	ON	ON	ON	ON	ON	ON	

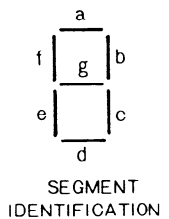


SN74157N



TOP VIEW

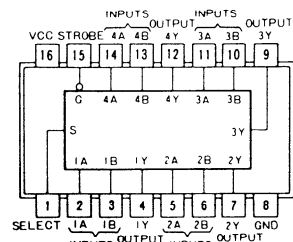



LOGICAL DIAGRAM

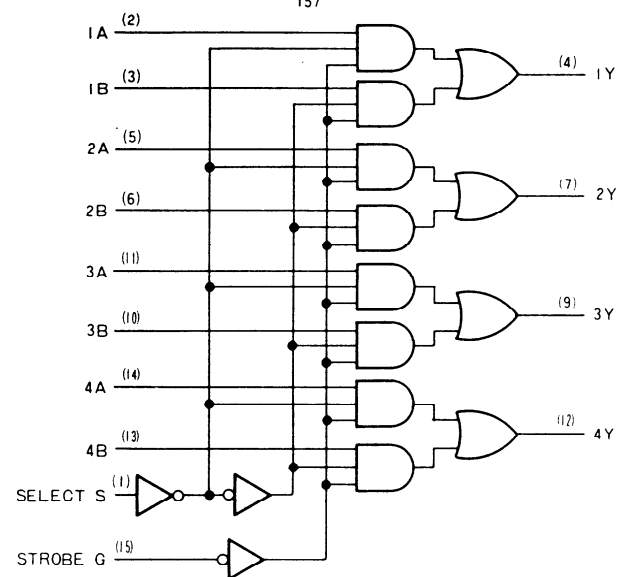

EXTERNAL VIEW

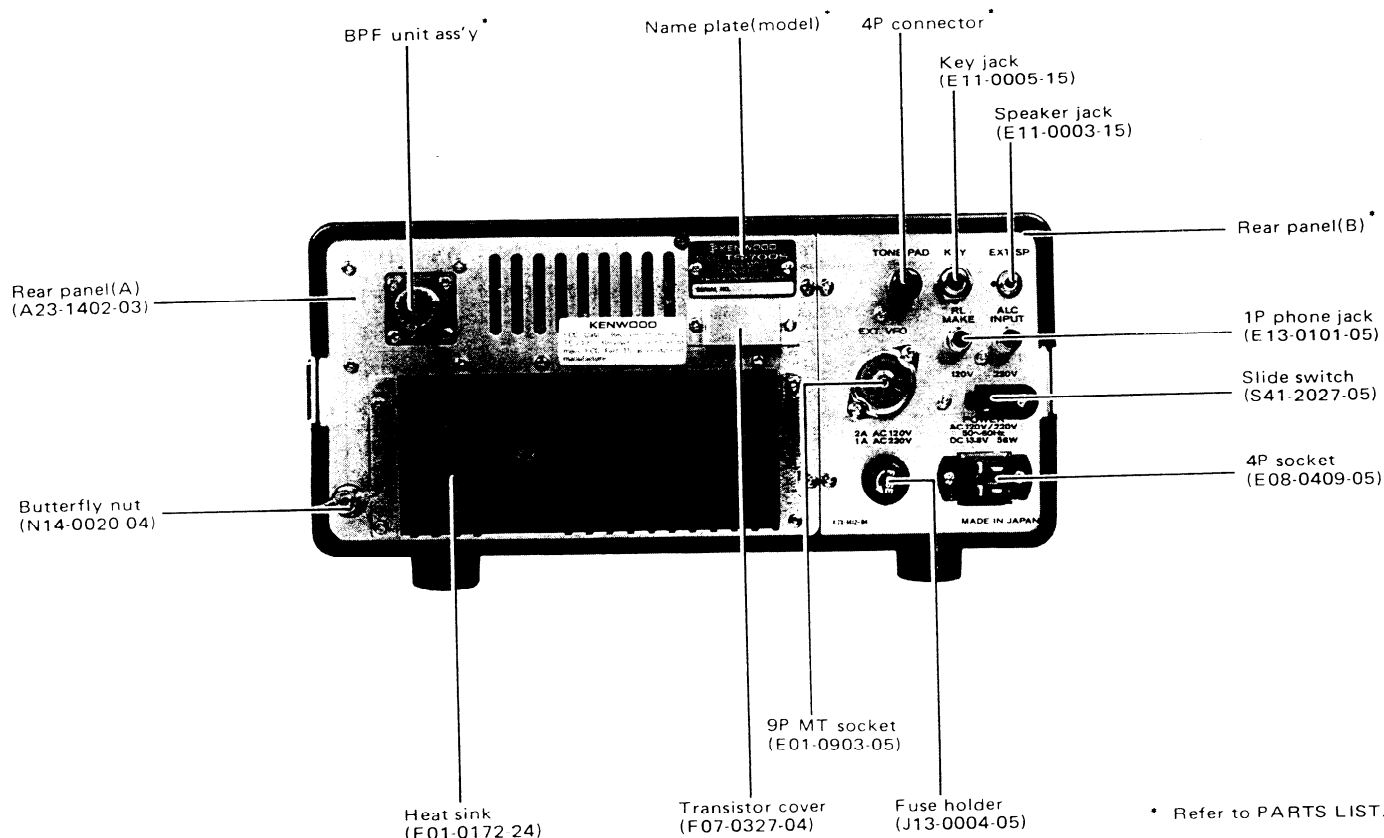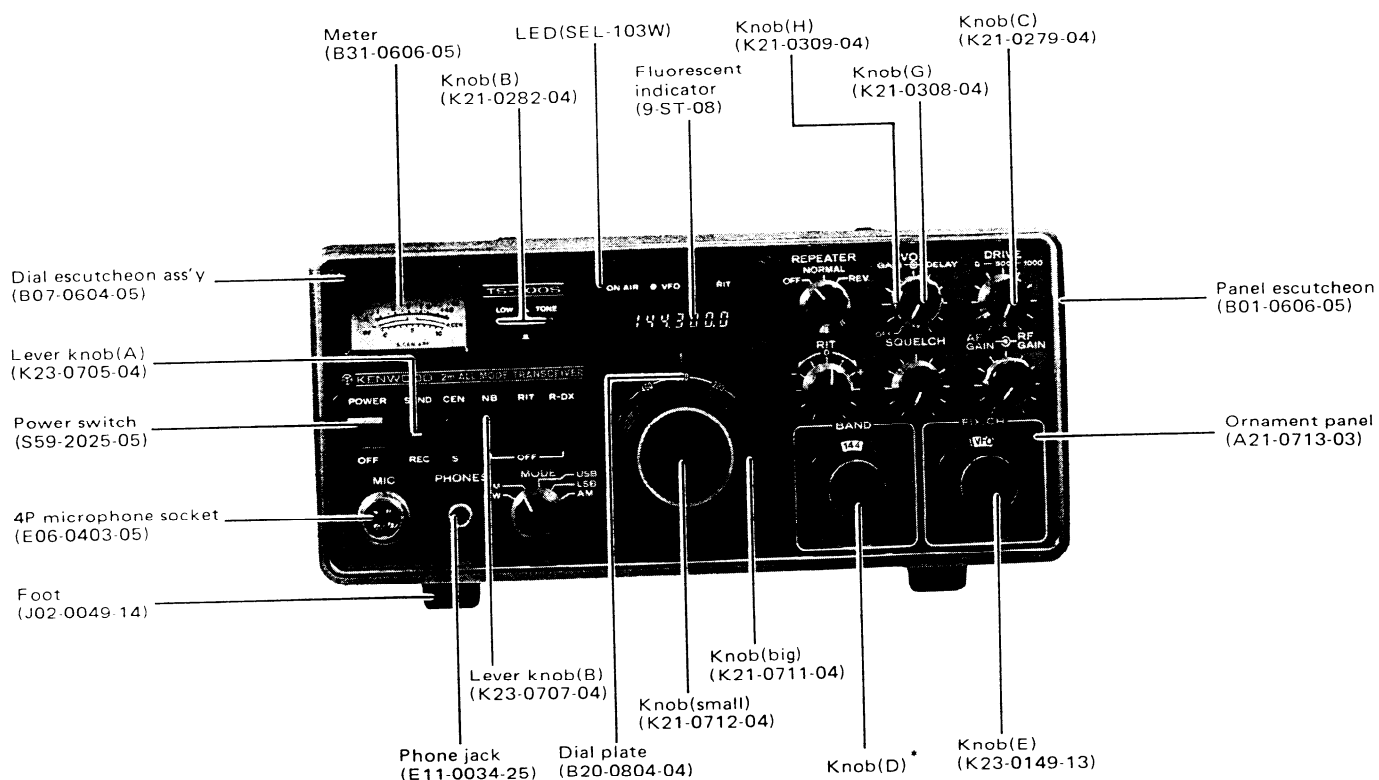


INTERNAL VIEW

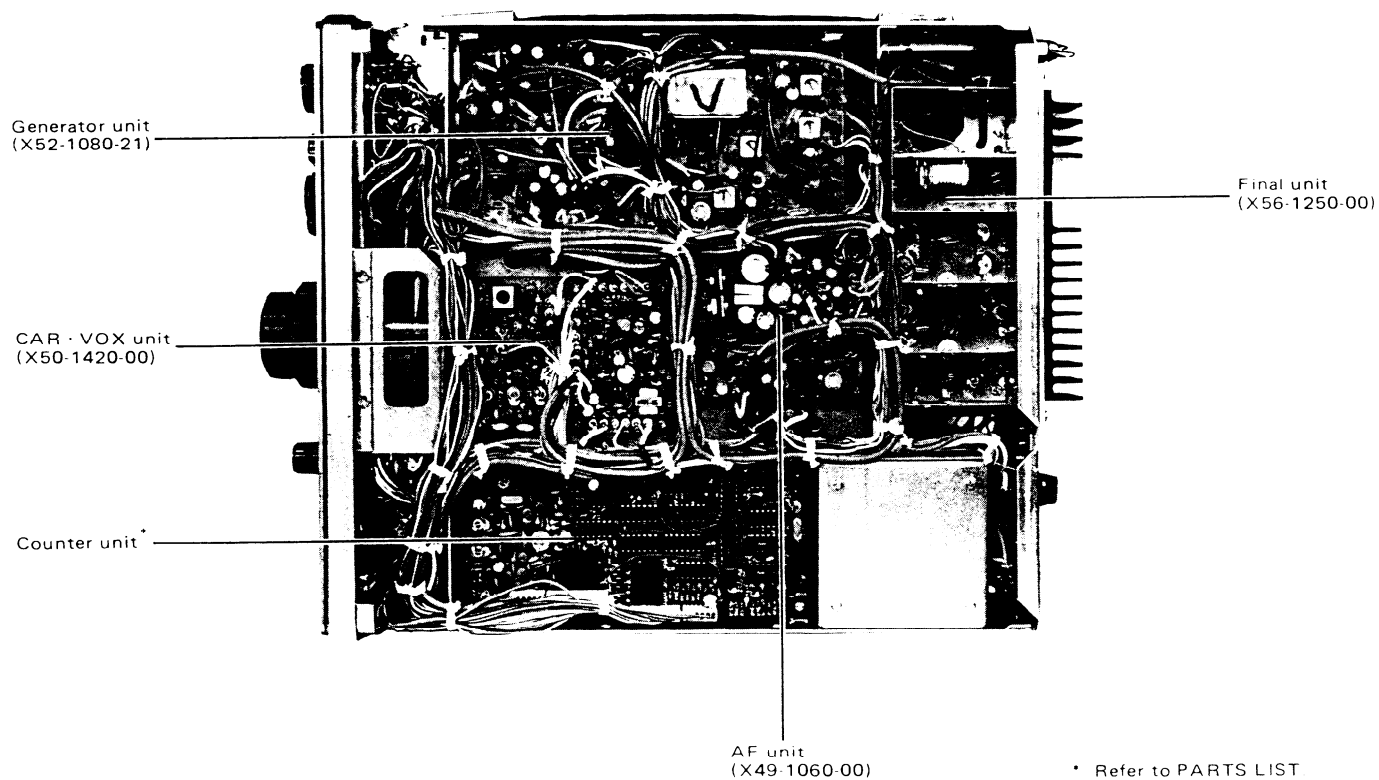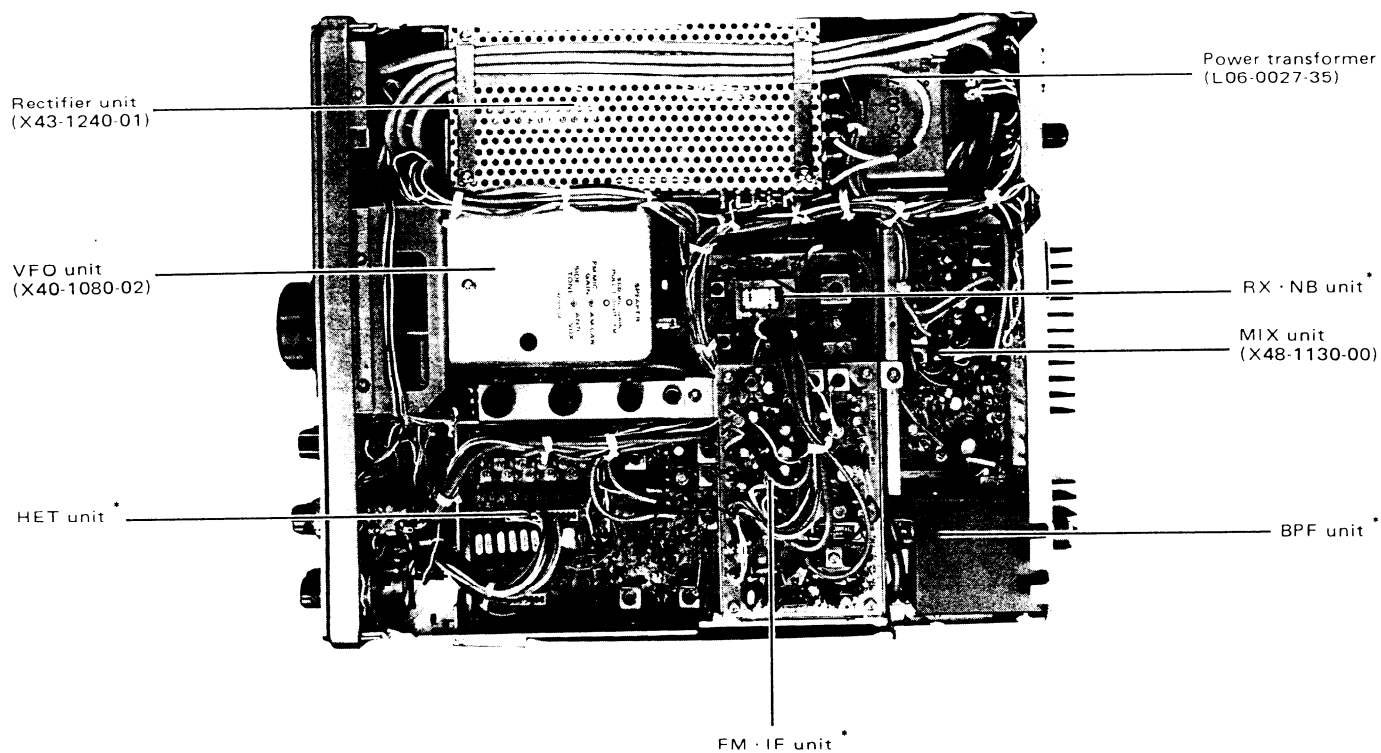



* Refer to PARTS LIST

PC BOARD


▼ VFO UNIT (X40-1080-02)

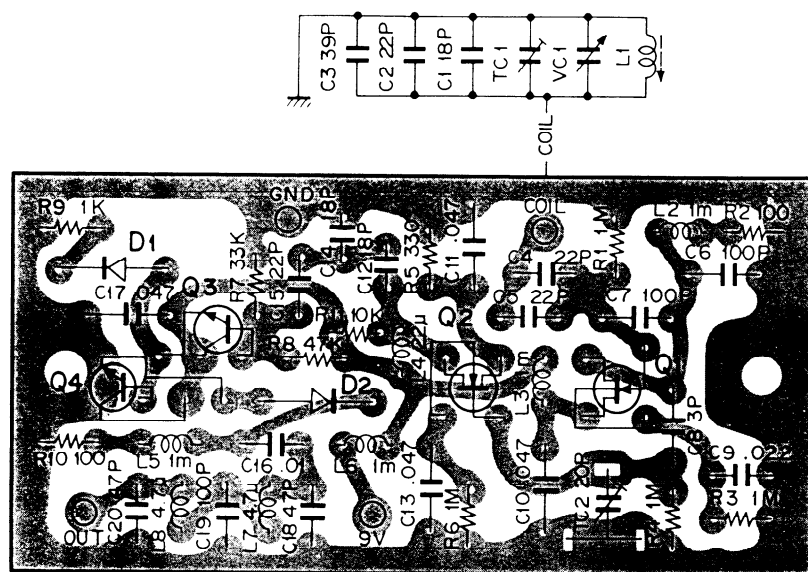


Q1, 2:3SK22(Y), Q3, 4:2SC460(B), D1, 2:1N60

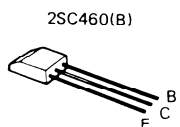

▼ SWITCH UNIT (X41-1060-00)

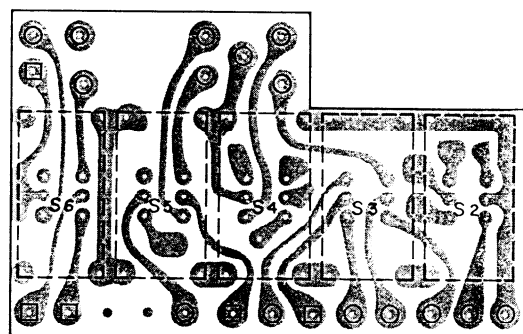


▼ PC BOARD FOR ROTARY SWITCH (J25-1396-04) K type

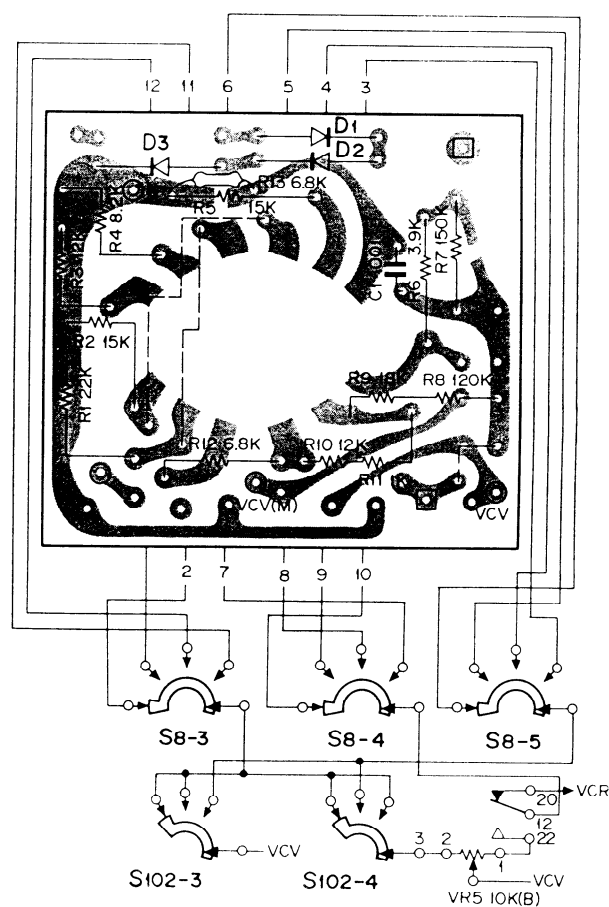

D1~3:1N60


▼ PC BOARD FOR ROTARY SWITCH (J25-2529-04) W, T type

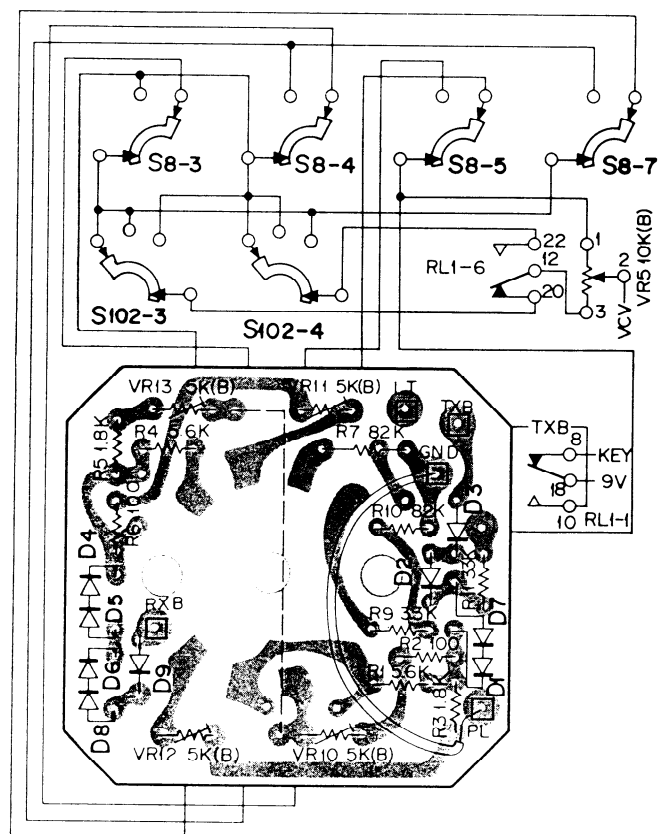


D1~9:1N60

PC BOARD

▼ RECTIFIER UNIT (X43-1240-01)

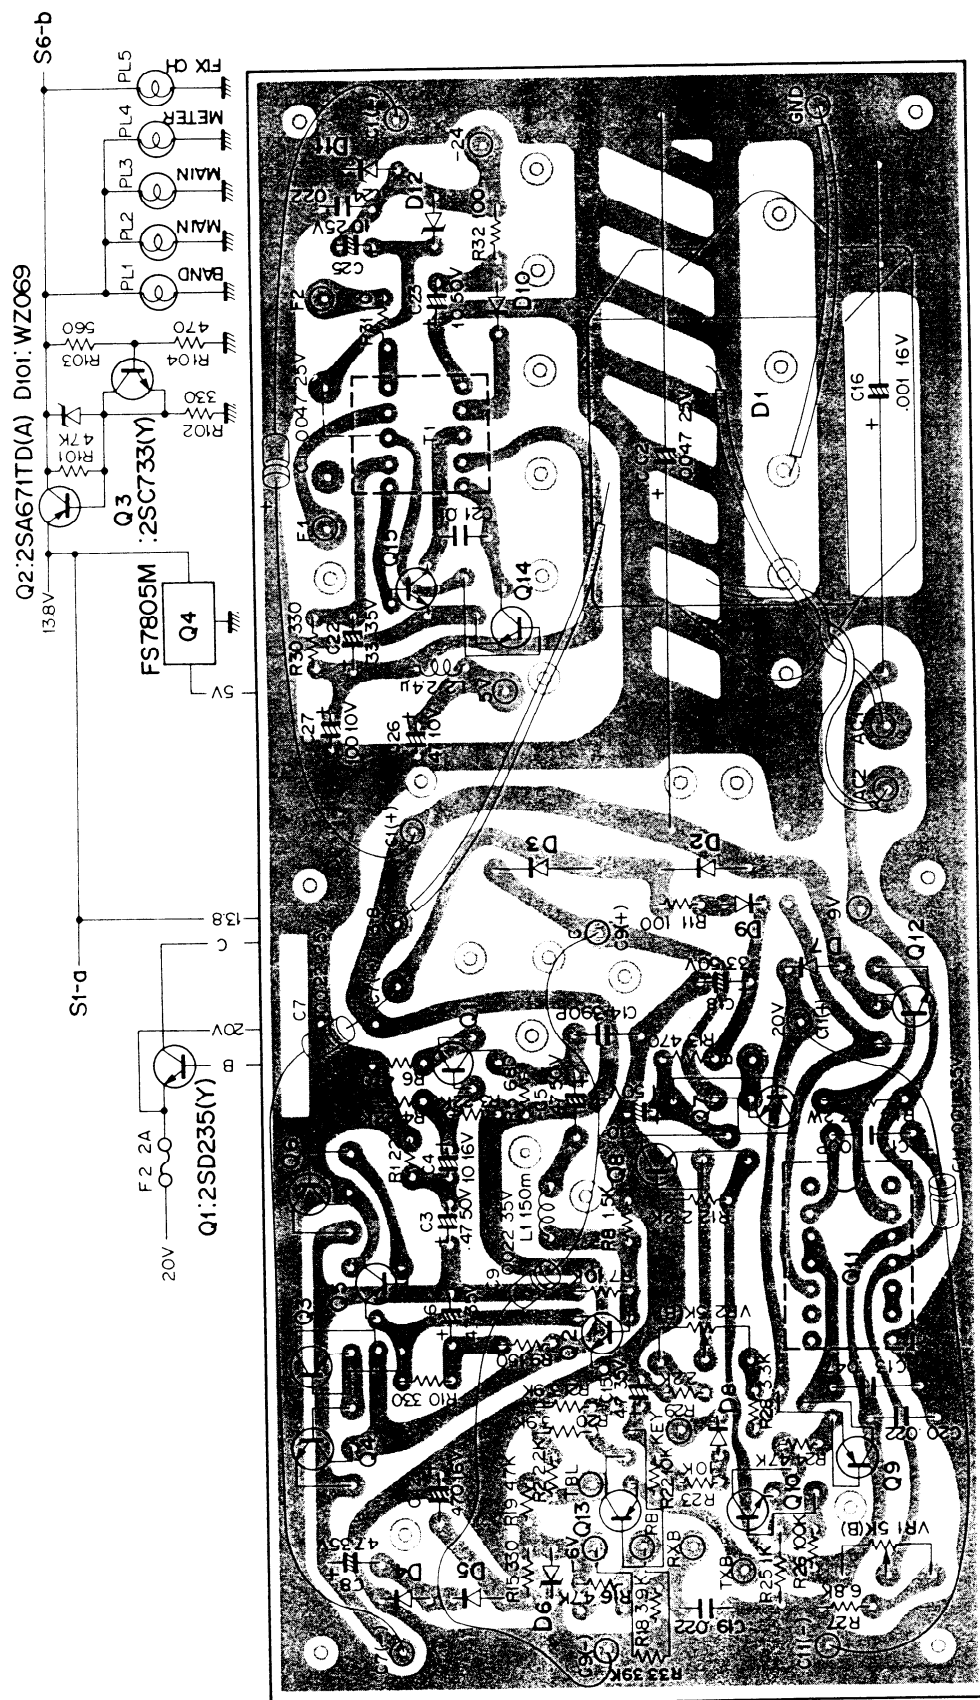


Q1~3: 7, 8, 10: 2SD235(Y), Q4, 12: 2SD235(Y), Q5: 2SB405(R), Q6: 2SA671TD(B), Q9, 13: 2SA495(O or Y), Q11: MC1723CL-A, Q14, 15: 2SC945(P), D1: DS-108N-L, D2, 3: U05B, D4, 5, 7: V06B, D6, 12: WZ-061, D8, 10: 1S1555, D9: 1N60, D11: BZ-240

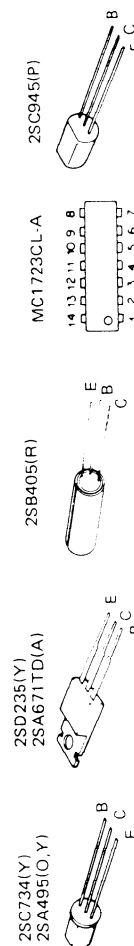

PC BOARD


- ▼ FM·IF UNIT (X48-1140-20) K type
(X48-1140-61) W type
(X48-1140-51) T type

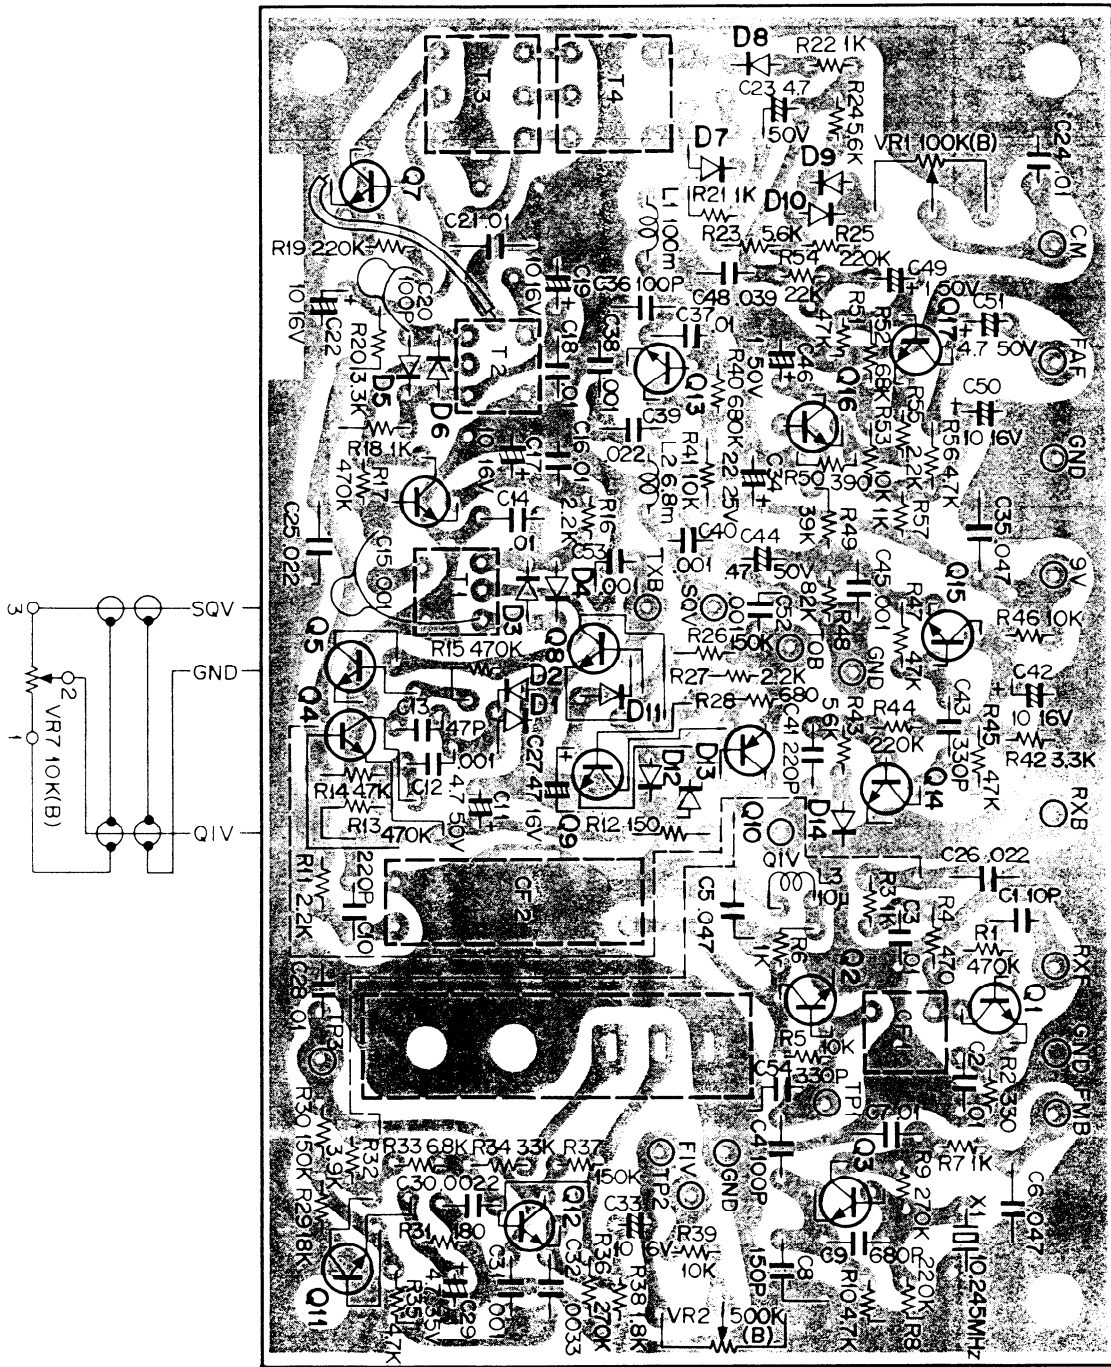

Q1~3, 7:2SC460(B), Q4~6, 15:2SC458(B), Q8, 9, 11~14, 16, 17:2SC733(Y)
Q10, 2SA562(Y), D1, 2, 7, 8:1N60, D3~6, 9~12, 14, 1S1555, D13:WZ-06


FM·IF UNIT DESTINATIONS' PARTS LIST

	K type (-20)	W type (-61)	T type (-51)
R26, 27, 28	○	-	○
C27, 28, 52, 53	○	-	○
Q8, 9, 10	○	-	○
D11, 12, 13	○	-	○
Piezo electric tuning fork	-	○	○
Terminal	13	16	18

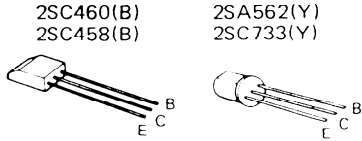


PC BOARD

▼ MIX UNIT (X48-1130-00)

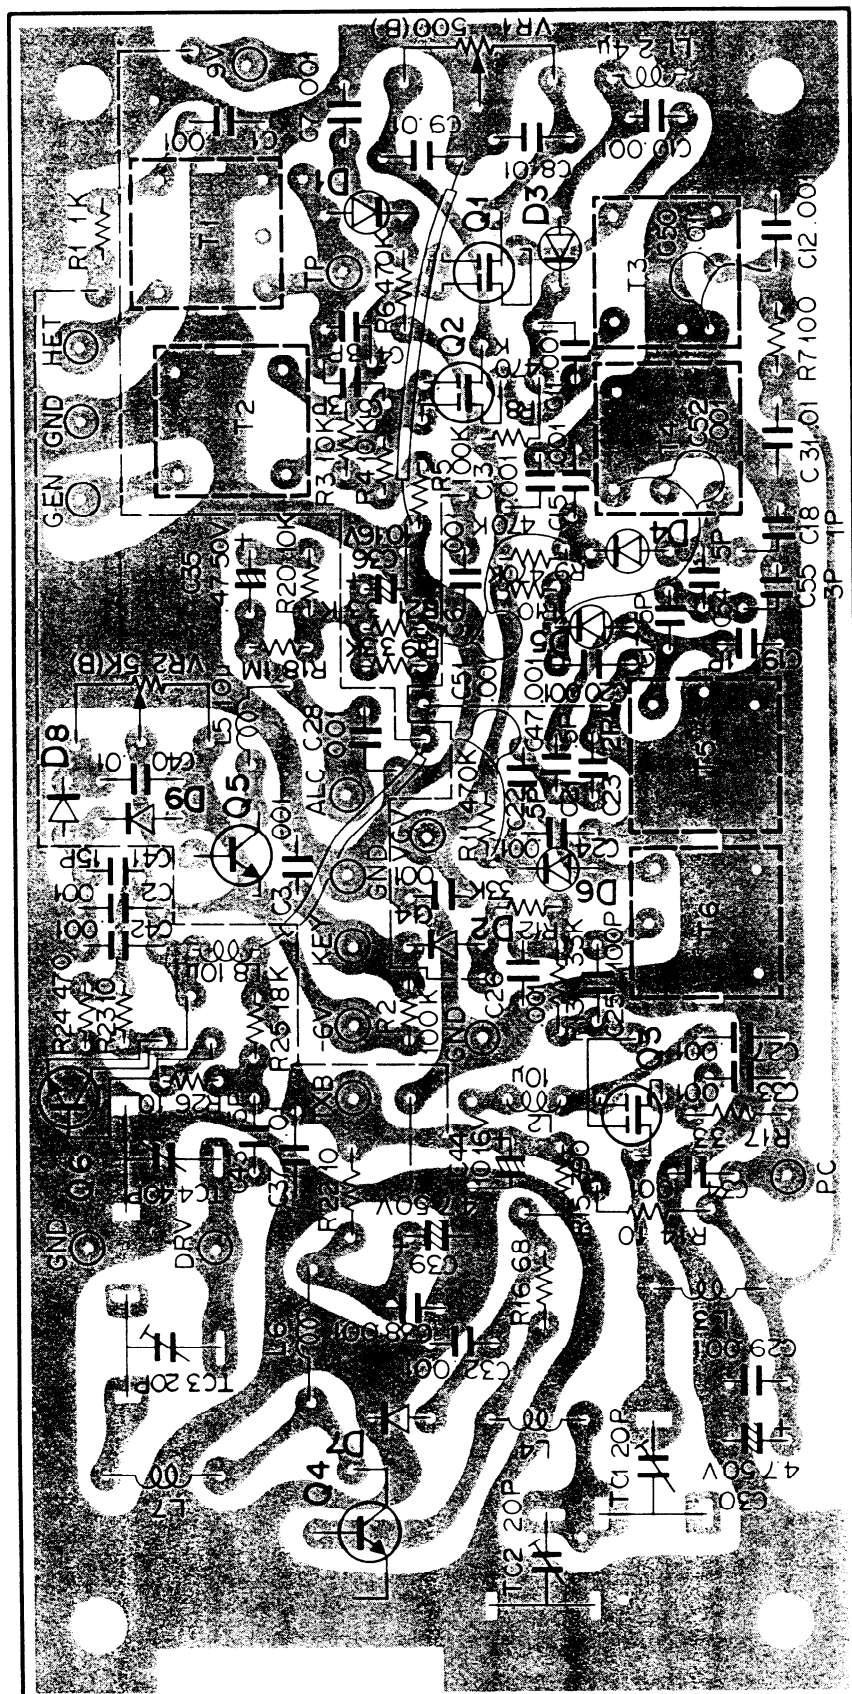


Q1~3: 3SK41(L or M) or 3SK40(L or M), Q4: 2SC998, Q5: 2SC733(Y), Q6: 2SC388A, D1, 3~6: 1S2208,




D2, 7, 1S1555, D8, 9: 1N60

2SC733(Y)
2SC388(A)

2SC998




3SK41(L, M)

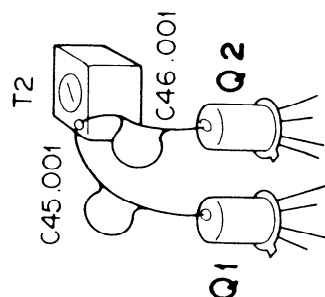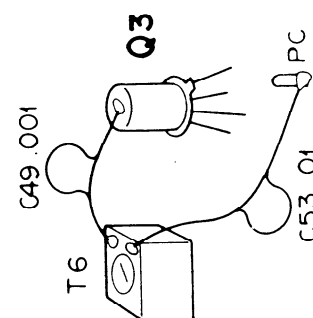


PC BOARD

▼ AF UNIT (X49-1060-00)

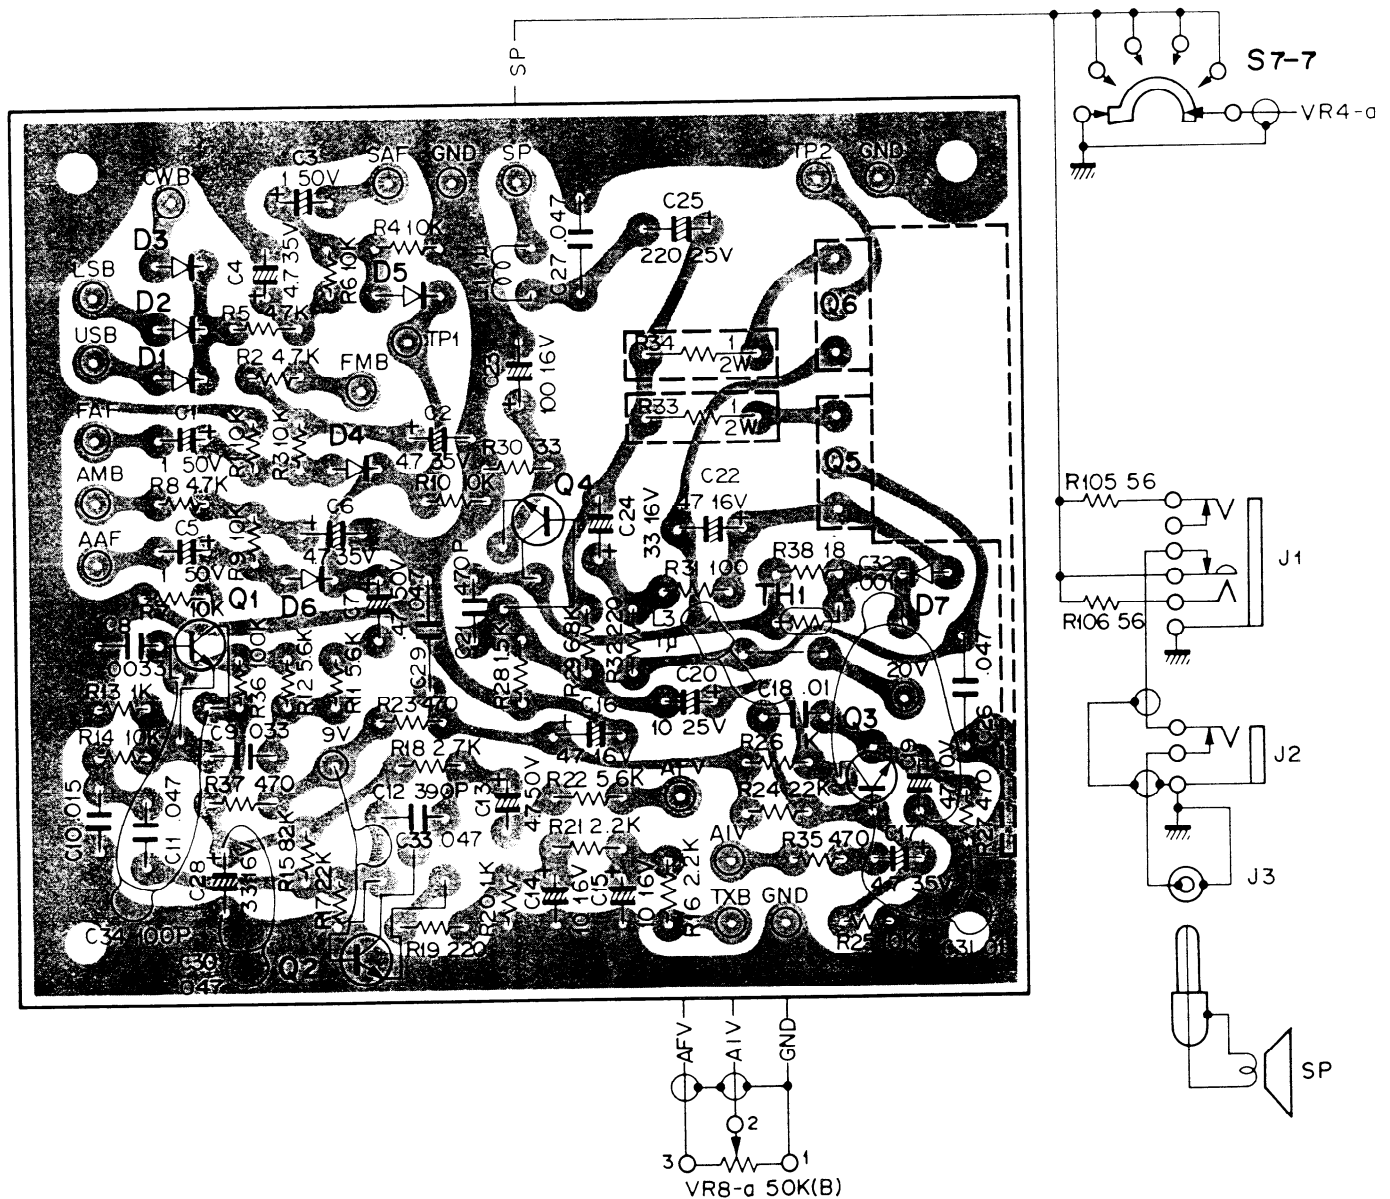


PC BOARD

- ▼ HET UNIT (X50-1410-11) K type
(X50-1410-61) W, T type

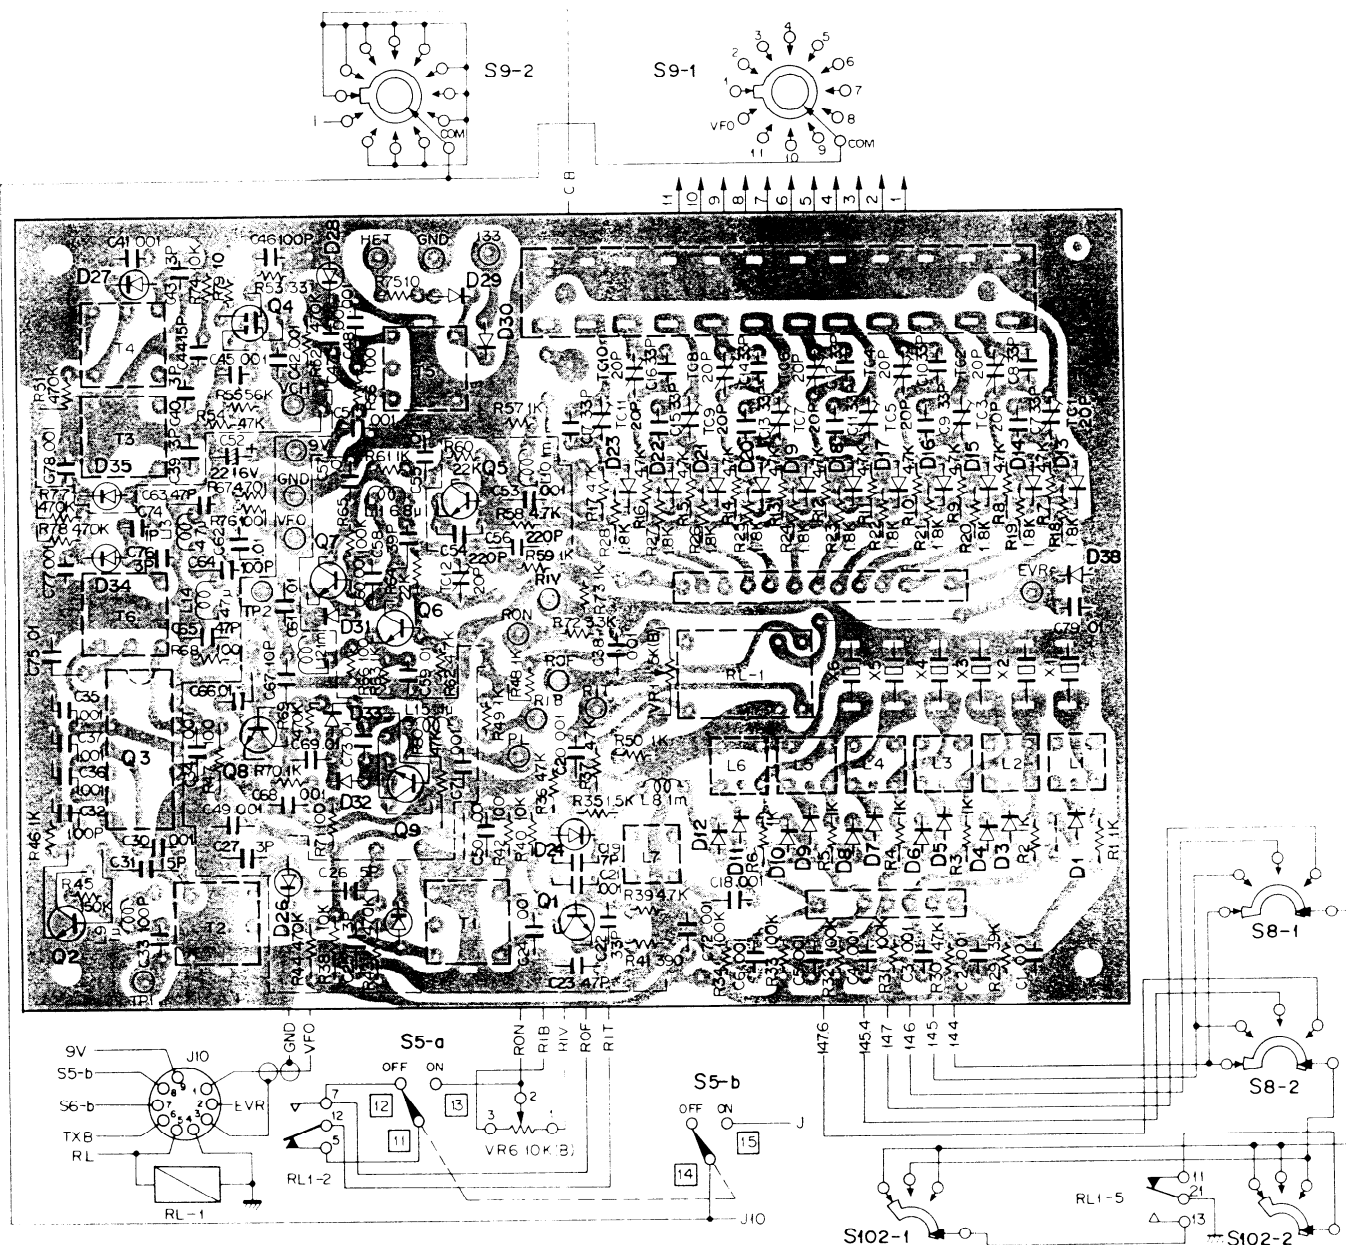


Q1:2SC388A, Q2, 8 2SC460(B), Q3:SN76514N, Q4:3SK41(L) or 3SK40(L), Q5~7 2SC458(B), Q9:2SC733(Y),
D1:1S1587, D3~23, 29, 30, 38:1S1555, D24~28, 34, 35:1S2208, D31~33:1N60


2SC388(A)
2SC733(Y)




2SC460(B)
2SC458(B)



SN76514N



3SK41(L)




HET UNIT DESTINATIONS' PARTS LIST


	C4~6	C25, 27 39	C43	C47	C76	C77, 78	R4~6, 32~34 43, 44, 52, 77, 78	D1	D2	D7~12	D25, 26, 28 34, 35	L4~6
K type (11)	1000 pF	3 pF	3 pF	1000 pF	10 pF	1000 pF	○	1S1587		1S1555	1S2208	○
W, T type (61)		10 pF	5 pF	7 pF	10 pF			1S1555	1S1555			

PC BOARD

▼ CAR · VOX UNIT (X50-1420-00)

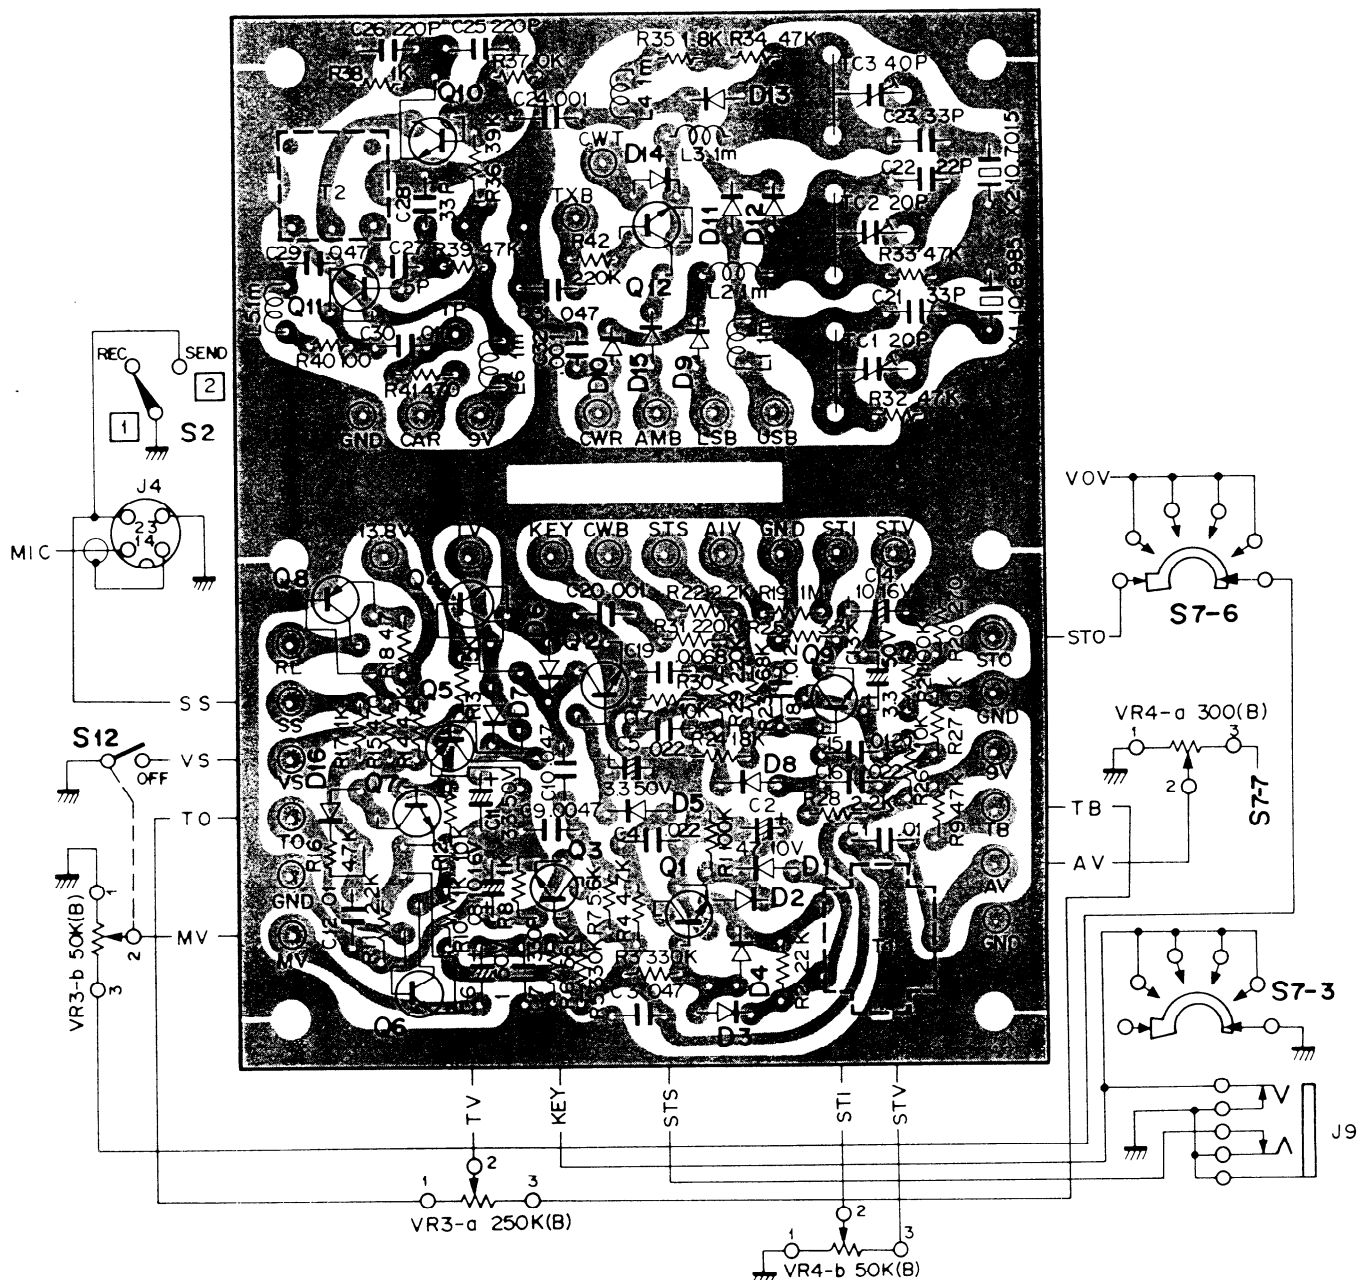


Q1, 2, 4, 6, 7, 9, 11, 12: 2SC733(Y), Q3: 2SC1000(GR), Q5, 8: 2SA562(Y), Q10: 2SC460(B),
D1~4, 6~8: 1N60, D5, 9~16: 1S1555

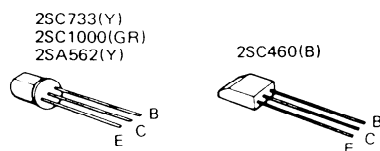





PC BOARD

▼ GENERATOR UNIT (X52-1080-21)

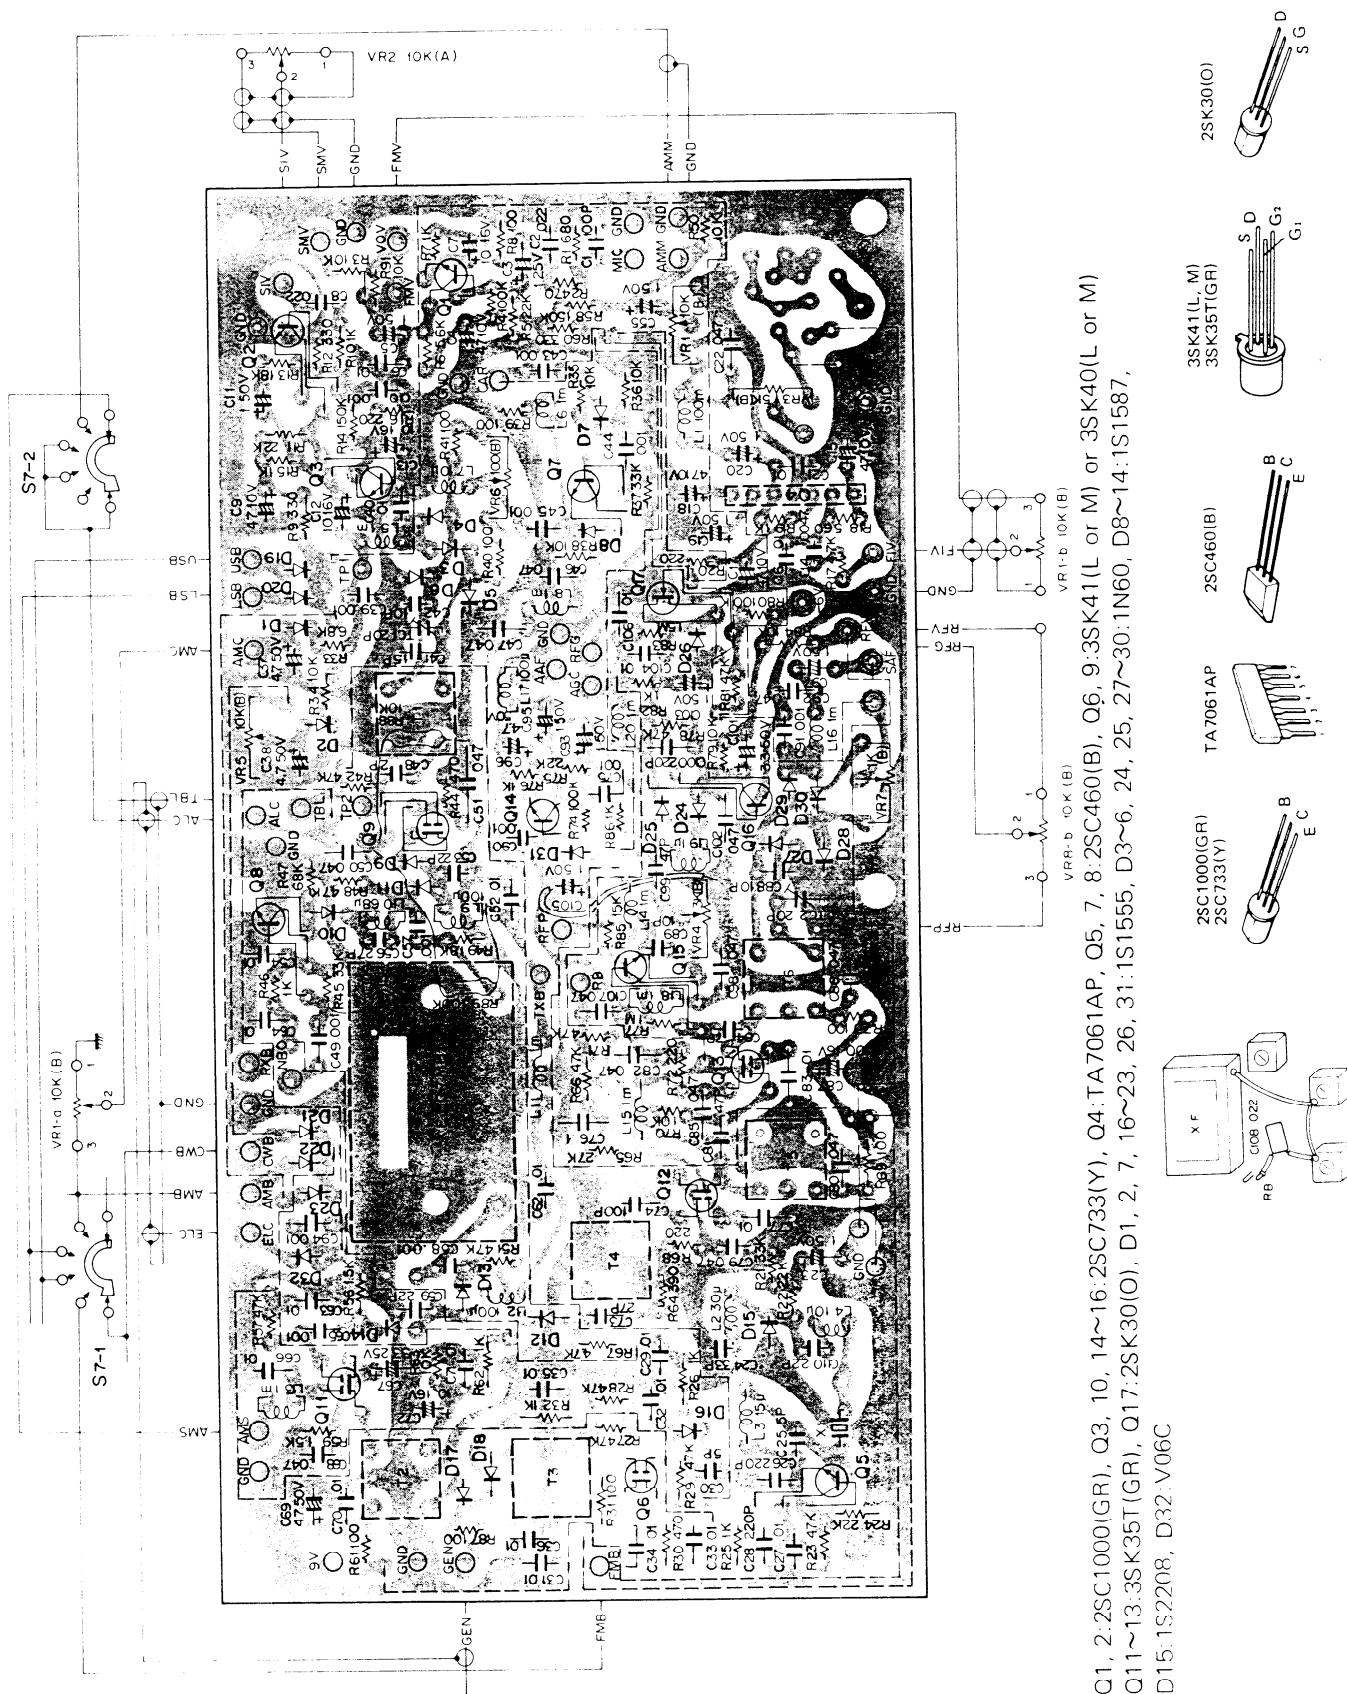


PC BOARD

▼ COUNTER UNIT (X54-1250-11) K type
(X54-1250-61) W, T type

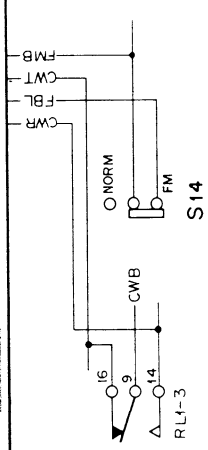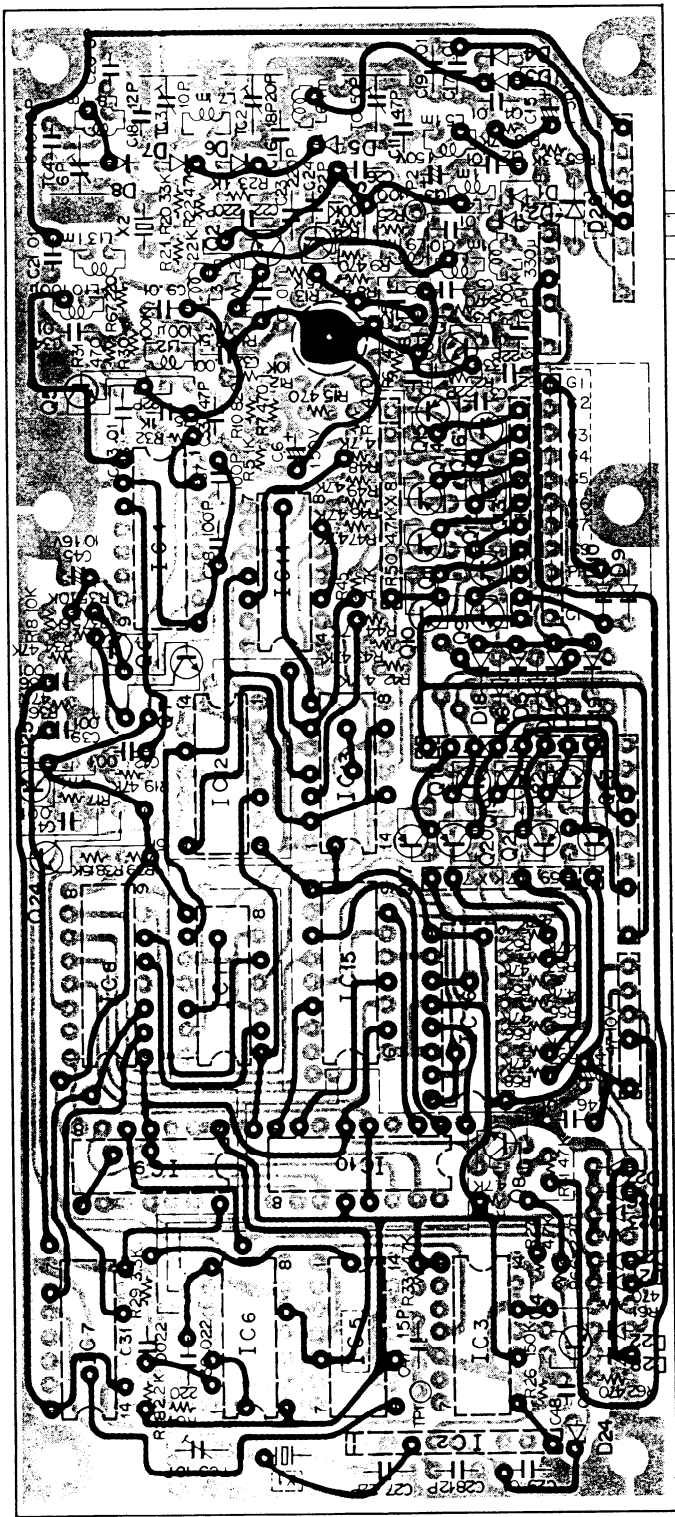

Q1~3, 5:2SC460(B), Q4: 6~8, 24, 25:2SC945(R), Q9~23:2SA733(R), IC1:MC1496G, IC2: TC5082P, IC3, 5:TD3490BP, IC4:TC4518P, IC6, 13, 14:TD3400AP, IC7:TD3404AP, IC8:MSM5502, IC9:SN74176N, IC10:TD3475AP, IC11:SN7408N, IC12:TD3472AP, IC15:SN74157N, IC16:SN74247N, D1~4, 9, 10, 15~23, 25~29:1S1555, D5~8:1S1587, D24:WZ-071

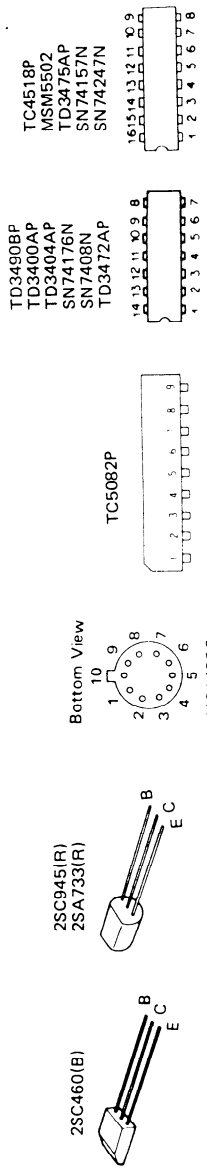


COUNTER UNIT DESTINATIONS' PARTS LIST



	C2	D25~28	3P pin connector	5P pin connector
K type (11)	22 pF	1S1555	○	2
W, T type (-61)	47 pF	-	-	-

PC BOARD

▼ RX · NB UNIT (X55-1170-11) K type
(X55-1170-00) W, T type

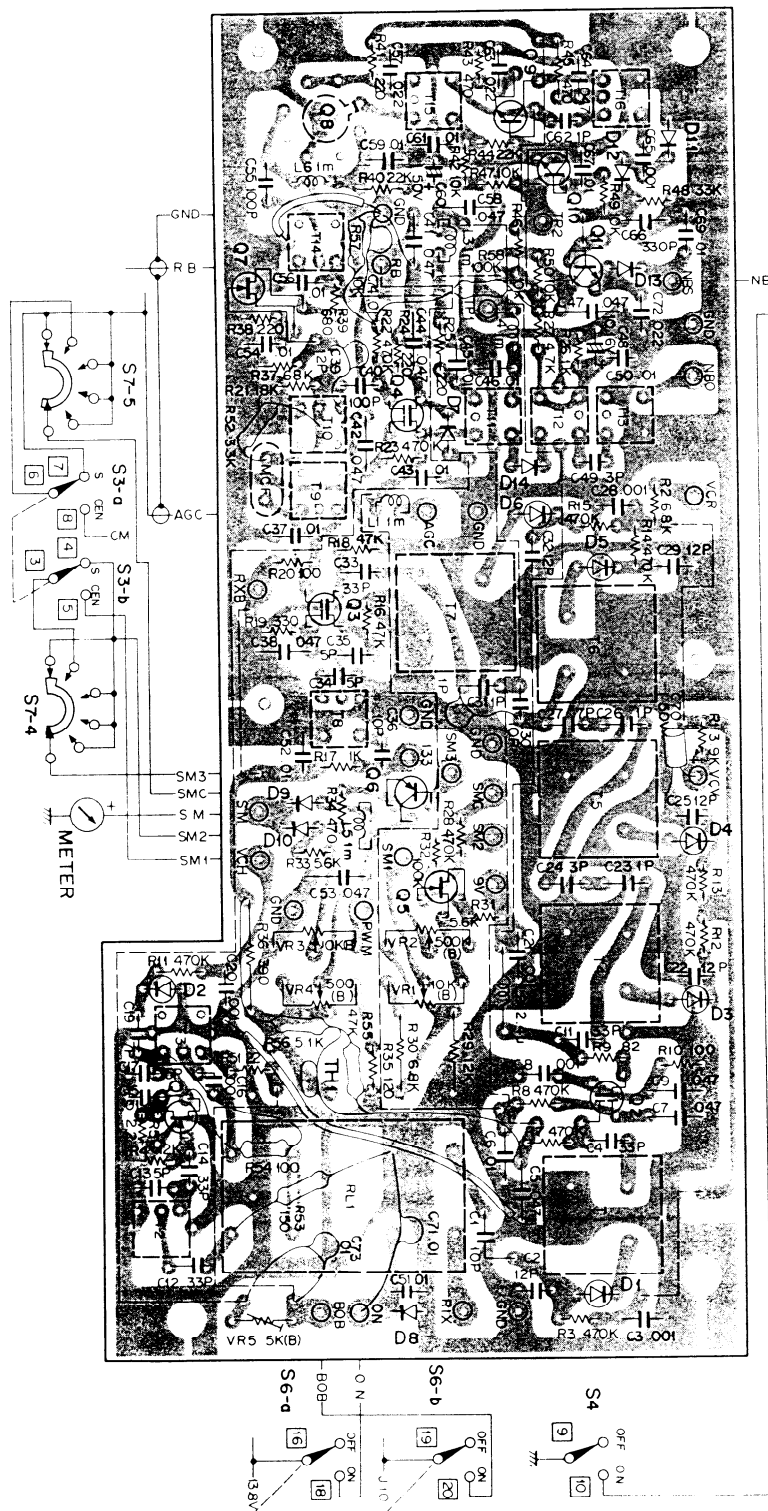

Q1: 2N5485, Q2: 3SK41(L) or 3SK40(L), Q3: 3SK41(M) or 3SK40(M), Q4: 3SK35T(GR), Q5, 7: 2SK19(GR), Q6: 2SA495(Y),
Q8: TA7045M(R), Q9: 2SC460(B), Q10, 11: 2SC733(Y), D1~6: 1S2206, D7, 8: 1S1555, D9~13: 1N60, D14: 1SS16

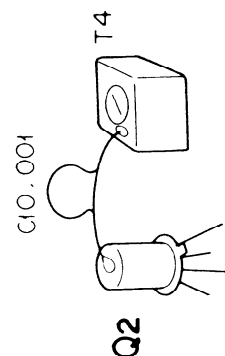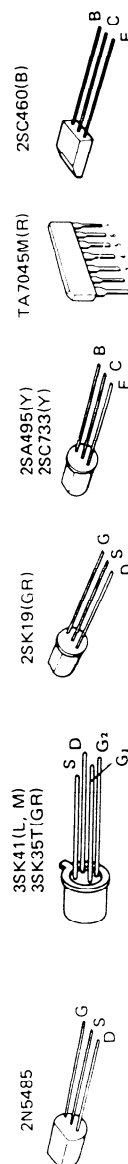


RX · NB UNIT DESTINATIONS' PARTS LIST

	C13	C15	C17	C19	C20	R4	R5	R11	D2	Terminal
K type (11)	5 pF	0.01 μ F	0.5 pF	7 pF	1000 pF	15 k Ω	2.2 k Ω	470 k Ω	1S2208	27
W, T type (-11)	2 pF	-	5 pF	-	-	12 k Ω	-	-	-	28


PC BOARD

▼ DISPLAY UNIT (X54-1240-11)

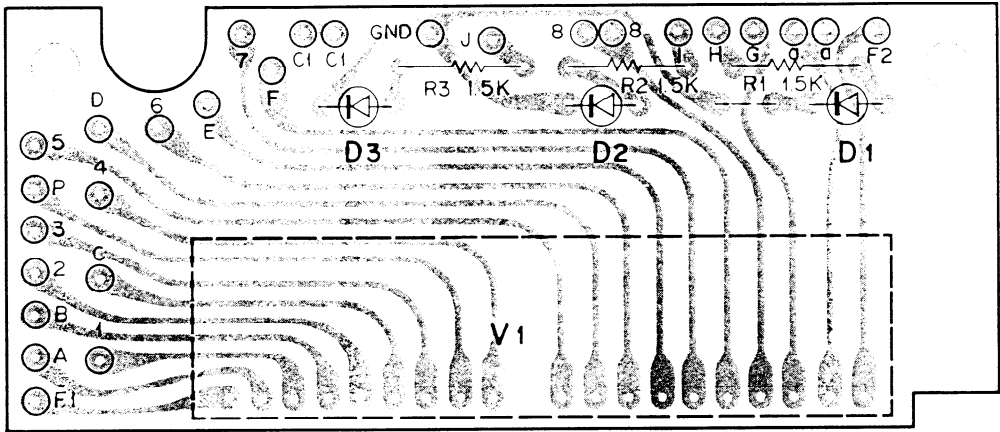


V1:9-ST-08, D1~3:SEL-103W

▼ FINAL UNIT (X56-1250-00)

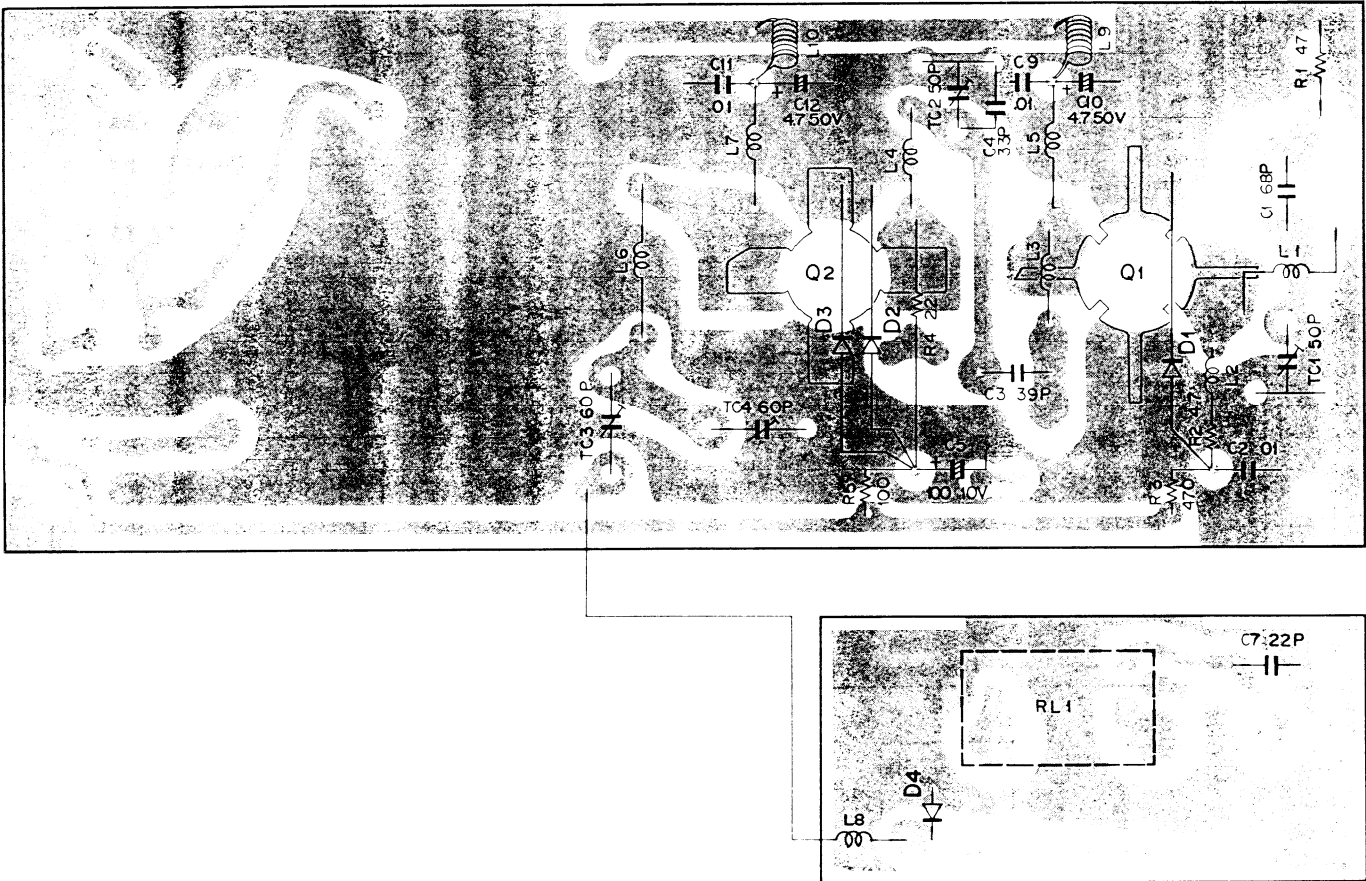

Q1 2N5641, Q2:2N5642, D1~3:1S1555, D4:V06J

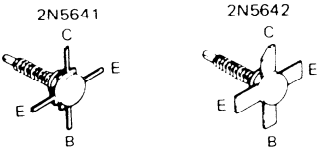

PARTS LIST

Note 1:

Resistors except the special type (example: cement, metal film, etc.) are not detailed in PARTS LIST. With regard to the value, refer to the schematic diagram or the PC board illustration. Resistors not detailed are carbon type (1/4W or 1/8W).

You should give an order for the carbon resistors according to the ways described as follows:

A carbon resistor's part number is example RD14BY 2E 22J

1. Kinds of the carbon resistor



RD14BY




RD14CY

2. Wattage

1/4W → 2E

1/8W → 2B

3. Resistance value



Significant figure Multiplier

Example:

221 → 220Ω

222 → 2.2kΩ

223 → 22kΩ

224 → 220kΩ

225 → 2.2MΩ

4. Tolerance

J = ±5% (Gold color)

K = ±10% (Silver color)

Note 2:

K: U.S.A.

W: Europe

T: Britain

TOTAL ☆: New Parts

Ref.No.	Parts No.	Description	Re- marks
CAPACITOR			
C1	CK45D1H102M	Ceramic 1000pF ±20% K	
C101	C90-0187-05	Ceramic 4700pF	
C102	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	
RESISTOR			
R1~13	RD14BY2B○○○J	Carbon ○○○○ ±5% 1/8W K	
R1, 3~ 5, 7, 9~11	RD14CY2B○○○J	Carbon ○○○○ ±5% 1/8W T,W	
R101~ 106	RD14BY2E○○○J	Carbon ○○○○ ±5% 1/4W	
R107	RD14BY2B103J	Carbon 10KΩ ±5% 1/8W K	
SEMICONDUCTOR			
Q1	V04-0046-05	Transistor 2SD235(Y)	
Q2	V01-0138-05	Transistor 2SA671TD(A)	
Q3	V03-0123-05	Transistor 2SC733(Y)	
Q4	V30-1001-16	IC FS7805M	
D1~3	V11-0051-05	Diode 1N60	
D4~9	V11-0051-05	Diode 1N60	T,W
D101	V11-4160-76	Zener diode WZ069	
D102	V11-0243-05	Zener diode WZ061	
POTENTIOMETER			
VR1	R06-3401-05	10KΩ (B) FM MIC (Inside)	☆
VR2	R01-3403-05	10KΩ (B) AM CAR (Outside)	☆
VR3	R08-9401-05	10KΩ (A) SSB MIC	☆
		50KΩ (B) VOX GAIN (Inside)	
		250KΩ (B) VOX DELAY (Outside)	
VR4	R06-9401-05	50KΩ (B) ANTI VOX (Outside)	☆
		300Ω (B) SIDE TONE (Inside)	
VR5,6	R03-3055-05	10KΩ (B) RIT, DRIVE	☆
VR7	R01-3402-05	10KΩ SQU	☆
VR8	R08-0010-05	50KΩ (A) AF GAIN (Inside)	
		10KΩ (B) RF GAIN (Outside)	
VR9	R12-1016-05	Semi-fixed resistor 3kΩ (B)	
VR10~ 13	R12-2401-05	Semi-fixed resistor 5KΩ (B) T,W	
SWITCH			
S1	S59-2025-05	Paddle switch (Gray) POWER	
S7	S01-4402-05	Rotary switch MODE	
S8	S01-2036-05	Rotary switch BAND	K
S8	S01-2404-05	Rotary switch BAND	T,W
S9	S01-2021-05	Rotary switch FIX. CH	
S10	S40-2059-05	Push switch CALL	K,T
S10	S40-2066-05	Push switch CALL	W
S11	S40-2059-05	Push switch LOW	
S101	S41-2027-05	Slide switch POWER SELECT	
S102	S01-1030-05	Rotary switch REPEATER	
RL1	S51-6001-15	Relay	
CRYSTAL			
X1	L77-0358-05	Crystal oscillator 125.109 MHz	
X2	L77-0359-05	Crystal oscillator 126.109 MHz	
X3	L77-0361-05	Crystal oscillator 127.109 MHz	
		K	
X3	L77-0363-05	Crystal oscillator 125.509 MHz	W, T
X4	L77-0362-05	Crystal oscillator 128.109 MHz	K
X5	L77-0501-05	Crystal oscillator 126.509 MHz	K
X6	L77-0502-05	Crystal oscillator 128.709 MHz	K

PARTS LIST

Re. No.	Parts No.	Description	Re- marks	Ref. No.	Parts No.	Description	Re- marks
BPF UNIT ASS'Y (L79-0432-05) K type (L79-0430-05) W, T type				—	E30-0573-05	6P connector with lead wire	
—	CE04W1H4R7	Electrolytic 4.7 μ F 50WV		—	E30-0574-05	12P connector with lead wire	
—	V11-0374-05	Diode 1SS16		—	E30-1604-05	6P connector with lead wire	
—	C02-0006-05	Trimmer x3 K	☆	—	E30-1605-05	6P connector with lead wire	
—	C02-0006-05	Trimmer x2 W, T	☆	—	E31-0414-15	5P connector with lead wire	
—	E22-0207-05	Lug terminal		—	E31-0415-05	3P connector with lead wire T, W	
—	E23-0001-05	Hermetic terminal x2		—	E31-0416-05	7P connector with lead wire	
TRANSFORMER/COIL				—	E31-0419-05	5P connector with lead wire K	
T1	L06-0027-35	Power transformer		—	F05-1023-05	Fuse 1A K	
L101, 102	L40-4711-03	Ferri-inductor 470 μ H		—	F05-1023-05	Fuse 1A x2 W, T	
SPEAKER/MICROPHONE				F1, 2	F05-2023-05	Fuse 2A x4 K	
—	T13-0006-15	Speaker		F1, 2	F05-2023-05	Fuse 2A x3 W	
—	T91-0030-05	Microphone K, W		F1, 2	F05-2023-05	Fuse 2A x2 T	
—	T91-0029-05	Microphone T		—	F05-5022-05	Fuse 5A for DC cord	
MISCELLANEOUS				—	F15-0164-14	Speaker mask	
—	A01-0226-13	Case (Upper)		—	F15-0165-14	Switch mask (switch unit)	
—	A01-0227-13	Case (Lower)		—	F15-0606-04	Switch mask (B) (push switch)	☆
—	A21-0713-03	Ornament panel	☆	—	F15-0612-04	Switch mask (switch unit)	☆
—	A23-1402-03	Rear panel (A)	☆	—	F20-0078-05	Insulating mica	
—	A23-1412-04	Rear panel (B) K		—	G13-0602-04	Cushion x2 case upper	
—	A23-1412-04	Rear panel (B) W		—	G13-0605-04	Cushion (B) back of meter	☆
—	A23-1409-04	Rear panel (B) T		—	G13-0613-04	Speaker felt X 2	
—	A23-1410-04	Rear panel (B)		—	H01-2536-04	Carton case (inside) K, W	☆
—	B01-0081-13	Escutcheon		—	H01-2537-04	Carton case (inside) T	☆
—	B01-0082-13	Escutcheon (Handle side)		—	H10-1274-02	Polystyrene foam cushion (A)	
—	B01-0606-05	Panel escutcheon	☆	—	H10-1275-02	Polystyrene foam cushion (B)	
—	B07-0604-05	Dial escutcheon ass'y	☆	—	H10-1276-04	Cushion	
—	B19-0156-04	Filter x2 (BAND, FIX)		—	H20-0291-03	Protection cover	
—	B20-0804-04	Dial plate	☆	—	H25-0016-00	Polyethylene bag for accessories	
—	B30-0079-05	Pilot lamp x2 BAND, FIX CH		—	H25-0036-00	Polyethylene bag for accessories	
—	B30-0804-05	Pilot lamp x3 Meter, VFO x2	☆	—	J02-0022-05	Foot x4 15 ϕ	
—	B31-0606-05	Meter	☆	—	J02-0049-14	Foot x6 28 ϕ	
—	B40-2419-04	Name plate (Model) K, W	☆	—	J13-0004-05	Fuse holder (rear panel)	
—	B40-2407-04	Name plate (Model) T	☆	—	J13-0019-05	Fuse holder (inside of case)	
—	B42-1619-04	Name plate (Adjustment)		—	J25-1396-04	PC board (A) for rotary switch K	☆
—	B42-1620-04	Name plate K, W	☆	—	J25-2529-04	PC board (A) for rotary switch W, T	☆
—	B42-1608-04	Name plate T		—	J25-2557-04	PC board (B) for push switch	☆
—	B43-0603-04	Badge	☆	—	J30-0061-04	Rubber spacer x2	
—	B46-0058-00	Warranty card K		—	J32-0188-04	Hex. boss (D) 21x3 (mm)	
—	B50-2549-00	Operating manual K	☆	—	J32-0189-04	Hex. boss (A) x4 35x3 (mm)	
—	B50-2550-00	Operating manual W	☆	—	J32-0190-04	Hex. boss (B) x4 27.5x3 (mm)	
—	B50-2551-00	Operating manual T	☆	—	J32-0218-04	Hex. boss (C) x4 5.5x3 (mm)	
—	D32-0075-04	Switch stopper		—	J32-1030-14	Round boss x2 (front foot)	
J10	E01-0903-05	9P MT socket		—	J39-0028-04	Spacer hardware x2	
—	E05-0901-05	9P MT plug		—	J59-0001-05	Grommet x2	
J4	E06-0403-05	4P microphone socket		—	J59-0002-05	Plunger x2	
J8	E08-0409-05	4P socket		—	K01-0063-05	Handle	
—	E08-0471-05	4P connector socket K		—	K21-0279-04	Knob (C) x5 RIT, SQU etc.	
—	E09-0471-05	4P connector plug K		—	K21-0282-04	Knob (B) x2 Push switch	
—	E09-0204-05	2P plug		—	K21-0308-04	Knob (G) x2 AF, VOX GAIN	
J2	E11-0003-15	Speaker jack		—	K21-0309-04	Knob (H) x2 RF, VOX DELAY	
J9	E11-0005-15	KEY jack		—	K21-0711-04	Knob (big) main	☆
J1	E11-0034-25	Phone jack		—	K21-0712-04	Knob (small) main	☆
—	E12-0001-05	Phone plug		—	K23-0235-03	Knob (D) BAND K	
J3,6,7	E13-0101-05	1P phone jack x3		—	K23-0148-03	Knob (D) BAND T, W	
—	E14-0101-05	1P phone plug x4		—	K23-0149-13	Knob (E) FIX. CH	
—	E22-0207-05	Lug terminal x3		—	K23-0057-04	Rubber knob	
—	E22-0405-05	Lug terminal x3		—	K23-0703-04	Rubber knob (big) x2	☆
—	E23-0015-04	Earth lug terminal x4		—	K23-0704-04	Rubber knob (small) x2	☆
—	E23-0046-04	Terminal K		—	K23-0705-04	Lever knob (A) SEND/REC	☆
—	E23-0046-04	Terminal x7 W, T		—	K23-0707-04	Lever knob (B) x4	☆
—				—	N09-0155-04	Lock screw x2	
—				—	N10-2030-11	Nut x3	
—				—	N10-3020-46	Nut	
—				—	N10-3060-11	Nut	

PARTS LIST

FM-IF UNIT (X48-1140-20 K type, -61 W type, -51 T type)

Ref. No.	Parts No.	Description	Re- marks
C25	CC45SL1H101J	Ceramic 100pF $\pm 5\%$	
C26~29	CK45D1H102M	Ceramic 1000pF $\pm 20\%$	
C30	CE04W1H4R7	Electrolytic 4.7 μ F 50WV	
C31	CK45F1H103Z	Ceramic 0.01 μ F $\pm 80\%$, -20%	
C32~34	CK45D1H102M	Ceramic 1000pF $\pm 20\%$	
C35	CE04W1HR47	Electrolytic 0.47 μ F 50WV	
C36	CE04W1C100	Electrolytic 10 μ F 16WV	
C37	CK45F1H103Z	Ceramic 0.01 μ F $\pm 80\%$, -20%	
C38	CK45D1H102M	Ceramic 1000pF $\pm 20\%$	
C39	CE04W1H4R7	Electrolytic 4.7 μ F 50WV	
C40	CK45F1H103Z	Ceramic 0.01 μ F $\pm 80\%$, -20%	
C41	CC45SL1H150J	Ceramic 15pF $\pm 5\%$	
C42	CK45D1H102M	Ceramic 1000pF $\pm 20\%$	
C43	CC45SL1H050C	Ceramic 5pF ± 0.25 pF	
C44	CE04W1C100	Electrolytic 10 μ F 16WV	
C45~47	CK45D1H102M	Ceramic 1000pF $\pm 20\%$	
C48	Missing No.		
C49	CK45D1H102M	Ceramic 1000pF $\pm 20\%$	
C50	CK45F1H103Z	Ceramic 0.01 μ F $\pm 80\%$, -20%	
C51,52	CK45D1H102M	Ceramic 1000pF $\pm 20\%$	
C53	CK45F1H103Z	Ceramic 0.01 μ F $\pm 80\%$, -20%	
C54	CC45SL1H0R5C	Ceramic 0.5pF ± 0.25 pF	
C55	CC45SL1H030C	Ceramic 3pF ± 0.25 pF	
RESISTOR			
R1~26	RD14CY2E000J	Carbon Ω $\pm 5\%$ 1/4W	
POTENTIOMETER/TRIMMER			
VR1	R12 0042-05	Semi-fixed resistor 500 Ω (B)	
VR2	R12 2015-05	Semi-fixed resistor 5k Ω (B)	
TC1~3	C05 0013-15	Ceramic trimmer 20pF	
TC4	C05 0015-15	Ceramic trimmer 40pF	
SEMICONDUCTOR			
Q1~3	V09 0057-05	FET 3SK41 (L or M) or 3SK40 (L or M)	
Q4	V03 0168-05	Transistor 2SC998	
Q5	V03 0123-05	Transistor 2SC733(Y)	
Q6	V03 0053-05	Transistor 2SC388A	
D1	V11 0317-05	Diode 1S2208	
D2	V11 0076-05	Diode 1S1555	
D3~6	V11 0317-05	Diode 1S2208	
D7	V11 0076-05	Diode 1S1555	
D8,9	V11 0051-05	Diode 1N60	
COIL/INDUCTOR/IFT			
L1	L33 0220-05	Choke coil 2.4 μ H	
L2	L40 1001-03	Ferri-inductor 10 μ H	
L3	L34 0353-05	VHF coil	
L4	L34 0442-05	VHF coil	
L5	L40 1001-03	Ferri-inductor	
L6	L34 0448-05	VHF coil	
L7	L34 0352-05	VHF coil	
L8	L40 1001-03	Ferri inductor 10 μ H	
T1	L34 0516-05	Tuning coil 133MHz	
T2	L30 0264-05	IFT 10.7MHz	
T3	L31 0321-05	IFT 144MHz	
T4	L31 0322-05	Tuning coil 144MHz	
T5	L31 0266-05	IFT 144MHz	
T6	L31 0323-05	Tuning coil 144MHz	
MISCELLANEOUS			
	E23 0047-04	Terminal x14	
	F02 0004-05	Cooler	

Ref. No.	Parts No.	Description	Re- marks
CAPACITOR			
C1	CC45SL1H100D	Ceramic 10pF ± 0.25 pF	
C2,3	CK45F1H103Z	Ceramic 0.01 μ F $\pm 80\%$, -20%	
C4	CC45SL1H101J	Ceramic 100pF $\pm 5\%$	
C5,6	CK45F1H473Z	Ceramic 0.047 μ F $\pm 80\%$, -20%	
C7	CK45F1H103Z	Ceramic 0.01 μ F $\pm 80\%$, -20%	
C8	CM93D1H151J	Super mica 150pF $\pm 5\%$	
C9	CM93D1H681J	Super mica 680pF $\pm 5\%$	
C10	CC45SL1H221J	Ceramic 220pF $\pm 5\%$	
C11	CE04W1H4R7	Electrolytic 4.7 μ F 50WV	
C12	CK45D1H102M	Ceramic 1000pF $\pm 20\%$	
C13	CC45SL1H470J	Ceramic 47pF $\pm 5\%$	
C14	CK45F1H103Z	Ceramic 0.01 μ F $\pm 80\%$, -20%	
C15	CK45D1H102M	Ceramic 1000pF $\pm 20\%$	
C16	CK45F1H103Z	Ceramic 0.01 μ F $\pm 80\%$, -20%	
C17	CE04W1C100	Electrolytic 10 μ F 16WV	
C18	CK45F1H103Z	Ceramic 0.01 μ F $\pm 80\%$, -20%	
C19	CE04W1C100	Electrolytic 10 μ F 16WV	
C20	CC45SL1H101J	Ceramic 100pF $\pm 5\%$	
C21	CK45F1H103Z	Ceramic 0.01 μ F $\pm 80\%$, -20%	
C22	CE04W1C100	Electrolytic 10 μ F 16WV	
C23	CE04W1H4R7	Electrolytic 4.7 μ F 50WV	
C24	CK45F1H103Z	Ceramic 0.01 μ F $\pm 80\%$, -20%	
C25,26	CK45F1H223Z	Ceramic 0.022 μ F $\pm 80\%$, -20%	
C27	CE04W1C470	Electrolytic 47 μ F 16WV K, T	
C28	CK45F1H103Z	Ceramic 0.01 μ F $\pm 80\%$, -20% K, T	
C29	CE04W1V4R7	Electrolytic 4.7 μ F 35WV	
C30	CQ92M1H222K	Mylar 2200pF $\pm 10\%$	
C31	CQ92M1H102K	Mylar 1000pF $\pm 10\%$	
C32	CQ92M1H332K	Mylar 3300pF $\pm 10\%$	
C33	CE04W1C100	Electrolytic 10 μ F 16WV	
C34	CE04W1E220	Electrolytic 22 μ F 25WV	
C35	CK45F1H473Z	Ceramic 0.047 μ F $\pm 80\%$, -20%	
C36	CC45SL1H101J	Ceramic 100pF $\pm 5\%$	
C37	CK45F1H103Z	Ceramic 0.01 μ F $\pm 80\%$, -20%	
C38	CK45D1H102M	Ceramic 1000pF $\pm 20\%$	
C39	CQ92M1H223K	Mylar 0.022 μ F $\pm 10\%$	
C40	CK45D1H102M	Ceramic 1000pF $\pm 20\%$	
C41	CC45SL1H221J	Ceramic 220pF $\pm 5\%$	
C42	CE04W1C100	Electrolytic 10 μ F 16WV	
C43	CC45SL1H331J	Ceramic 330pF $\pm 5\%$	
C44	CE04W1HR47	Electrolytic 0.47 μ F 50WV	
C45	CK45D1H102M	Ceramic 1000pF $\pm 20\%$	
C46	CE04W1H010	Electrolytic 1 μ F 50WV	
C47	Missing No.		
C48	CQ92M1H393K	Mylar 0.039 μ F $\pm 10\%$	
C49	CE04W1H010	Electrolytic 1 μ F 50WV	
C50	CE04W1C100	Electrolytic 10 μ F 16WV	
C51	CE04W1H4R7	Electrolytic 4.7 μ F 50WV	
C52,53	CK45D1H102M	Ceramic 1000pF $\pm 20\%$ K, T	
C54	CC45SL1H331J	Ceramic 330pF $\pm 5\%$	
RESISTOR			
R1~57	RD14CY2E000J	Carbon Ω $\pm 5\%$ 1/4W	
R26~28	Missing No.	W	
SEMICONDUCTOR			
Q1~3	V03-0079-05	Transistor 2SC460(B)	
Q4~6	V03-0093-05	Transistor 2SC458(B)	
Q7	V03-0079-05	Transistor 2SC460(B)	
Q8,9	V03-0123-05	Transistor 2SC733(Y) K, T	
Q10	V01-0032-05	Transistor 2SA562(Y) K, T	
Q11~14	V03-0123-05	Transistor 2SC733(Y)	
Q15	V03-0093-05	Transistor 2SC458(B)	
Q16,17	V03-0123-05	Transistor 2SC733(Y)	
D1,2	V11 0051-05	Diode 1N60	
D3~6	V11 0076-05	Diode 1S1555	
D7,8	V11 0051-05	Diode 1N60	
D9,10	V11 0076-05	Diode 1S1555	

PARTS LIST

Ref. No.	Parts No.	Description	Re- marks
D11,12 D13 D14	V11-0076-05 V11-0243-05 V11-0076-05	Diode 1S1555 K, T Zener diode WZ-061 K, T Diode 1S1555	
POTENTIOMETER			
VR1 VR2	R12-5016-05 R12-7013-05	Semi-fixed resistor 100K Ω (B) Semi-fixed resistor 500K Ω (B)	
COIL/FILTER/CRYSTAL			
L1 L2 L3	L40-1045-06 L40-6825-04 L40-1001-03	Ferri-inductor 100mH Ferri-inductor 6.8mH Ferri-inductor 10 μ H	
T1, 2 T3 T4	L30-0199-05 L30-0006-05 L30-0007-05	IFT 455kHz Descrete coil (D) Descrete coil (E)	
CF1 CF2	L72-0014-05 L72-0037-05	Ceramic filter SFE-10.7MA Ceramic filter CFR-455F	
X1 —	L77-0327-05 L79-0034-05	Crystal oscillator 10.245MHz Piezo-electric tuning fork 1750Hz W, T	☆
MISCELLANEOUS			
— — — — — — —	E18-0307-15 E23-0047-04 E23-0047-04 F29-0014-05 N10-2030-11 N17-1030-41 N30-3010-46	Socket Terminal x18 Terminal x16 Insulating washer Hex. nut Lock washer Round head screw	K, T W

Ref. No.	Parts No.	Description	Re- marks
C31 C32 C33 C34	CQ93M1H103K CK45D1H102M CK45F1H473Z CC45SL1H101K	Mylar 0.01 μ F $\pm$ 10% Ceramic 1000pF $\pm$ 20% Ceramic 0.047 μ F +80%, -20% Ceramic 100pF $\pm$ 10%	
RESISTOR			
R1~38 R33,34	RD14CY2E○○○J R92-0144-05	Carbon ○○○ Ω $\pm$ 5% 1/4W Metalized film 1 Ω 2W	
SEMICONDUCTOR			
Q1~3 Q4 Q5 Q6	V03-0123-05 V03-0126-05 V03-0332-05 V01-0138-05	Transistor 2SC733(Y) Transistor 2SC734(Y) Transistor 2SC1061(B) Transistor 2SA671TD(A)	
D1~6 D7	V11-0076-05 V11-0319-05	Diode 1S1555 Diode M8513A(O)	
TH1	V22-0008-05	Thermistor SDT-06	
COIL/INDUCTOR			
L1 L3	L33-0025-05 L40-1092-03	Choke coil 1 μ H Ferri-inductor 1 μ H	
MISCELLANEOUS			
— — — — — —	E23-0047-04 F01-0161-04 N10-2030-11 N30-3008-11 N30-3010-11	Terminal x19 Heatsink Nut x3 3 ϕ Round head screw x2 Round head screw	

AF UNIT (X49-1060-00)

Ref. No.	Parts No.	Description	Re- marks
CAPACITOR			
C1 C2 C3 C4 C5 C6 C7 C8 C9 C10 C11 C12 C13 C14,15 C16 C17 C18 C20 C21 C22 C23 C24 C25 C26,27 C28 C29 C30	CE04W1H010 CE04W1V4R7 CE04W1H010 CE04W1V4R7 CE04W1H010 CE04W1V4R7 CE04W1HR47 CQ93M1H332K CQ93M1H333K CQ93M1H153K CQ93M1H473K CC45SL1H391K CE04W1H4R7 CE04W1C100 CE04W1C470 CE04W1V4R7 CQ93M1H103K CE04W1E100 CC45SL1H471K CE04W1C470 CE04W1C101 CE04W1C330 CE04W1E221 CK45F1H473Z CE04W1C330 CK45F1H473Z CK45F1H473Z	Electrolytic 1 μ F 50WV Electrolytic 4.7 μ F 35WV Electrolytic 1 μ F 50WV Electrolytic 4.7 μ F 35WV Electrolytic 1 μ F 50WV Electrolytic 4.7 μ F 35WV Electrolytic 0.47 μ F 50WV Mylar 3300pF $\pm$ 10% Mylar 0.033 μ F $\pm$ 10% Mylar 0.015 μ F $\pm$ 10% Mylar 0.047 μ F $\pm$ 10% Ceramic 390pF $\pm$ 10% Electrolytic 4.7 μ F 50WV Electrolytic 10 μ F 16WV Electrolytic 47 μ F 16WV Electrolytic 4.7 μ F 35WV Mylar 0.01 μ F $\pm$ 10% Electrolytic 10 μ F 25WV Ceramic 470pF $\pm$ 10% Electrolytic 47 μ F 16WV Electrolytic 100 μ F 16WV Electrolytic 33 μ F 16WV Electrolytic 220 μ F 25WV Ceramic 0.047 μ F +80%, -20% Electrolytic 33 μ F 16WV Ceramic 0.047 μ F +80%, -20% Ceramic 0.047 μ F +80%, -20%	

HET UNIT (X50-1410-11) K type
(X50-1410-61) W, T type

Ref. No.	Parts No.	Description	Re- marks
CAPACITOR			
C1~3 C4~6 C7~17 C18 C19 C20,21 C22 C23 C24 C25 C25 C26 C27 C27 C28,29 C30 C31 C32, 33 C34~38 C39 C39 C40 C41,42 C43 C43 C44 C45	CK45D1H102M CK45D1H102M CC45SL1H330J CK45D1H102M CC45SL1H070D CK45D1H102M CC45SL1H330J CC45SL1H470J CK45D1H102M CC45PH1H030C CC45PH1H100D CC45SL1H0R5C CC45PH1H030C CC45PH1H100D Missing No. CK45D1H102M CC45SL1H150J CC45SL1H101J CK45D1H102M CC45PH1H030C CC45SH1H100D CC45CH1H030C CK45D1H102M CC45SH1H030C CC45UJ1H050D CC45CH1H150J CK45D1H102M	Ceramic 1000pF $\pm$ 20% Ceramic 1000pF $\pm$ 20% K Ceramic 33pF $\pm$ 5% Ceramic 1000pF $\pm$ 20% Ceramic 7pF $\pm$ 0.25pF Ceramic 1000pF $\pm$ 20% Ceramic 33pF $\pm$ 5% Ceramic 47pF $\pm$ 5% Ceramic 1000pF $\pm$ 20% Ceramic 3pF $\pm$ 0.25pF K Ceramic 10pF $\pm$ 0.5pF W, T Ceramic 0.5pF $\pm$ 0.25pF Ceramic 3pF $\pm$ 0.25pF K Ceramic 10pF $\pm$ 0.5pF W, T Ceramic 1000pF $\pm$ 20% Ceramic 15pF $\pm$ 5% Ceramic 100pF $\pm$ 5% Ceramic 1000pF $\pm$ 20% Ceramic 3pF $\pm$ 0.25pF K Ceramic 10pF $\pm$ 0.5pF W, T Ceramic 3pF $\pm$ 0.25pF Ceramic 1000pF $\pm$ 20% Ceramic 3pF $\pm$ 0.25pF K Ceramic 5pF $\pm$ 0.5pF W, T Ceramic 15pF $\pm$ 5% Ceramic 1000pF $\pm$ 20%	

PARTS LIST

Ref. No.	Parts No.	Description	Re- marks
—	N14-0020-04	Butterfly nut	
—	N15-1020-46	Washer x2	
—	N16-0030-41	Spring washer x5	
—	N16-0060-41	Spring washer	
—	N17-1030-46	Lock washer	
—	N19-0089-00	Washer x2	
—	N19-0201-05	Insulating washer	
—	N30-2004-41	Round head screw x2	
—	N30-2604-41	Round head screw x4	
—	N30-2606-41	Round head screw x2	
—	N30-3004-41	Round head screw x7	
—	N30-3006-41	Round head screw x29	
—	N30-3008-41	Round head screw x4	
—	N30-3012-41	Round head screw x2	
—	N30-4006-41	Round head screw x4	
—	N30-4012-41	Round head screw x2	
—	N30-6018-41	Round head screw x2	
—	N32-2604-41	Flat head screw x3	
—	N32-3006-41	Flat head screw x29	
—	N32-3008-41	Flat head screw x2	
—	N35-3004-41	Binder screw x2	
—	N35-3006-41	Binder screw x6	
—	N35-3006-45	Binder screw x16	
—	N87-3006-41	Tap tight screw x48	
—	N87-4010-41	Tap tight screw x2	
—	X40-1080-02	VFO unit	☆
—	X40-1060-00	Switch unit	
—	X42-1050-00	DC power cord ass'y	
—	X42-1080-20	AC power cord ass'y	K
—	X42-1070-60	AC power cord ass'y	W, T
—	X43-1240-01	Rectifier unit	☆
—	X48-1130-00	MIX unit	
—	X48-1140-20	FM-IF unit	K
—	X48-1140-61	FM-IF unit	W
—	X48-1140-51	FM-IF unit	T
—	X49-1060-00	AF unit	☆
—	X50-1410-11	HET unit	K
—	X50-1410-61	HET unit	W, T
—	X50-1420-00	CAR-VOX unit	☆
—	X52-1080-21	GENERATOR unit	
—	X54-1240-11	DISPLAY unit	☆
—	X54-1250-11	COUNTER unit	K
—	X54-1250-61	COUNTER unit	W, T
—	X55-1170-11	RX-NB unit	K
—	X55-1170-00	RX-NB unit	W, T
—	X56-1250-00	FINAL unit	☆

VFO UNIT (X40-1080-02)

Ref. No.	Parts No.	Description	Re- marks
CAPACITOR			
C1	CC45CH1H180J	Ceramic 18pF ±5% (BLK)	
C2	CC45CH1H220J	Ceramic 22pF ±5% (BLK)	
C3	CC45PG1H390J	Ceramic 39pF ±5% (ORG)	
C4	CC45PG1H220J	Ceramic 22pF ±5% (ORG)	
C5	CC45LH1H220J	Ceramic 22pF ±5% (RED)	
C6, 7	CM93F2A101J	Super mica 100pF ±5%	
C8	CC45CH1H030D	Ceramic 3pF ±0.5pF (BLK)	
C9	CK45E1H223P	Ceramic 0.022μF +100%, -0%	
C10, 11	CK45F1H473Z	Ceramic 0.047μF +80%, -20%	
C12	CC45CH1H180J	Ceramic 18pF ±5% (BLK)	
C13	CK45F1H473Z	Ceramic 0.047μF +80%, -20%	
C14	CC45CH1H180J	Ceramic 18pF ±5% (BLK)	
C15	CC45CH1H220J	Ceramic 22pF ±5% (BLK)	
C16	CK45E1H103P	Ceramic 0.01μF +100%, -0%	

Ref. No.	Parts No.	Description	Re- marks
C17	CK45F1H473Z	Ceramic 0.047μF +80%, -20%	
C18	CC45SL1H470J	Ceramic 47pF ±5%	
C19	CC45SL1H101J	Ceramic 100pF ±5%	
C20	CC45SL1H470J	Ceramic 47pF ±5%	
RESISTOR			
R1~11	RD14CY2E000J	Carbon 000Ω ±5% 1/4W	
SEMICONDUCTOR			
Q1, 2	V09-0020-05	FET 3SK22 (Y)	
Q3, 4	V03-0079-05	Transistor 2SC460(B)	
D1, 2	V11-0051-05	Diode 1N60	
VC/TRIMMER			
VC1	C01-0177-05	Variable capacitor	
TC1	C03-0001-05	Variable capacitor (midget)	
TC2	C05-0013-15	Ceramic trimmer 20pF	
COIL/INDUCTOR			
L1	L32-0166-05	OSC coil	
L2, 3	L40-1021-03	Ferri-inductor 1mH	
L4	L40-2201-03	Ferri-inductor 22μH	
L5, 6	L40-1021-03	Ferri-inductor 1mH	
L7, 8	L40-4791-02	Ferri-inductor 4.7μH	
MISCELLANEOUS			
—	D22-0011-05	Shaft coupling	☆
—	D40-0601-05	Dial mechanism	
—	E08-0204-05	2P connector jack	
—	E13-0101-05	1P phon jack	
—	E22-0207-05	Lug terminal	
—	E23-0015-04	Lug terminal x2	
—	E23-0046-04	Lapping terminal x4	
—	G03-0009-04	Spring	
—	N10-2040-11	Nut 4φ	
—	N15-1040-11	Washer x2 4φ	
—	N16-0030-41	Spring washer x4 3φ	
—	N17-1030-31	Lock washer x8 3φ	
—	N17-1040-41	Lock washer 4φ	
—	N30-2006-11	Round head screw x3	
—	N30-3004-11	Round head screw x3	
—	N30-3006-11	Round head screw x17	
—	N30-4014-11	Round head screw	
—	N32-3006-11	Flat head screw x4	
—	N32-3008-11	Flat head screw x4	
—	N87-3006-46	Tapping screw	

SWITCH UNIT (X41-1060-00)

Ref. No.	Parts No.	Description	Re- marks
S2~6	S36-2026-15	Lever switch	
—	E23-0046-04	Terminal x5	
—	F23-0047-04	Terminal x14	

PARTS LIST

DC POWER CORD ASS'Y (X42-1050-00)

Ref. No.	Parts No.	Description	Re- marks
—	E09-0426-05	4P plug (square)	
—	F05-5022-05	Fuse (5A)	
—	J13-0029-05	Fuse holder	
—	J41-0006-00	Cord bushing	

AC POWER CORD ASS'Y (X42-1080-20) K type

Ref. No.	Parts No.	Description	Re- marks
—	E09-0426-05	4P plug (square)	
—	E30-0181-05	AC cord with plug	
—	J41-0006-00	Cord bushing	

AC POWER CORD ASS'Y (X42-1070-60) W, T type

Ref. No.	Parts No.	Description	Re- marks
—	E03-0301-15	Plug	
—	E09-0426-05	4P plug (square)	
—	J61-0014-05	Free up belt	

RECTIFIER UNIT (X43-1240-01)

Ref. No.	Parts No.	Description	Re- marks
CAPACITOR			
C1, 2	CE02W1E472	Electrolytic 4700 μ F 25WV	
C3	CE04W1HR47	Electrolytic 0.47 μ F 50WV	
C4	CE04W1C100	Electrolytic 10 μ F 16WV	
C5	CE04W1HR47	Electrolytic 0.47 μ F 50WV	
C6	CE04W1V4R7	Electrolytic 4.7 μ F 35WV	
C7	CE02W1E222	Electrolytic 2200 μ F 25WV	
C8	CE04W1V4R7	Electrolytic 4.7 μ F 35WV	
C9	CE02W1V222	Electrolytic 2200 μ F 35WV	
C10	CE04W1H010	Electrolytic 1 μ F 50WV	
C11	CE02W1V102	Electrolytic 1000 μ F 35WV	
C12	CE04W1C471	Electrolytic 470 μ F 16WV	
C13	CK45F1H473Z	Ceramic 0.047 μ F +80%, -20%	
C14	CC45SL1H391J	Ceramic 390pF $\pm$ 5%	
C15	CE04W1V4R7	Electrolytic 4.7 μ F 35WV	
C16	CE02W1C102	Electrolytic 1000 μ F 16WV	
C17	CC45SL1H101J	Ceramic 100pF $\pm$ 5%	
C18	CE04W1H330	Electrolytic 33 μ F 50WV	
C19,20	CH45F1H223Z	Ceramic 0.022 μ F +80%, -20%	
C21	CQ92M1H103K	Mylar 0.01 μ F $\pm$ 10%	
C22	CS15E1VR33M	Tantalum 0.33 μ F 35WV	
C23	CE04W1H100	Electrolytic 10 μ F 50WV	
C24	CK45F1H223Z	Ceramic 0.022 μ F +80%, -20%	
C25	CE04W1E100	Electrolytic 10 μ F 25WV	
C26	CE04W1A470	Electrolytic 47 μ F 10WV	
C27	CE04W1A101	Electrolytic 100 μ F 10WV	
C30	CK45F1H103Z	Ceramic 0.01 μ F +80%, -20%	
CK1~12	C91-0403-05	Ceramic	
CK13~17	C91-0405-05	Ceramic	
RESISTOR			
R1~33	RD14CY2E1000J	Carbon $\text{○○○○}\Omega$ $\pm$ 5% 1/4W	
R14	R92-0041-25	Cement 0.47 Ω 2W	
R17	Missing No		

Ref. No.	Parts No.	Description	Re- marks
SEMICONDUCTOR			
Q1~3	V03-0126-05	Transistor 2SC734(Y)	
Q4	V04-0046-05	Transistor 2SD235(Y)	
Q5	V02-0040-05	Transistor 2SB405(R)	
Q6	V01-0138-05	Transistor 2SA671TD(B)	
Q7, 8	V03-0126-05	Transistor 2SC734(Y)	
Q9	V01-0037-05	Transistor 2SA495 (O or Y)	
Q10	V03-0126-05	Transistor 2SC734(Y)	
Q11	V30-0218-05	IC MC1723CL-A	
Q12	V04-0046-05	Transistor 2SD235(Y)	
Q13	V01-0037-05	Transistor 2SA495(O or Y)	
Q14,15	V03-0405-05	Transistor 2SC945(P)	
D1	V11-0223-05	Rectifier stack DS-10BN-L	
D2, 3	V11-0270-05	Diode U05B	
D4, 5	V11-0219-05	Diode V06B	
D6	V11-0243-05	Zener diode WZ-061	
D7	V11-0219-05	Diode V06B	
D8	V11-0076-05	Diode 1S1555	
D9	V11-0051-05	Diode 1N60	
D10	V11-0076-05	Diode 1S1555	
D11	V11-0287-05	Zener diode BZ-240	
D12	V11-0243-05	Zener diode WZ-061	
POTENTIOMETER/COIL			
VR1, 2	R12-2014-05	Semi-fixed resistor 5k Ω (B)	
L1	L40-1545-06	Ferri-inductor 150mH	
L2	L33-0220-05	Choke coil 2.4 μ H	
T1	L19-0301-05	Converter transformer	
MISCELLANEOUS			
—	E23-0047-04	Terminal x19	
—	E23-0048-04	Terminal x5	
—	F11-0194-23	Rectifier shield case	
—	F20-0078-05	Insulating mica x2	
—	N10-2030-11	Nut x5	
—	N19-0201-05	Washer x2	
—	N30-3004-11	Round head screw	
—	N30-3006-11	Round head screw x4	
—	N30-3010-11	Round head screw x3	
—	N30-3012-11	Round head screw x2	
—	N87-3006-41	Tap tight screw x2	

MIX UNIT (X48-1130-00)

Ref. No.	Parts No.	Description	Re- marks
CAPACITOR			
C1~3	CK45D1H102M	Ceramic 1000pF $\pm$ 20%	
C4, 5	CC45SL1H030C	Ceramic 3pF $\pm$ 0.25pF	
C6, 7	CK45D1H102M	Ceramic 1000pF $\pm$ 20%	
C8, 9	CK45F1H103Z	Ceramic 0.01 μ F +80%, -20%	
C10~15	CK45D1H102M	Ceramic 1000pF $\pm$ 20%	
C16	Missing No.		
C17	CC45SL1HR5C	Ceramic 0.5pF $\pm$ 0.25pF	
C18,19	CC45SL1H010C	Ceramic 1pF $\pm$ 0.25pF	
C20	CK45D1H102M	Ceramic 1000pF $\pm$ 20%	
C21,22	CC45SL1H0R5C	Ceramic 0.5pF $\pm$ 0.25pF	
C23	CC45SL1H020C	Ceramic 2pF $\pm$ 0.25pF	
C24	CK45D1H102M	Ceramic 1000pF $\pm$ 20%	

PARTS LIST

Ref. No.	Parts No.	Description	Re- marks
C46	CC45SL1H101J	Ceramic 100pF ±5%	
C47	CK45D1H102M	Ceramic 1000pF ±20% K	
C47	CC45UJ1H070D	Ceramic 7pF ±0.5pF W, T	
C48~51	CK45D1H102M	Ceramic 1000pF ±20%	
C52	CE04W1C220	Electrolytic 22μF 16WV	
C53	CK45D1H102M	Ceramic 1000pF ±20%	
C54	CC45SL1H221J	Ceramic 220pF ±5%	
C55	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	
C56	CC45SL1H221J	Ceramic 220pF ±5%	
C57	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	
C58	CC45SL1H390J	Ceramic 39pF ±5%	
C59	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	
C60	CK45D1H102M	Ceramic 1000pF ±20%	
C61,62	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	
C63	CC45SL1H470J	Ceramic 47pF ±5%	
C64	CC45SL1H101J	Ceramic 100pF ±5%	
C65	CC45SL1H470J	Ceramic 47pF ±5%	
C66	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	
C67	CC45SL1H100D	Ceramic 10pF ±0.5pF	
C68	CK45D1H102M	Ceramic 1000pF ±20%	
C69	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	
C70	Missing No.		
C71,72	CK45D1H102M	Ceramic 1000pF ±20%	
C73	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	
C74	CC45CH1H010C	Ceramic 1pF ±0.25pF	
C75	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	
C76	CC45PH1H030C	Ceramic 3pF ±0.25pF K	
C76	CC45PH1H070D	Ceramic 7pF ±0.5pF W, T	
C77,78	CK45D1H102M	Ceramic 1000pF ±20% K	
C77,78	Missing No.	W, T	
C79	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	
C100	CC45SL1H010C	Ceramic 1pF ±0.25pF	

RESISTOR

R1~80	RD14CY2B000J	Carbon 000Ω ±5% 1/8W	
R4~6			
32~34	Missing No.	W, T	
43,44			
52,77			
78			

SEMICONDUCTOR

Q1	V03-0053-05	Transistor 2SC388A	
Q2	V03-0079-05	Transistor 2SC460(B)	
Q3	V30-0153-05	IC SN76514N	
Q4	V09-0057-05	FET 3SK41(L) or 3SK40(L)	
Q5~7	V03-0093-05	Transistor 2SC458(B)	
Q8	V03-0079-05	Transistor 2SC460(B)	
Q9	V03-0123-05	Transistor 2SC733(Y)	
D1	V11-0370-05	Diode 1S1587	K
D1	V11-0076-05	Diode 1S1555	W, K
D2	Missing No.		K
D2	V11-0076-05	Diode 1S1555	W, T
D3~23	V11-0076-05	Diode 1S1555	
D7~12	Missing No.	W, T	W, T
D24~28	V11-0317-05	Diode 1S2208	
D25,26	Missing No.		W, T
28			
D29,30	V11-0076-05	Diode 1S1555	
D31~33	V11-0051-05	Diode 1N60	
D34,35	V11-0317-05	Diode 1S2208	K
D34,35	Missing No.		W, T
D36,37	Missing No.		
D38	V11-0076-05	Diode 1S1555	

POTENTIOMETER/TRIMMER/RELAY

VR1	R12-2015-05	Semi-fixed resistor 5kΩ (B)	
TC1~12	C05-0030-15	Ceramic trimmer 20pF	
RL1	S51-1404-05	Relay	☆

Ref. No.	Parts No.	Description	Re- marks
COIL/INDUCTOR/IFT			
L1~7	L34-0437-05	OSC coil	
L4~6	Missing No.	W, T	
L8	L40-1021-03	Ferri-inductor 1mH	
L9	L33-0025-05	Choke coil 1μH	
L10	L40-1021-03	Ferri-inductor 1mH	
L11	L40-6891-02	Ferri-inductor 6.8μH	
L12	L40-1021-03	Ferri-inductor 1mH	
L13,14	L40-4791-02	Ferri-inductor 4.7μH	
L15	L40-1091-03	Ferri-inductor 1μH	
T1~3	L31-0180-05	IFT 144MHz	
T4	L34-0517-05	Tuning coil	
T5	L34-0516-05	Tuning coil	
T6	L34-0612-05	Tuning coil	☆
MISCELLANEOUS			
-	E18-0201-05	1P crystal socket x3	W, T
-	E18-0601-05	6P crystal socket	K
-	E18-2401-05	12P crystal socket	
-	E23-0047-04	Terminal x16	
-	E40-0613-05	Mini-connector water	
-	E40-1213-05	Mini-connector water	
-	F10-0384-04	Shield plate	

CAR·VOX UNIT (X50-1420-00)

Ref. No.	Parts No.	Description	Re- marks
CAPACITOR			
C1	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	
C2	CE04W1A470	Electrolytic 47μF 10WV	
C3	CK45F1H473Z	Ceramic 0.047μF +80%, -20%	
C4	CK45F1H223Z	Ceramic 0.022μF +80%, -24%	
C5	CE04W1H3R3	Electrolytic 3.3μF 50WV	
C6	CE04W1H010	Electrolytic 1μF 50WV	
C7	CC45SL1H331J	Ceramic 330pF ±5%	
C8	CE04W1C100	Electrolytic 10μF 16WV	
C9	CK45D1H472M	Ceramic 4700pF ±20%	
C10	CK45F1H473Z	Ceramic 0.047μF +80%, -20%	
C11	CE04W1H3R3	Electrolytic 3.3μF 50WV	
C12	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	
C13	CE04W1H3R3	Electrolytic 3.3μF 50WV	
C14	CE04W1C100	Electrolytic 10μF 16WV	
C15	CQ92M1H123K	Mylar 0.012μF ±10%	
C16,17	CQ92M1H223K	Mylar 0.022μF ±10%	
C18	CQ92M1H123K	Mylar 0.012μF ±10%	
C19	CQ92M1H682K	Mylar 6800pF ±10%	
C20	CK45D1H102M	Ceramic 100pF ±20%	
C21	CC45TH1H330J	Ceramic 33pF ±5%	
C22	CC45TH1H220J	Ceramic 22pF ±5%	
C23	CC45SL1H330J	Ceramic 33pF ±5%	
C24	CK45D1H102M	Ceramic 1000pF ±20%	
C25,26	CC45SL1H221J	Ceramic 220pF ±5%	
C27	CC45SL1H050D	Ceramic 5pF ±0.5pF	
C28	CC45SL1H330J	Ceramic 33pF ±5%	
C29	CK45F1H473Z	Ceramic 0.04μF +80%, -20%	
C30	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	
C31	CK45F1H473Z	Ceramic 0.047μF +80%, -20%	
C32	CK45D1H102M	Ceramic 1000pF ±20%	
RESISTOR			
R1~42	RD14CY2B000J	Carbon 000Ω ±5% 1/8W	
R18	RD14CY2E4R7J	Carbon 4.7Ω ±5% 1/4W	
R19	RD14CY2E105J	Carbon 1MΩ ±5% 1/4W	

PARTS LIST

Ref. No.	Parts No.	Description	Re- marks
SEMICONDUCTOR			
Q1,2	V03-0123-05	Transistor 2SC733(Y)	
Q3	V03-0355-05	Transistor 2SC1000(GR)	
Q4	V03-0123-05	Transistor 2SC733(Y)	
Q5	V01-0032-05	Transistor 2SC733(Y)	
Q6,7	V03-0123-05	Transistor 2SC733(Y)	
Q8	V01-0032-05	Transistor 2SA562(Y)	
Q9	V03-0123-05	Transistor 2SC733(Y)	
Q10	V03-0079-05	Transistor 2SC460(B)	
Q11,12	V03-0123-05	Transistor 2SC733(Y)	
D1~4	V11-0051-05	Diode 1N60	
D5	V11-0076-05	Diode 1S1555	
D6~8	V11-0051-05	Diode 1N60	
D9~16	V11-0076-05	Diode 1S1555	
TRIMMER			
TC1,2	C05-0013-15	Ceramic trimmer 20pF	
TC3	C05-0015-015	Ceramic trimmer 40pF	
INDUCTOR/TRANSFORMER/IFT			
L1~6	L40-1021-03	Ferri-inductor 1mH	
T1	L13-0001-05	Input transformer 500Ω : 20kΩ	
T2	L30-0265-05	IFT 10.7MHz	
CRYSTAL			
X1	L77-0355-05	Crystal oscillator 10.6985MHz	
X2	L77-0356-05	Crystal oscillator 10.7015MHz	
MISCELLANEOUS			
-	E23 0047-04	Terminal x31	

GENERATOR UNIT (X52-1080-21)

Ref. No.	Parts No.	Description	Re- marks
CAPACITOR			
C1	CC45SL1H101J	Ceramic 100pF ±5%	
C2	CQ92M1H223K	Mylar 0.022μF ±10%	
C3	C90-0076-05	Tantalum 0.1μF 25WV	
C4	CE04W1A470	Electrolytic 47μF 10WV	
C5	CE04W1H010	Electrolytic 1μF 50WV	
C6	CQ92M1H103K	Mylar 0.01μF ±10%	
C7	CE04W1C100	Electrolytic 10μF 16WV	
C8	CQ92M1H223K	Mylar 0.022μF ±10%	
C9	CE04W1A470	Electrolytic 47μF 10WV	
C10	CQ92M1H102K	Mylar 1000pF ±10%	
C11	CE04W1H010	Electrolytic 1μF 50WV	
C12,13	CE04W1C100	Electrolytic 10μF 16WV	
C14	CQ92M1H472K	Mylar 4700pF ±10%	
C15	CE04W1A470	Electrolytic 47μF 10WV	
C16	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	
C17,18	CE04W1A470	Electrolytic 47μF 10W	
C19,20	CE04W1H010	Electrolytic 1μF 50WV	
C21	CQ92M1H103K	Mylar 0.01μF ±10%	
C22	CQ92M1H473K	Mylar 0.047μF ±10%	
C23	CE04W1H010	Electrolytic 1μF 50WV	
C24	CC45CH1H330J	Ceramic 33pF ±5%	
C25	CC45UJ1H050D	Ceramic 5pF ±0.5pF	
C26	CC45SL1H221J	Ceramic 220pF ±5%	
C27	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	
C28	CC45SL1H221J	Ceramic 220pF ±5%	
C29	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	
C30	CC45SL1H050D	Ceramic 5pF ±0.5pF	
C31~36	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	
C37,38	CE04W1H4R7	Electrolytic 4.7μF 50WV	

Ref. No.	Parts No.	Description	Re- marks
C39	CK45D1H102M	Ceramic 100pF ±20%	
C40	C91-0013-05	Ceramic 0.01μF 50WV	
C41	CC45CH1H150J	Ceramic 15pF ±5%	
C42	CC45CH1H100D	Ceramic 10pF ±0.5pF	
C43~45	CK45D1H102M	Ceramic 1000pF ±20%	
C46,47	CK45F1H473Z	Ceramic 0.047μF +80%, -20%	
C48	CC45SL1H020C	Ceramic 2pF ±0.25pF	
C49	CK45D1H102M	Ceramic 1000pF ±20%	
C50,51	CK45F1H473Z	Ceramic 0.047μF +80%, -20%	
C52	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	
C53	CC45SL1H220J	Ceramic 22pF ±5%	
C54	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	
C55	CE04W1H010	Electrolytic 1μF 50WV	
C56	CC45SL1H270J	Ceramic 27pF ±5%	
C57,58	CK45D1H102M	Ceramic 1000pF ±20%	
C59	CC45SL1H220J	Ceramic 22pF ±5%	
C60,61	Missing No.		
C62~64	CK45F1H103Z	Ceramic 0.01μF 50WV	
C65	CK45D1H102M	Ceramic 1000pF ±20%	
C66	CK45F1H103Z	Ceramic 0.01μF 50WV	
C67	CE04W1E330	Electrolytic 33μF 25WV	
C68	CK45F1H473Z	Ceramic 0.047μF +80%, -20%	
C69	CE04W1H4R7	Electrolytic 4.7μF 50WV	
C70,71	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	
C72	CE04W1C100	Electrolytic 10μF 16WV	
C73	CC45SL1H270J	Ceramic 27pF ±5%	
C74	CC45SL1H101J	Ceramic 100pF ±5%	
C75	CK45D1H102M	Ceramic 1000pF ±20%	
C76	CQ92M1H104K	Mylar 0.01μF ±10%	
C77	C91-0013-05	Ceramic 0.01μF 50WV	
C78	Missing No.		
C79	CQ92M1H473K	Mylar 0.047μF ±10%	
C80	CK45F1H473Z	Ceramic 0.047μF +80%, -20%	
C81	CC45SL1H470J	Ceramic 47pF ±5%	
C82	CK45F1H473Z	Ceramic 0.047μF +80%, -20%	
C83	C91-0013-05	Ceramic 0.01μF 50WV	
C84	CC45SL1H070D	Ceramic 7pF ±0.5pF	
C85,86	CK45F1H473Z	Ceramic 0.047μF +80%, -20%	
C87	CE04W1C101	Electrolytic 100μF 16WV	
C88,89	CC45SL1H100D	Ceramic 10pF ±0.5pF	
C90	CQ92M1H102K	Mylar 1000pF ±10%	
C91	CK45D1H102M	Ceramic 1000pF ±20%	
C92	CK45F1H473Z	Ceramic 0.047μF +80%, -20%	
C93	CE04W1H010	Electrolytic 1μF 50WV	
C94	CK45D1H102M	Ceramic 1000pF ±20%	
C95	CE04W1H010	Electrolytic 1μF 50WV	
C96	CE04W1H4R7	Electrolytic 4.7μF 50WV	
C97	CE04W1H010	Electrolytic 1μF 50WV	
C98	CQ92M1H473K	Mylar 0.047μF ±10%	
C99	CC45SL1H470J	Ceramic 47pF ±5%	
C100	CC45SL1H221J	Ceramic 220pF ±5%	
C101	CE04W1H3R3	Electrolytic 3.3μF 50WV	
C102	CK45F1H473Z	Ceramic 0.047μF +80%, -20%	
C103	CE04AW1H010M (EL)	Electrolytic 1μF 50WV	
C104	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	
C105	CE04W1H010	Electrolytic 1μF 50WV	
C106	C91-0013-05	Ceramic 0.01μF 50WV	
C107	CQ92M1H473K	Mylar 0.047μF ±10%	
C108	CQ92M1H223K	Mylar 0.022μF ±10%	
C109	CC45SL1H150J	Ceramic 15pF ±5%	
C110	CC45UJ1H220J	Ceramic 22pF ±5%	
RESISTOR			
R1~91	RD14CY2E○○○J	Carbon ○○○Ω ±5% 1/4W	
R43,, 42~55 90	Missing No.		
R88	RD14BY2E103J	Carbon 10kΩ ±5% 1/4W	
R89	RD14BY2E104J	Carbon 100kΩ ±5% 1/4W	

PARTS LIST

DISPLAY UNIT (X54-1240-11)

Ref. No.	Parts No.	Description	Re- marks
SEMICONDUCTOR			
Q1,2	V03-0355-05	Transistor 2SC1000(GR)	
Q3	V03-0123-05	Transistor 2SC733(Y)	
Q4	V30-0039-05	IC TA7061AP	
Q5	V03-0079-05	Transistor 2SC460(B)	
Q6	V09-0057-05	FET 2SK41(L or M)	
		or 3SK40(L or M)	
Q7,8	V03-0079-05	Transistor 2SC460(B)	
Q9	V09-0057-05	FET 3SK41(L or M)	
		or 3SK40(L or M)	
Q11~13	V09-1002-26	FET 3SK35T(GR)	
Q14~16	V03-0123-05	Transistor 2SC733(Y)	
Q17	V99-0015-05	FET 2SK30(O)	
D1, 2	V11-0076-05	Diode 1S1555	
D3~6	V11-0051-05	Diode 1N60	
D7	V11-0076-05	Diode 1S1555	
D8~14	V11-0370-05	Diode 1S1587	
D15	V11-0317-05	Diode 1S2208	
D16~23	V11-0076-05	Diode 1S1555	
D24,25	V11-0051-05	Diode 1N60	
D26	V11-0076-05	Diode 1S1555	
D27,30	V11-0051-05	Diode 1N60	
D31	V11-0076-05	Diode 1S1555	
D32	V11-0200-05	Diode V06C	
POTENTIOMETER/TRIMMER			
VR1	R12-3025-05	Semi-fixed resistor 10k Ω (B)	
VR3	R12-2015-05	Semi-fixed resistor 5k Ω (B)	
VR4	R12-1016-05	Semi-fixed resistor 3k Ω (B)	
VR5	R12-3025-05	Semi-fixed resistor 10k Ω (B)	
VR6	R12-0054-05	Semi-fixed resistor 100 Ω (B)	
VR7	R12-1020-05	Semi-fixed resistor 1k Ω (B)	
TC1, 2	C05-0030-15	Ceramic trimmer 20pF	
INDUCTOR/COIL/IFT			
L1	L40-1045-06	Ferri-inductor 100mH	
L2	L33-0264-05	Choke coil 30 μ H	☆
L3	L39-0069-05	Variable inductor 15 μ H	☆
L4	L33-0236-05	Choke coil 10 μ H	
L5, 6	L40-1021-03	Ferri-inductor 1mH	
L7	L40-1001-03	Ferri-inductor 10 μ H	
L8	L40-1021-03	Ferri-inductor 1mH	
L9	L40-1011-03	Ferri-inductor 100 μ H	
L10	L40-6801-03	Ferri-inductor 68 μ H	
L11	L40-1021-03	Ferri-inductor 1mH	
L12	L40-1011-03	Ferri-inductor 100 μ H	
L13~16	L40-1021-03	Ferri-inductor 1mH	
L17	L40-1011-03	Ferri-inductor 100 μ H	
L18	L40-1021-03	Ferri-inductor 1mH	
L19	L40-1091-03	Ferri-inductor 1 μ H	
L20	L40-1021-03	Ferri-inductor 1mH	
T1~6	L30-0264-05	IFT 10.7MHz	
CRYSTAL			
X1	L77-0735-05	Crystal oscillator 10.720MHz	☆
XF	L71-0022-05	Crystal filter 10.7MHz (61V)	
MISCELLANEOUS			
	E23-0047-04	Terminal x 49	
	F10-0330-04	Shield plate	
	F10-0334-04	Shield plate (B)	
	N10-2030-11	Nut x2	

Ref. No.	Parts No.	Description	Re- marks
RESISTOR			
R1~3	RD14BY2B152J	Carbon 1.5k Ω $\pm$ 5% 1/4W	
INDICATOR/LED			
V1	V40-7760-46	Fluor-indicator 9-ST-08	☆
D1~3	V11-0430-05	LED SEL-103W	
MISCELLANEOUS			
—	E31-0417-05	Connector with lead 8P	☆
—	E31-0418-05	Connector with lead 10P	☆
—	F12-0401-04	Shield tube (8 ϕ)	
—	F15-0611-04	Indicator mask	☆
—	F20-0506-14	Insulating plate	☆
—	J19-1301-04	Diode holder	
—	Z12-0023-05	Insulating tube	

COUNTER UNIT (X54-1250-11) K type
(X54-1250-61) W, T type

Ref. No.	Parts No.	Description	Re- marks
CAPACITOR			
C1	CC45SL1H100D	Ceramic 10pF $\pm$ 0.5pF	
C2	CC45SL1H220J	Ceramic 22pF $\pm$ 5% K	
C2	CC45SL1H470J	Ceramic 47pF $\pm$ 5% W,T	
C3	CC45SL1H220J	Ceramic 22pF $\pm$ 5%	
C4	CK45D1H102M	Ceramic 1000pF $\pm$ 20%	
C5	CK45F1H103Z	Ceramic 0.01 μ F $\pm$ 80%, -20%	
C6	CE04W1H010	Electrolytic 1 μ F 50WV	
C7~10	CK45F1H103Z	Ceramic 0.01 μ F $\pm$ 80%, -20%	
C11	CC45UJ1H470J	Ceramic 47pF $\pm$ 5%	
C12	CK45F1H103Z	Ceramic 0.01 μ F $\pm$ 80%, -20%	
C13	CE04W1H010	Electrolytic 1 μ F 50WV	
C14	CK45F1H103Z	Ceramic 0.01 μ F $\pm$ 80%, -20%	
C15	CE04W1H010	Electrolytic 1 μ F 50WV	
C16	CC45UJ1H180J	Ceramic 18pF $\pm$ 5%	
C17	CK45F1H103Z	Ceramic 0.01 μ F $\pm$ 80%, -20%	
C18	CC45UJ1H120J	Ceramic 12pF $\pm$ 5%	
C19	CK45F1H103Z	Ceramic 0.01 μ F $\pm$ 80%, -20%	
C20	CC45UJ1H030C	Ceramic 3pF $\pm$ 0.25pF	
C21	CK45F1H103Z	Ceramic 0.01 μ F $\pm$ 80%, -20%	
C22,23	CC45UJ1H221J	Ceramic 220pF $\pm$ 5%	
C24	CC45SL1H220J	Ceramic 22pF $\pm$ 5%	
C25,26	CK45F1H103Z	Ceramic 0.01 μ F $\pm$ 80%, -20%	
C27	CK45CH1H220J	Ceramic 22pF $\pm$ 5%	
C28	CC45CH1H120J	Ceramic 12pF $\pm$ 5%	
C29	CK45F1H103Z	Ceramic 0.01 μ F $\pm$ 80%, -20%	
C30	CQ92M1H223K	Mylar 0.022 μ F $\pm$ 10%	
C31	CQ92M1H222K	Mylar 2200pF $\pm$ 10%	
C32	CK45D1H102M	Ceramic 1000pF $\pm$ 20%	
C33	CC45SL1H470J	Ceramic 47pF $\pm$ 5%	
C34	CK45F1H103Z	Ceramic 0.01 μ F $\pm$ 80%, -20%	
C35	CC45SL1H220J	Ceramic 22pF $\pm$ 5%	
C36	CK45D1H102M	Ceramic 1000pF $\pm$ 20%	
C37,38	CC45SL1H101J	Ceramic 100pF $\pm$ 5%	
C39	CK45D1H102M	Ceramic 1000pF $\pm$ 20%	
C40	CC45UJ1H180J	Ceramic 18pF $\pm$ 5%	
C41,42	CK45D1H102M	Ceramic 1000pF $\pm$ 20%	
C43	CK45F1H103Z	Ceramic 0.01 μ F $\pm$ 80%, -20%	
C44	CE04W1A470	Electrolytic 47 μ F 10WV	
C45	CE04W1C100	Electrolytic 10 μ F 16WV	
C46	CK45F1H103Z	Ceramic 0.01 μ F $\pm$ 80%, -20%	
C47	CC45SL1H150J	Ceramic 15pF $\pm$ 5%	
C48	CK45D1H102M	Ceramic 1000pF $\pm$ 20%	

PARTS LIST

RX · NB UNIT (X55-1170-11) K type
(X55-1170-00) W, T type

Ref. No.	Parts No.	Description	Re- marks
RESISTOR			
R1~67	RD14CY2B○○○J	Carbon ○○○Ω ±5% 1/8W	
R50	R90-0505-05	Compound resistor 4.7kΩ x 8	
R51	R90-0504-05	Compound resistor 4.7kΩ x 9	☆
R59	R90-0502-05	Compound resistor 4.7kΩ x 7	☆
R60	R90-0112-05	Compound resistor 4.7kΩ x 7	☆
SEMICONDUCTOR			
Q1~3	V03-0079-05	Transistor 2SC460(B)	
Q4	V03-0270-05	Transistor 2SC945(R)	
Q5	V03-0079-05	Transistor 2SC460(B)	
Q6~8	V03-0270-05	Transistor 2SC945(R)	
Q9~23	V01-0084-05	Transistor 2SA733(R)	
Q24,25	V03-0270-05	Transistor 2SC945(R)	
IC1	V30-0174-05	IC MC1496G	
IC2	V30-1015-16	IC TC5082P	☆
IC3	V30-0151-05	IC TD3490BP	
IC4	V30-1014-16	IC TC4518P	☆
IC5	V30-0151-05	IC TD3490BP	
IC6	V30-0132-05	IC TD3400AP	
IC7	V30-0164-05	IC TD3404AP	
IC8	V30-1016-16	IC MSM5502	☆
IC9	V30-0168-05	IC SN74176N	
IC10	V30-0167-05	IC TD3475AP	
IC11	V30-1012-16	IC SN7408N	☆
IC12	V30-0131-05	IC TD3472AP	
IC13,14	V30-0132-05	IC TD3400AP	
IC15	V30-1013-16	IC SN74157N	☆
IC16	V30-1010-16	IC SN74247N	
D1~4	V11-0076-05	Diode 1S1555	
D5~8	V11-0370-05	Diode 1S1587	
D9,10 15~23	V11-0076-05	Diode 1S1555	
D24	V11-4160-86	Zener diode WZ-071	
D25~28	V11-0076-05	Diode 1S1555 K	
D29	V11-0076-05	Diode 1S1555	
TRIMMER			
TC1	C05-0029-15	Ceramic trimmer 50pF	
TC2	C05-0013-15	Ceramic trimmer 20pF	
TC3	C05-0010-15	Ceramic trimmer 10pF	
TC4	C05-0009-15	Ceramic trimmer 6pF	
TC5	C05-0031-15	Ceramic trimmer 10pF	
INDUCTOR/CRYSTAL			
L1	L40-3311-03	Ferri-inductor 330μH	
L2~9	L40-1021-03	Ferri-inductor 1mH	
L10,12	L40-1011-03	Ferri-inductor 100μH	
L13	L40-1021-03	Ferri-inductor 1mH	
X1	L77-0720-05	Crystal oscillator 10.240MHz	
X2	L77-0734-05	Crystal oscillator 7.200MHz	☆
MISCELLANEOUS			
—	E23-0047-04	Terminal x2	
—	E40-0313-05	Pin connector 3P W, T	
—	E40-0513-05	Pin connector 5P x2 K	
—	E40-0513-05	Pin connector 5P W, T	
—	E40-0713-05	Pin connector 7P	
—	E40-0813-05	Pin connector 8P	
—	E40-1013-05	Pin connector 10P	

Ref. No.	Parts No.	Description	Re- marks
CAPACITOR			
C1	CC45CH1H100D	Ceramic 10pF ±0.5pF	
C2	CC45SL1H120J	Ceramic 12pF ±5%	
C3	CK45D1H102M	Ceramic 1000pF ±20%	
C4	CC45CH1H330J	Ceramic 33pF ±5%	
C5	CK45F1H473Z	Ceramic 0.047μF +80%, -20%	
C6	C91-0013-05	Ceramic 0.01μF 50WV	
C7	CK45F1H473Z	Ceramic 0.047μF +80%, -20%	
C8	CK45D1H102M	Ceramic 1000pF ±20%	
C9	CK45F1H473Z	Ceramic 0.047μF +80%, -20%	
C10	CK45D1H102M	Ceramic 1000pF ±20%	
C11,12	CC45CH1H330J	Ceramic 33pF ±5%	
C13	CC45SH1H050D	Ceramic 5pF ±0.5pF K	
C13	CC45CH1H020C	Ceramic 2pF ±0.25pF W, T	
C14	CC45CH1H330J	Ceramic 33pF ±5%	
C15	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	
C15	Missing No.		W, T
C16	CK45D1H102M	Ceramic 1000pF ±20%	
C17	CC45SH1H0R5C	Ceramic 0.5pF ±0.25pF K	
C17	CC45SH1H050D	Ceramic 5pF ±0.5pF W, T	
C18	Missing No.		
C19	CC45CH1H070D	Ceramic 7pF ±0.5pF K	
C20	CK45D1H102M	Ceramic 1000pF ±20%	K
C19,20	Missing No.		W, T
C21	CK45D1H102M	Ceramic 1000pF ±20%	
C22	CC45SL1H120J	Ceramic 12pF ±5%	
C23	CC45CH1H010C	Ceramic 1pF ±0.25pF	
C24	CC45CH1H030C	Ceramic 3pF ±0.25pF	
C25	CC45SL1H120J	Ceramic 12pF ±5%	
C26	CC45CH1H010C	Ceramic 1pF ±0.25pF	
C27	CC45CH1H070D	Ceramic 7pF ±0.25pF	
C28	CK45D1H102M	Ceramic 1000pF ±20%	
C29	CC45SL1H120J	Ceramic 12pF ±5%	
C30	CC45CH1H100D	Ceramic 10pF ±0.5pF	
C31	CC45CH1H010C	Ceramic 1pF ±0.25pF	
C32	CC45SL1H120J	Ceramic 12pF ±5%	
C33	CC45CH1H330J	Ceramic 33pF ±5%	
C34	CC45SH1H050D	Ceramic 5pF ±0.5pF	
C35	CC45CH1H050D	Ceramic 5pF ±0.5pF	
C36	CC45CH1H100D	Ceramic 10pF ±0.5pF	
C37	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	
C38	CK45F1H473Z	Ceramic 0.047μF +80%, -20%	
C39	CC45SL1H120J	Ceramic 12pF ±5%	
C40	CC45SL1H101J	Ceramic 100pF ±5%	
C41,42	CK45F1H473Z	Ceramic 0.047μF +80%, -20%	
C43	C91-0013-05	Ceramic 0.01μF 50WV 103K 50V	
C44	CK45F1H473Z	Ceramic 0.047μF +80%, -20%	
C45,46	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	
C47	CK45F1H473Z	Ceramic 0.047μF +80%, -20%	
C48	CE04W1C100	Electrolytic 10μF 16WV	
C49	CC45CH1H030C	Ceramic 3pF ±0.25pF	
C50~52	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	
C53	CK45F1H473Z	Ceramic 0.047μF +80%, -20%	
C54	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	
C55	CC45SL1H101J	Ceramic 100pF ±5%	
C56	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	
C57	CQ92M1H223K	Mylar 0.022μF ±10%	
C58	CK45F1H473Z	Ceramic 0.047μF +80%, -20%	
C59	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	
C60	CE04W1H010	Electrolytic 1μF 50WV	
C61	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	
C62	CC45CH1H010C	Ceramic 1pF ±0.25pF	
C63	CQ92M1H223K	Mylar 0.022μF ±10%	
C64	CQ92M1H473K	Mylar 0.047μF ±10%	
C65	CK45D1H102M	Ceramic 1000pF ±20%	
C66	CC45SL1H331J	Ceramic 330pF ±5%	
C67	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	
C68	Missing No.		
C69	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	
C70	CE04W1H010	Electrolytic 1μF 50WV	
C71	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	

PARTS LIST


FINAL UNIT (X56-1250-00)

Ref.No.	Parts No.	Description	Re- marks
C72	CK45F1H223Z	Ceramic 0.022 μ F +80%, -20%	
C73,74	CK45F1H103Z	Ceramic 0.01 μ F +80%, -20%	
RESISTOR			
R1~53	RD14CY2B○○○J RD14BY2B○○○J	Carbon ○○○ Ω $\pm$ 5% 1/8W	
R6	Missing No.		
R5,11	Missing No.	W, T	
SEMICONDUCTOR			
Q1	V09-1008-16	FET 2N5485	☆
Q2	V09-0057-05	FET 3SK41(L) or 3SK40(L)	
Q3	V09-0061-05	FET 3SK41(M) or 3SK40(M)	
Q4	V09-1002-26	FET 3SK35T(GR)	
Q5	V09-0012-05	FET 2SK19(GR)	
Q6	V01-0037-05	Transistor 2SA495(/)	
Q7	V09-0012-05	FET 2SK19(GR)	
Q8	V30-0006-05	IC TA7045M(R)	
Q9	V03-0079-05	Transistor 2SC460(B)	
Q10,11	V03-0123-05	Transistor 2SC733(Y)	
D1~6	V11-0317-05	Diode 1S2208	
D2	Missing No.	W, T	
D7,8	V11-0076-05	Diode 1S1555	
D9~13	V11-0051-05	Diode 1N60	
D14	V11-0374-05	Diode 1SS16	
TH1	V11-7762-16	Thermistor 31D26	
POTENTIOMETER/RELAY			
VR1	R12-3022-05	Semi-fixed resistor 10k Ω (B)	
VR2	R12-7013-05	Semi-fixed resistor 500k Ω (B)	
VR3	R12-3025-05	Semi-fixed resistor 10k Ω (B)	
VR4	R12-0039-05	Semi-fixed resistor 500 Ω (B)	
VR5	R12-2017-05	Semi-fixed resistor 5k Ω (B)	
RL1	S51-1403-05	Relay	☆
INDUCTOR/COIL/IFT/FILTER			
L1	L40-1021-03	Ferri-inductor 1mH	
L2	L33-0220-05	Choke coil 2.4 μ H	
L3~6	L40-1021-03	Ferri-inductor 1mH	
L7	L33-0025-05	Choke coil 1 1 μ H	
T1	L31-0324-05	Coil (C) 144MHz	
T2,3	L31-0347-05	Tuning coil 144MHz	
T4~7	L31-0324-05	Coil (C) 144MHz	
T8	L31-0347-05	Tuning coil 144MHz	
T9,10	L30-0502-05	IFT 10.7MHz (green)	
T11~13	L30-0501-05	IFT 10.7MHz (pink)	
T14~16	L30-0502-05	IFT 10.7MHz (orange)	
MCF	L71-0021-05	Monolithic filter	
MISCELLANEOUS			
—	E23-0047-05	Terminal x28 K	
—	E23-0047-05	Terminal x27 W, T	
—	F11-0113-05	Shield case	

Ref.No.	Parts No.	Description	Re- marks
CAPACITOR			
C1	CC45SL2H680K	Ceramic 68pF $\pm$ 10%	
C2	CK45F1H103Z	Ceramic 0.01 μ F +80%, -20%	
C3	CC45SL2H390K	Ceramic 39pF $\pm$ 10%	
C4	CC45SL2H330K	Ceramic 33pF $\pm$ 10%	
C5	CE04W1A101	Electrolytic 100 μ F 10WV	
C6	Missing No.		
C7	CM93D2H220J	Super mica 22pF $\pm$ 5%	
C8	Missing No.		
C9	CK45F1H103Z	Ceramic 0.01 μ F +80%, -20%	
C10	CE04W1H4R7	Electrolytic 4.7 μ F 50WV	
C11	CK45F1H103Z	Ceramic 0.01 μ F +80%, -20%	
C12	CE04W1H4R7	Electrolytic 4.7 μ F 50WV	
CK1~6	C90-0194-05	Ceramic 0.001 μ F	
RESISTOR			
R1~4	RD14BY2E○○○J	Carbon ○○○ Ω $\pm$ 5% 1/4W	
R5	RC05GF2H101J	Carbon 100 Ω $\pm$ 5% 1/2W	
SEMICONDUCTOR			
Q1	V11-0315-05	Transistor 2N5641	
Q2	V11-0316-05	Transistor 2N5642	
D1~3	V11-0076-05	Diode 1S1555	
D4	V11-0318-05	Diode V06J	
TRIMMER/RELAY			
TC1,2	C05-0029-15	Ceramic trimmer 50pF	
TC3,4	C05-0054-05	Ceramic trimmer 60pF	
RL1	S51-1402-05	Relay	
COIL			
L1	L34-0432-05	VHF coil (A) 0.8 ϕ 1t	
L2	L33-0219-05	RF Choke coil 0.2 μ H/100 Ω	
L3	L34-0433-05	VHF coil (B) 0.8 ϕ 3t	
L4	L34-0435-05	VHF coil (D) 0.8 ϕ 1/2t	
L5	L33-0222-05	Choke coil 0.5 ϕ 11t	
L6	L34-0444-05	VHF coil (E) 1.2 ϕ 1t	
L7	L33-0222-05	Choke coil 0.5 ϕ 11t	
L8	L31-0325-15	Coil	
L9, 10	L33-0222-05	Choke coil 0.5 ϕ 115	
MISCELLANEOUS			
—	E23-0001-05	Hermetic terminal x5	
—	E23-0046-04	Terminal	
—	F01-0172-24	Heat sink	
—	F01-0173-13	Heat sink (B)	
—	G02-0056-04	Spring for earth	
—	J31-0109-04	Spacer ring	
—	N30-3008-41	Round head screw x5	
—	N30-3012-41	Round head screw x4	

PACKING

PACKING

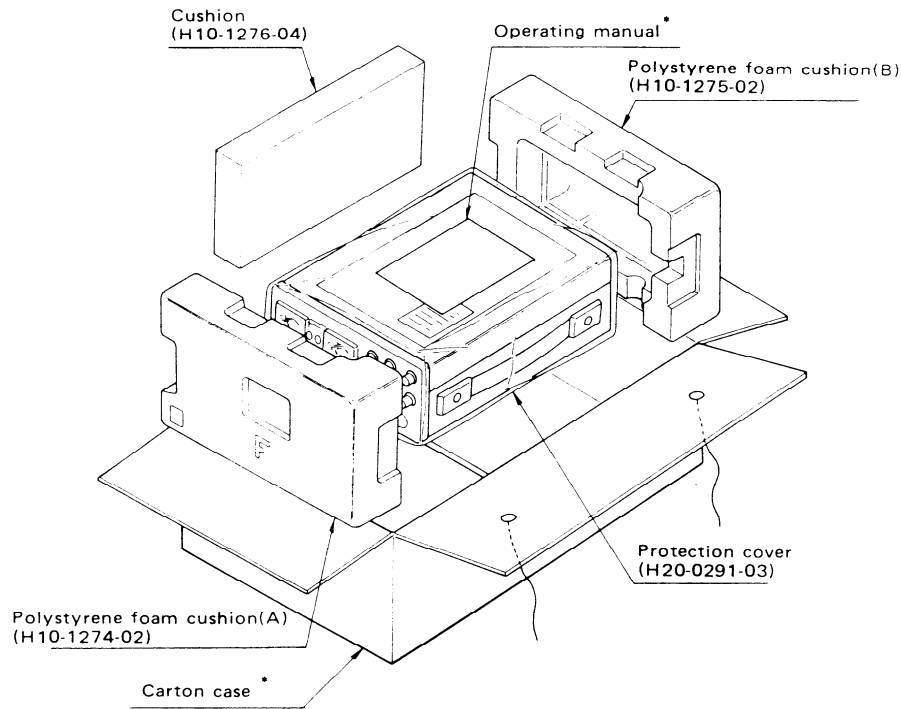

ACCESSORIES

Operating manual *

Warranty card *

4P connector plug *

9P MT plug (E05-0901-05)

Phone plug (E12-0001-05)

Phono plug (E14-0101-05) × 2

Fuse 1A (F05-1023-05)

Fuse 2A (F05-2023-05) *

Fuse 5A (F05-5022-05)

Foot (J02-0049-14) × 2

Round head screw (N30-4012-11) × 2

Microphone *

AC power cord *

DC power cord (X42-1050-00)

* Refer to PARTS LIST.

DISASSEMBLY

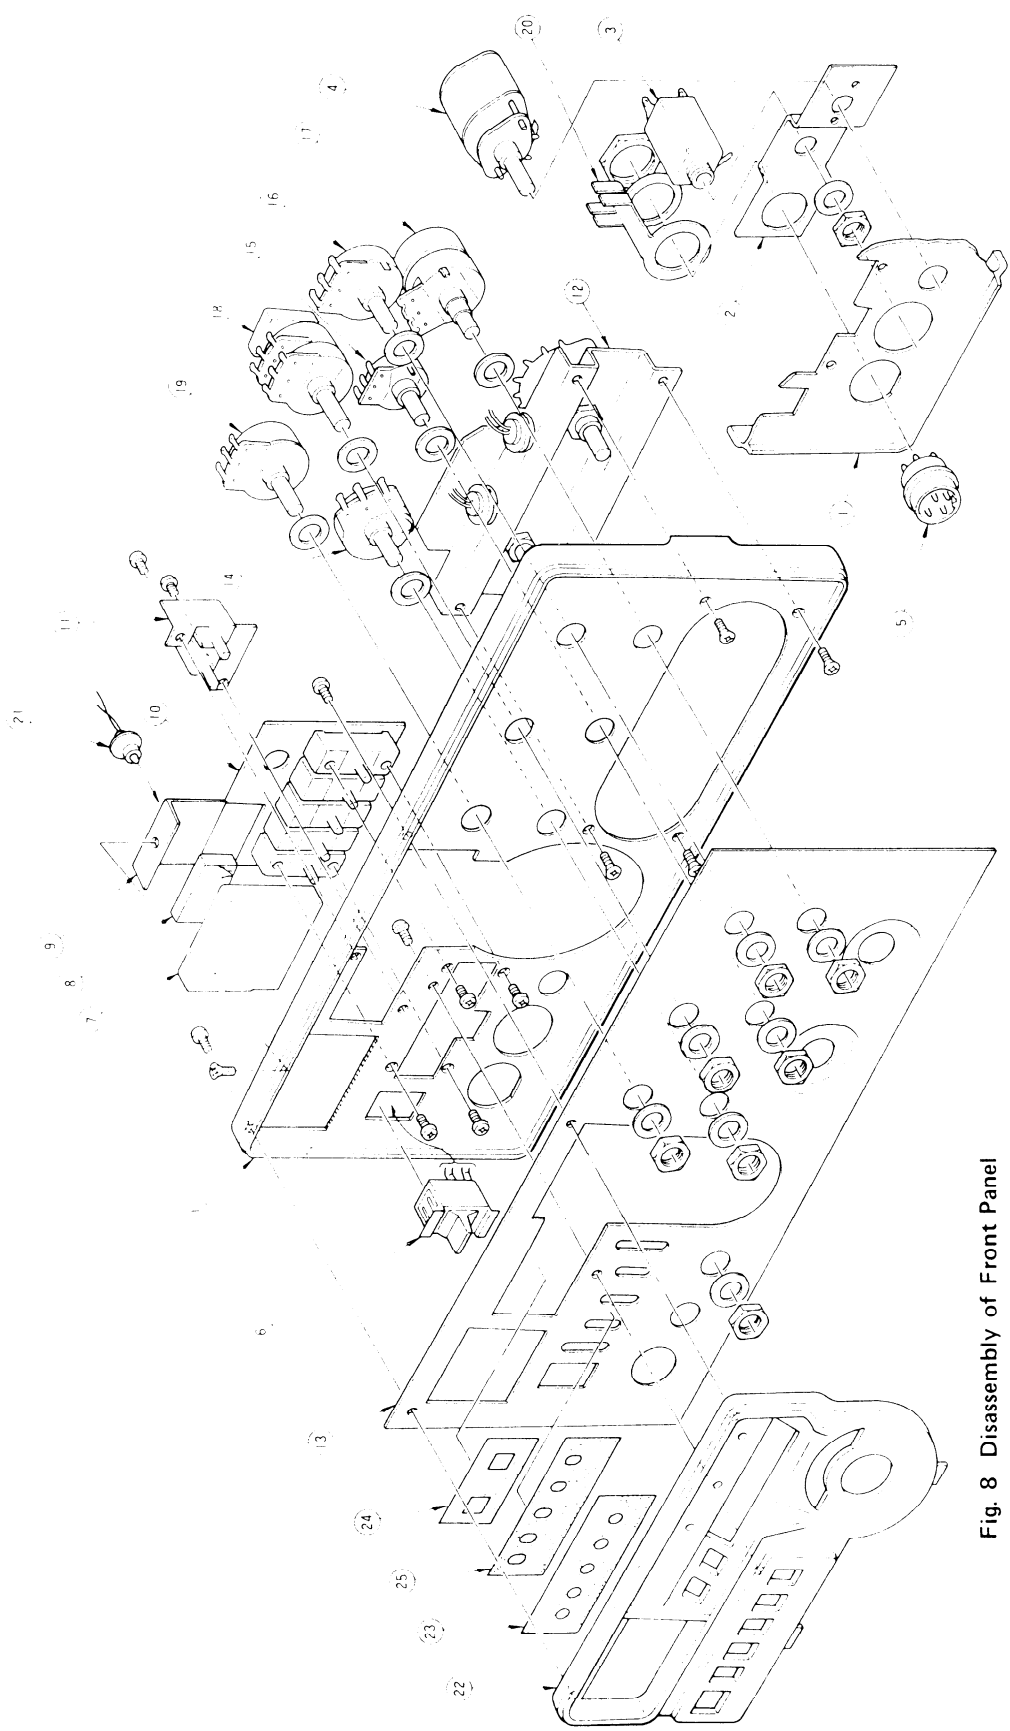


Fig. 8 Disassembly of Front Panel

No.	Parts name	Parts No.	Remarks	No.	Parts name	Parts No.	Remarks
1	Panel escutcheon	B01-0606-05		13	Ornament panel	A21-0713-03	
2	Mounting hardware			14	Variable resistor	R03-3055-05	RIT
3	Phone jack	E11-0034-25		15	Variable resistor	R01-3402-05	SQUELCH
4	Rotary switch	S01-4402-05	MODE	16	Variable resistor	R03-3055-05	DRIVE
5	4P microphone socket	E06-0403-05		17	Variable resistor	R08-9010-15	AF · RF
6	Paddle switch	S59-2025-05	POWER	18	Variable resistor	R08-9401-05	VOX GAIN, DELAY
7	Meter	B31-0606-05		19	Variable resistor	R01-3403-05	SSB, MIC
8	Cushion (B)	G13-0605-04		20	Lead wire stopper		
9	Meter stopper			21	Pilot lamp	B30-0804-05	
10	Switch unit	X01-1060-00		22	Dial escutcheon ass'y	B07-0604-05	
11	PC board for push switch	J25-2557-04		23	Switch mask	F15-0165-14	
12	Rotary switch mounting hardware			24	Switch mask (B)	F15-0606-04	
				25	Switch mask	F15-0612-04	

DISASSEMBLY

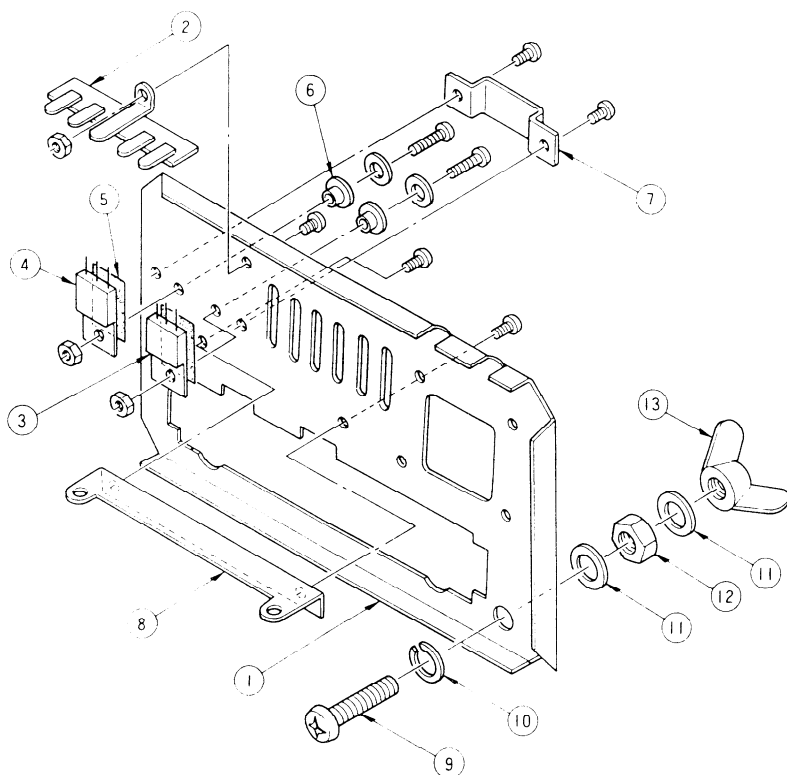


Fig. 9 Disassembly of Rear Panel (A)

No.	Parts name	Parts No.	Remarks
1	Rear panel (A)	A23-1402-03	
2	Lug terminal	E22-0405-05	
3	Transistor	V01-0138-05	2SA671 TD (A)
4	Transistor	V04-0046-05	2SC235 (Y)
5	Insulating mica	F20-0078-05	
6	Insulating washer	N19-0201-05	
7	Transistor cover	F07-0327-05	
8	PC board mounting hardware		
9	Round head screw	N30-6018-41	
10	Spring washer	N16-0060-41	
11	Washer	N19-0089-00	
12	Nut	N10-3060-11	
13	Butterfly nut	N14-0020-04	

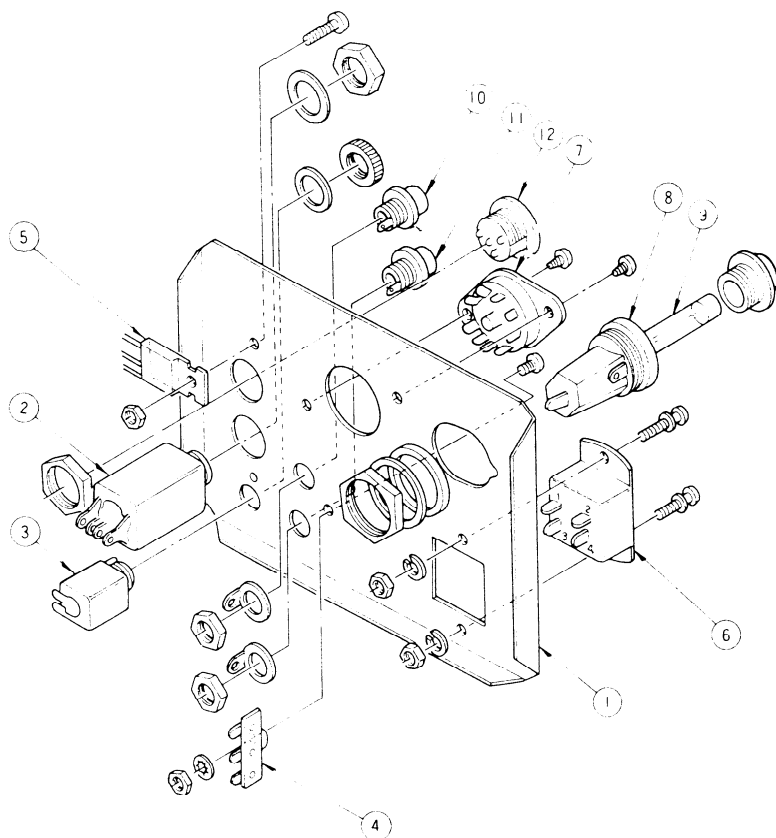


Fig. 10 Disassembly of Rear Panel (B)

No.	Parts Name	Parts No.	Remarks
1	Rear panel (B)	See parts list.	
2	KEY jack	E11-0005-15	
3	Speaker jack	E11-0003-15	
4	Lug terminal	E22-0007-05	
5	IC	V30-1001-16	FS7805M
6	4P socket	E08-0409-05	POWER
7	9P MT socket	E01-0903-05	EXT, VFO
8	Fuse holder	J13-0004-05	
9	Fuse	F05-2023-05	2A
10	1P phono jack	E13-0101-05	RL MAKE
11	1P phono jack	E13-0101-05	ALC INPUT
12	4P connector	E09-0471-05	K type

DISASSEMBLY

1. Removing the Case (upper and lower covers)

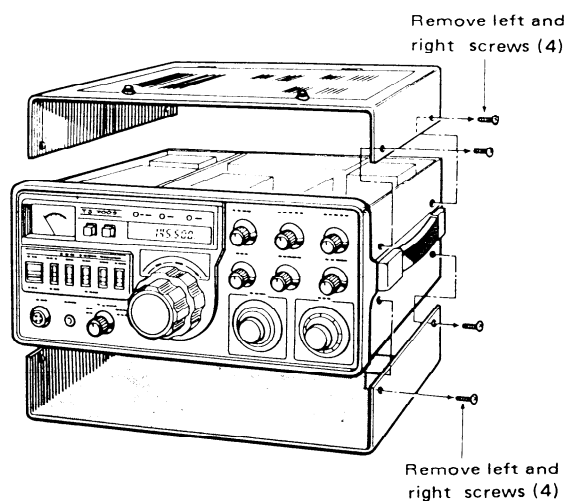


Fig. 11 Removal of Case

2. Opening the Panel

- (1) Remove the screws from both sides of the panel (4 screws on symmetrical positions).

Note: One screw at the lower right is smaller than the other.

- (2) Remove the screw which grounds the power unit shield cover.

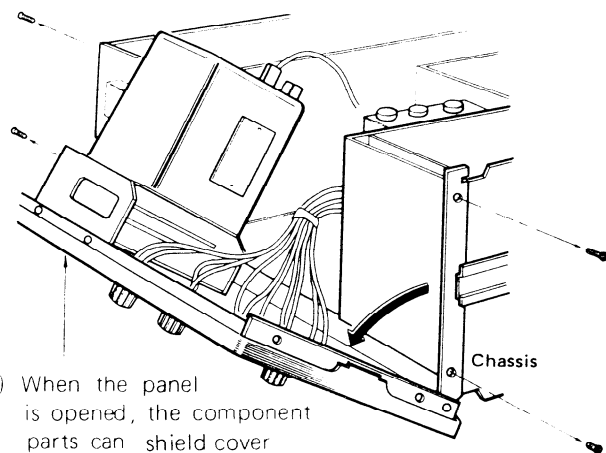


Fig. 12 Opening the Panel

3. Removing the VFO

- (1) Remove the dual knob from the panel front.
- (2) Open the panel by referring to item 2 "Opening the Panel".
- (3) Remove the power cord and output cord from the rear of VFO unit.
- (4) Remove 4 screws holding the panel escutcheon on the VFO mounting fixture at the upper and lower sections.
- (5) Remove 2 screws holding the display unit, then remove the 2 lamps.

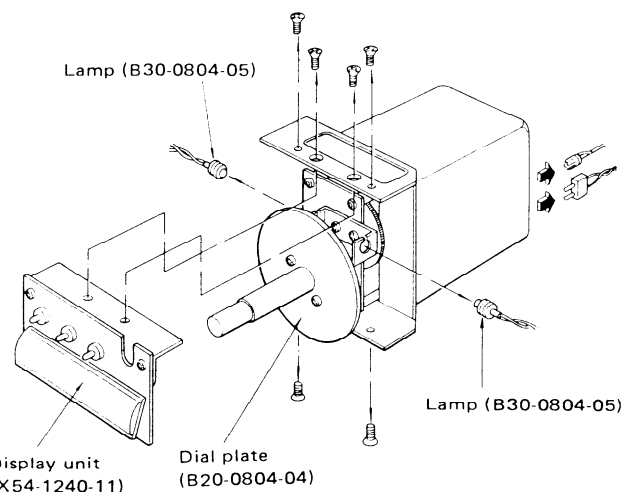


Fig. 13 Removing the VFO

4. Removing the Dial Escutcheon

- (1) Remove VFO by referring to item 3 "Removing the VFO".
- (2) Remove the meter.
- (3) Remove 3 screws from the rear panel.

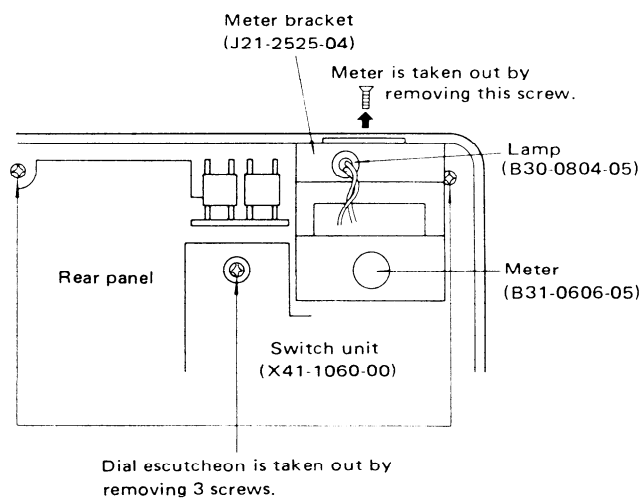


Fig. 14 Removing the dial Escutcheon

5. Replacement of Power Switch and Lever Switch

- (1) Remove VFO and dial escutcheon by referring items 2, 3 and 4.

[Replacement of Power Switch]

- (1) Push the claw on the switch at the rear panel toward you to remove the switch.

[Replacement of Lever Switch]

- (1) Remove 4 screws holding the switch on the panel.

DISASSEMBLY

6. Removing the Power Unit

- (1) Remove 4 screws from the upper shield cover
- (2) Remove 4 hexagonal bosses.
- (3) Remove the screw at the center of the side escutcheon and 2 screws holding the power unit.
- (4) Remove 3 screws holding the heat sink at the left of the power unit.
- (5) Lift the power unit slightly up and remove 2 screws holding the heat sink at the right of the power unit.
- (6) Lift and remove the power unit.

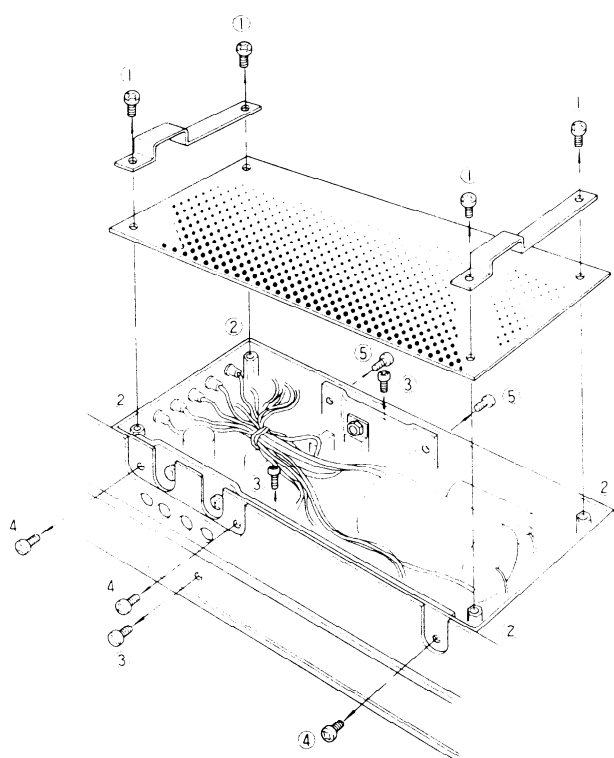


Fig. 15 Removing the Power Unit

7. Replacement of Final Transistor

- (1) Unsolder (2 positions) the coaxial cable connected to BPF.
- (2) Remove 4 screws holding the final transistor.
- (3) Remove 4 screws holding the heat sink and slightly draw out the final unit.
- (4) Remove the nut holding the transistor using a nut remover.

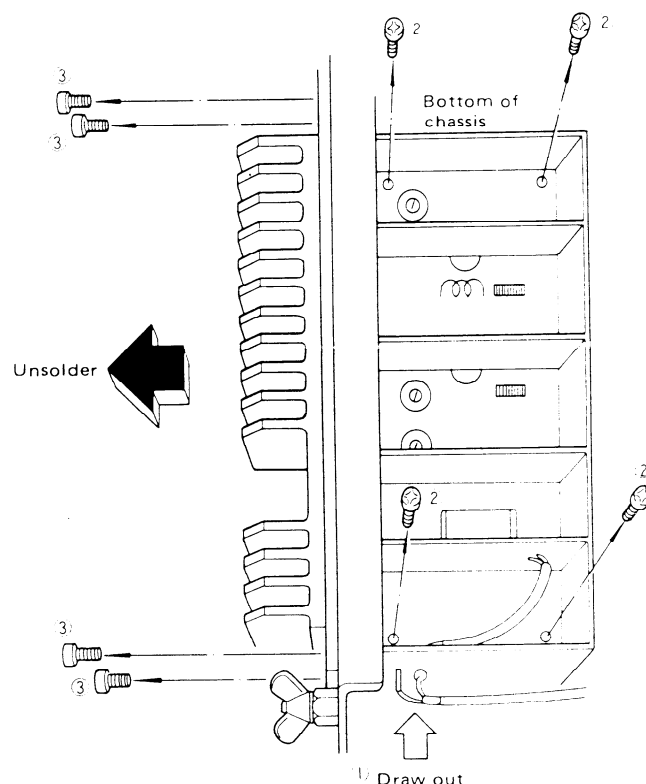


Fig. 16 Replacement of Final Transistor

8. Opening the FM.IF Unit

- (1) For inspection and adjustment of RX NB unit, open the FM.IF unit by removing 2 screws holding the unit



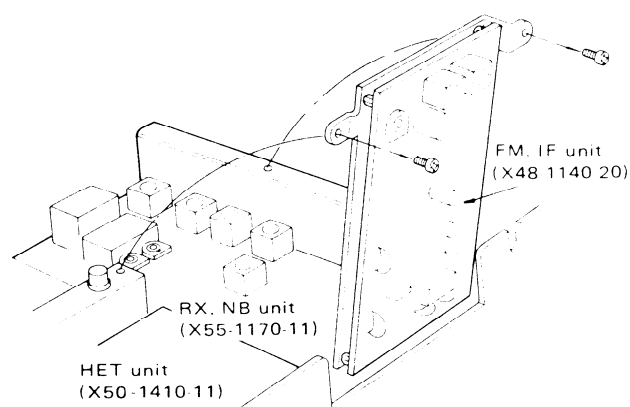


Fig. 17 Opening the FM. IF Unit


TROUBLESHOOTING

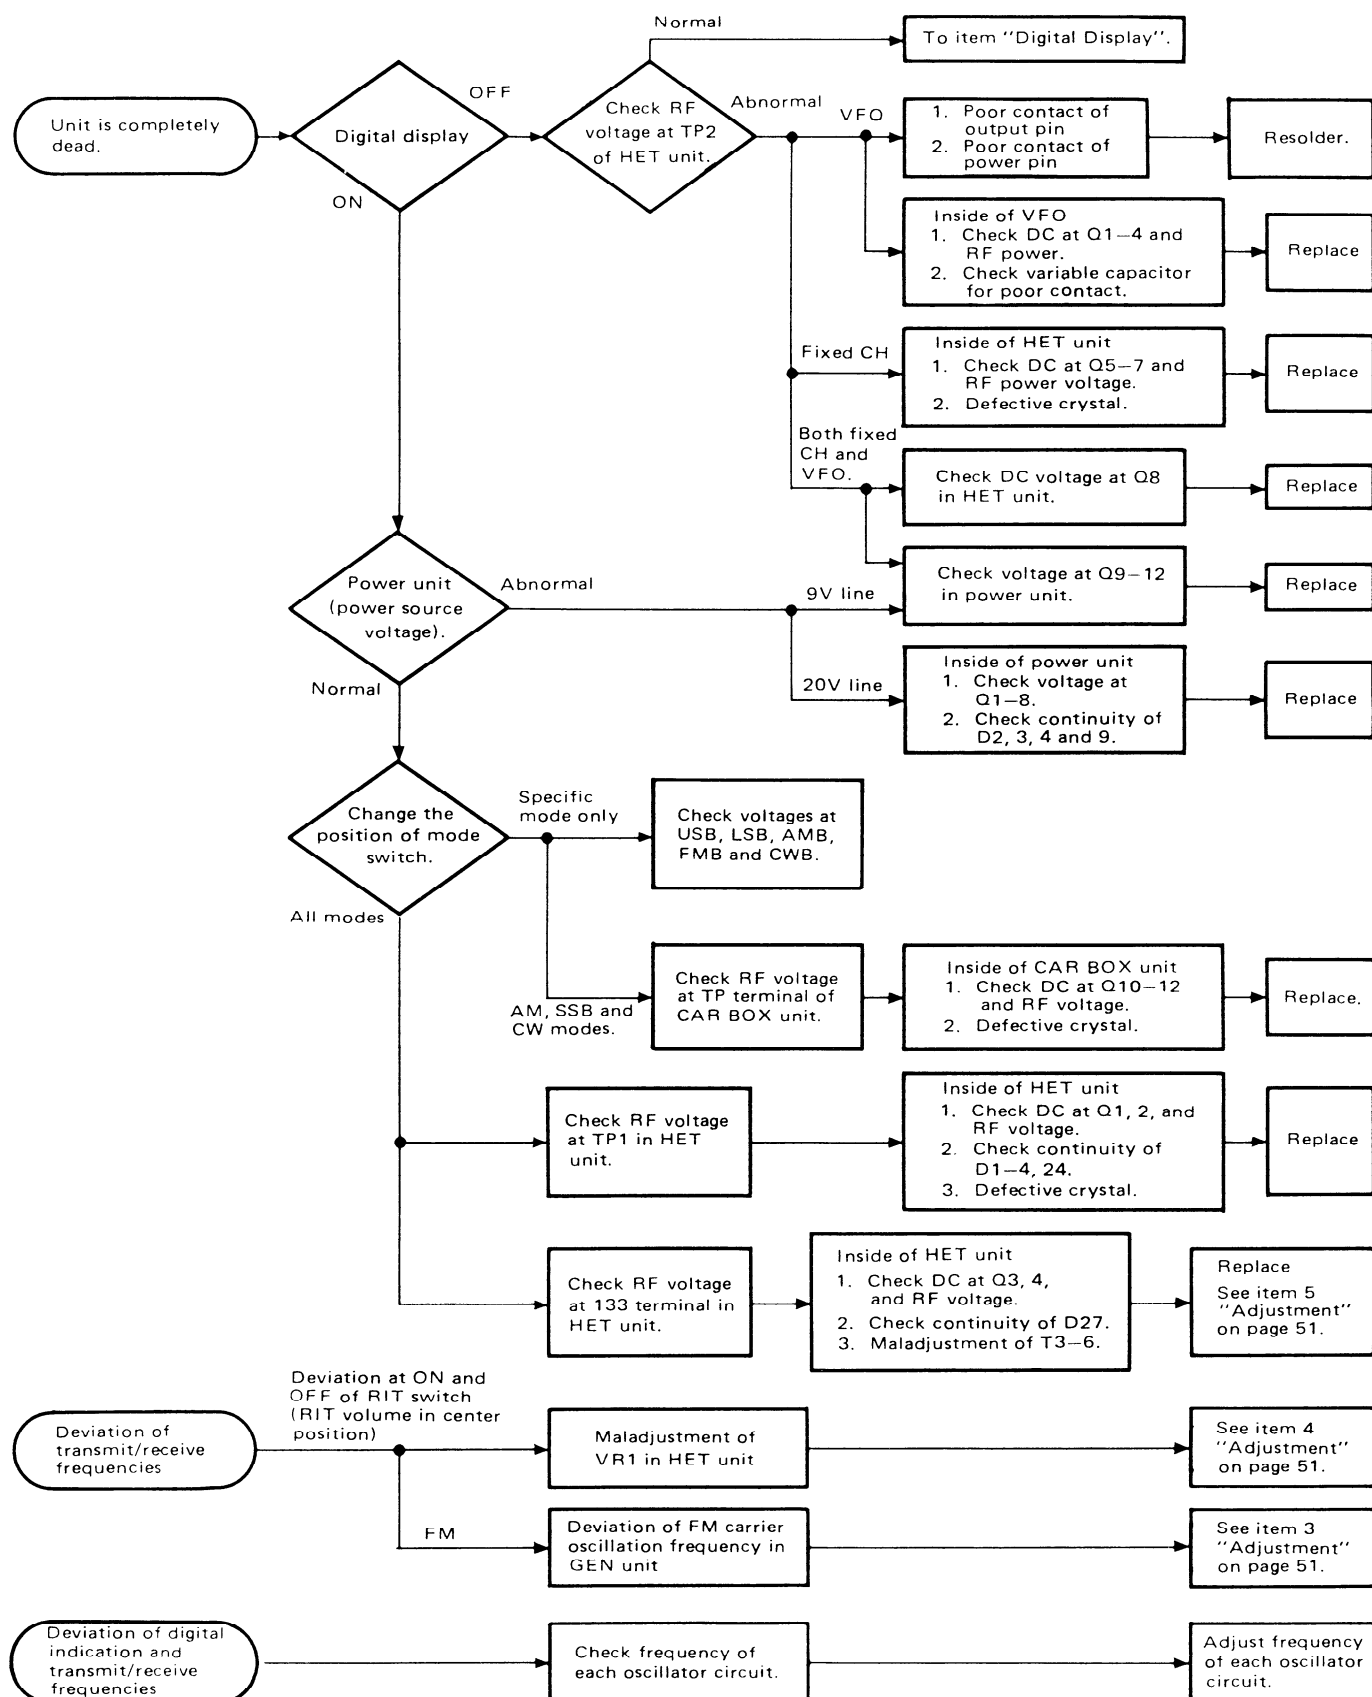


TROUBLESHOOTING

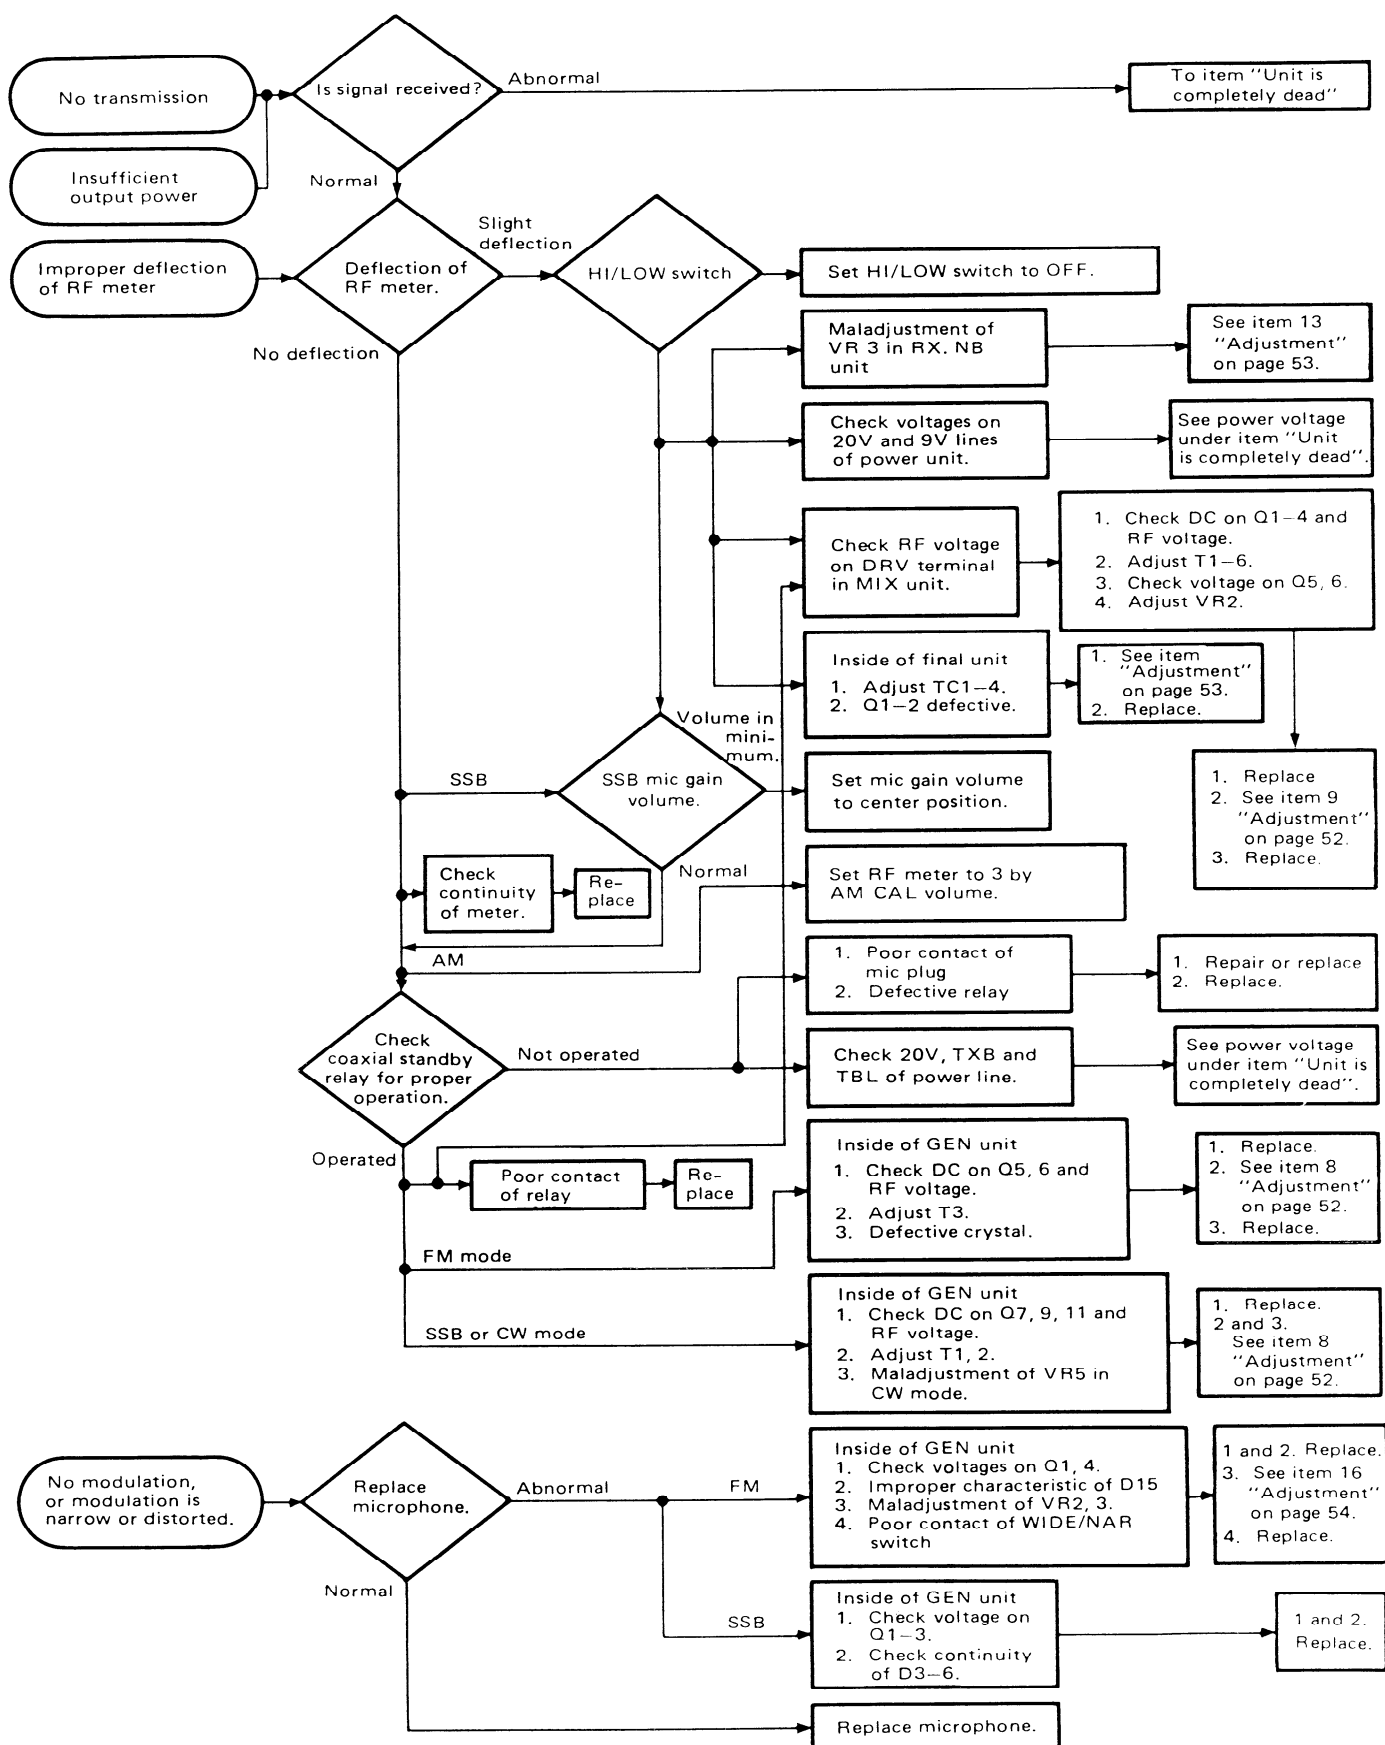

TROUBLESHOOTING

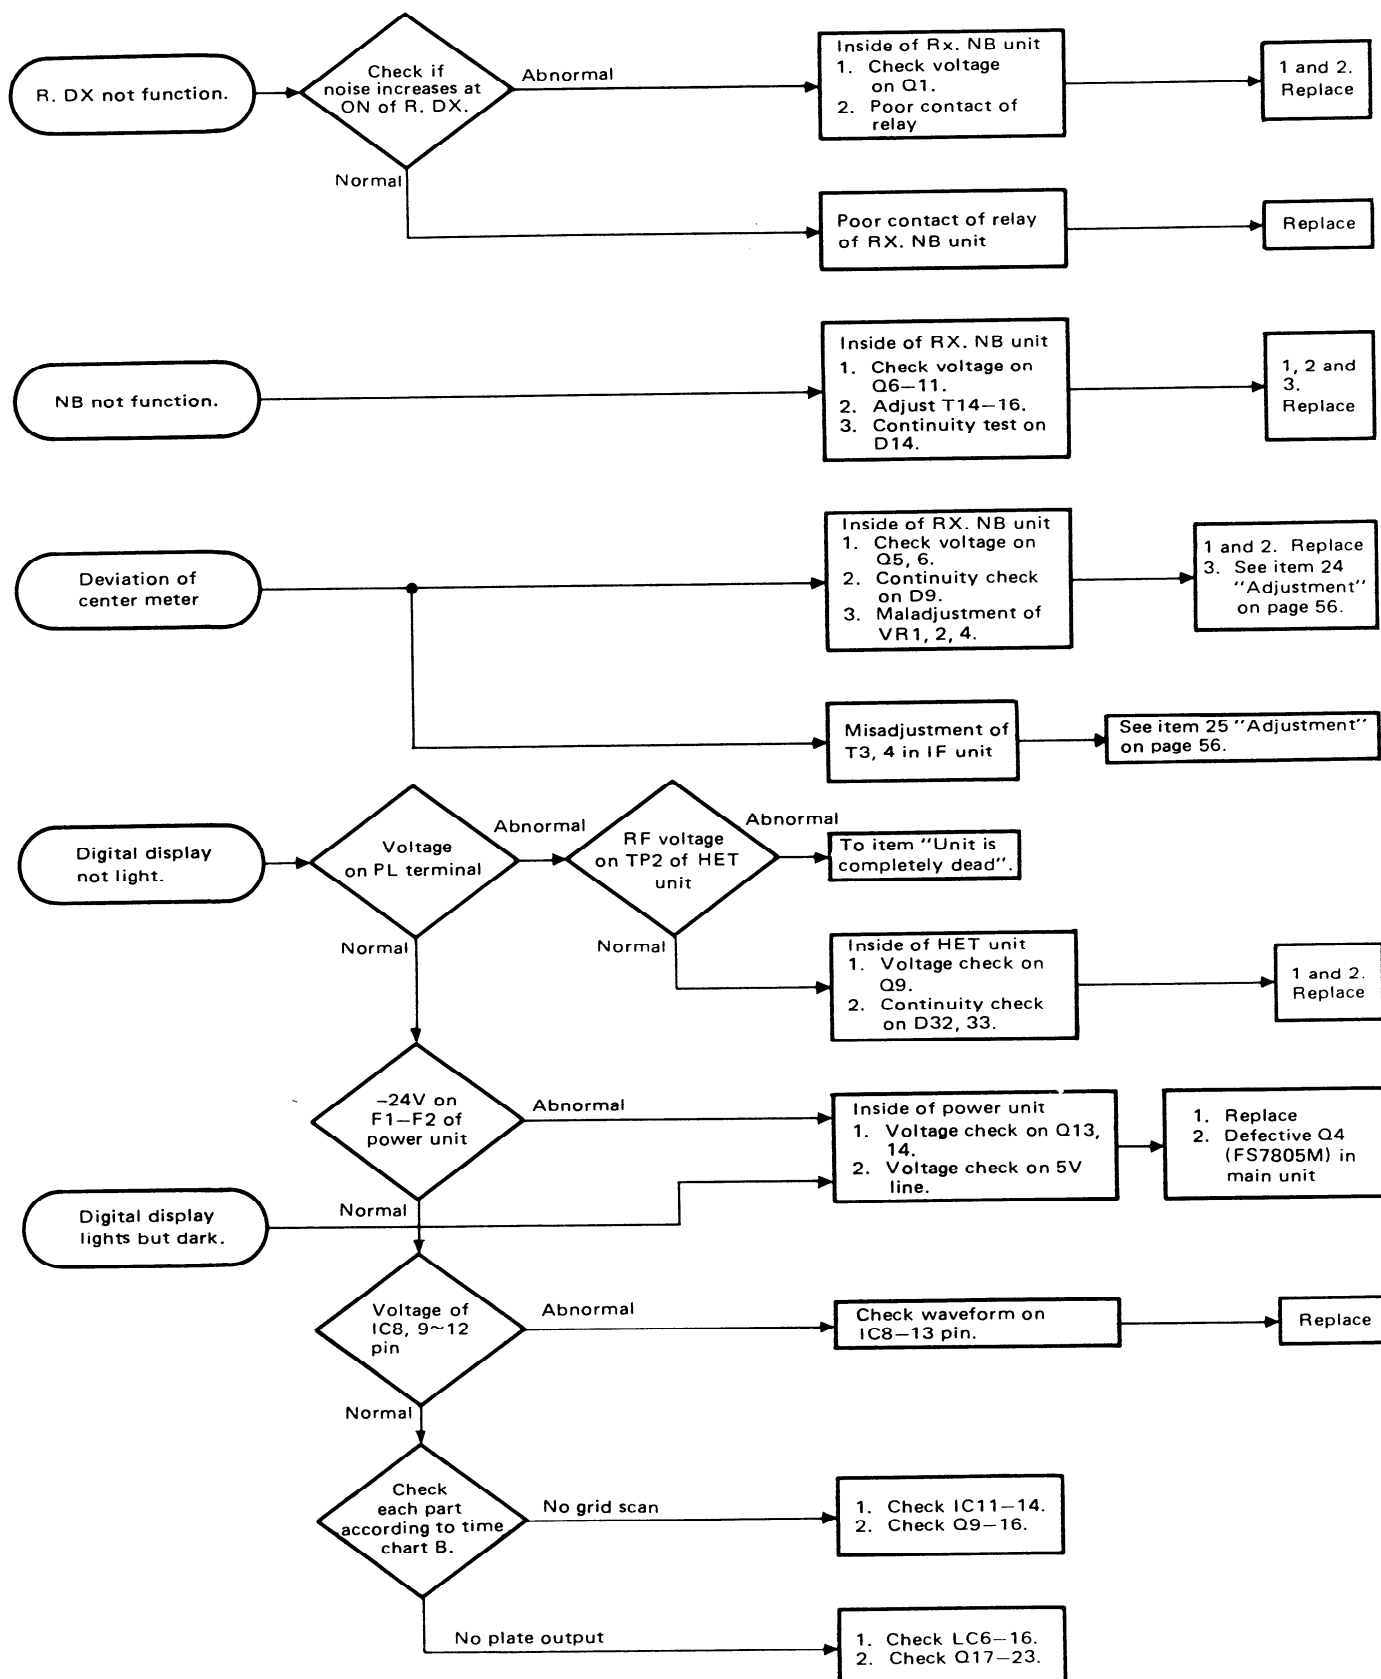


TROUBLESHOOTING

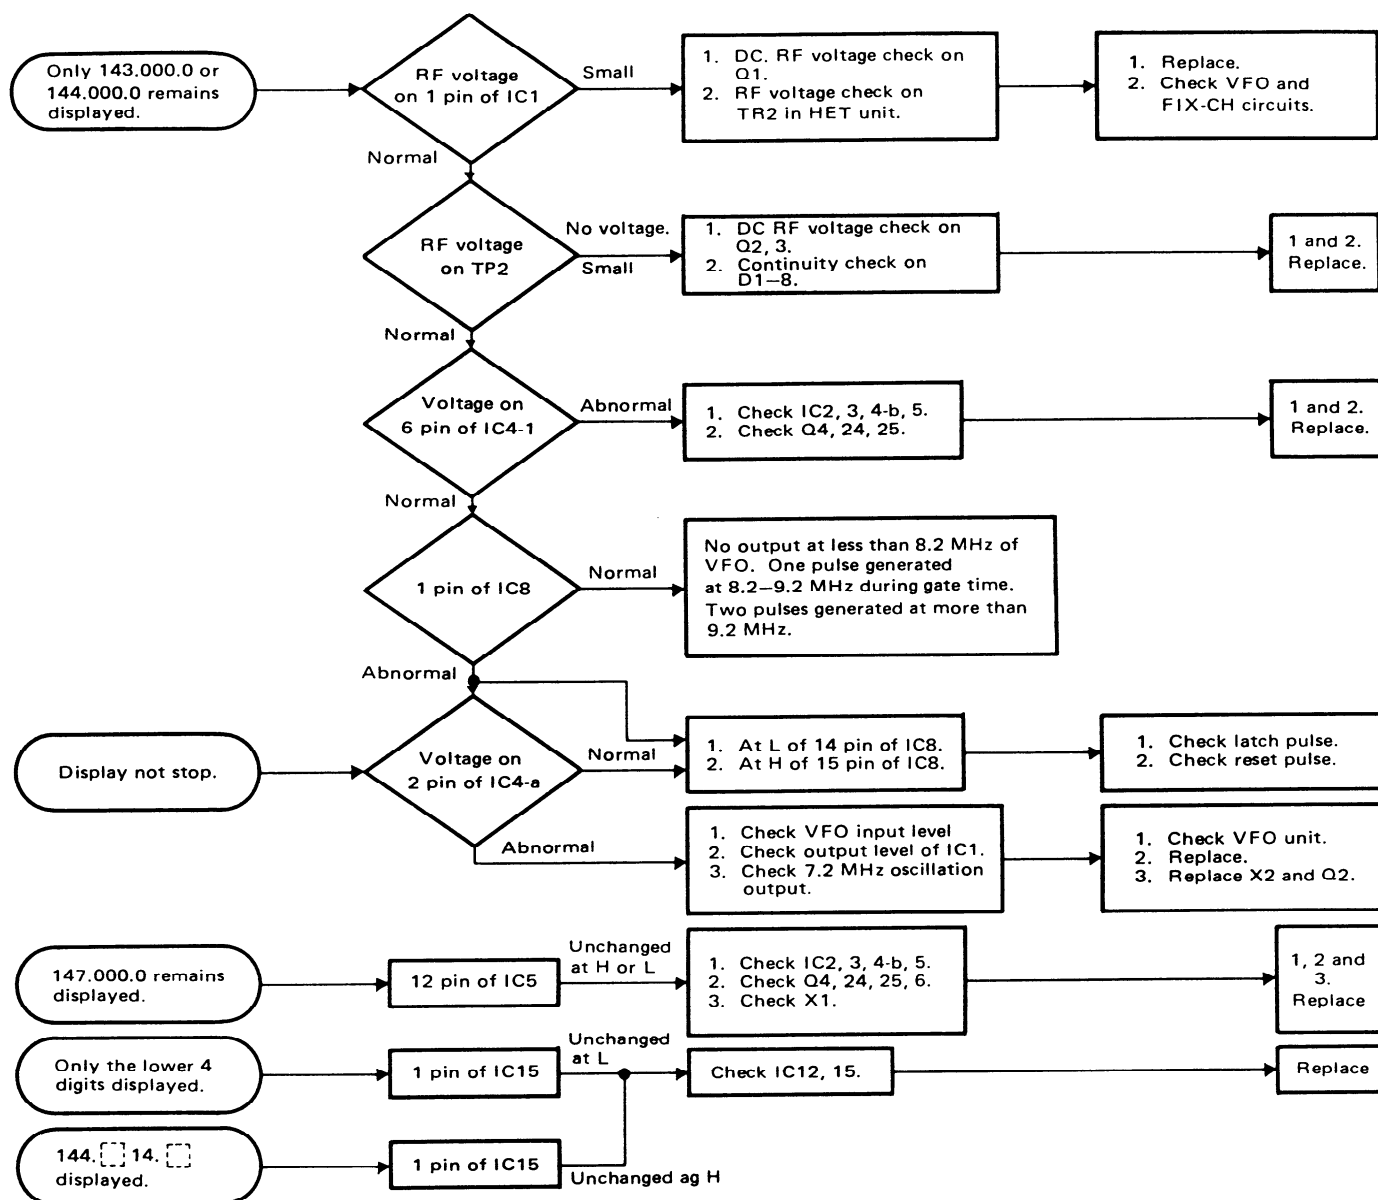

Symptom	Check point	Cause
Only odd numbers displayed	I C 8 4 pin I C 15 12 pin	Stays on H and not changed to L with VFO.
Only even numbers displayed	I C 8 4 pin I C 15 12 pin	Stays on L and not changed to H with VFO input.
Only 2, 3, 6, 7 displayed.	I C 8 5 pin I C 15 9 pin	Stays on H and not changed to L.
Only 0, 1, 4, 5, 8, 9 displayed.	I C 8 5 pin I C 15 9 pin	Stays on L and not changed to H.
Only 0, 1, 2, 3, 8, 9 displayed.	I C 8 6 pin I C 15 4 pin	Stays on L and not changed to H.
Only 4, 5, 6, 7 displayed.	I C 8 6 pin I C 15 4 pin	Stays on H and not changed to L.
8 and 9 not displayed.	I C 8 7 pin I C 15 7 pin	Stays on L and not changed to H.
Only 8 and 9 displayed.	I C 8 7 pin I C 15 7 pin	Stays on H and not changed to L.

Receiving level diagram

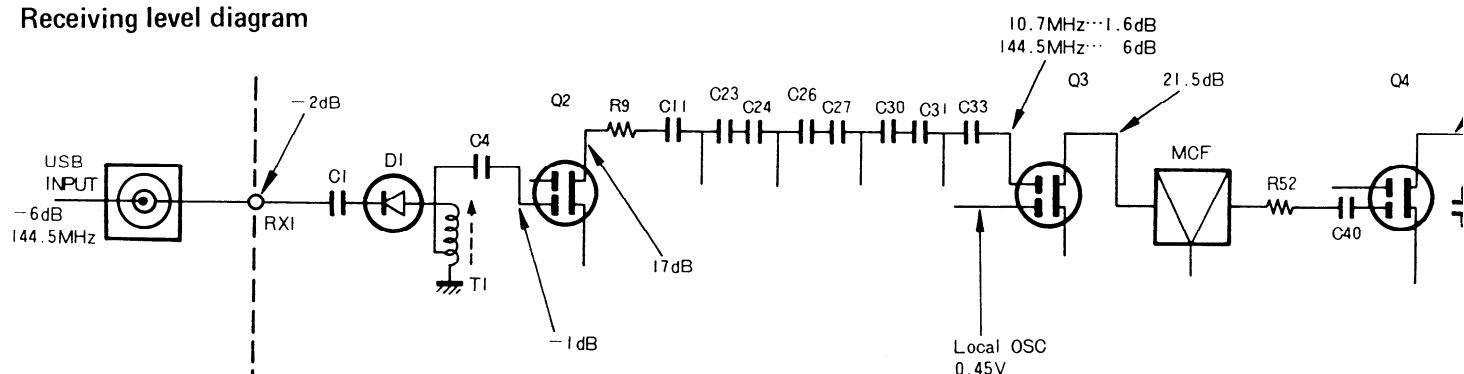

MODE = USB


1. Apply SSG signal of 144.5MHz, $0.5\mu\text{V}$ ($-6\text{dB}\mu$) to ANT terminal and adjust AF GAIN for AF output of $0.63\text{V}/8\Omega$. Keep AF GAIN control at that point.
2. Connect SSG to each test point. Adjust SSG output for AF output of $0.63\text{V}/8\Omega$. Measure the output obtained.

RX.



Transmitting level diagram

MODE = USB, MIC GAIN = center position


Apply 2 mV, 1.5 kHz signal to MIC terminal and measure voltage at each point using RF VTVM.

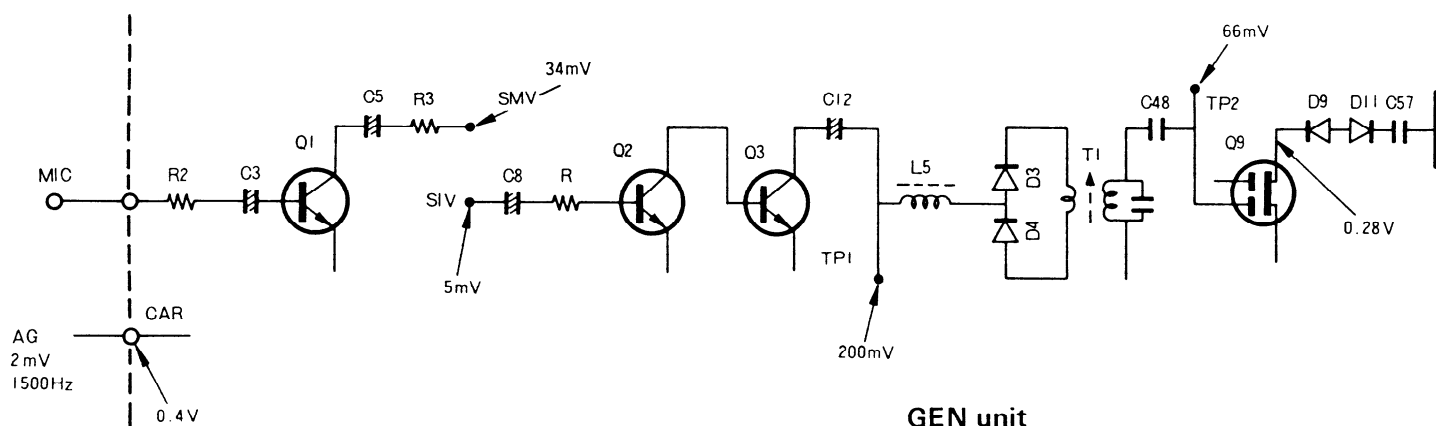

LEVEL DIAGRAM

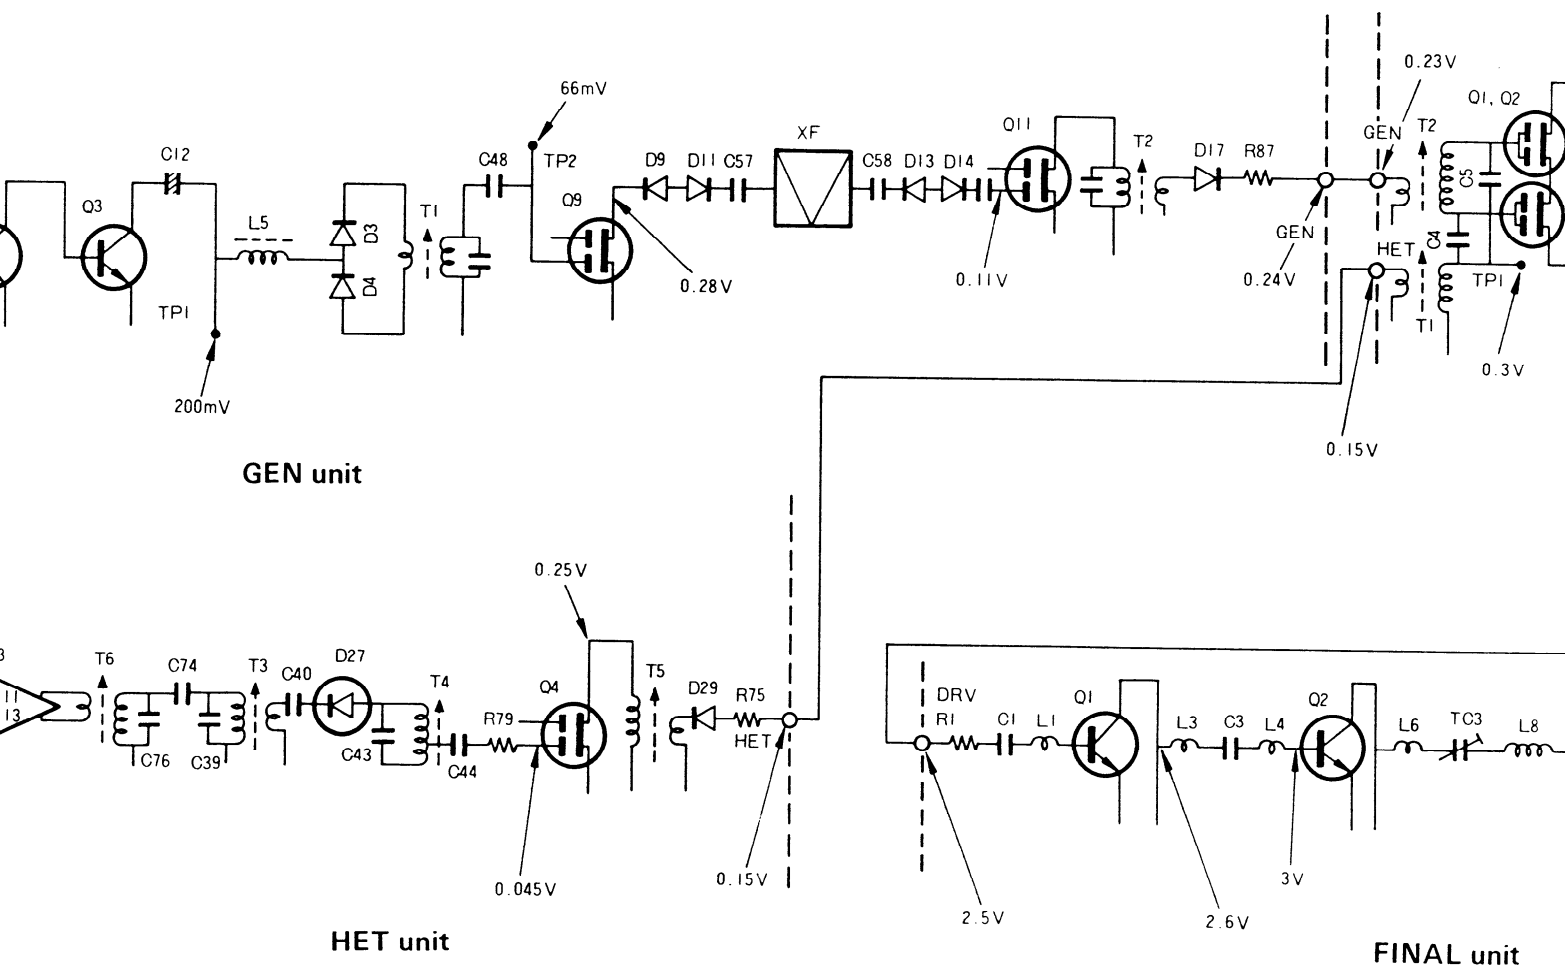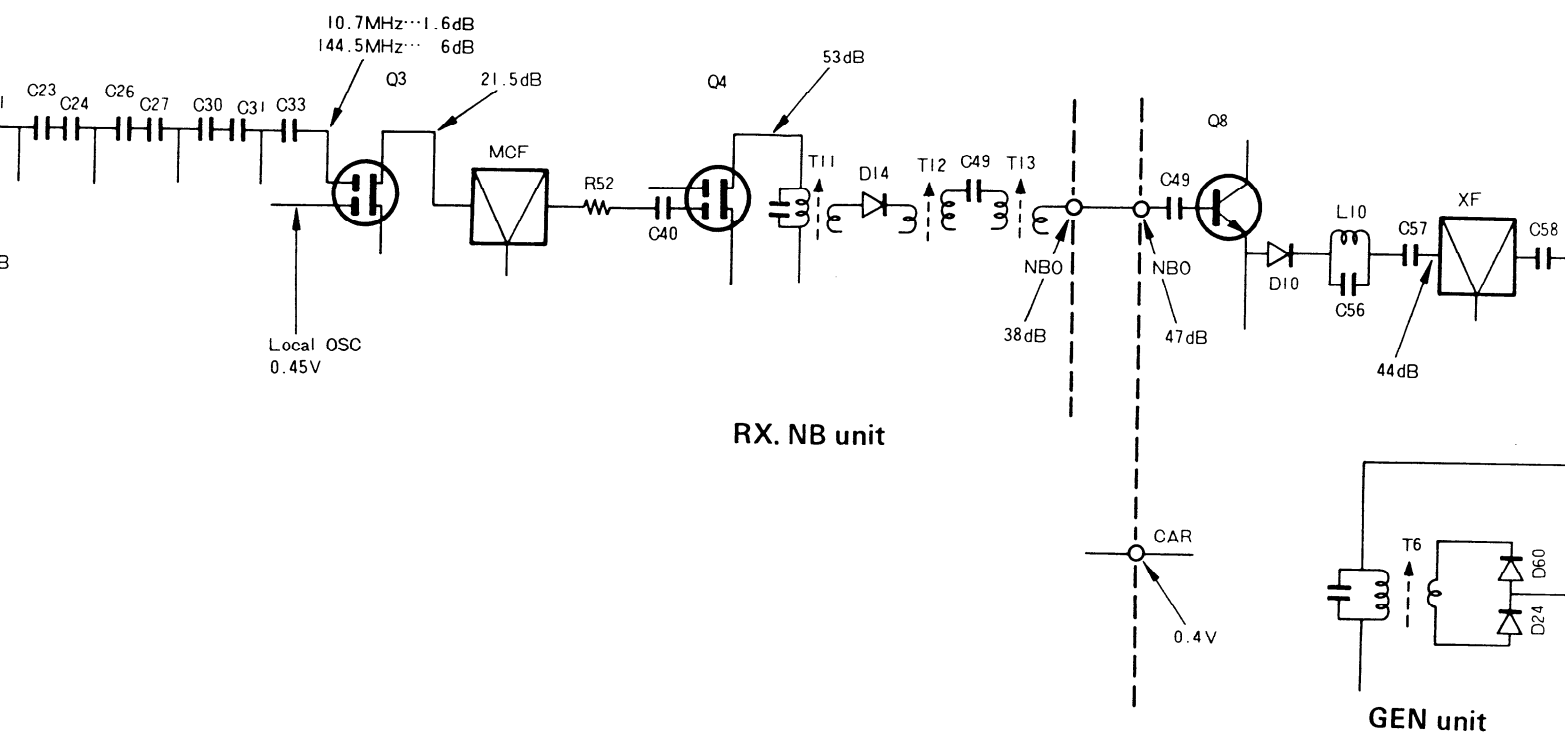

GRAM

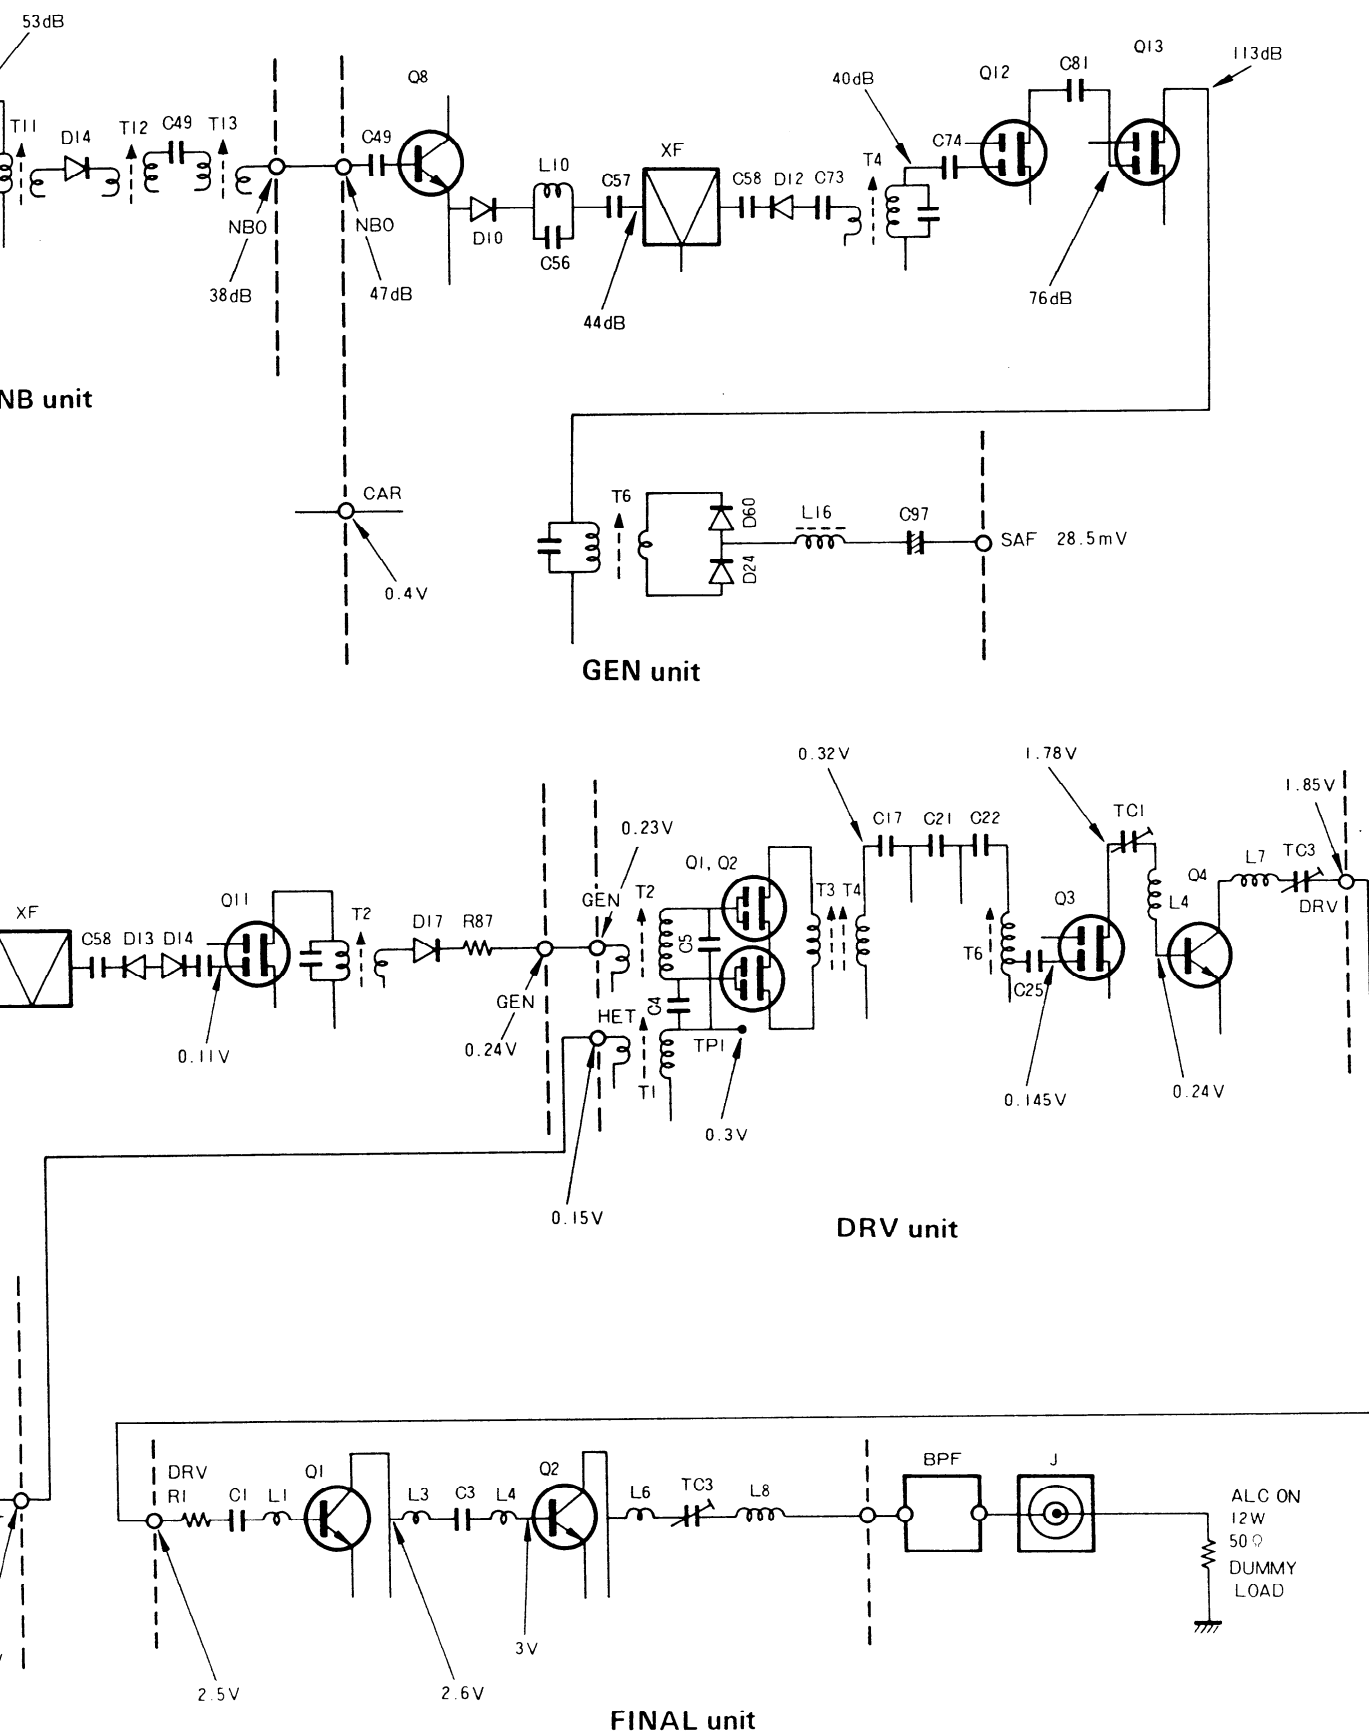

ADJUSTMENT

Measuring instruments

- (1) **Tester**
 - Use a high input impedance tester.
- (2) **RF VTVM**
 - Input impedance: More than $1\text{ M}\Omega$, less than 20 PF
 - Voltage range: F.S = $10\text{ mV} - 300\text{ V}$
 - Measurable frequencies: Up to 200 MHz
- (3) **Frequency counter**
 - Input sensitivity: About 50 mV
 - Measurable frequencies: Up to 150 MHz
- (4) **DC power supply**
 - Voltage: $10\text{ V} - 17\text{ V}$, adjustable
 - Current: More than 5 A
- (5) **Power meter**
 - Power measured: About 20 W
 - Input impedance: $50\text{ }\Omega$
 - Measurable frequencies: Up to 150 MHz
- (6) **AF VTVM**
 - Input impedance: More than $1\text{ M}\Omega$
 - Voltage range: F.S = $1\text{ mV} - 30\text{ V}$
 - Measurable frequencies: $50\text{ Hz} - 10\text{ kHz}$
- (7) **AF generator (AG)**
 - Output frequency: $100\text{ Hz} - 10\text{ kHz}$
 - Output voltage: $0.5\text{ mV} - 1\text{ V}$
- (8) **Linear detector**
 - Measurable frequencies: 150 MHz
- (9) **Field strength meter**
 - Measurable frequencies: 150 MHz
- (10) **Directional coupler**
- (11) **Oscilloscope**
 - Use a high sensitivity oscilloscope with horizontal input terminal.
- (12) **SSG**
 - SSG capable of producing 144 MHz band frequencies with amplitude and frequency modulations.
 - Output level: -20 dB to 100 dB
- (13) **Dummy resistor**
 - 8 ohms , 5 W
- (14) **Noise generator**
 - Noise generator capable of producing noise similar to ignition noise and containing high frequency component of more than 145 MHz .
- (15) **Cord with clips (see Fig. 21)**

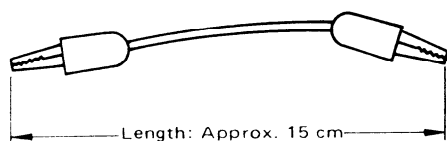


Fig. 18

NOTE TO TECHNICAL PERSONNEL

Before attempting alignment, be sure that proper test equipment is available. It is best before tuning factory sealed adjustments, to verify the gain of the circuit in question.

Preparation

- (1) Unless otherwise noted, knobs and switches should be set as shown in **Table 3**.

POWER switch	ON
STBY switch	REC REC
S meter switch	S
NB switch	OFF
RIT switch	OFF
R. DX switch	OFF
FIX. CH switch	VFO
VOX knob	OFF
RF GAIN knob	Full clockwise
SQUELCH knob	Full counterclockwise
AF knob	Full counterclockwise
TONE SW	OFF

Table 3 Set Positions of Knobs

- (2) For adjustment (trimmers, coils, etc.), use an insulating rod such as a bakelite rod.
- (3) During adjustment of receiver section, do not set the STBY switch to SEND for protection of signal generator.
- (4) When connecting power cord, make sure that the power switch and VOX knob are in OFF position.


Note: If the VOX knob is turned from the OFF position, the transmitter will operate momentarily when the power switch is set to ON. Be careful particularly when adjusting the receiver section.

In these ADJUSTMENTS, SSG output level is specified at open-circuit voltage.

ADJUSTMENT

1. Adjustment of Power Supply (X43-1240-01)

- Connect a voltmeter to the appropriate terminals as shown to adjust voltages.
 9V terminal — Adjust VR-1 $9.00 \pm .01V$
 21V terminal — Adjust VR-2 $21.00 \pm .5V$
- Regulation check. Connect TS-700S to dummy load, transmit FM and check the power supply regulation at the following points:
 $-6V = -6 \pm 0.5V$
 $TBL = -4 \pm 0.5V$
 $RB = 0.75V$
 $5V = 5V \pm 0.2V$
 $-24V = -24V \pm 1.2V$
 $F1 F2 = 3.5V (AC)$

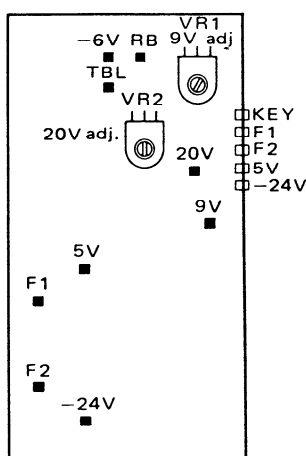

Rectifier Unit (X43-1240-01)

Fig. 19 Adjustment of Power Supply

2. Adjustment of Carrier Board (X50-1420-00)

- Connect TS-700S to dummy load, make sure Fix CH switch is in an empty position, (not VFO).
- Connect an RF VTVM to TP as shown and adjust T-2 for maximum, about 0.8V rms. Standby to send for this adjustment.
- Connect frequency counter to TP, and adjust trimmers for each mode as shown in **Table 4**.
- Check to see that in AM position the frequency changes from 10.70060 TX to 10,70150 in receive.

MODE	STBY	ADJ	OUTPUT RF VOLTAGE OR FREQUENCY
USB	REC	TC1	10.6985 MHz
LSB	REC	TC2	10.7015 MHz
CW	SEND	TC3	10.7006 MHz

Table 4 Carrier Oscillation Frequency


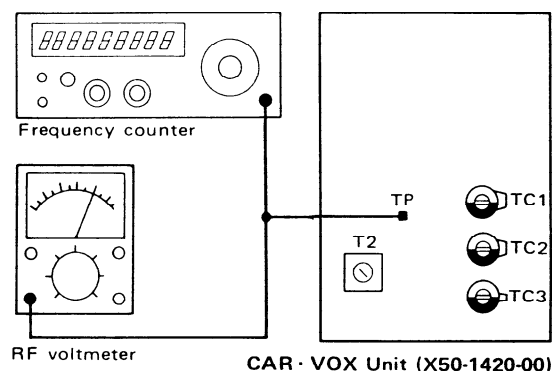


Fig. 20 Adjustment of Carrier Board

3. Adjustment of FM Carrier Freq. (X52-1080-21)

- Position knobs as follows:
 Mode to FM
 Fix CH to 11 (empty)
 Stand By to "Send"
- Connect a frequency counter to GEN terminal and adjust L-3 for 10.7000 Mhz ± 10 Hz.

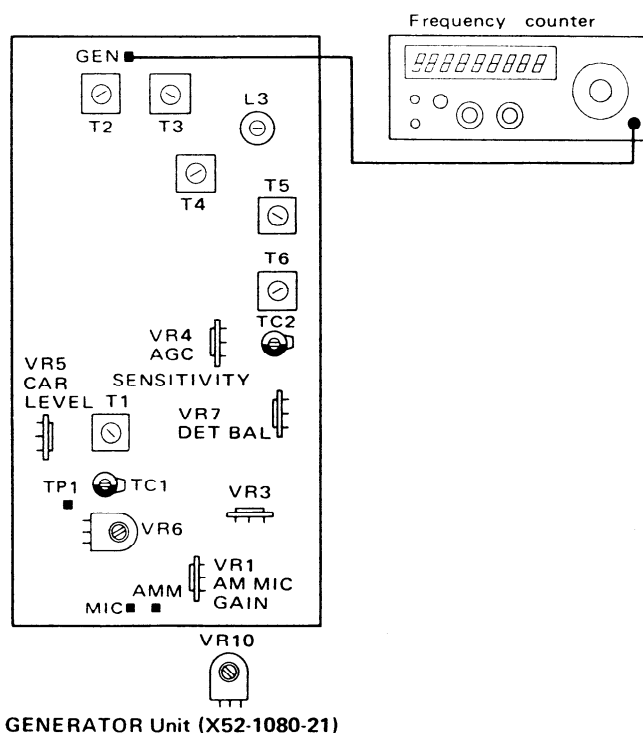

GENERATOR Unit (X52-1080-21)

Fig. 21 Adjustment of FM Carrier Frequency

ADJUSTMENT

4. Adjustment of HET Board (X50-1410-11) K type (X50-1410-60) W, T type


- (1) Position knobs as follows:
RIT to ON
RIT VR to center
- (2) Connect a frequency counter to TP1.
- (3) Connect short clip lead from TP-3 (lead of L-9), and any 9V source.
- (4) Adjust L-1 through L-6 per **Table 5**.
Note: If sufficient adjustment of coils cannot be obtained a slight adjustment of L-7 may be necessary.
- (5) After adjustment check frequency per **Table 5**.

BAND	REPEATER SW	SEND/REC SW	FREQUENCY
144	OFF	REC	125.1000 MHz
145	OFF	REC	126.1000 MHz
145	NOR	REC	126.1000 MHz
		SEND	125.5000 MHz
	REV	REC	125.5000 MHz
		SEND	126.1000 MHz

Table 5 (b) HET Unit Oscillation Frequency (W, T type)

5. Adjustment of HET Board Cont'd (X50-1410-00)

- (1) Position knobs as follows:
Band to 146 (K), 144 (W, T)
Fix Ch to 11 (empty)
Drive to Center
- (2) Connect RF VTVM to TP-1 of Het unit.
- (3) Connect short clip lead from TP-3, (lead of L-9), and any 9V source.
- (4) Adjust T-1 and T-2 for maximum, record reading.
- (5) Setting band switch from 144 to 147 (K), 144 to 145 (W, T) check level at TP-1. The difference should be less than 0.5 dB, (approx 0.3V rms). If not adjust T-2.

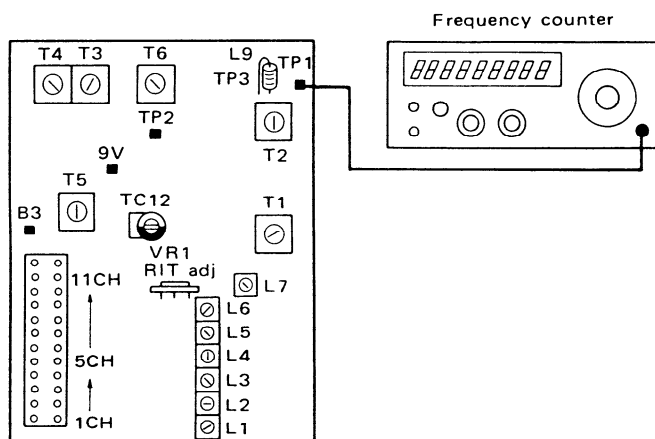


HET Unit (X50-1410-11) K type
(X50-1410-61) W, T type [except L4~L6]

Fig 22 Adjustment of HET Board

BAND	REPEATER SW	SEND/REC SW	FREQUENCY
144	OFF	REC	125.1000 MHz
145	OFF	REC	126.1000 MHz
146	OFF	REC	127.1000 MHz
147	OFF	REC	128.1000 MHz
146	NOR	REC	127.1000 MHz
		SEND	126.5000 MHz
	REV	REC	126.5000 MHz
		SEND	127.1000 MHz
147	NOR	REC	128.1000 MHz
		SEND	128.7000 MHz
	REV	REC	128.7000 MHz
		SEND	128.1000 MHz

Table 5 (a) HET Unit Oscillation Frequency (K type)

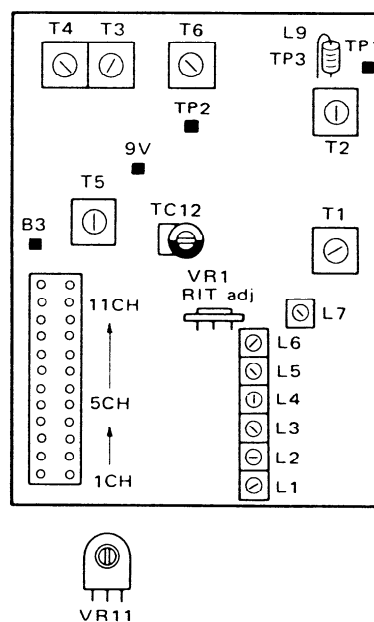

HET Unit (X50-1410-11) K type
(X50-1410-61) W, T type [except L4~L6]

Fig. 23

ADJUSTMENT

- (6) Remove clip lead.
- (7) Position knobs as follows:
Band to 146 (K), 145 (W, T)
VFO to 800
Fix Ch to VFO
- (8) Connect RF VTVM to TP-2
- (9) Adjust TC-2 of VFO for 0.3 V RMS
- (10) Connect RF VTVM to 133 terminal of Het board.
- (11) Adjust T-3, T-4, T-5, T-6 for maximum.
- (12) By turning the core of T4 counterclockwise, decrease the VTVM indication by 2dB from that of step (11).
- (13) Install a crystal (9.0 MHz) into 1 ch of the FIX. CH Socket and adjust TC2 for the same level as step (12).

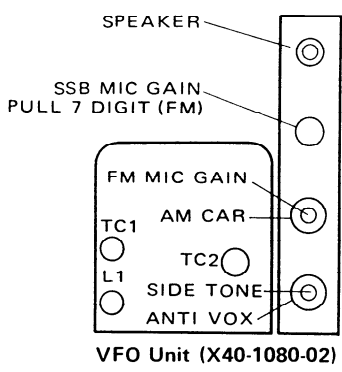



Fig. 24

6. Adjustment of Counter Unit Frequency (X54-1250-11) K type, (X54-1250-61) W, T type

- (1) Connect frequency counter to TP-1.
- (2) Adjust TC-5 for 10,240,000 Hz ± 10 HZ.
- (3) Connect frequency counter to TP-2.
- (4) Adjust frequency trimmers TC-1, TC-2, TC-3 and TC-4 for the correct frequencies in each mode as shown in Table 6.

MODE SWITCH	TRIMMER	FREQUENCY (MHz)
LSB. CWR	TC1	7.199400 (± 10 Hz)
AM. CWT	TC2	7.198450 (± 10 Hz)
FM	TC3	7.200000 (± 10 Hz)
USB	TC4	7.201500 (± 10 Hz)

Table 6 Adjustment of Counter Unit Frequency

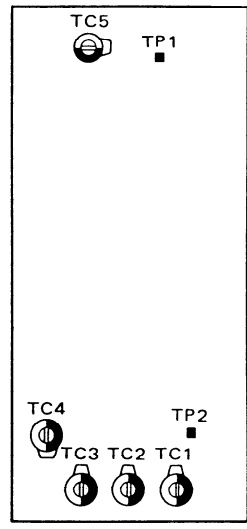

Counter Unit (X55-1250-11) K type (X55-1250-61) W, T type

Fig. 25 Adjustment of Counter Unit

7. Adjustment of VFO Unit Frequency (X40-1080-02)

* See Fig. 24

- (1) Connect frequency counter to TP-2 of Het Unit.
- (2) Turn VFO dial one turn of small tuning knob from fully clockwise. Adjust the dial attaching screw so that the pointer indicates "1000", the Freq. counter shall read 9,20000 MHz.
- (3) Verify the tracking of VFO per Table 7.

Caribration	Adjustment parts	Frequency	Pointer
1000	TC1	9.2000	1000
0	L1	8.2000	0

Table 7

- (4) Set knobs as follows:
Band to 146 (K), 145 (W, T)
Mode to FM
Display to normal
- (5) Turn VFO knob until the display indicates 145.000 MHz (K), 145.000 MHz. (W, T)
- (6) Making sure that 700S is connected to dummy load, set Stand By to "Send", and verify that the Transmit frequency and the display frequency are within ± 300 Hz.

ADJUSTMENT

TRANSMITTING SECTION

8. Adjustment of GEN Unit (X52-1080-21)

- (1) Position knobs as follows:
VFO Dial to 500
Drive control to Center
Fic CH to ch 11 (empty)
Band to 146 (K), 145 (W, T)
Mode to FM
Stand by to "Send", as necessary.
- (2) For connections refer to **Fig. 26**.
- (3) Connect RF VTVM to GEN terminal.
- (4) Adjust T-3 for maximum, approx 0.2V RMS, and record this value.
- (5) Set Mode switch to CW, adjust ALC control, (VR-2 on Mix unit) to minimum ALC.
- (6) Adjust T-1 and T-2 for maximum.
- (7) Adjust VR-5 (CW Carrier Level) for the same value of RF as recorded in previous step (4)


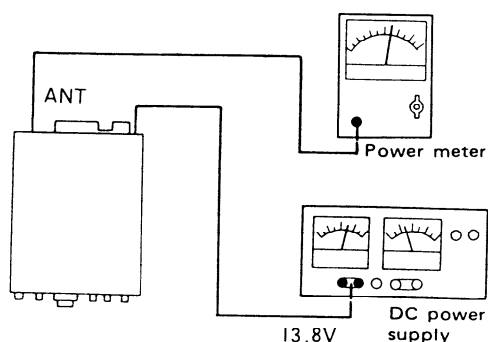


Fig. 26 Adjustment of GEN Unit

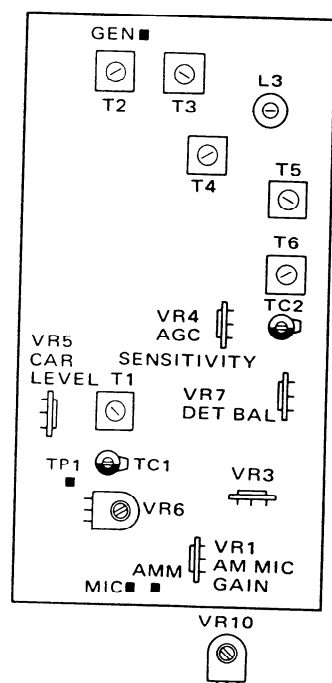


GENERATOR Unit (X52-1080-21)

Fig. 27

9. Adjustment of Mix Unit (X48-1130-00)

Note: This adjustment requires that previous step (8) was completed successfully.

- (1) Set Fix CH switch to VFO
- (2) Adjust T-4 of HET unit and T-1 through T-6, TC-1 of Mix unit alternately for maximum RF power output.
- (3) Turn Drive control and check that Max power is obtained at the exact center of knob rotation.
- (4) Set Band switch to 146 (K), 145 (W, T)
- (5) Only [W, T] Adjust VR-10 (bottom of unit) so that RF meter indicates Max power out. Next, with the REPEATER SW set to "REV", adjust VR12 for max. indication.
- (6) Adjust TC-2, TC-3, TC-4 repeatedly for max power out.

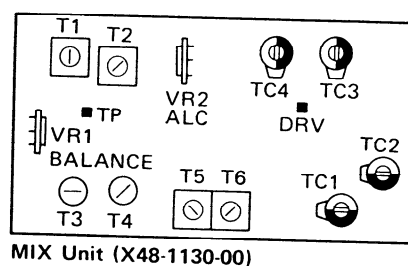


MIX Unit (X48-1130-00)

Fig. 28 Adjustment of MIX Unit

10. Adjustment of Final Unit (X48-1250-00)

Note: This adjustment requires that previous step (9) was completed successfully.

- (1) Adjust TC-3 and TC-4 of Mix Unit, and TC-1, TC-2, TC-3, and TC-4, of Final Unit repeatedly until maximum RF power output is obtained.
- (2) Check to see that RF out is at least 12W on all bands.

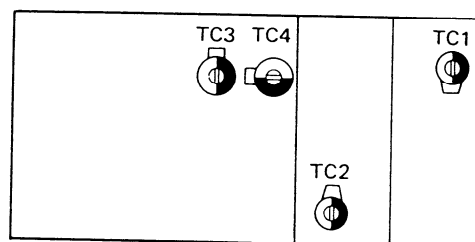

FINAL Unit (X48-1250-00)

Fig. 29 Adjustment of FINAL Unit

11. Adjustment of ALC

- (1) Adjust VR-2 of Mix unit to obtain 12W

ADJUSTMENT

12. Check of AM output

- (1) Set Mode to AM
- (2) Turn AM Carrier control fully Clockwise, and verify that AM output is more than 10W.
- (3) Turn AM Carrier control to 3W

13. Adjustment of RF meter, LOW POWER

- (1) Set Mode switch to FM
- (2) Adjust 700S for maximum Transmitter output
- (3) Adjust VR-3 on RX NB (X55-1170-00) for a reading of 8 on the meter.
- (4) Press the LOW SW and adjust VR9 (LOW POWER adj.) on the SWITCH unit for 1.5 Watts transmitting output power.

14A. Adjustment of Carrier Suppression

- (1) Position knobs as follows:
Mode to USB
Band to 146 (K), 144 (W, T)
Fix CH to VFO
Drive knob to Center
SSB Mic Gain to Maximum


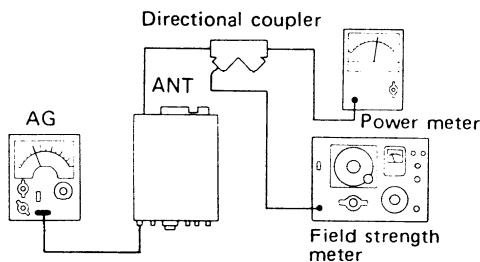


Fig. 30 Adjustment of Carrier Suppression

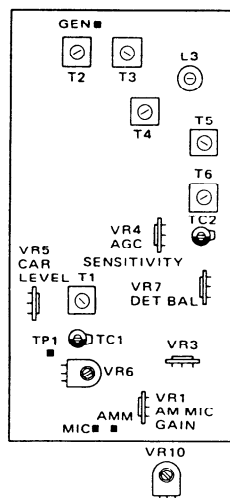

GENERATOR Unit (X52-1080-21)

Fig. 31


- (2) For Connections refer to **Fig. 30**.
- (3) Apply a audio signal of 2 mv/ 1.5kHz to mic jack.
- (4) Adjust test receiver for maximum S meter reading.
- (5) Turn SSB Mic gain fully Counterclockwise, Adjust TC-1 and VR-6 Car Bal Adj. of Gen unit for min. Smeter reading.

Note: This carrier suppression reading shall be attenuated more than 40 db than that reading obtained in step 3.

- (6) The reading shall remain the same when switching to LSB.

14B. Alternate method of adjusting CAR Suppression

- (1) Position knobs the same as in 14A.
- (2) For connections refer to **Fig. 32**.
- (3) Turn SSB mic gain to minimum
- (4) Adjust TC-1 and VR-6 for minimum reading of RF VTVM.
- (5) The reading shall be the same for LSB.

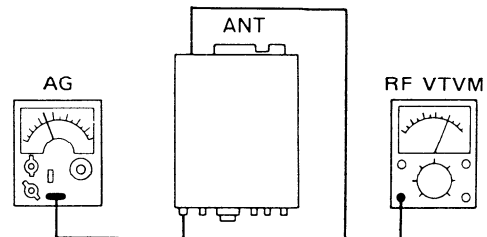

Alternate Method of Adjusting
CAR Suppression
Fig. 32


15. Adjustment of AM Modulation

- (1) Position knobs as follows:
Mode switch to AM
Fix CH to 11 (empty)
AM Mic gain fully clockwise
- (2) Apply audio signal of 2 mV/ 1.5Khz
- (3) Connect AF VTVM to AMM terminal of GEN unit
- (4) Adjust VR-1 (AM Mic gain) for 250 mV

16A. Adjustment of FM modulation.


- (1) Position knobs as follows:
Mode to FM
Band to 146 (K), 145 (W, T)
VFO dial to 500
Fix CH to VFO
FM Mic gain to Center position
- (2) For Connections refer to **Fig. 33**.
Set the STAND BY SW to SEND.
- (3) Adjust VR-3 for 5KHZ Deviation.
- (4) Apply to AG signal of 2mV/1kHz to MIC terminal and adjust FM MIC GAIN potentiometer for 3.5kHz deviation.

ADJUSTMENT

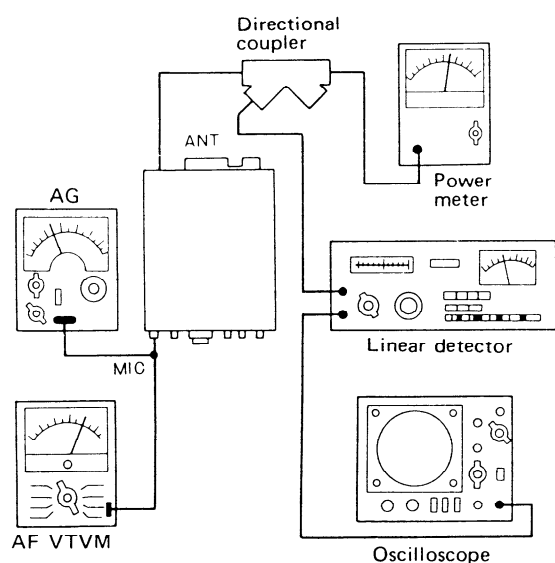

Adjustment of FM Modulation

Fig. 33

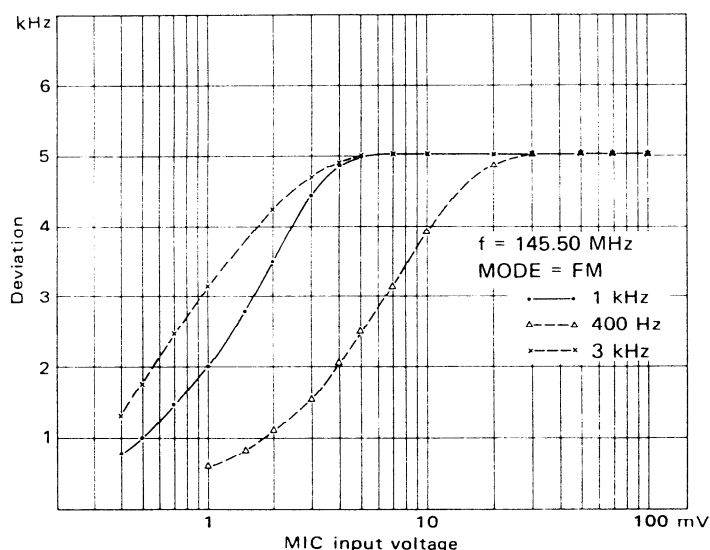


An Example of FM Modulation Characteristics

Fig. 34

16B. Alternate method of adjusting FM modulation

- (1) Position knobs same as step 16A.
- (2) For connections refer to Fig. 17.
- (3) Apply the AG signal of 20mV/1KHz to MIC terminal.
- (4) Adjust VR3 of GEN unit for 0.3V AF VTVM reading.
- (5) Next apply AG signal of 2mV/1KHz to MIC terminal and adjust the FM MIC GAIN potentiometer for 0.2V AF VTVM reading.

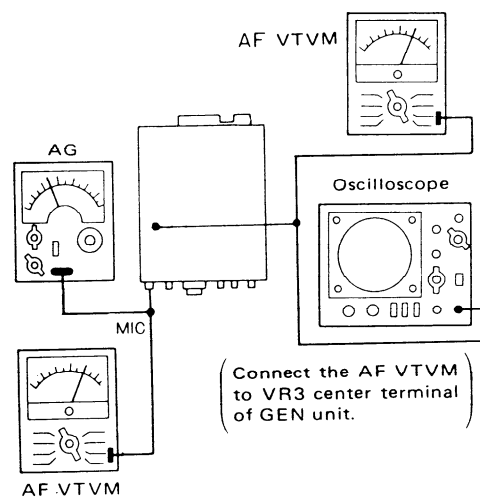

Alternate Method of Adjusting FM Modulation

Fig. 35

17. Vox operation check

- (1) Position knobs as follows:
Vox Gain to Center
Anti Vox to Minimum (Counterclockwise)
Delay to Minimum (Counterclockwise)
AF Gain to Maximum
- (2) Set mode to CW, Press key and check that a side tone is generated when transmitting.
- (3) Set mode to USB
- (4) Apply a 2MV/ 1.5KHz audio signal to the Mic terminal, check to see that TS-700S is switched to the Transmit Mode.
- (5) Check VOX delay by turning Delay clockwise, and removing and re-applying the audio signal.
- (6) Set the VOX gain to OFF.

18. Checking the touch tone operation

(Note: This adjustment requires that previous step of 16-A was completed.)

- (1) Apply the AG signal of 1V/1KHz to TONE PAD terminal.
- (2) Verify more than 4kHz deviation.

19. Adjustment of TONE BURST (K,T)

- (1) Position knobs as follows:
MODE to FM
Tone SW to ON
- (2) Connect the AF VTVM to FIV terminal of FM-IF unit.
- (3) Adjust VR2 of FM-IF unit for 200mV AF VTVM reading.

ADJUSTMENT


20. Adjustment of TONE (W type ONLY)

- (Note: This adjustment requires that previous step of 16-A was completed.)
- (1) Turn the TONE SW ON
 - (2) Adjust VR2 of FM-IF unit for 3kHz deviation.


RECEIVING SECTION

21. Adjustment of SSB Sensitivity (GEN Unit)

- (1) Position knobs as follows:
Band to 146 (K), 144 (W, T)
VFO dial to 500
Drive knob Center
Mode switch to USB
- (2) For Connections refer to Fig. 36.
- (3) Adjust T-4, T-5, and T-6 of GEN unit for maximum reading

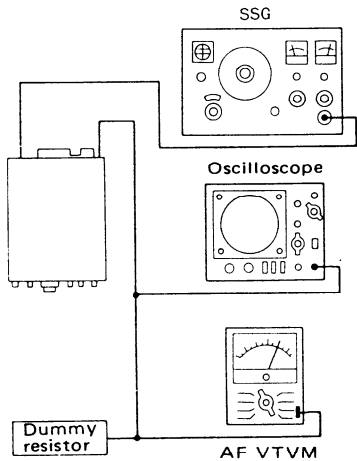

Adjustment of SSB Sensitivity
Fig. 36

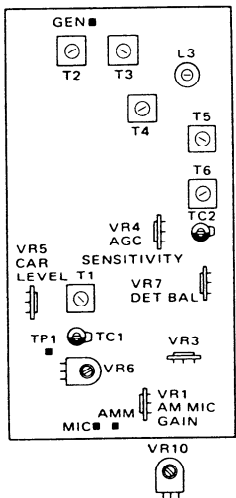

GENERATOR Unit (X52-1080-21)
Fig. 37

22. Adjustment of S Meter Start Level
(X55-1170-11) K type
(X55-1170-00) W, T type

- (1) Position knobs as follows:
Band to 146 (K), 144 (W, T)
UFO Dial to 500
Drive knob to Center
Mode to USB
- (2) Turn RF gain control fully counterclockwise verify that S Meter is fully deflected. Turn RF Gain fully clockwise, verify that S meter indicates minimum.
- (3) Adjust VR-4 (S Meter Start) for just before the point of beginning to deflect the S-meter with no signal applied.

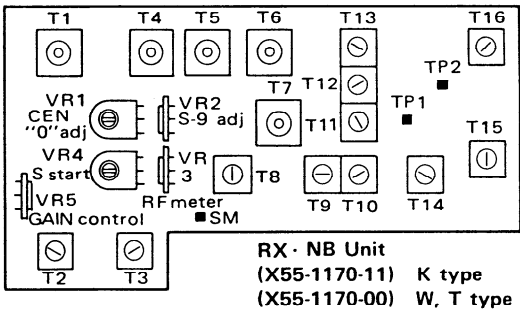


Fig. 38

23. Adjustment of RX NB Unit
(X55-1170-11) K type
(X55-1170-00) W, T type

- Note this adjustment requires that previous step 22 was completed successfully.
- (1) Apply an RF signal of 146.50 MHz (K), 144.5 MHz (W, T), 10 μ V/ 20 dB μ .
 - (2) Adjust the SSG for an indication of 3 to 5 on rec S Meter
 - (3) Adjust T-1 and T-4, T-5, T-6, T-7, repeatedly until S meter indicates maximum
 - (4) Turn the Drive knob from Left to Right and verify that the max deflection is at center.
 - (5) Adjust T-9 through T-13 for maximum deflection of S Meter.
 - (6) Set Band Switch to 145 (W, T only)
Re adjust SSG to 145.50.
Adjust VR-11 (upper side of Unit) for max deflection of S Meter.
Next, set the SSG output to 144.9 MHz. With the REPEATER SW set to REV, adjust VR3 as above.
 - (7) Set VFO dial to 0
 - (8) Re adjust RS SG to 146.00 MHz (K), 145.00MHz (W, T)
 - (9) Adjust T-8 for max S Meter Deflection.
- (Note) SSG level must be readjusted so as not to over load the receiver.

ADJUSTMENT

24. Adjustment of NB circuit

- (1) Position knobs as follows:
Band to 145 NB Switch to ON
VFO Dial to 500
Drive knob to Center
- (2) Connect a DC Voltmeter to the TP-2 terminal of the RX NB
- (3) Increase the SSG output until the voltmeter indication begins to decrease. (SSG approx. 20 dBμ)
- (4) Adjust T-14, T-15, T-16, for minimum voltmeter reading.
- (5) Connect an noise generator to the ANT terminal and check to see that the noise content is reduced when the NB is switched to ON.


25. Adjustment of the MCF

Note: This adjustment must be made after Step 24.

- (1) Set Mode to FM
- (2) Set RF SSG to 3 μV (10 dBμ), un-modulated. Adjust the VFO dial for maximum S Meter.
- (3) Modulate the SSG with 1KHZ, DEV 5KHZ.
- (4) Adjust T-9 and T-10 of the RX NB for maximum S Meter deflection.

26. Adjustment of Discriminator Circuit

- (1) Position knob Mode to FM
- (2) Set SSG output to 1 μV, 1KHz, Dev 5KHz.
- (3) Adjust T-3 and T-4 of the FM IF unit for max reading of the AF VTVM and optimum waveform.

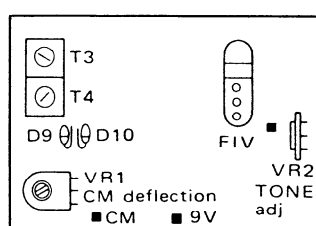


FM-IF Unit
(X48-1140-20) K type
(X48-1140-61) W type
(X48-1140-51) T type

Fig. 39

27. Adjustment of S Meter

Note: This adjustment must be made after step 27.

- (1) Set SSG level to 1 μV (0 dBμ) unmodulated, adjust VFO for maximum deflection of S Meter.
- (2) Adjust VR-4 AGC SEN of GEN Unit for a reading of 1 on S Meter.
- (3) Increase SSG to 10 μV (20 dBμ). Adjust VR-2 (S 9 adjust) for a reading of 9 on S/Meter.
- (4) Re Check previous steps. Refer to Fig 29 for S Meter deflection.

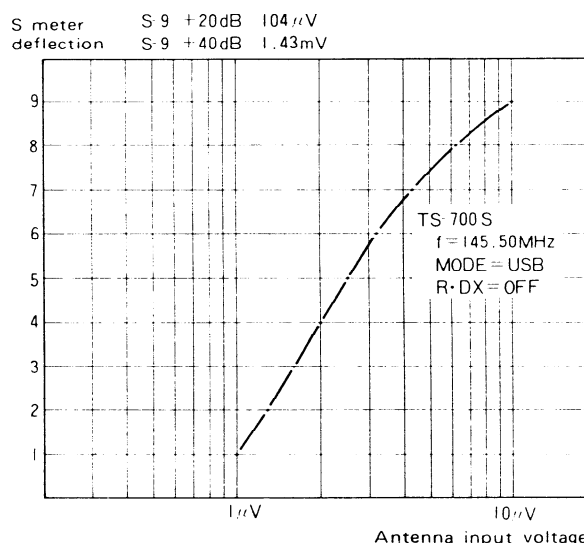

An Example of S Meter Deflection

Fig. 40

28. Adjustment of the Center Meter

- (1) Position knobs as follows:
Mode to FM
S Meter SW to CM
- (2) Disconnect the RF SSG from the ANT terminal.
- (3) Short the CM terminal of FM IF Unit to ground with short clip lead.
- (4) Adjust VR-1 (Cen adj) of RF NB to set the Meter to "5" on the RF scale.
- (5) Remove the clip lead.
- (6) Short the Cathode of D15 and D16 of FM IF with short clip lead.
- (7) Adjust T-4 of FM IF to set the Meter to "5" on the RF scale.
- (8) Adjust T-3 of FM IF for Maximum AF output.
- (9) Set the SSG output to 10 μV (20 dBμ), un-modulated. Turn the VFO to deflect the meter to the "+" side, adjust VR-1 of FM IF to set the meter to "8" on the RF scale.
- (10) Turn the VFO in the opposite direction to the "-" side and verify that the meter reading is within the range of 2 ± 1 on the RF scale.

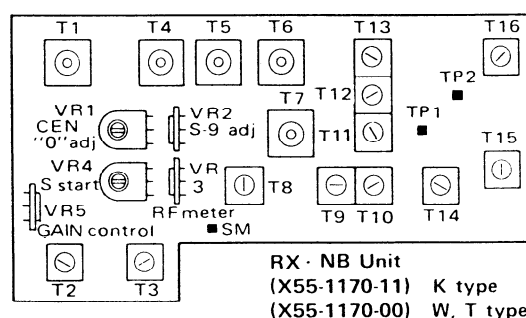


Fig. 41


ADJUSTMENT

29. Adjustment of the Receiver Pre-Amp

- (1) Position the knobs as follows:
Mode to USB
Band to 146 (K), 145 (W, T)
VFO dial to 0
R. DX Switch to "on"
- (2) Set the SSG to $0.3\mu\text{V}$ ($-10\text{ dB}\mu$), unmodulated, Freq. 146 (K), 145 (W, T)
- (3) Adjust T-2 and T-3 of the RXNB for maximum Reading of the AF VTVM.
- (4) Set the R DX SW to off and adjust AF VTVM for $0.63\text{ V}/8\text{ ohms}$.
- (5) Set the R DX sw to on and adjust VR-5 (gain adj) until AF VTVM reads $0.63\text{ V}/8\text{ ohms} + 3\text{ dB}$.

Check of operating condition

- (1) Position knobs as follows:
Band to 146 (K), 145 (W, T)
VFO to 0
- (2) Set the SSG to $0.25\mu\text{V}$ ($-12\text{ dB}\mu$), unmodulated freq 146.00 (K), 145.00 (W, T)
- (3) Receive the signal at maximum and measure the S/N ratio.
- (4) Set the R DX to On and verify that the S/N is improved more than 0.5 dB.
- (5) Refer to **Fig. 42** for specifications.

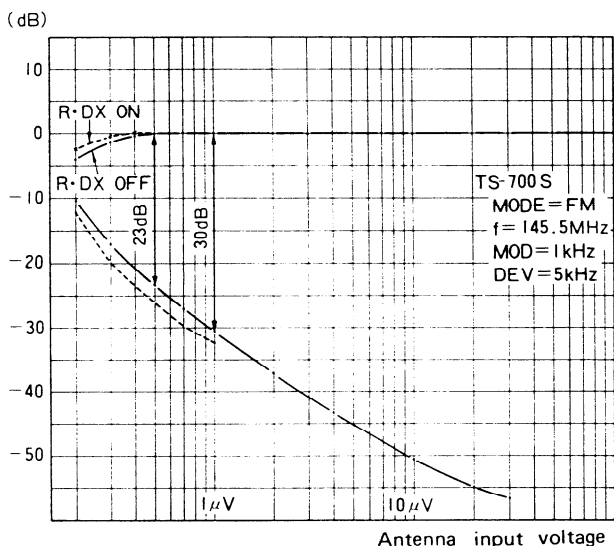

An Example of Antenna Input Voltage
VS Output Level S/N

Fig. 42

30. Check of the BPF Characteristic

- (1) Refer to Fig. 21 for connections
- (2) Refer to Fig. 32
- (3) Set the SSG to $80\text{ dB}\mu$ and measure the pass-band characteristic. Insertion loss should be within -0.7 dB in the range to $144.0 \sim 148.0\text{ MHz}$ (K), 144.0 to 146.0 MHz (W, T).
- (4) Verify that attenuation is more than 11 dB at $146.00 \pm 10\text{ MHz}$ (K), 13 dB at $145.000 \pm 10\text{ MHz}$ (W, T).

Note: Adjustments of the BPF requires special instruments. Do not turn factory sealed adjustments.


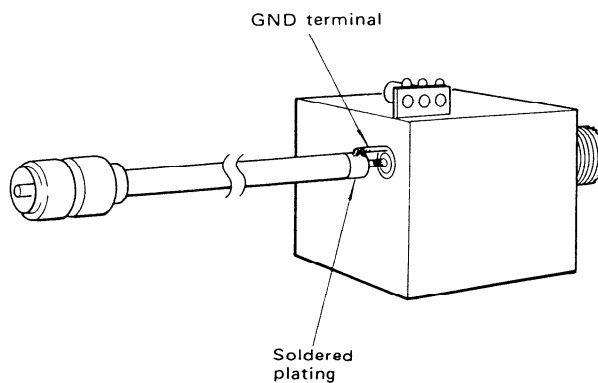


Fig. 43 Connection of Coaxial Cable



Note: Use M-type connector.

Fig. 44 Check of the BPF Characteristic

SPECIFICATIONS(W,T type)

GENERAL

Frequency Range	144.0 to 146.0 MHz
Mode	SSB (USB, LSB), CW, AM, FM
Antenna Impedance	50 Ohms
Frequency Stability	Within ± 2 kHz during one hour after one minute of Warm-up and within 150 Hz during any 30 minute period thereafter.
Semiconductors	Transistors: 102 (W type), 105 (T type), FETs: 18, ICs: 21, Diodes: 162
Power Requirement	120/220V AC (W type), 220/240V AC (T type), 50/60 Hz: 12.0 to 16.0V DC (nominal 13.8V DC)
Power Consumption	Transmit: 98 Watts (120/220V AC), 4.0A (13.8V DC) (W type), 98 Watts (220/240V AC), 4.2A (13.8V DC) (T type) Receive (no signal): 48 Watts (120/220V AC), 1.2A (13.8V DC) (W type) 48 Watts (220/240V AC), 1.2A (13.8V DC) (T type)
Dimension	278 wide x 124 high x 320 deep mm
Weight	11.0 kg

TRANSMITTER

RF Output Power	SSB, FM, CW: 10 Watts AM: 3 Watts FM (Low): Approx. 1 Watt
Modulation	SSB: Balanced modulation FM: Variable reactance frequency shift AM: Low power modulation
Maximum Frequency Deviation (FM)	± 5 kHz
Carrier Suppression	Better than 40 dB
Sideband Suppression	Better than 40 dB
Spurious Radiation	Better than -60 dB
Microphone	Low impedance microphone (500 Ohms)
AF Response	400 to 2,600 Hz
Repeater Frequency Shift	600 kHz
RPT Tone Frequency	1,750 Hz
Tone Burst Duration	0.5 to 1.0 Sec. (T type)

RECEIVER

Sensitivity	SSB and CW: 0.25 μ V for 10 dB (S+N)/N AM: 1.0 μ V for 10 dB (S+N)/N FM: 0.4 μ V for 20 dB noise quieting 1.0 μ V for 30 dB (S+N)/N
Intermediate Frequency	SSB, CW and AM: 10.7 MHz FM: 1st 10.7 MHz, 2nd 455 kHz
Selectivity	SSB, CW and AM: 2.4 kHz/-6 dB, 4.8 kHz/-60 dB FM: 12 kHz/-6 dB, 24 kHz/-60 dB
Image Ratio	Better than 70 dB
IF Rejection	Better than 70 dB
Squelch Sensitivity	0.25 μ V
AF Output Power	2 Watts/8 Ohms load, with less than 10% distortion
AF Output Impedance	8 Ohms

The above specifications are subject to change without notice for improvement.

Distributed by
TRIO-KENWOOD COMMUNICATIONS, INC.
1111 West Walnut Street, Compton, California, 90220, U.S.A.


TRIO-KENWOOD COMMUNICATIONS, GmbH
D-6374 Steinbach TS Industriestrasse, 8A West Germany

A product of
TRIO-KENWOOD CORPORATION
6-17, 3-chome Aobadai, Meguro-ku, Tokyo 153, Japan

TS-700SP

RX · NB UNIT (X55-1210-00)
CRYSTAL UNIT (X50-1470-10)

© 1978-5 PRINTED IN JAPAN B51-0851-00 (T) 1,000

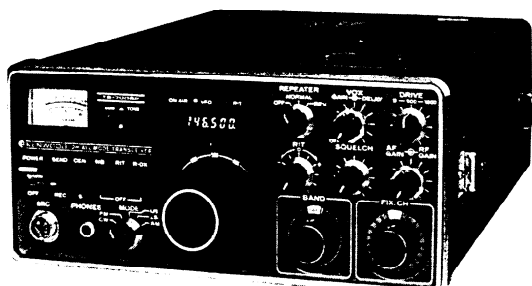

TS-700SP is a improved model of TS-700S, which is equipped with a new RX · NB unit (X55-1170-00 → X55-1210-00) and a CRYSTAL unit (X50-1470-10).

This supplement is need to be used with TS-700S SERVICE MANUAL on the other units and sections.

PARTS LIST

TOTAL

☆ : New parts

Ref. No.	Parts No.	Description	Re- marks
CRYSTAL			
X1	L77-0802-05	Quartz crystal 125.10MHz	☆
X2	L77-0803-05	Quartz crystal 126.10MHz	☆
X3	L77-0804-05	Quartz crystal 127.10MHz	☆
X4	L77-0805-05	Quartz crystal 128.10MHz	☆
X5	L77-0807-05	Quartz crystal 126.50MHz	☆
X6	L77-0808-05	Quartz crystal 128.70MHz	☆
MISCELLANEOUS			
—	B40-2435-04	Model name plate	☆
—	B42-1619-14	Adjustment name plate	☆
—	B42-1638-04	FCC plate	☆
—	B43-0611-04	Badge	☆
—	B50-2574-00	Operating manual	☆

RX · NB UNIT (X55-1210-00)

Ref. No.	Parts No.	Description	Re- marks
CAPACITOR			
C1	CC45CH1H100D	Ceramic 10pF ±0.5pF	
C2	CC45SL1H120J	Ceramic 12pF ±5%	
C3	CK45D1H102M	Ceramic 1000pF ±20%	
C4	CC45CH1H330J	Ceramic 33pF ±5%	
C5	CK45F1H473Z	Ceramic 0.047μF+80%, -20%	
C6	C91-0013-05	Ceramic 0.01μF ±10%	
C7	CK45F1H473Z	Ceramic 0.047μF+80%, -20%	
C8	CK45D1H102M	Ceramic 1000pF ±20%	
C9	CK45F1H473Z	Ceramic 0.047μF+80%, -20%	
C10	CK45D1H102M	Ceramic 1000pF ±20%	
C11	CC45CH1H330J	Ceramic 33pF ±5%	
C12	CC45SH1H120J	Ceramic 12pF ±5%	
C13	CC45SH1H220J	Ceramic 22pF ±5%	
C14	CC45CH1H220J	Ceramic 22pF ±5%	
C15	CC45SL1H101J	Ceramic 100pF ±5%	
C16	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	
C17	CC45SH1H100D	Ceramic 10pF ±0.5pF	
C18	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	
C19	CC45SH1H220J	Ceramic 22pF ±5%	
C20,21	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	
C22	CC45SL1H120J	Ceramic 12pF ±5%	
C23	CC45CH1H010C	Ceramic 1pF ±0.25pF	
C24	CC45CH1H070D	Ceramic 7pF ±0.5pF	
C25	CC45SL1H120J	Ceramic 12pF ±5%	
C26	CC45CH1H010C	Ceramic 1pF ±0.25pF	
C27	CC45CH1H070D	Ceramic 7pF ±0.5pF	
C28	CK45D1H102M	Ceramic 1000pF ±20%	
C29	CC45SL1H120J	Ceramic 12pF ±5%	
C30	CK45F1H103Z	Ceramic 0.01μF +80%, -20%	
C31	CE04W1H010	Electrolytic 1μF 50WV	
C32	CK45F1H473Z	Ceramic 0.047μF+80%, -20%	
C33	CC45CH1H330J	Ceramic 33pF ±5%	
C34	CC45SH1H050C	Ceramic 5pF ±0.25%	

PARTS LIST

Ref. No.	Parts No	Description	Re- marks
35	CC45CH1H050C	Ceramic 5pF $\pm 0.25\%$	
36	CC45CH1H220J	Ceramic 22pF $\pm 5\%$	
37	CK45F1H103Z	Ceramic 0.01 μ F +80%, -20%	
38	CK45F1H473Z	Ceramic 0.047 μ F +80%, -20%	
39	CC45CH1H120J	Ceramic 12pF $\pm 5\%$	
40	CC45SL1H101J	Ceramic 100pF $\pm 5\%$	
41,42	CK45F1H473Z	Ceramic 0.047 μ F +80%, -20%	
43	C91-0013-05	Ceramic 0.01 μ F $\pm 10\%$	
44	CK45F1H473Z	Ceramic 0.047 μ F +80%, -20%	
45,46	CK45F1H103Z	Ceramic 0.01 μ F +80%, -20%	
47	CK45F1H473Z	Ceramic 0.047 μ F +80%, -20%	
48	CE04W1C100	Electrolytic 10 μ F 16WV	
49	CC45CH1H030C	Ceramic 3pF $\pm 0.25\text{pF}$	
50	CK45F1H103Z	Ceramic 0.01 μ F +80%, -20%	
51,52	CK45F1H103Z	Ceramic 0.01 μ F +80%, -20%	
53	CK45F1H473Z	Ceramic 0.047 μ F +80%, -20%	
54	CK45F1H103Z	Ceramic 0.01 μ F +80%, -20%	
55	CC45SL1H101J	Ceramic 100pF $\pm 5\%$	
56	CK45F1H103Z	Ceramic 0.01 μ F +80%, -20%	
57	CQ92M1H223K	Mylar 0.022 μ F $\pm 10\%$	
58	CK45F1H473Z	Ceramic 0.047 μ F +80%, -20%	
59	CK45F1H103Z	Ceramic 0.01 μ F +80%, -20%	
60	CE04W1H010	Electrolytic 1 μ F 50WV	
61	CK45F1H103Z	Ceramic 0.01 μ F +80%, -20%	
62	CC45CH1H010C	Ceramic 1pF $\pm 0.25\text{pF}$	
63	CQ92M1H223K	Mylar 0.022 μ F $\pm 10\%$	
64	CQ92M1H473K	Mylar 0.047 μ F $\pm 10\%$	
65	CK45D1H102M	Ceramic 1000pF $\pm 20\%$	
66	CC45SL1H331J	Ceramic 330pF $\pm 5\%$	
67	CK45F1H103Z	Ceramic 0.01 μ F +80%, -20%	
68	CQ92M1H223K	Mylar 0.022 μ F $\pm 10\%$	
69	CK45F1H103Z	Ceramic 0.01 μ F +80%, -20%	

RESISTOR

R1~61	RD14CB2E000J	Carbon 000 Ω $\pm 5\%$ 1/4W	
R3	RD14BB2E474J	Carbon 470k Ω $\pm 5\%$ 1/4W	
R33	RD14BB2E562J	Carbon 5.6k Ω $\pm 5\%$ 1/4W	
R51	Missing No.		
R62	RD14BB2E103J	Carbon 10k Ω $\pm 5\%$ 1/4W	

SEMICONDUCTOR

Q1	V03-0375-05	Transistor 2SC1070	
Q2	V09-0081-05	FET 3SK40L	
Q3	V09-0081-05	FET 3SK40M	
Q4	V09-1002-26	FET 3SK35 (T)(GR)	
Q5	V09-0012-05	FET 2SK19 (GR)	
Q6	V01-0037-05	Transistor 2SA495 (Y)	
Q7	V09-0012-05	FET 2SK19 (GR)	
Q8,9	V03-0079-05	Transistor 2SC460 (B)	
Q10,11	V03-0183-05	Transistor 2SC733 (Y)	
Q12	V03-0079-05	Transistor 2SC460 (B)	
Q13,14	V09-0060-05	FET 2SK30A (GR)	
Q15	V03-0183-05	Transistor 2SC733 (Y)	
D1	V11-0317-05	Diode 1S2208	
D2	V11-0374-05	Diode 1S516	
D3~5	V11-0317-05	Diode 1S2208	
D6~8	V11-0076-05	Diode 1S1555	
D9~13	V11-0051-05	Diode 1N60	
TH1	V11-7762-16	Thermistor 31D26	

VARIABLE RESISTOR

VR1	R12-1019-05	Semi-fixed resistor 3k Ω (B)	
VR2	R12-7013-05	Semi-fixed resistor 500k Ω (B)	
VR3	R12-3025-05	Semi-fixed resistor 10k Ω (B)	
VR4	R12-0042-05	Semi-fixed resistor 500 Ω (B)	
VR5	R12-2017-05	Semi-fixed resistor 5k Ω (B)	

Ref. No.	Parts No.	Description	Re- marks
COIL			
L1	L40-1021-03	Ferri-inductor	
L2	L33-0220-05	Choke coil 2.4 μ H	
L3~6	L40-1021-03	Ferri-inductor	
T1	L31-0324-05	Coil (C) 144MHz	
T2,3	L31-0267-05	Tuning coil 144MHz	
T4~6	L31-0324-05	Coil (C) 144MHz	
T8	L31-0347-05	Tuning coil 144MHz	
T9,10	L30-0502-05	IFT (Green) 10.7MHz	
T11~13	L30-0501-05	IFT (Pink) 10.7MHz	
T14~16	L30-0502-05	IFT (Green) 10.7MHz	
FILTER/RELAY			
MCF	L71-0021-05	Monolithic filter 10F20AG	
RL1	S51-2405-05	Relay	

CRYSTAL UNIT (X50-1470-10)


Ref. No.	Part No.	Description	Re- marks
CAPACITOR			
C1	CK45F1H103Z	Ceramic 0.01 μ F +80%, -20%	
RESISTOR			
R1	RD14CB2E681J	Carbon 680 Ω $\pm 5\%$	
R2	RD14CB2E393J	Carbon 39k Ω $\pm 5\%$	
SEMICONDUCTOR			
D1	V11-0370-05	Diode 1S1587	
COIL			
L1	L34-0437-05	OSC coil	
MISCELLANEOUS			
-	E18-0201-05	Crystal socket	
-	J21-2563-04	Crystal mounting fitting	
-	N87-3006-41	Tap-tight screw x 2	

ADJUSTMENT


Item	Condition	Measuring point			Adjusting point			Reference	Remarks
		Equip-ment	Unit	Terminal	Unit	Parts	Method		
1. RIT & REPEATER	(1) RIT VR: 12:00 RIT SW: ON BAND SW: 144 Short circuit between TP3 and 9V terminal of HET unit.	F. count	HET	TP1	HET	L1	125.10000MHz	± 50 Hz	
	(2) RIT SW: OFF	F. count	HET	TP1	HET	VR1	125.10000MHz	± 30Hz (at the frequency of RIT "ON")	
	(3) BAND SW: REPEATER SW								
	145					L2	126.10000MHz	± 50 Hz	
	146					L3	127.10000MHz		
	147					L4	128.10000MHz		
	147					L6	128.70000MHz		
	146					L5	126.50000MHz		
	145					L1	125.50000MHz		
	(4) RIT SW: ON RIT VR: Full CW.	F. count	HET	TP1				More than 126.5020MHz	More than +2 kHz
	(5) RIT VR: Full CCW.	F. count	HET	TP1				Less than 126.4980MHz	Less than -2 kHz
	(6) RIT SW: OFF								
	(7) BAND SW: REPEATER SW: SEND/REC SW								
	145							126.10000MHz	± 50 Hz
								125.50000MHz	
								125.50000MHz	
								126.10000MHz	
								127.10000MHz	
								126.50000MHz	
								126.50000MHz	
								127.10000MHz	
								128.10000MHz	
								128.70000MHz	
								128.70000MHz	
								128.10000MHz	
	(8) SEND/REC SW: REC Open circuit between TP3 and 9V terminal of HET unit.								
2. HET	(1) BAND SW: 146 FIX. CH SW: VFO REPEATER SW: OFF VFO SCALE: 800	RF V.M	HET	TP2	VFO	TC2	Set to 0.3V.	0.3V	
	(2) VFO SCALE: 500	RF V.M	RX/NB	133	HET	T3, 4 T5, 6 RX/NB T8	MAX (Repeat)		
	(3) FIX. CH SW: 11 (8.7 MHz)	RF V.M	HET	133	HET	TC12	Same as above.		

PARTS LAYOUT

RX · NB UNIT (X55-1210-00)

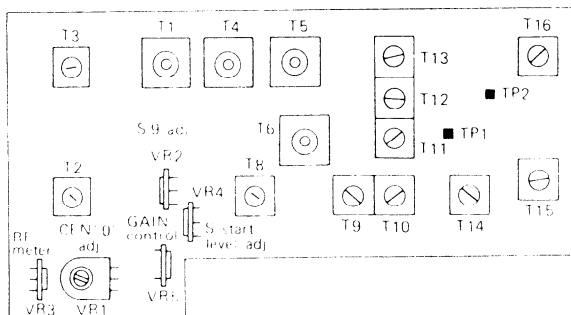

HET · UNIT
(X50-1410-11)


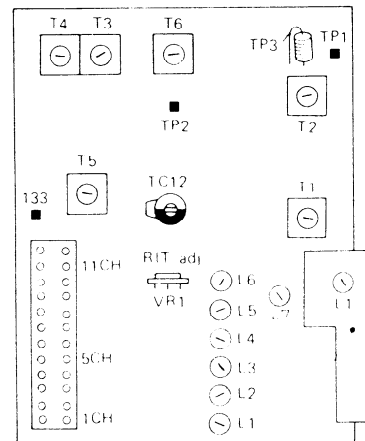



CRYSTAL UNIT (X50-1470-10)


PRINTED CIRCUIT BOARD

▼ RX · NB UNIT (X55-1210-00)


▼ CRYSTAL UNIT (X50-1470-10)

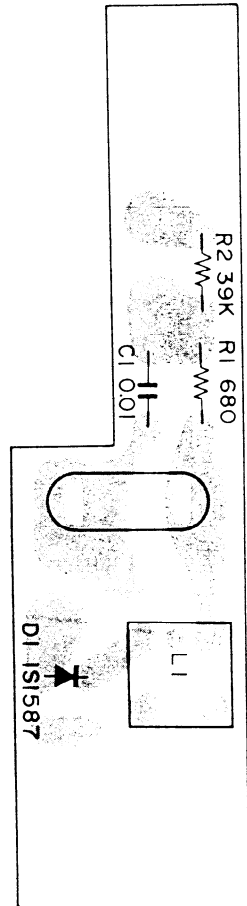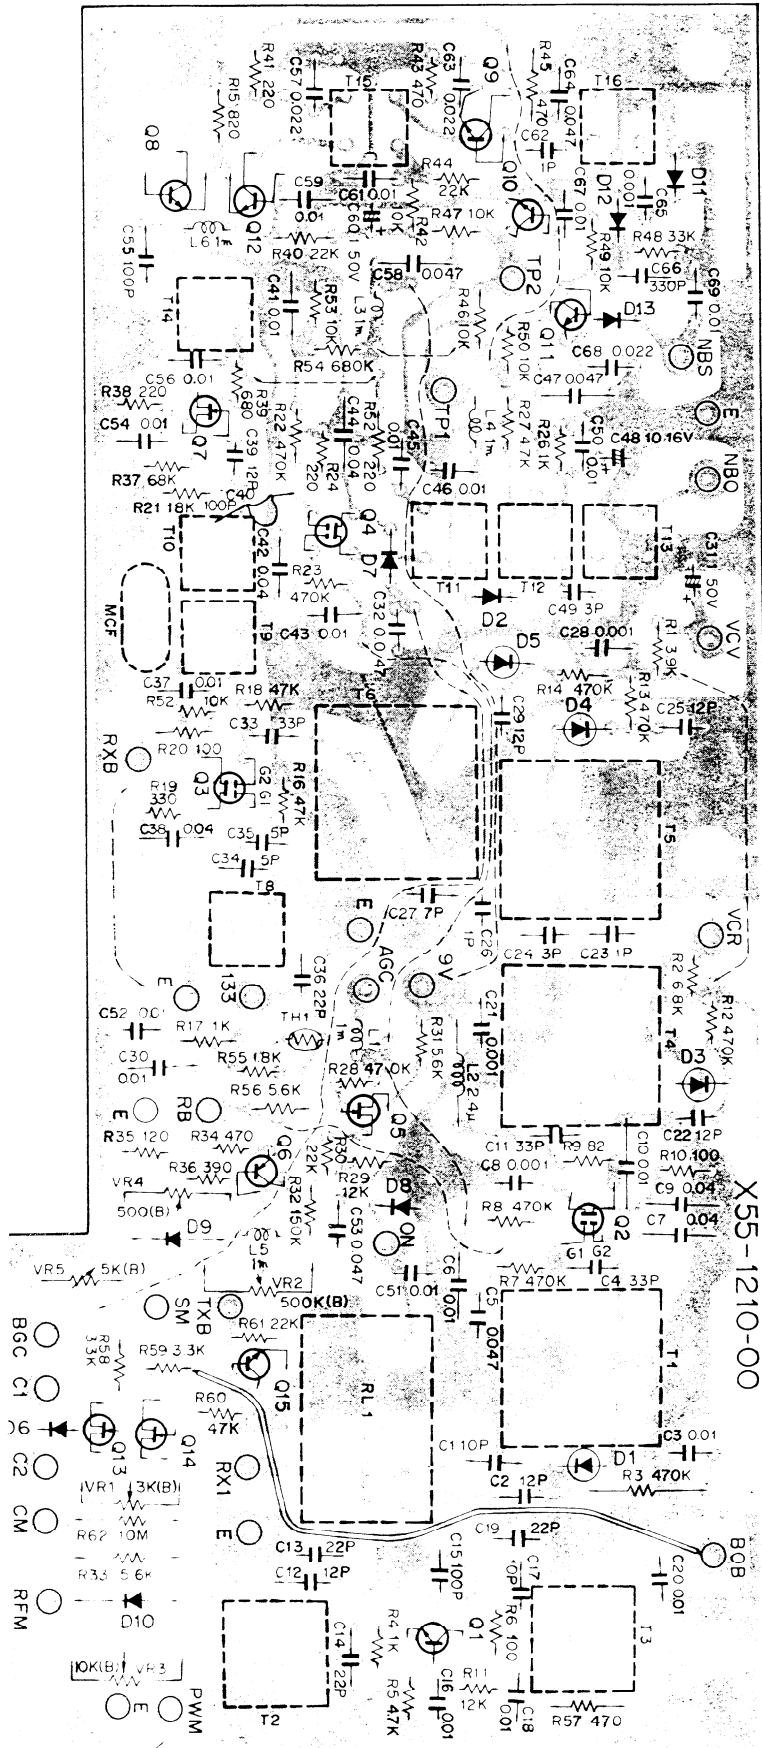

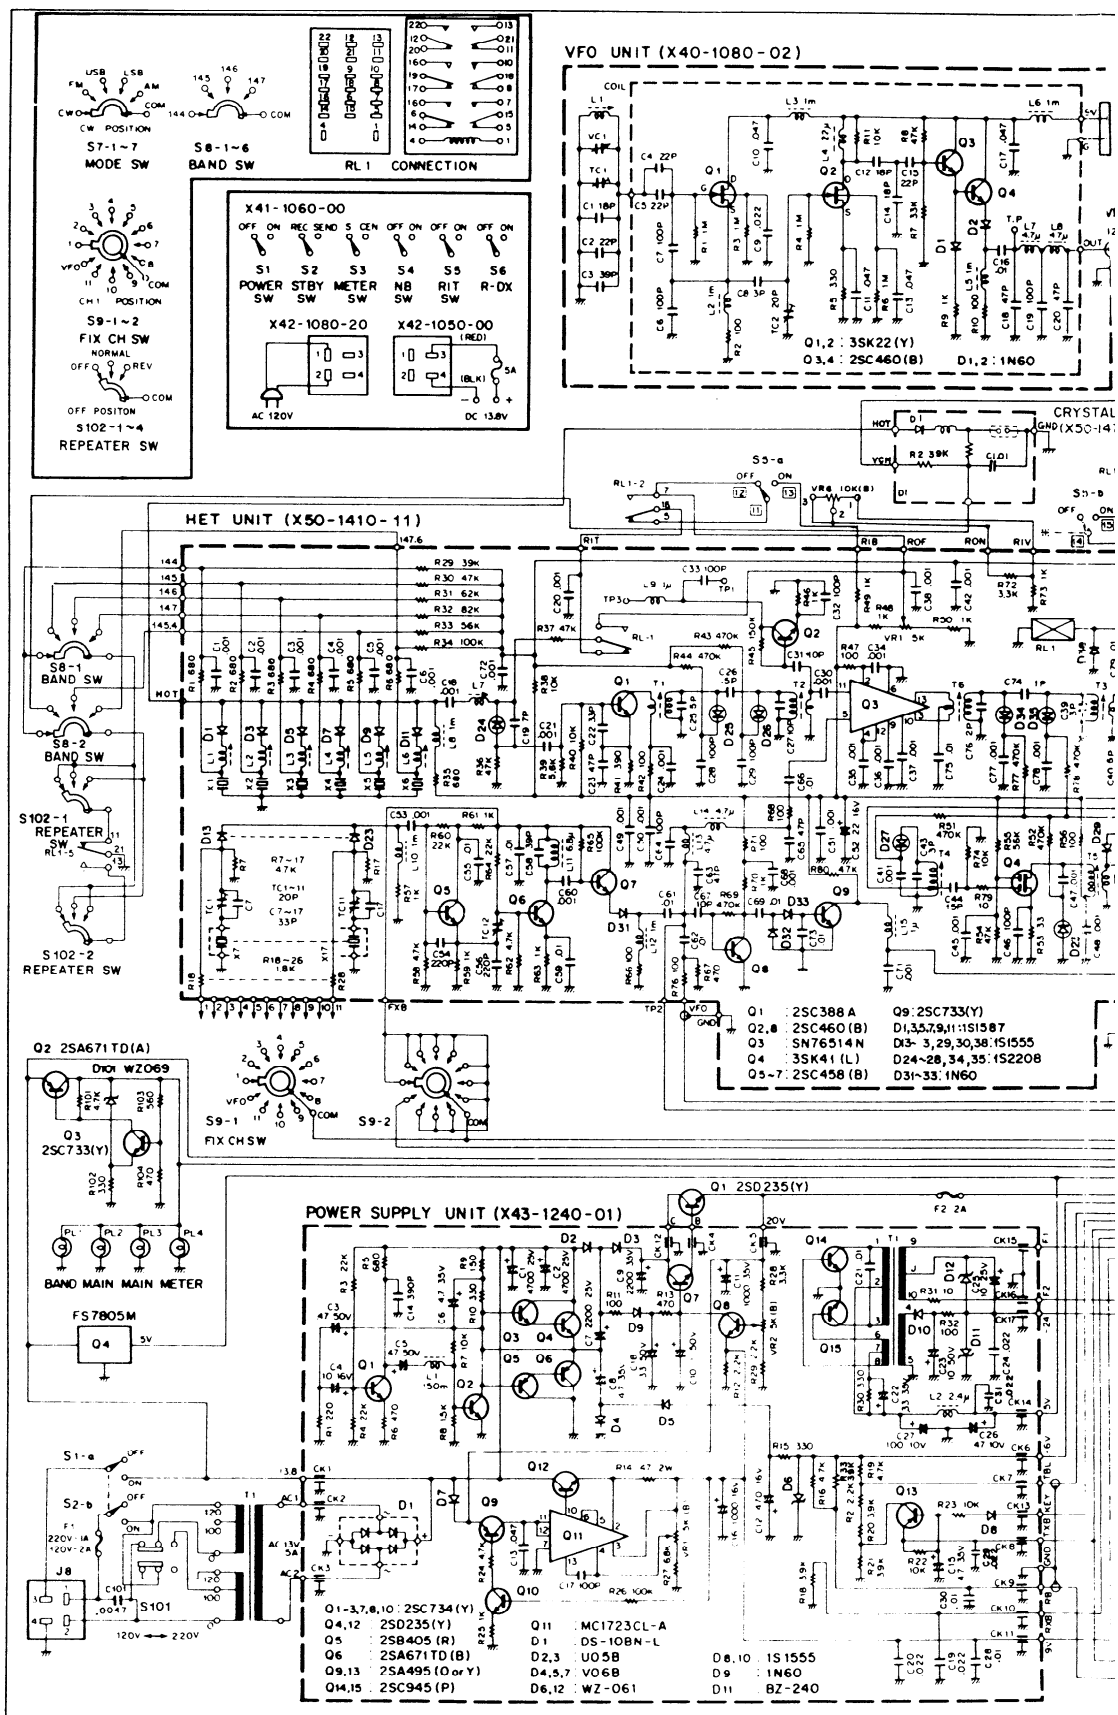


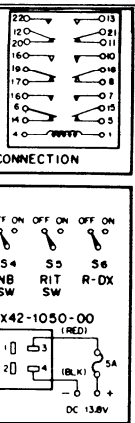



VFO UNIT (X40-1080-02)

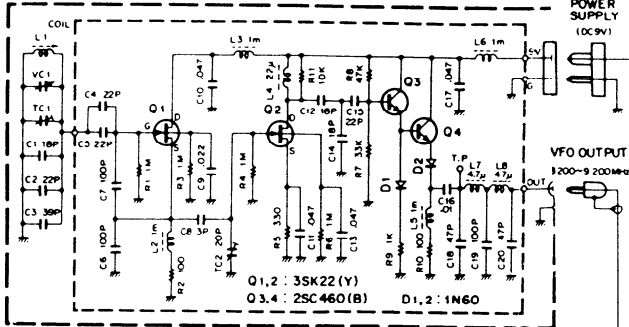


ROTARY SWITCH BOARD

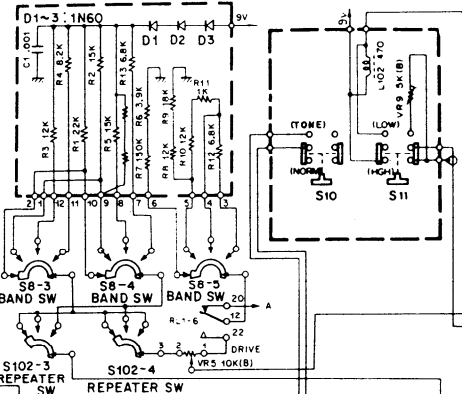


MIX UNIT (X48-1130-1)

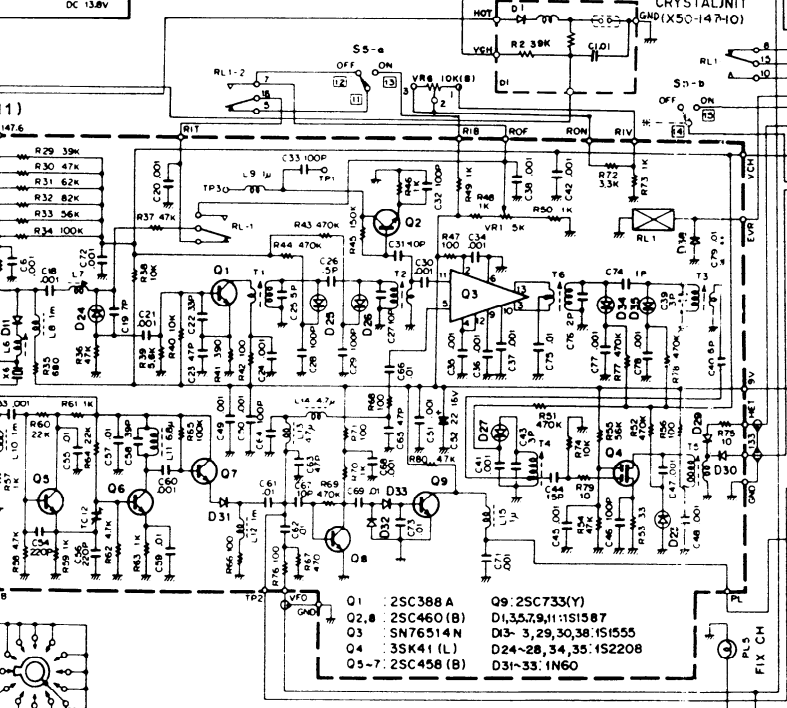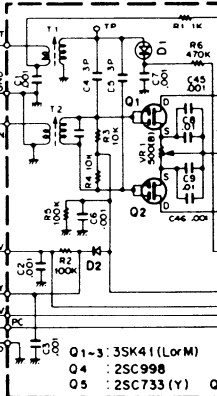

COUNTER UNIT (X54-1250-11)

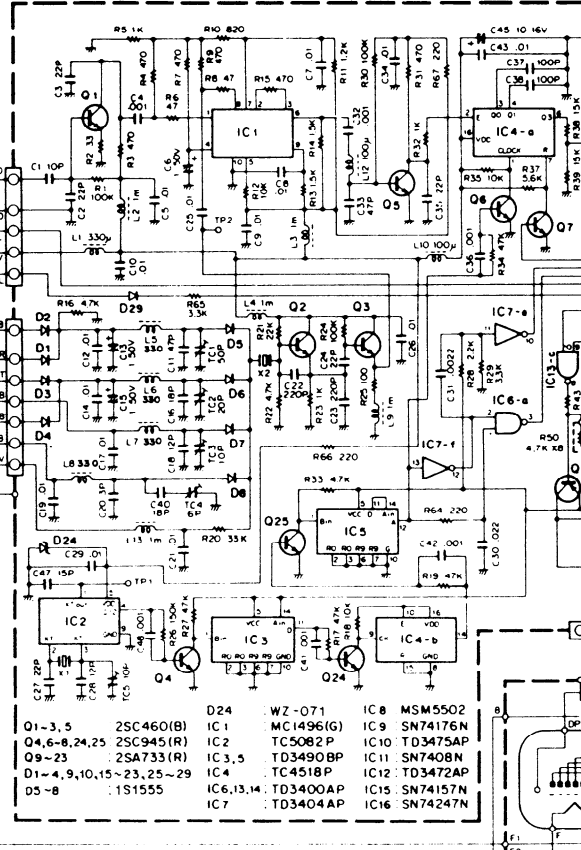

PLY UNIT (X43-1240-01)

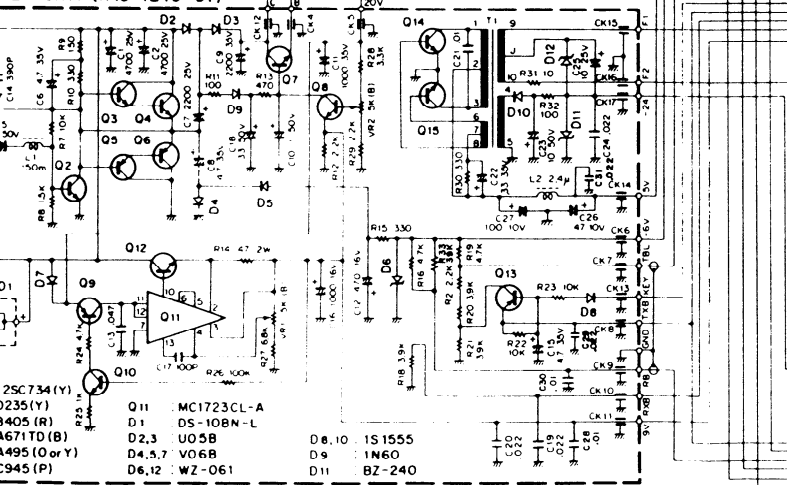


PULL 7 DIGIT


DISPLAY (X54-12)




TS-700SP SCHEMATIC DIAG

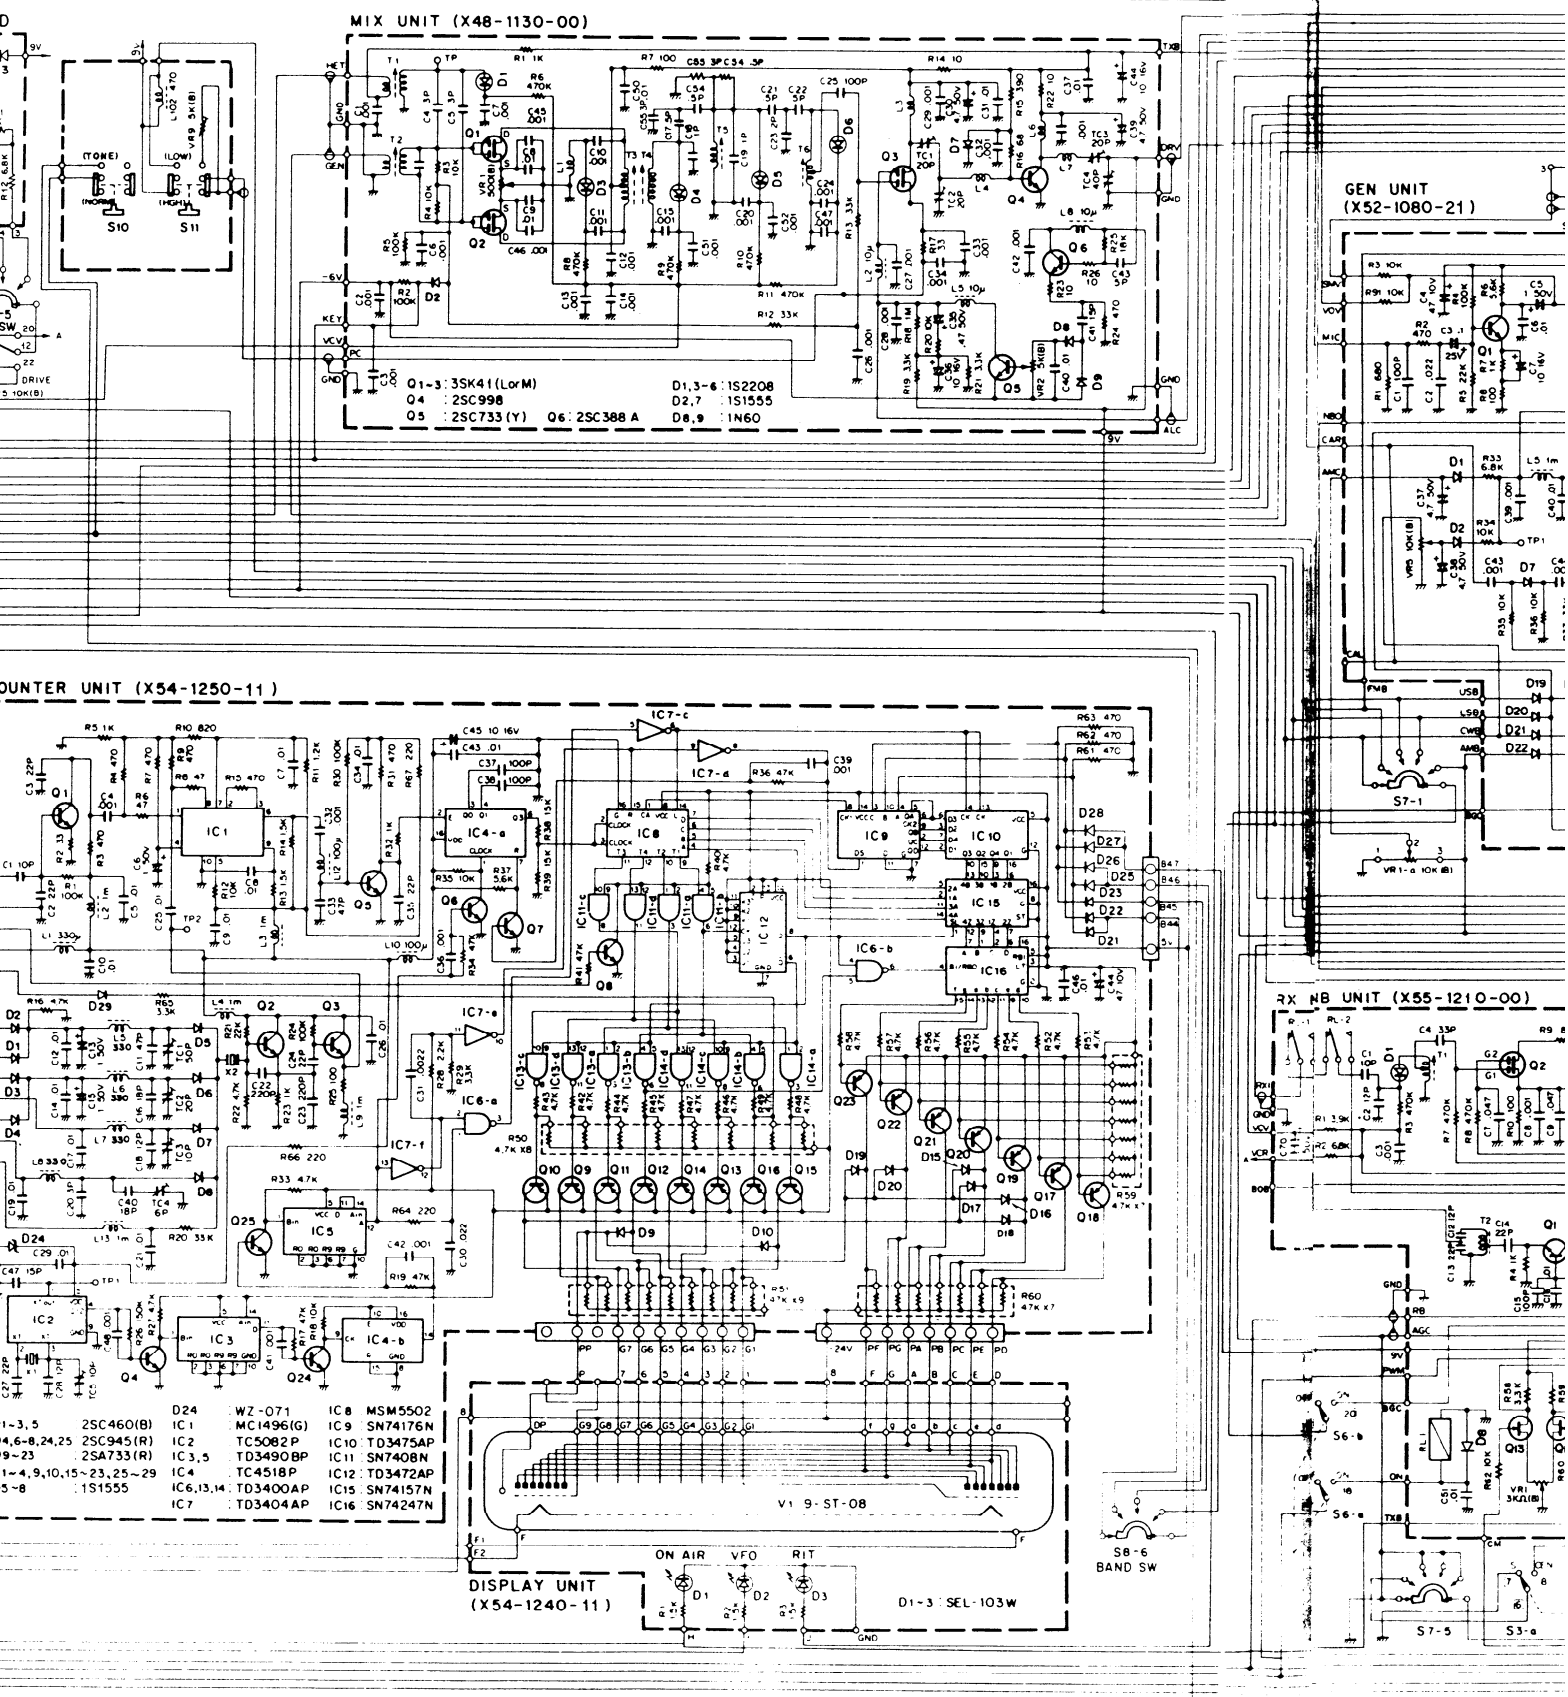

TS-700SP SCHEMATIC DIAGRAM

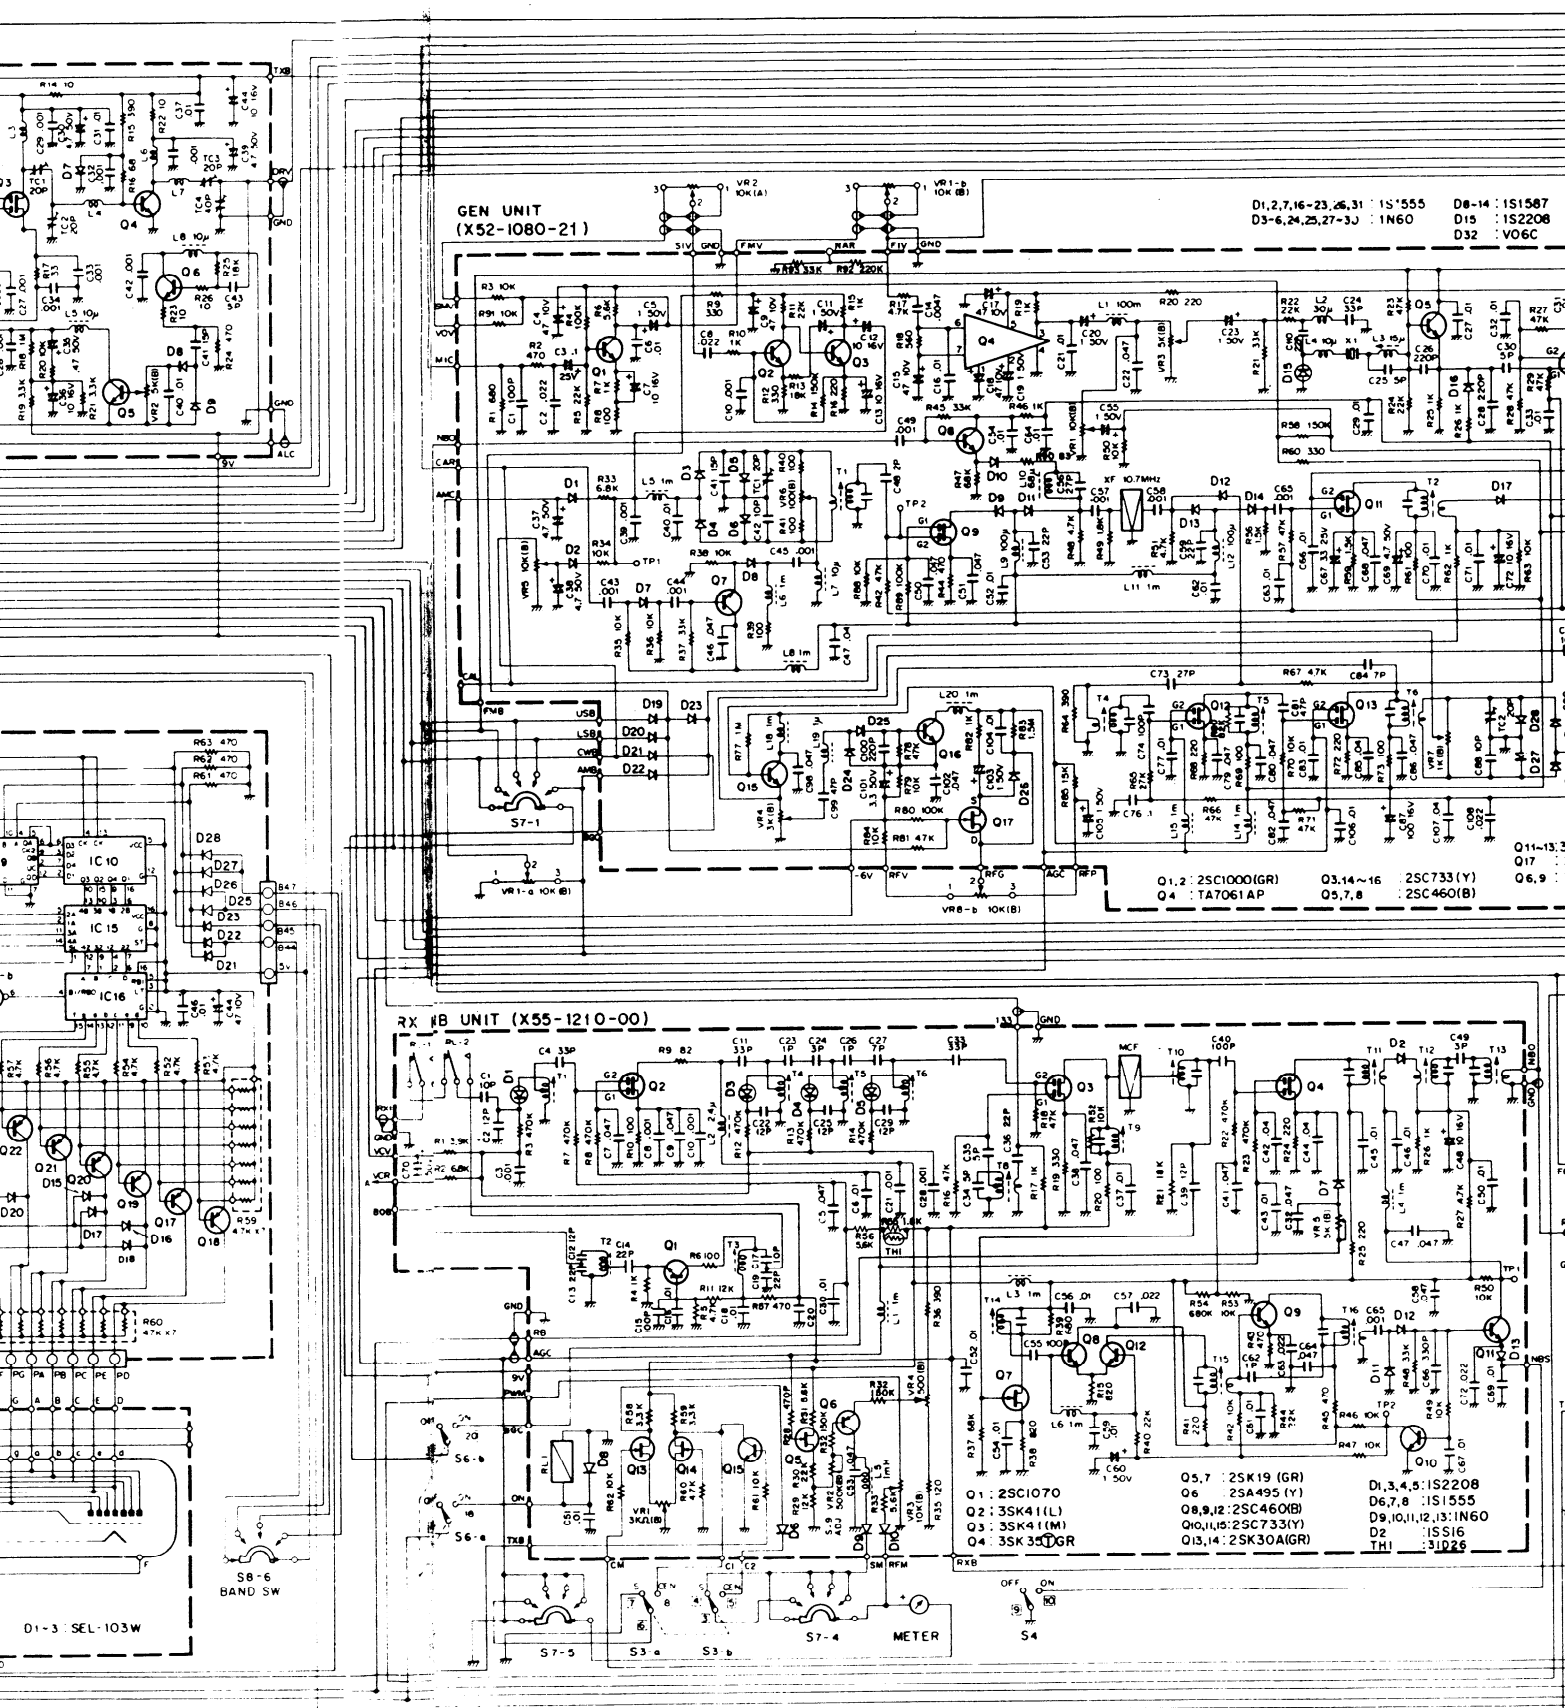

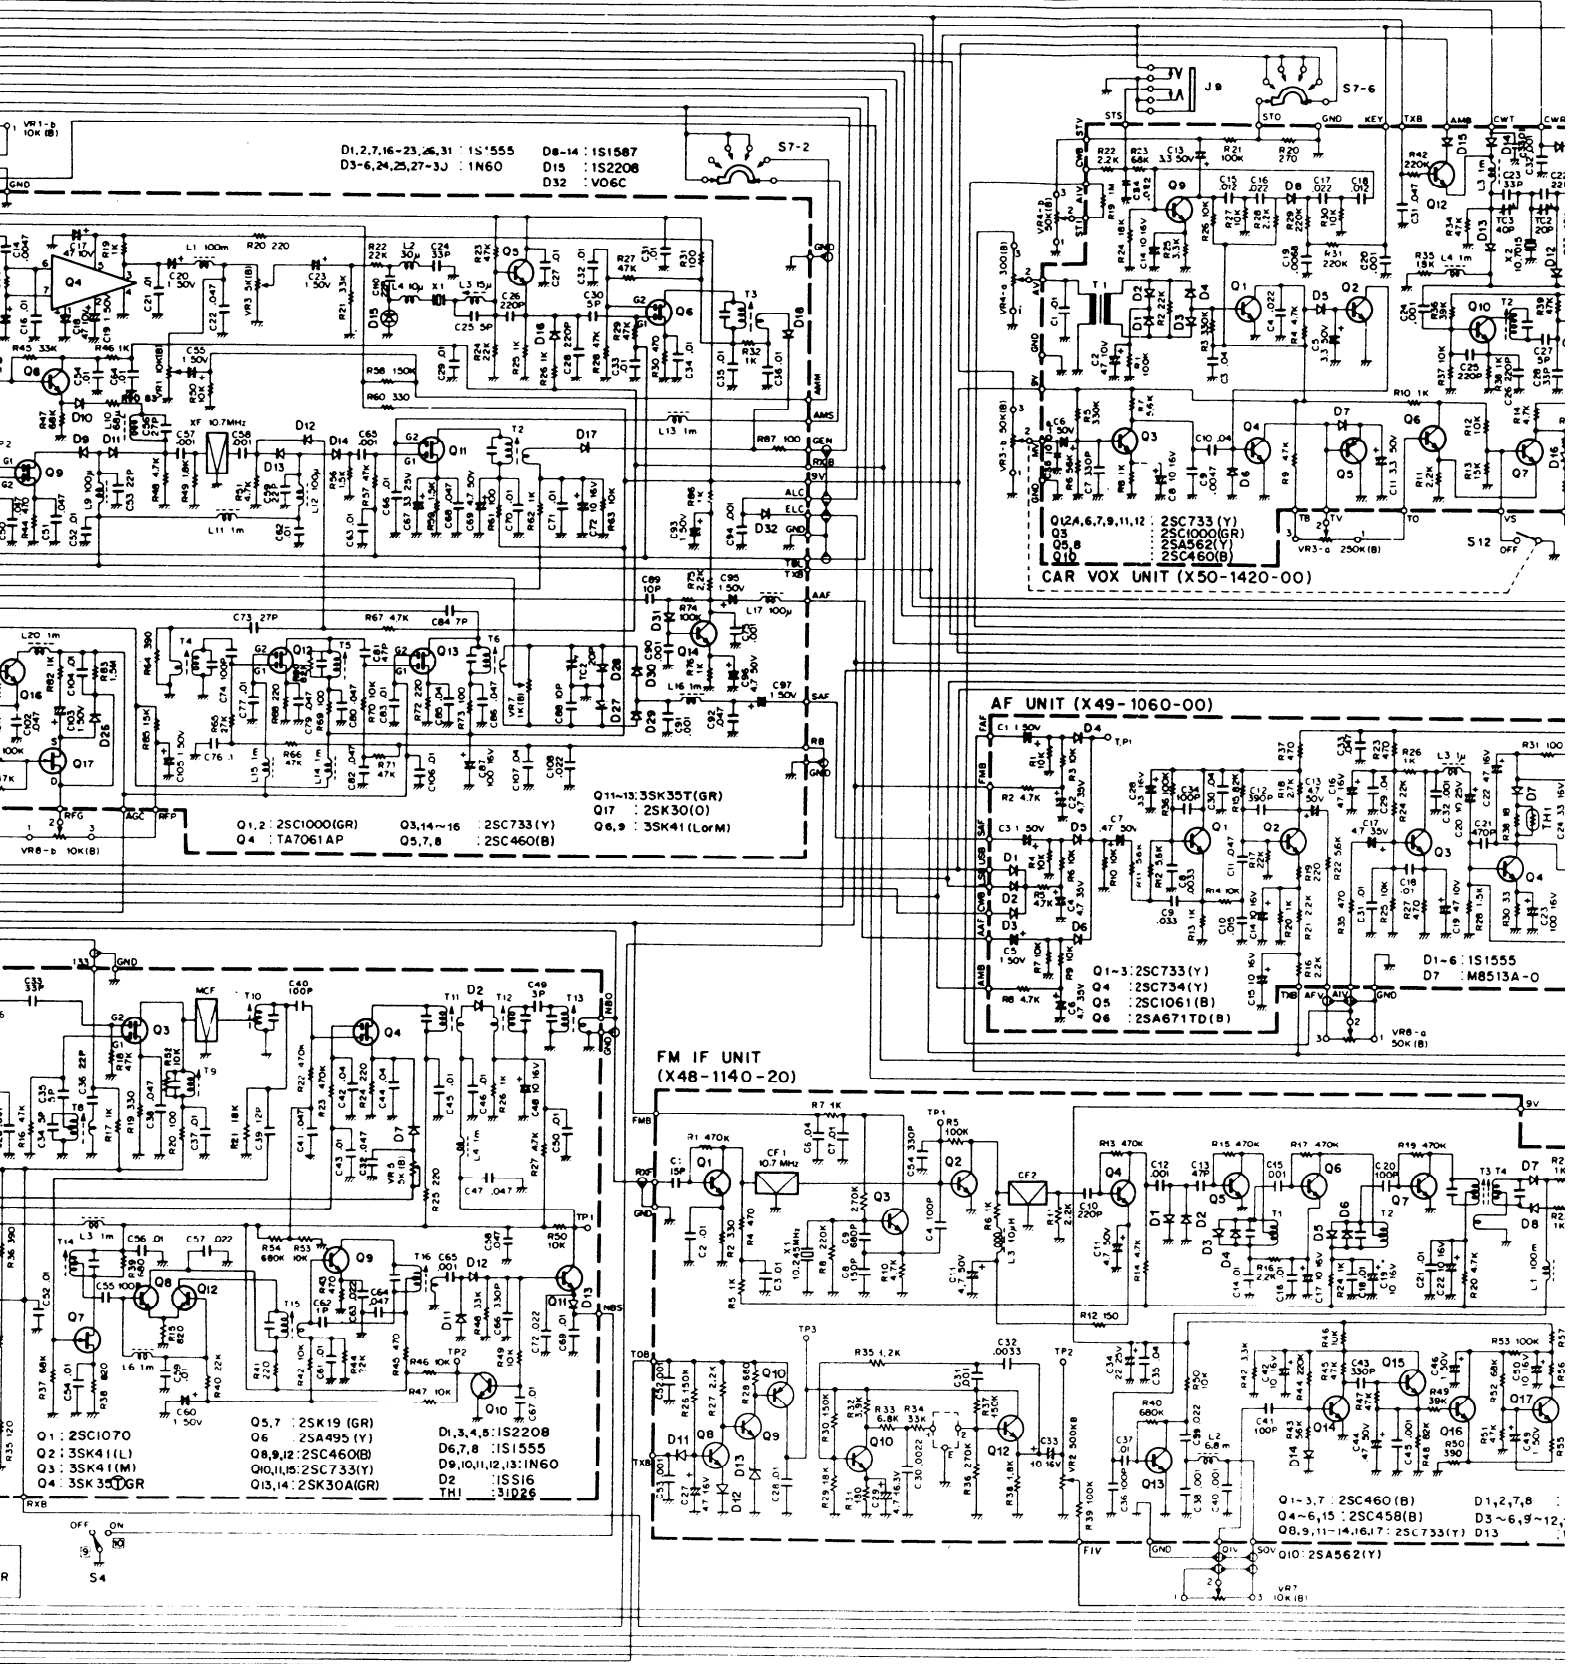

D1,2,7,16-23,26,31 : 1S1555
D3-6,24,25,27-3J : 1N60
D8-14 : 1S1587
D15 : 1S2208
D32 : V06C

Q11-13: 3SK35T(GR)
Q17 : 2SK30(O)
Q6,9 : 3SK41(LorM)
Q1,2 : 2SC1000(GR)
Q4 : TA7061AP
Q3,14~16 : 2SC733(Y)
Q5,7,8 : 2SC460(B)

Q12A,6,7,9,11,12 : 2SC733(Y)
Q3 : 2SC1000(GR)
Q5,8 : 2SC458(B)
Q10 : 2SC460(B)
CAR VOX UNIT (X50-1420-00)

AF UNIT (X49-1060-00)
Q1-3: 2SC733(Y)
Q4 : 2SC734(Y)
Q5 : 2SC1061(B)
Q6 : 2SA671TD(B)
Q1-6: 1S1555
Q7 : M8513A-O

Q1 : 2SC1070
Q2 : 3SK41(L)
Q3 : 3SK41(M)
Q4 : 3SK35T(GR)
Q5,7 : 2SK19(GR)
Q6 : 2SA495(Y)
Q8,9,12 : 2SC460(B)
Q10,15 : 2SC733(Y)
Q13,14 : 2SK30A(IGR)

Q1-3,7 : 2SC460(B)
Q4~6,15 : 2SC458(B)
Q8,9,11~14,16,17 : 2SC733(Y)
Q10 : 2SA562(Y)
D1,2,7,8 : 1S1555
D3~6,9~12 : 1N60
D13 : 1S1587

